



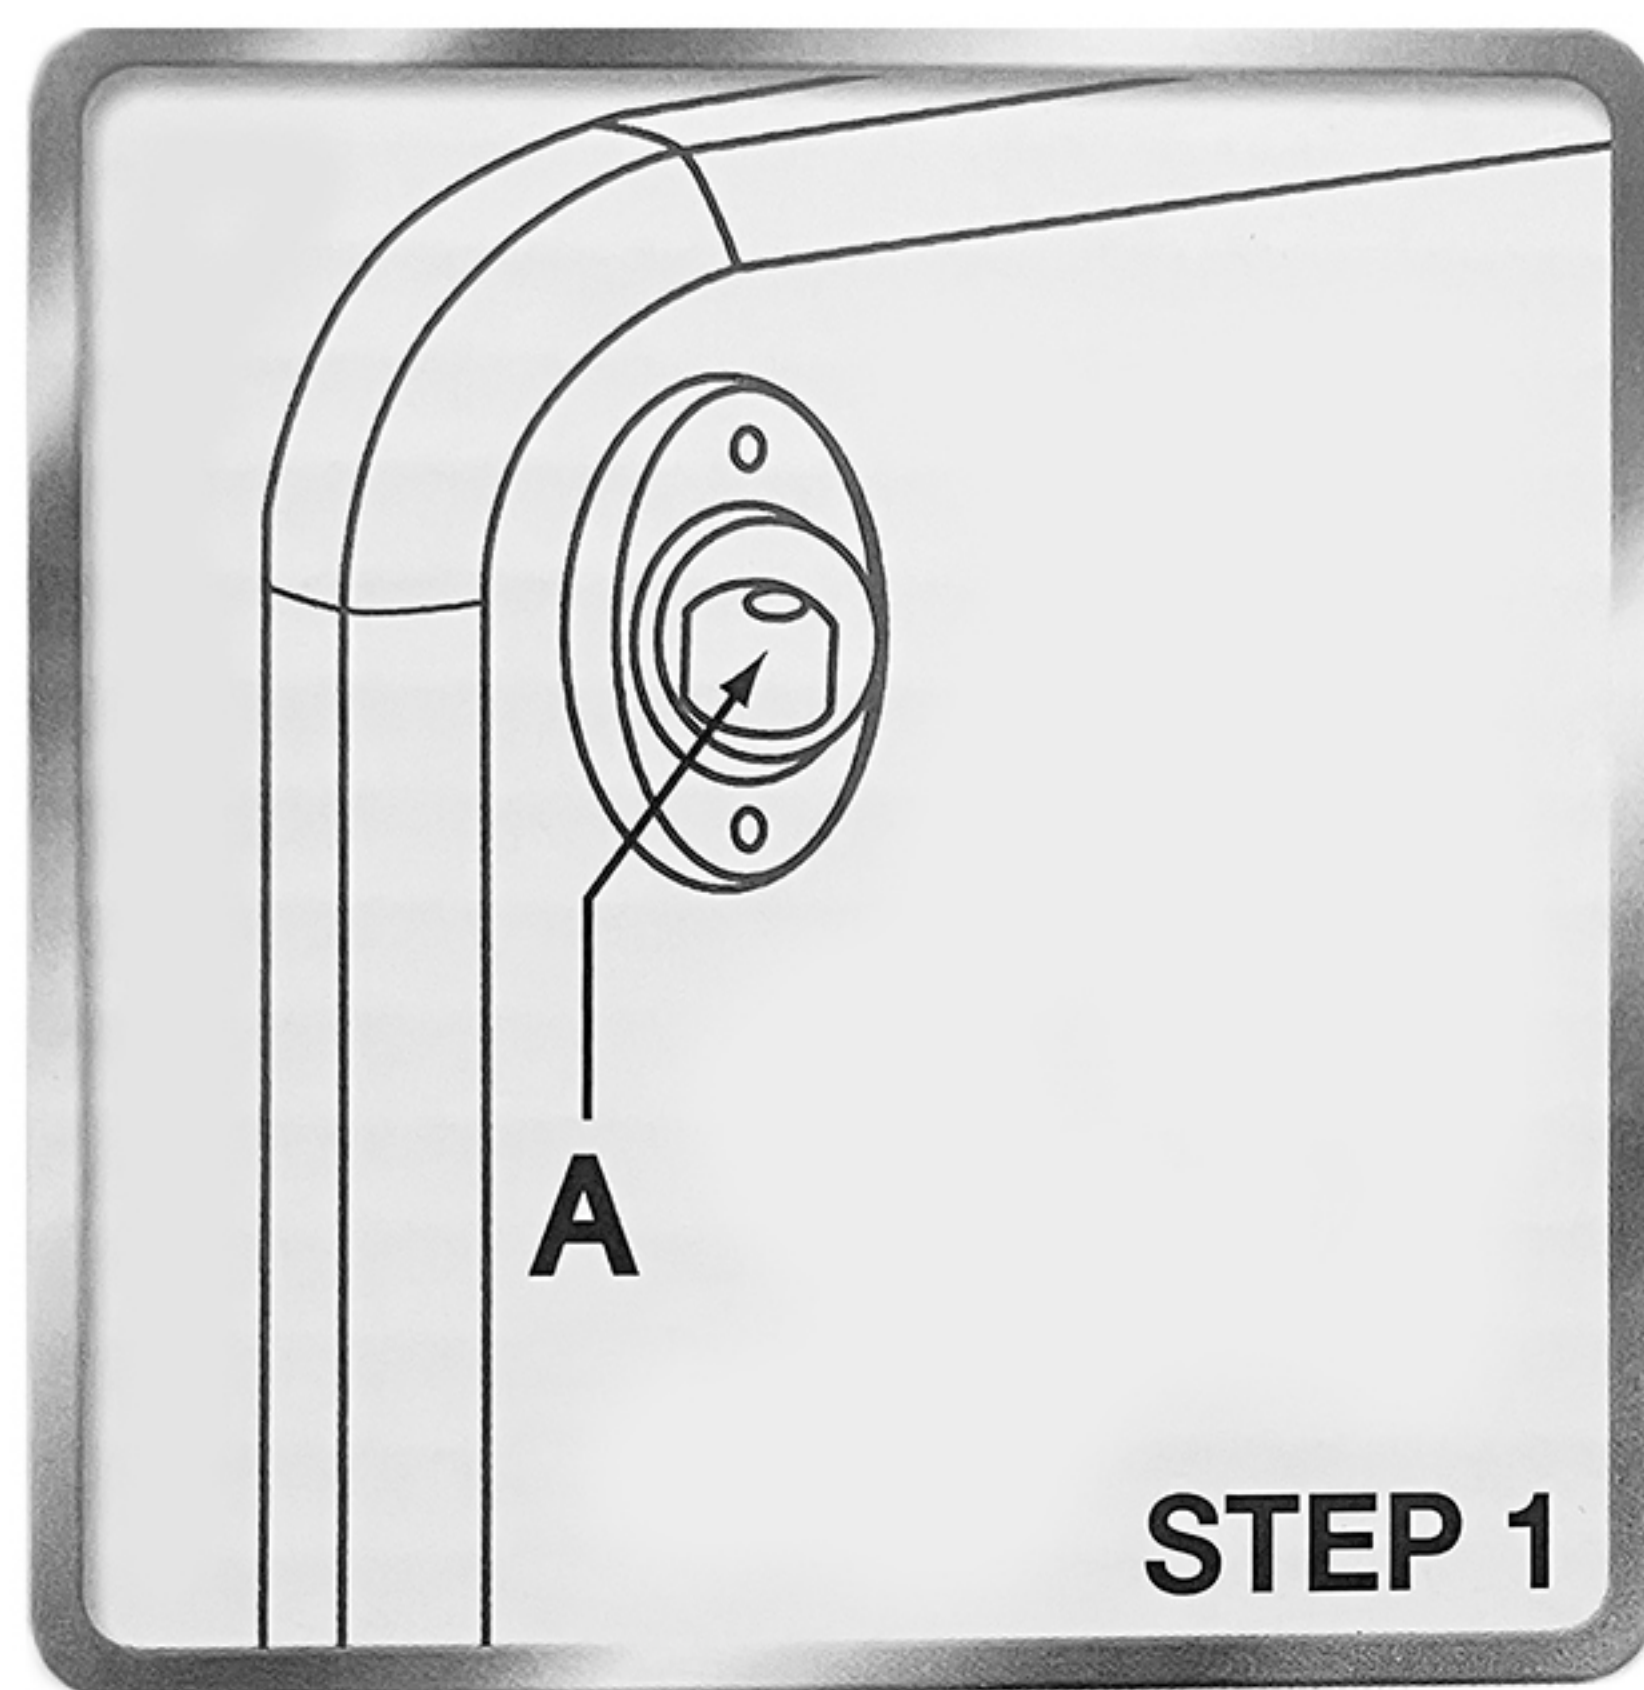

STEP 1: Place wall mount at desired location on wall.

-NOTE: ensure that the screw holes are oriented top to bottom, and that the part of the mount that protrudes the most (A) is pointing away from the bathtub.


-Lightly mark where the screw holes should go with a pencil. Drill holes. Insert the wall anchors.

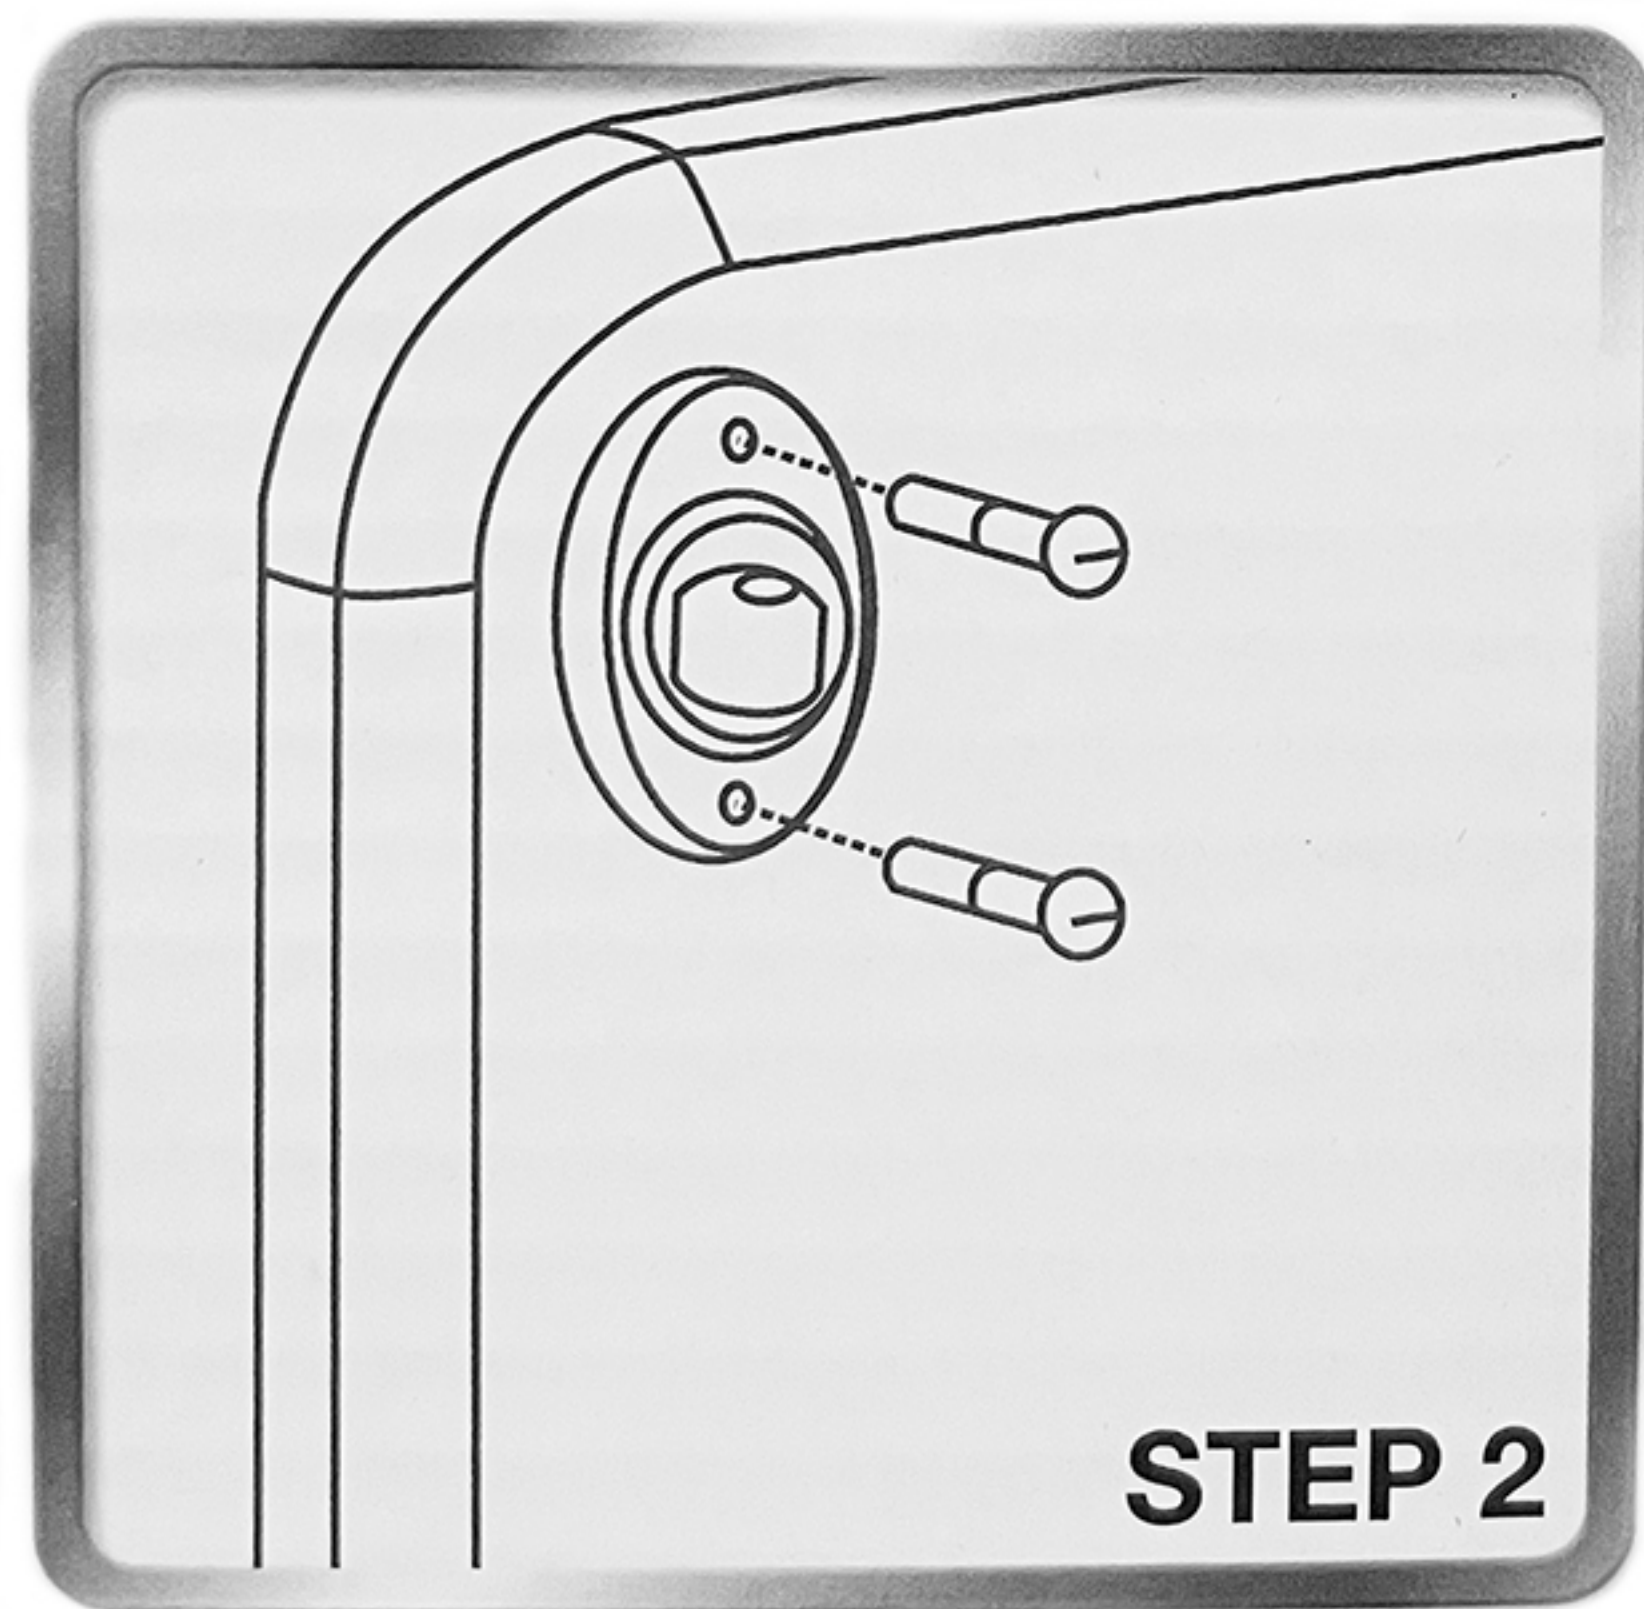


STEP 2:

-Place wall mount over anchors.


-Screw into place.

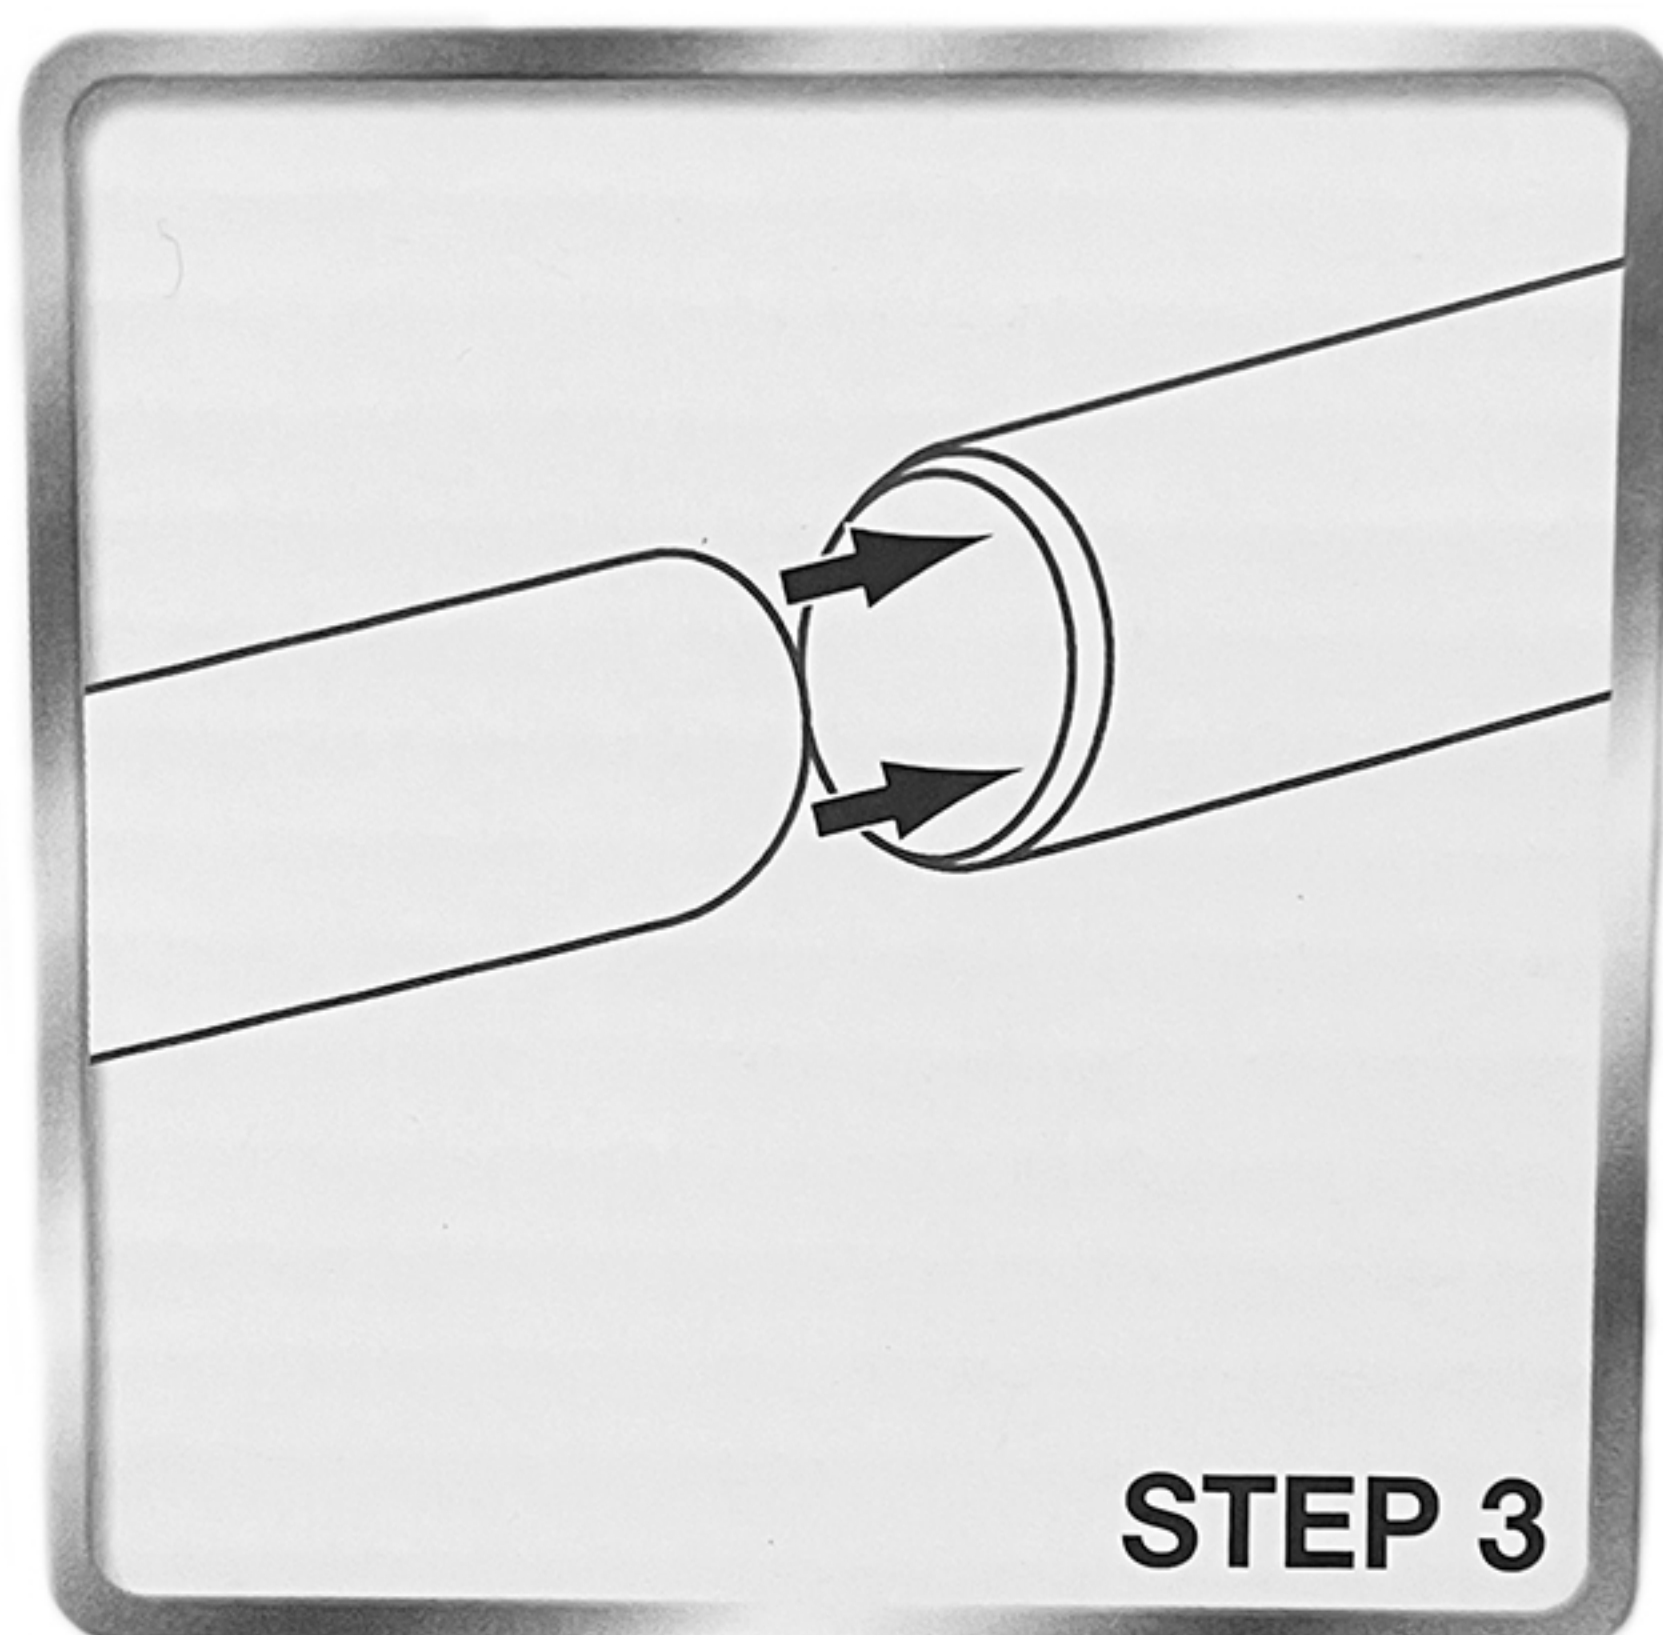

STEP 3: Slide thinner rod into wider rod using the shower rod ends without holes.

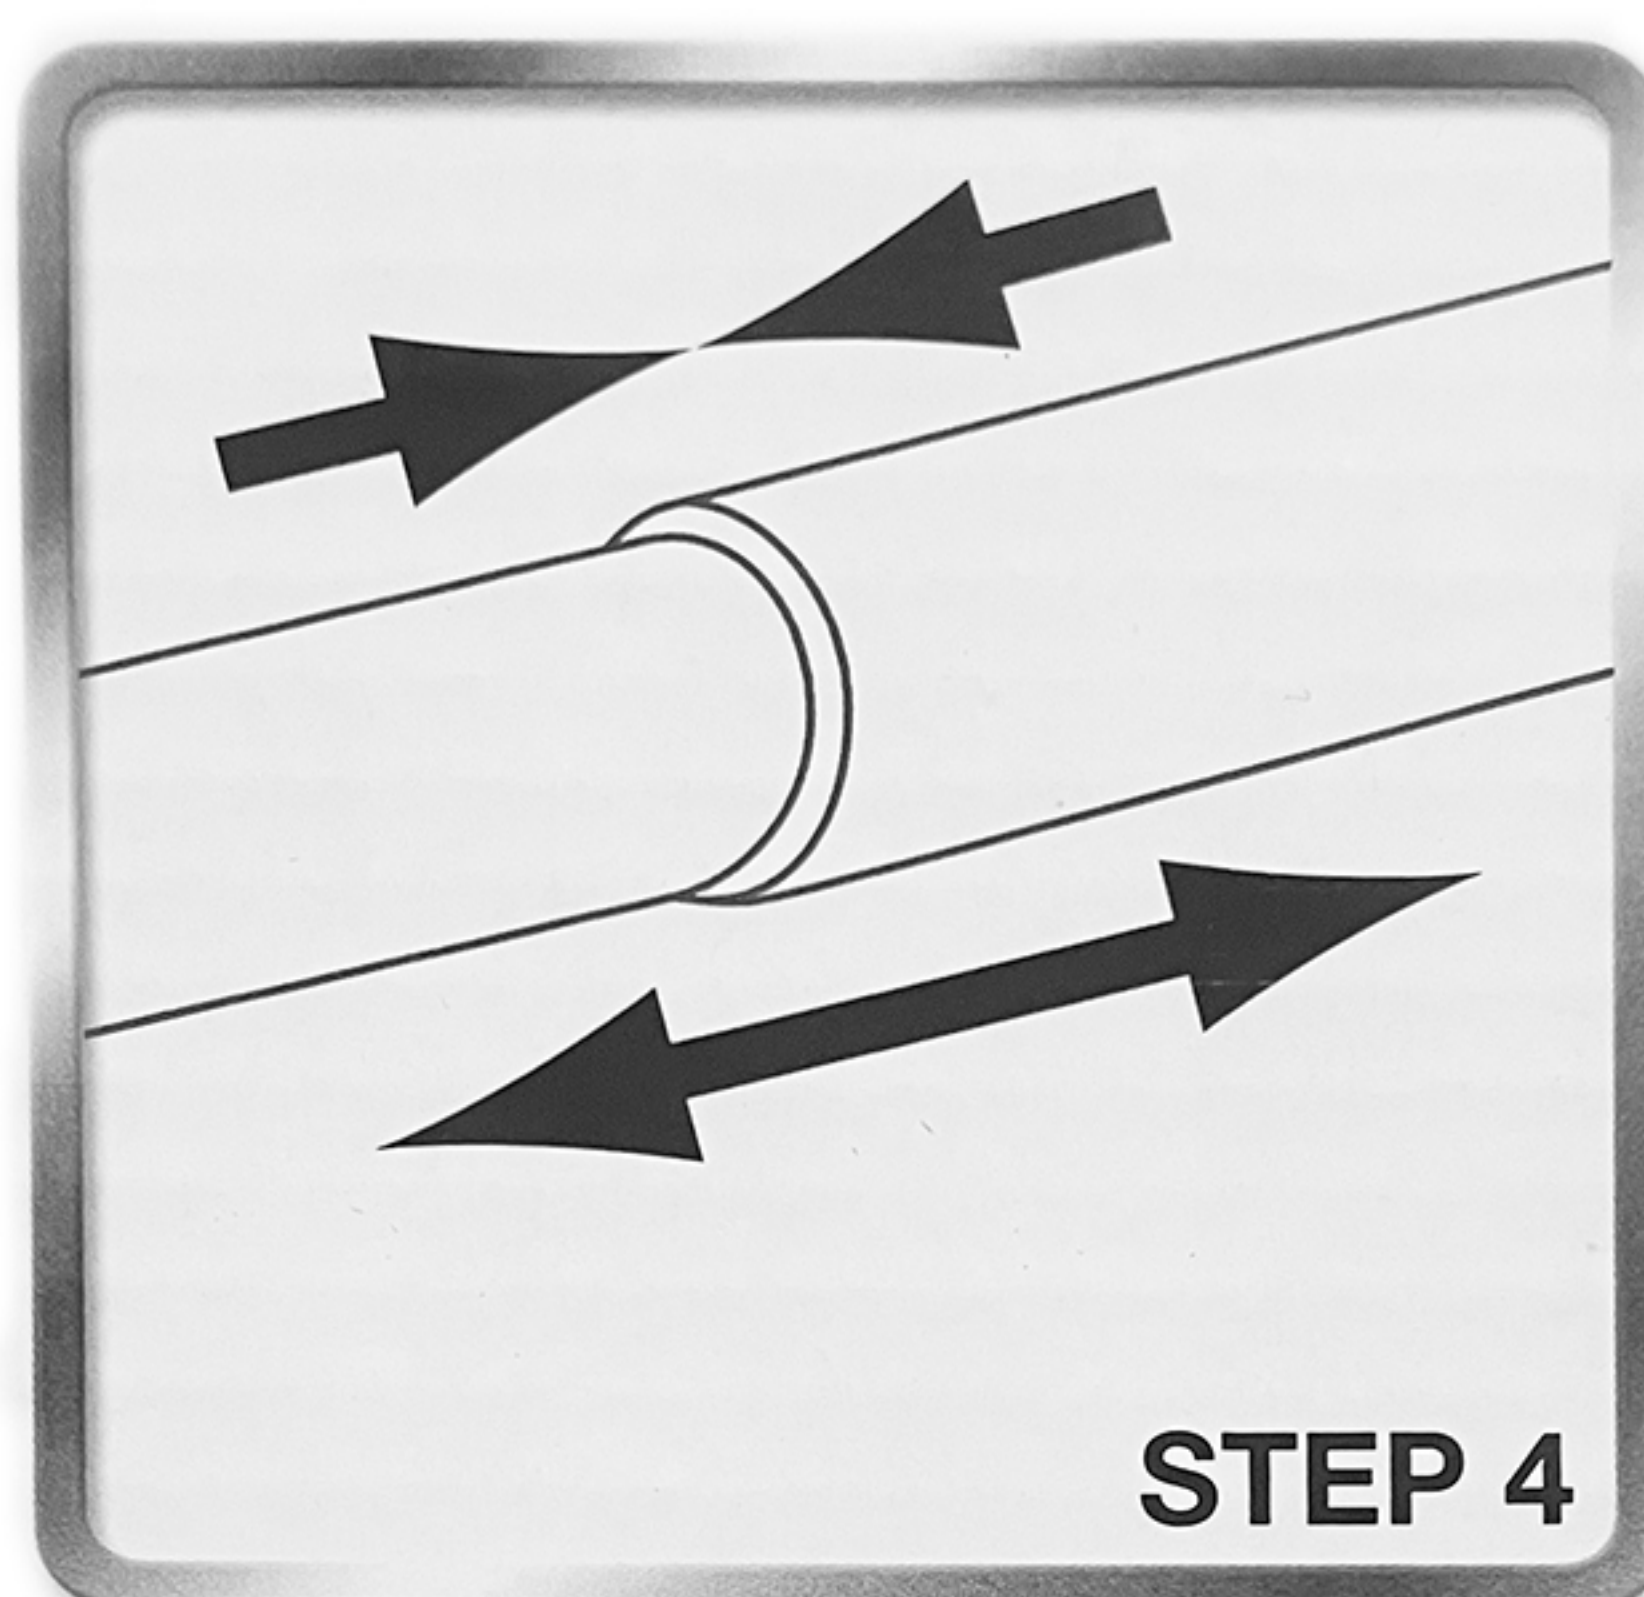

STEP 4: Extend or contract shower rod by either pulling both rods apart or pushing them together until desired length is achieved.

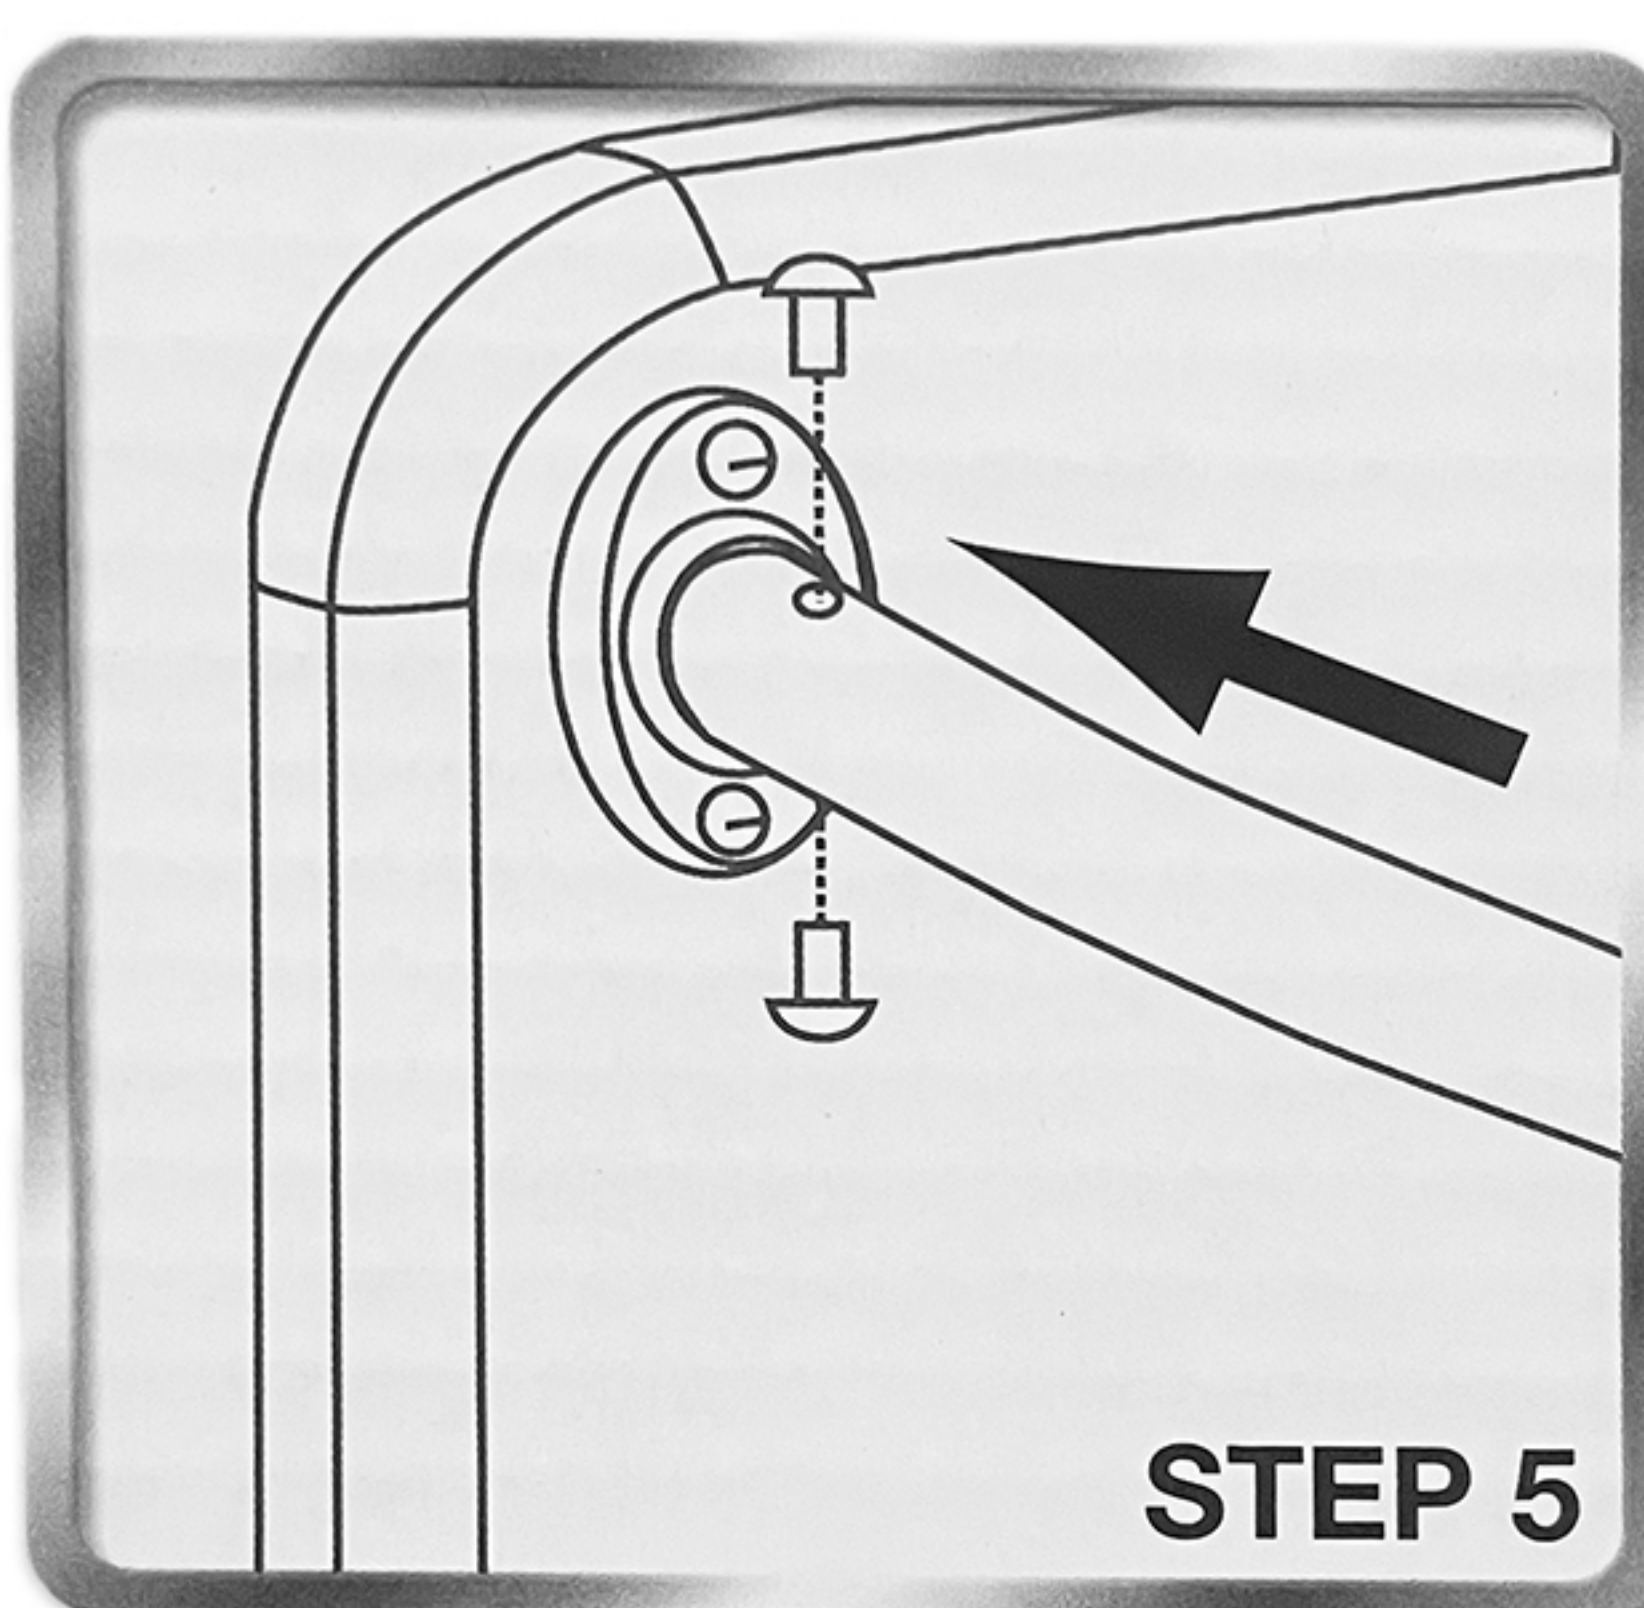

STEP 5: Screws are included.

-Tools are not included.