


Installation instruction

Accessories List:



Sponge pad X1

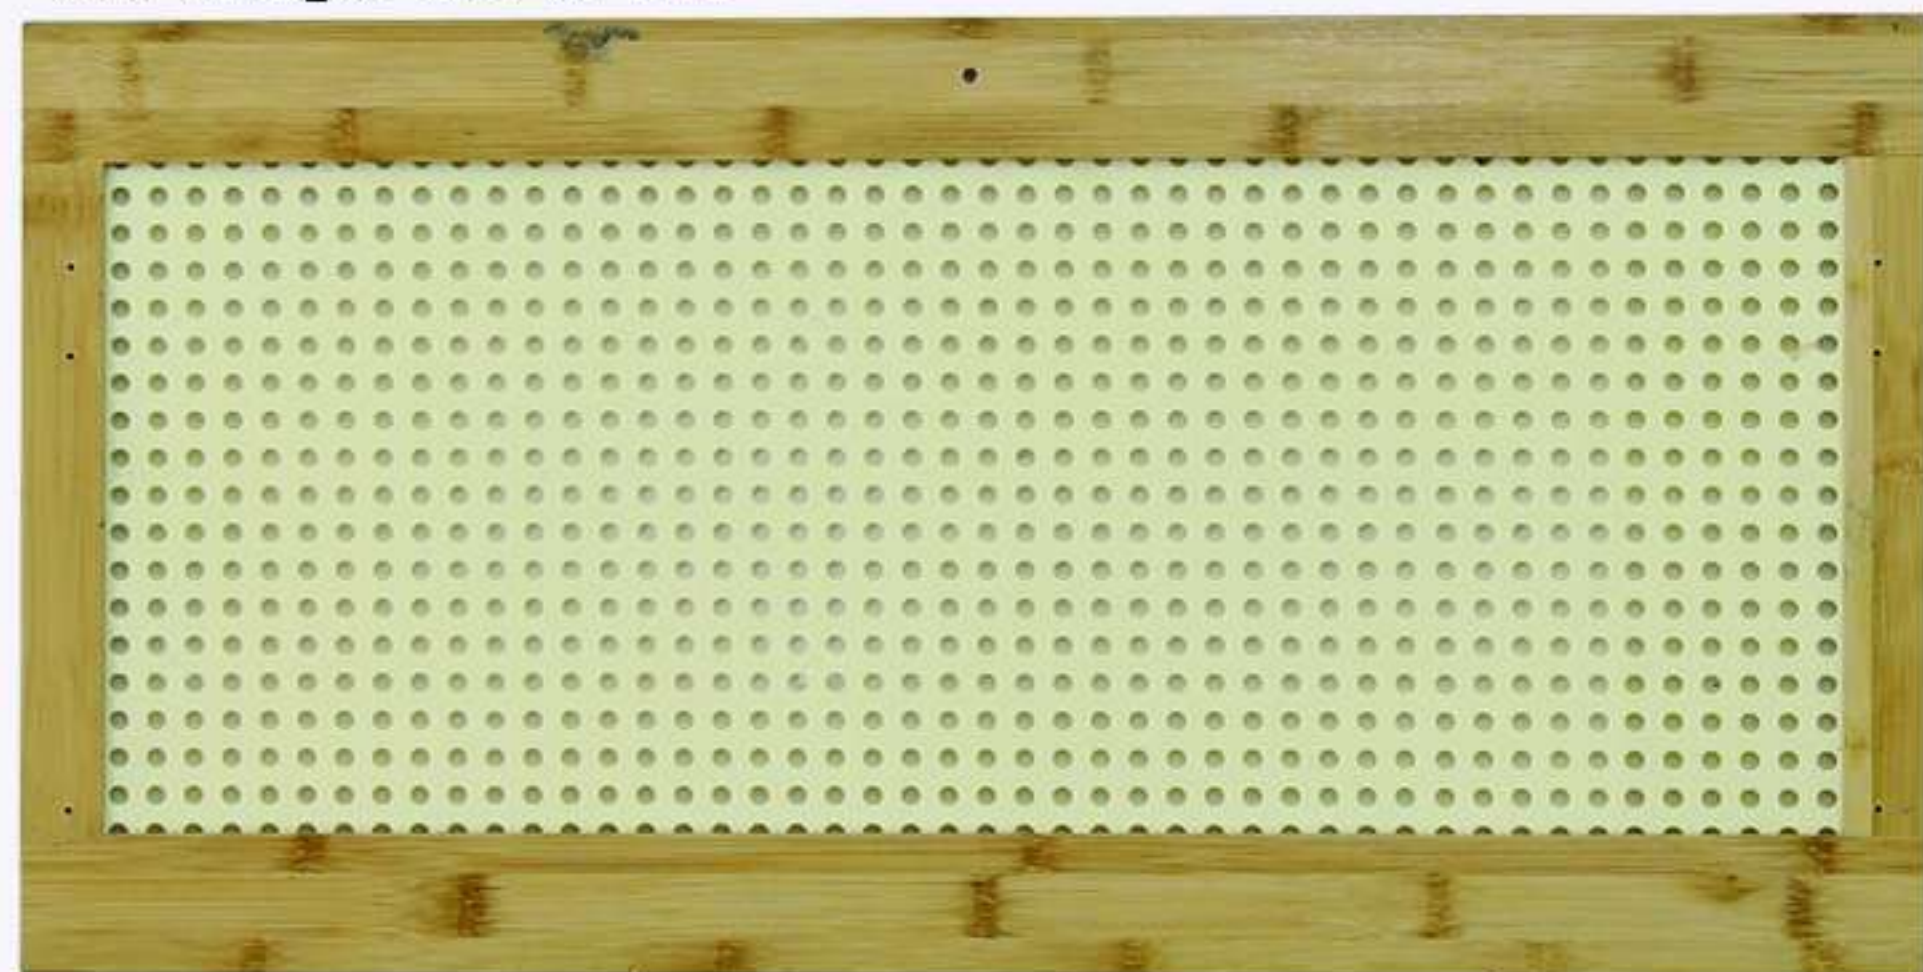

Door panel X1



Rear gear bar X1



Bracket stripX3



Baffle AX1



Baffle BX2



Plastic baffle left X 1



Plastic baffle right X 1



Side bracket x 2



Large screw



Small screw



flat head screw



Smooth interface



Metal pin




Door handle




Installation tools


Start assembly

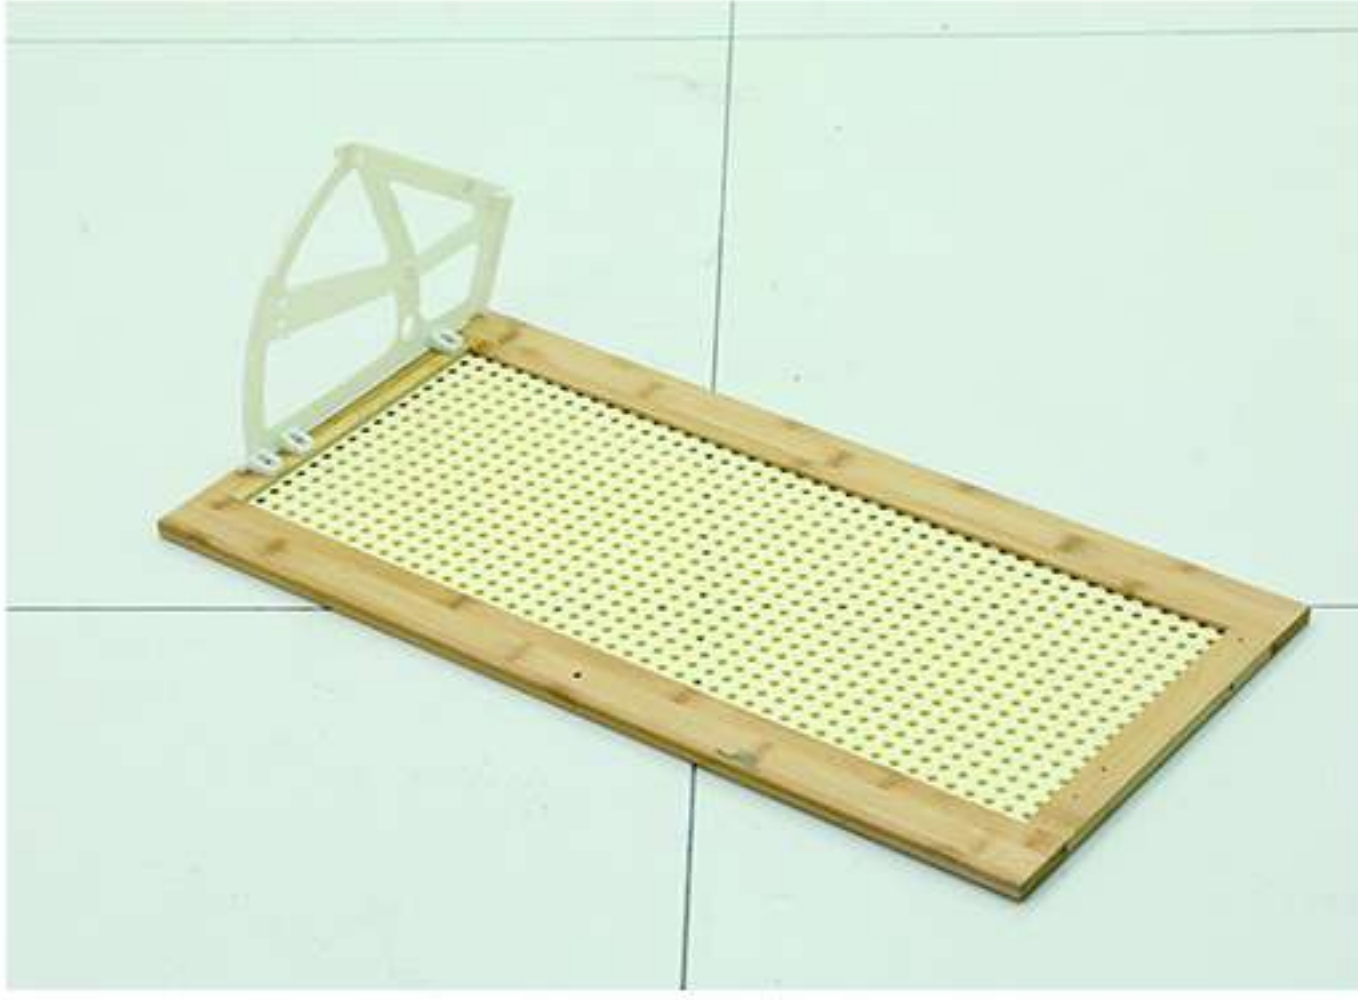

1. Remove the door panel and plastic baffle and install them on the left with small screws

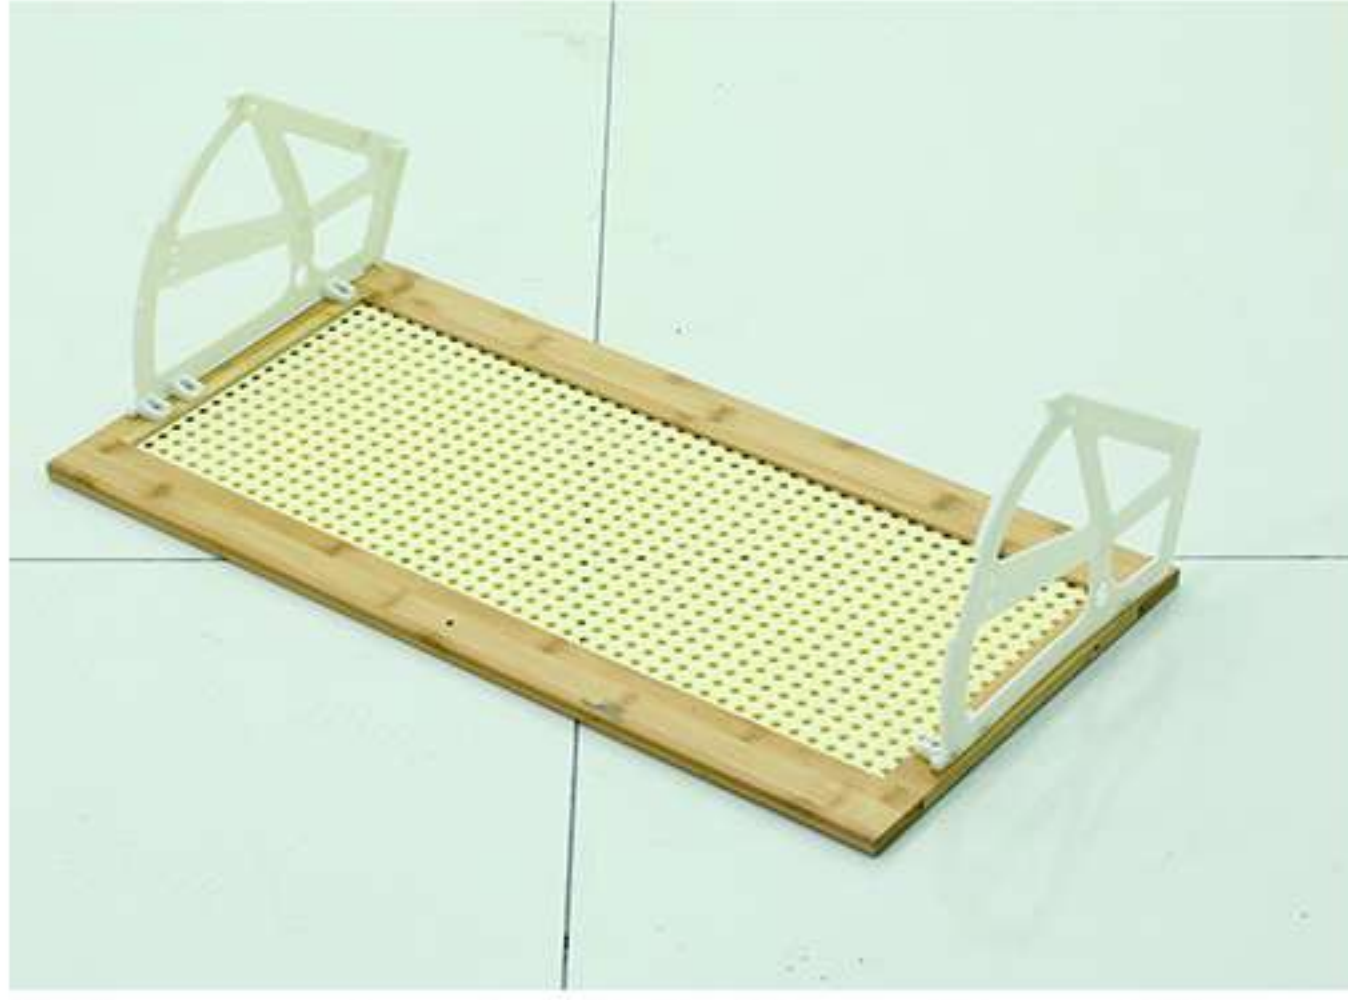

2. Remove the plastic baffle and install it on the right with a small screw

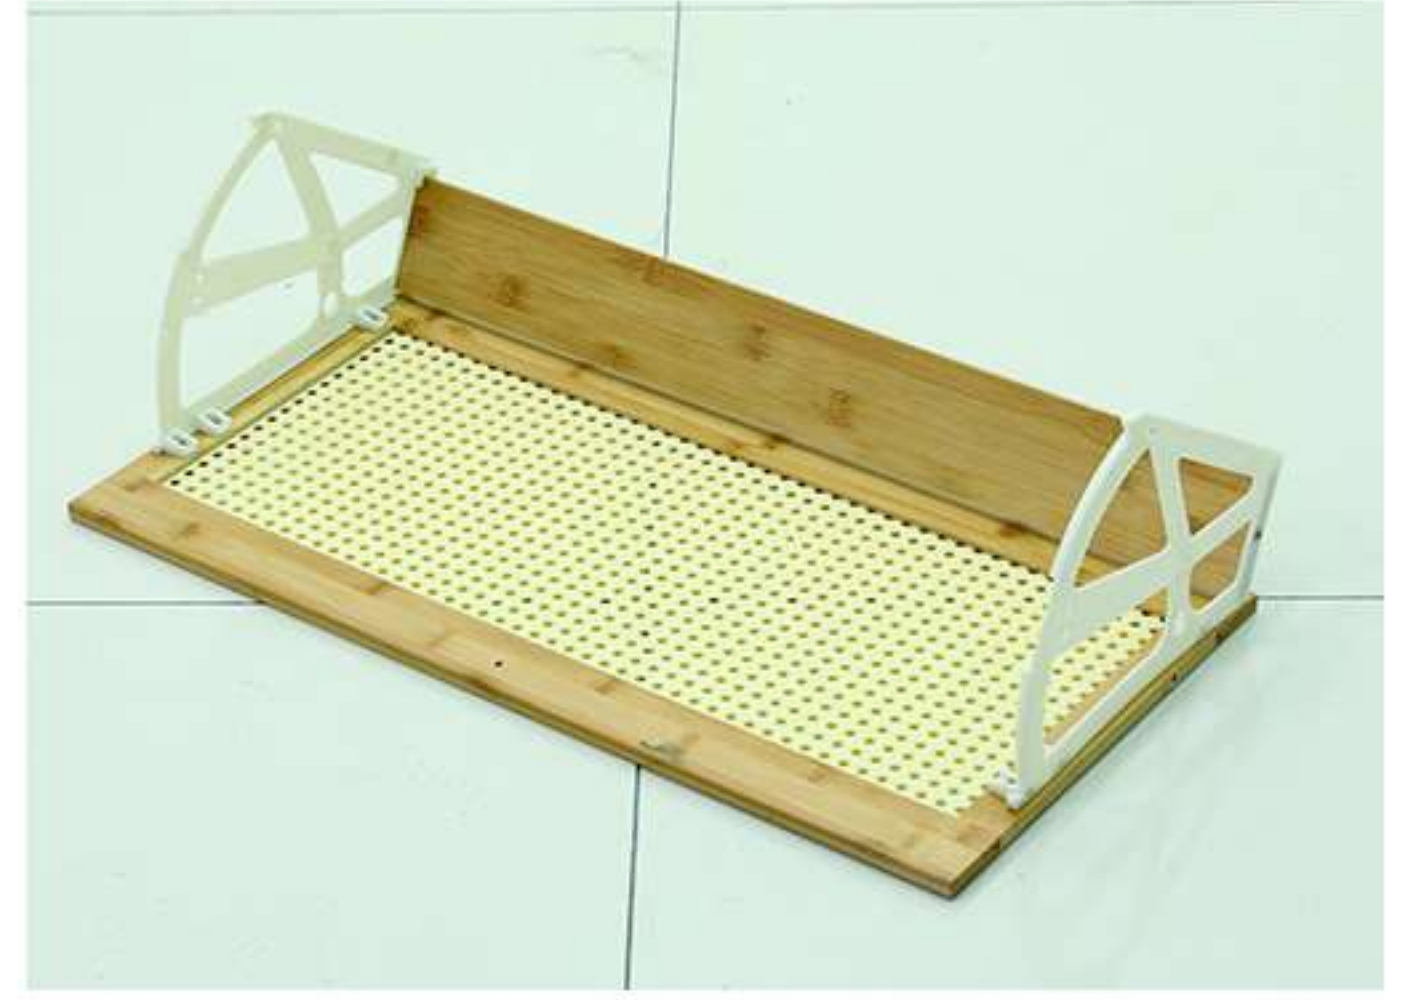

3. Remove baffle A and install it with small screws



3. Remove baffle B and install it with small screws



5. Remove the door handle and install it with flat head screws




6. Remove the side bracket and bracket strip and install them with large screws




7. Remove the rear gear strip and install it with large screws



8. Remove the other side bracket and install it with large screws

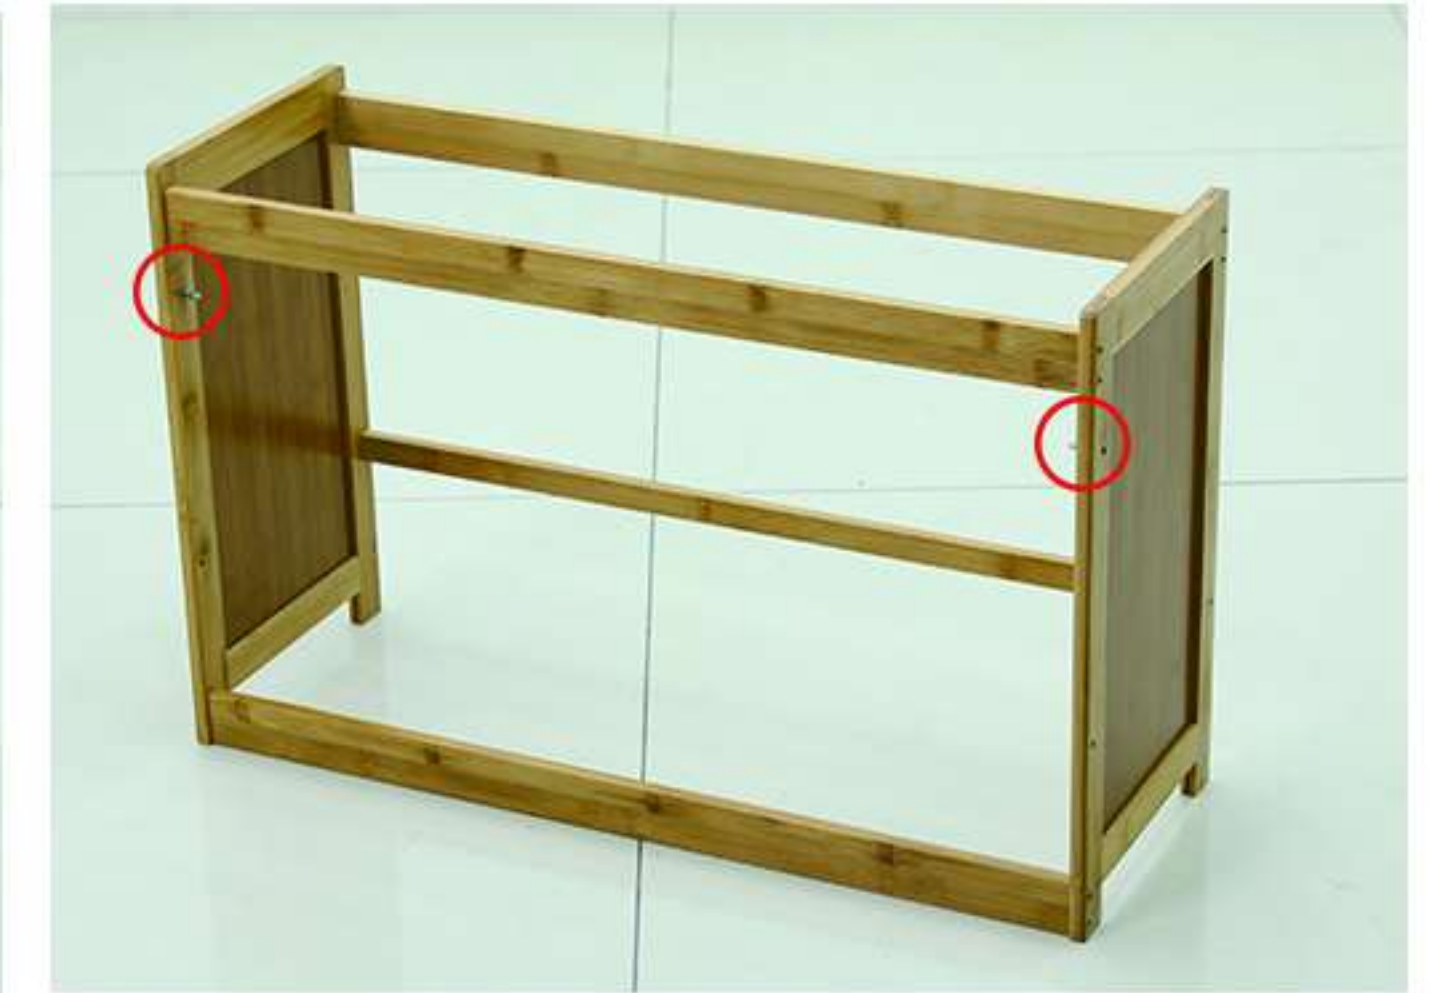

9. Then insert the metal pin into the hole of the side bracket

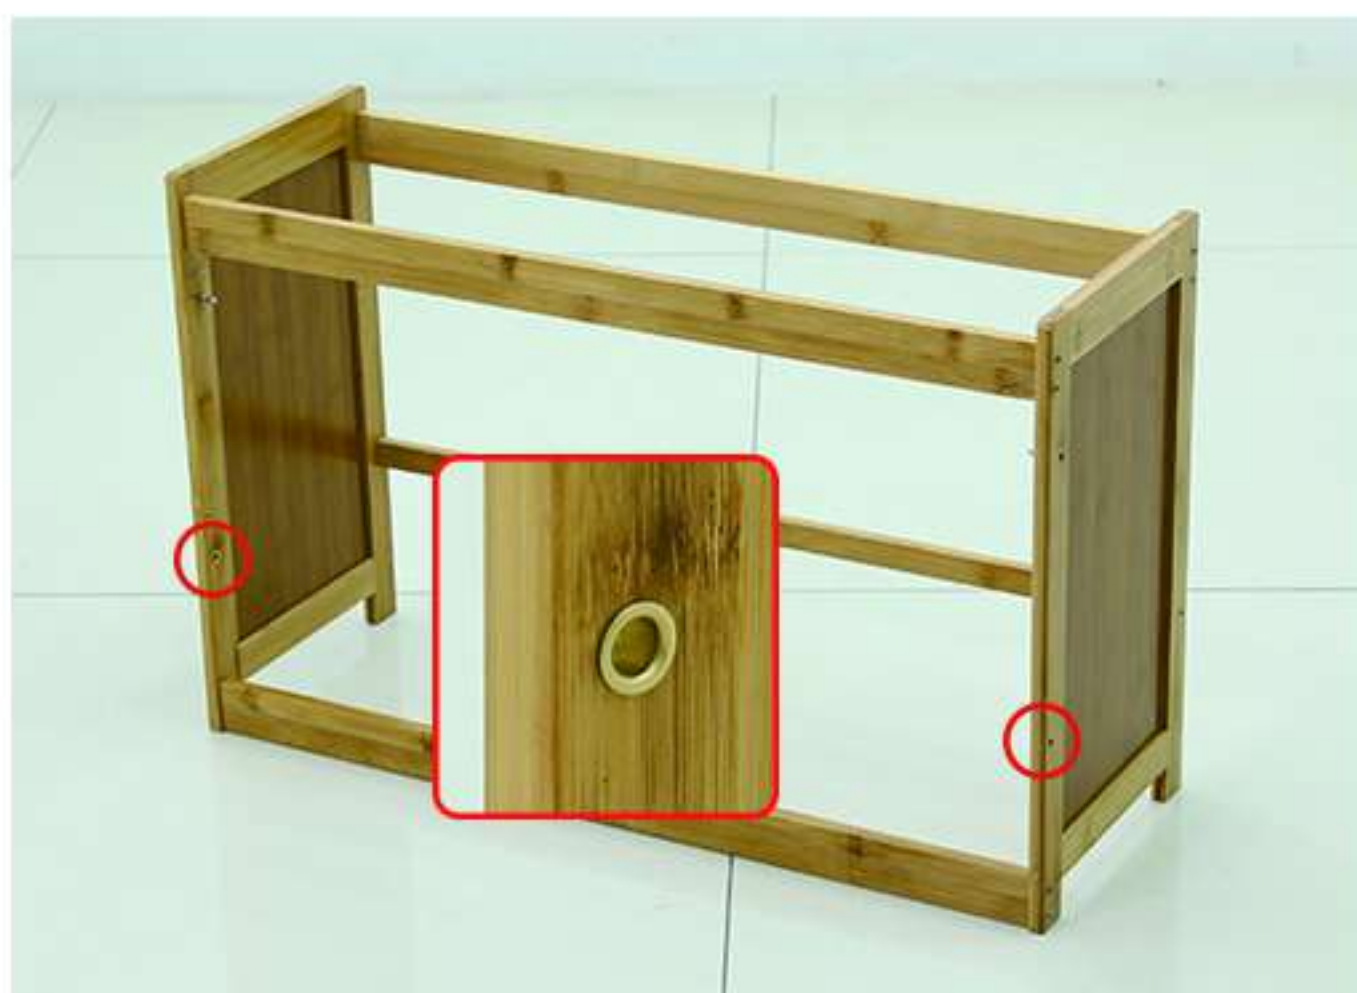

10. Remove the smooth interface and insert it into the hole of the side bracket



11. Then fix the installed door panel to the side bracket with large screws (the large screws pass through the smooth joint)



12. Finally, place the sponge pad on top