

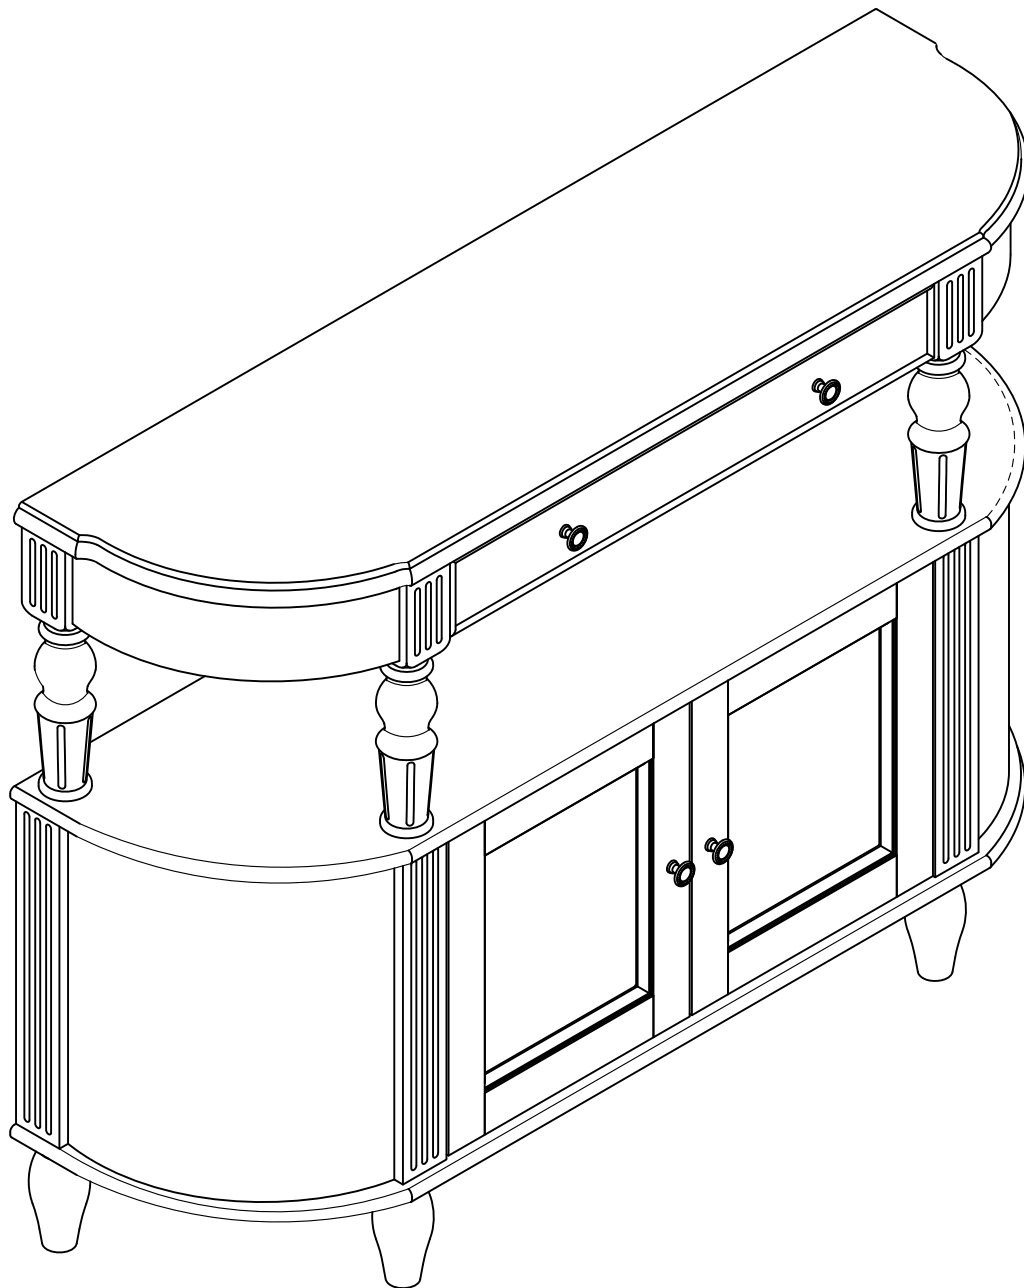
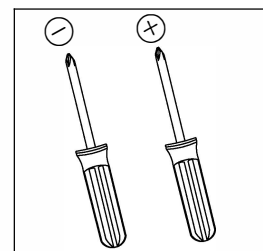
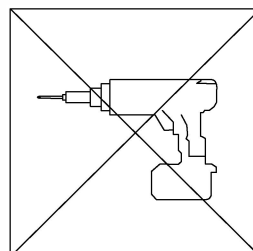
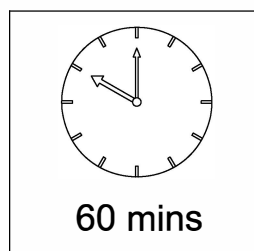


INSTALLATION & ASSEMBLY

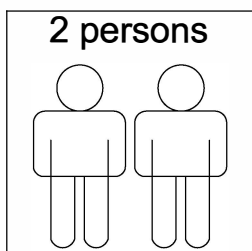

MAINTENANCE AND WARNING

- 1.Keep furniture away from heat sources.
 - 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
 - 3.Do not place furniture under direct sunlight,material will possibly fade over time.
 - 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
 - 5.Do not write on furniture that is not protectedby a padded barrier.
 - 6.Not for commercial use,only for residential use.
-

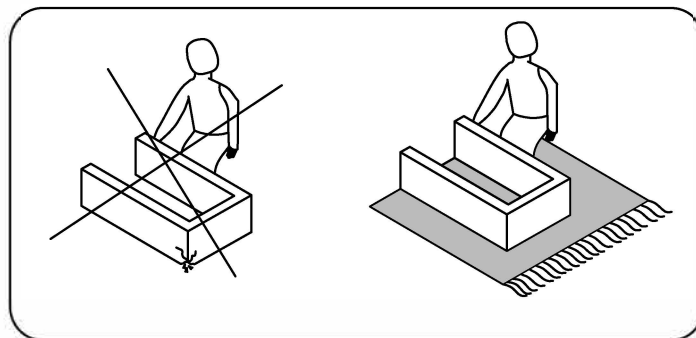


INSTALLING THE CAM LOCKS

1




Do not over tighten!

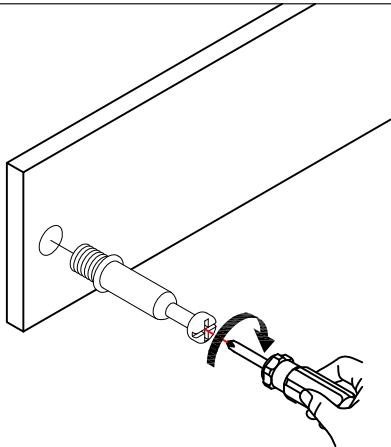


The base of the Cam Screw should be flush with the panel

2

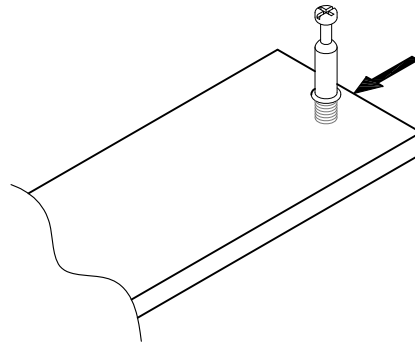


Screw the Cam Screw into the prethreaded hole. Tighten with a screwdriver until snug.

3

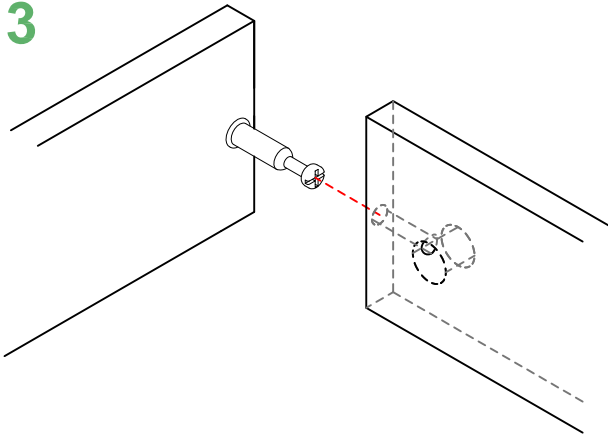


Connect the panels. Insert the Cam Screw into the small hole in the adjoining panel.

4

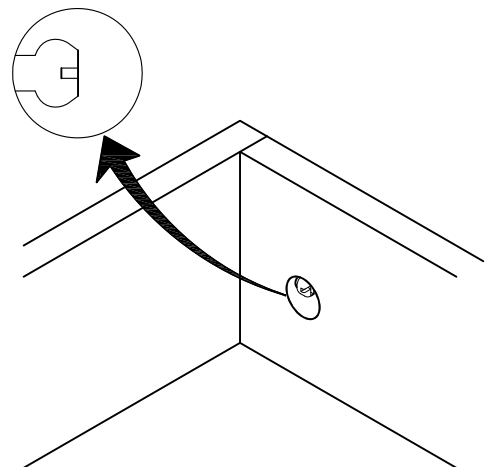


The head of the Cam Screw should be visible through the large hole.

5

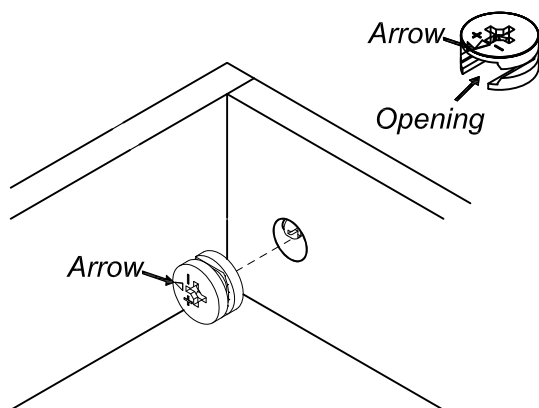

Insert the Cam Lock into the hole. Make sure the arrow and the opening in the Cam Lock are facing the Cam Screw.


6

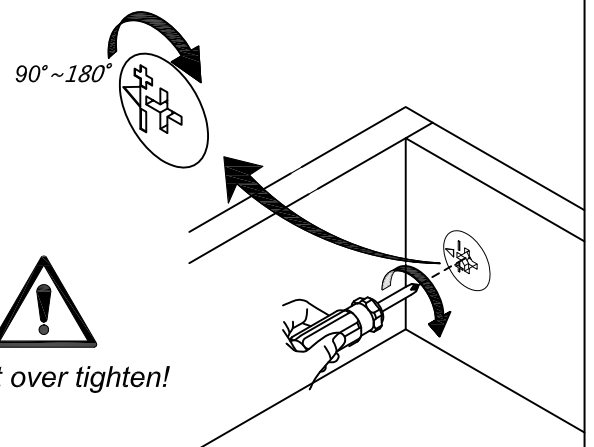












Do not over tighten!

Using a screwdriver, turn the Cam Lock at least 90° clock-wise to lock the two panels firmly together.












EXPLOSIVE VIEW

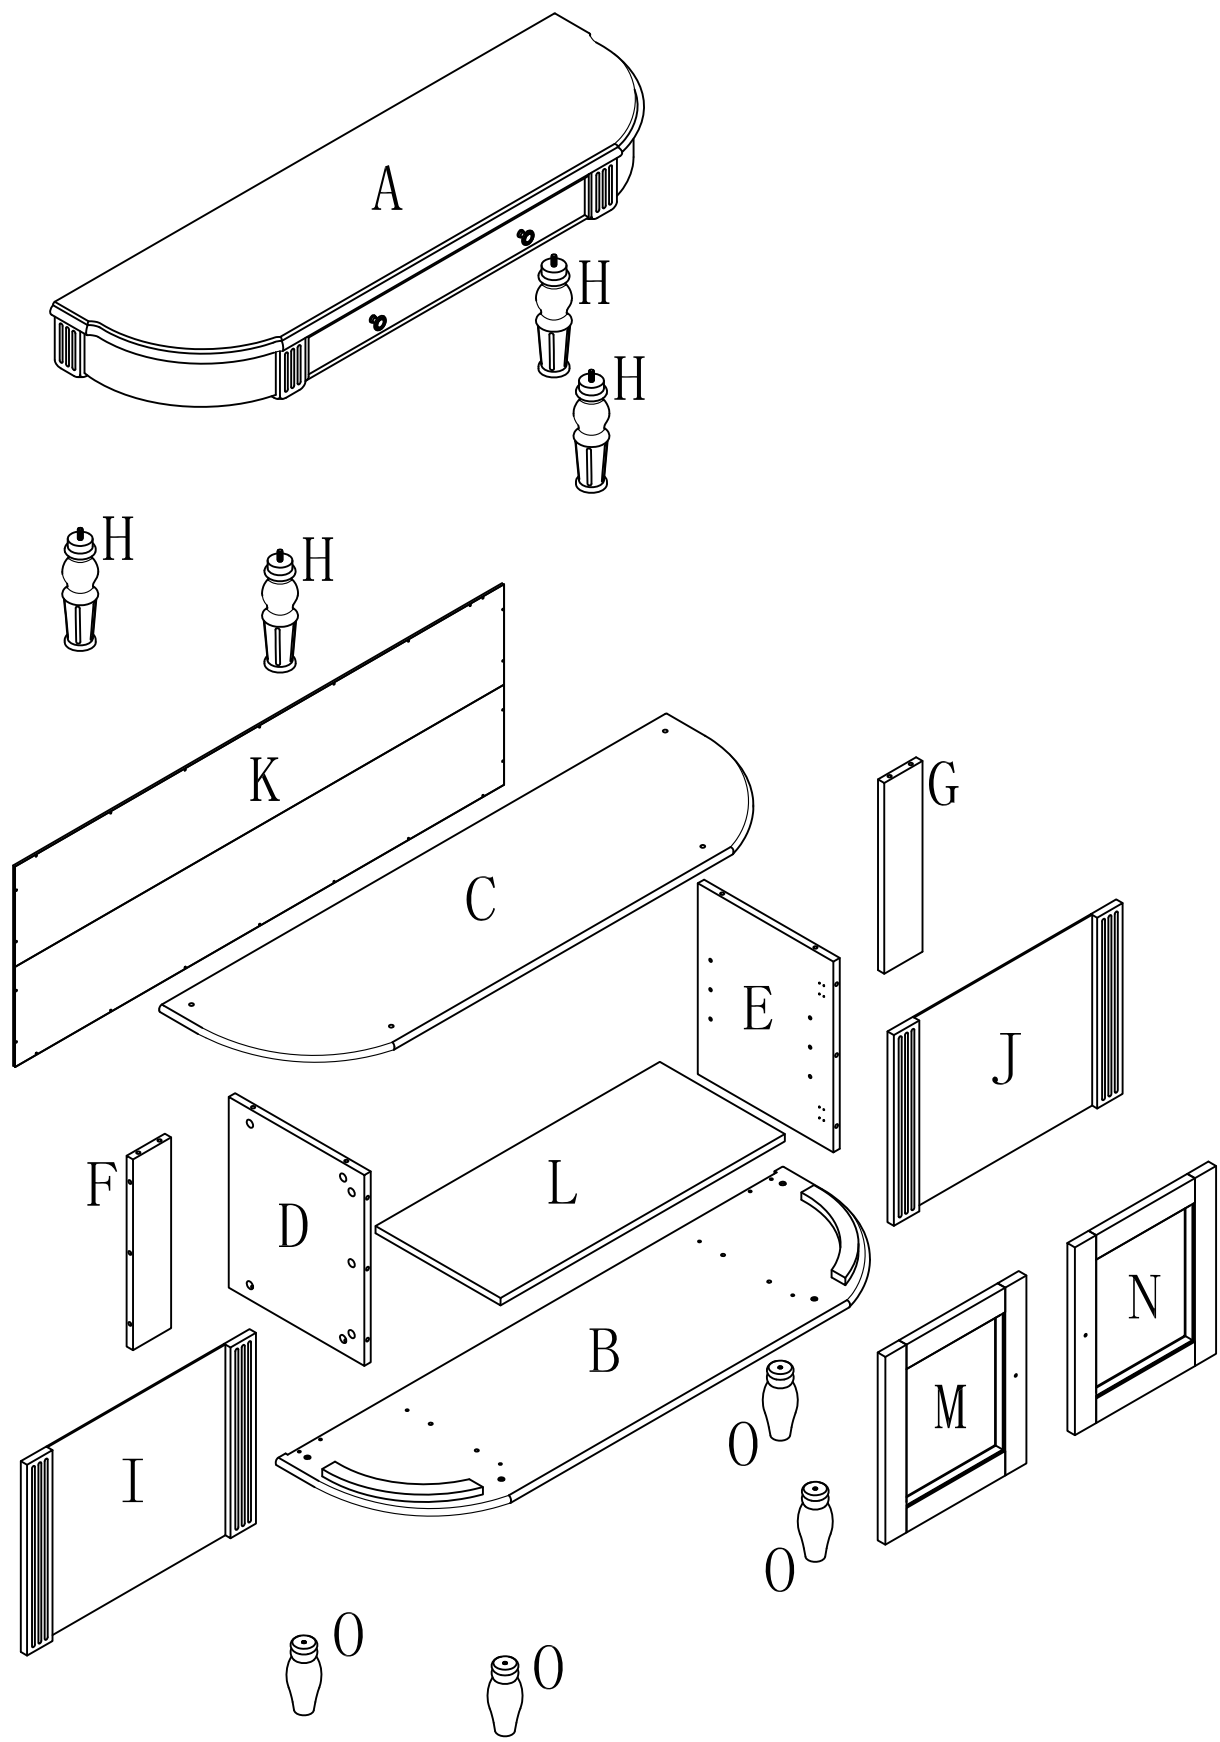

PARTS LIST

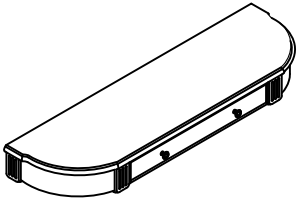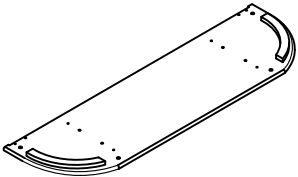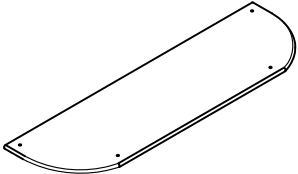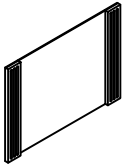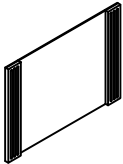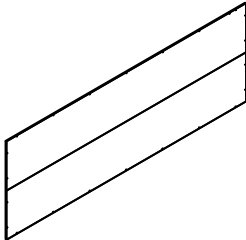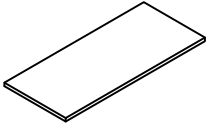
A x1 	B x1 	C x1 	D x1 
E x1 	F x1 	G x1 	H x4 
I x1 	J x1 	K x1 	L x1 
M x1 	N x1 	O x4 	

HARDWARE LIST

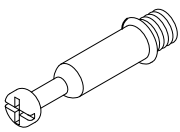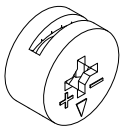1	x28+1	2	x28+1	3	x8	4	x8	5	x4	6	x4
											
				ø8*30mm		ø6*32mm		ø3*16mm			
7	x22+1	8	x4	9	x2	10	x2	11	x4	12	x24+1
											
ø3*14mm						ø4*25mm				ø3.5*14mm	
13	x4	14	x4	15	x2	16	x1	17	x1		
											
		ø3.5*35mm									


ASSEMBLY INSTRUCTIONS



STEP-1

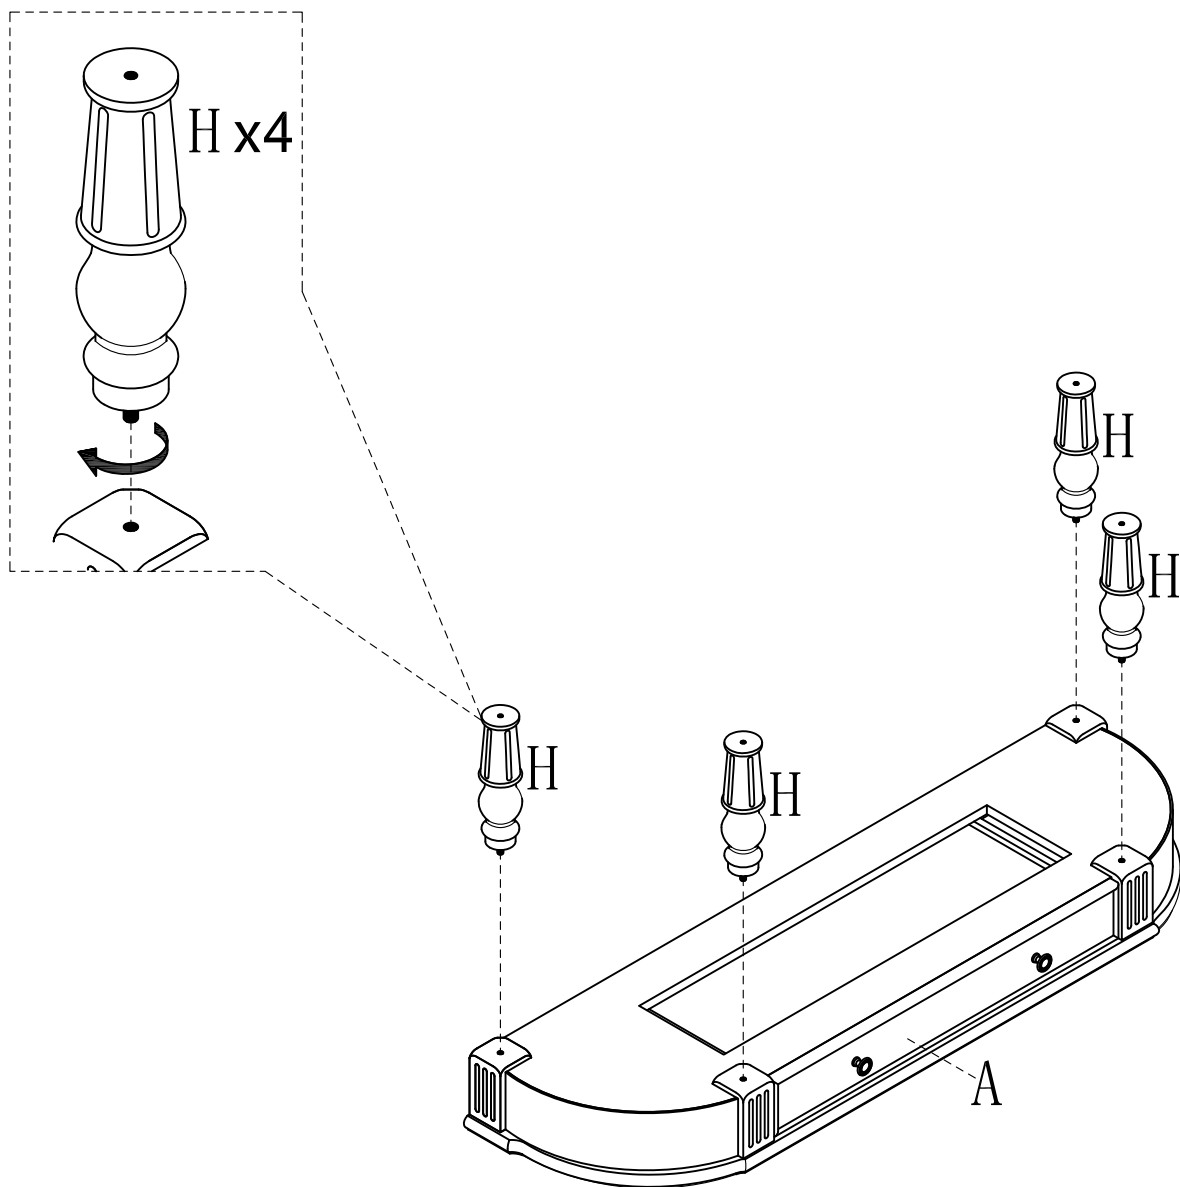

ASSEMBLY INSTRUCTIONS




STEP-2



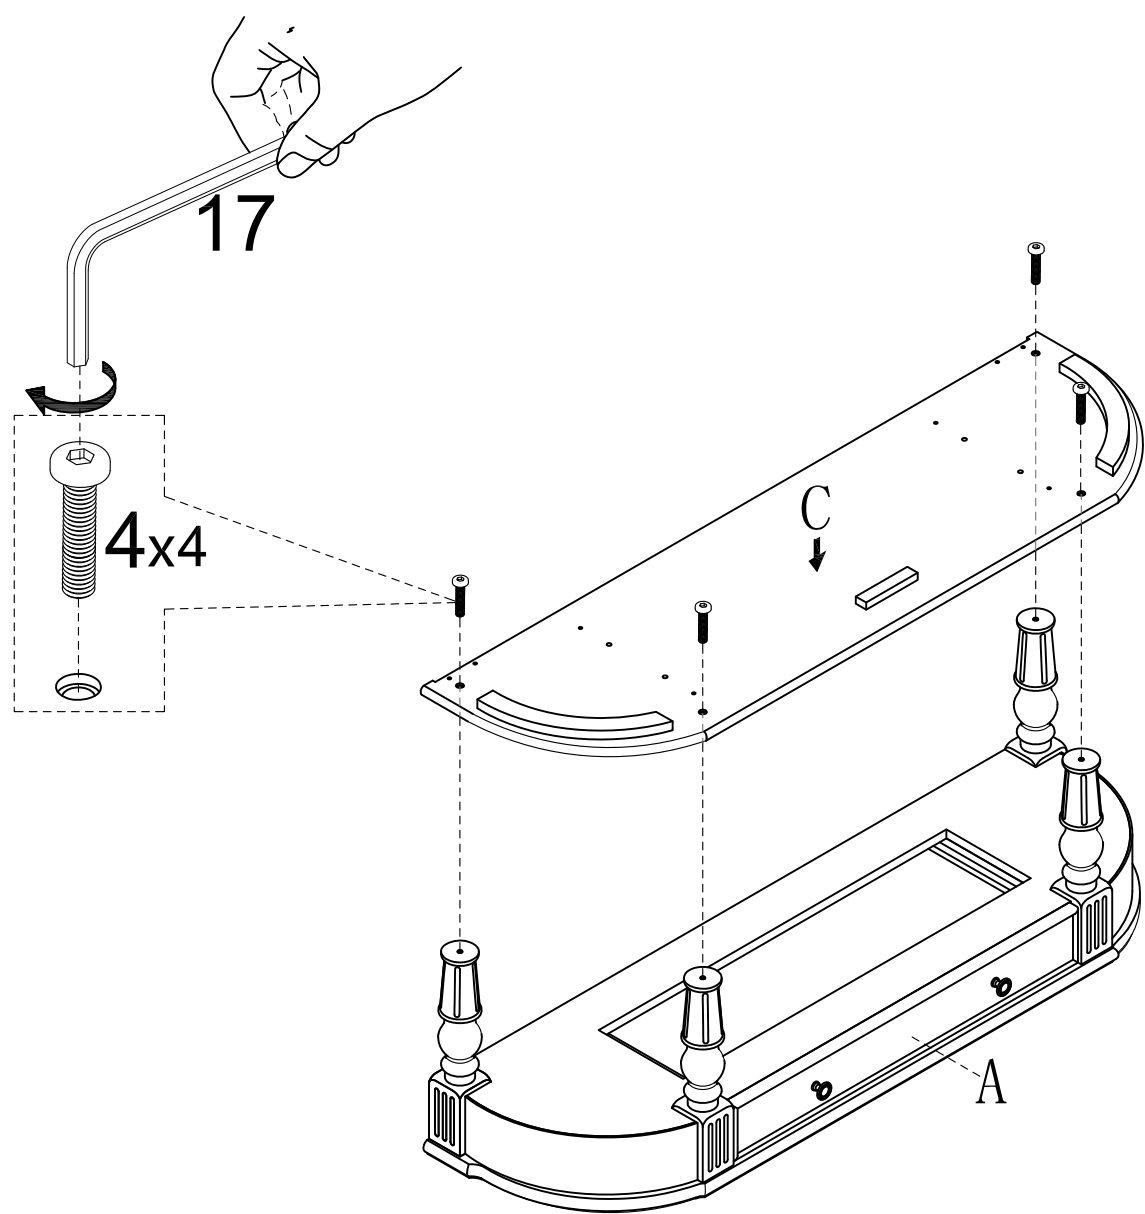


4	x4	17	x1
			
ø6*32mm			

ASSEMBLY INSTRUCTIONS





STEP-3

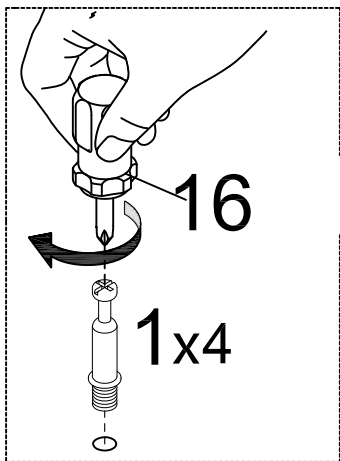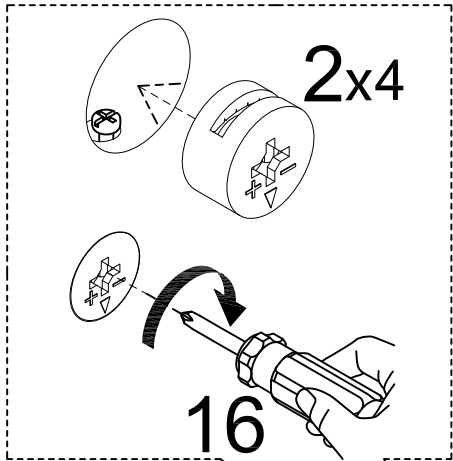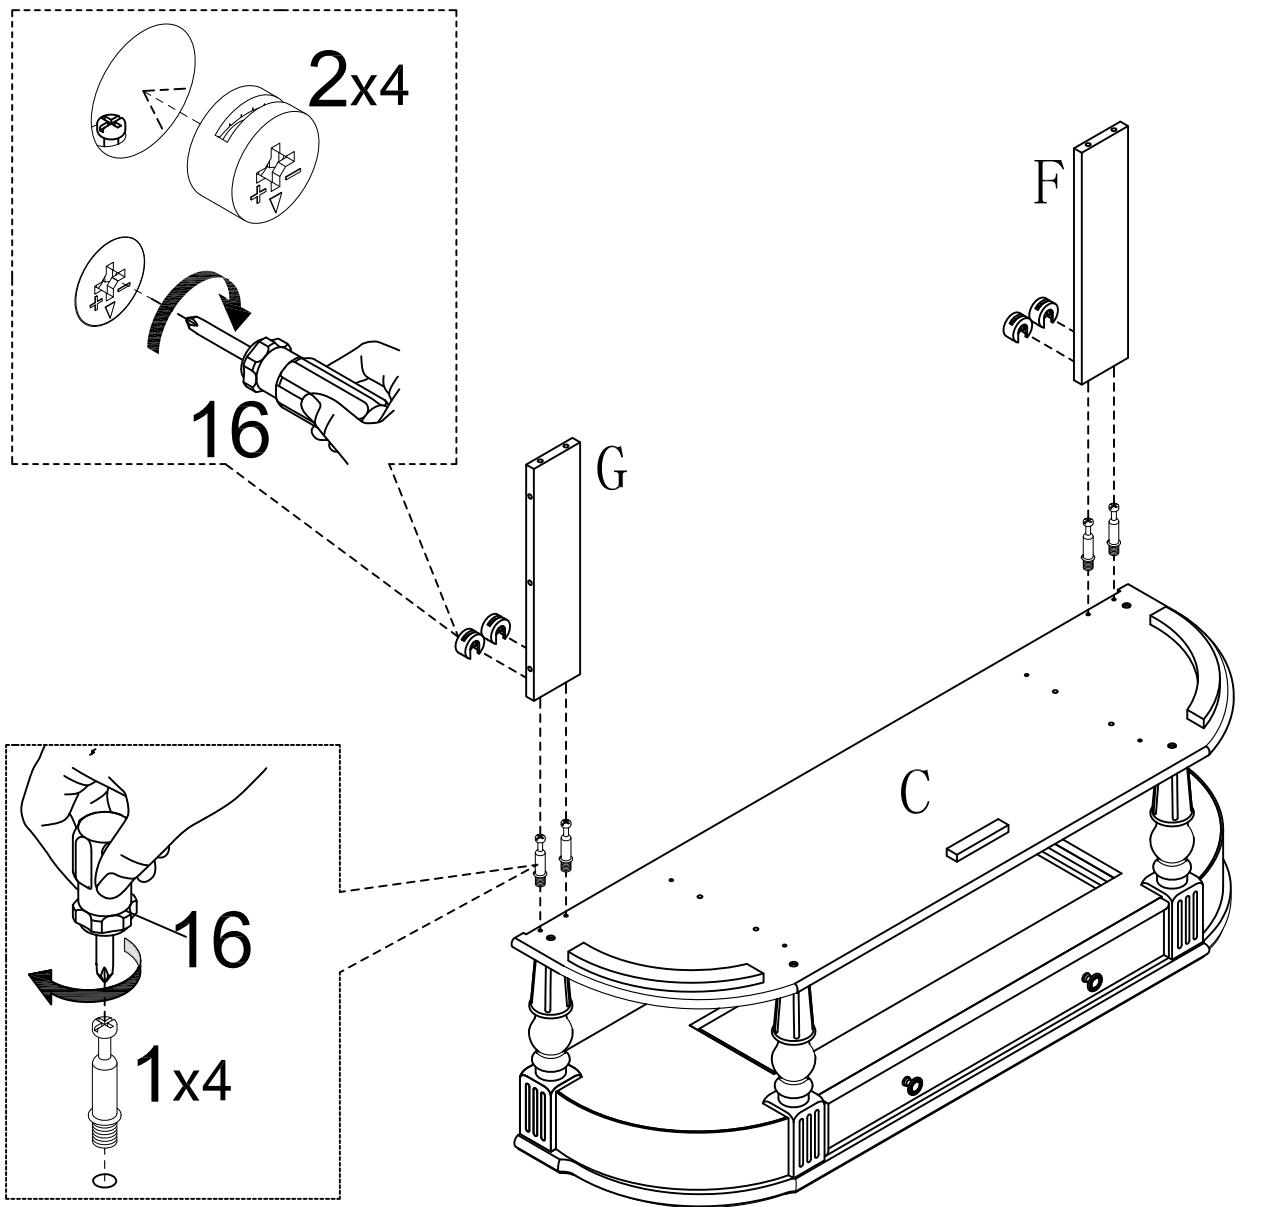


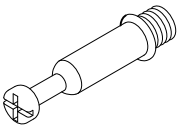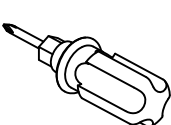
1	x4	2	x4	16	x1
					


ASSEMBLY INSTRUCTIONS


STEP-4

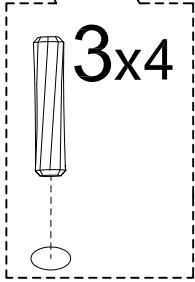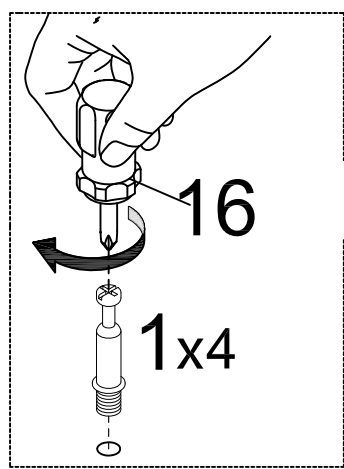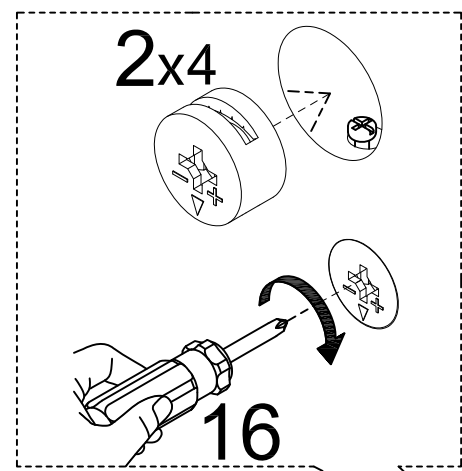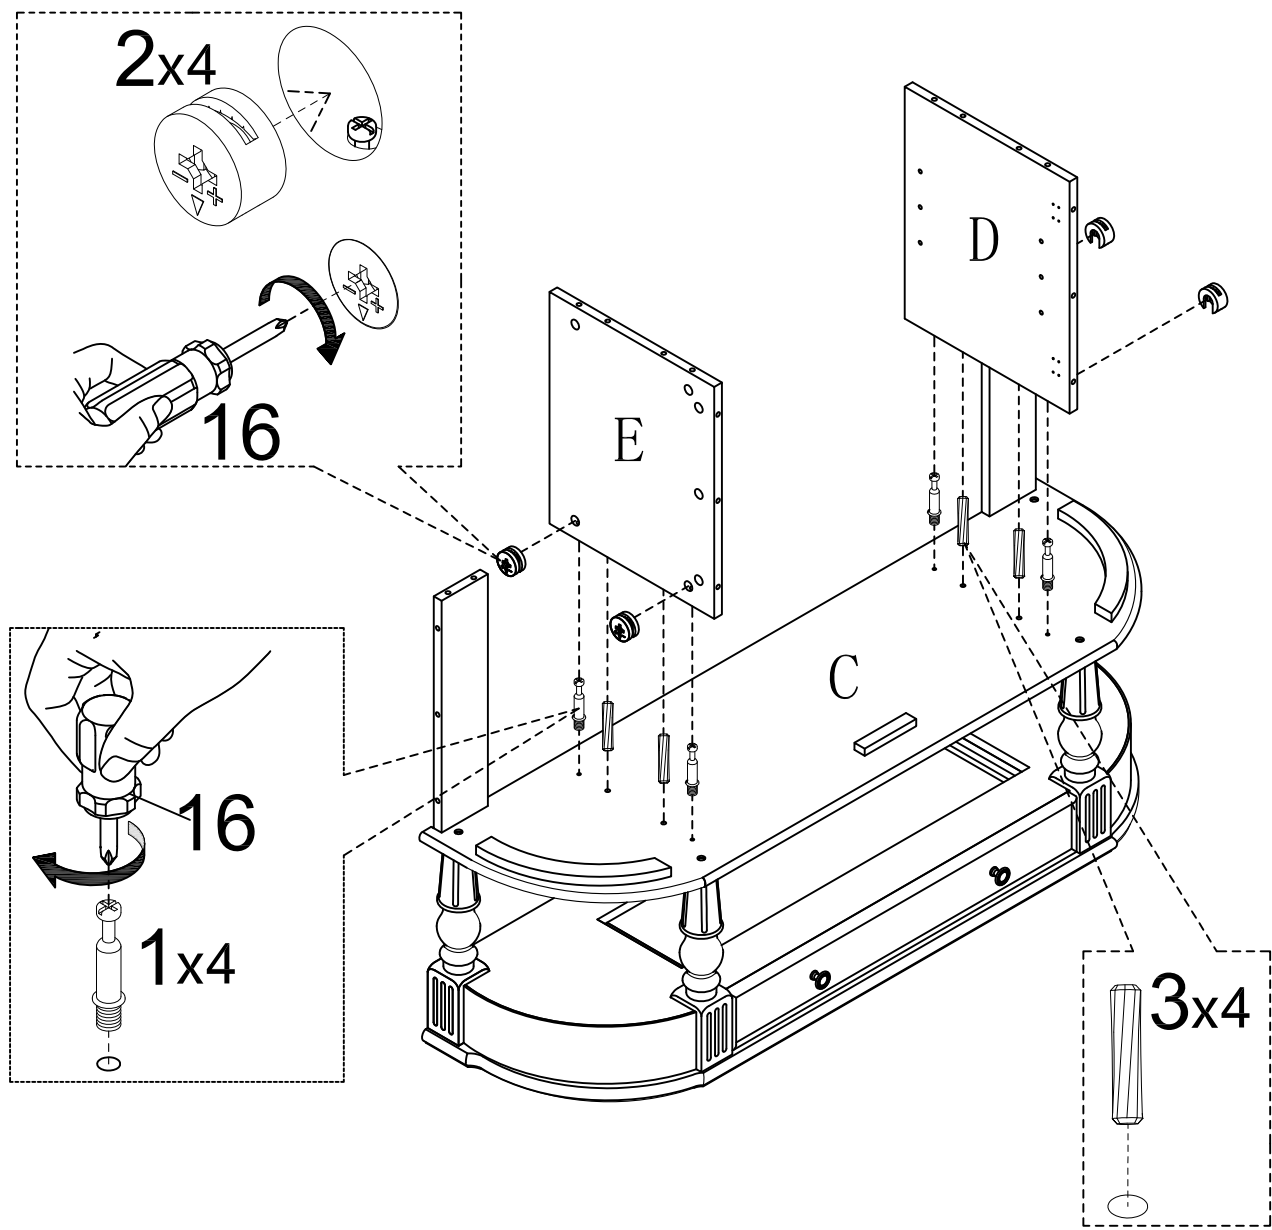

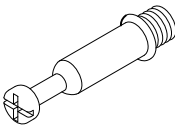1	x4
	


2	x4
	



3	x4
	
ø8*30mm	

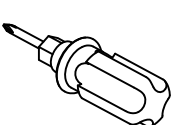16	x1
	

ASSEMBLY INSTRUCTIONS






STEP-5

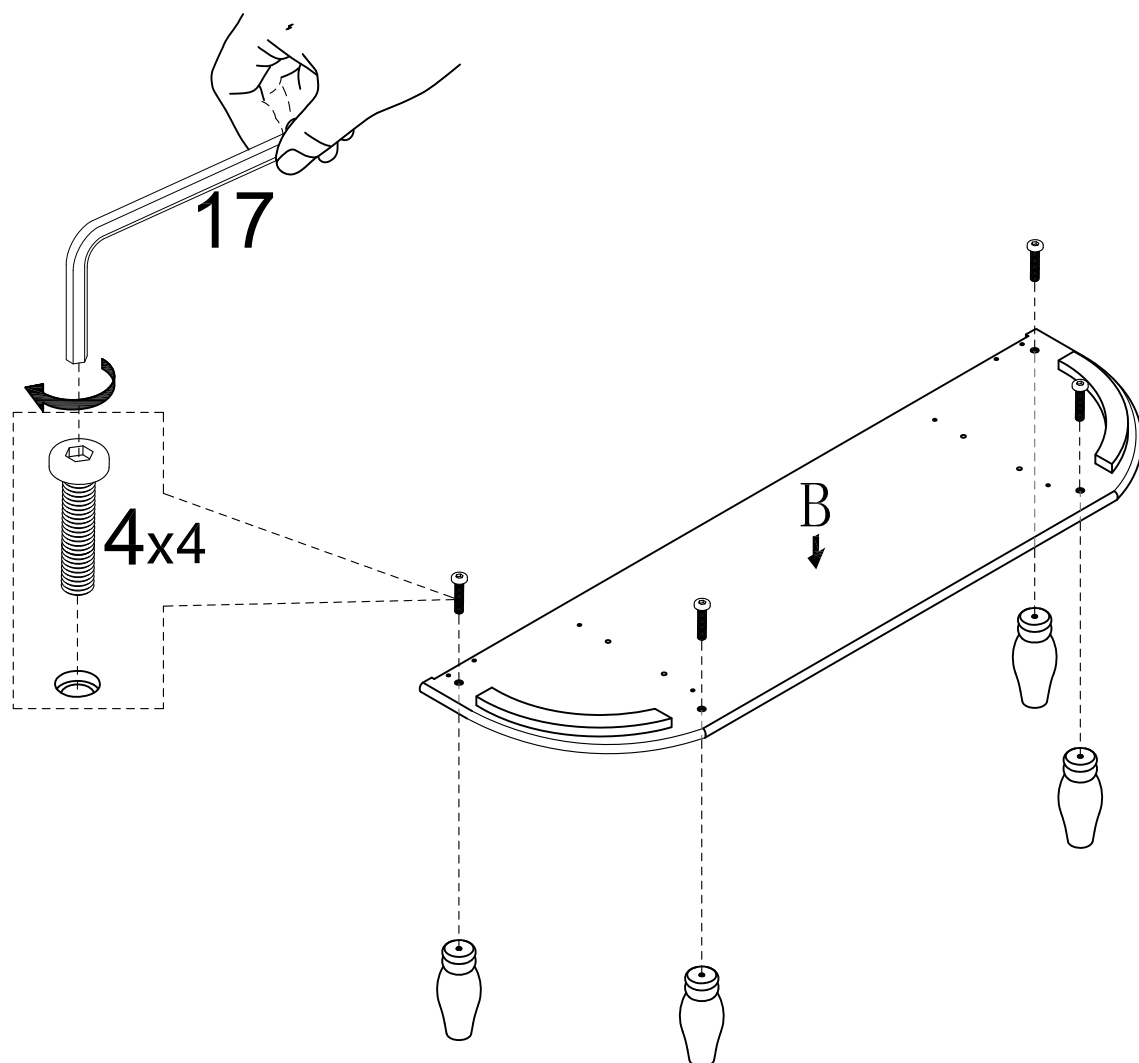

4	x4	17	x1
			
ø6*32mm			


ASSEMBLY INSTRUCTIONS



STEP-6

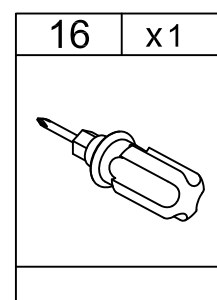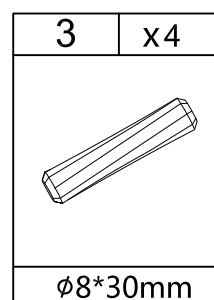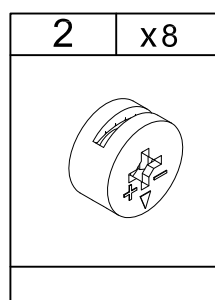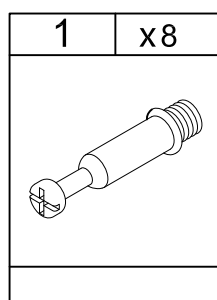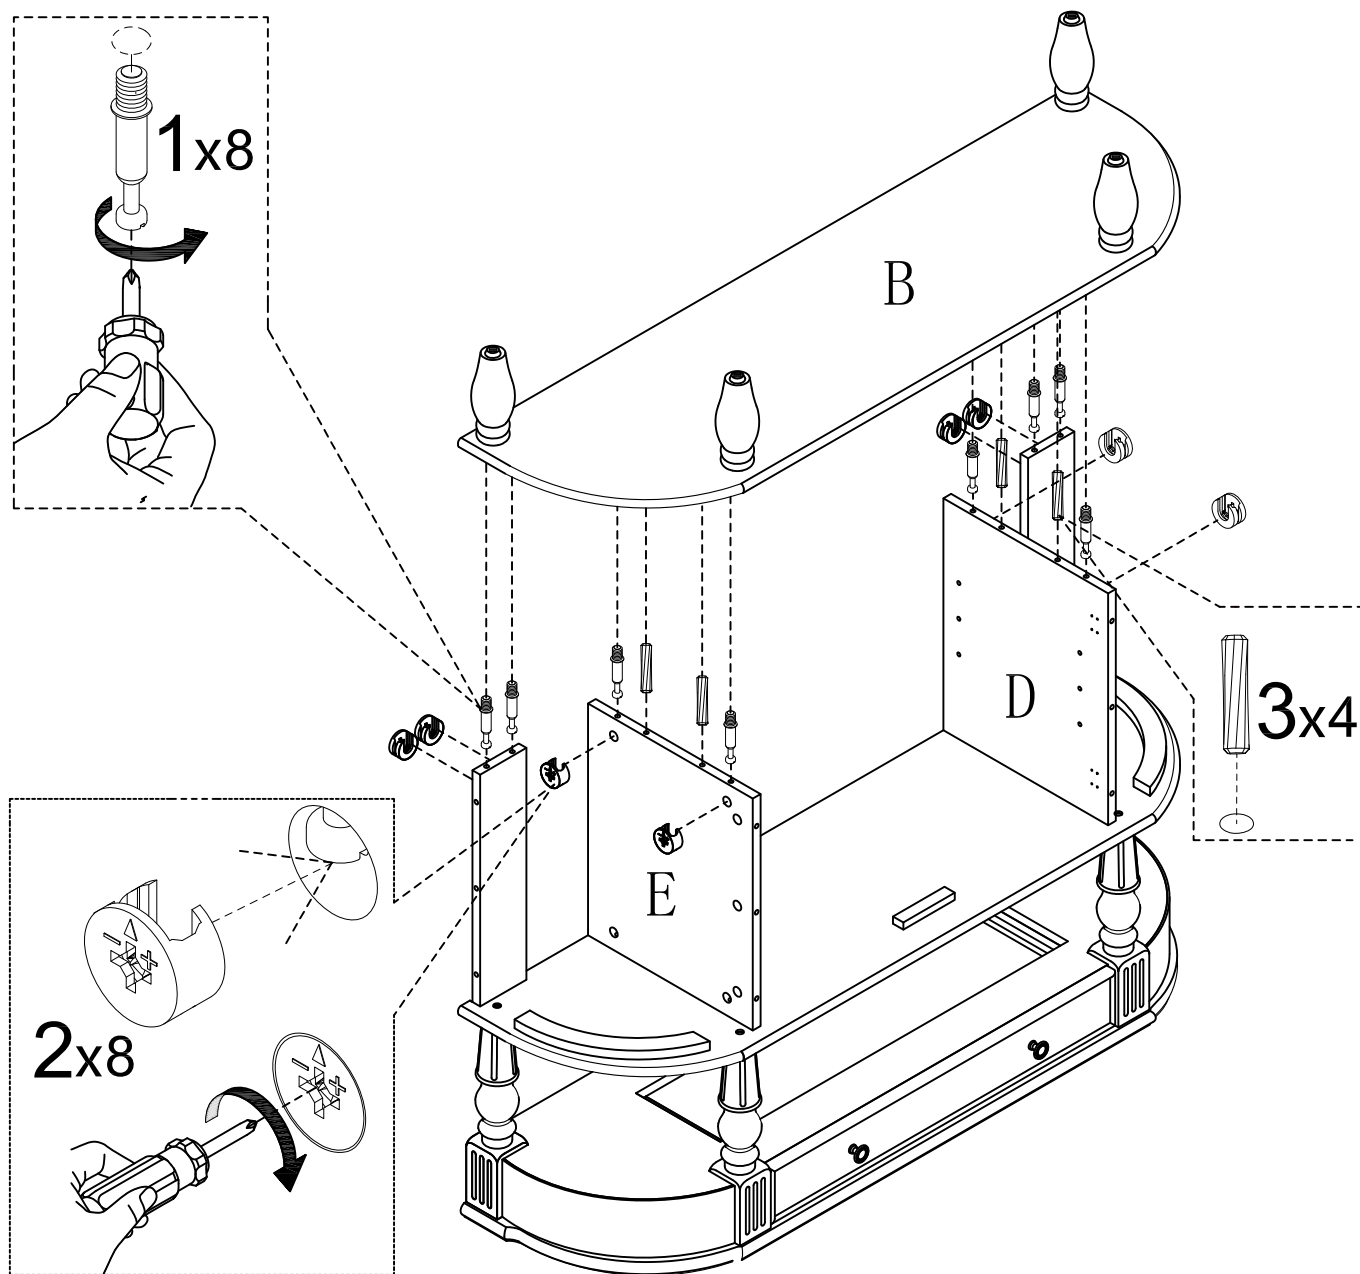

ASSEMBLY INSTRUCTIONS


STEP-7


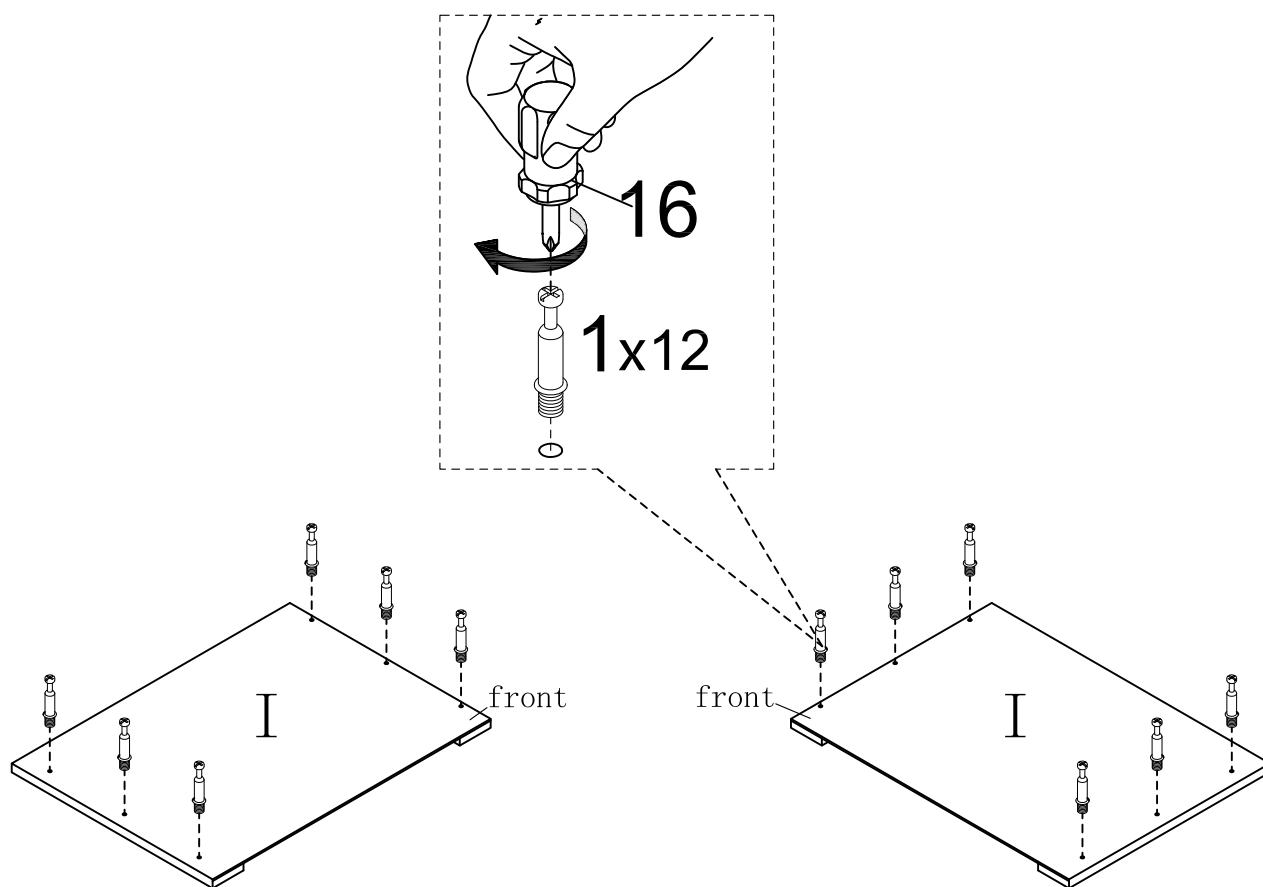


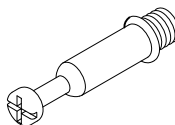1	x12	16	x1
			

ASSEMBLY INSTRUCTIONS


STEP-8

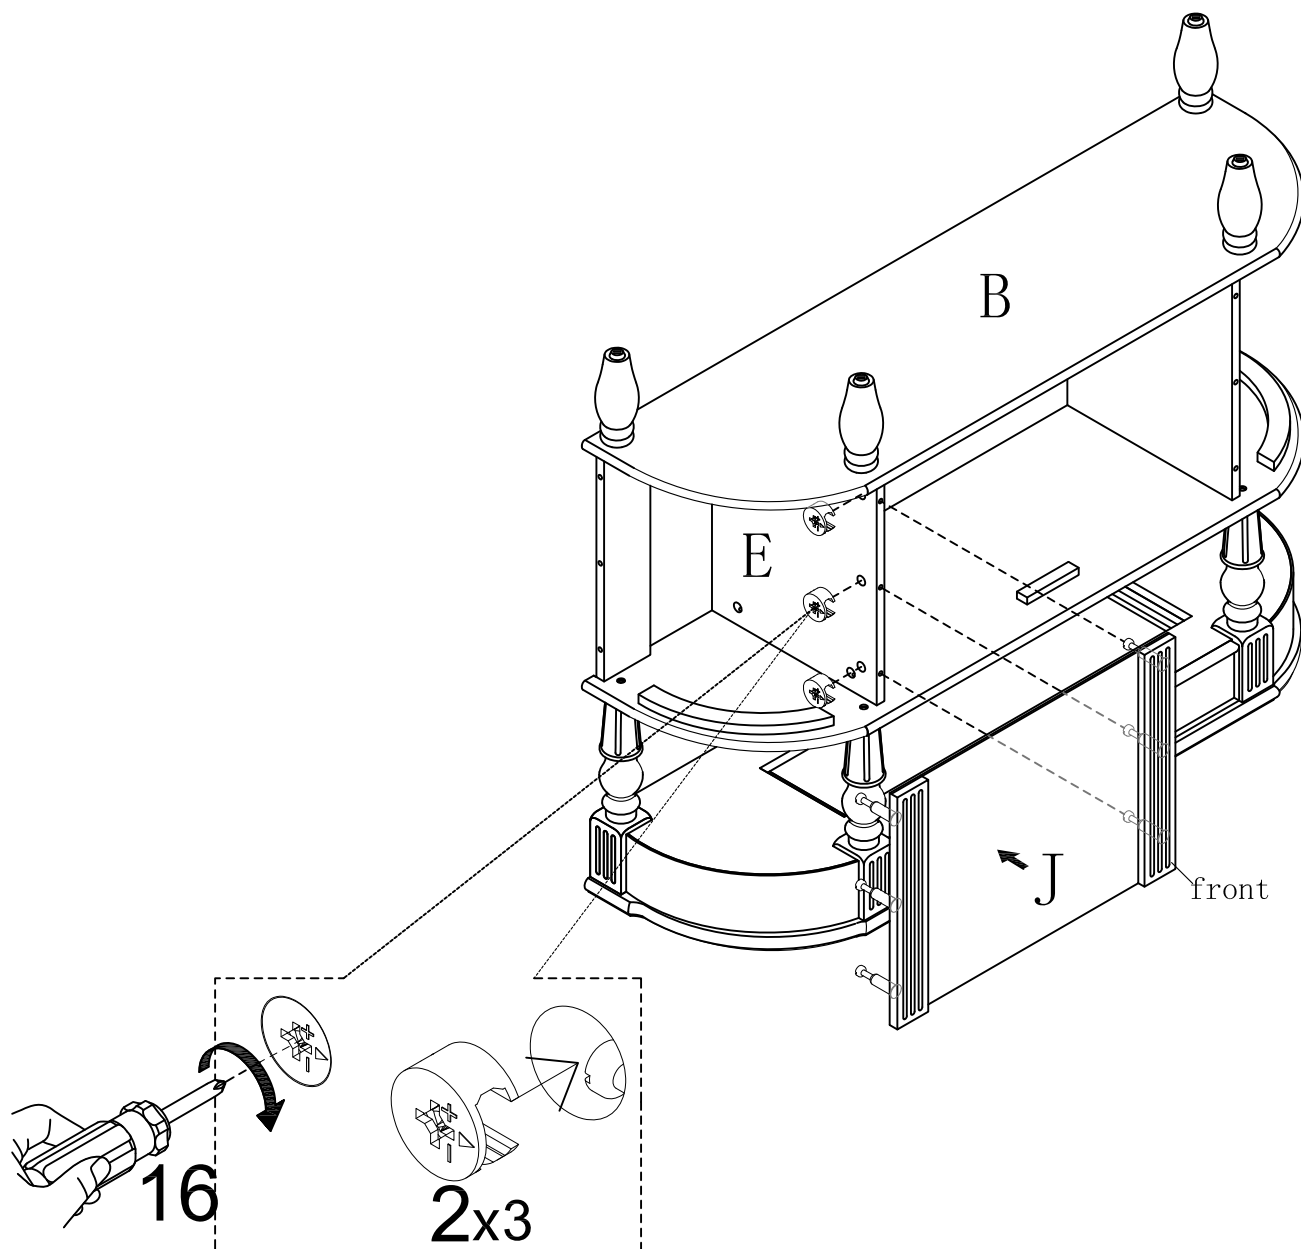

2	x3	16	x1
			

ASSEMBLY INSTRUCTIONS


STEP-9

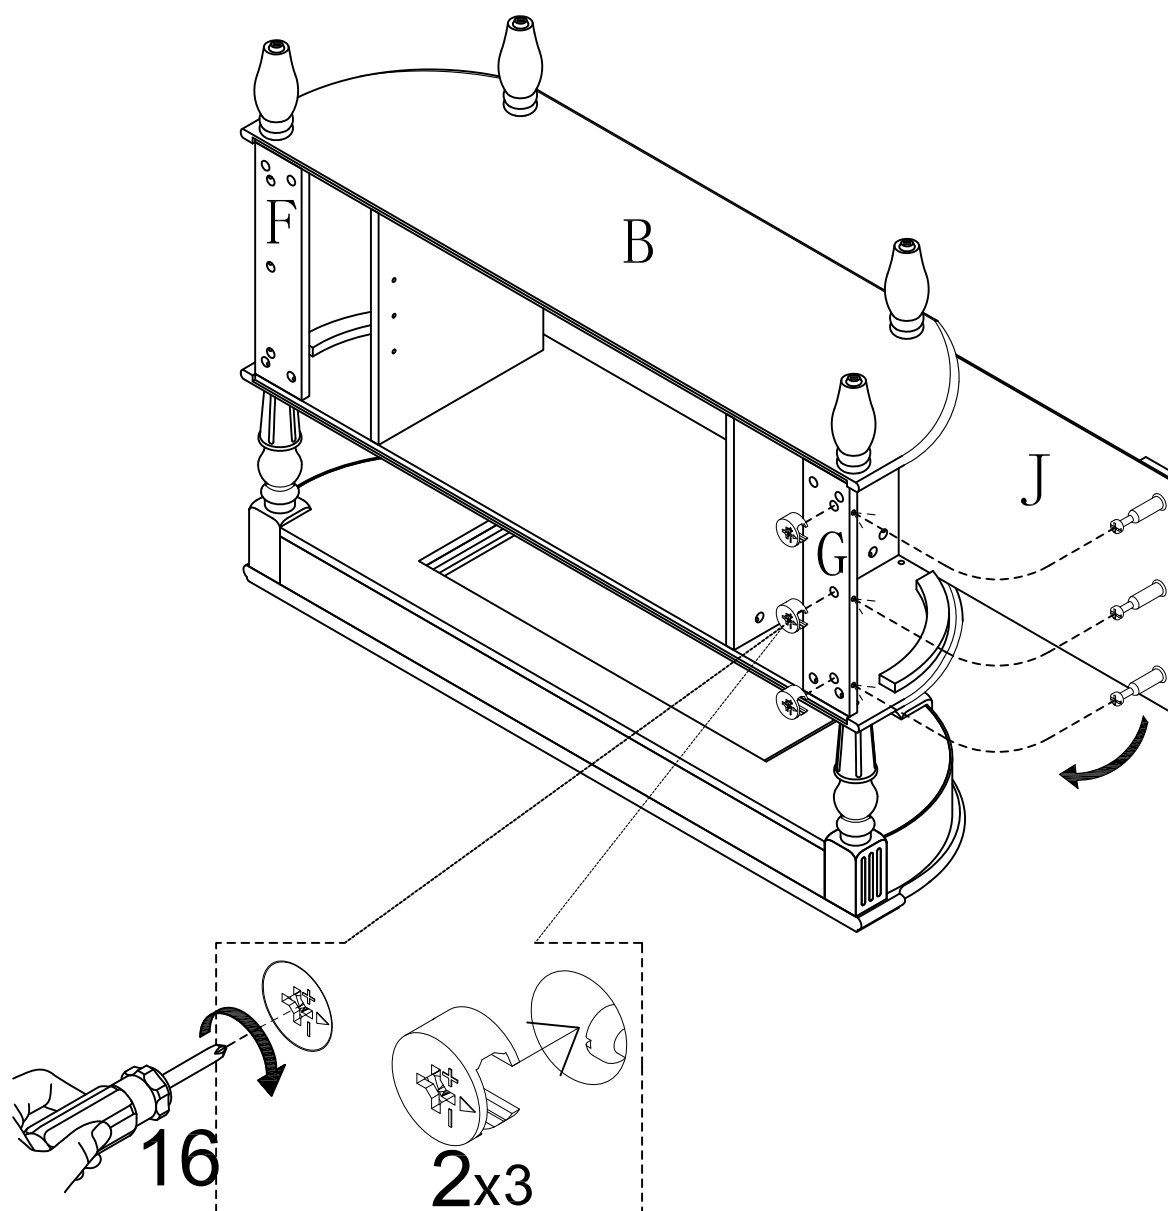

2	x3	16	x1


ASSEMBLY INSTRUCTIONS


STEP-10

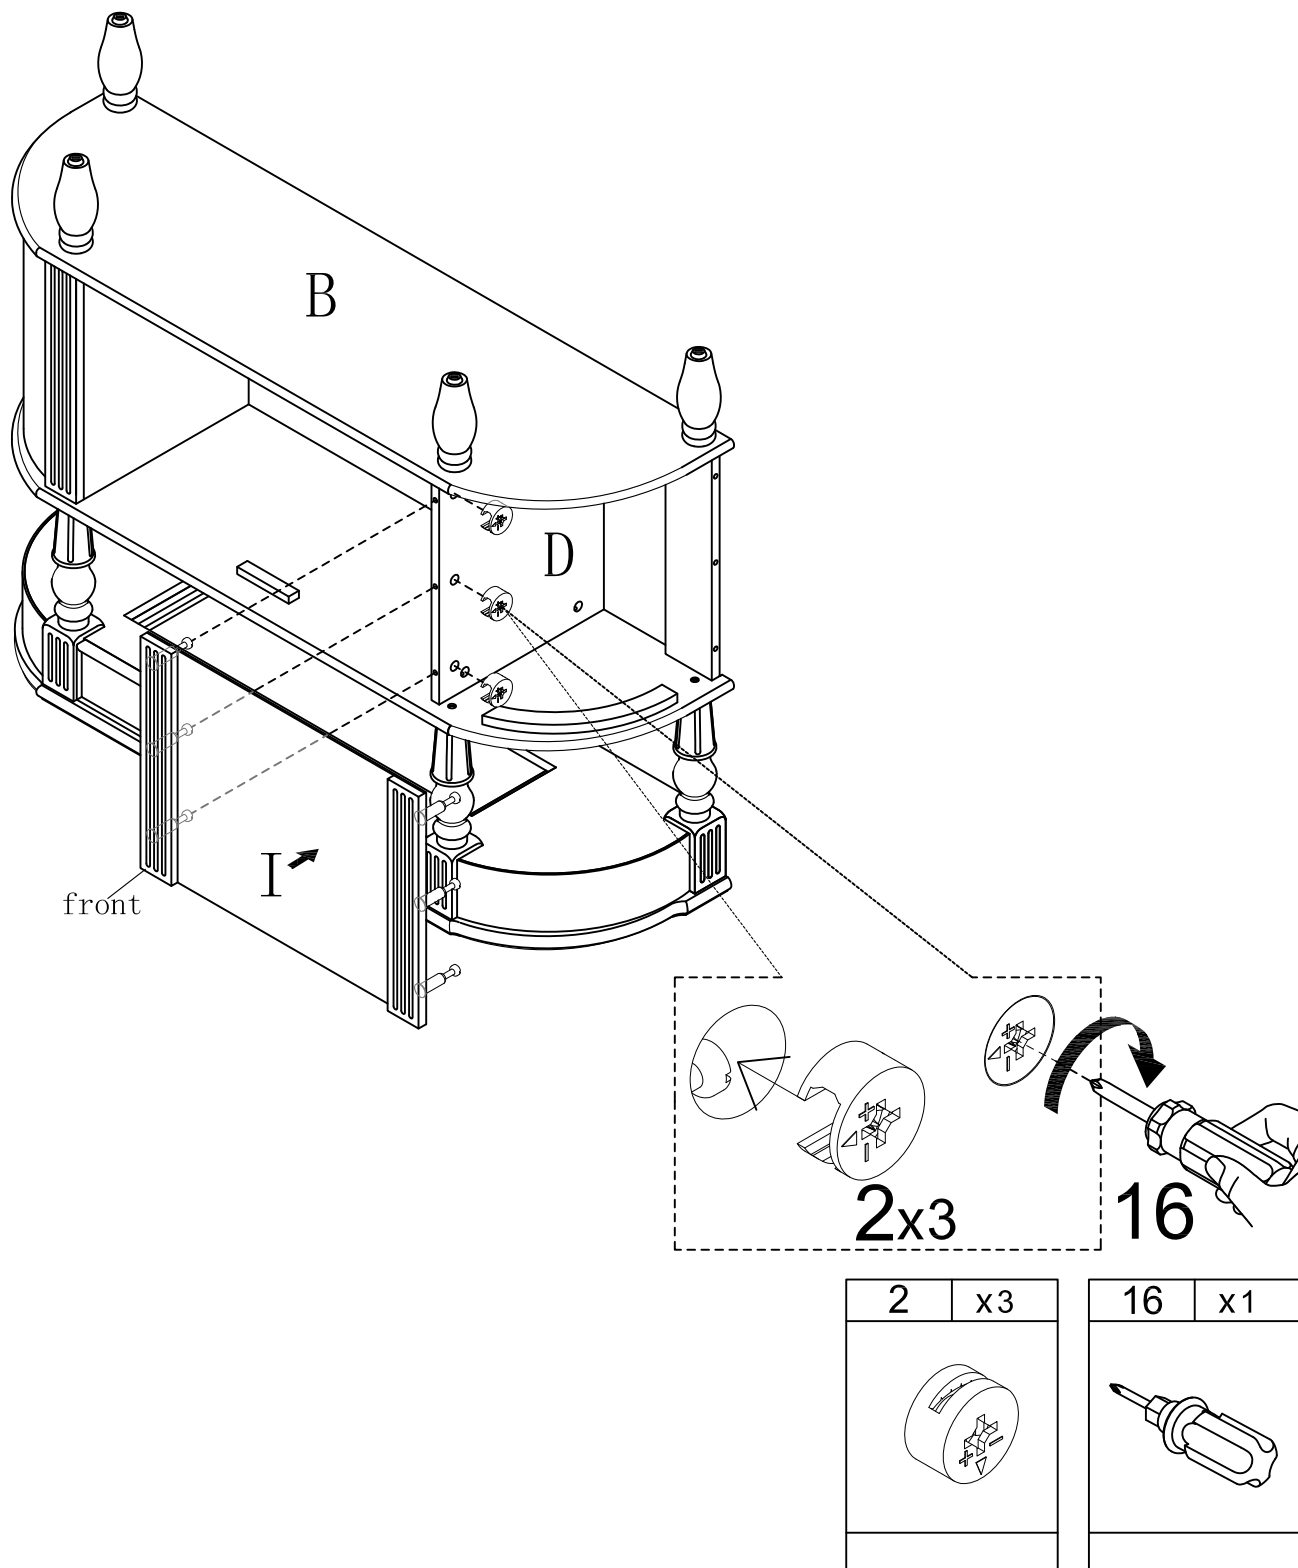


ASSEMBLY INSTRUCTIONS

STEP-11

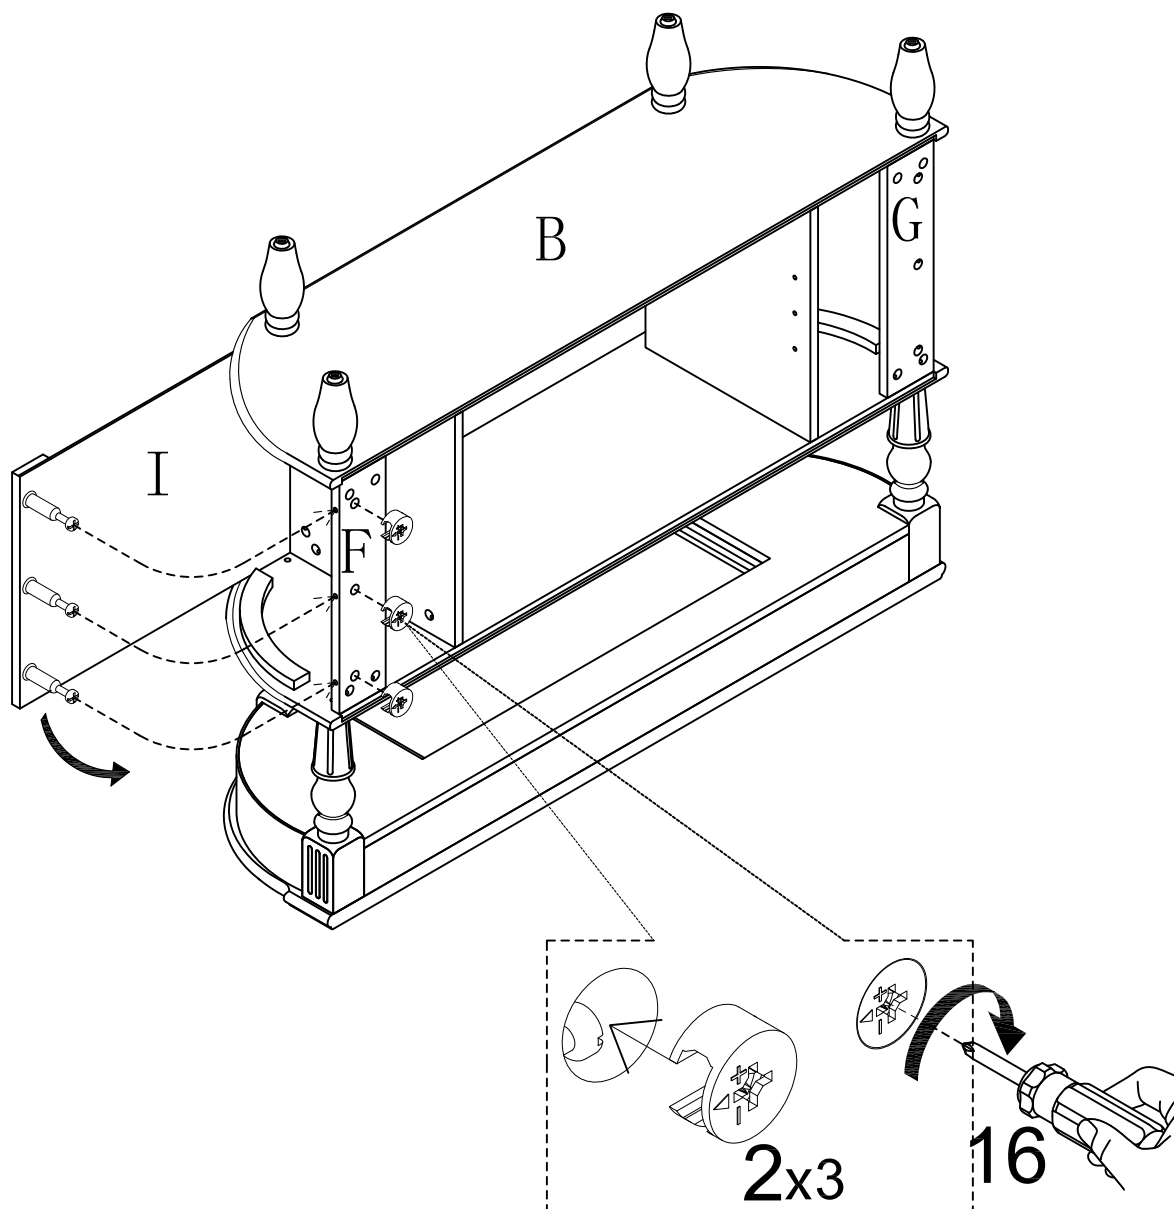


2	x3
	


16	x1
	


ASSEMBLY INSTRUCTIONS


STEP-12

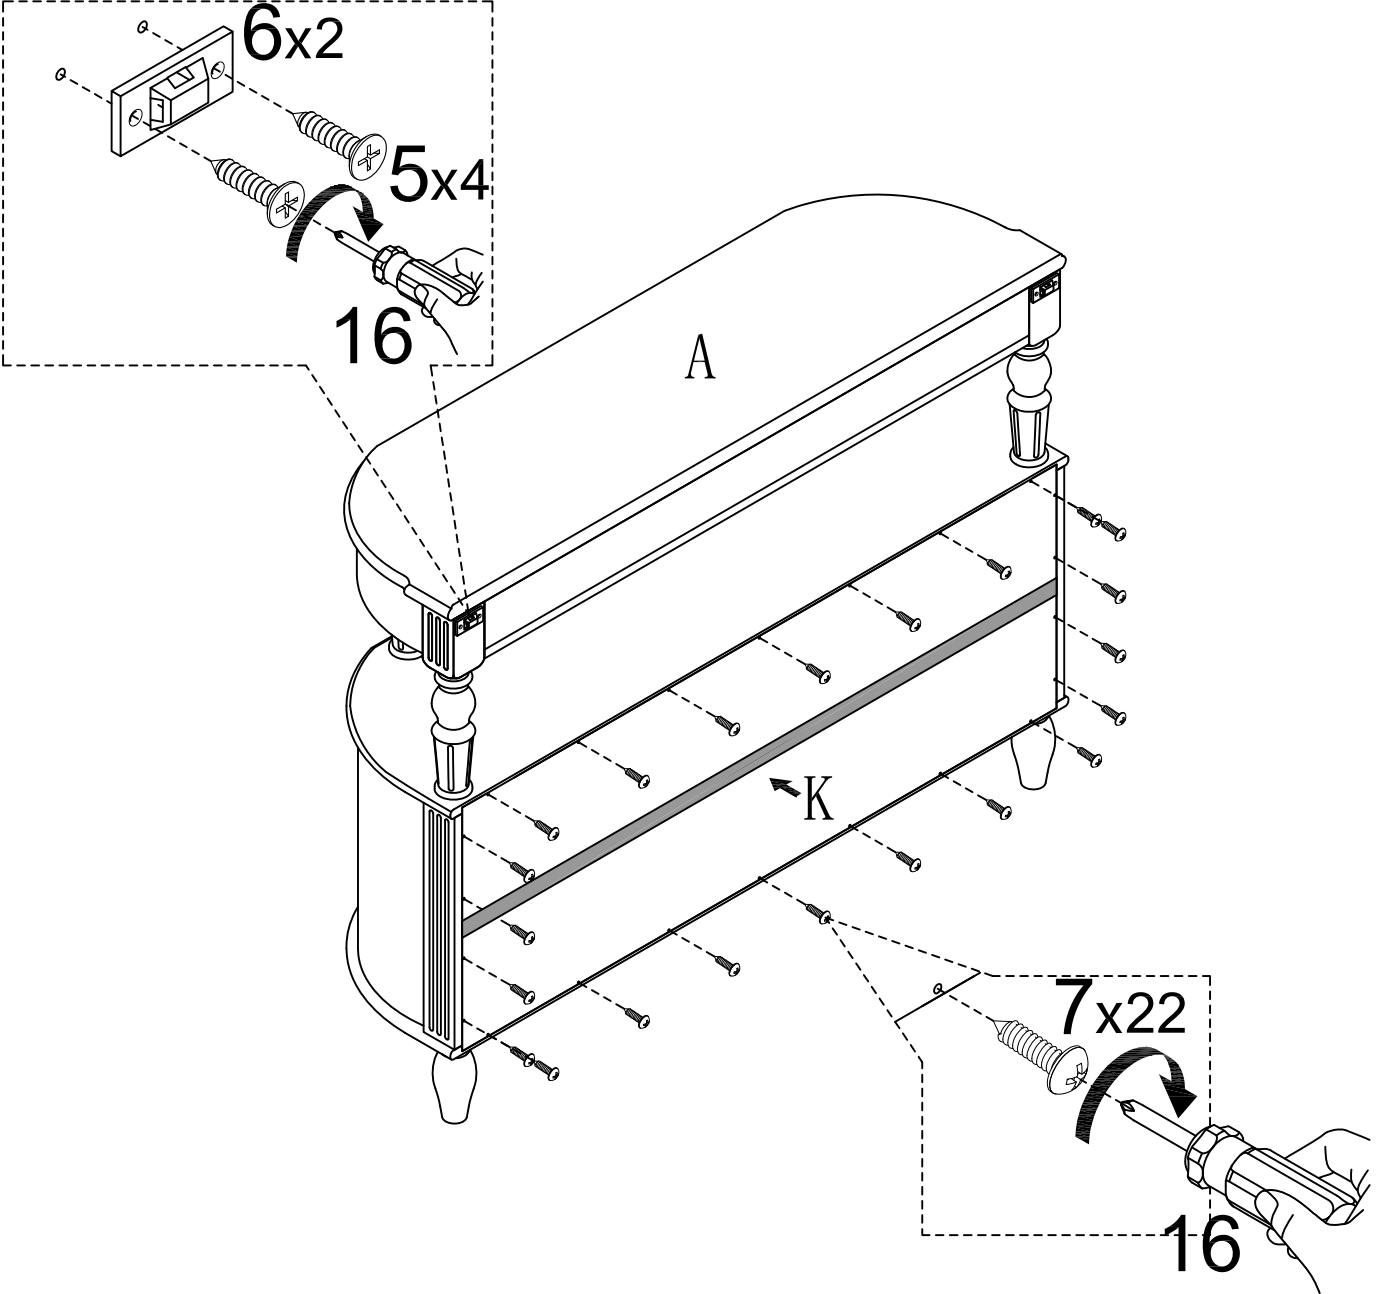

5	x4
	
ø3*16mm	



6	x2
	

7	x22
	
ø3*14mm	

16	x1
	


ASSEMBLY INSTRUCTIONS

STEP-13

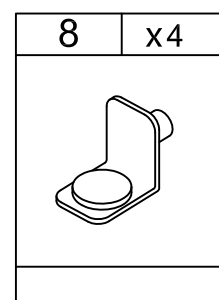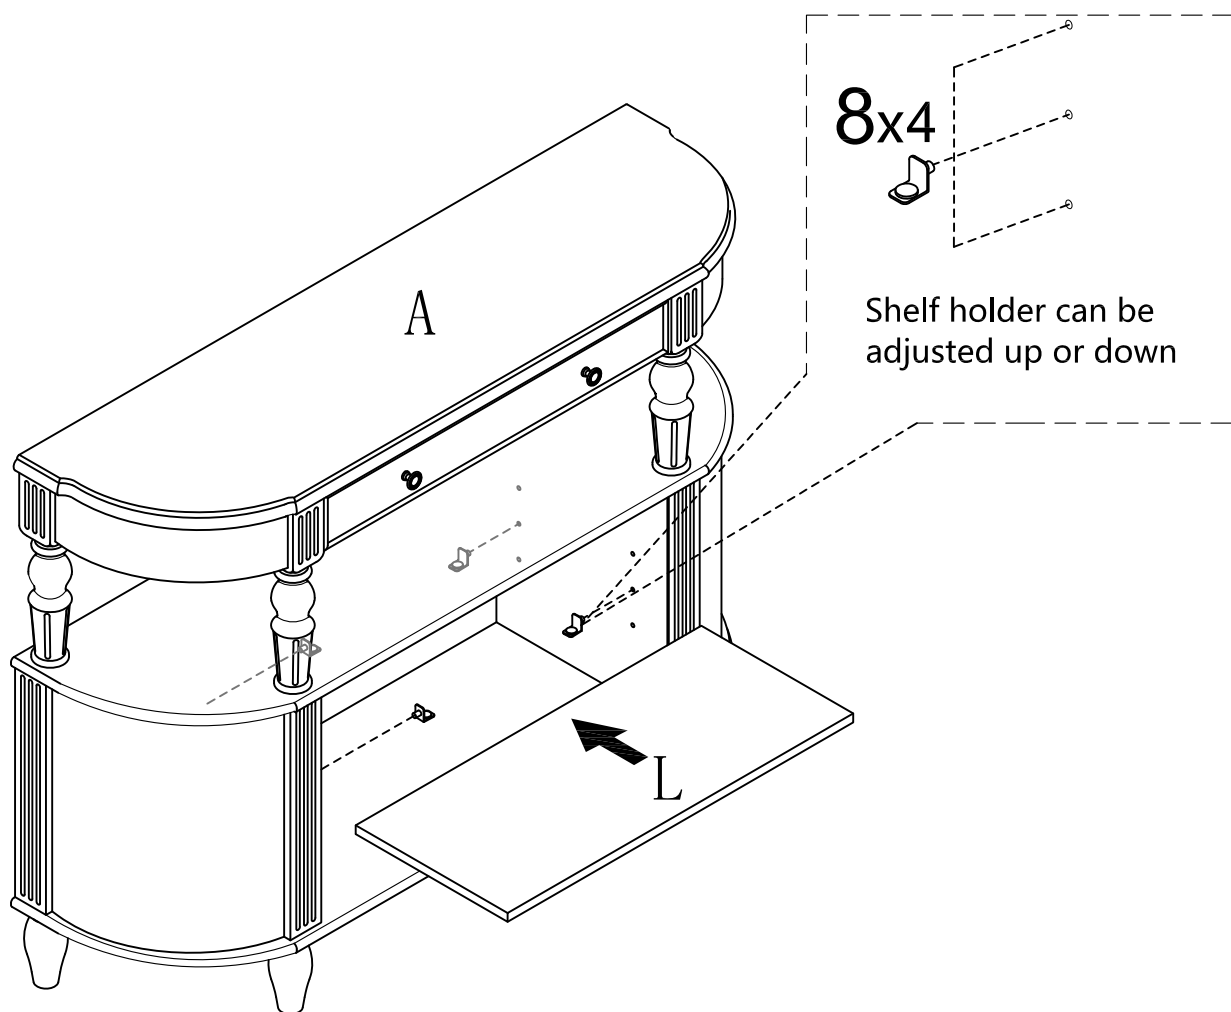

ASSEMBLY INSTRUCTIONS


STEP-14

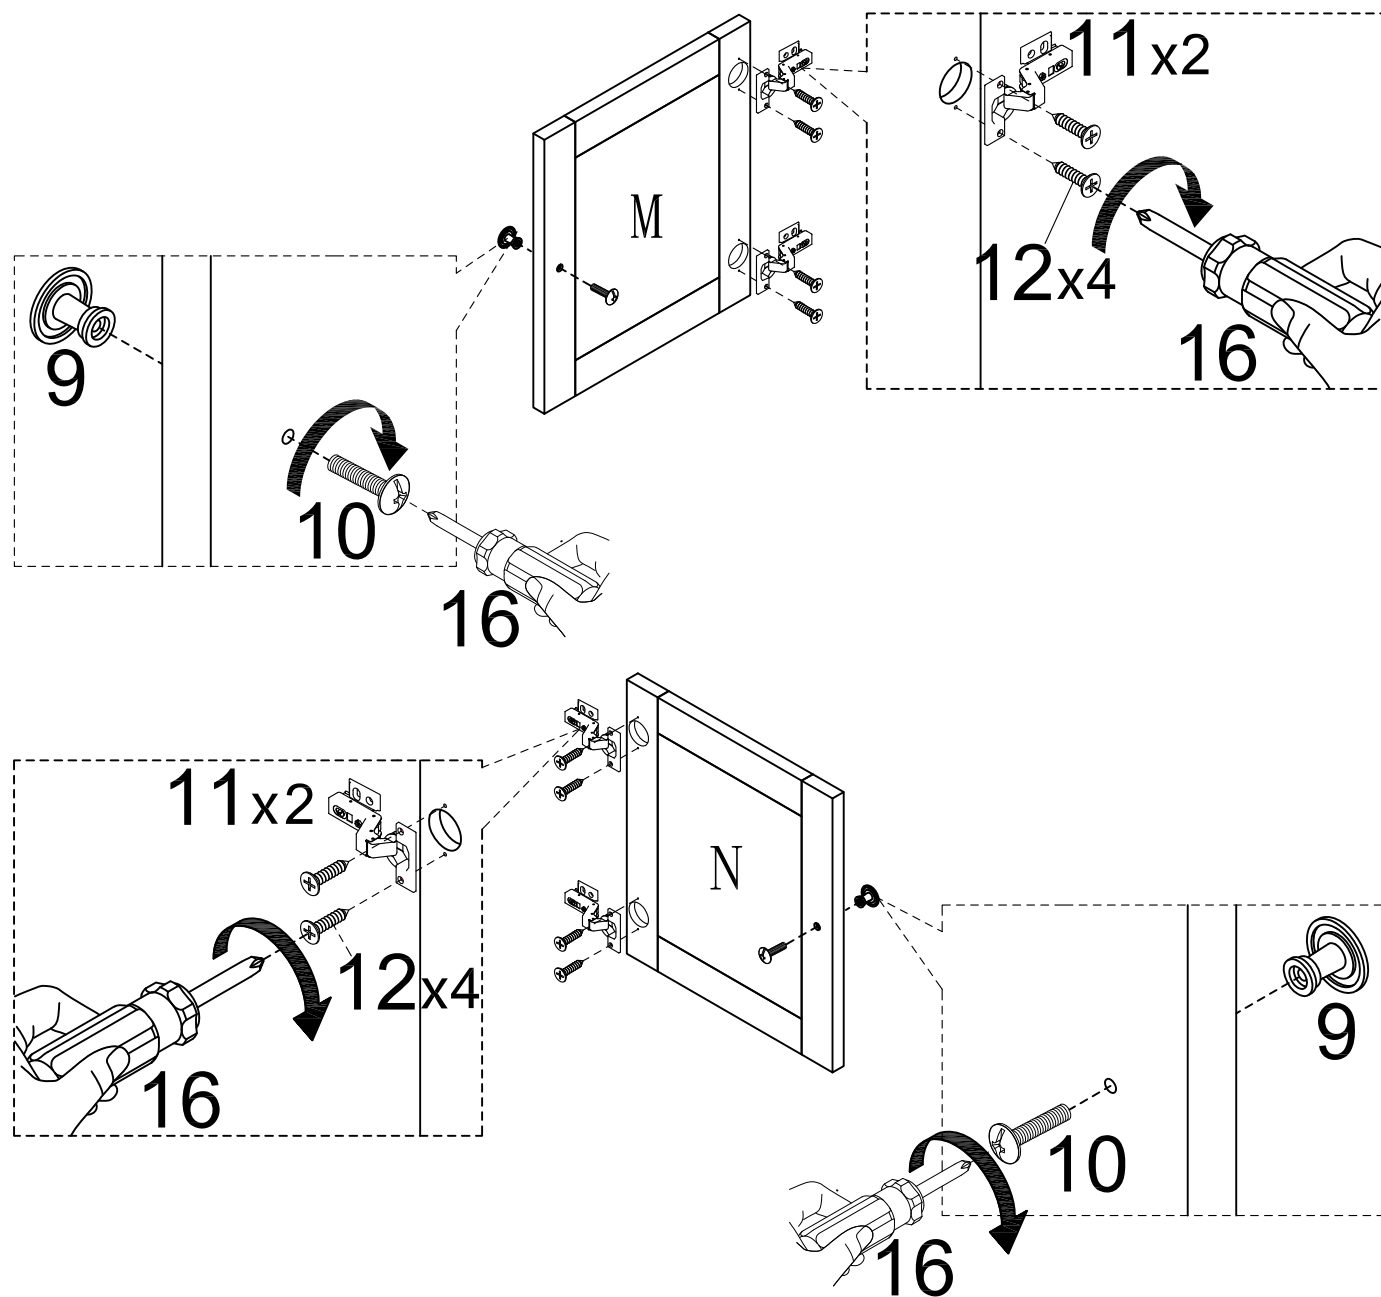


9	x2	10	x2	11	x4	12	x8	16	x1
		ø4*25mm				ø3.5*14mm			

ASSEMBLY INSTRUCTIONS


STEP-15

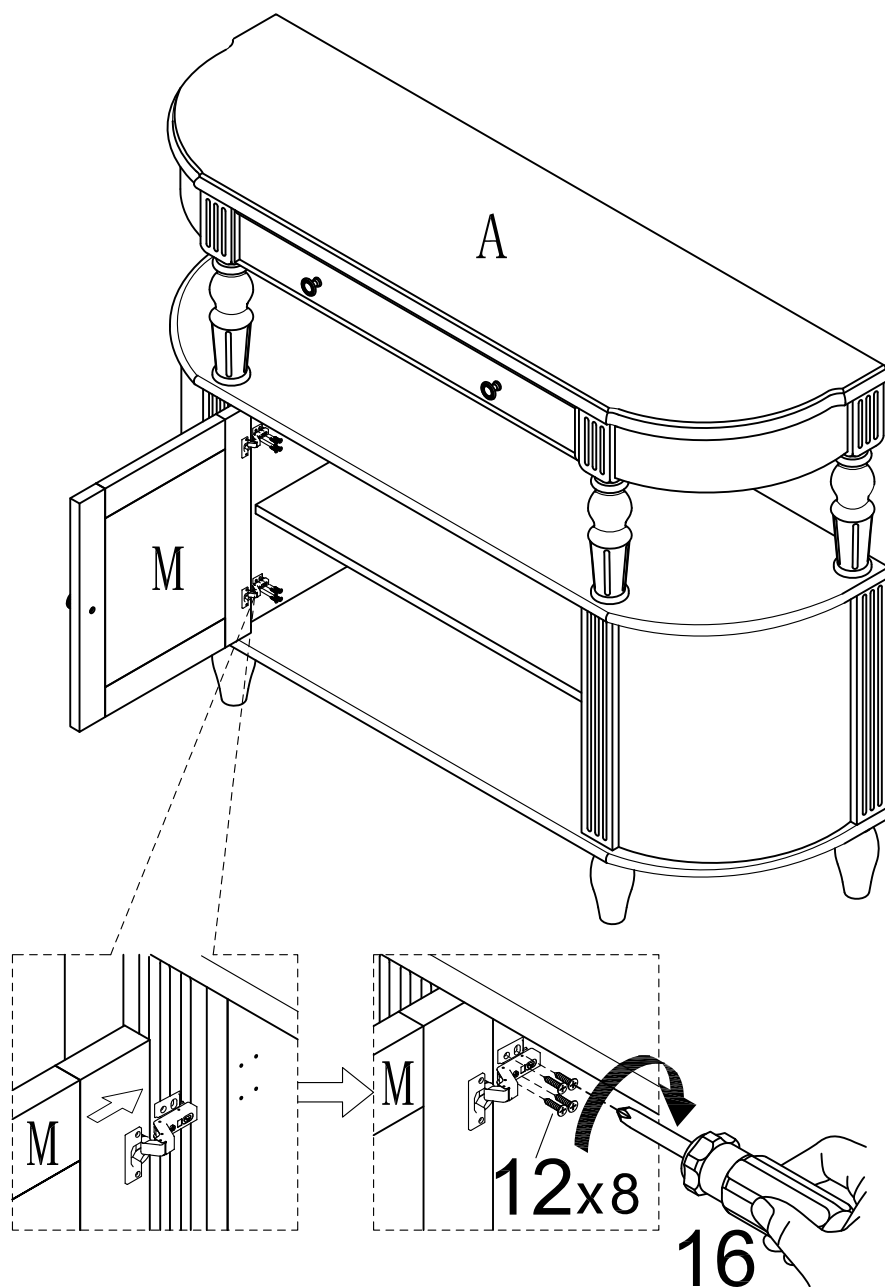


12	x8	16	x1
			
ø3.5*14mm			

ASSEMBLY INSTRUCTIONS







STEP-16

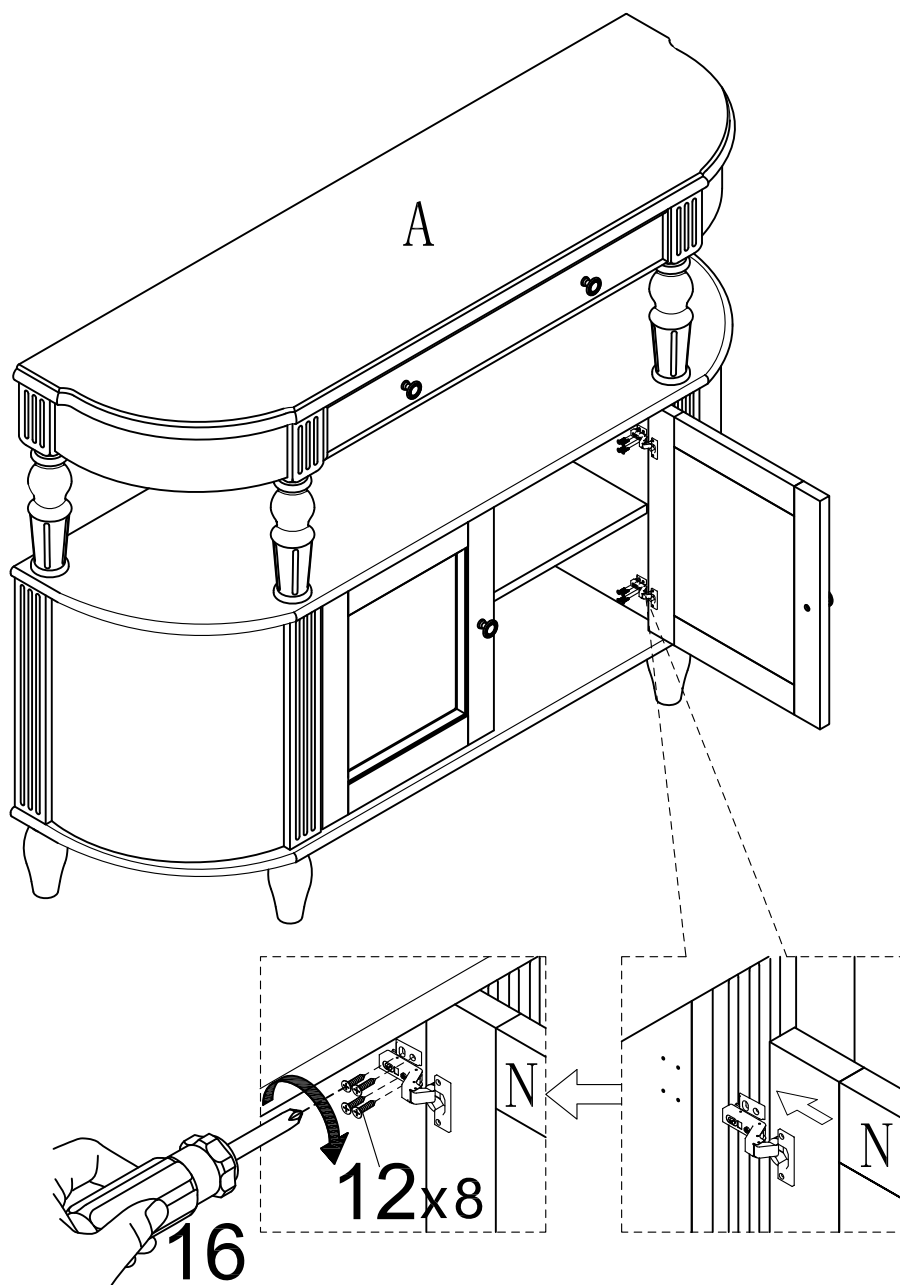

12	x8	16	x1
			
ø3.5*14mm			



ASSEMBLY INSTRUCTIONS

STEP-17

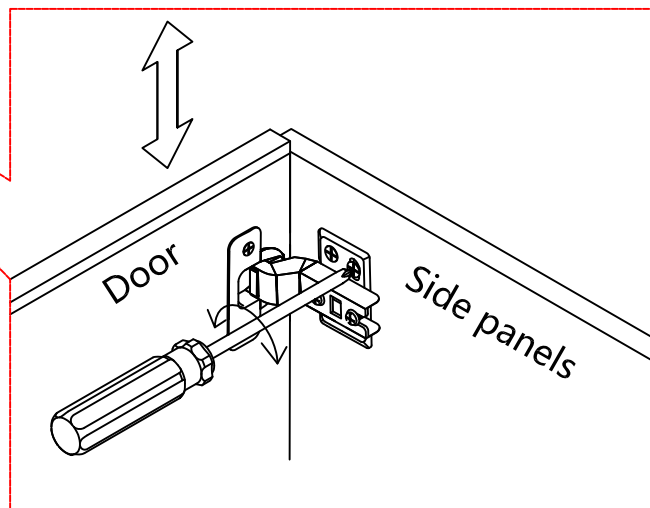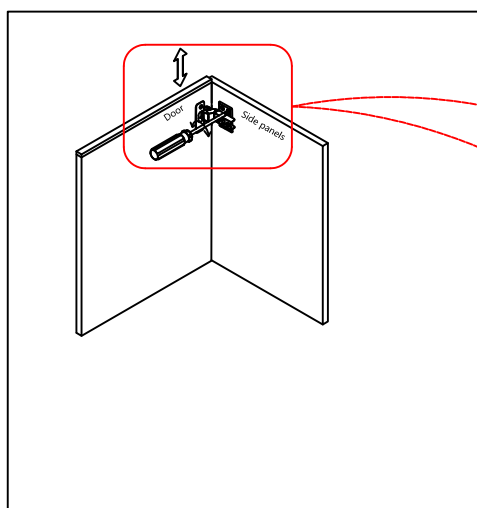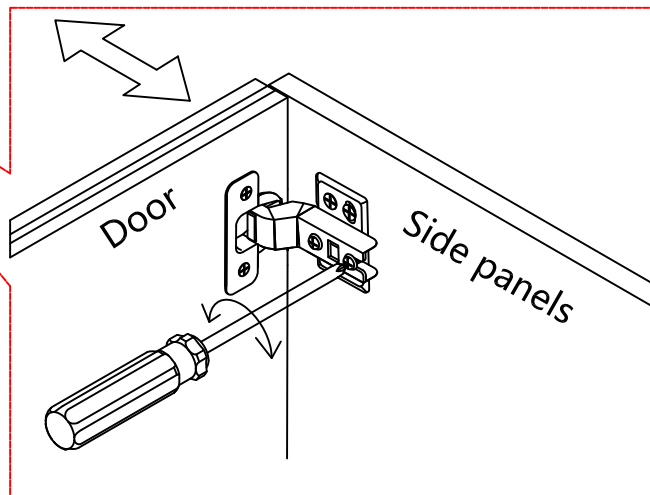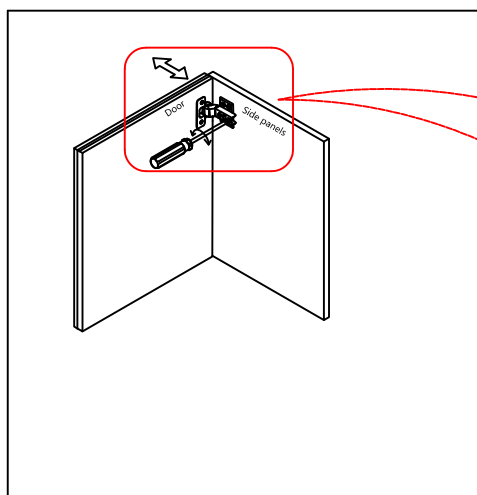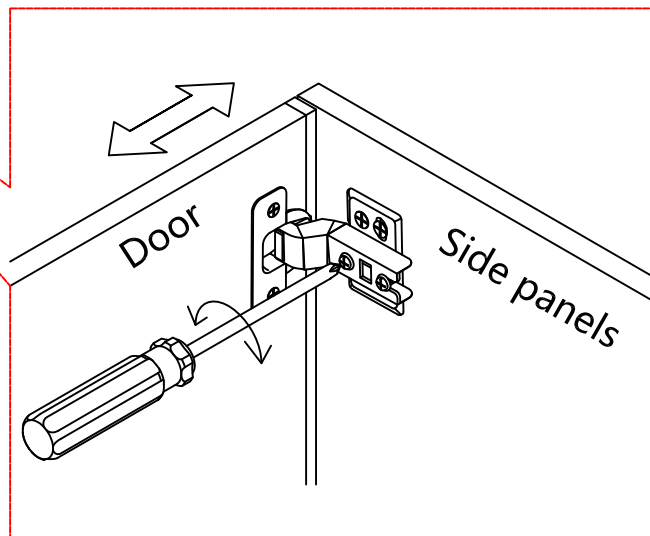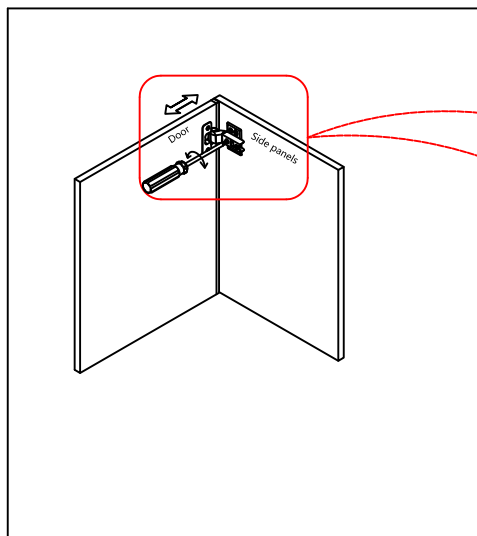


ASSEMBLY INSTRUCTIONS


STEP-18

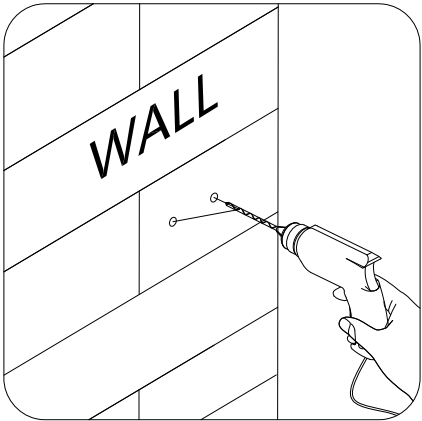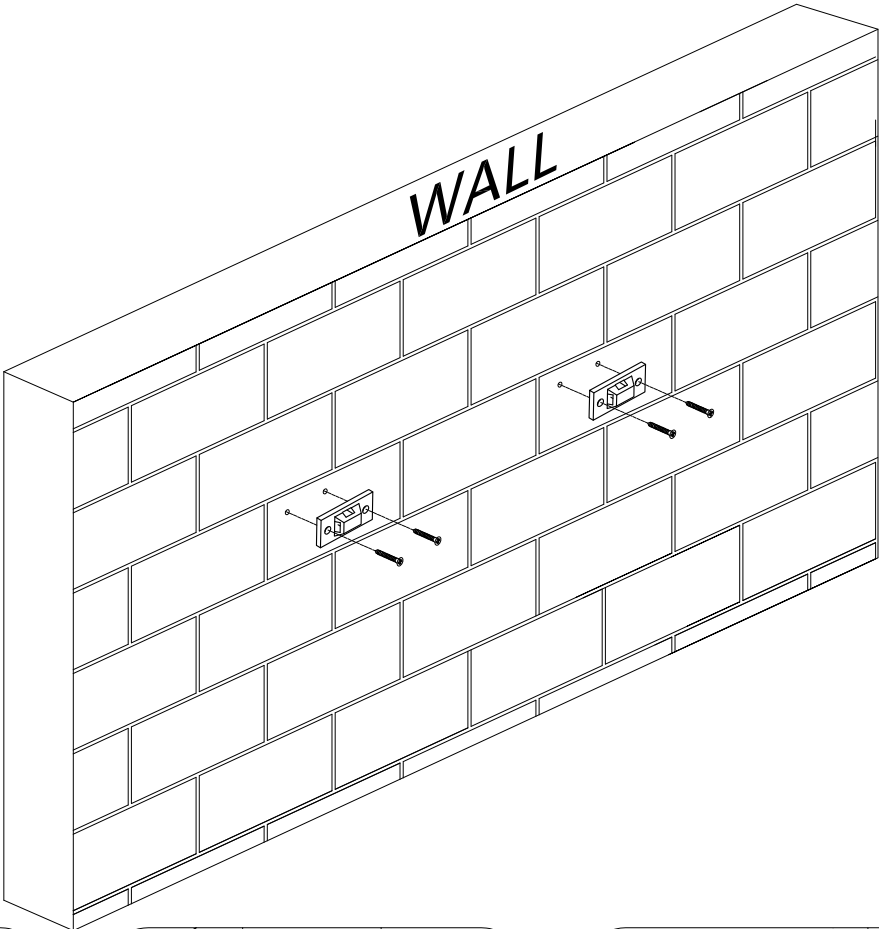

1.Drill a hole in the wall with an electric drill.

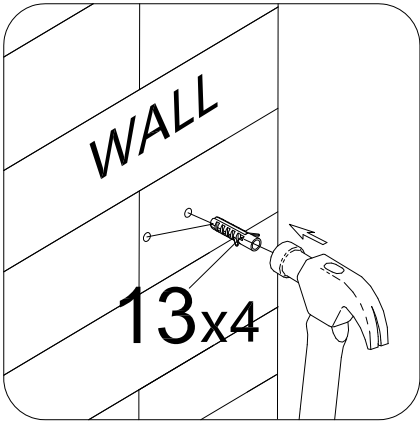

2.Tap the plastic wall anchor into the hole with a hammer.

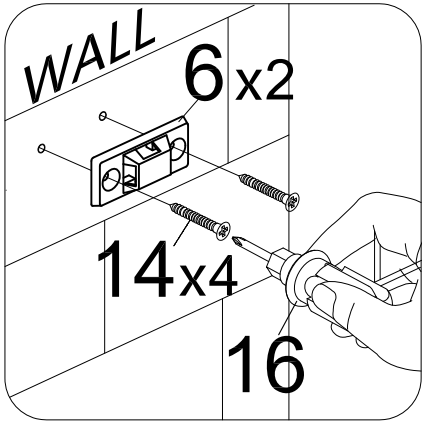

3.Secure the Anti-tip device ⑥ to the wall with screws ⑭.

6	x2

13	x4

14	x4
ø3.5*35mm	

16	x1

ASSEMBLY INSTRUCTIONS

STEP-19

WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- For use with televisions weighing 35 lb or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

