














# Assembly Instructions


## Return

TUN010CL	TUN010KL		TUN020	TUN021AG	TUN013LB	TUN016SC	TUN019LB			TUN016BG	
											
Cam lock 7Pos+1Polypass	KLX Cam 7Pos+1Polypass	Cam Cover 7Pos+1Polypass	Dowel 3Pos+1Polypass	Adjustable Glide 4 Pos	Glide L-Bracket 3Pos	screw#11+ 12Pos	L-Bracket 2Pos	Cover 3Pos	Cover 3Pos	80mm Black Groutset 2 Pos	80x12 screw 13Pos

### STEP1

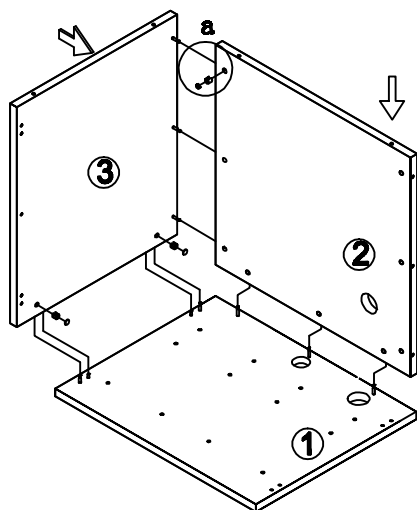


**IMPORTANT:**  
**FUNCTION OF KLX CAM**




1/4 RIGHT  
TURN FOR  
LOCKING

MAKE SURE THE ARROW IS  
POINTING UPWARDS BEFORE  
INSERTING INTO THE PANELS  
HOLE






### STEP2

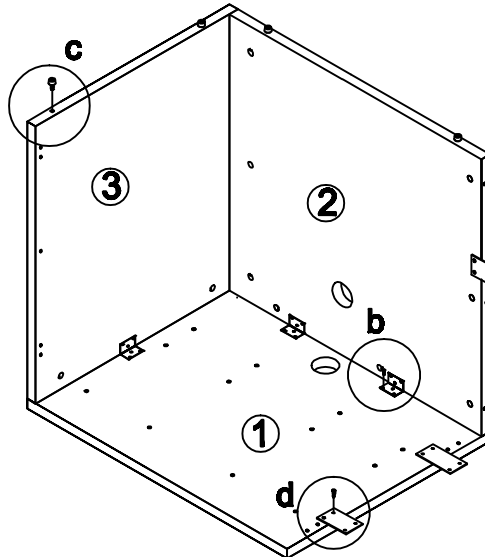

### STEP3

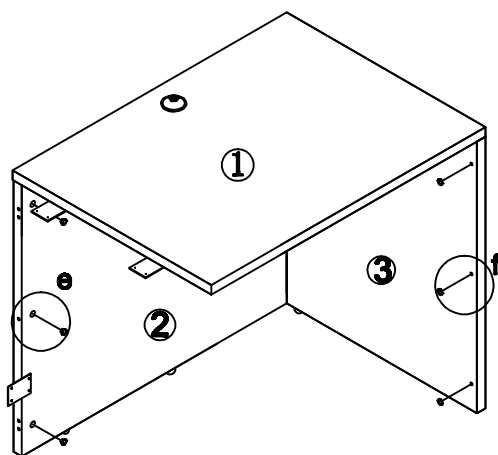

### COMPLETED ASSEMBLY

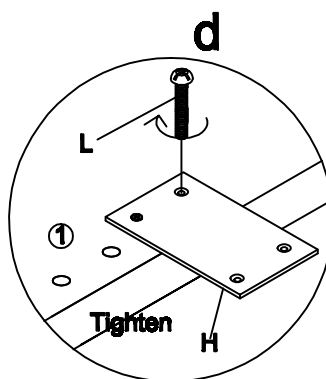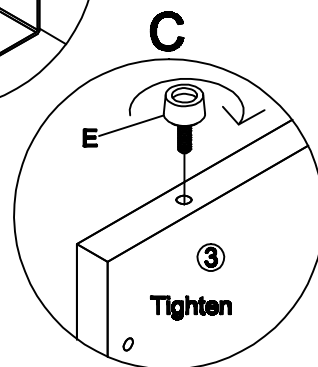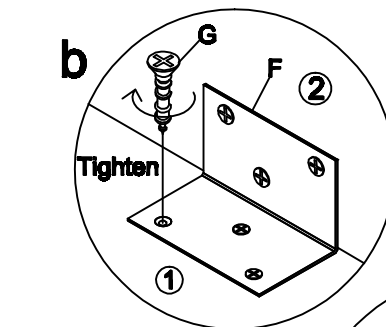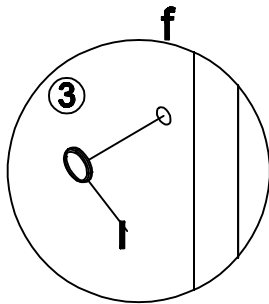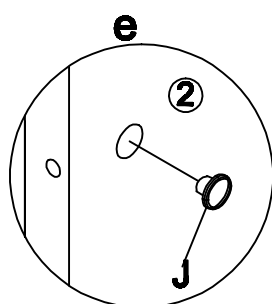

### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children