
ASSEMBLY INSTRUCTION

ITEM NUMBER:BD009
SIZE:Full/Queen

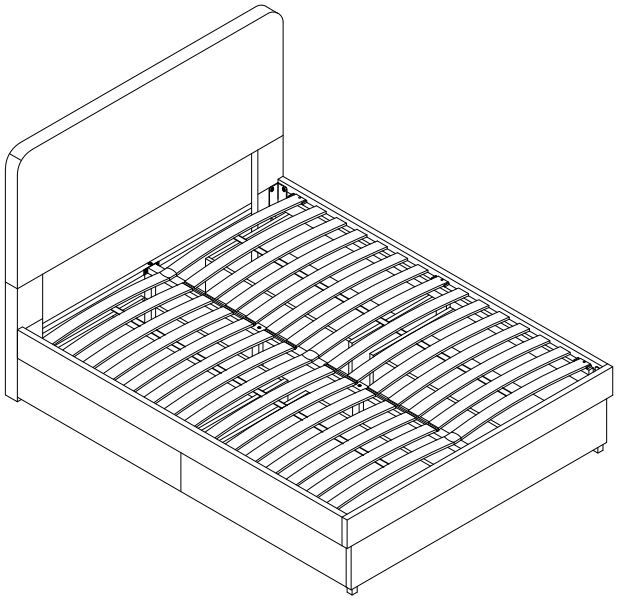




Please TEAR OFF this shrink film from side!
DO NOT USE CUTTER!

IMPORTANT NOTE


1. For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
2. Keep fittings out of children's reach and keep children well away from construction area.
3. When moving your assembled bed. it is best to lift the bed and never to drag it.
4. Do not use this product if parts are missing, damaged or worn.
5. This product should only be used on firm, level ground.
6. Please periodically check all fittings and re-tighten as necessary.
7. Do not use the bed unless all bolts and screws are firmly secured.
8. For further assistance, please provide a screenshot of your order and contact us via email at support@velocavabed.com




Minimum two person assembly










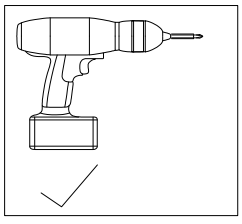


PART LIST











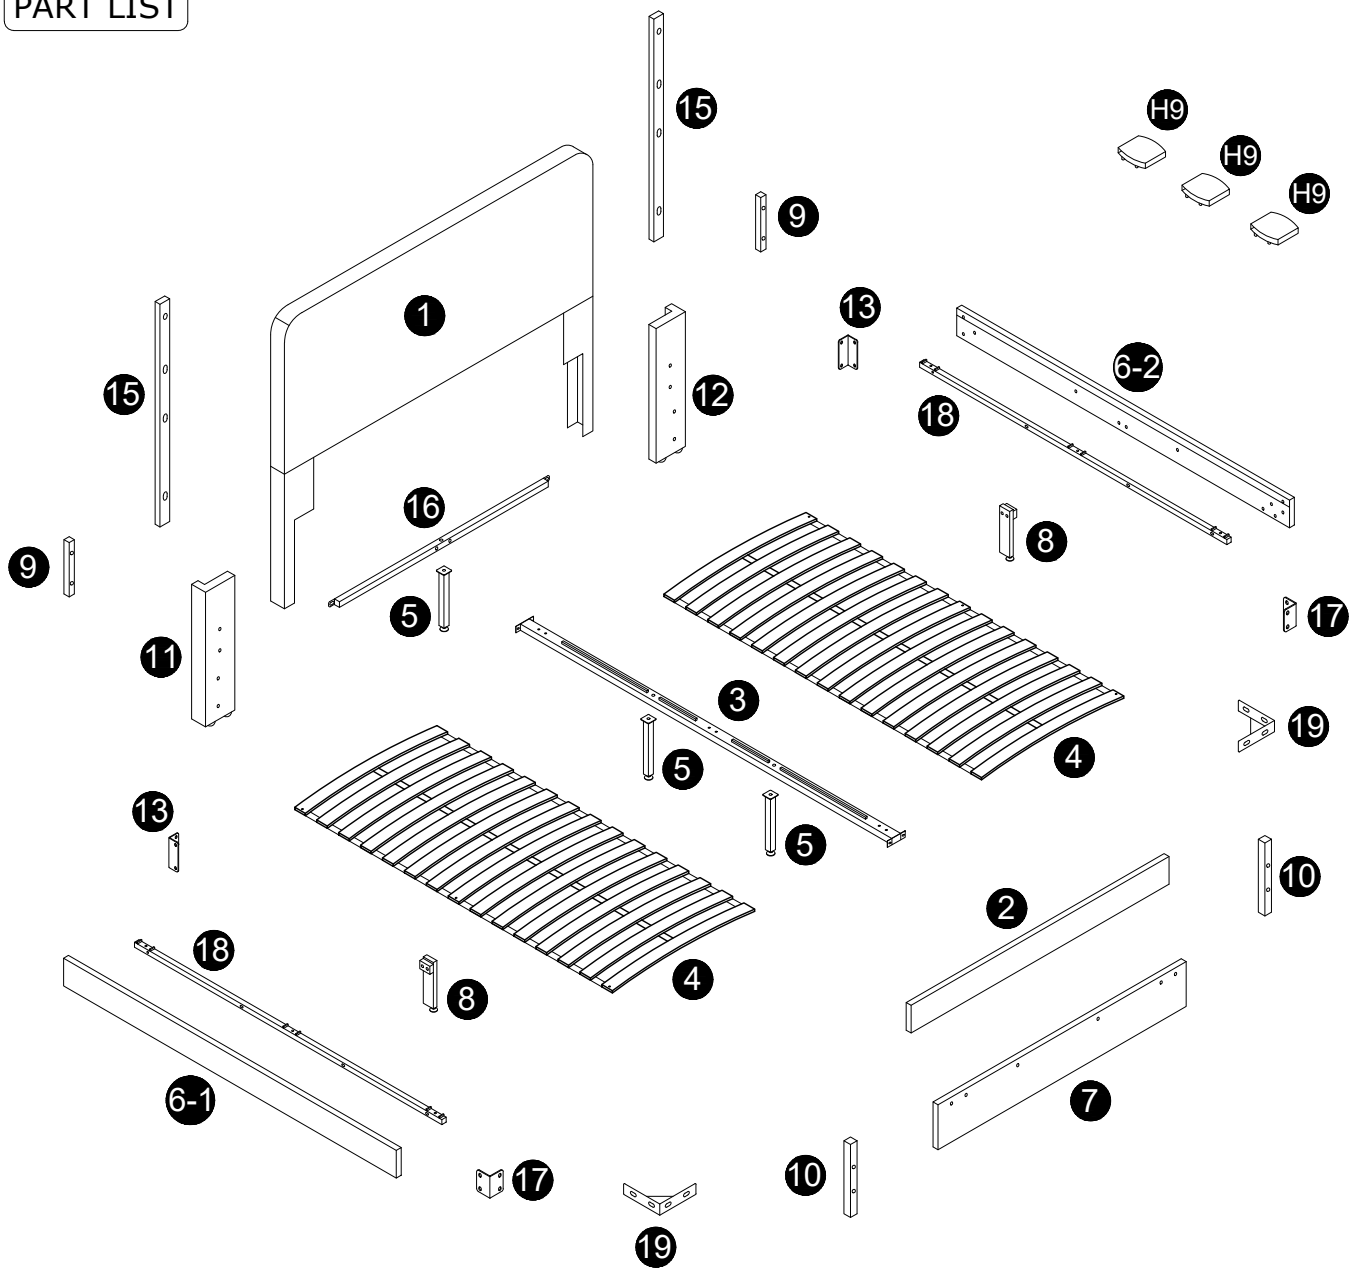

15
H9
H9
H9
9
1
13
6-2
15
12
18
16
8
9
17
11
5
3
19
4
5
13
10
2
18
8
4
6-1
7
17
10
19

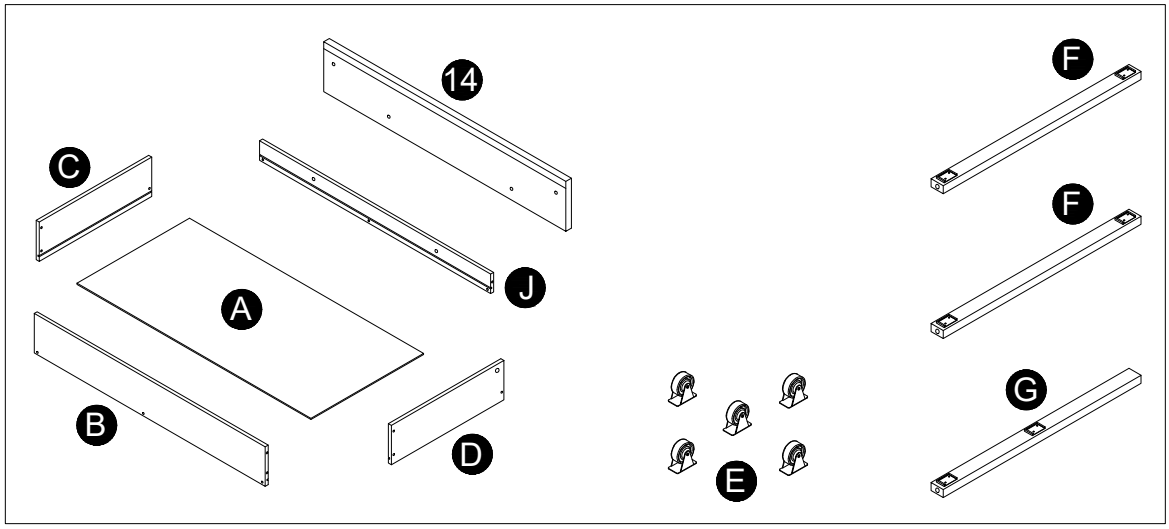
14
F
C
F
A
J
B
D
G
E
x4

Components of Carton A

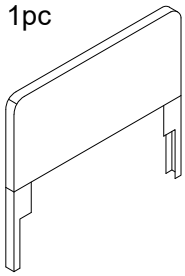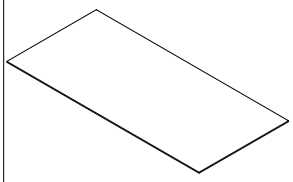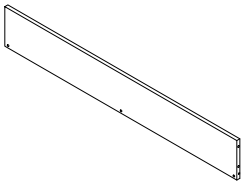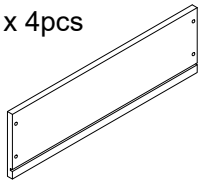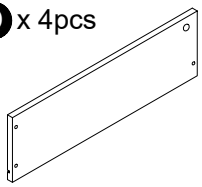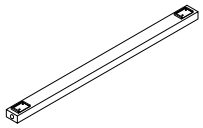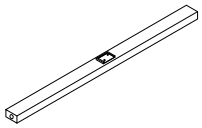
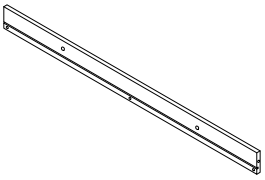
1 x 1pc 	5 x 3pcs (25x295mm) 	8 x 2pcs 	9 x 2pcs 	10 x 2pcs 
13 x 2pcs 	17 x 2pcs 	19 x 2pcs 	A x 4pcs 	B x 4pcs 
C x 4pcs 	D x 4pcs 	E x 20pcs 	F x 8pcs 	G x 4pcs 
J x 4pcs 	H9 x 3pcs 			

Components of Carton B

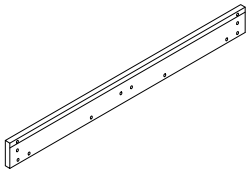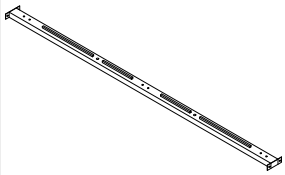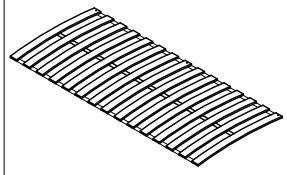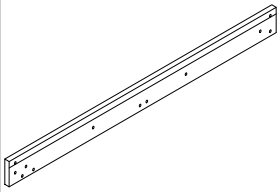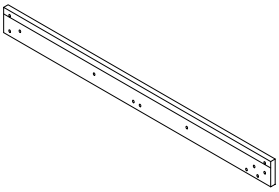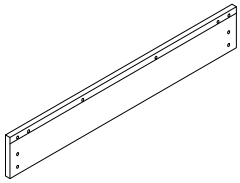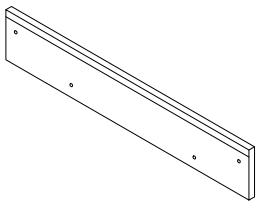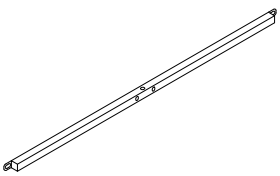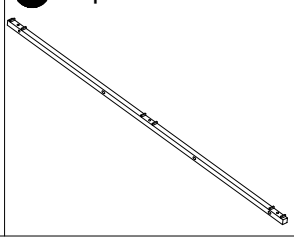
2 x 1pc 	3 x 1pc 	4 x 2pcs 	6-1 x 1pc 	6-2 x 1pc 
7 x 1pc 	11 x 1pc 	12 x 1pc 	14 x 4pcs 	15 x 2pcs 
16 x 1pc 	18 x 2pcs 			

Please ensure to thoroughly inspect the small inner cardboard box containing the hardware, which are tied with a red string, before disposing of the box.


HARDWARE LIST

 H1 M5 x 1pc	 H2 M8x25mm x 26pcs	 H3 M8x55mm x 10pcs	 H4 M8x40mm x 27pcs
 H5 M8 x 8pcs	 H6 M8x22mm x 30pcs	 H7 M8x30mm x 8pcs	 H8 x 6pcs
 H10 M6x45mm x 48pcs	 H11 M4 x 1pc	 H12 x 8pcs	 H13 x 8pcs

1

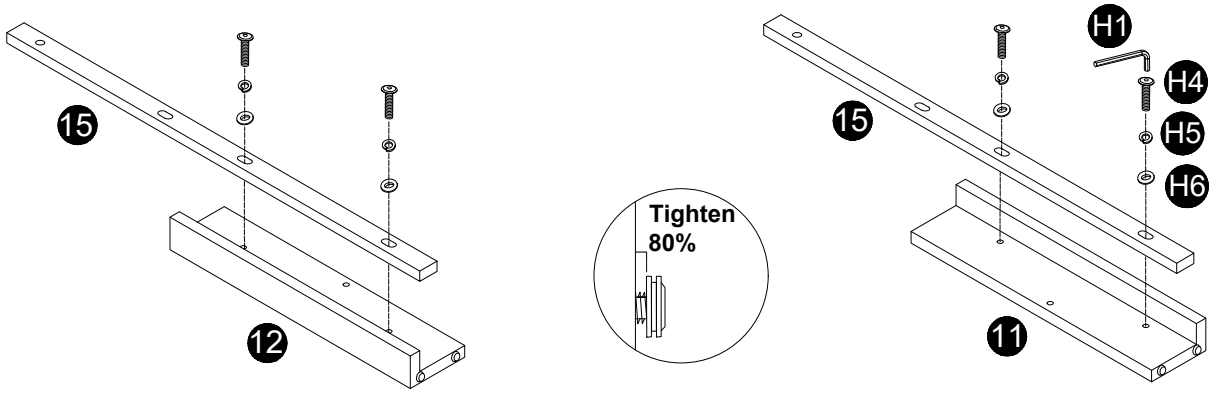


2 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

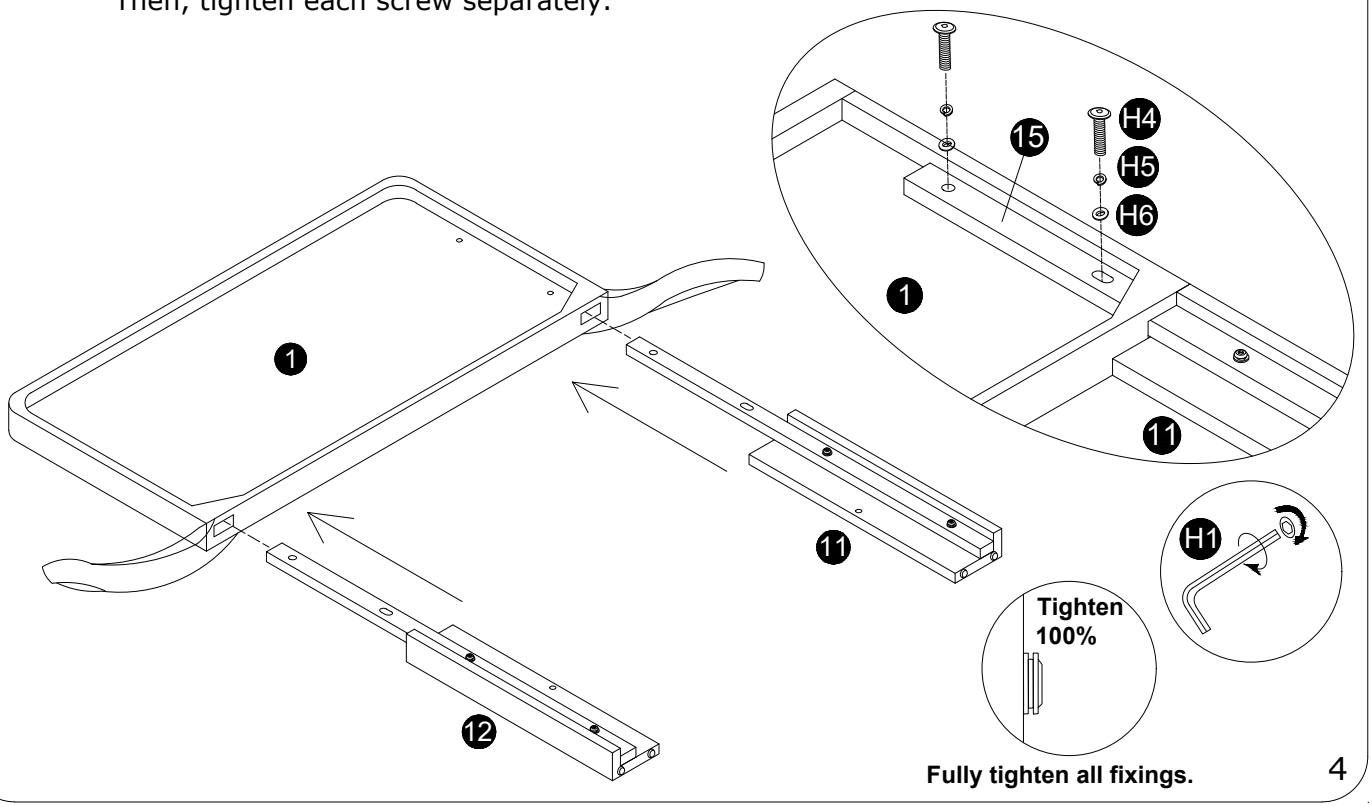


Fully tighten all fixings.


3

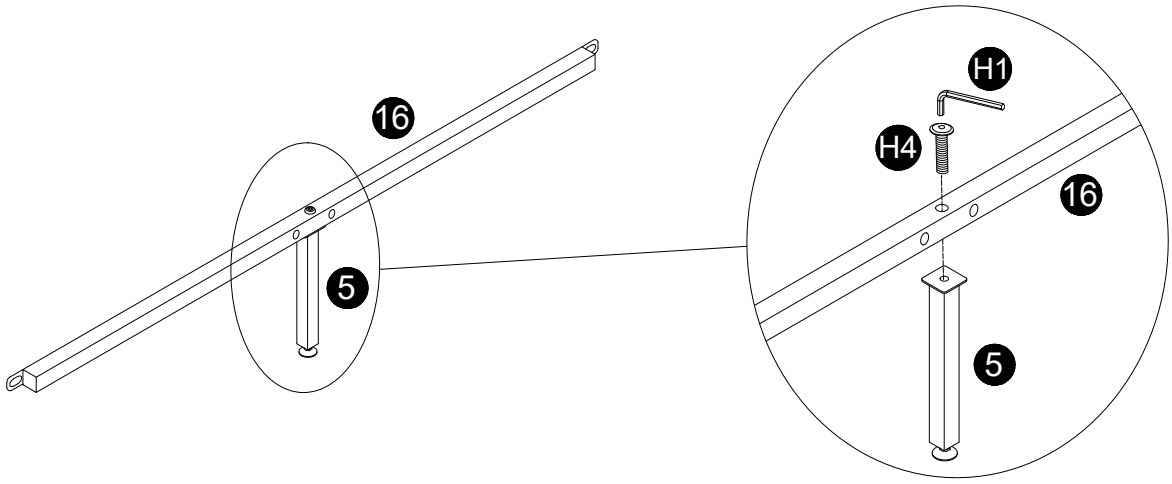


4

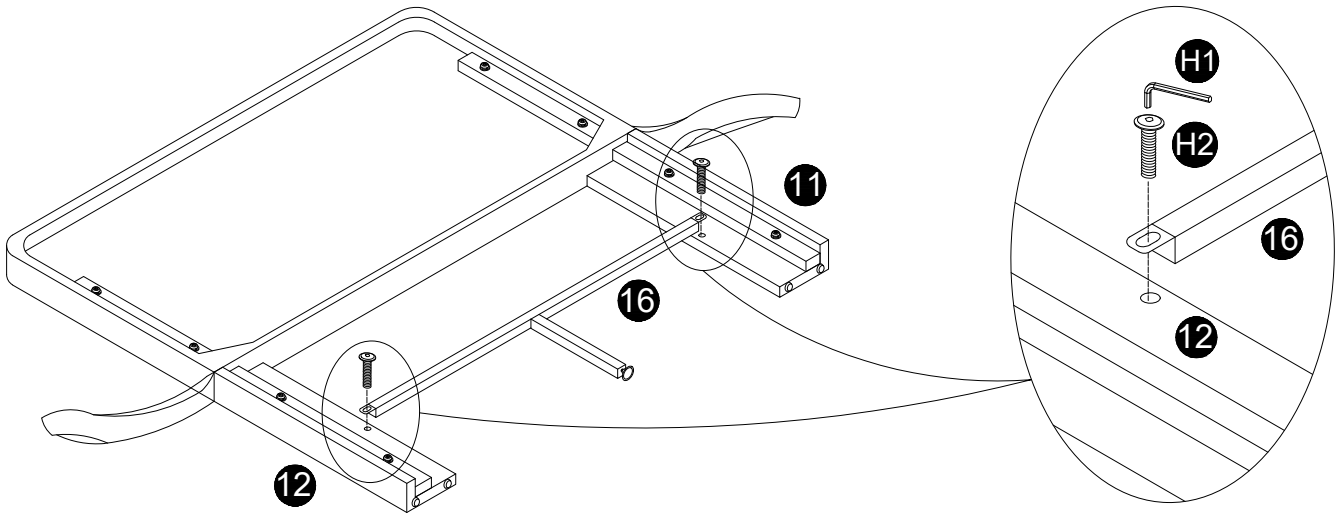


5

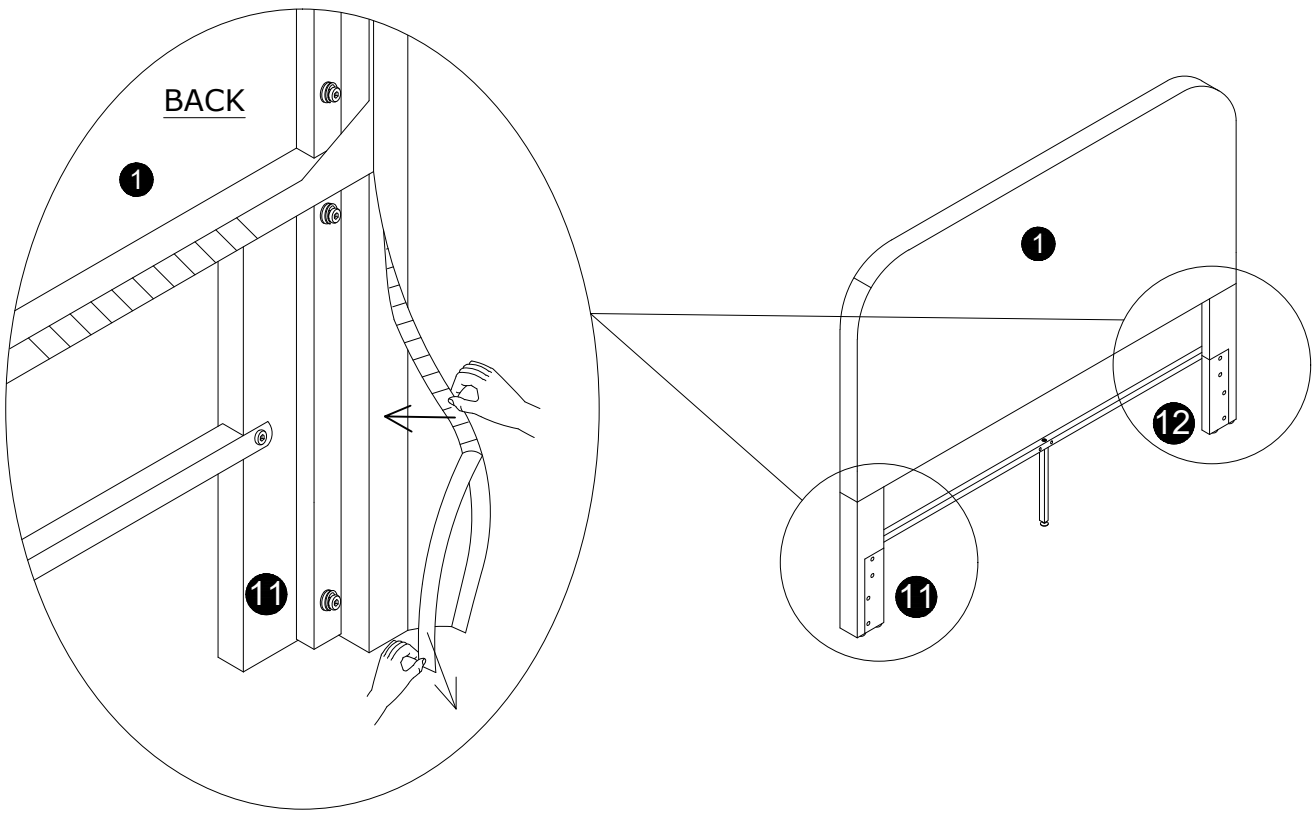


6

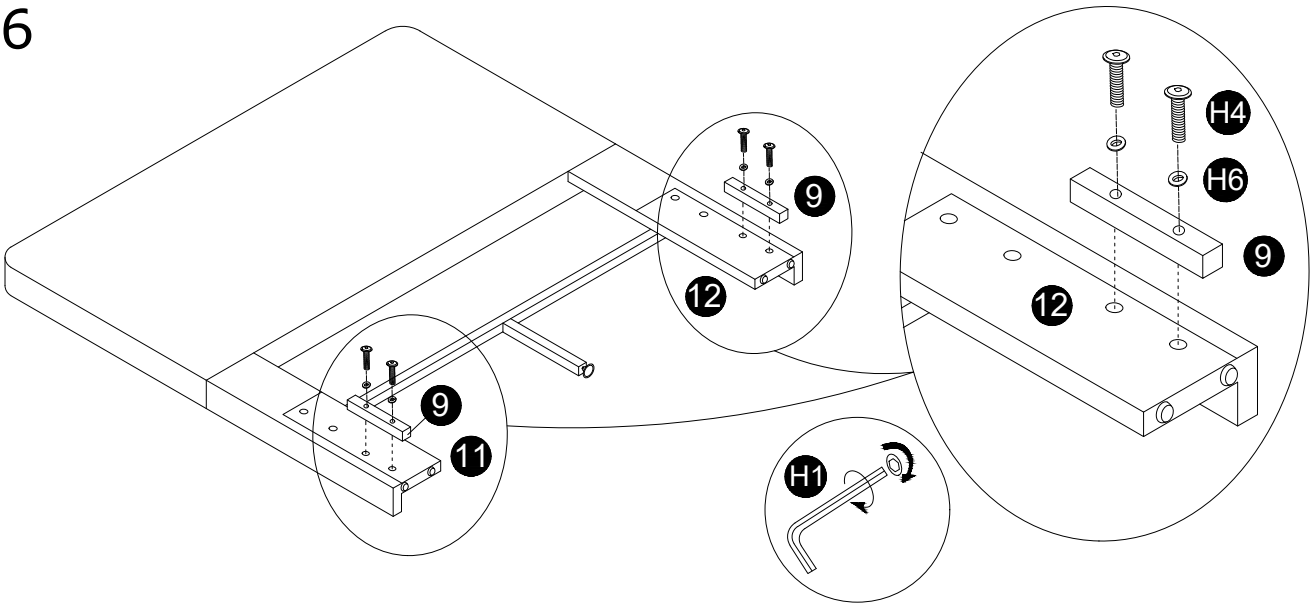


7

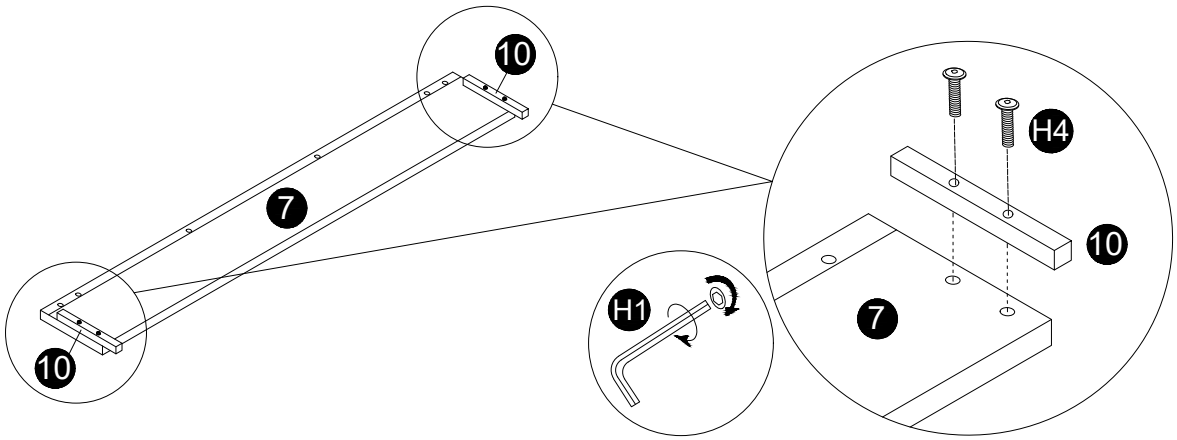


8

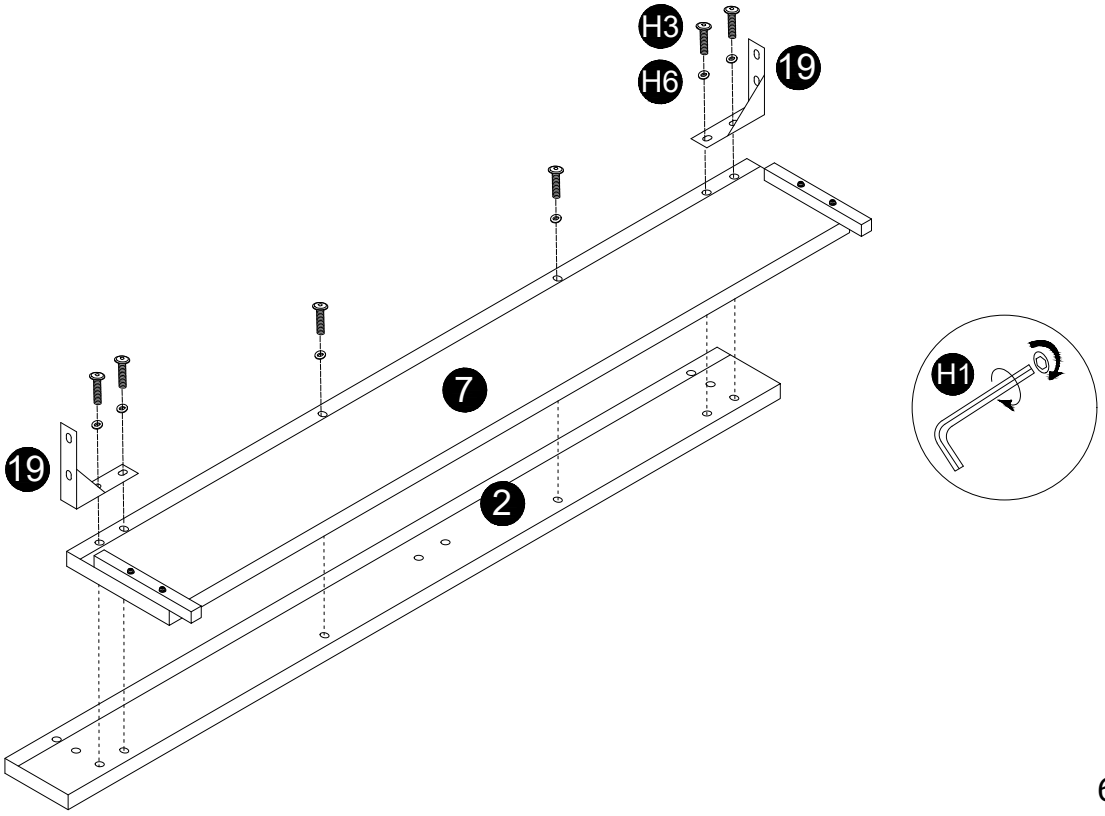


9

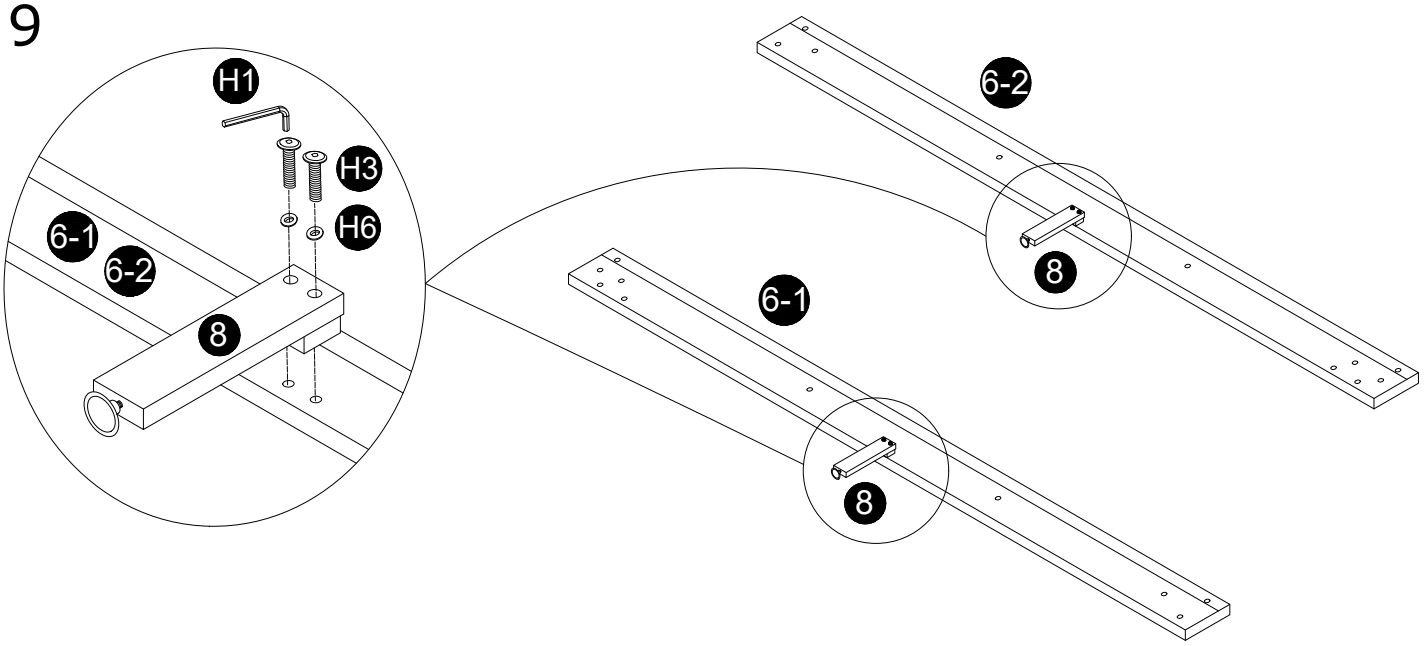


10

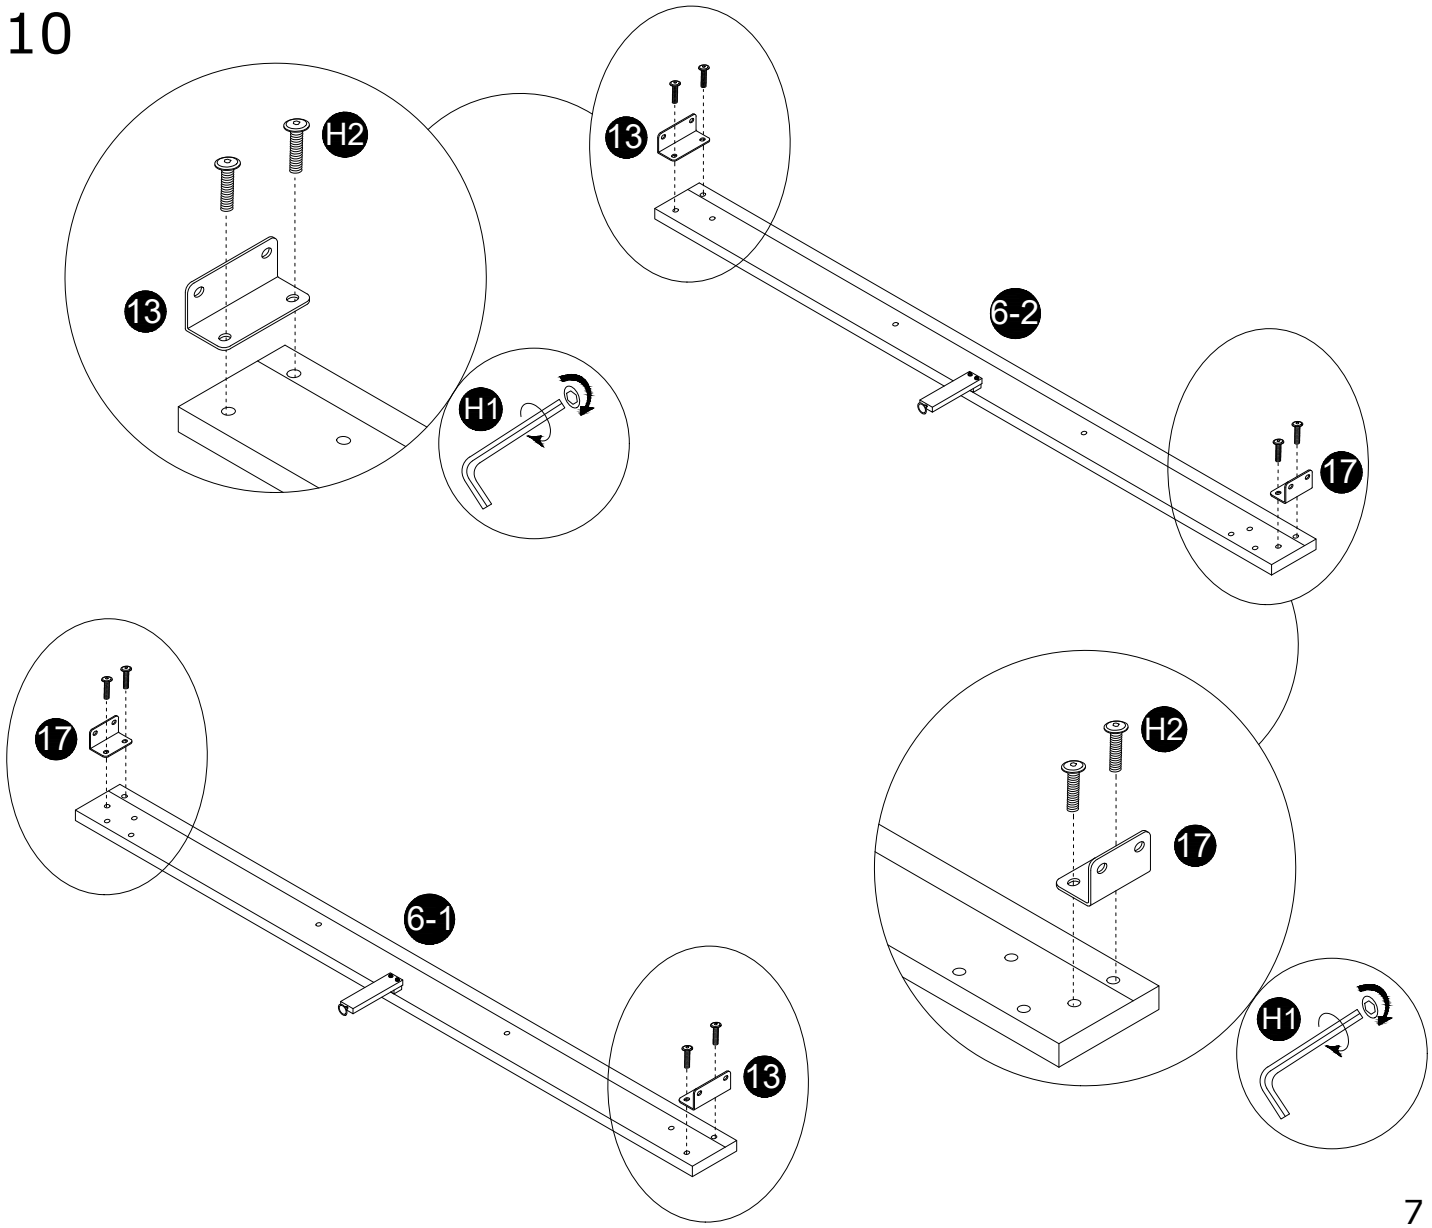


11 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

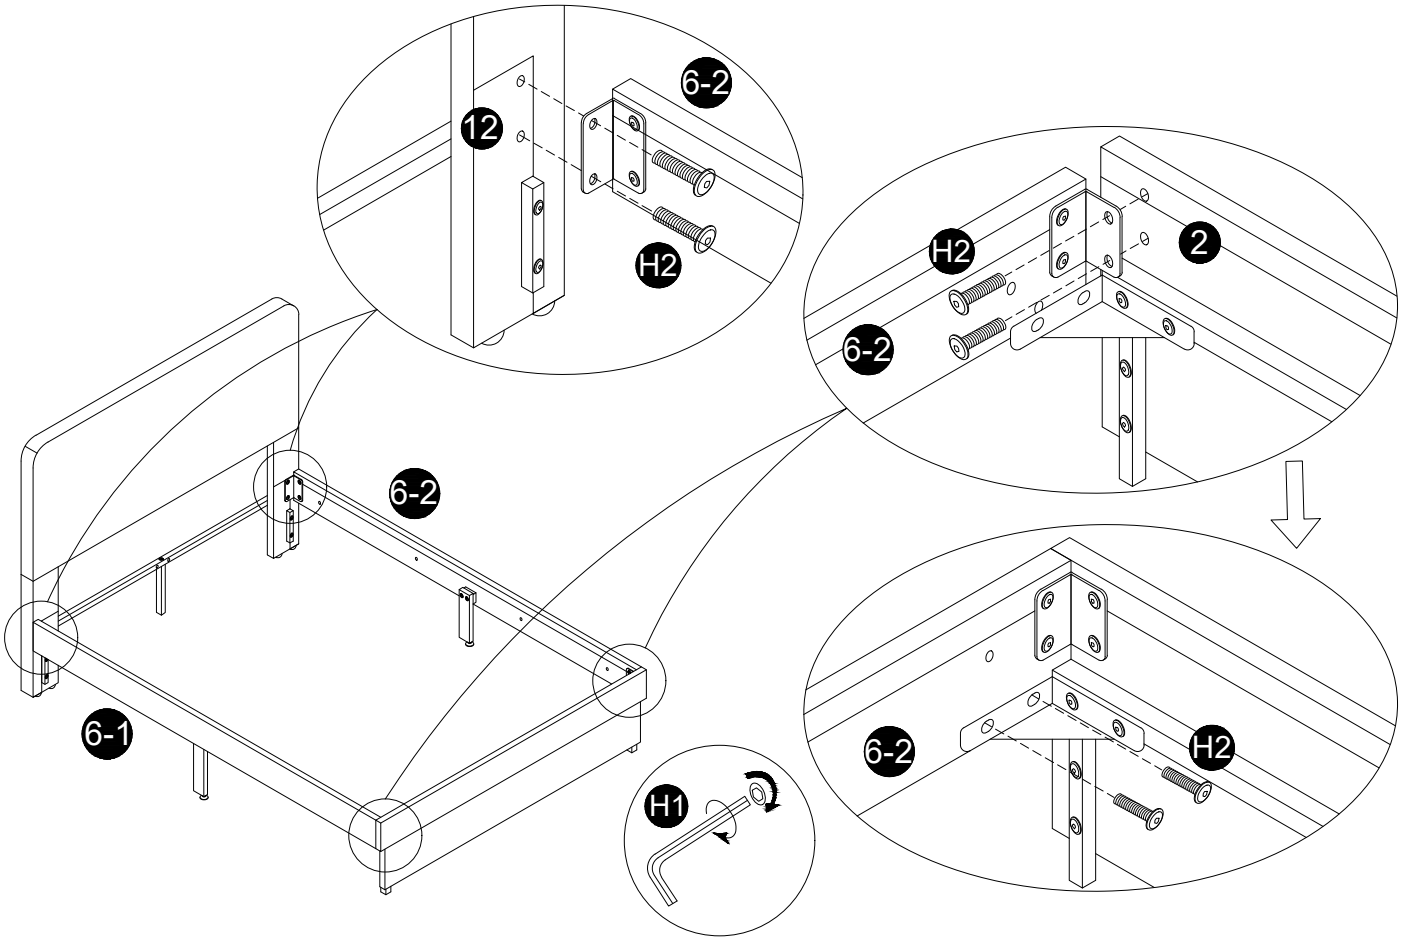


12 As shown in the diagram, align the screws with the corresponding holes and pre-fix them. Then, tighten each screw separately.

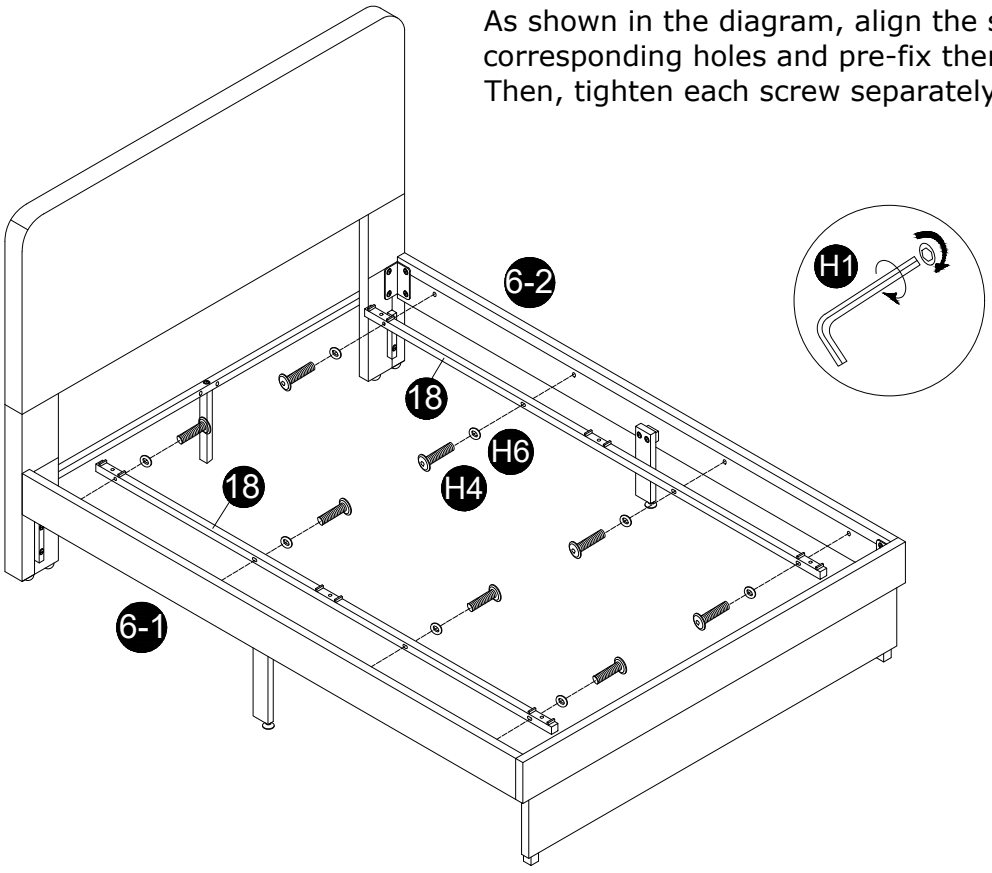


13

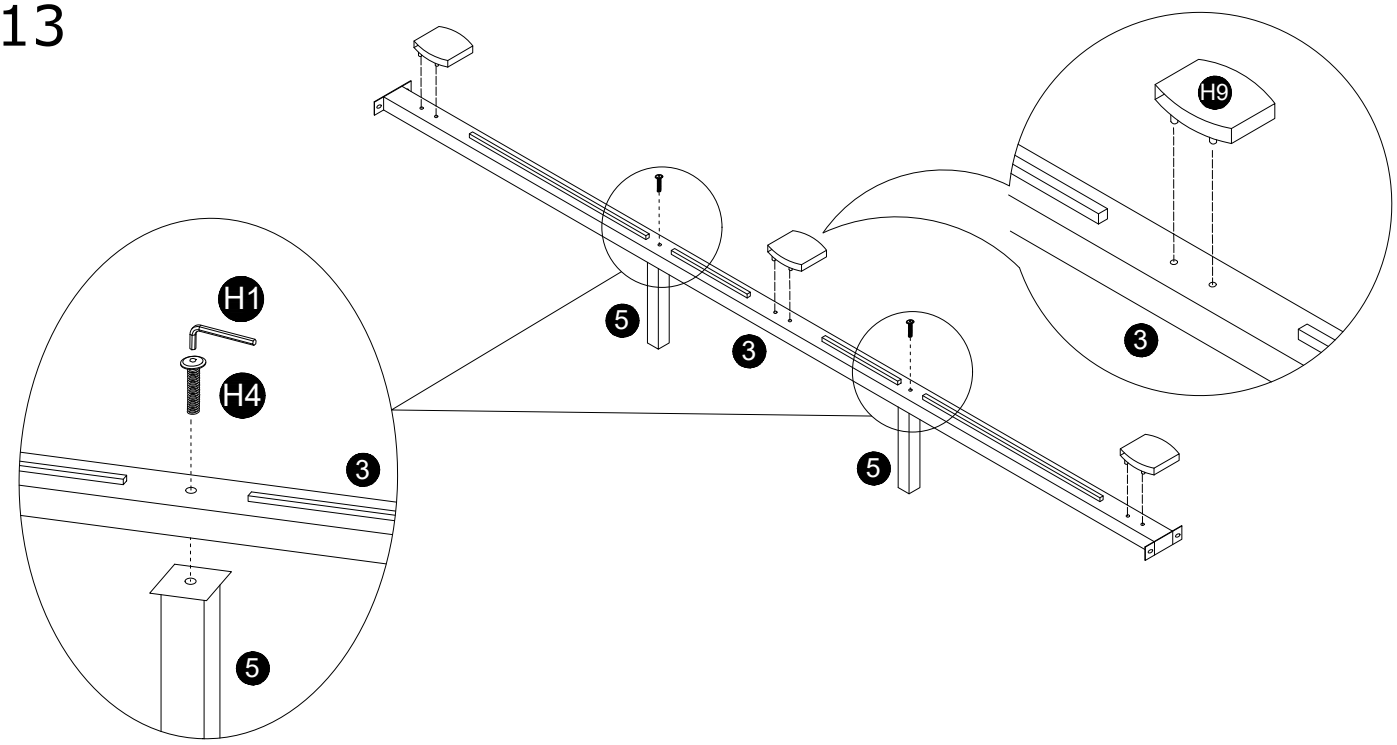
H9
H1
H4
5
3
3
5
3
5

14

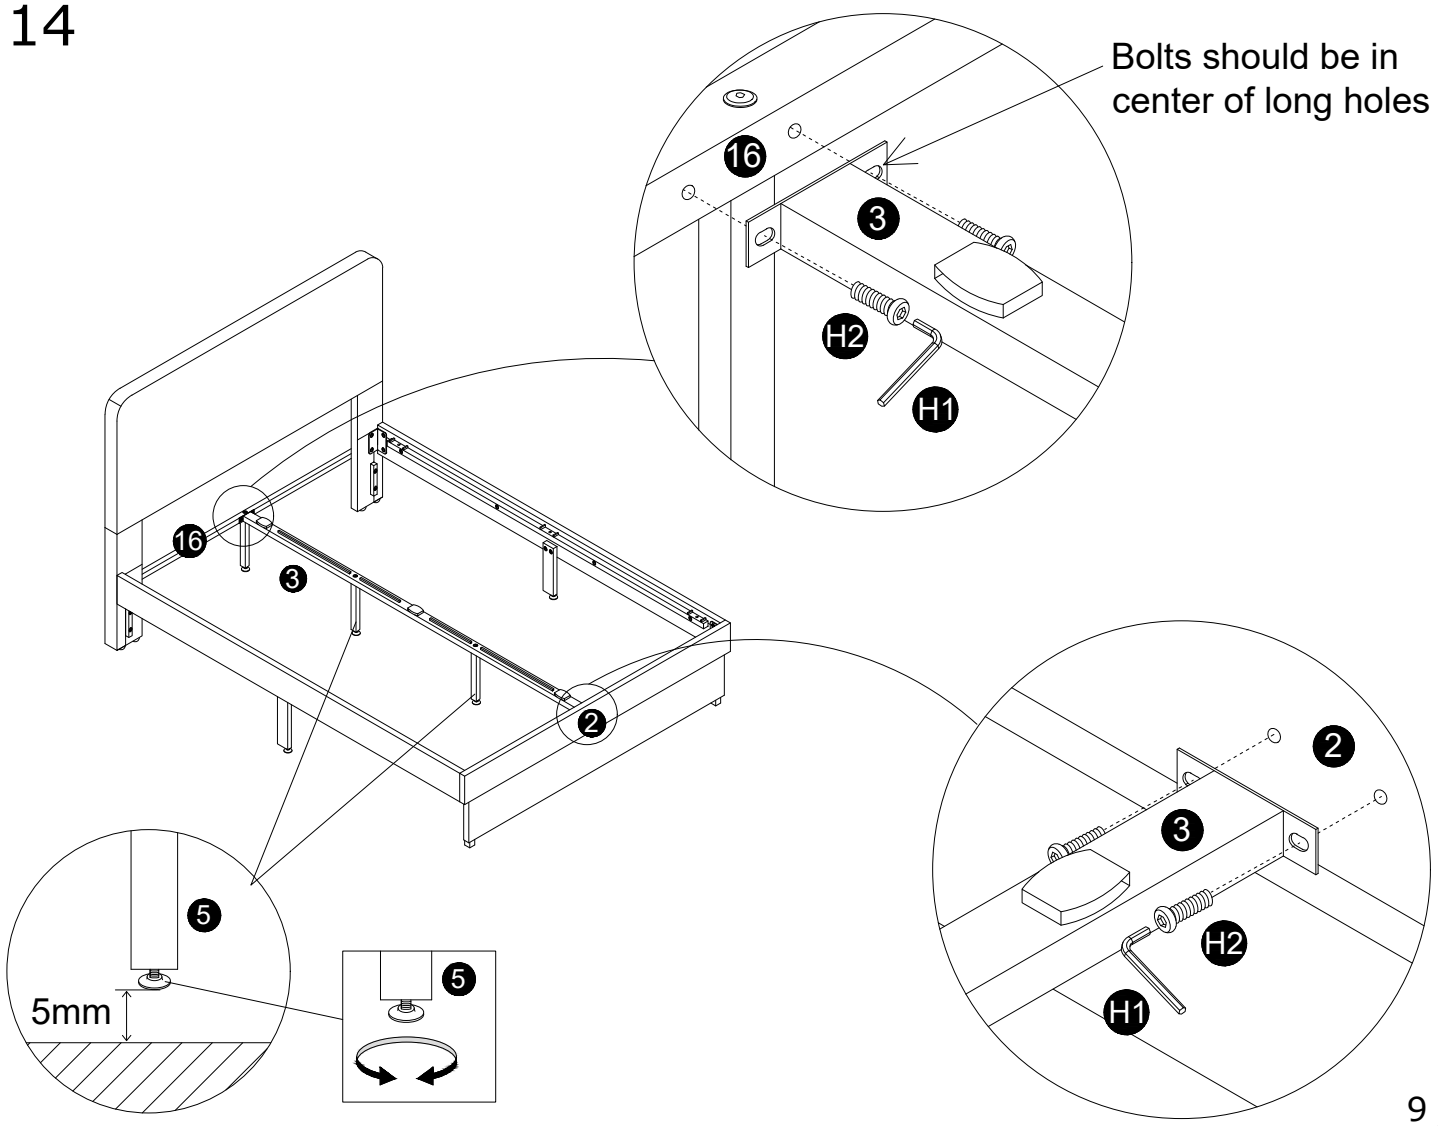

Bolts should be in
center of long holes
16
3
H2
H1
16
3
2
5
5mm
5
2
3
H2
H1

15

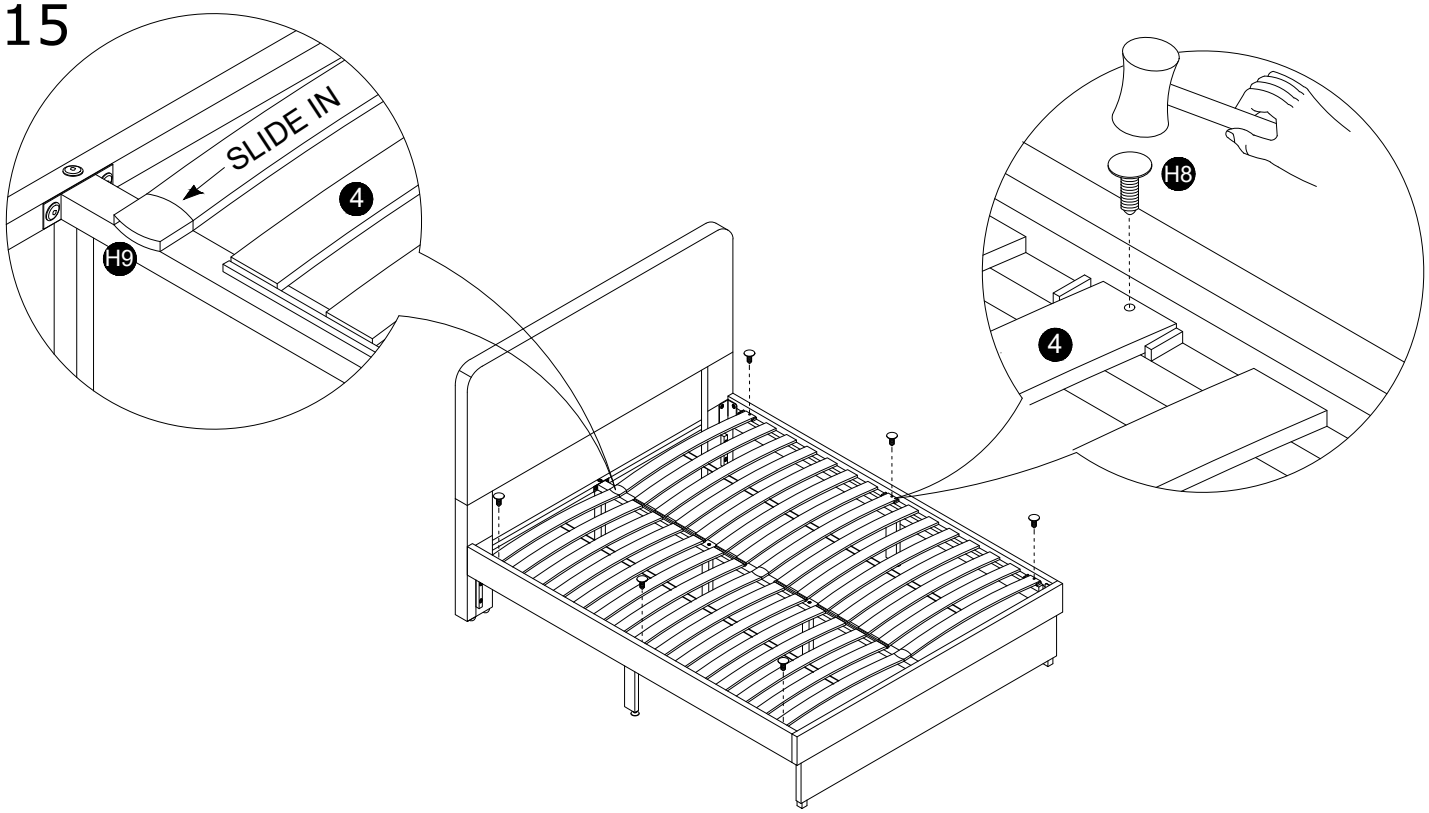

16


x4

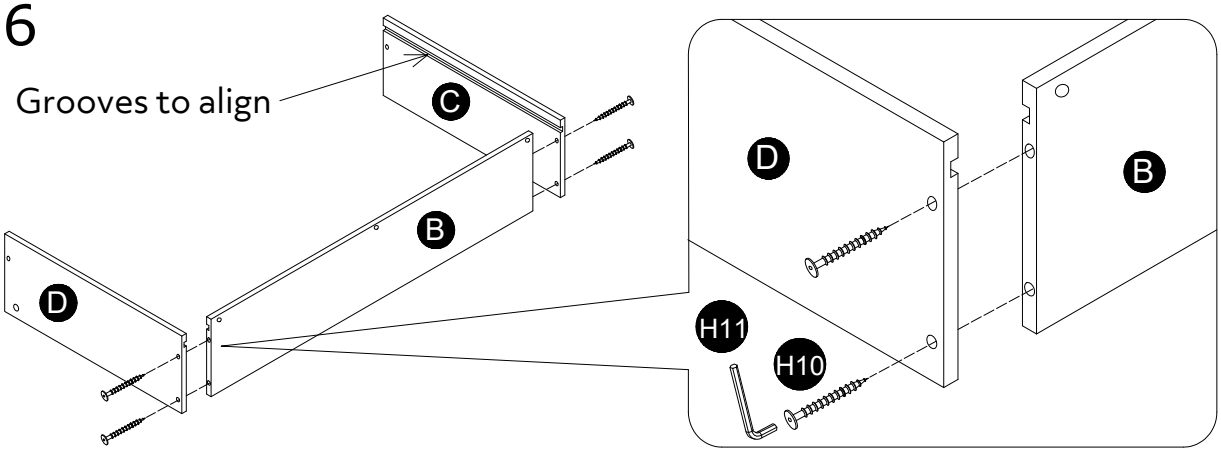

17


x4

a:

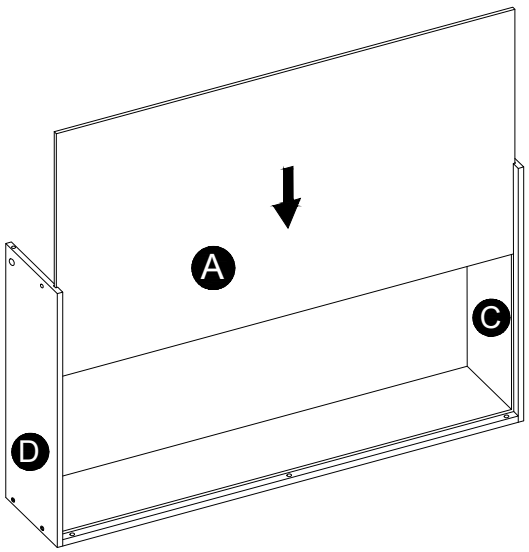


18


x4

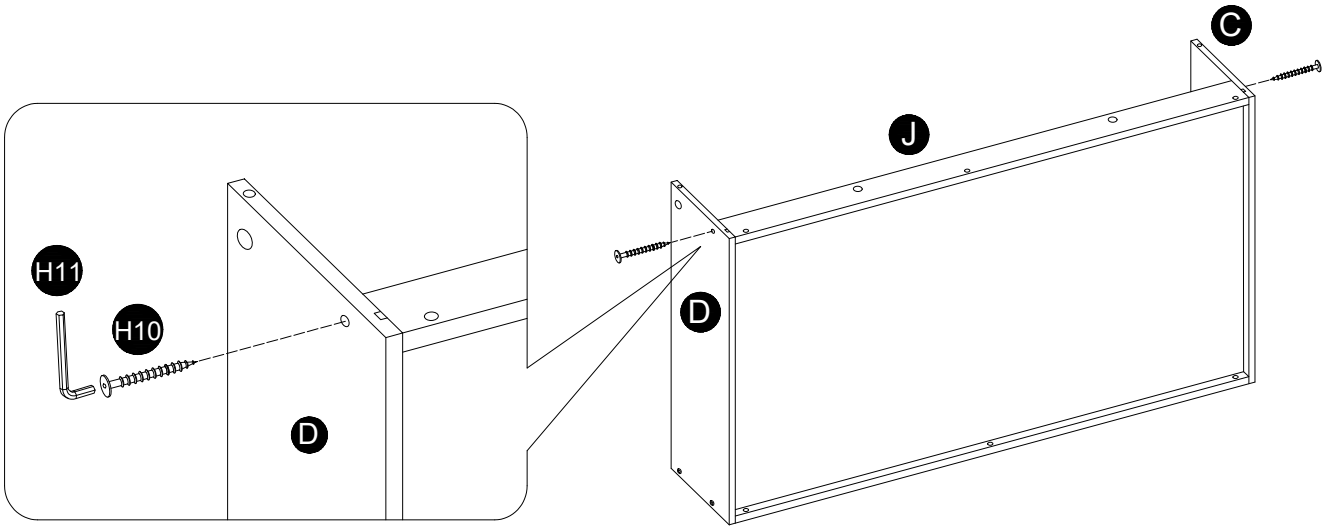



19

x4

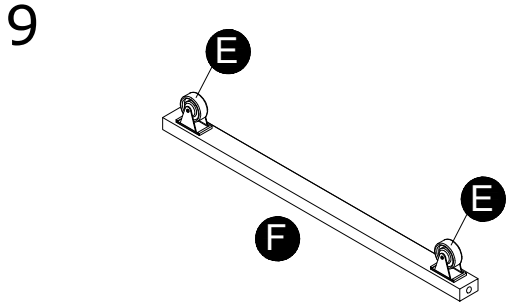

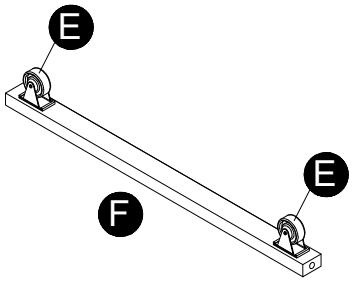


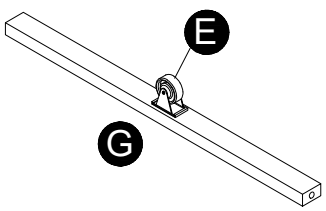

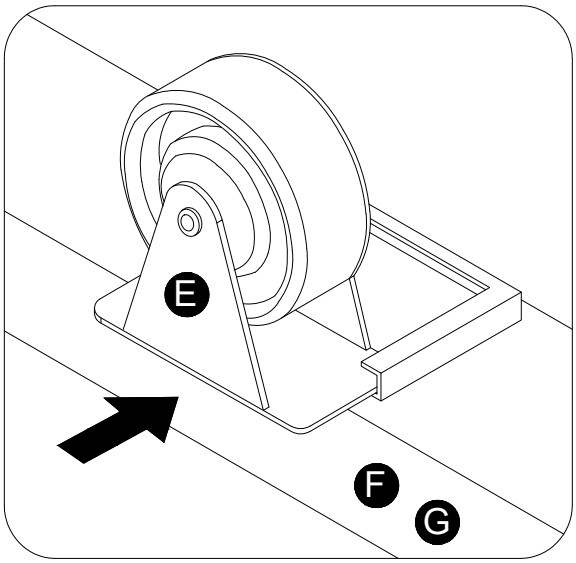


20

x4

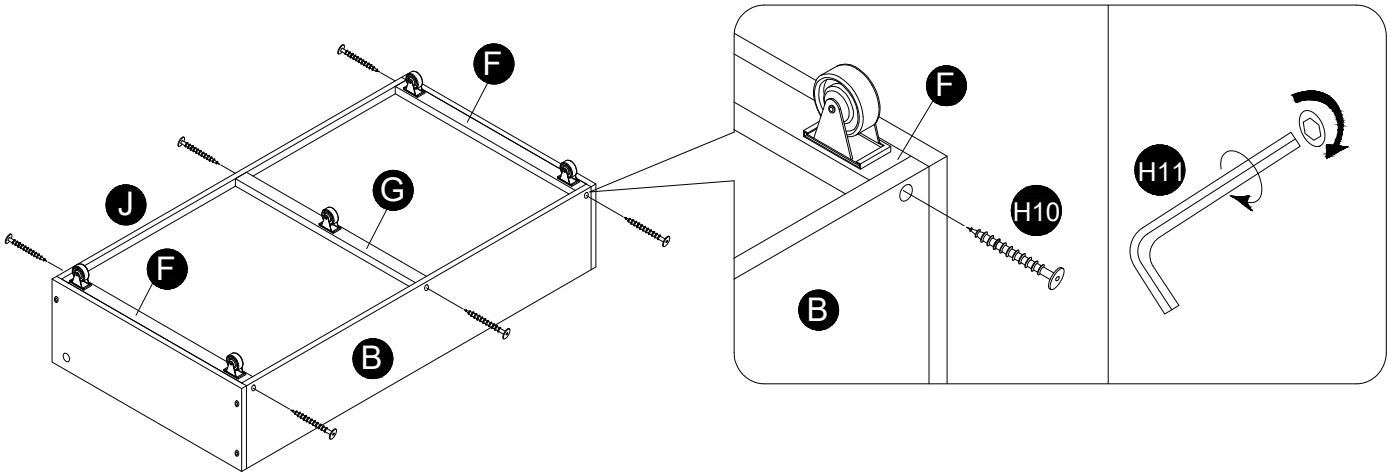


21

x4

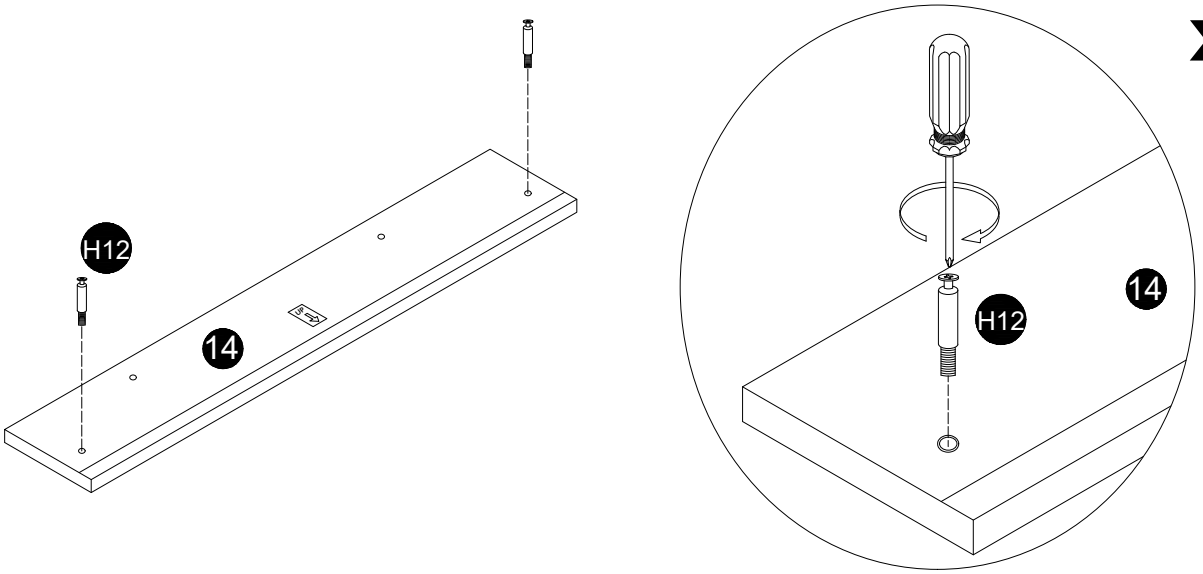



22

x4

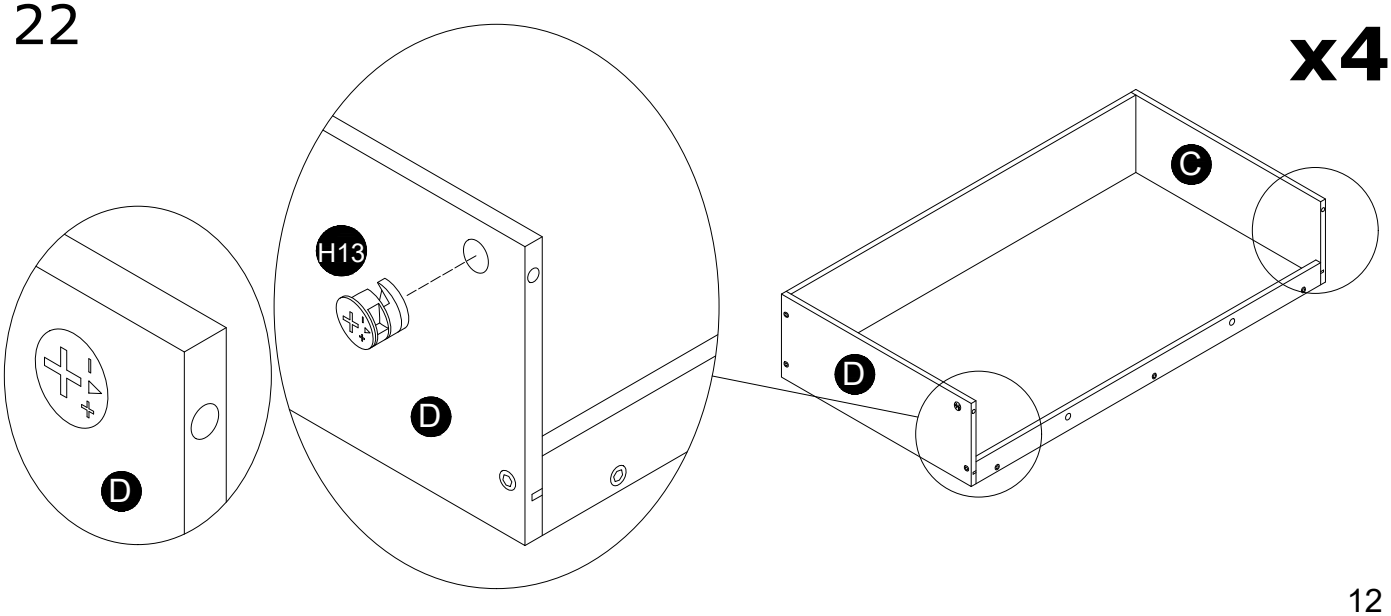


23 **x4**

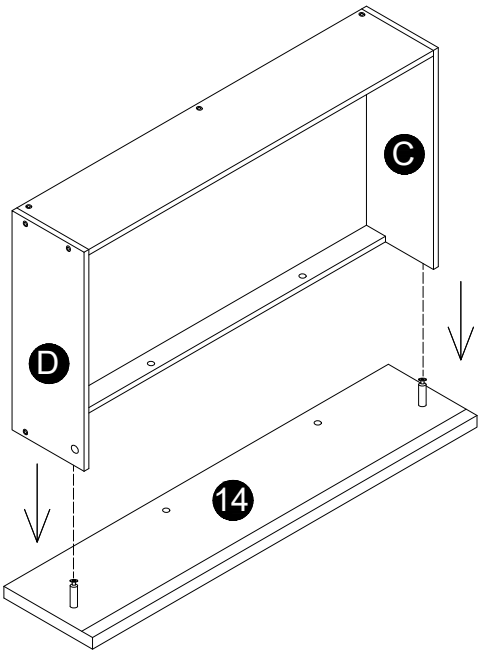


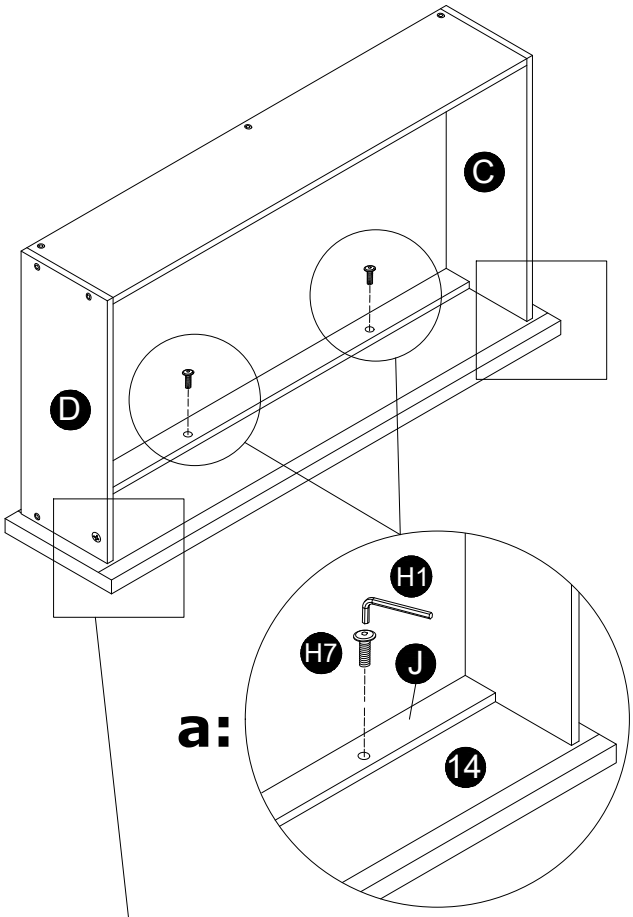


PUSH THE TWO PANELS TOGETHER ALLOWING THE DOWEL TO ALIGN WITH THE HOLE

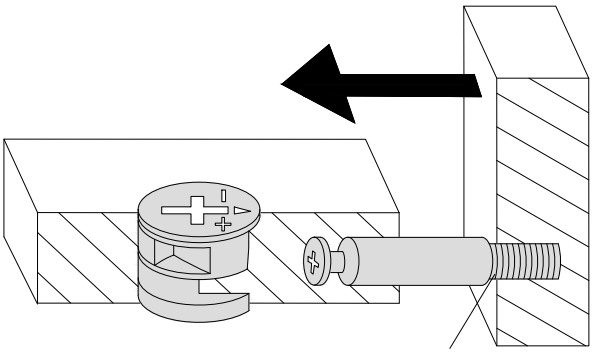


If H12 cannot lock into H13,
you can adjust H12 outward by 2mm.

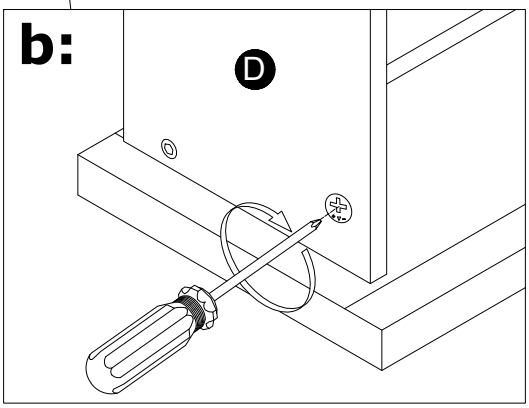

TURN THE CAM IN A CLOCKWISE DIRECTION

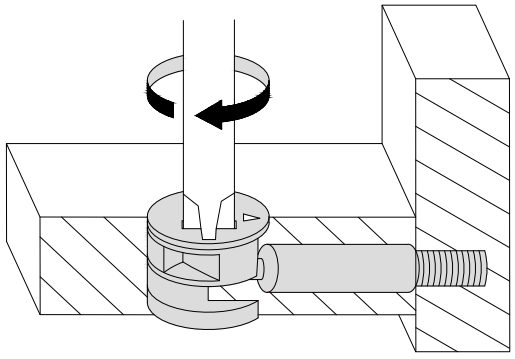

DON'T STOP UNTILTHE 2 O'CLOCK LOCK
TURN THE CAM IN A CLOCKWISE DIRECTION UNTIL THE ARROW POINTS IN THE POSITIONS SHOWN IN THE DIAGRAMS BELOW

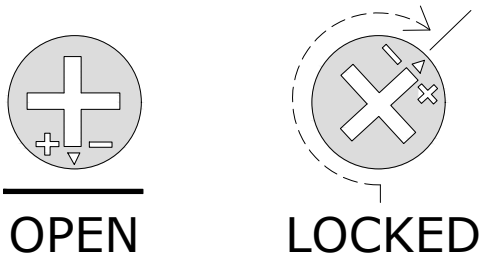

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.