
ASSEMBLY INSTRUCTIONS

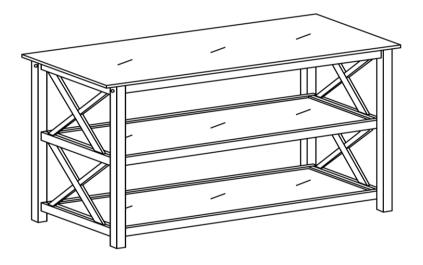

Fine Furniture for every stage of life



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES


PARTS IDENTIFICATION

Α	LEG FRAME	2PCS
В	SHELF	2SETS
С	APRON	2PCS
D	TOP PANEL	1PC


HARDWARE IDENTIFICATION

1	ALLEN WRENCH (M4 - BLK)		1PC
2	LONG BOLT (M6 x 60mm - RBW)		4PCS
3	WOOD PLUG (13MM)		4PCS
4	SHORT BOLT (M6 x 35mm - BLK)		8PCS
5	LOCK WASHER (M6 - RBW)		8PCS
6	FLAT WASHER (M6 - RBW)		8PCS
7	BARREL NUT (M6 - SR)		4PCS
8	FLAT HEAD SCREW (M4 x 25mm - RBW)	⊕ mannam o-	6PCS


ASSEMBLY INSTRUCTIONS STEP 1

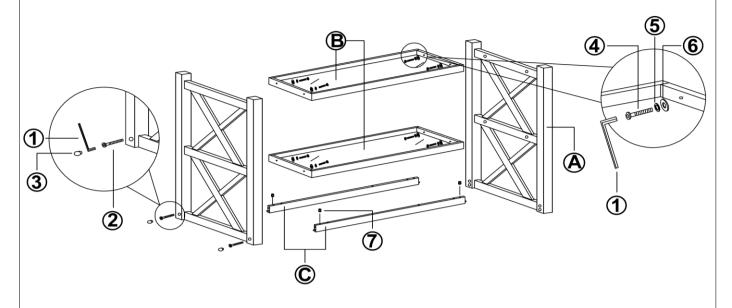

STEP 2

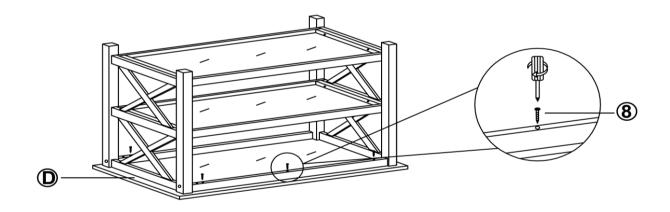


STEP 3 COMPLETE

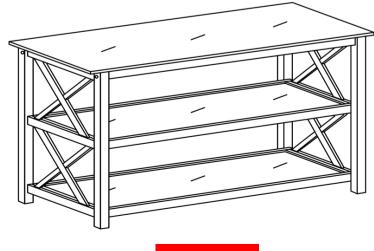



PAGE 3 OF 3

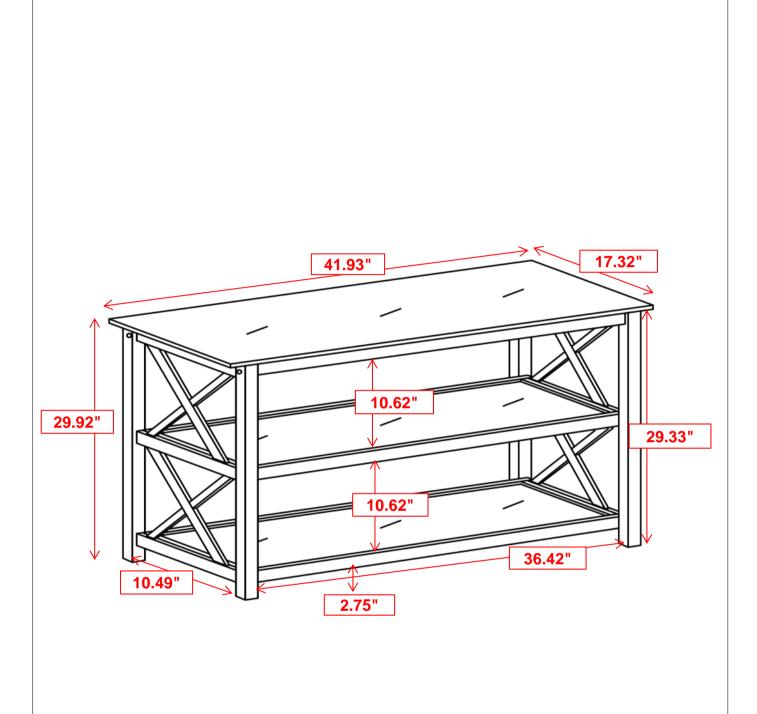

Note: Dimension tolerance ±5%