




STEP 2

Attach the glider piece to seat using 2.6" carriage bolt, Install washer then nut, Do not overtighten it.
Attach brace between the seat using 1.6" bolt.

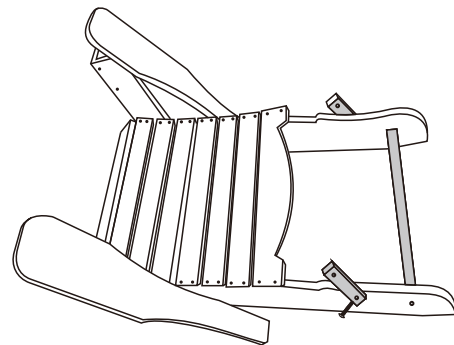


STEP 3

Hold the backrest in place and install 2.6" carriage bolt through pivot "A". Raise arm rest into position and install bolt into predrilled holes.
Be sure to line up the pre drilled holes in the backrest and armrest assembly. "B" install 3.3" carriage bolt. Repeat for other side.
Then install washer and nuts.
Do not over tighten.

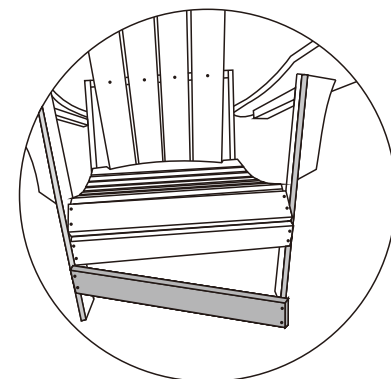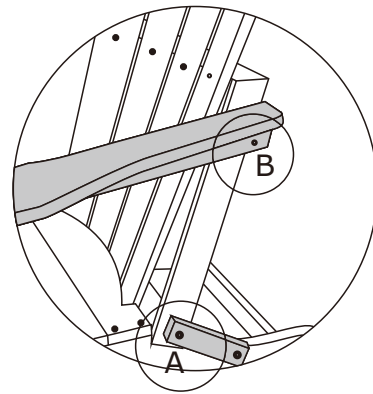

STEP 4

Install the front brace, Then install 1.6" screw using the Phillips screwdriver to fasten.

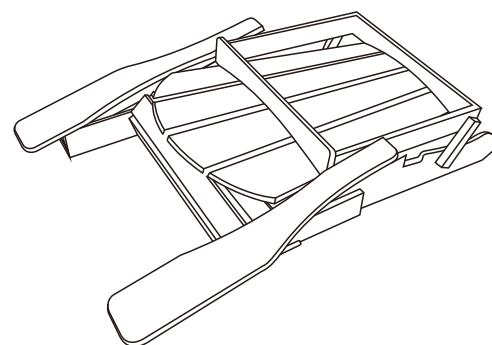

Final product folds up for storage.



Thanks for choosing our LAYRIAR Folding Poly Adirondack Chair !