



Velvet Upholstered Bed with Gold Trim

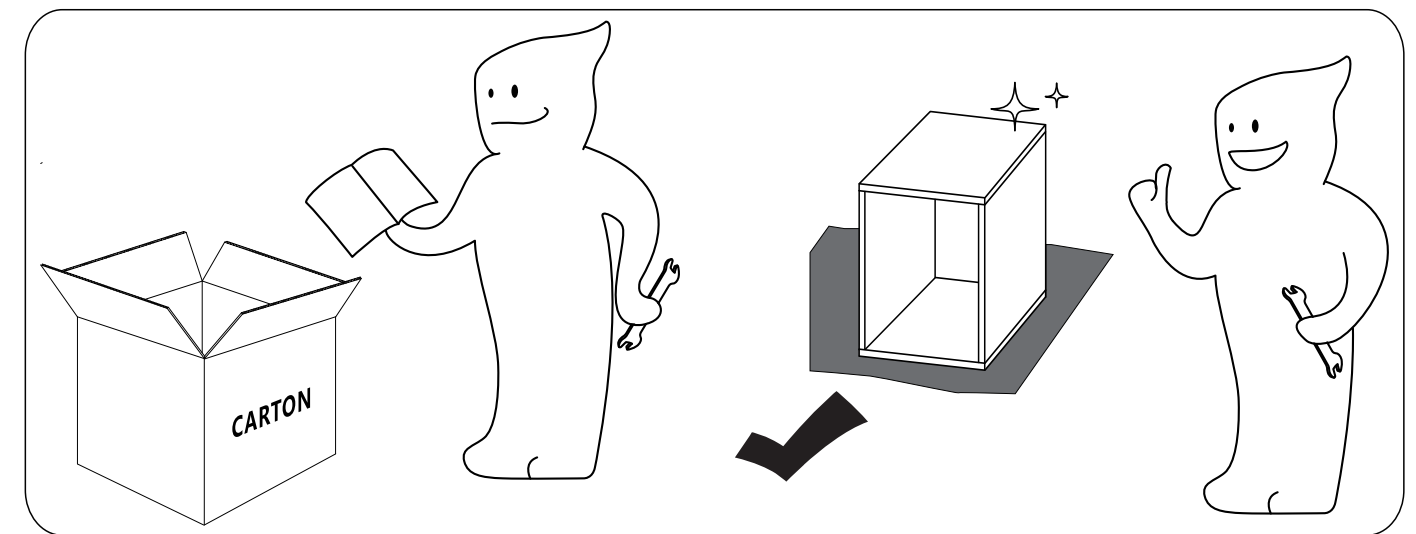

Please follow the instruction manuals and use a pad to protect the product during your assembly.

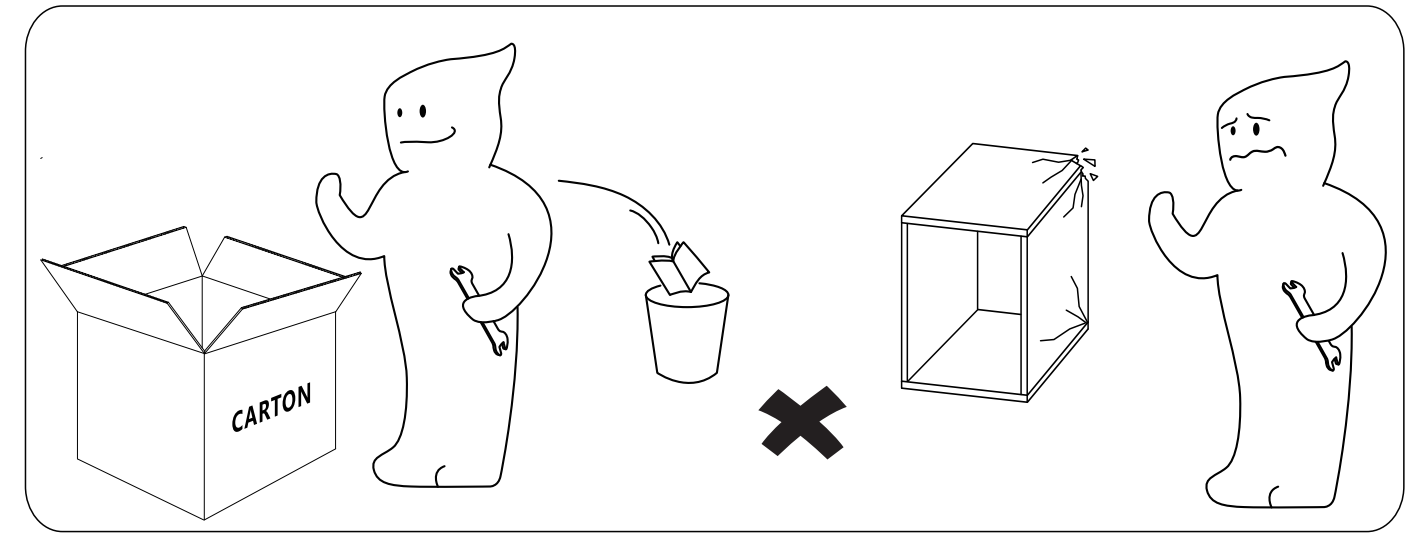

Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.


Friendly Customer Service

Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.
























For easier and better assembly, **2** or more adults are required.

ASSEMBLY INSTRUCTIONS




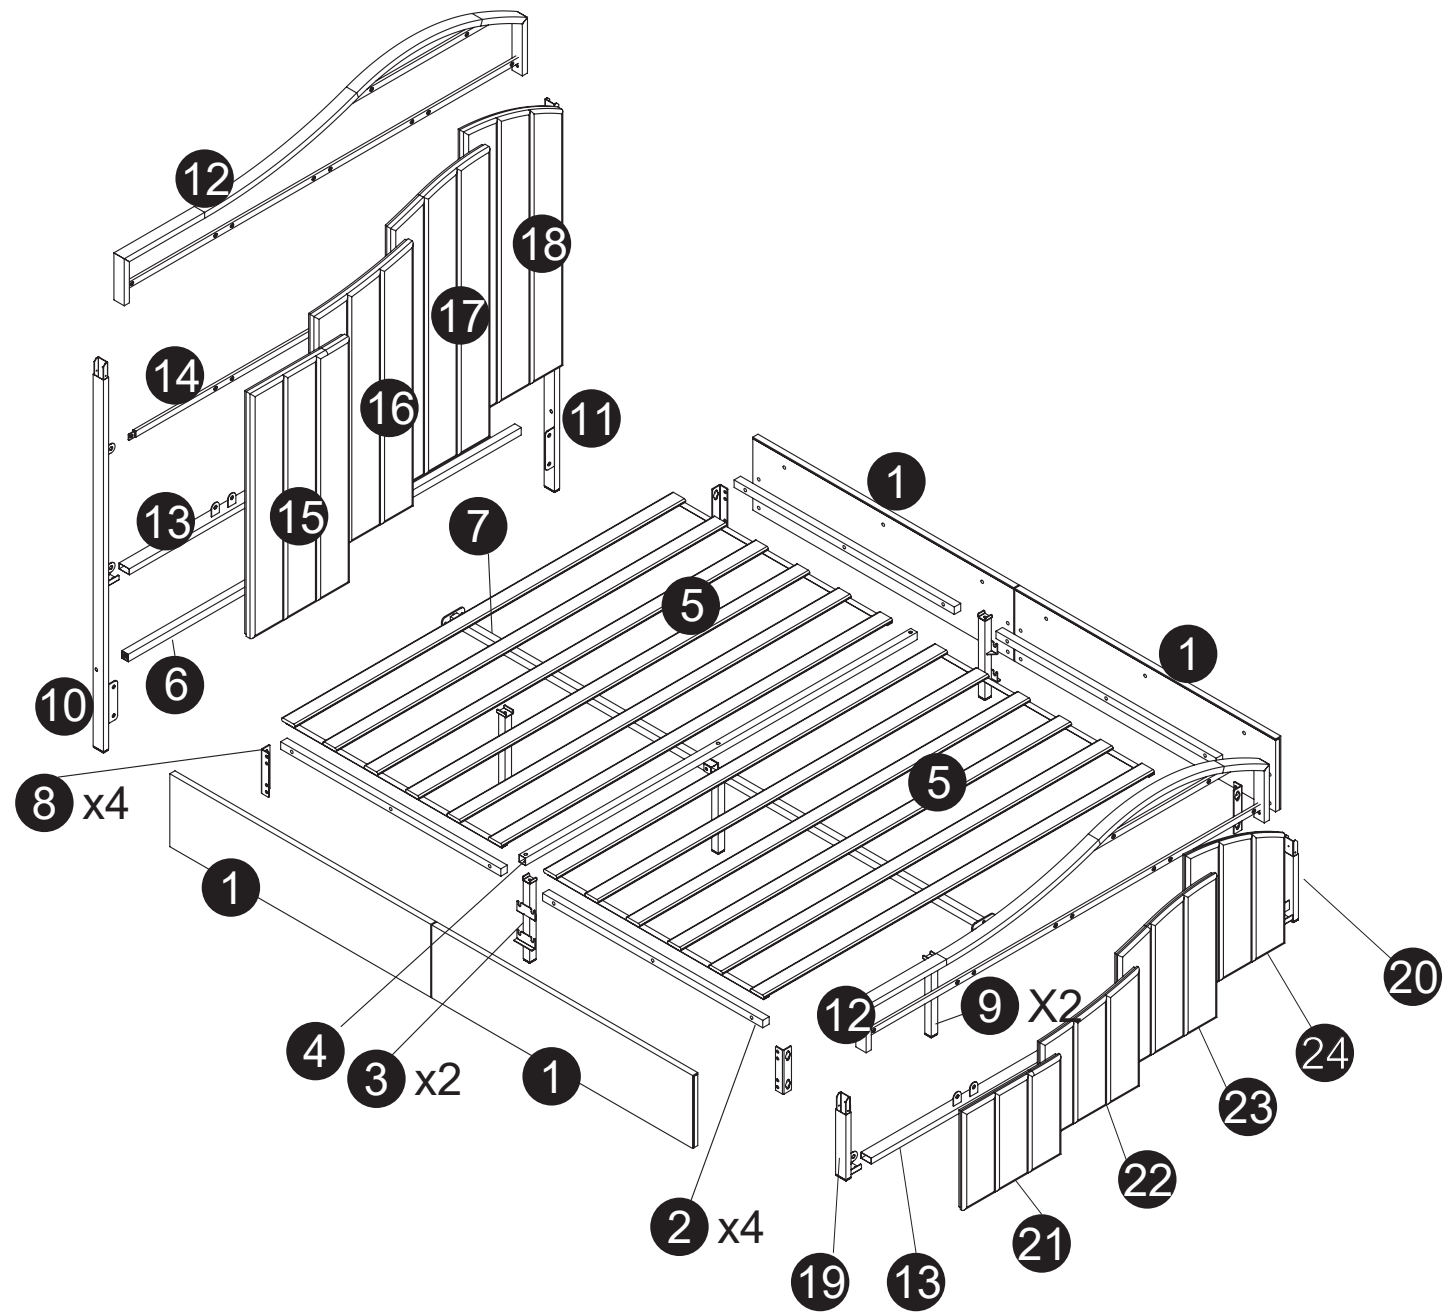




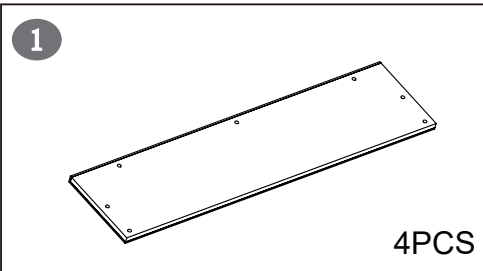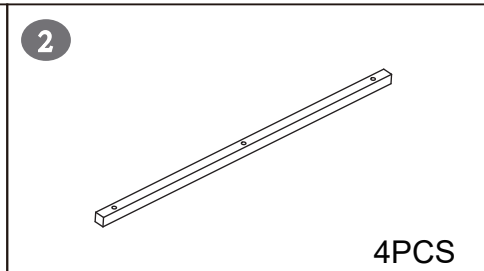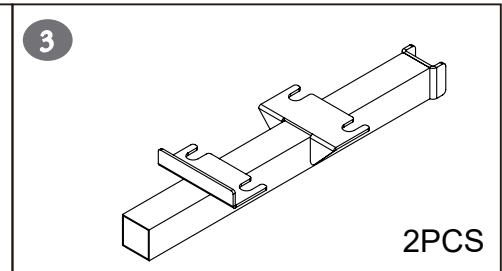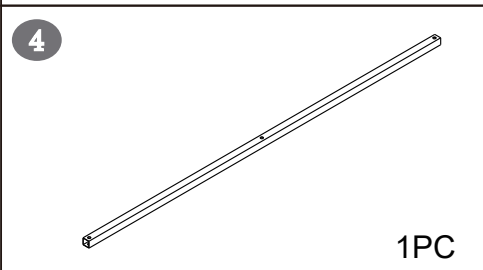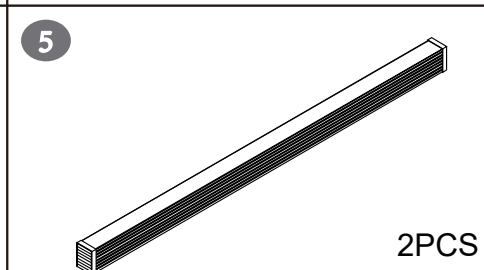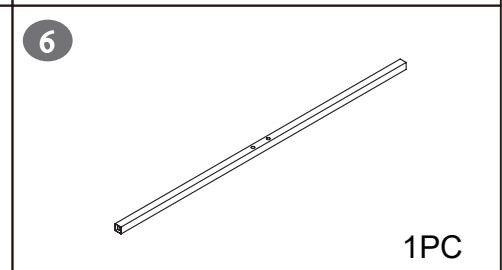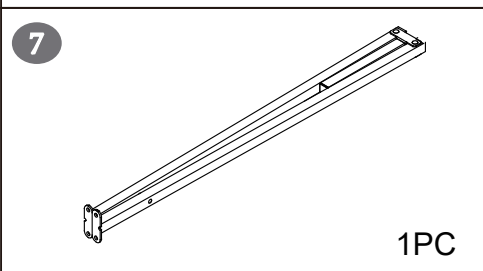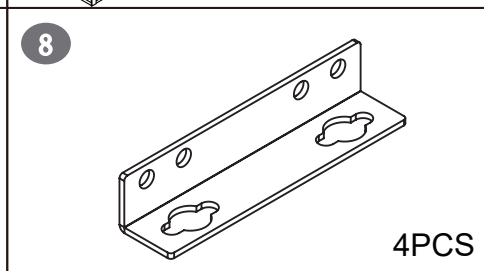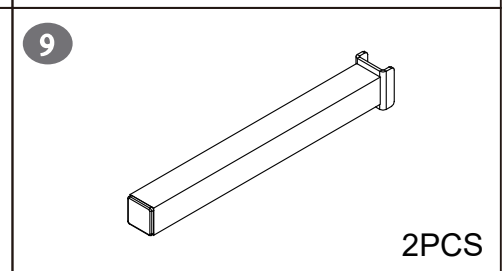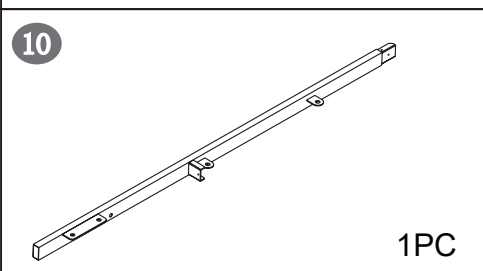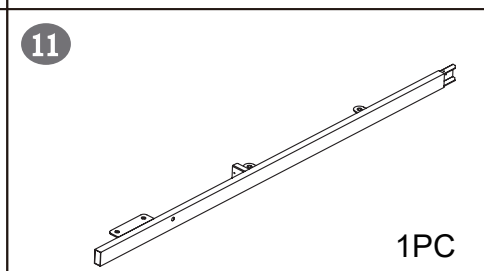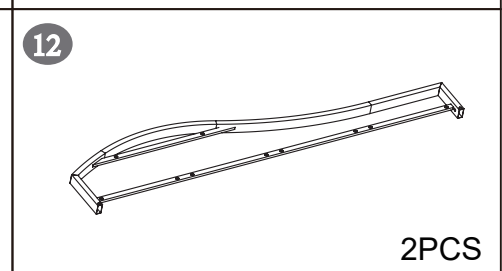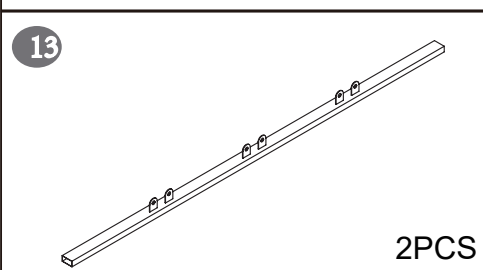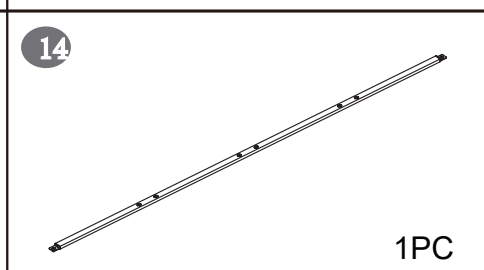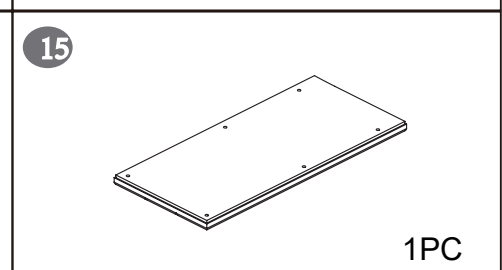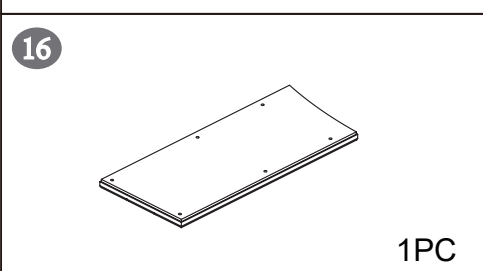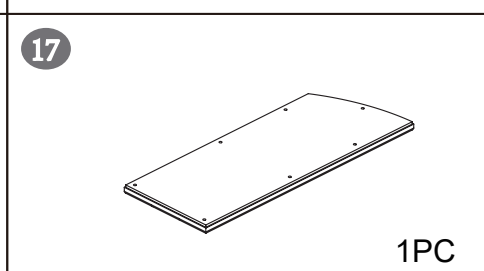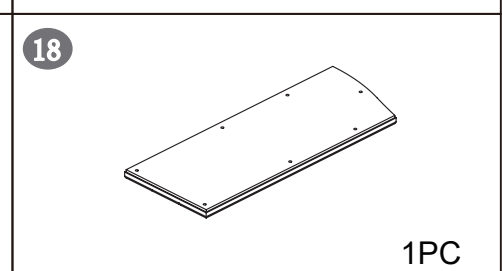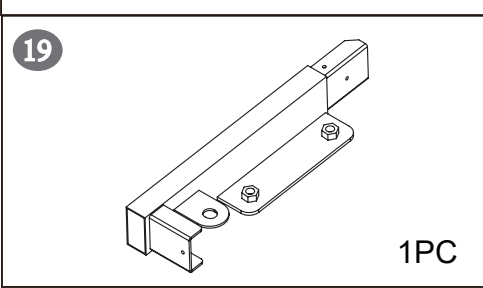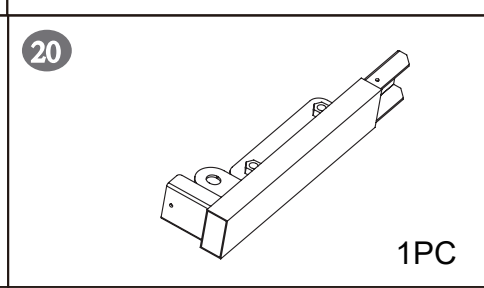
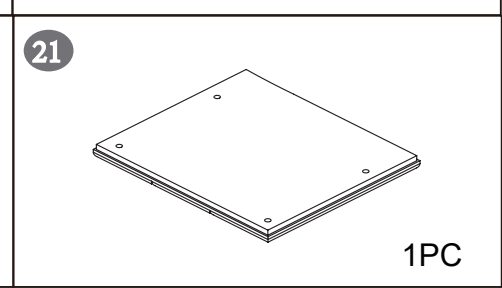



ASSEMBLY INSTRUCTIONS

PARTS LIST

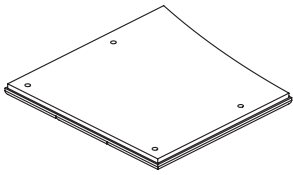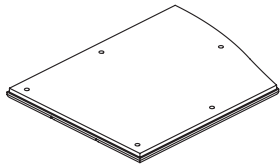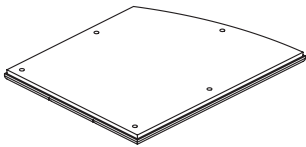

 4PCS	 4PCS	 2PCS
 1PC	 2PCS	 1PC
 1PC	 4PCS	 2PCS
 1PC	 1PC	 2PCS
 2PCS	 1PC	 1PC
 1PC	 1PC	 1PC
 1PC	 1PC	 1PC

ASSEMBLY INSTRUCTIONS

<div>22</div> <div></div> <div>1PC</div>	<div>23</div> <div></div> <div>1PC</div>	<div>24</div> <div></div> <div>1PC</div>
<div>25</div> <div></div> <div>4PCS</div>	<div>A</div> <div></div> <div>M8*14 28PCS</div>	<div>B</div> <div></div> <div>Black Zinc M8*20 42PCS</div>
<div>C</div> <div></div> <div>stainless steel M8*18 10PCS</div>	<div>D</div> <div></div> <div>M8*25 2PCS</div>	<div>E</div> <div></div> <div>M8*38 18PCS</div>
<div>F</div> <div></div> <div>Black Zinc M8*50 1PC</div>	<div>G</div> <div></div> <div>1PC</div>	

ASSEMBLY INSTRUCTIONS

- Note:1、 Assemble component 10.11.12.13 first, then lock the screws but do notlock them, and then assemble component 6.
- 2、 Screw all the parts sequentially,do not fully tighten all the screws until you complete all the installation.

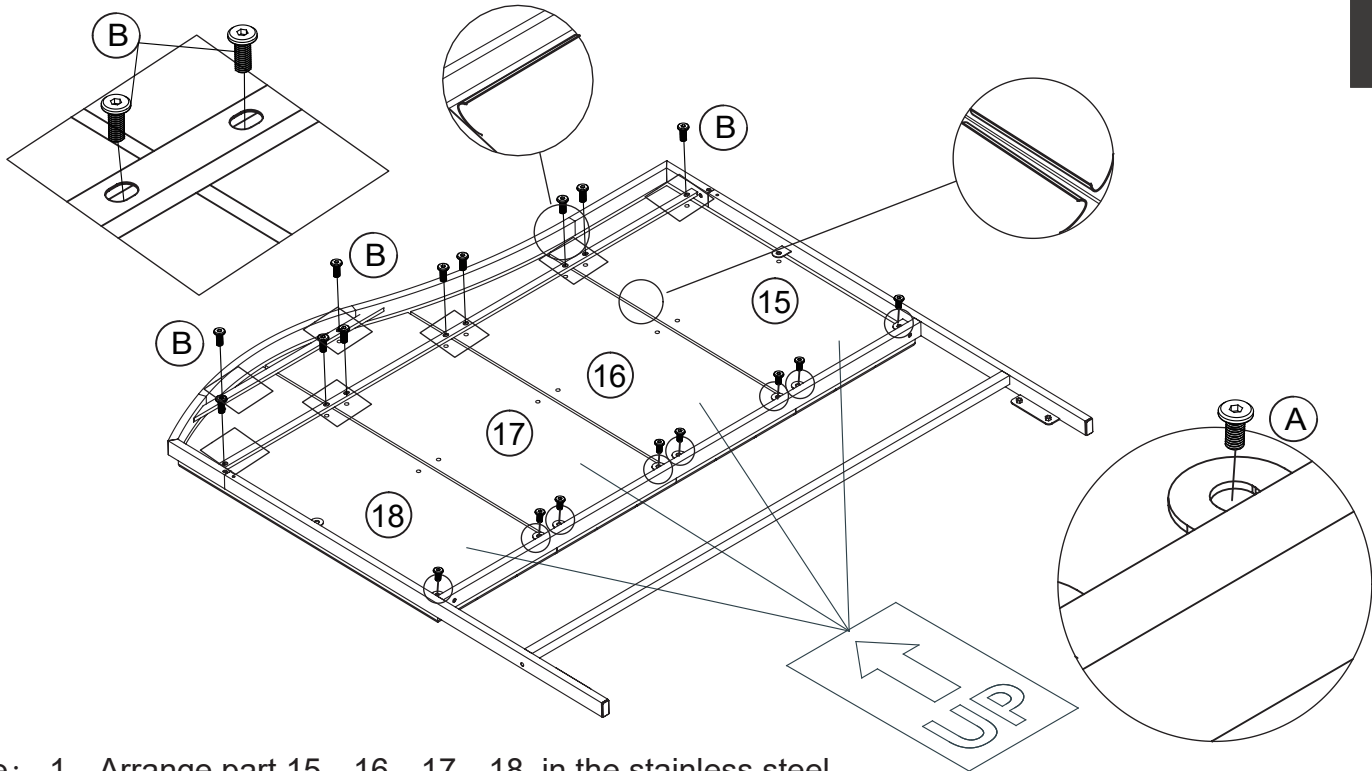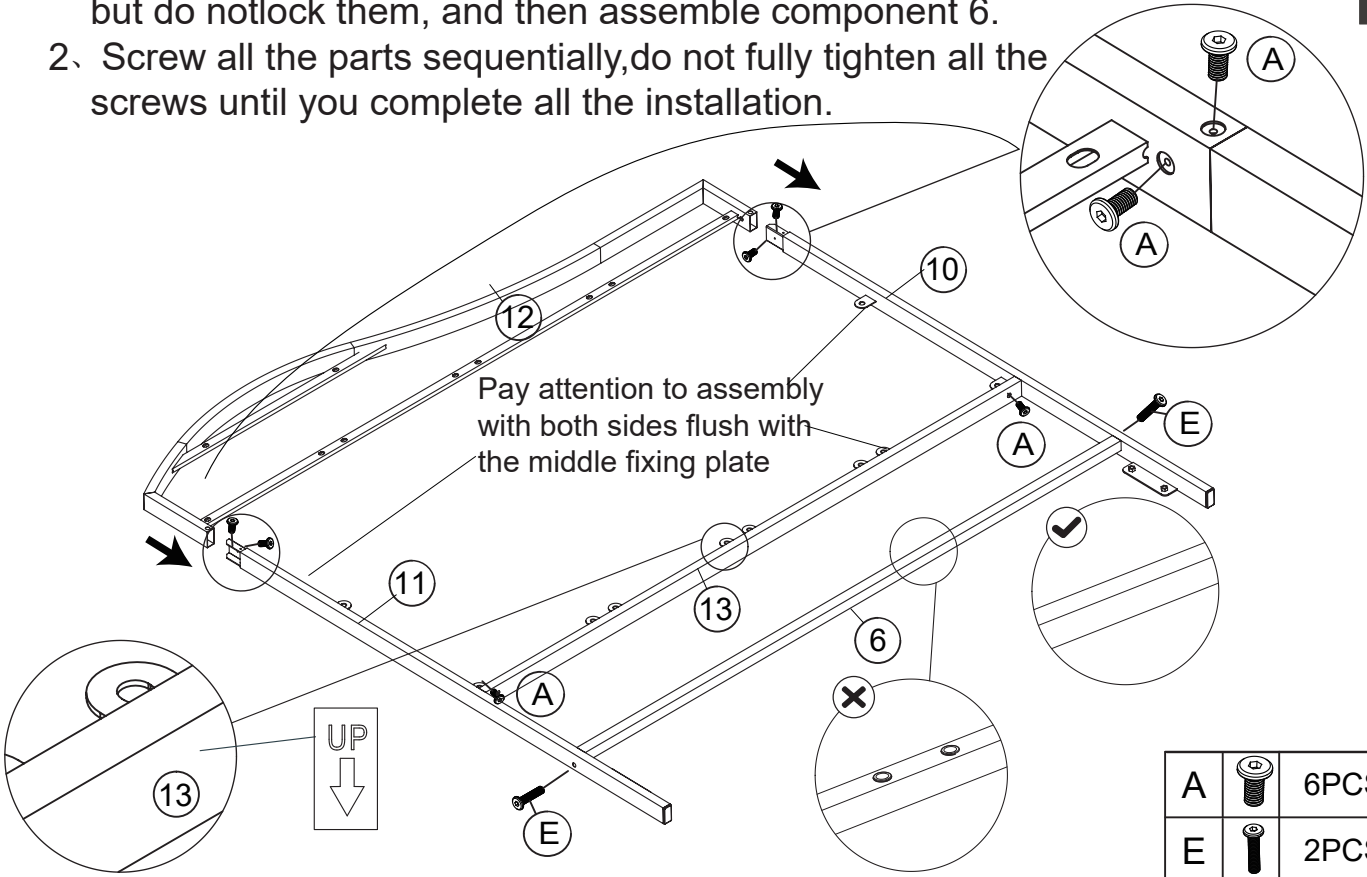

- Note: 1、 Arrange part 15、 16、 17、 18 in the stainless steel frame without the screws;
- 2、 Keep the non-woven frills on the back of the headboard tidy,don't clipped in the crevices of each part
- 3、 Screw all the parts sequentially,do not fully tighten all the screws until you complete all the installation.

Black Zinc

ASSEMBLY INSTRUCTIONS

3


25

Tear off the adhesive and stick it to the back

14


Pay attention to the assembly direction of the L-piece

A



2PCS

B



6PCS

Black Zinc

4

1

2


3

8

Velcro


Black Zinc

E



12PCS

B



16PCS

Black Zinc

ASSEMBLY INSTRUCTIONS

5

13

UP


12

19

13


20

A



4PCS

C



6PCS

Stainless steel

6

21

22


23

24

Note that the screws are not installed here


UP

A



8PCS


B




8PCS

Black Zinc

7

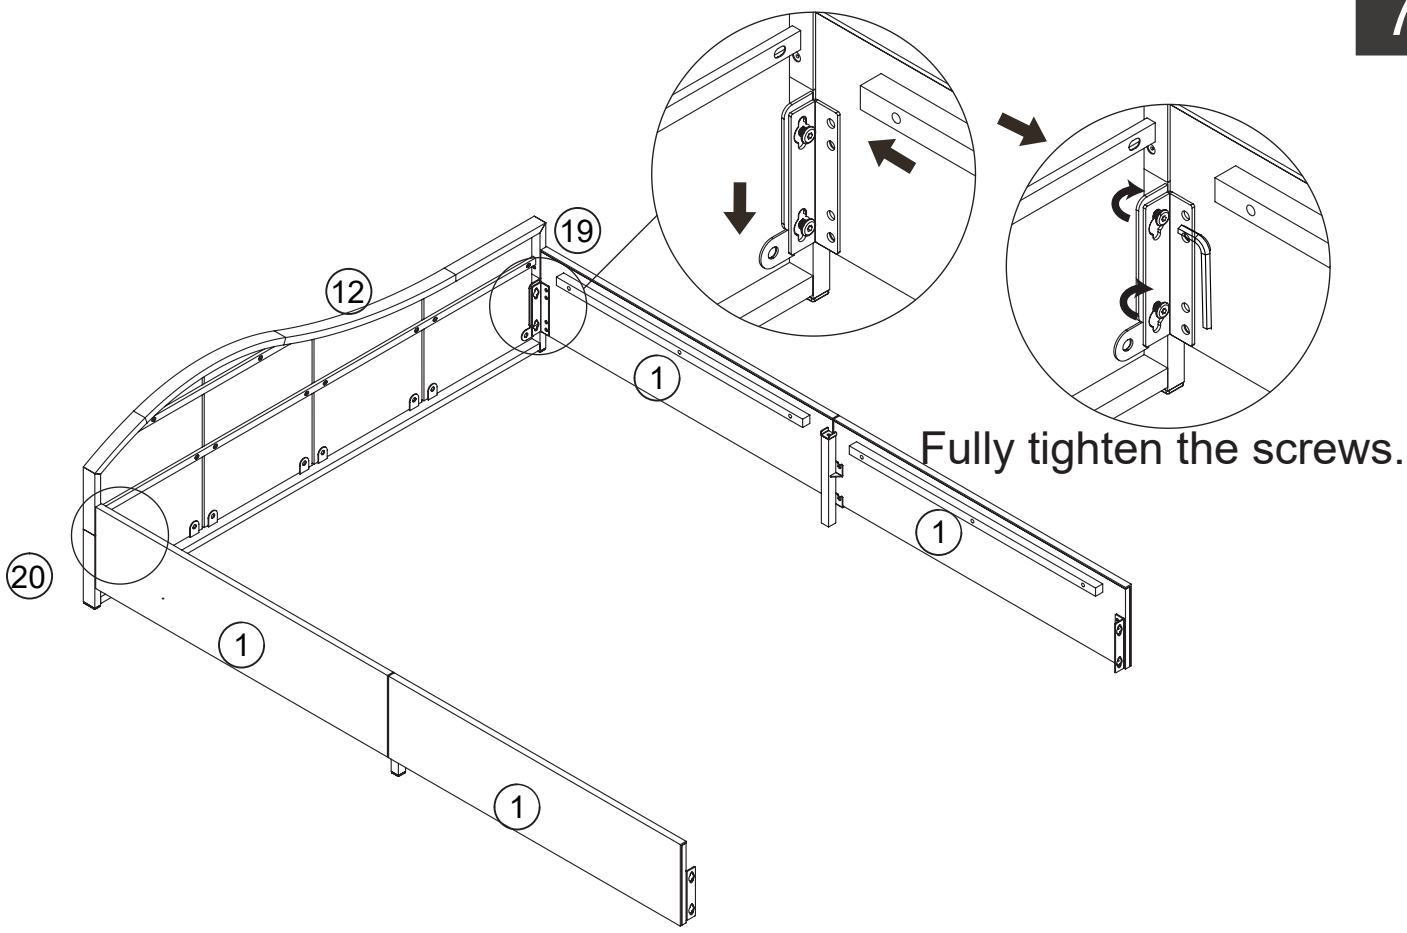


8

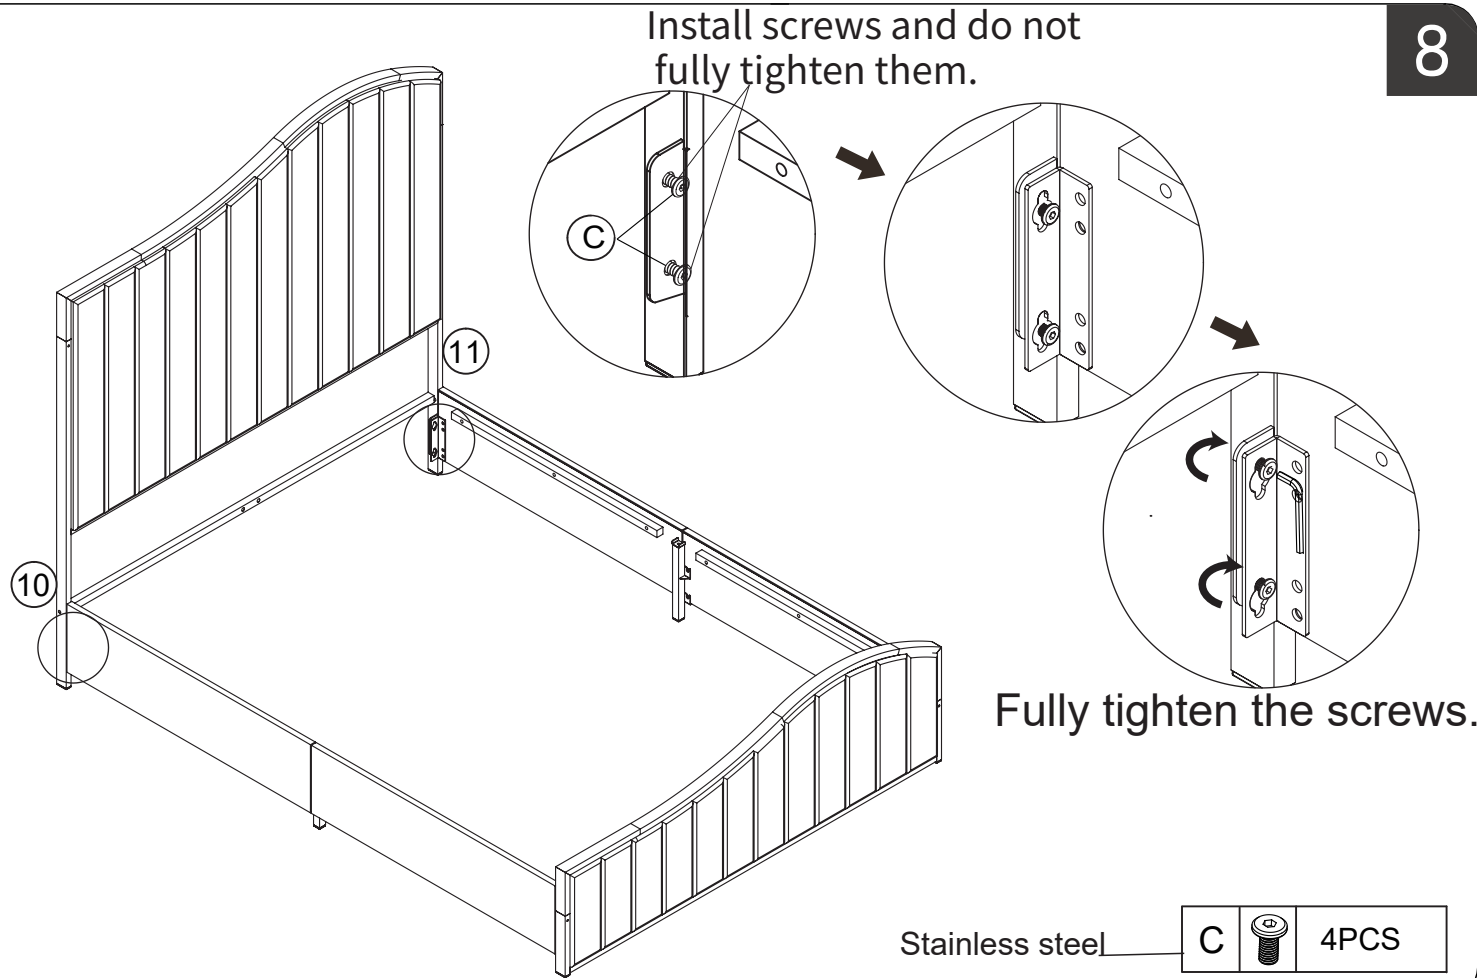


9

WARNING!
Moving parts can crush or cut.
Keep fingers, hands, and feet away to avoid injury.

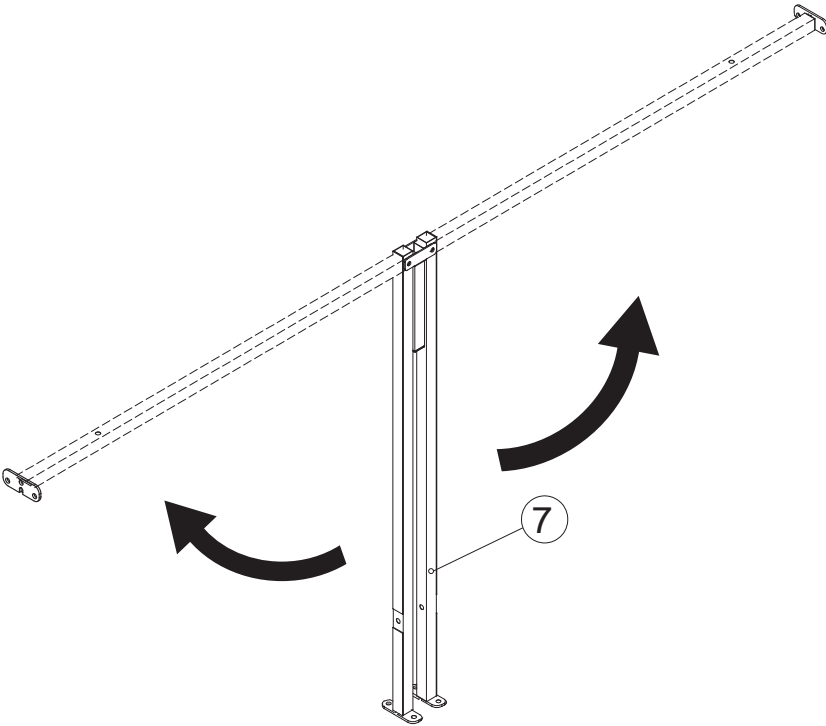


10

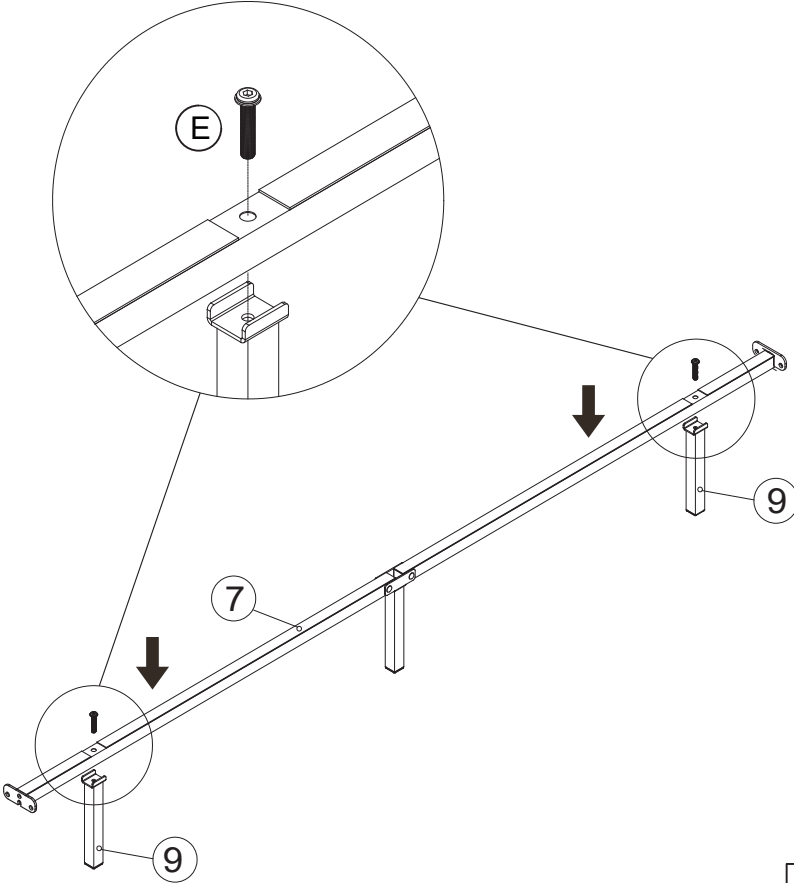


E [screw icon] 2PCS

11

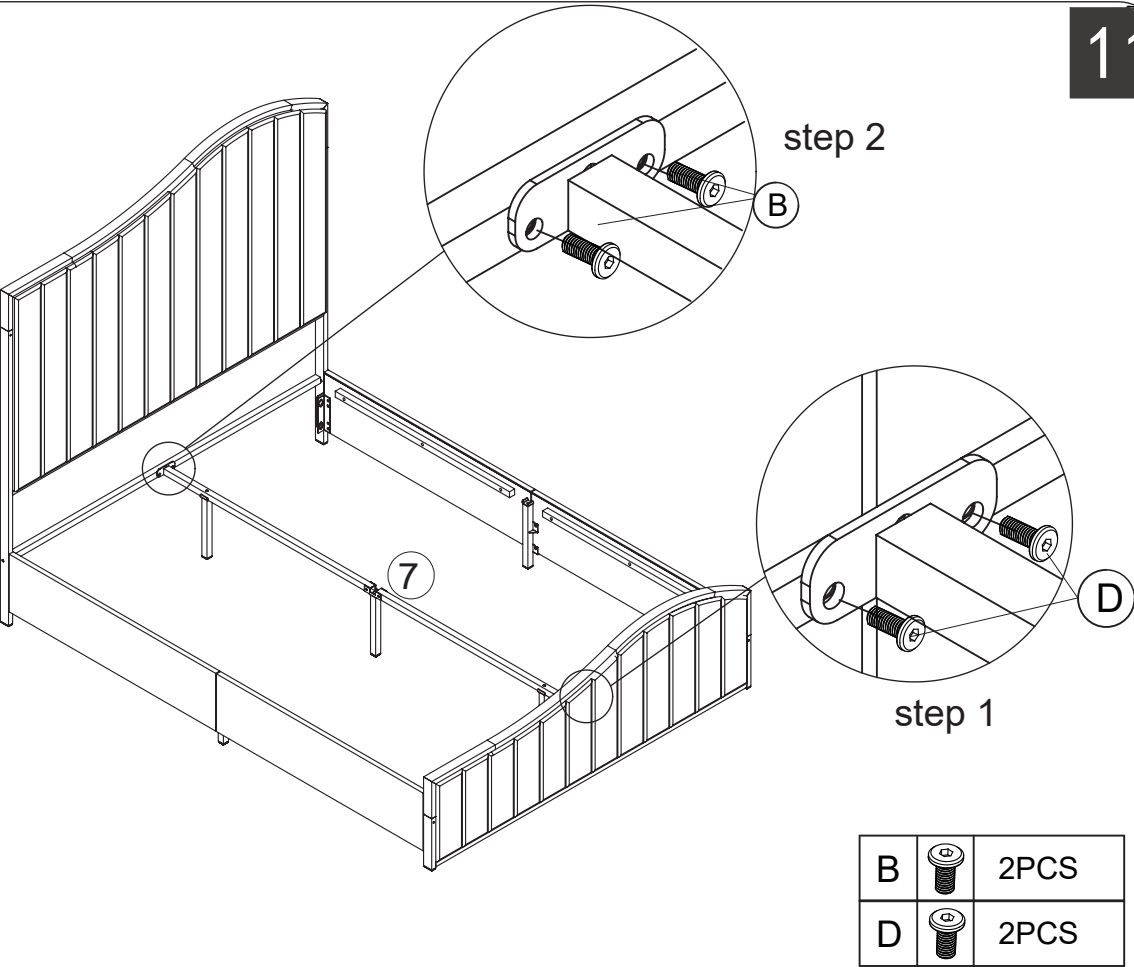

12

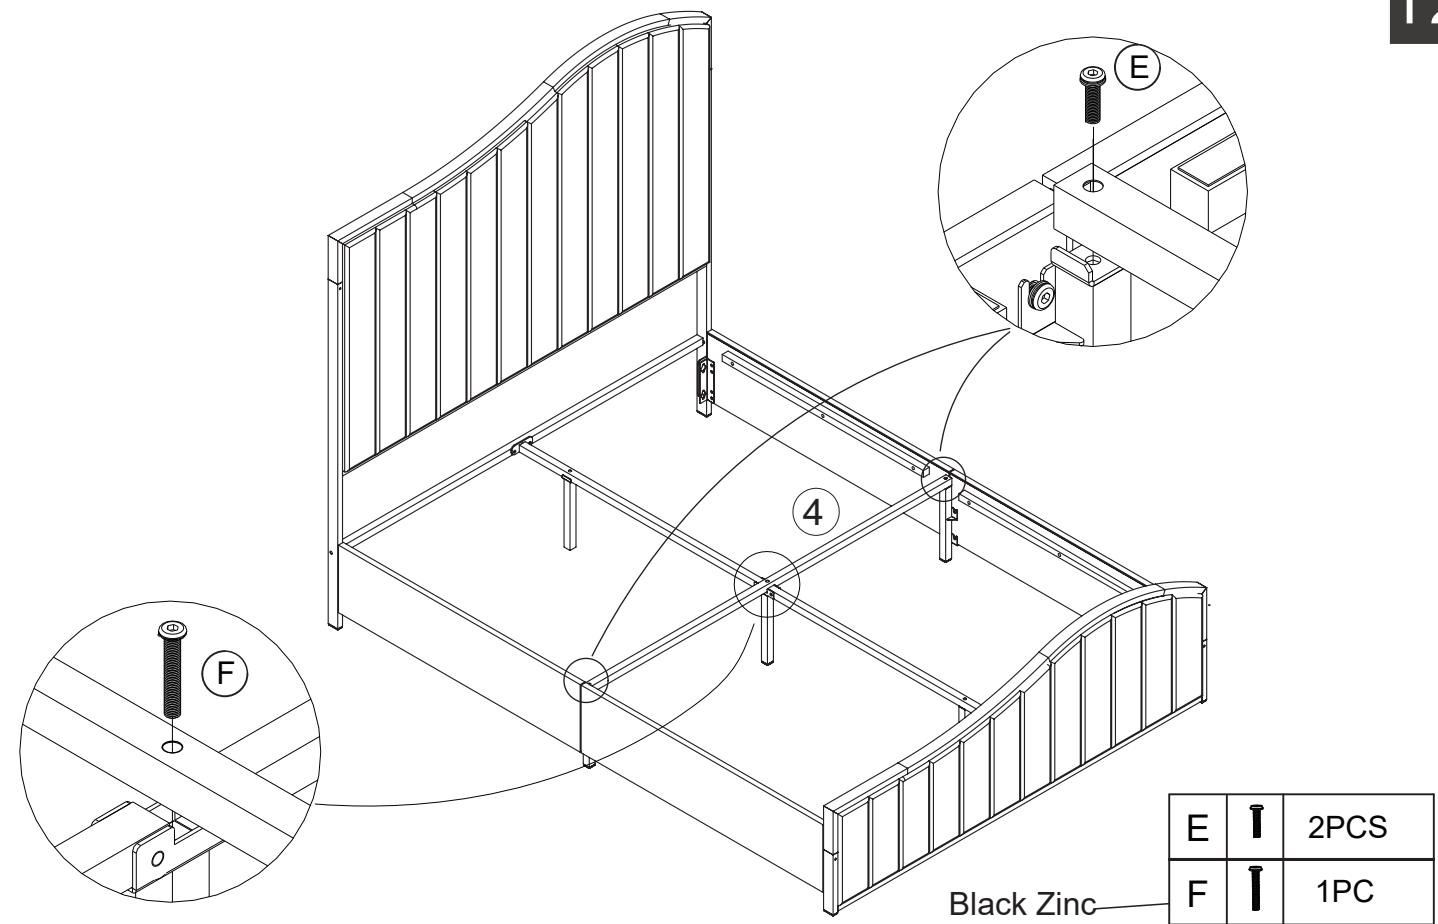

13

