


72*80" Bypass 3-Lite Sliding Closet Door Installation Manual

Any question please contact us:
support@jubest.com








3CDN-W72+HD




TOOLS REQUIRED

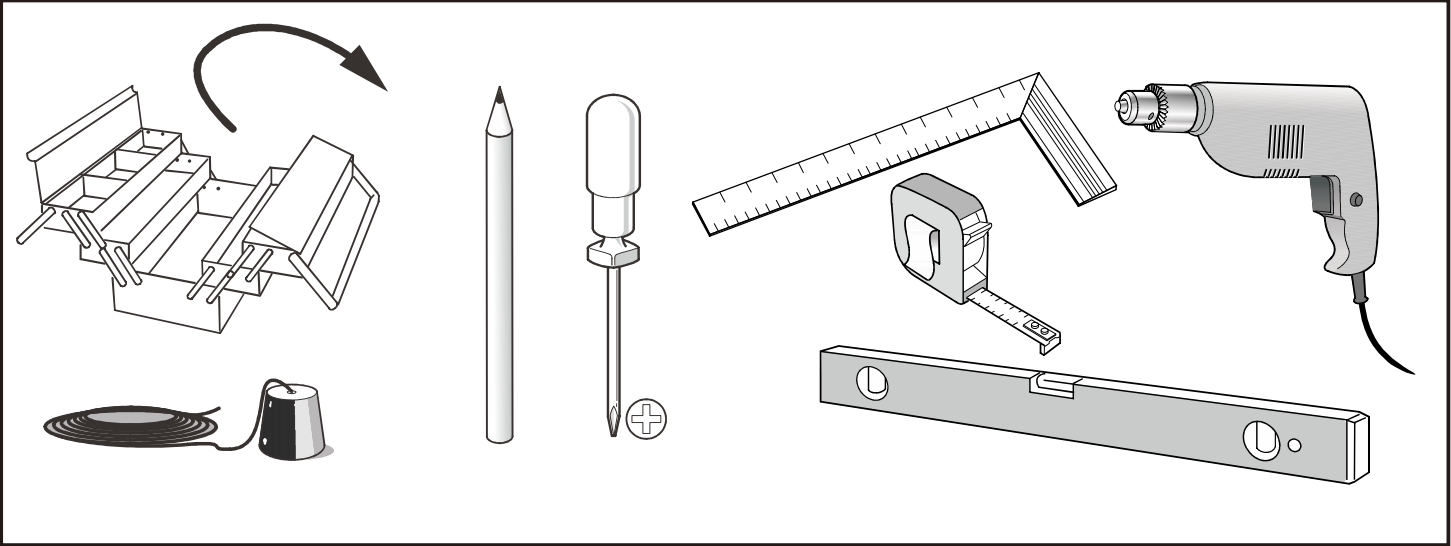

WHAT IS IN THE BOX

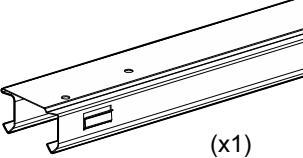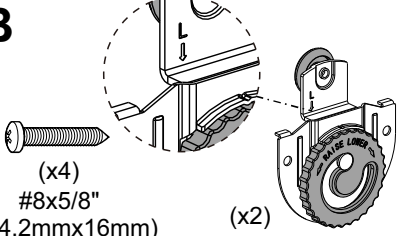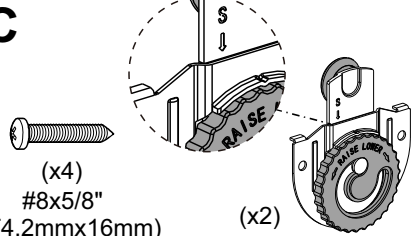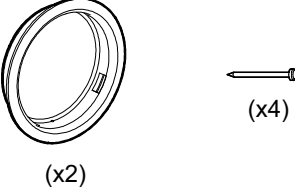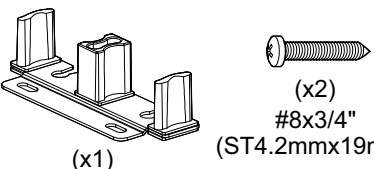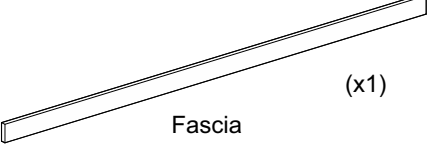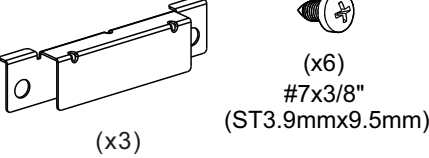A  (x1)	B  (x4) #8x5/8" (ST4.2mmx16mm) (x2)	C  (x4) #8x5/8" (ST4.2mmx16mm) (x2)
 (x13) #8x1-1/4" (ST4.2mmx32mm)	D  (x2) (x4)	E  (x1) (x2) #8x3/4" (ST4.2mmx19mm)
F  Fascia (x1)	G  (x3) (x6) #7x3/8" (ST3.9mmx9.5mm)	H  (x1)

To provide feedback on a particular part, please mark it by circling in the instruction manual and kindly send us a photo.

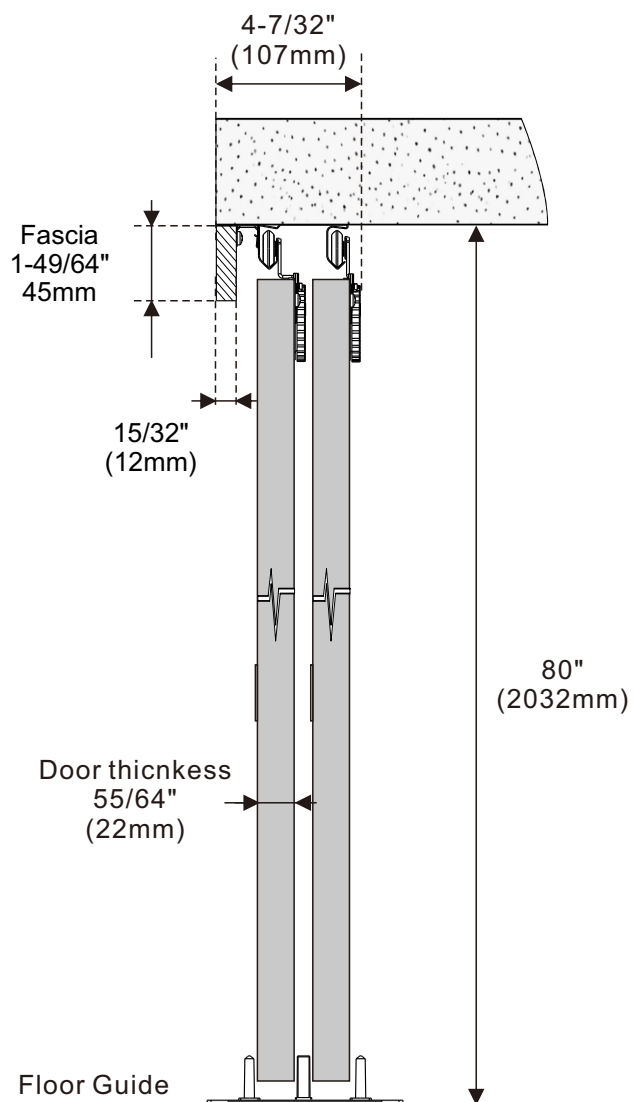


INSTALLTAION INSTRUCTIONS

1


INSTALL FASCIA (F)

Mark locations on the fascia with pencil

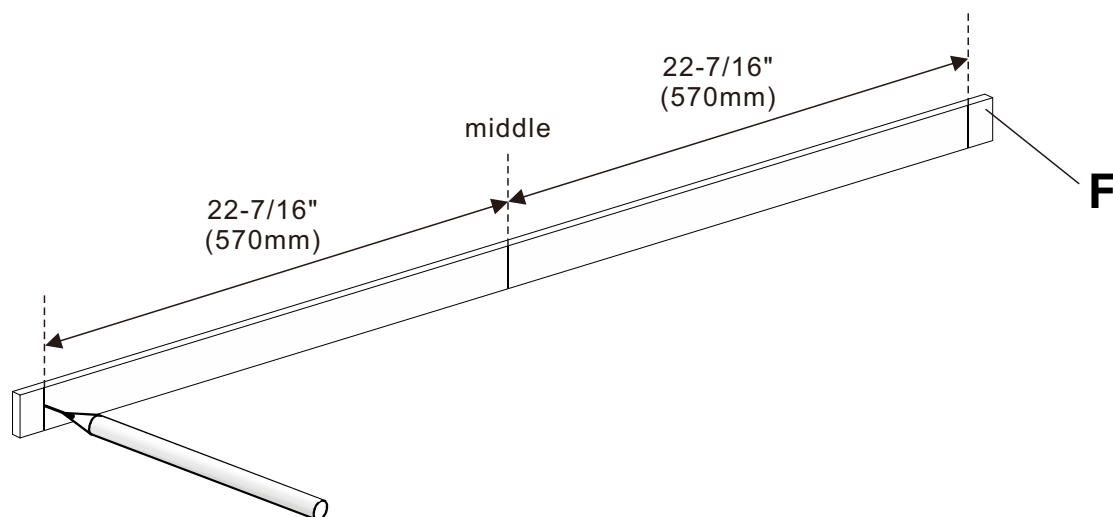


2 MOUNT CONNECTORS (G) ONTO FASCIA (F)

Attach 3 connectors to fascia is and use screws to fasten them.


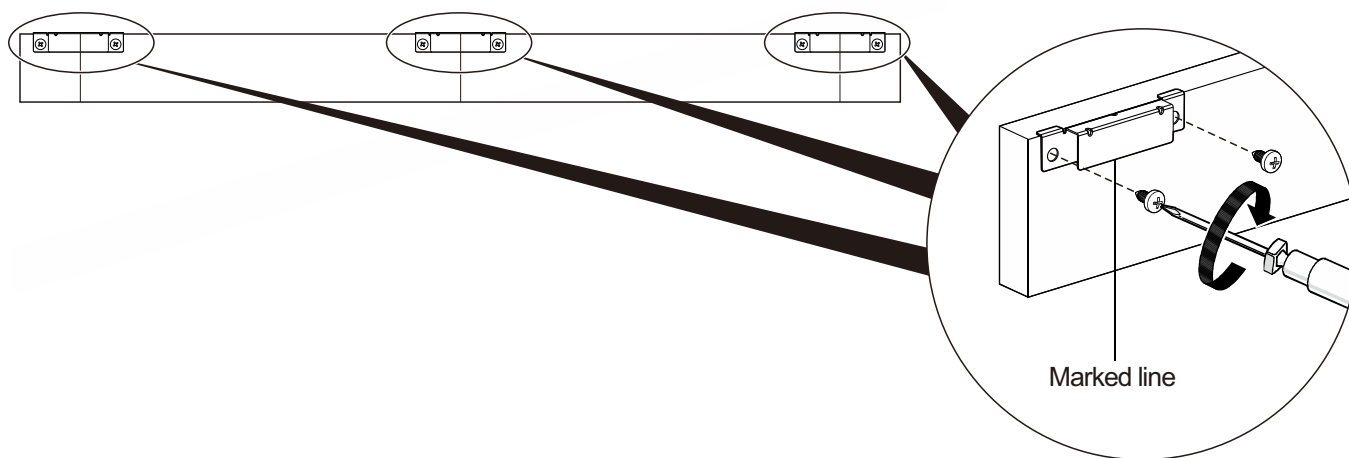





3 INSTALL FASCIA (F) ONTO TRACK (A)

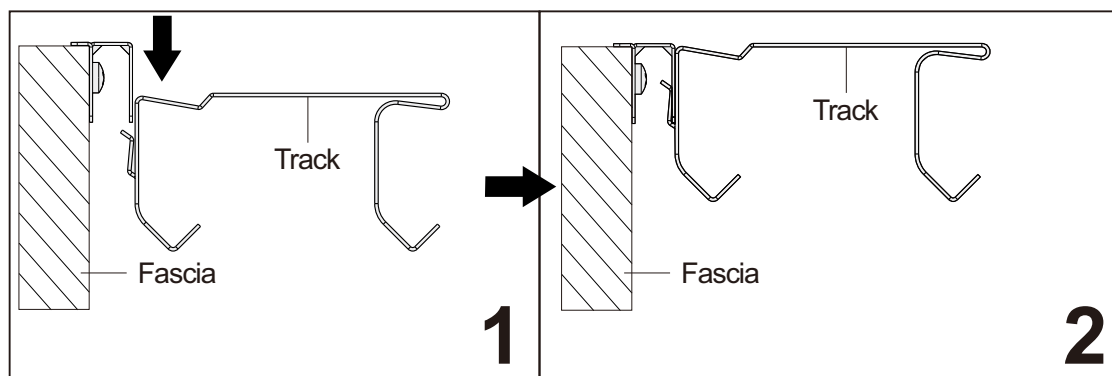

4 INSTALL TRACK

Place track on door header, centered between both door jambs. Make sure track openings are facing inside of closet. Position fascia flush with door opening. With track as template, mark location of screwholes. Drill $\frac{3}{32}$ " (2.4mm) pilot holes to approximate screw length. Using supplied #8x1-1/4" (ST4.2mmx32mm) screws, securely attach track to header.

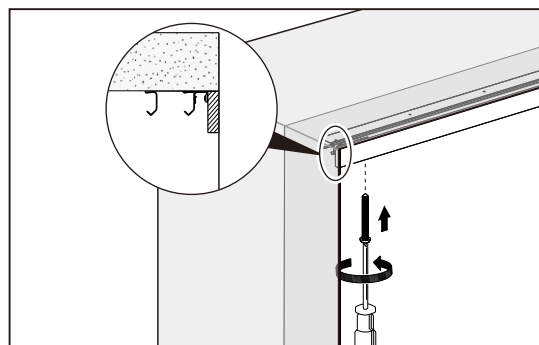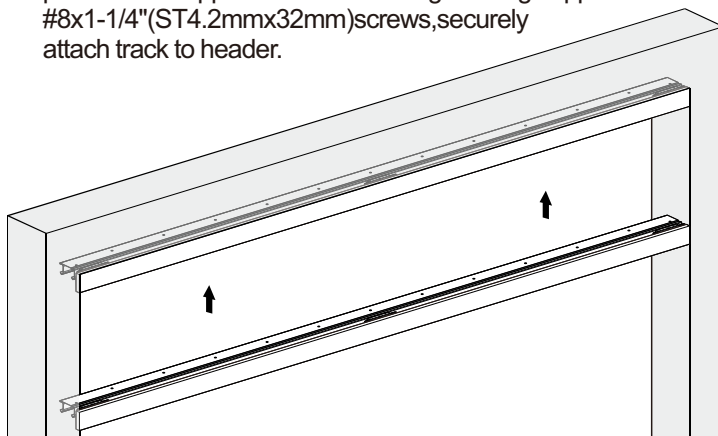

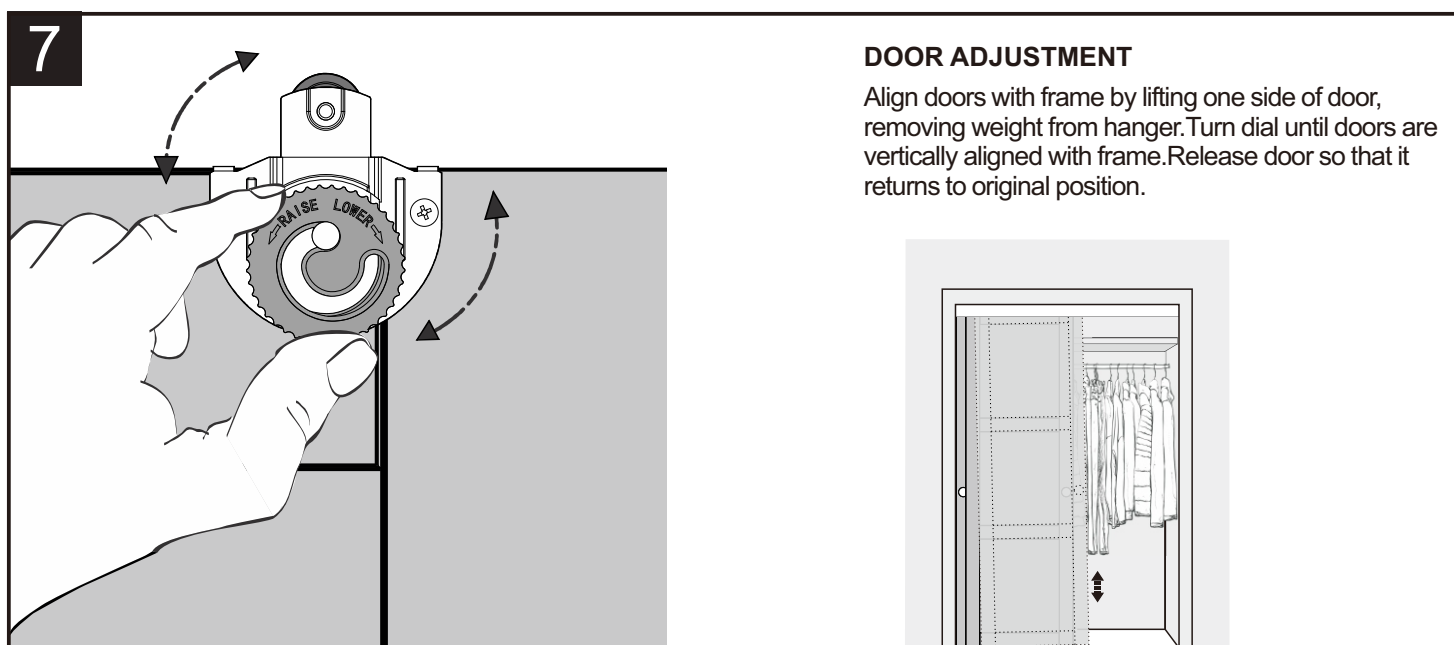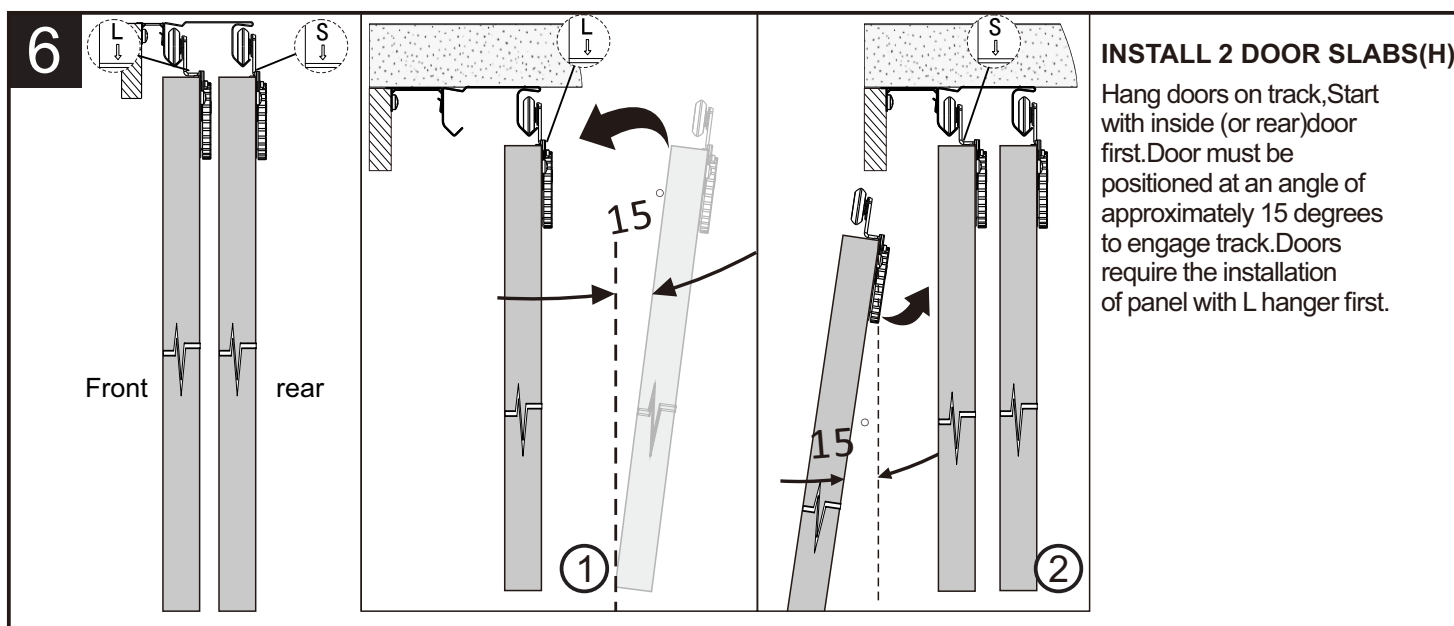
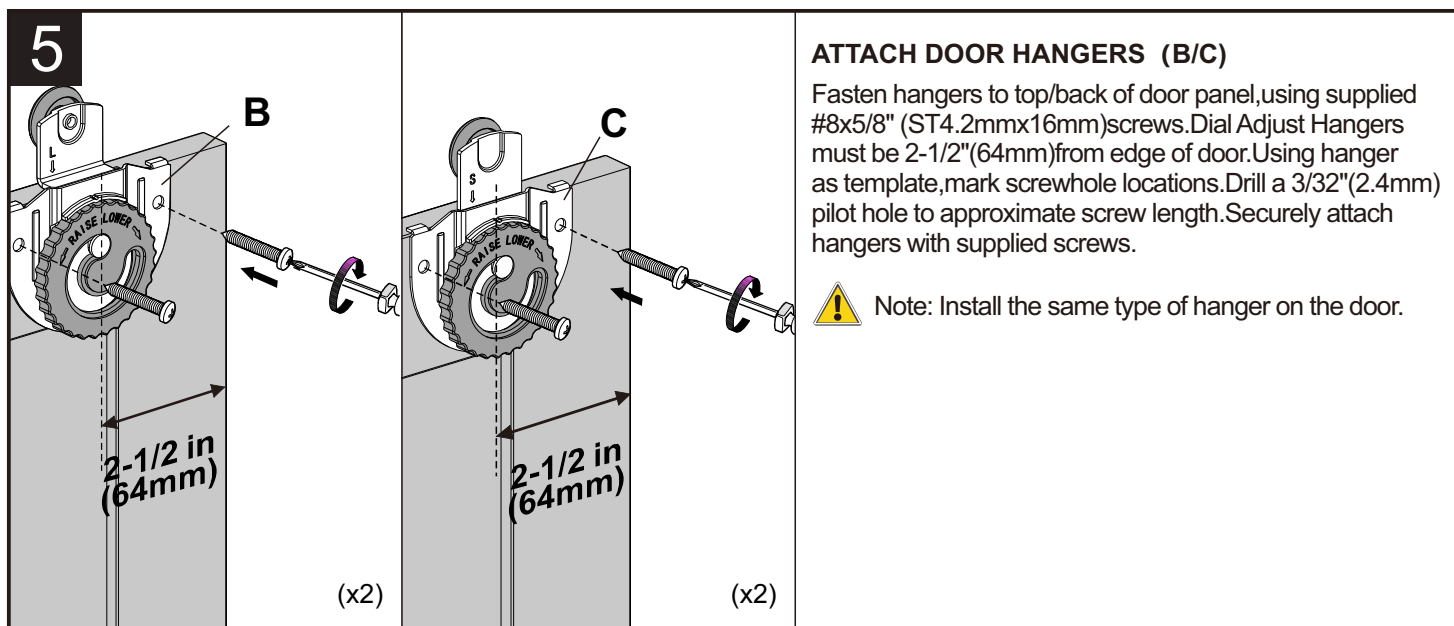


8




INSTALL DOOR GUIDE (E)

Push the two door slabs to the same side against the wall.
Position the guide beneath overlap of doors, as shown.

Adjust the two door slabs so that they are vertical.
Using supplied #8x3/4" (ST4.2mmx19mm) screws,
securely fasten guide to floor.

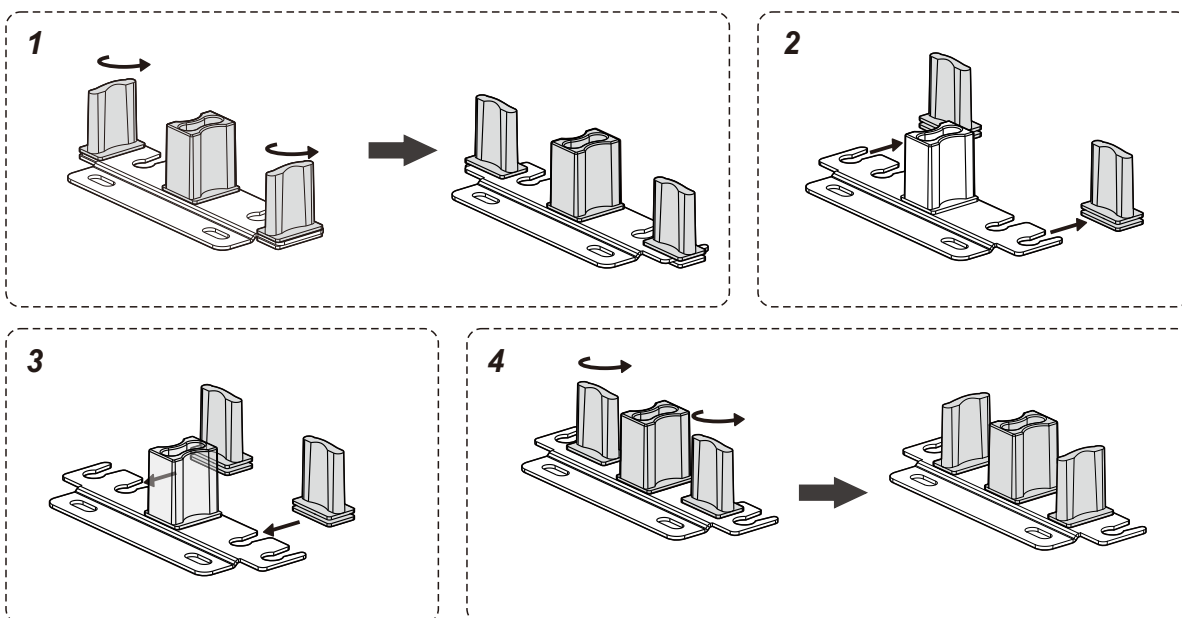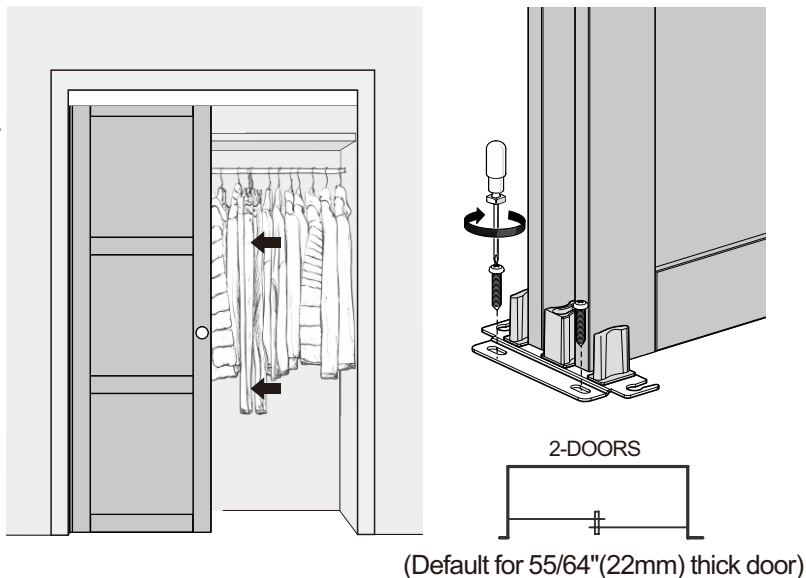

9

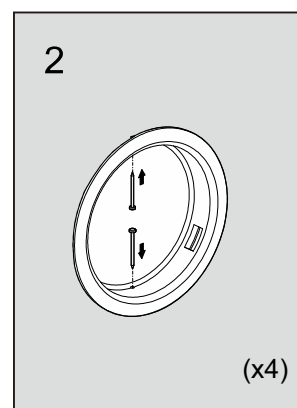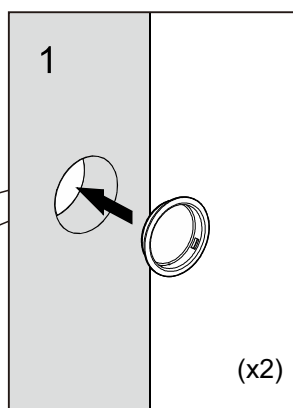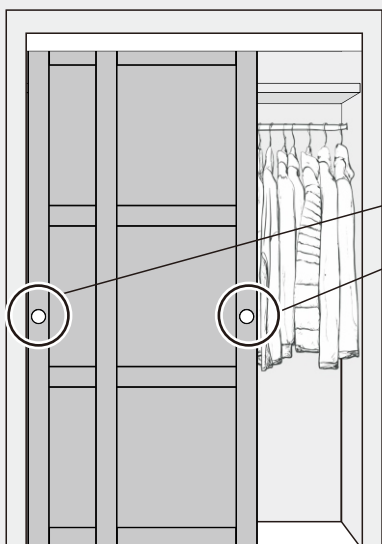

INSTALL DOOR CUP PULLS (D)

Insert door pull into each hole and secure with
supplied nails.