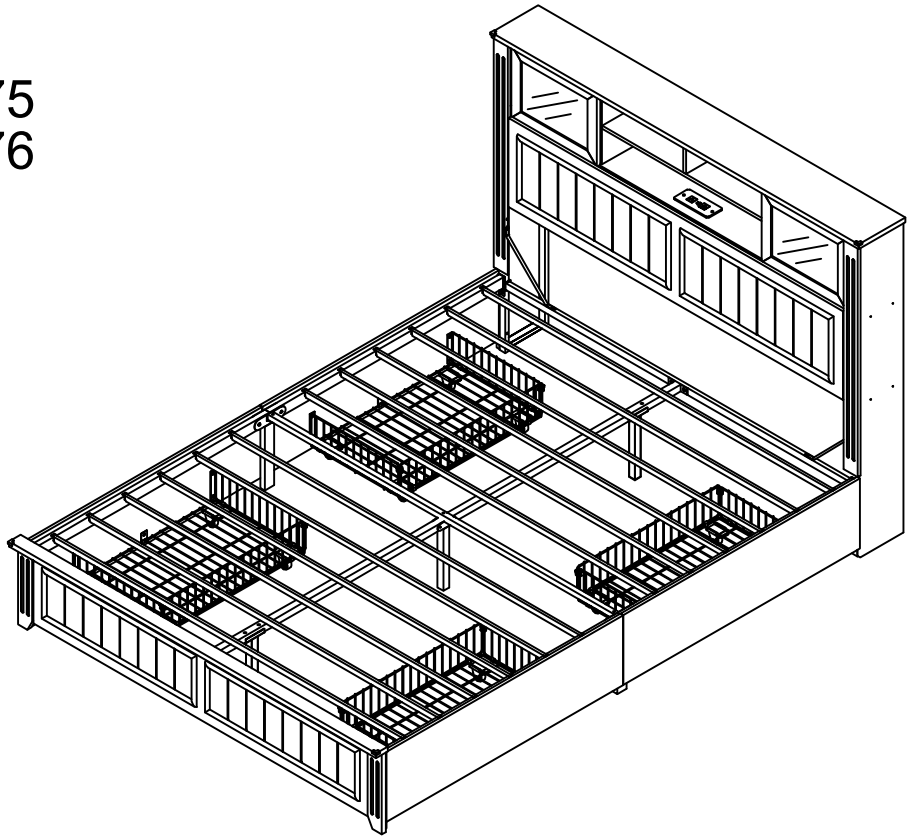
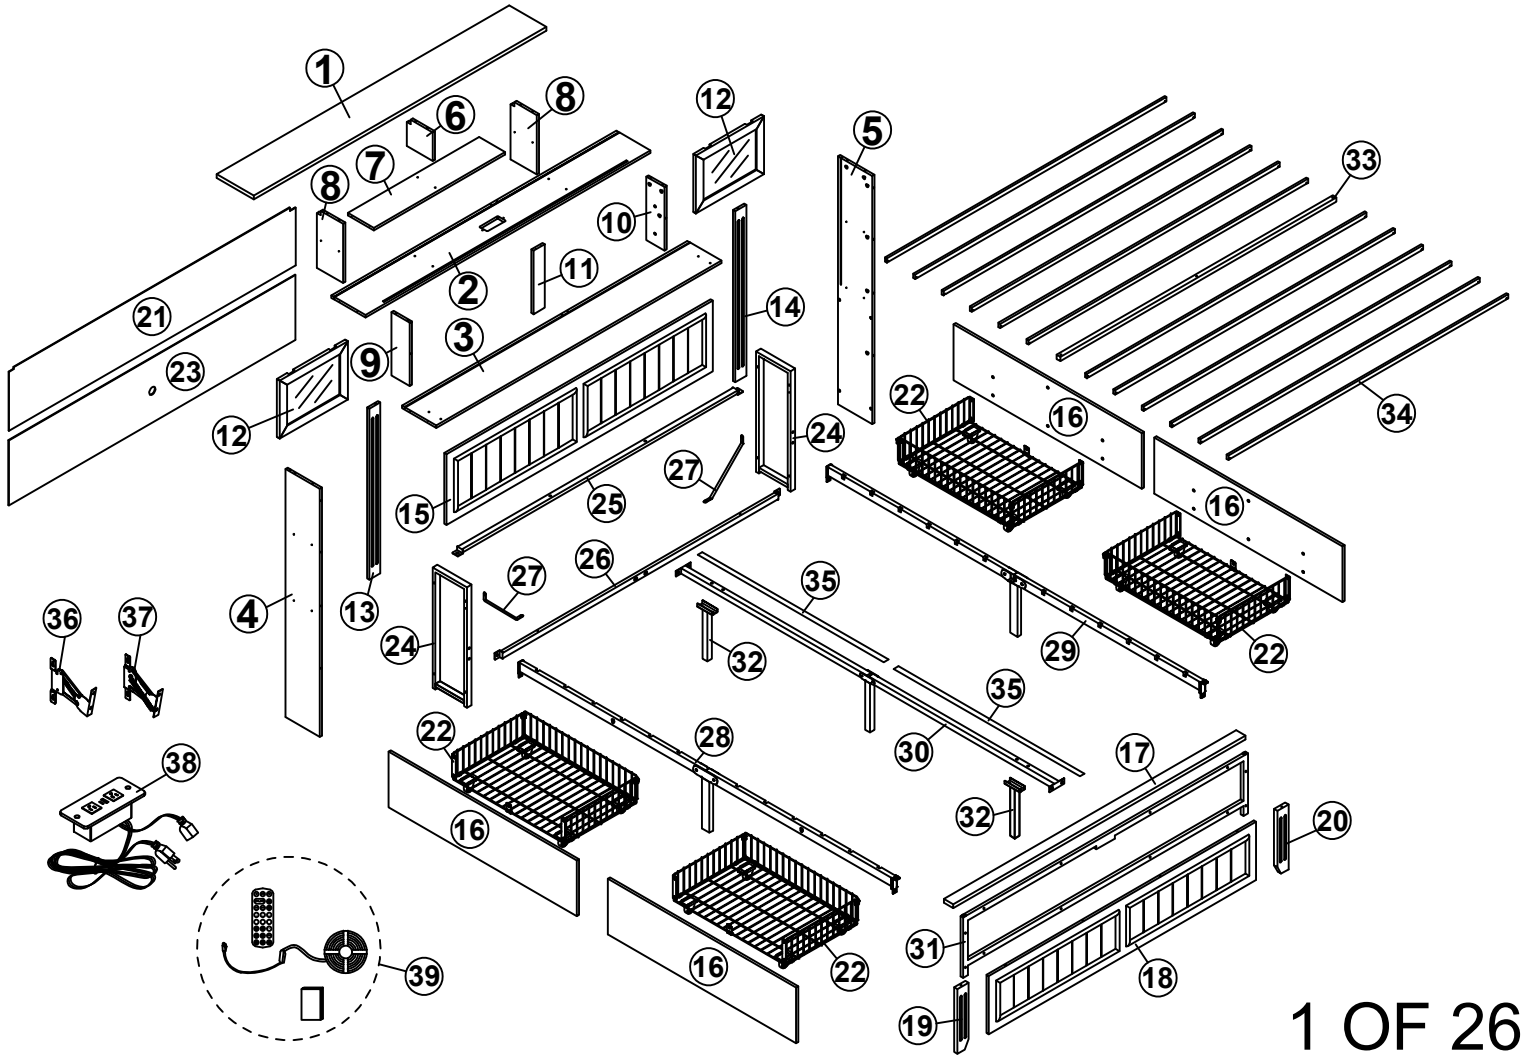
Version:1.0

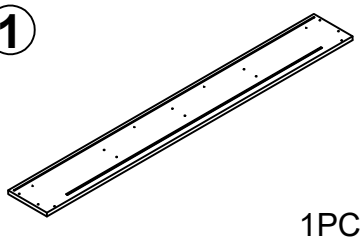
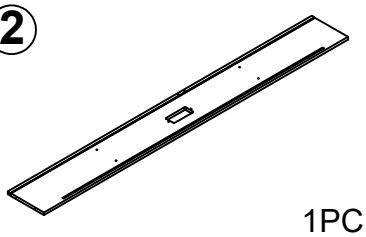
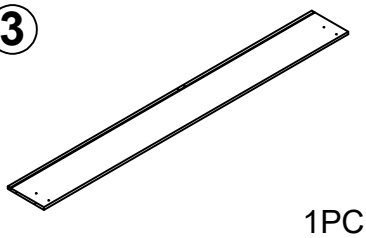
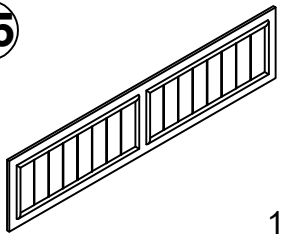
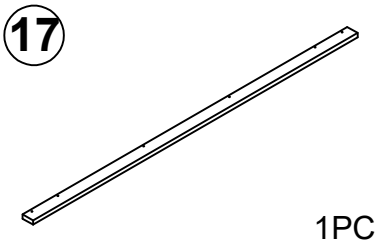
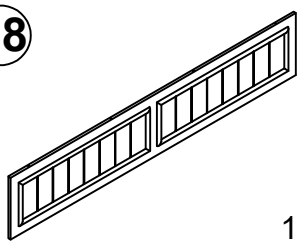

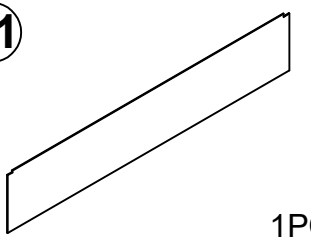
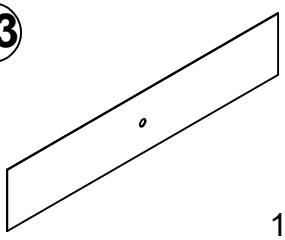

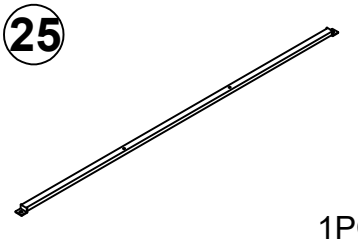
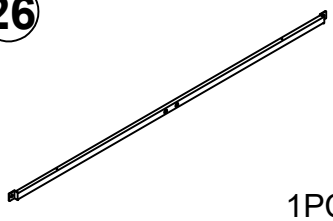
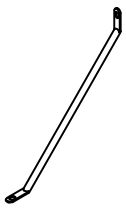

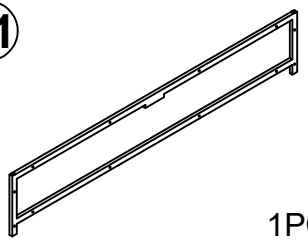

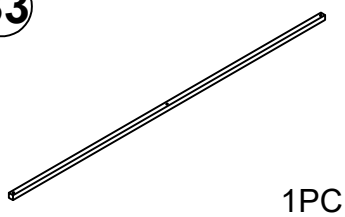
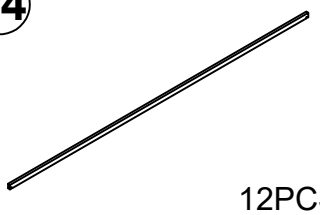
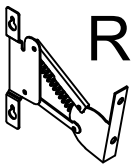
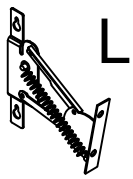
AJ-DJ505475
AJ-DJ505476




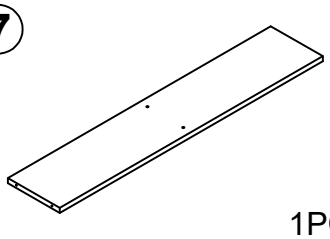




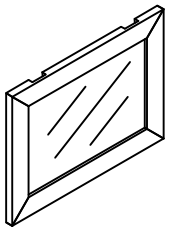
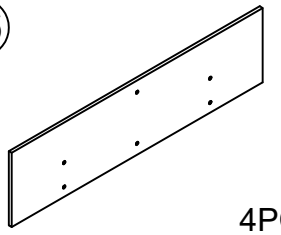
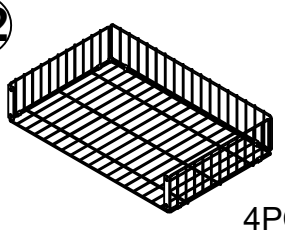
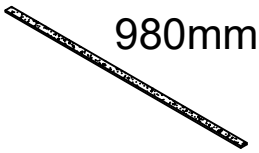
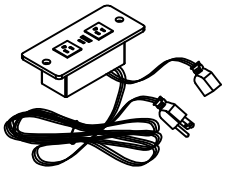
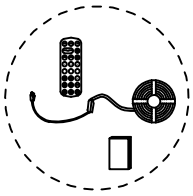
Note:
Should be assembled on flat ground to keep balance.
It needs at least two people to install.
Before starting the assembly, you must read the whole manual and follow the instructions.









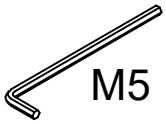
# Part list for A box

| | | | |
|---|---|---|---|
| 1  1PC | 2  1PC | 3  1PC | 4  1PC |
| 5  1PC | 15  1PC | 17  1PC | 18  1PC |
| 19  1PC | 20  1PC | 21  1PC | 23  1PC |
| 24  2PCS | 25  1PC | 26  1PC | 27  2PCS |
| 28  1PC | 29  1PC | 30  1PC | 31  1PC |
| 32  2PCS | 33  1PC | 34  12PCS | 36  R 1PC |
| 37  L 1PC | | | |

# Part list for B box

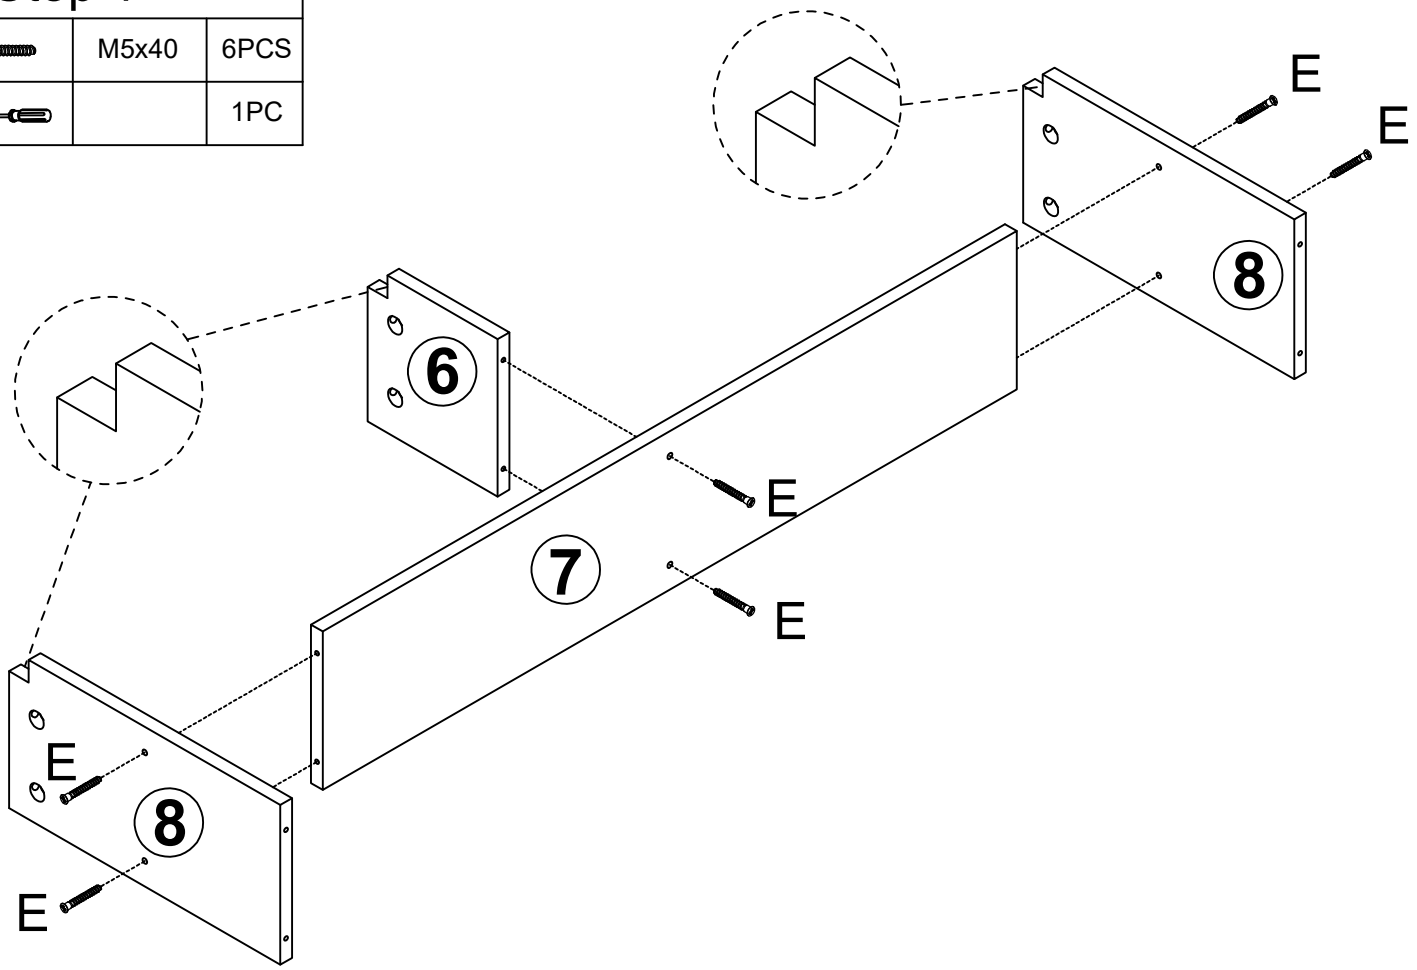
| | | | |
|---|---|---|---|
| 6  1PC | 7  1PC | 8  2PCS | 9  1PC |
| 10  1PC | 11  1PC | 12  2PCS | 13  1PC |
| 14  1PC | 16  4PCS | 22  4PCS | 35  980mm 2PCS |
| 38  1PC | 39  1PC | | |

# Hardware list for B box


| | | | | |
|---|---|---|---|---|
| A  32+3PCS | B  32+3PCS | C M3.5x12  30+3PCS | D  4+1PCS | E M5x40  26+2PCS |
| F  10+1PCS | G M8x16  12+1PCS | H M6x32  10+1PCS | I M6x22  14+1PCS | J M8x25  2+1PCS |
| K M6x10  34+3PCS | L M6x15  2+1PCS | M M8x35  4+1PCS | N  16PCS | O  8PCS |
| P  4PCS | Q  4PCS | R M8x55  1PC | S  24+4PCS | T  4PCS |
| U  4+1PCS | V  1PC | W  8+1PCS | X  M4 2PCS | Y  M5 1PC |
| Z  4PCS | AA  1PC | | | |

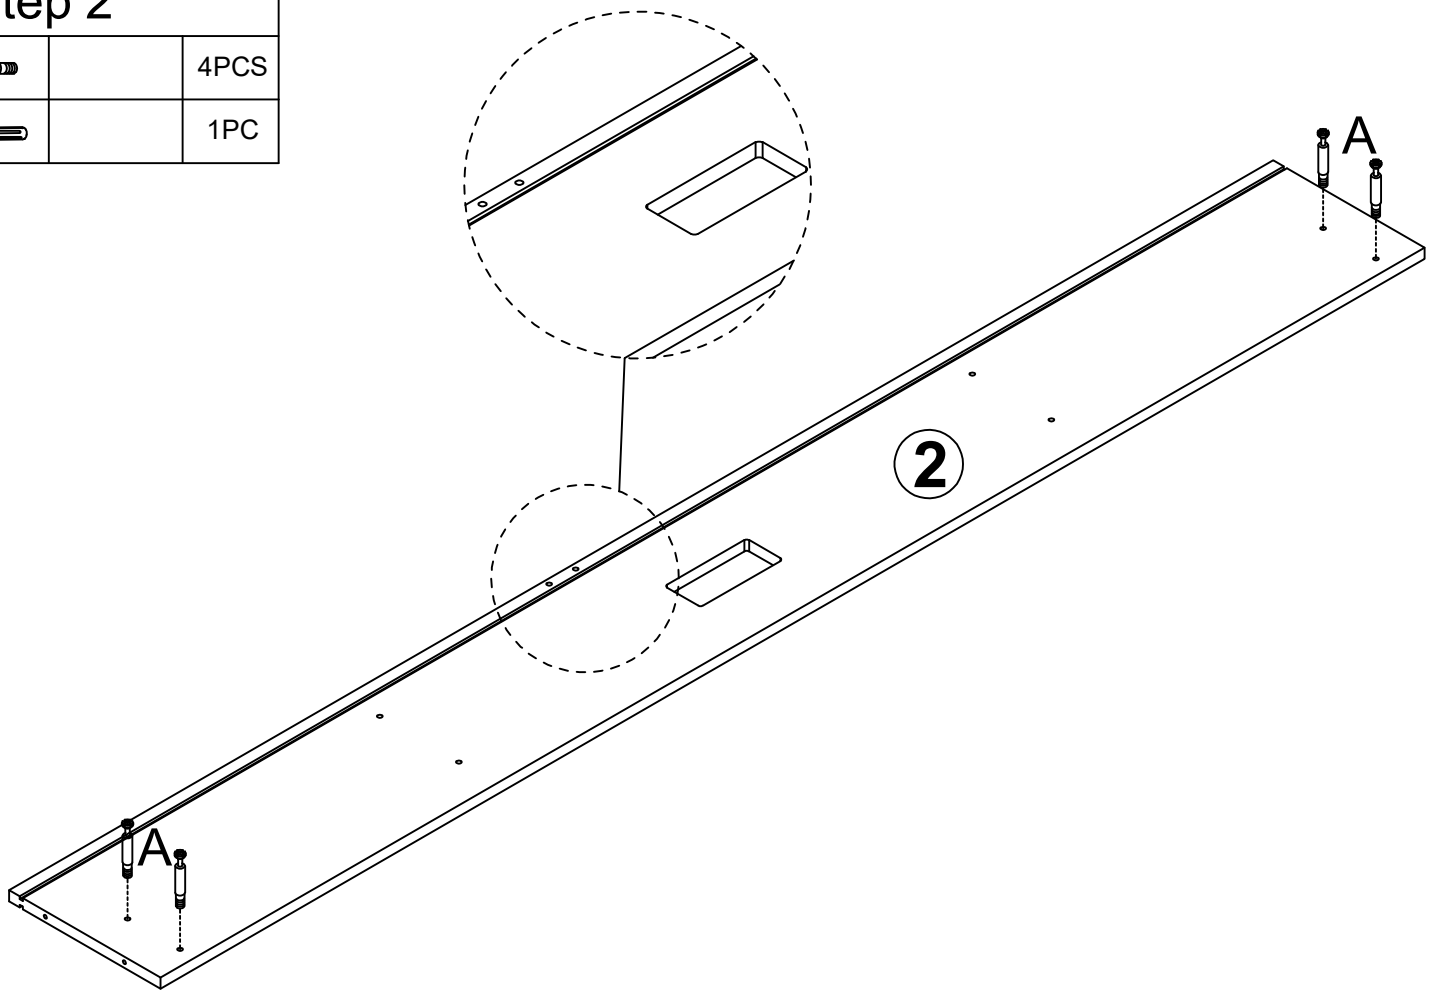
## Step 1

| | | | |
|---|---|---|---|
| E |  | M5x40 | 6PCS |
| V |  | | 1PC |





## Step 2

| | | | |
|---|---|---|---|
| A |  | | 4PCS |
| V |  | | 1PC |




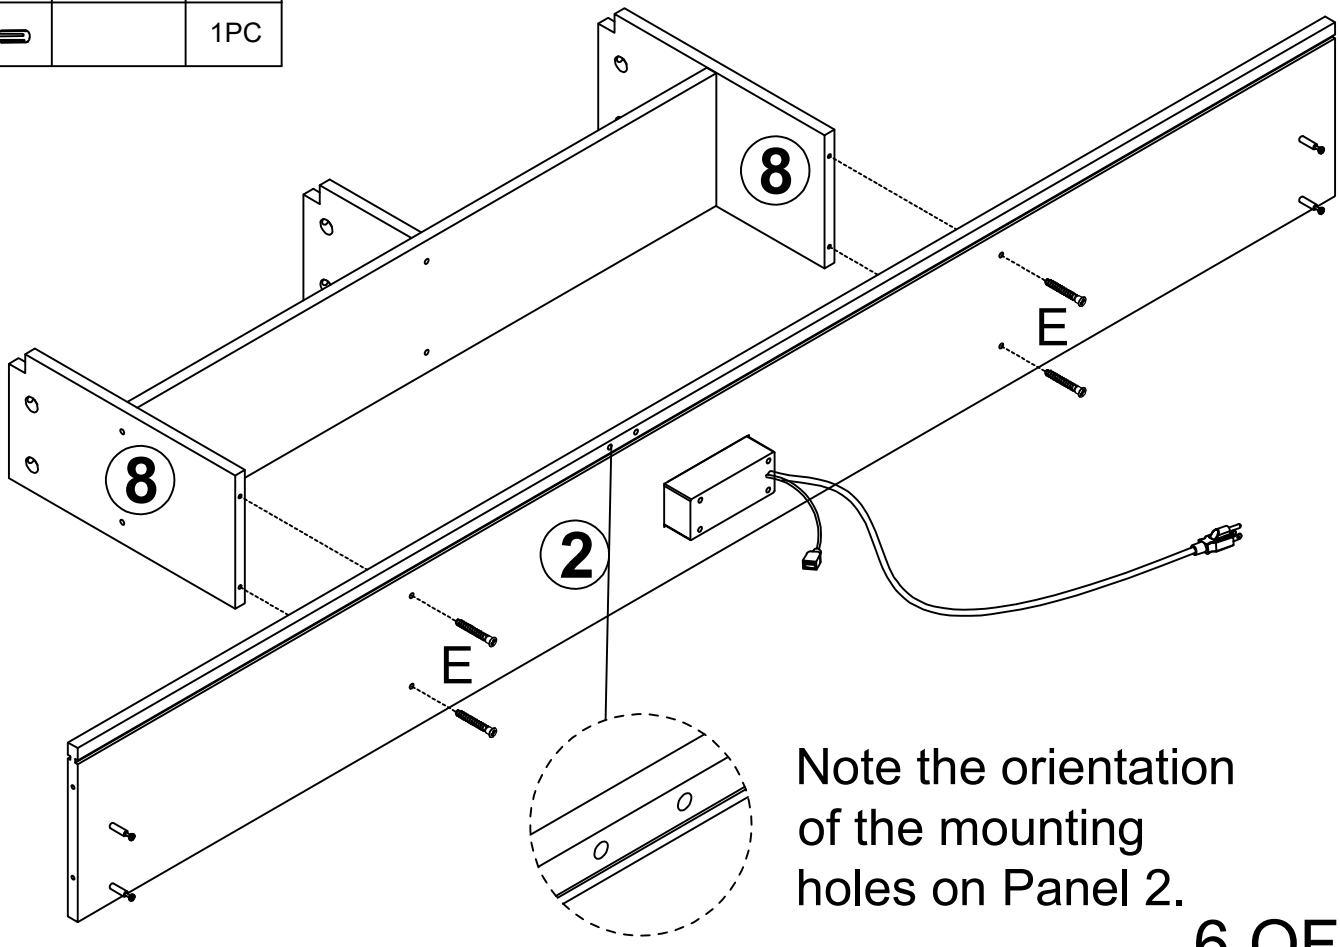
## Step 3

| | | | |
|---|---|---|---|
| C |  | M3.5X12 | 2PCS |
| V |  | | 1PC |




## Step 4

| | | | |
|---|---|---|---|
| E |  | M5x40 | 4PCS |
| V |  | | 1PC |




Note the orientation of the mounting holes on Panel 2.

## Step 5

| | | | |
|---|---|---|---|
| B |  | | 4PCS |
| V |  | | 1PC |





**Cam Lock Fastening System**

Insert the cam bolt into the hole first, then insert the cam lock and lock it.




The opening must point toward the edge of the board

## Step 6

| | | | |
|---|---|---|---|
| E |  | M5x40 | 8PCS |
| V |  | | 1PC |

## Step 7

| | | | |
|---|---|---|---|
| G |  | M8x16 | 4PCS |
| Y |  | M5 | 1PC |

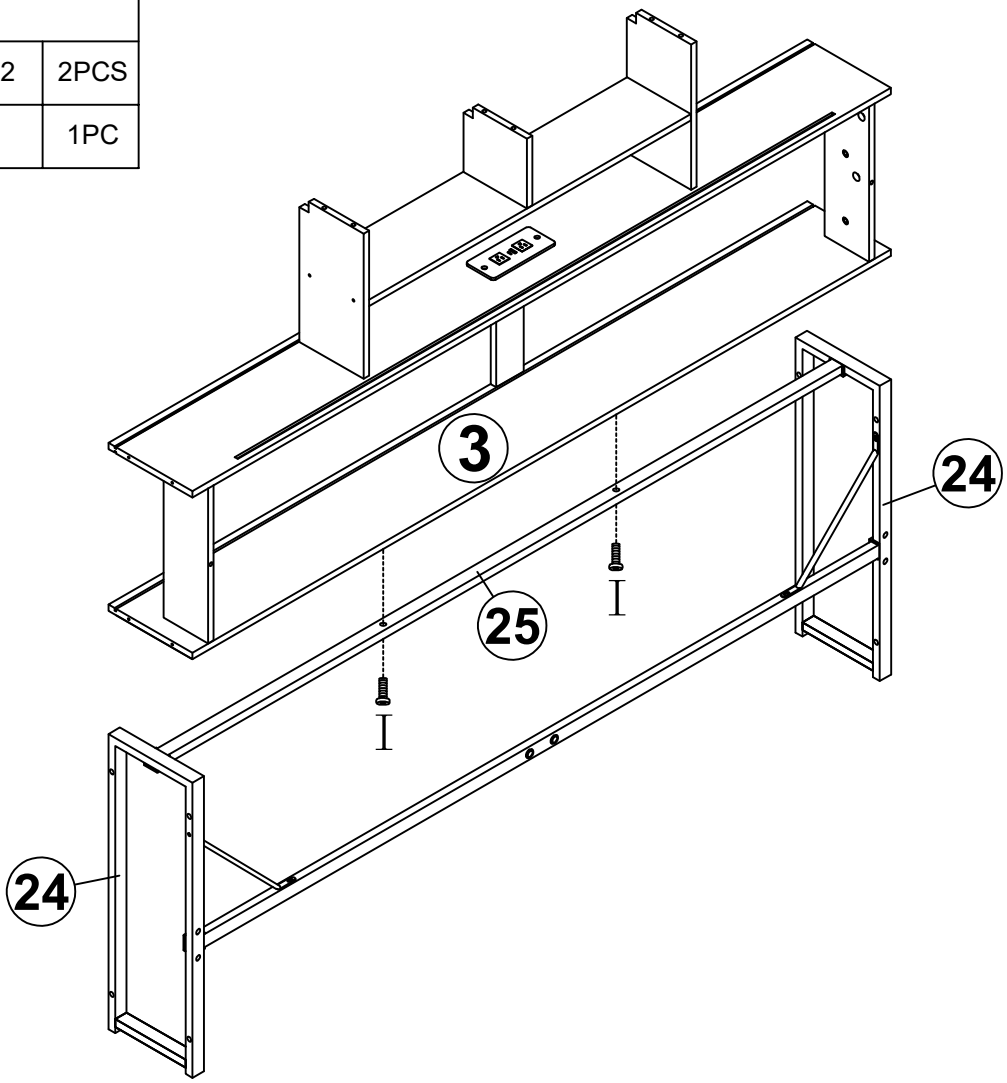



## Step 8


| | | | |
|---|---|---|---|
| K |  | M6x10 | 4PCS |
| X |  | M4 | 1PC |

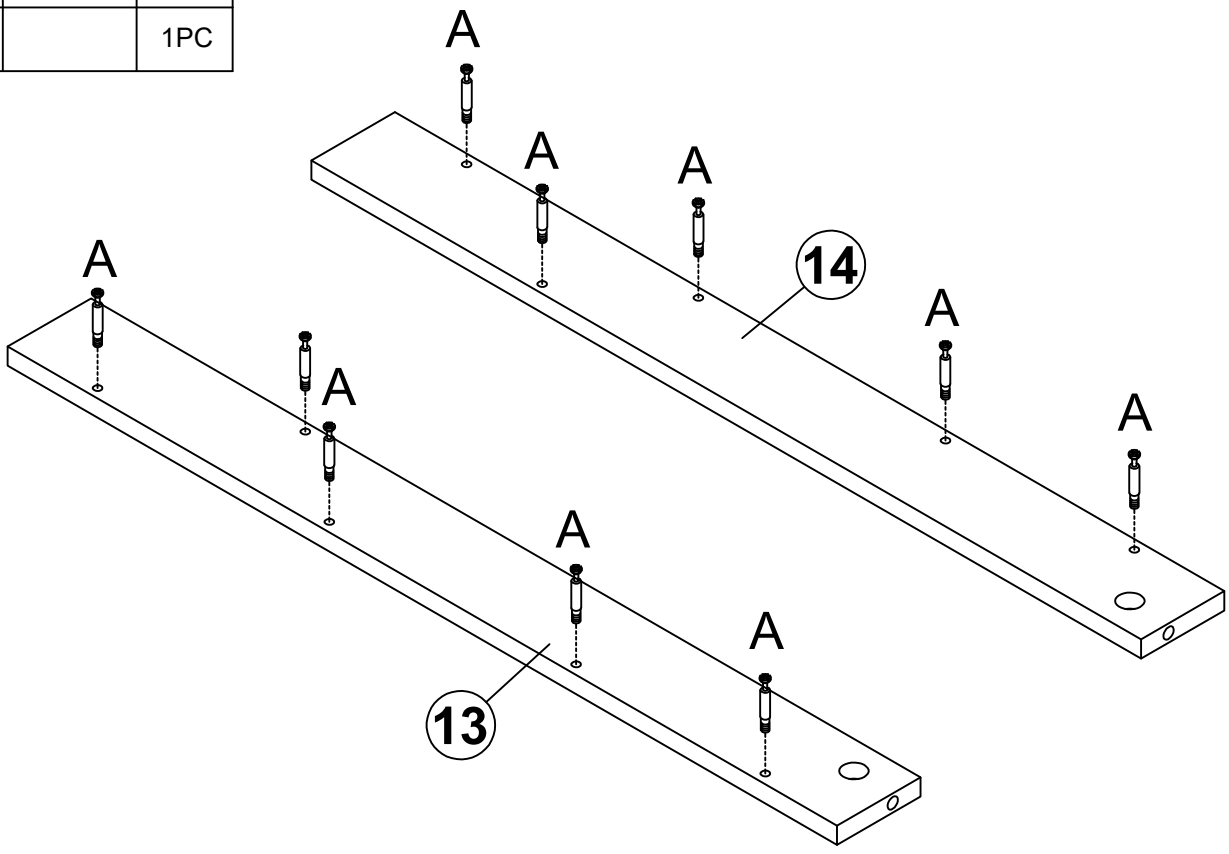
## Step 9

| | | | |
|---|---|---|---|
| I |  | M6x22 | 2PCS |
| X |  | M4 | 1PC |



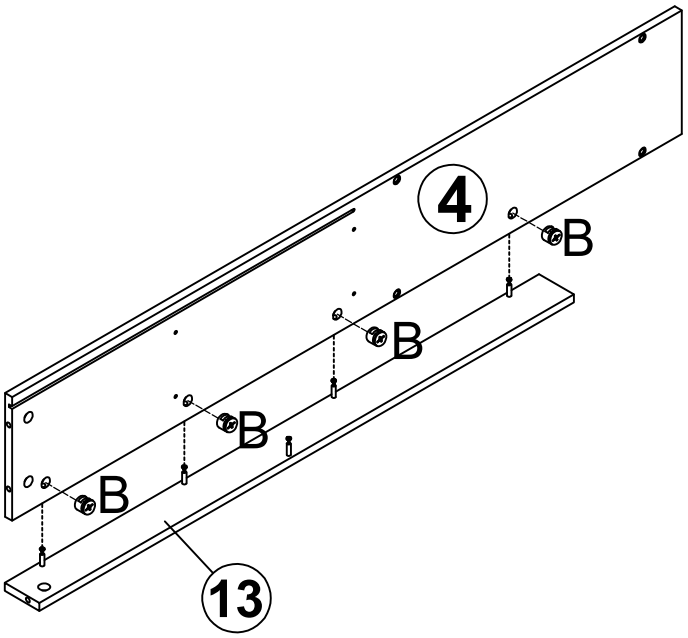

## Step 10

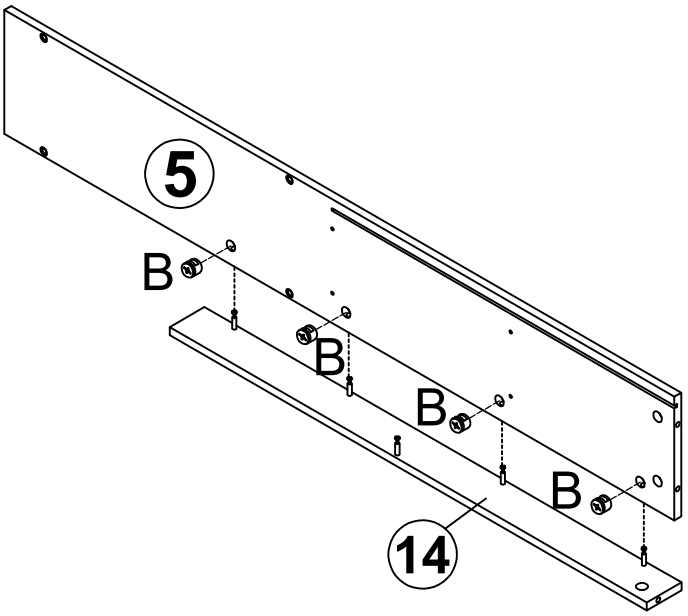
| | | | |
|---|---|---|---|
| A |  | | 10PCS |
| V |  | | 1PC |




## Step 11

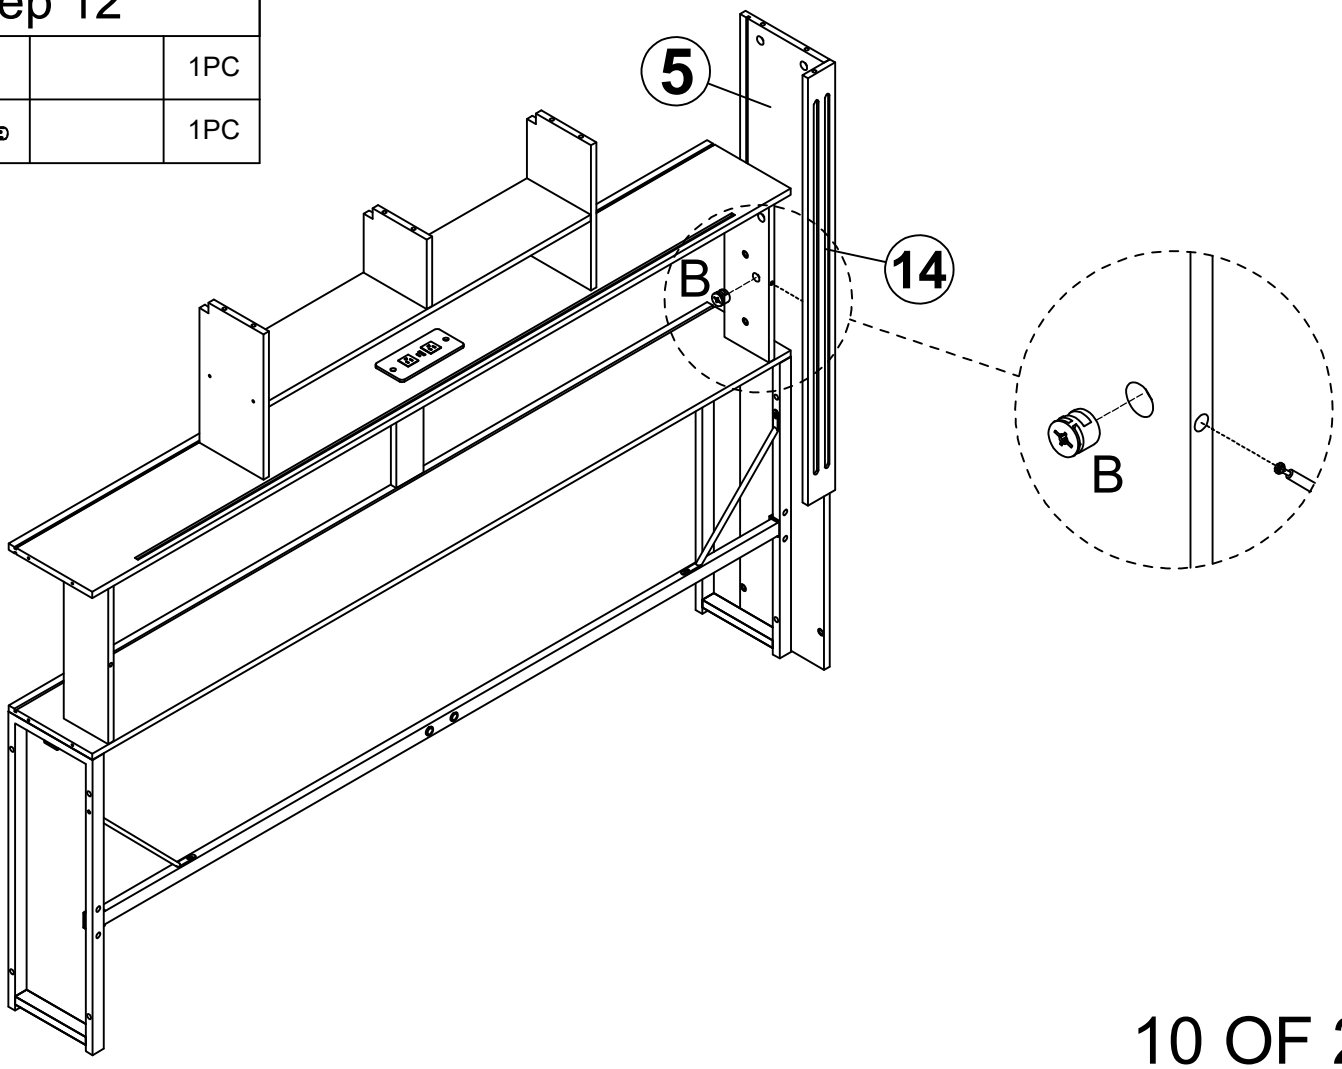
| | | | |
|---|---|---|---|
| B |  | | 8PCS |
| V |  | | 1PC |



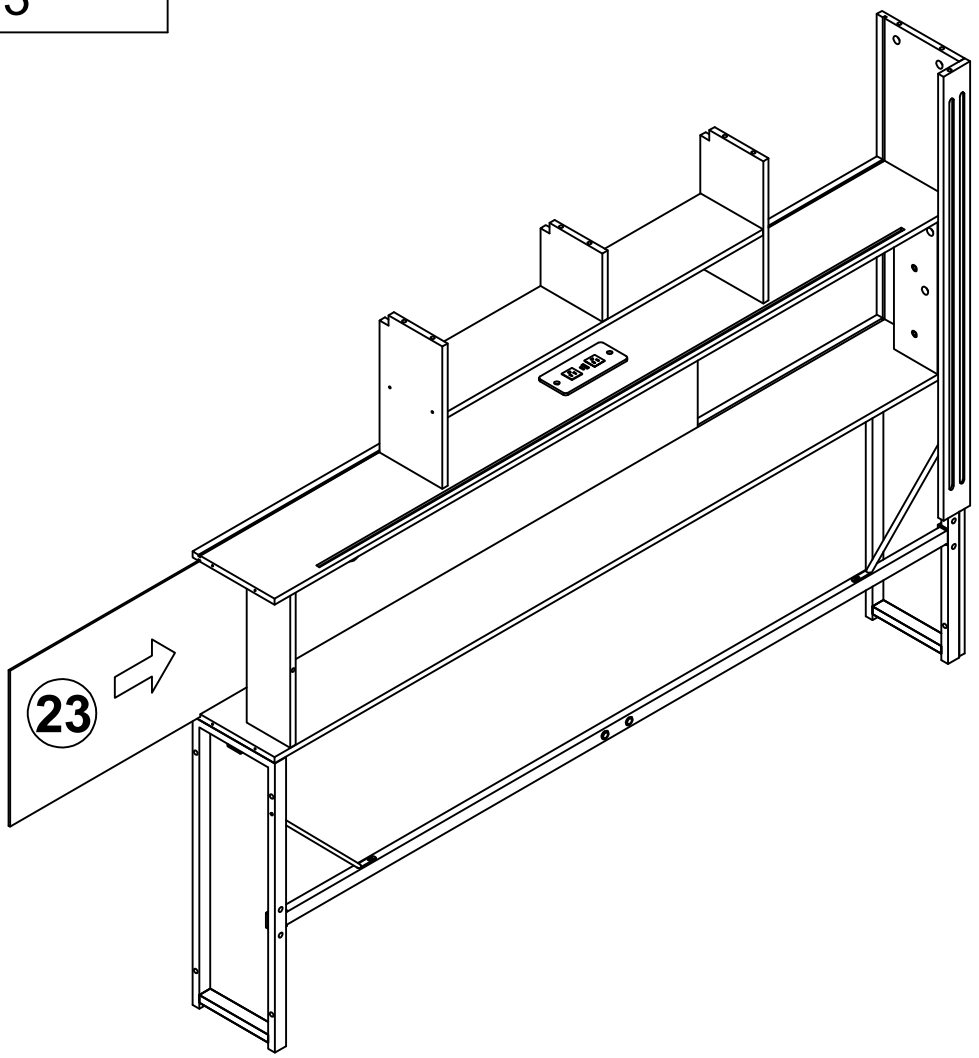




## Step 12

| | | | |
|---|---|---|---|
| B |  | | 1PC |
| V |  | | 1PC |

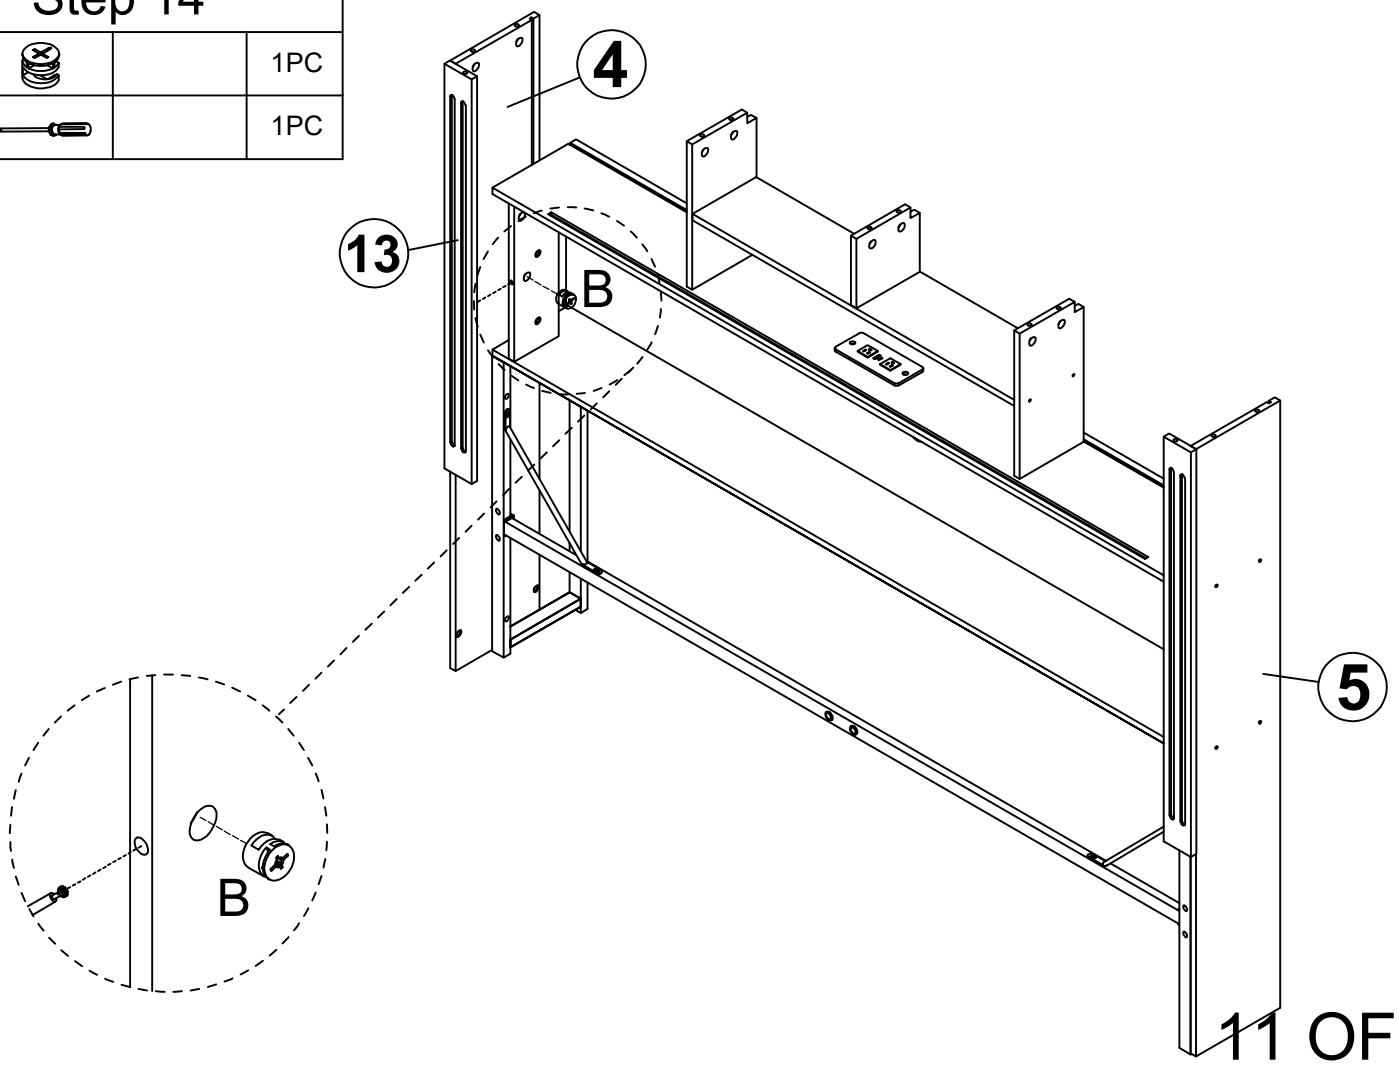


## Step 13




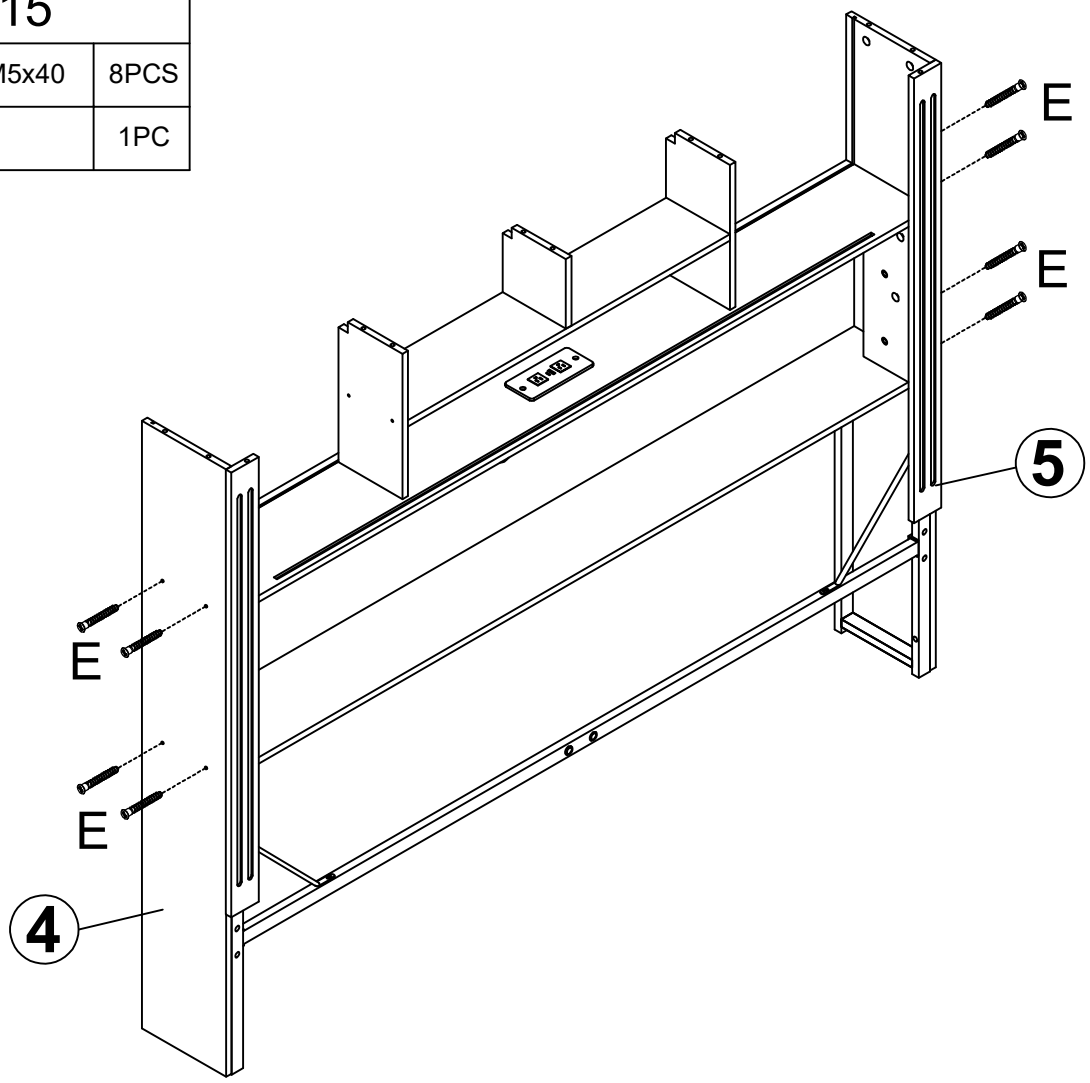

## Step 14

| | | | |
|---|---|---|---|
| B | | | 1PC |
| V | | | 1PC |



## Step 15

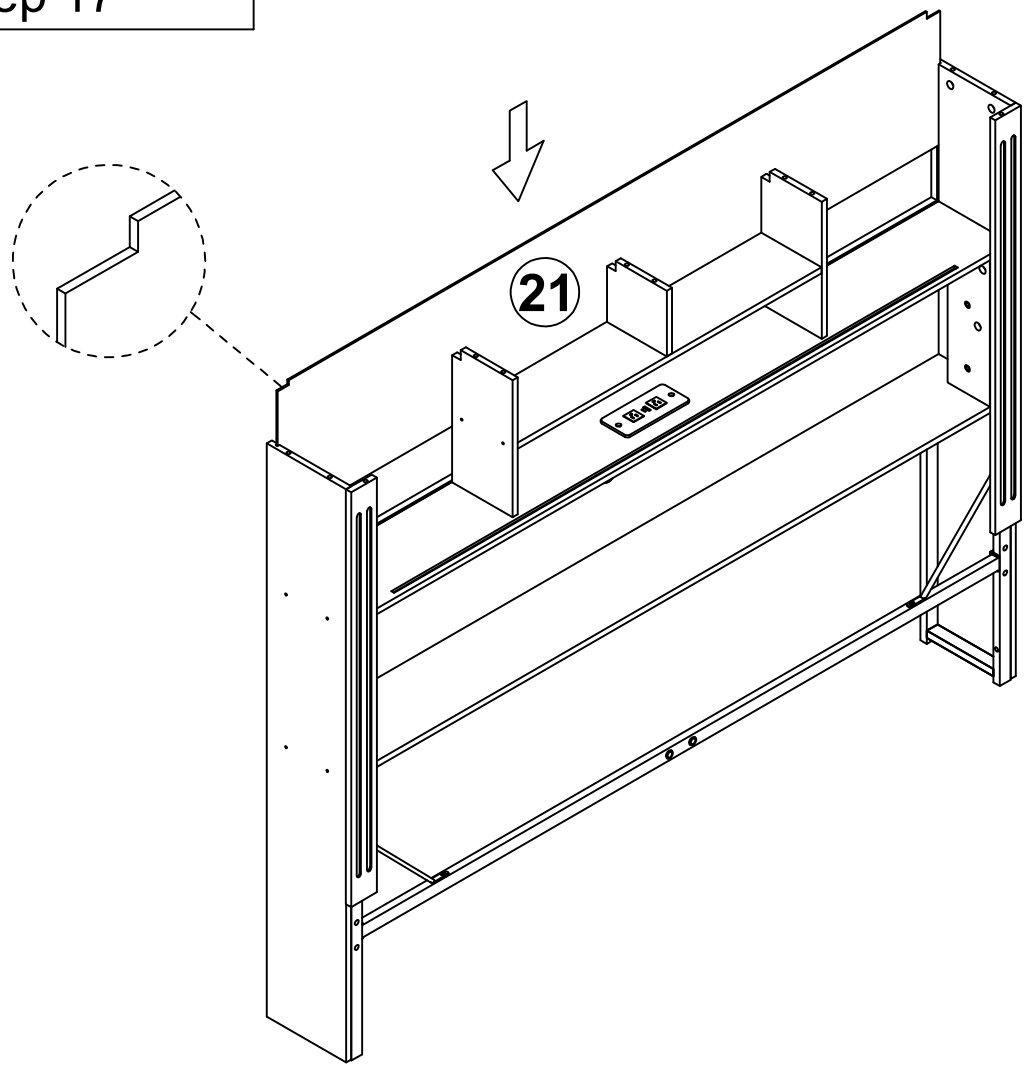
| | | | |
|---|---|---|---|
| E |  | M5x40 | 8PCS |
| V |  | | 1PC |




## Step 16

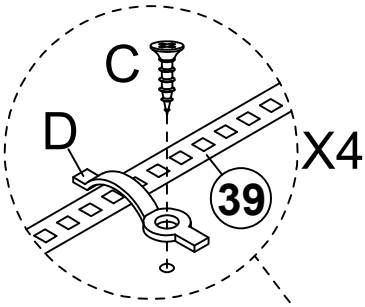
| | | | |
|---|---|---|---|
| H |  | M6x32 | 8PCS |
| X |  | M4 | 1PC |

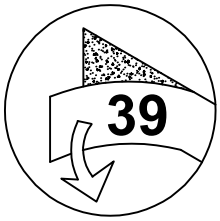
## Step 17




## Step 18

| | | | |
|---|---|---|---|
| C |  | M3.5X12 | 4PCS |
| D |  | | 4PCS |
| V |  | | 1PC |





Tear off the back glue of the light strip.

## Step 19

| | | | |
|---|---|---|---|
| A |  | | 12PCS |
| V |  | | 1PC |




## Step 20

| | | | |
|---|---|---|---|
| B |  | | 12PCS |
| V |  | | 1PC |
| F |  | | 10PCS |

Note that the groove on (1) is on the back side.




⚠ DUMP WITH CARE


⚠ RECOMMEND 2 OR MORE ADULTS FOR QUICKER ASSEMBLY

## Step 21

| | | | |
|---|---|---|---|
| A |  | | 6PCS |
| V |  | | 1PC |




## Step 22

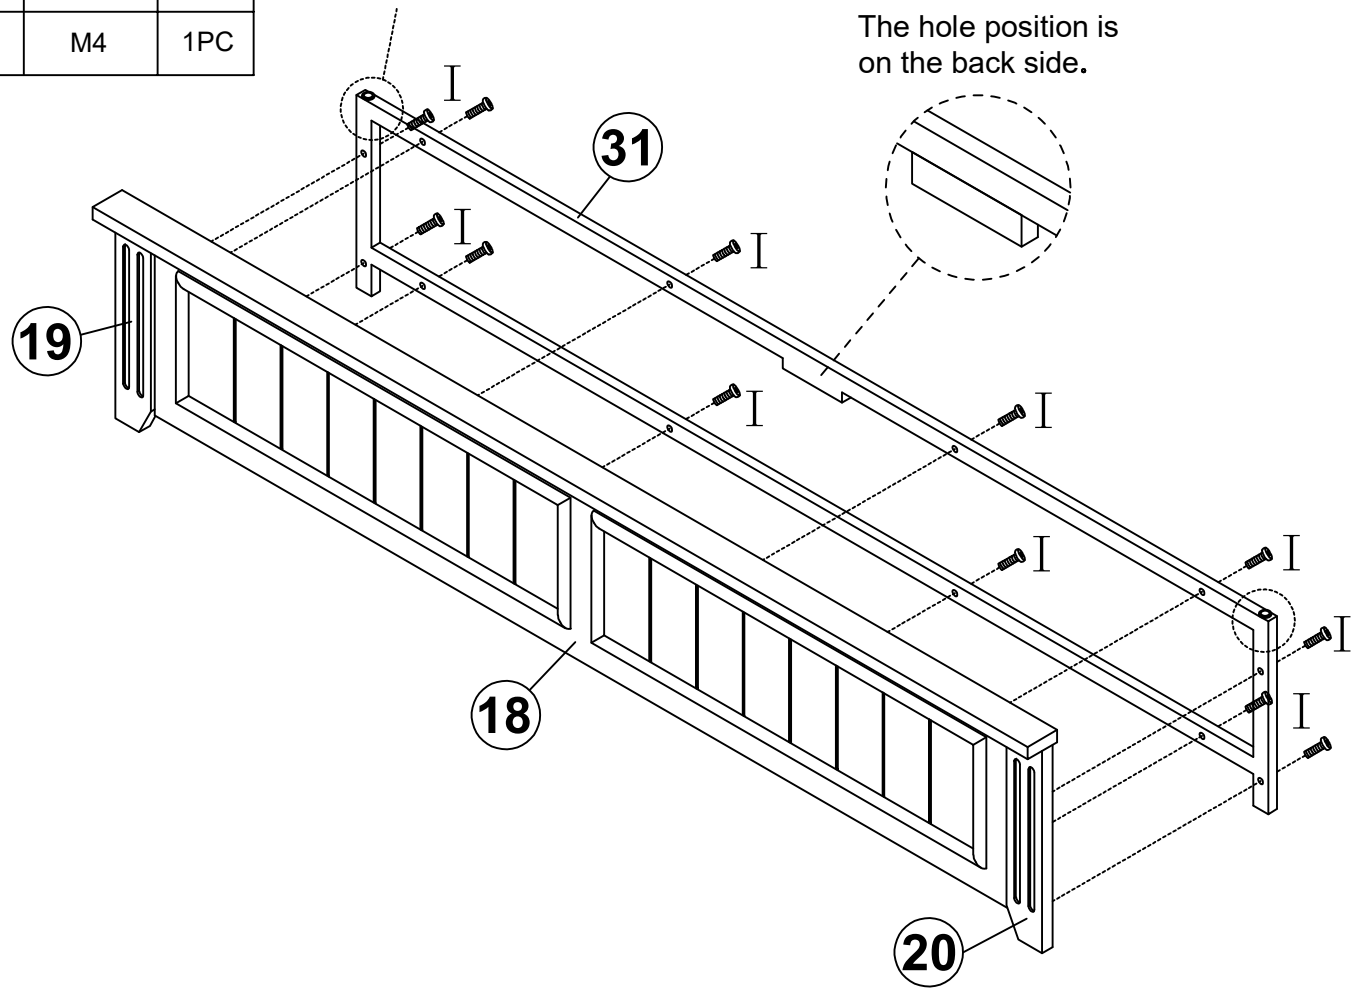
| | | | |
|---|---|---|---|
| B |  | | 6PCS |
| V |  | | 1PC |




⚠ Pay attention to the installation direction of the 17th board.

## Step 23

| | | | |
|---|---|---|---|
| I |  | M6x22 | 12PCS |
| X |  | M4 | 1PC |




## Step 24

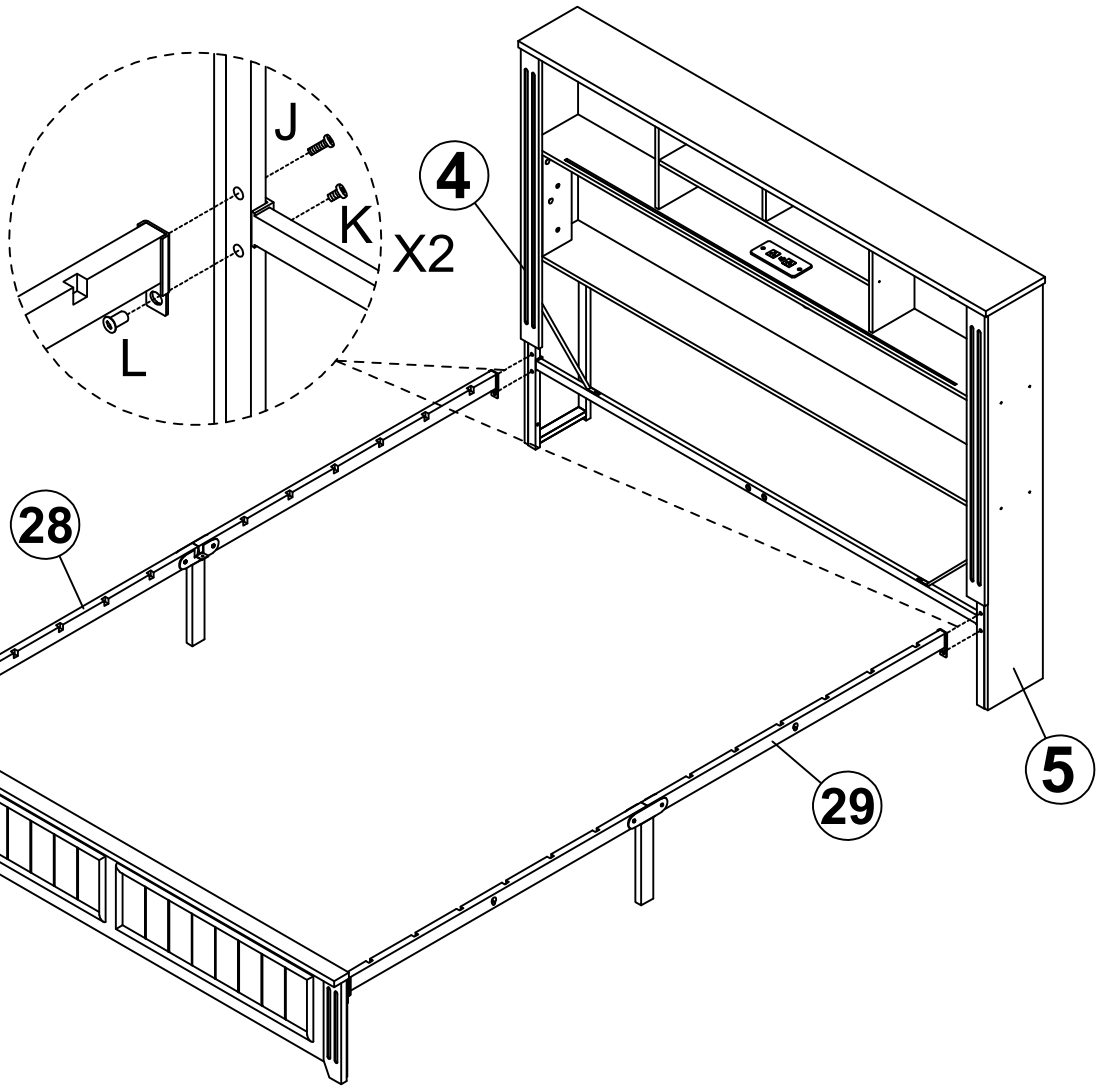
| | | | |
|---|---|---|---|
| G |  | M8x16 | 4PCS |
| Y |  | M5 | 1PC |




Be careful not to get your hand caught.

## Step 25


| | | | |
|---|---|---|---|
| J |  | M8x25 | 2PCS |
| K |  | M6x10 | 2PCS |
| L |  | M6x15 | 2PCS |
| X |  | M4 | 2PCS |
| Y |  | M5 | 1PC |

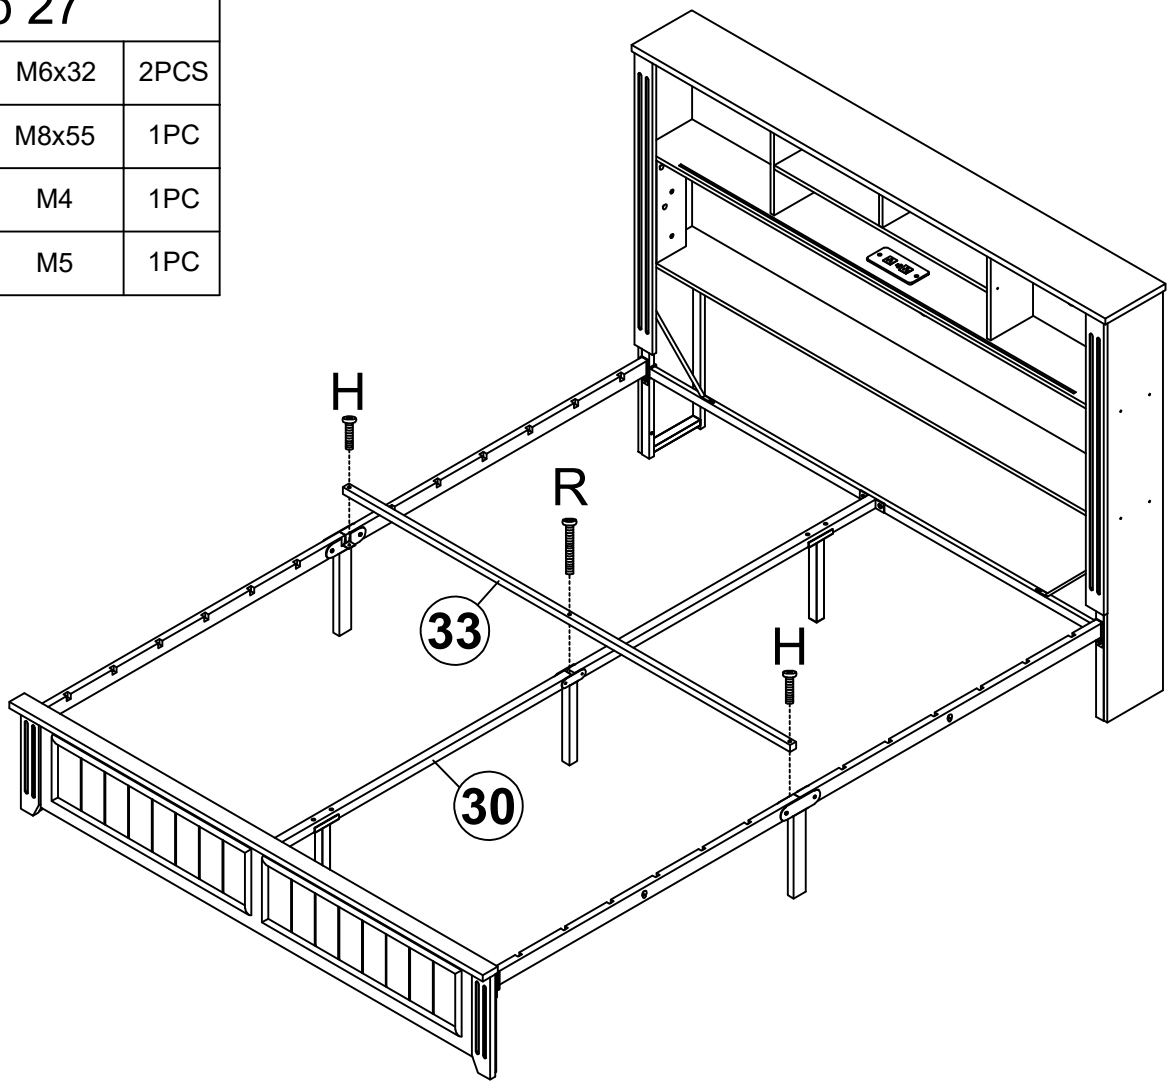



## Step 26


| | | | |
|---|---|---|---|
| G |  | M8x16 | 4PCS |
| M |  | M8x35 | 4PCS |
| Y |  | M5 | 1PC |

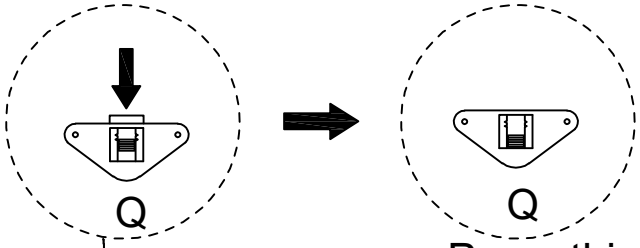
## Step 27

| | | | |
|---|---|---|---|
| H |  | M6x32 | 2PCS |
| R |  | M8x55 | 1PC |
| X |  | M4 | 1PC |
| Y |  | M5 | 1PC |

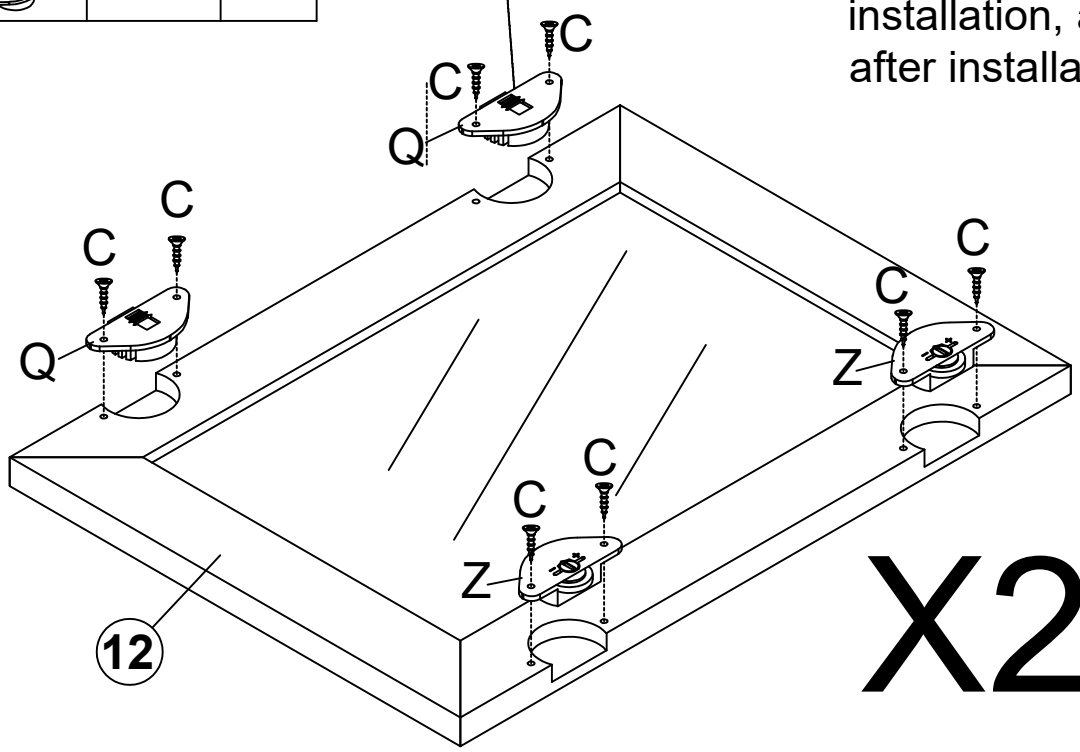



## Step 28

| | | | |
|---|---|---|---|
| C |  | M3.5X12 | 16PCS |
| V |  | | 1PC |
| Q |  | | 4PCS |
| Z |  | | 4PCS |

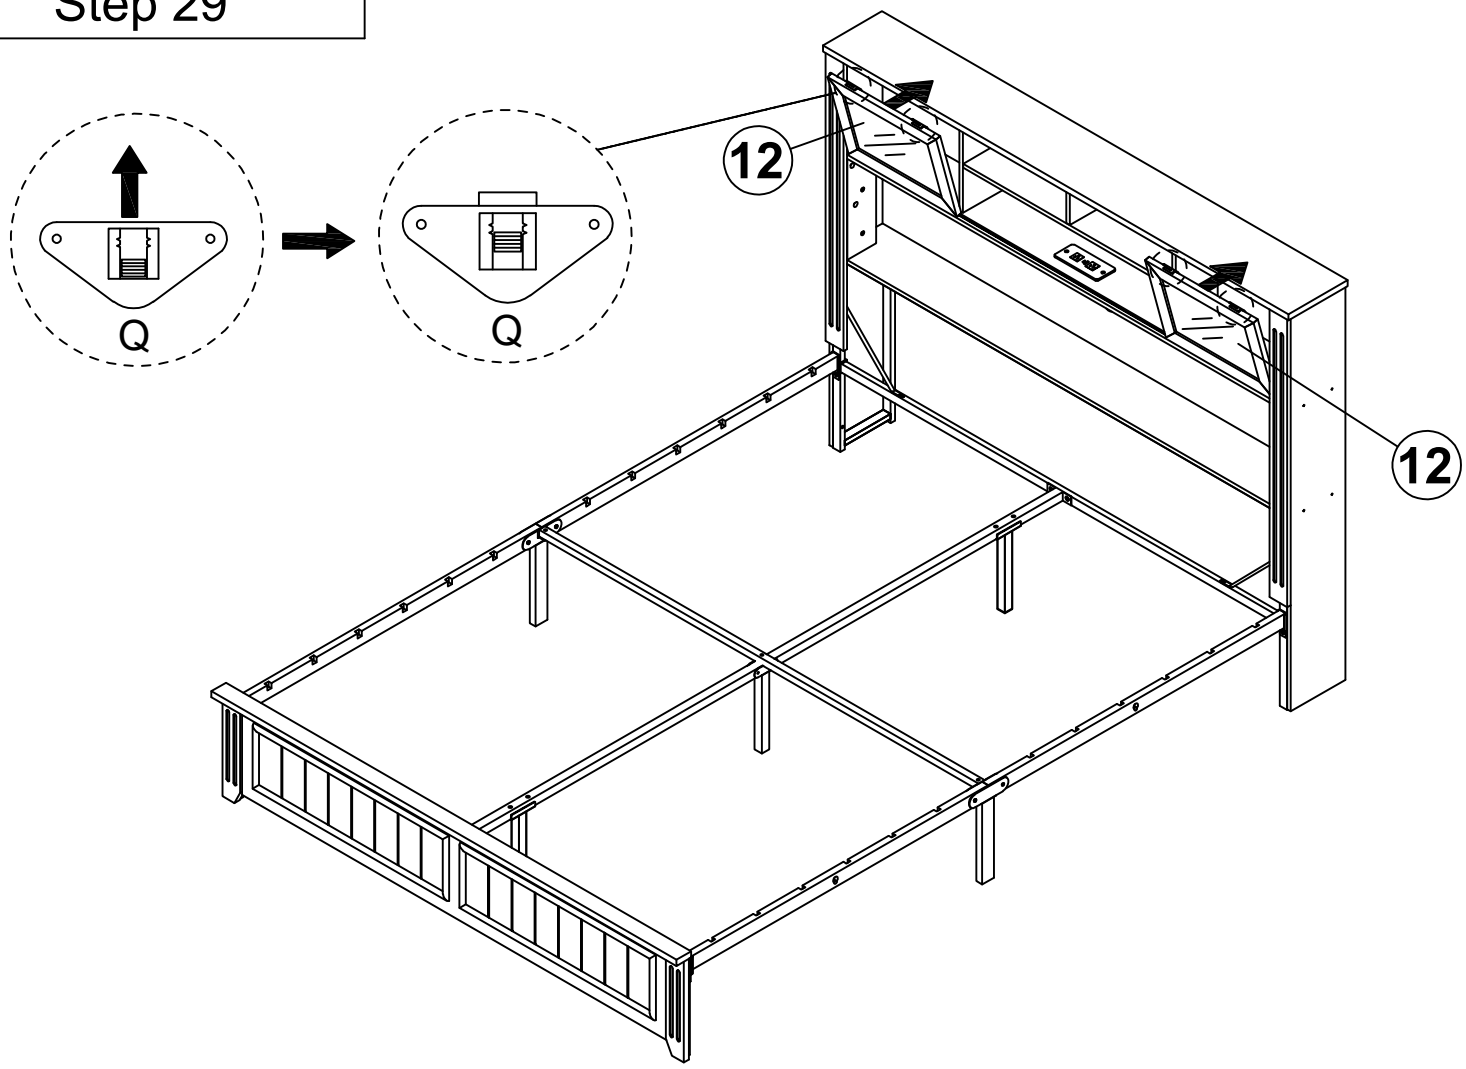



Press this button down during installation, and push it back out after installation is complete.



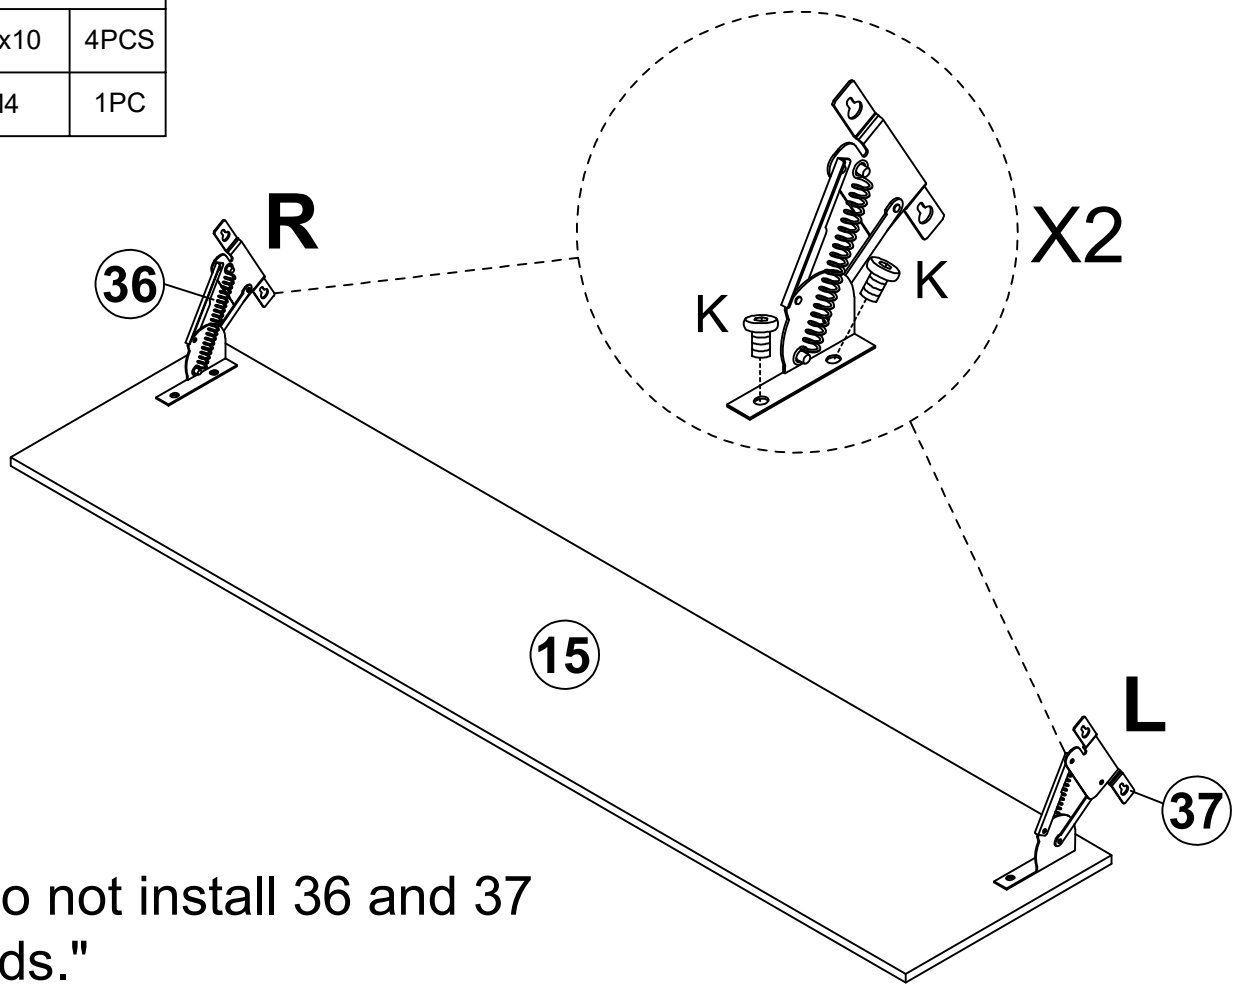

X2

## Step 29




## Step 30

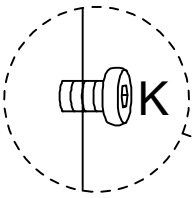
| | | | |
|---|---|---|---|
| K | | M6x10 | 4PCS |
| X | | M4 | 1PC |




"Note: Do not install 36 and 37 backwards."

## Step 31

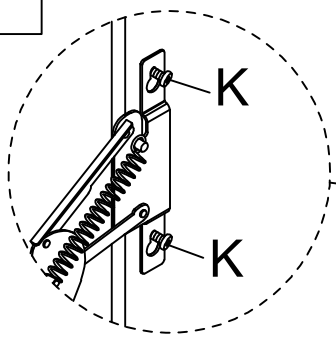
| | | | |
|---|---|---|---|
| K |  | M6x10 | 4PCS |
| X |  | M4 | 1PC |




This step requires the screws to be tightened to only 50%.




## Step 32



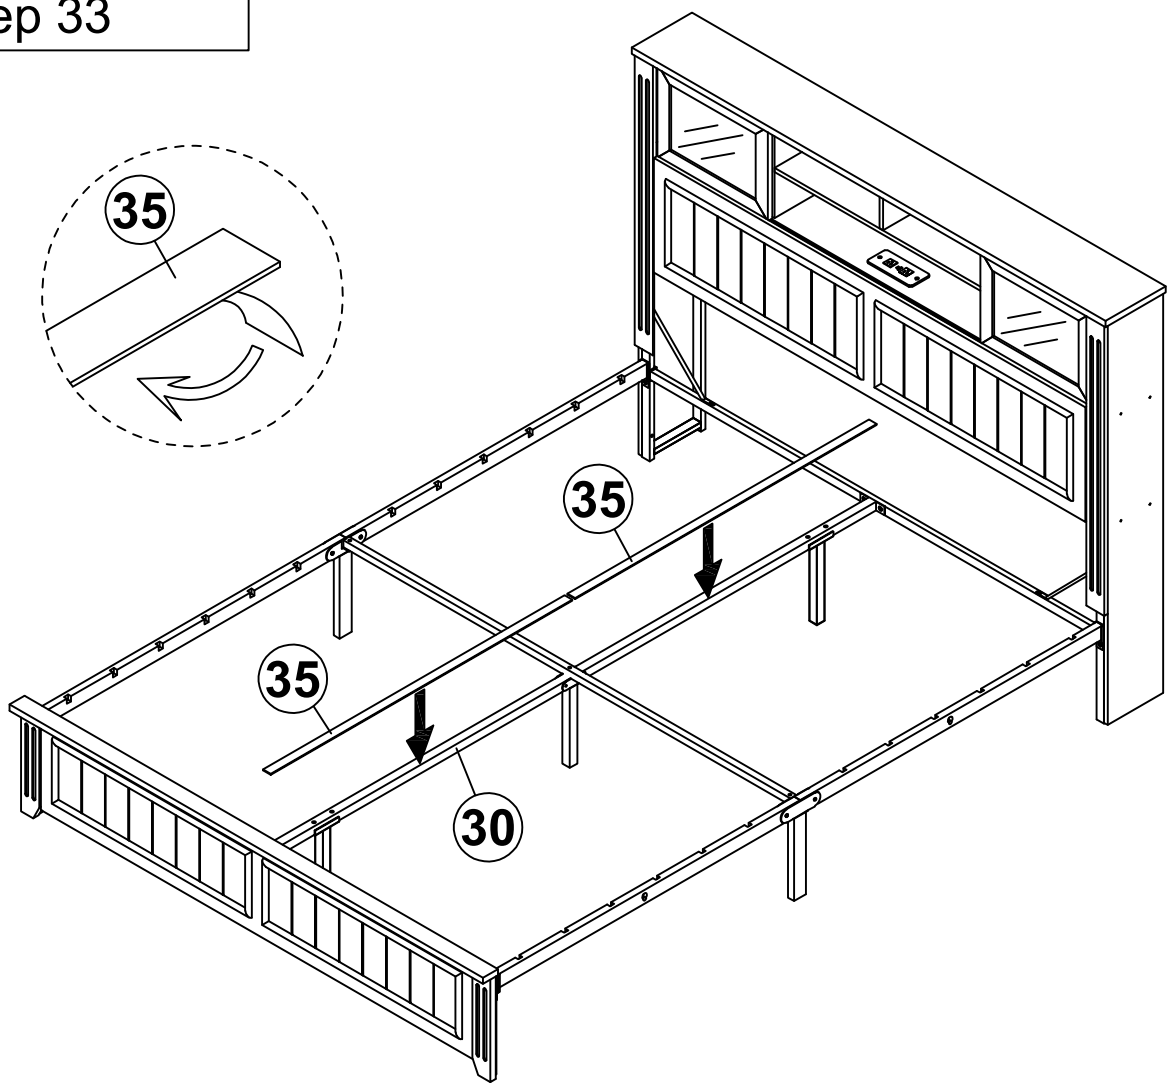

X2




After hanging the hinge on the door panel onto screw K, tighten the screw.

⚠ RECOMMEND 2 OR MORE ADULTS FOR QUICKER ASSEMBLY

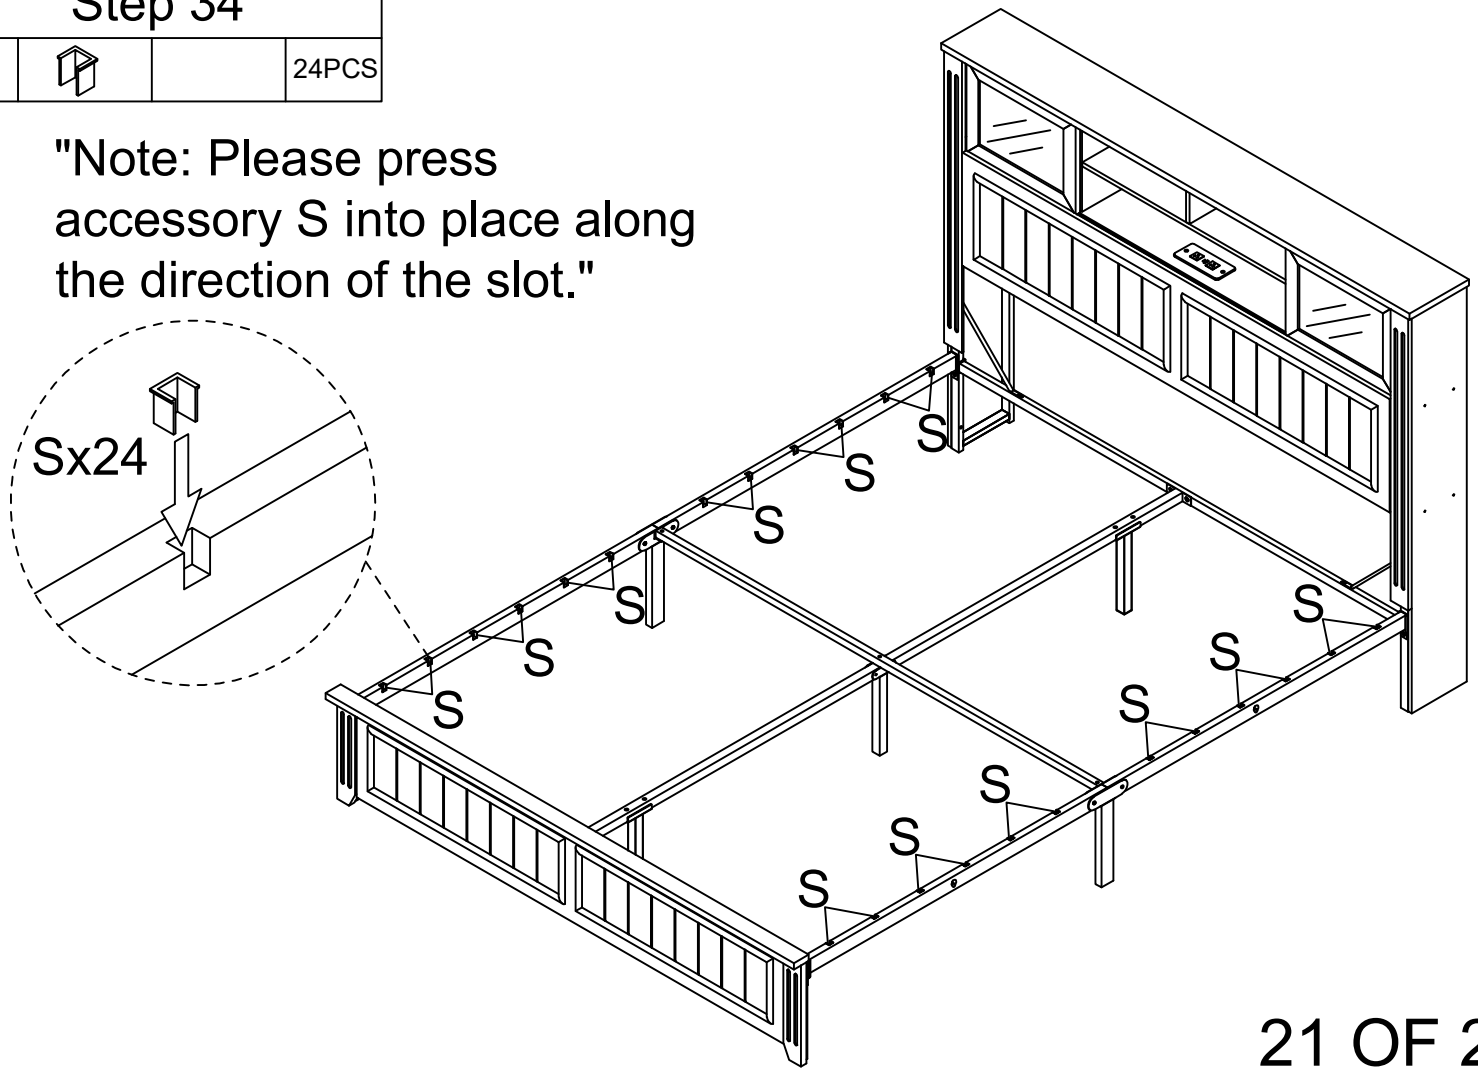
## Step 33



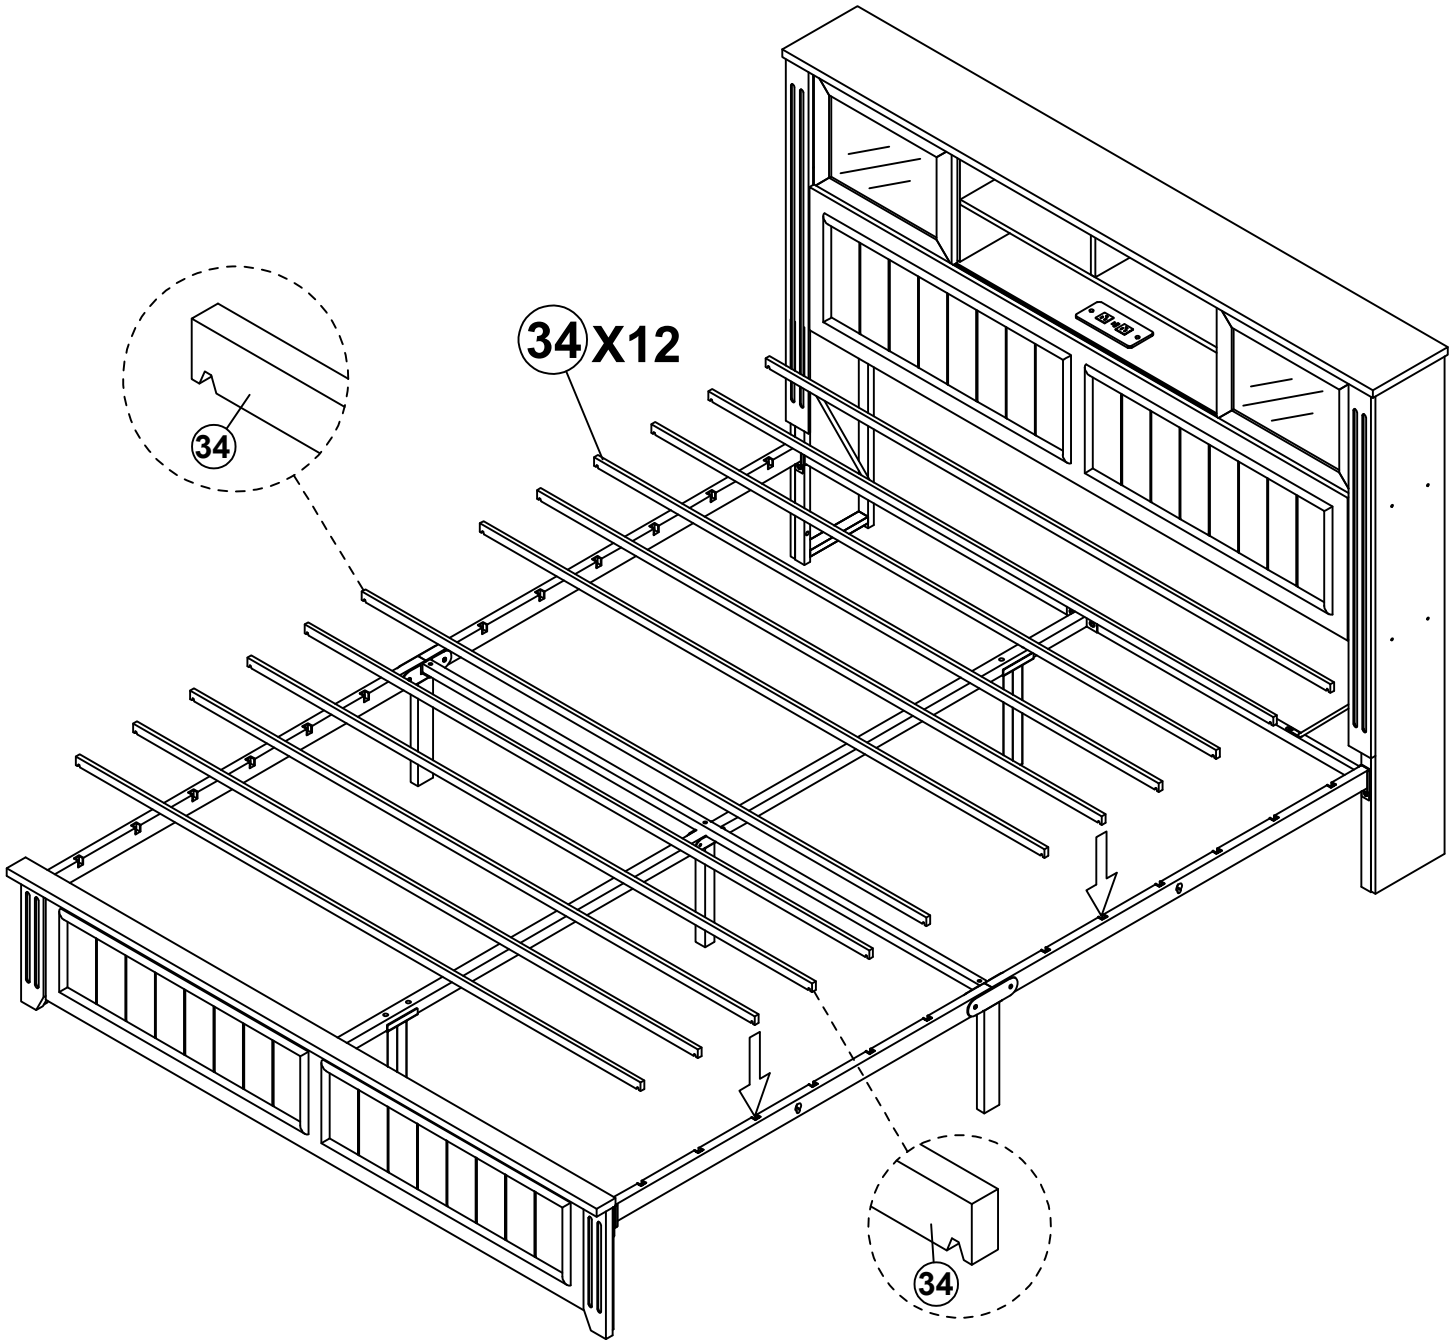

## Step 34

| | | | |
|---|---|---|---|
| S | | | 24PCS |

"Note: Please press accessory S into place along the direction of the slot."

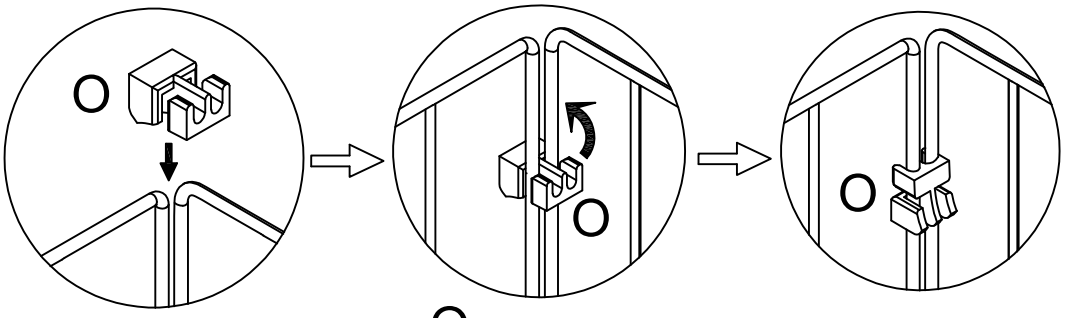


Step 35

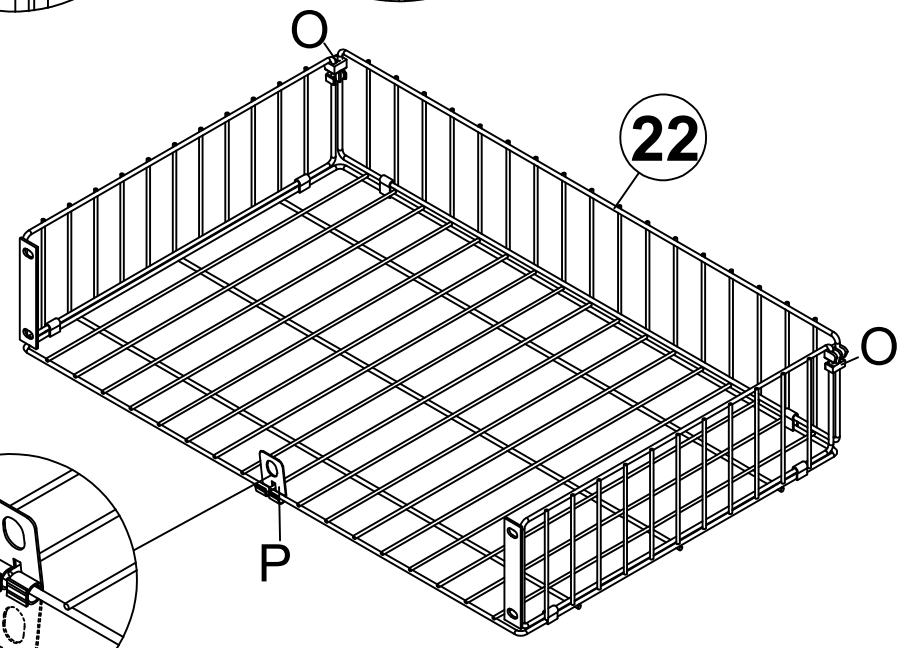


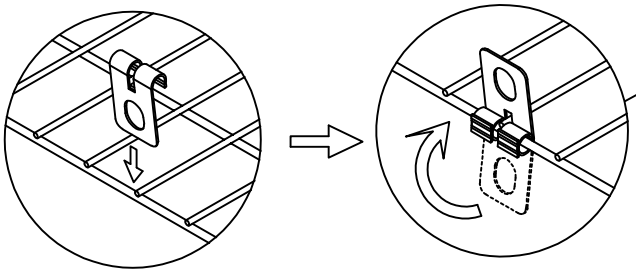
## Step 36

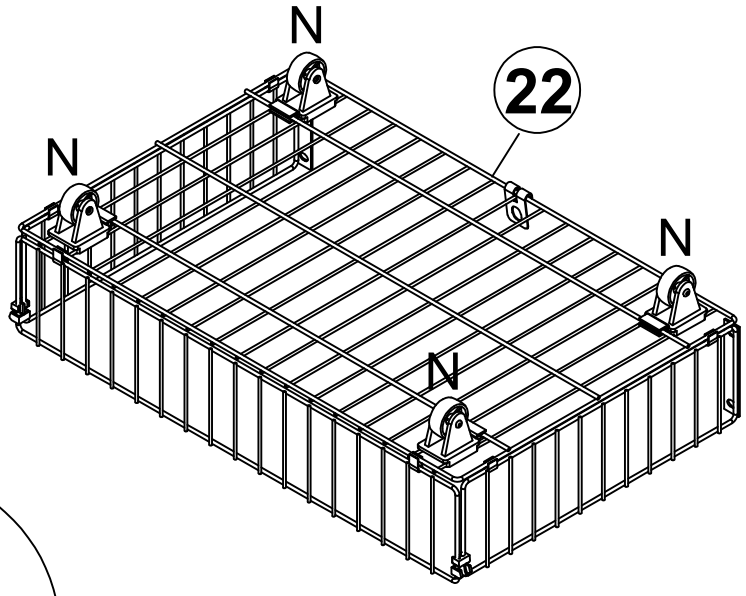
| | | | |
|---|---|---|---|
| N |  | | 16PCS |
| O |  | | 8PCS |
| P |  | | 4PCS |



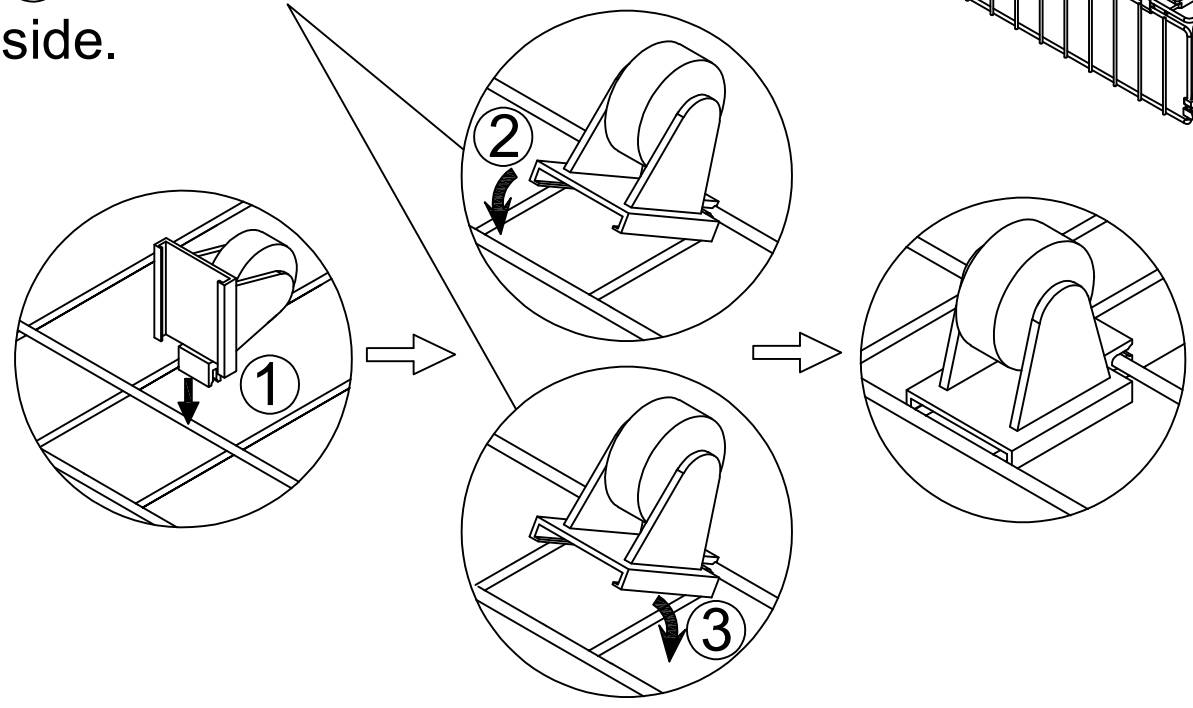

X4





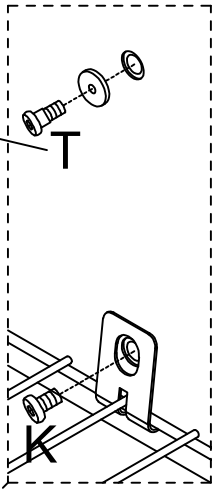

Attention: ② make sure plastic slot stuck into one side of the tube firstly, and ③ then to stuck into anther side.

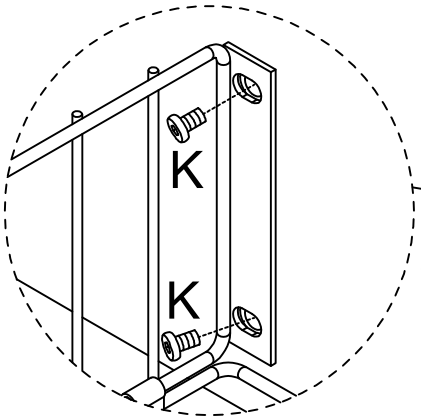


## Step 37

| | | | |
|---|---|---|---|
| K |  | M6x10 | 20PCS |
| T |  | | 4PCS |
| X |  | M4 | 1PC |

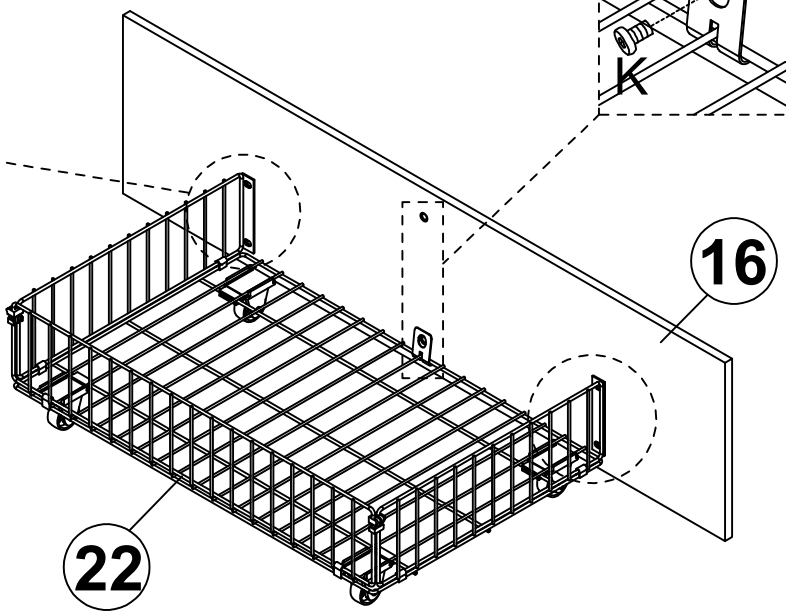
Note: Please don't fully tighten T screws to the board.



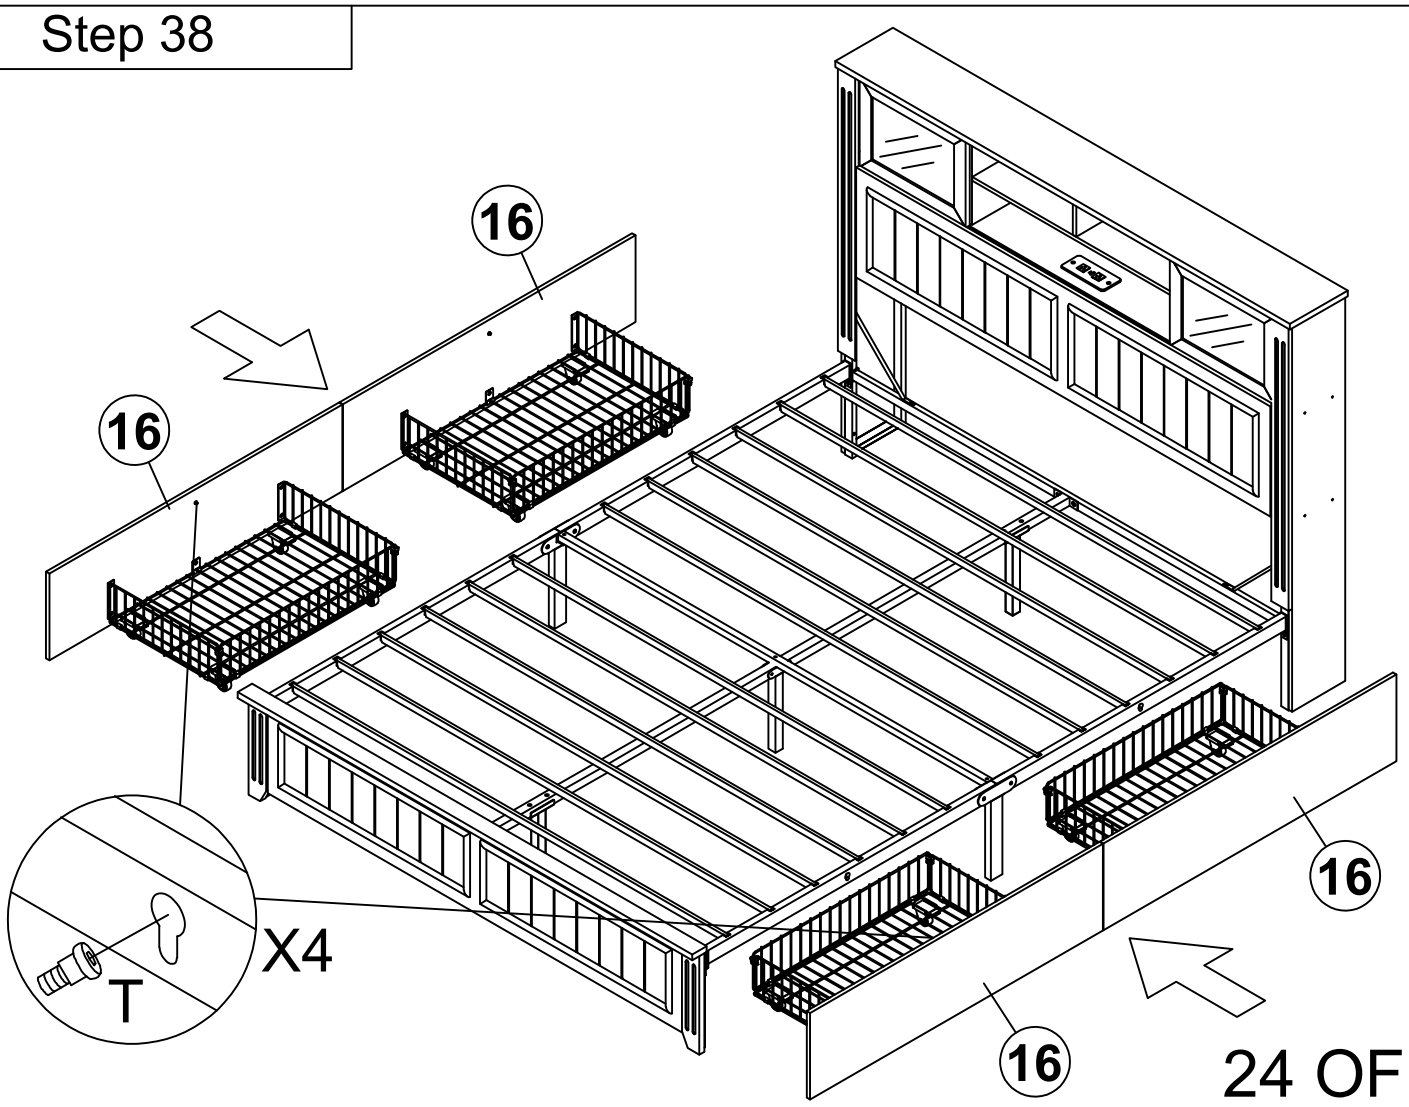




X2

X4

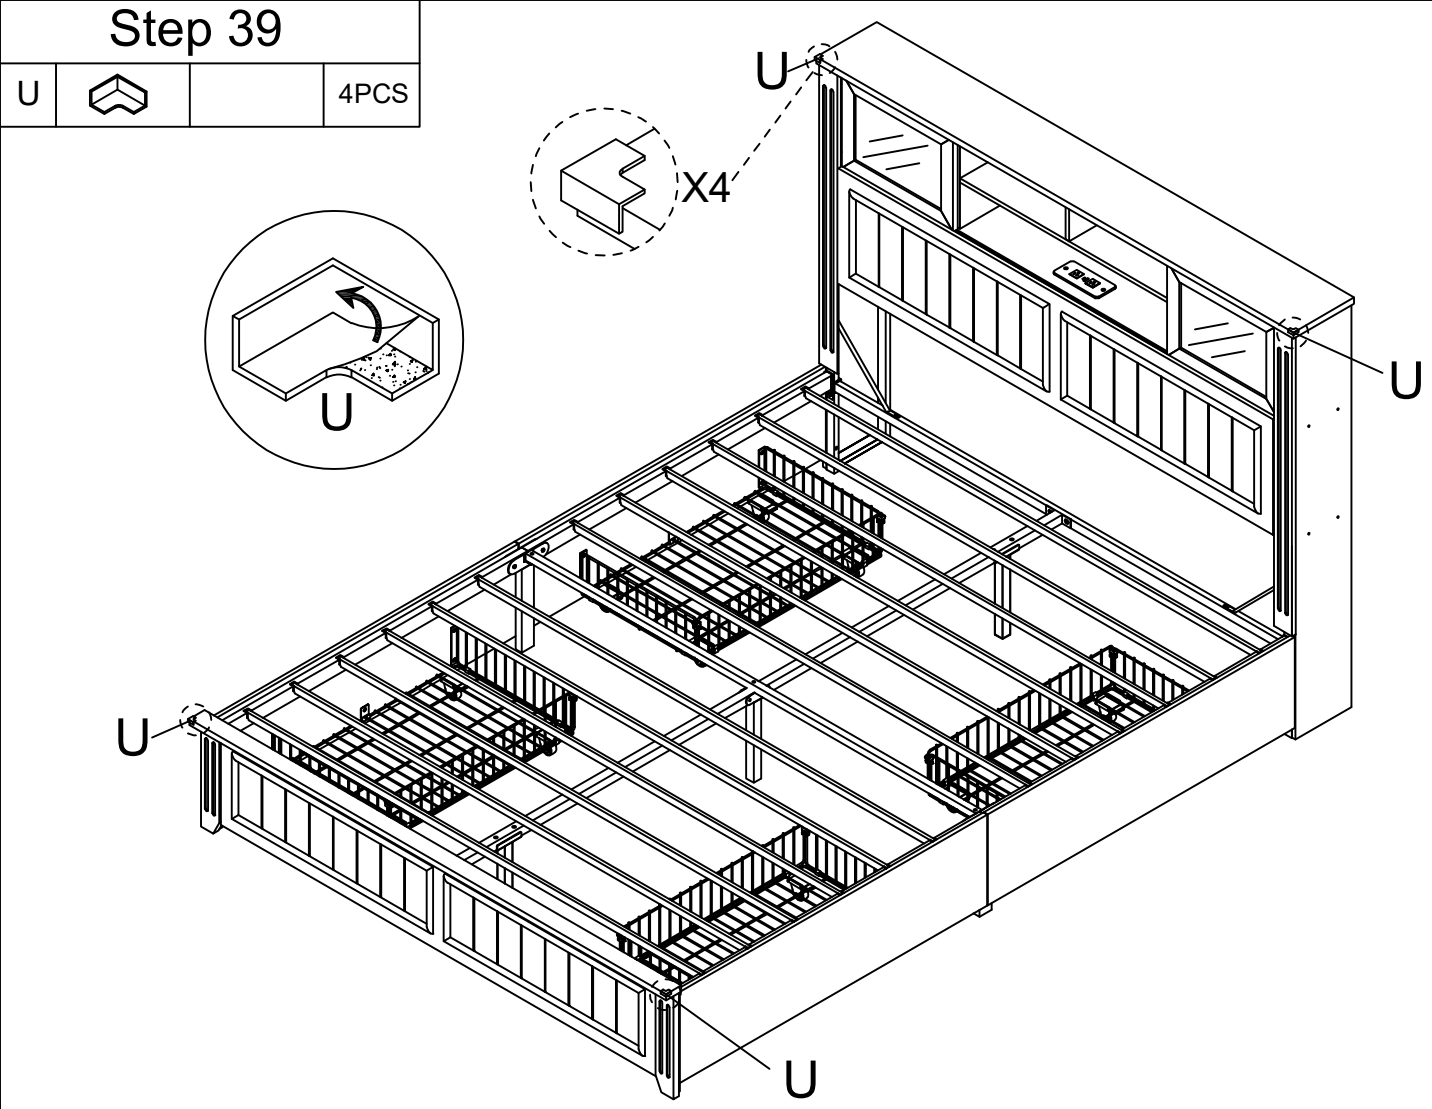



## Step 38

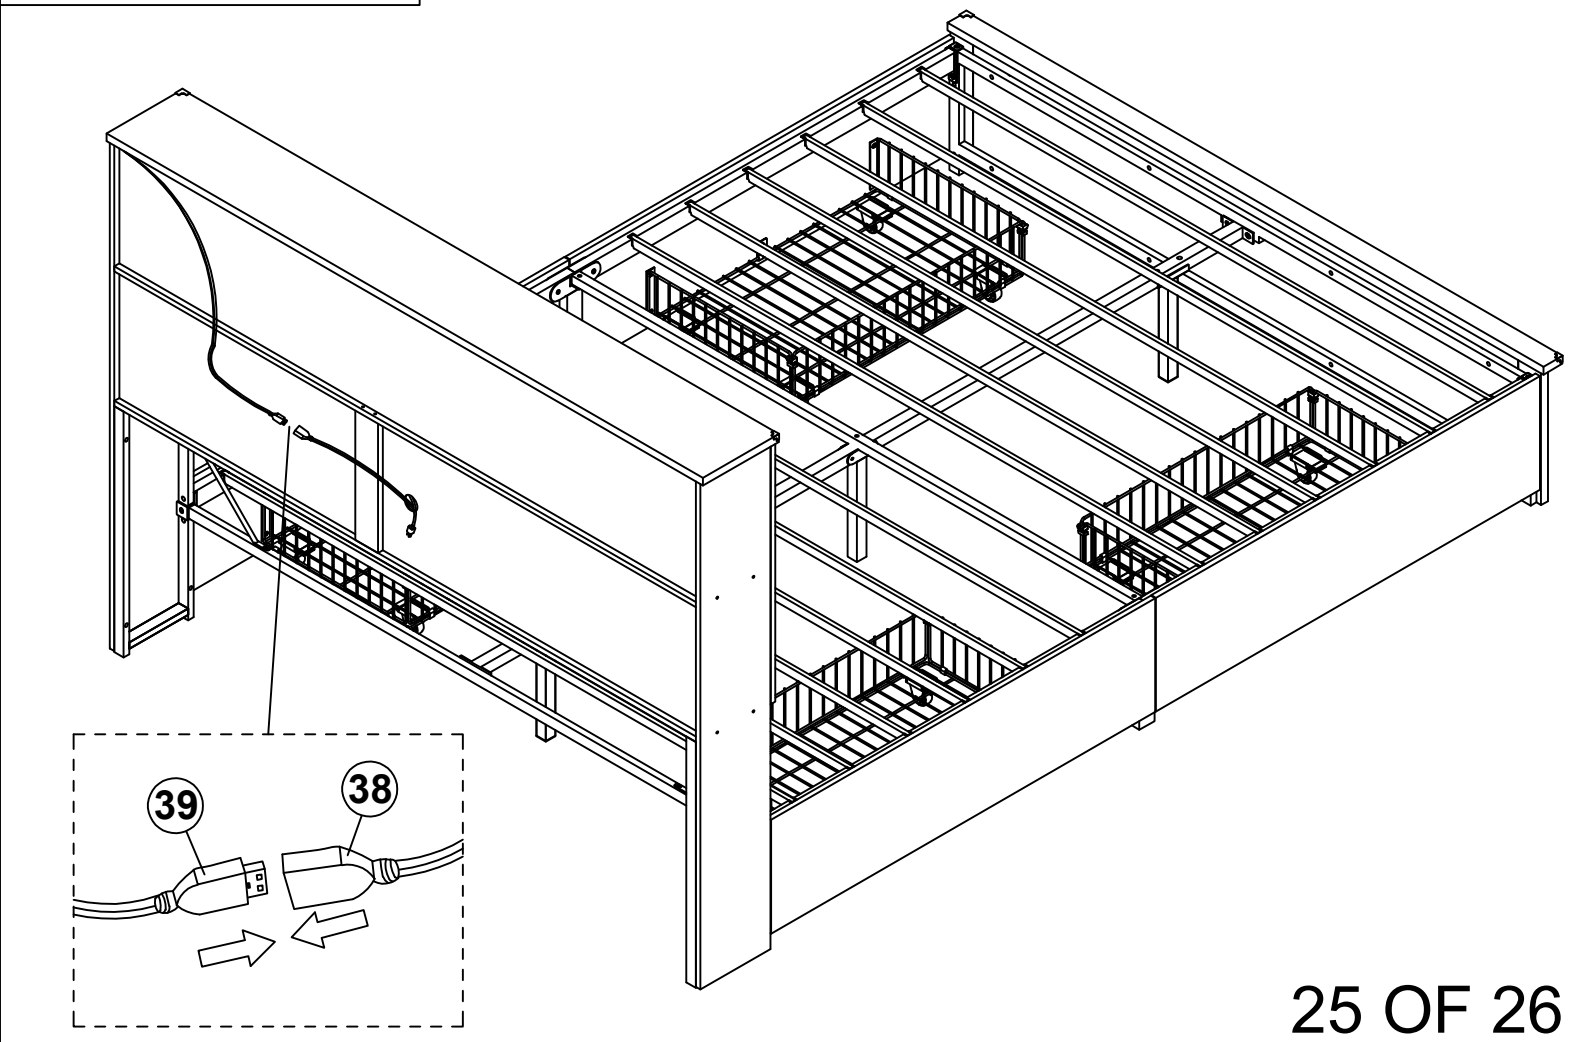


## Step 39


| | | | |
|---|---|---|---|
| U | | | 4PCS |

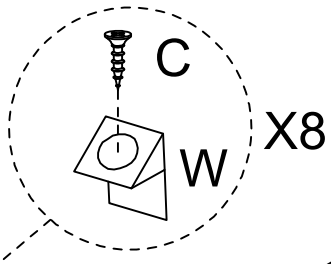


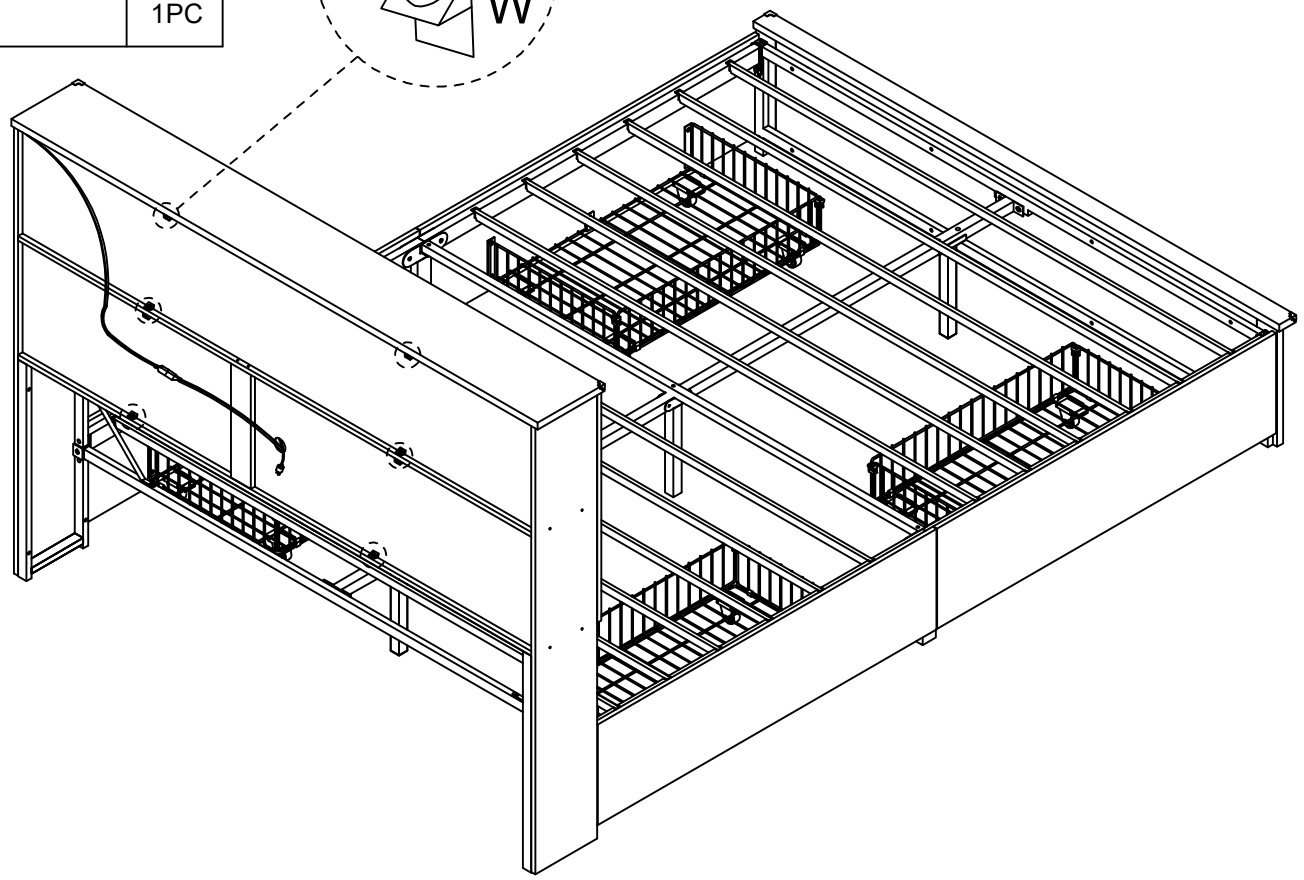

## Step 40



## Step 41

| | | | |
|---|---|---|---|
| C |  | M3.5X12 | 8PCS |
| W |  | | 8PCS |
| V |  | | 1PC |



## Step 42

| | | | |
|---|---|---|---|
| AA |  | | 1PC |

