

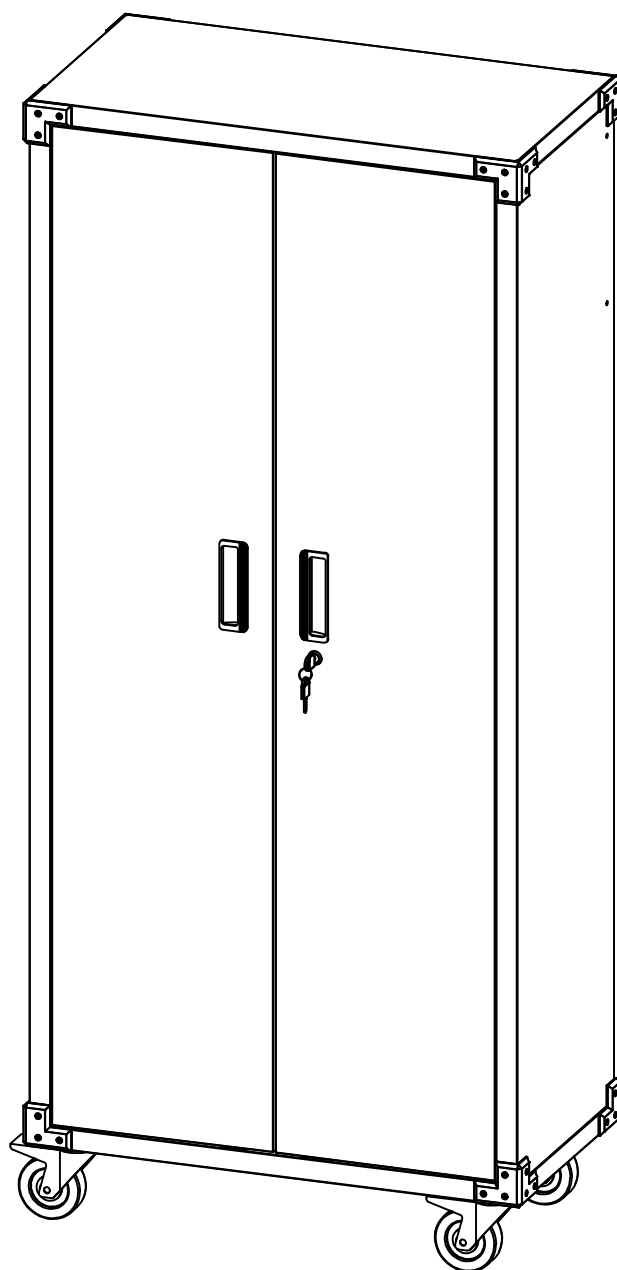
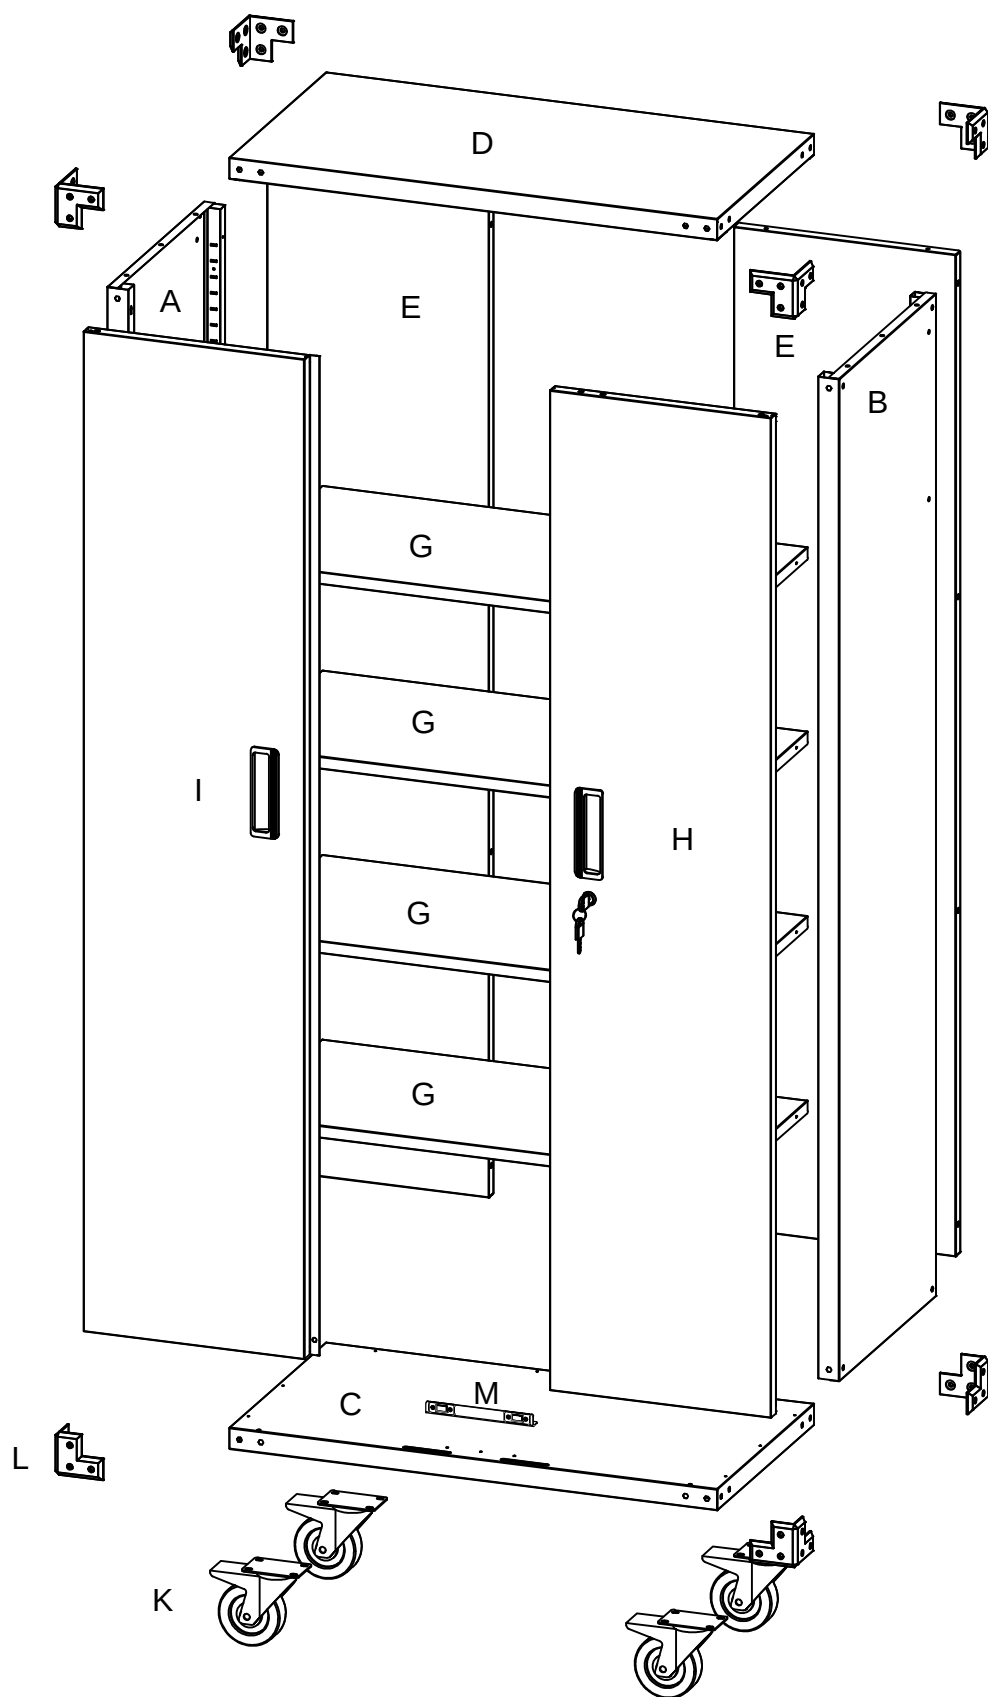


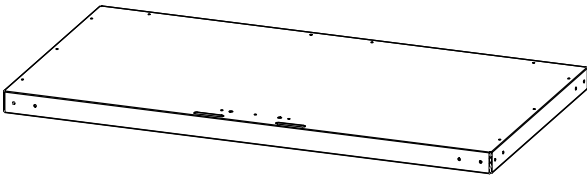
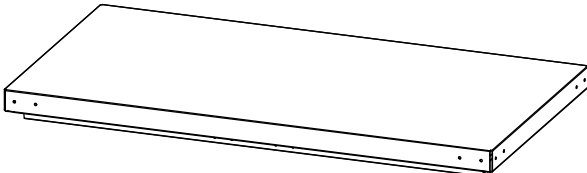

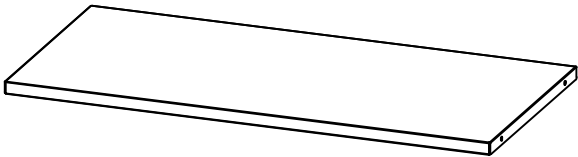


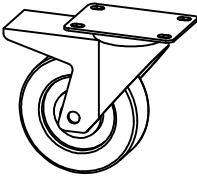
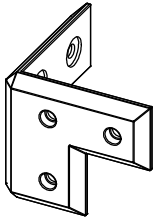












A Left side panel	1PC	B Right side panel	1PC
			
C Bottom panel	1PC	D Top panel	1PC
			
E Back panel	2PCS	G Shelf	4PCS
			

H	Right door	1PC	I	Left door	1PC
					
J	Hook	4PCS	K	Castor	4PCS
					
L	Corner protector	8PCS	M	Door magnet	1PC
					
N		4PCS	O	Anti-tipping strap	2PCS
					

P Shelf clasp		16PCS	R		50PCS
					
S		20PCS	T		31PCS
M6*15			M4*10		
					
U Door pivot		2PCS	V Expansion screw		2PCS
			 Including 2 spare lock rod sleeves (Already pre-installed)		
W Shim		4PCS	If there is any problem, please feel free to contact our customer service team and we are always here to assist with you! If there is any slight dent or damage, you can try to fix it by pliers or hammers.		
					


Step 1

S




16PCS

Install the castors (K) to the bottom panel (C) with screws S

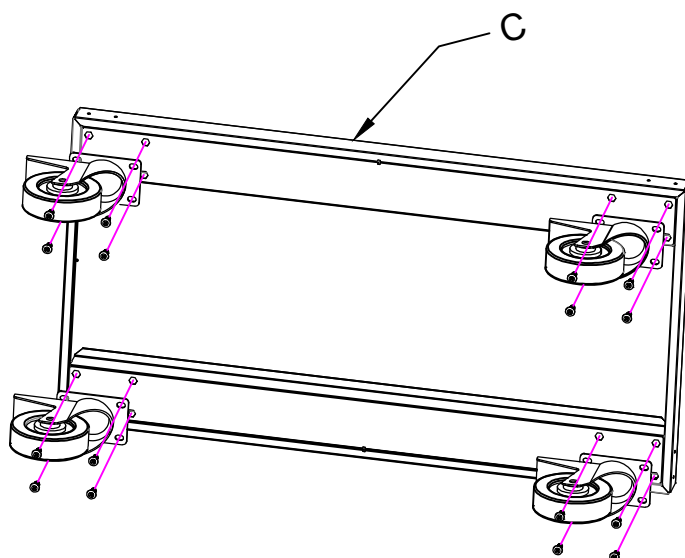

K*4

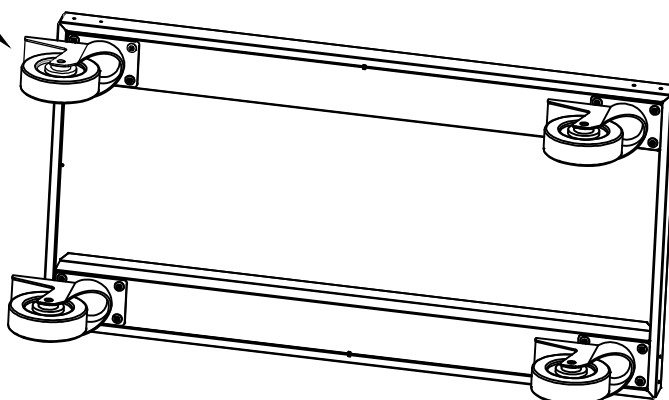


Step 2

R




32PCS

Install the corner protectors (L) to the bottom panel (C) and top panel (D) with screws R

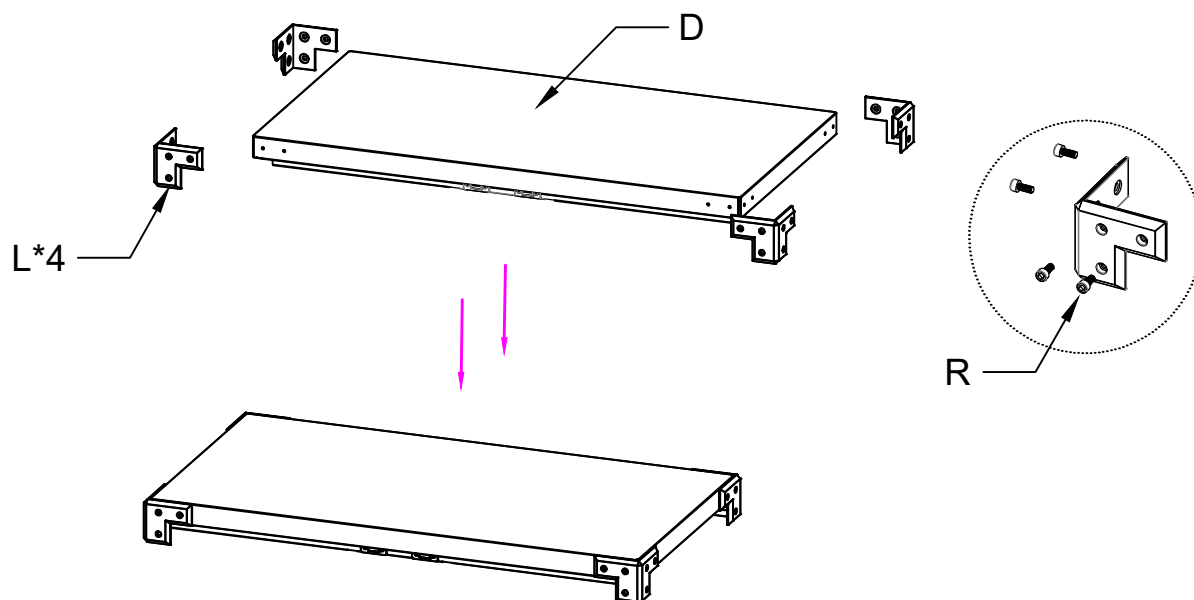

Please brake the casters to install the corner protectors easier

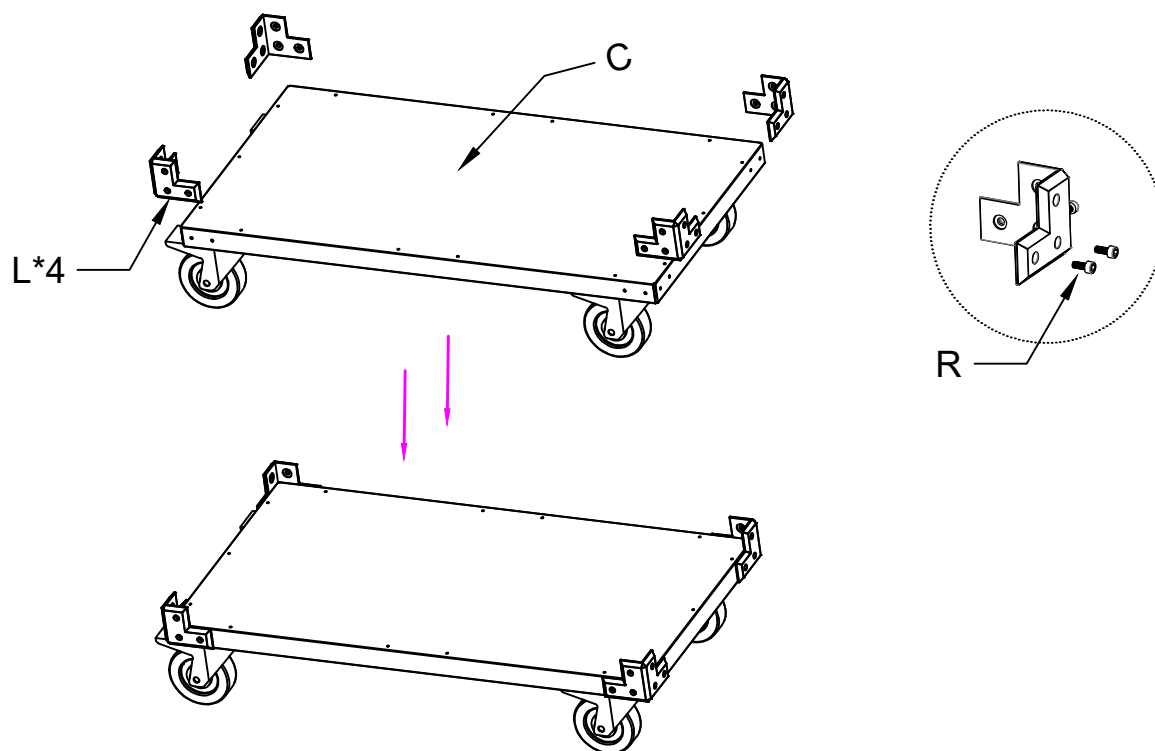

Step 3

R




8PCS

T




6PCS

Connect the side panels (A and B) to the bottom panel (C) with screws T, then fix the corner protectors with screws R

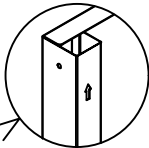

Please pay attention to the direction

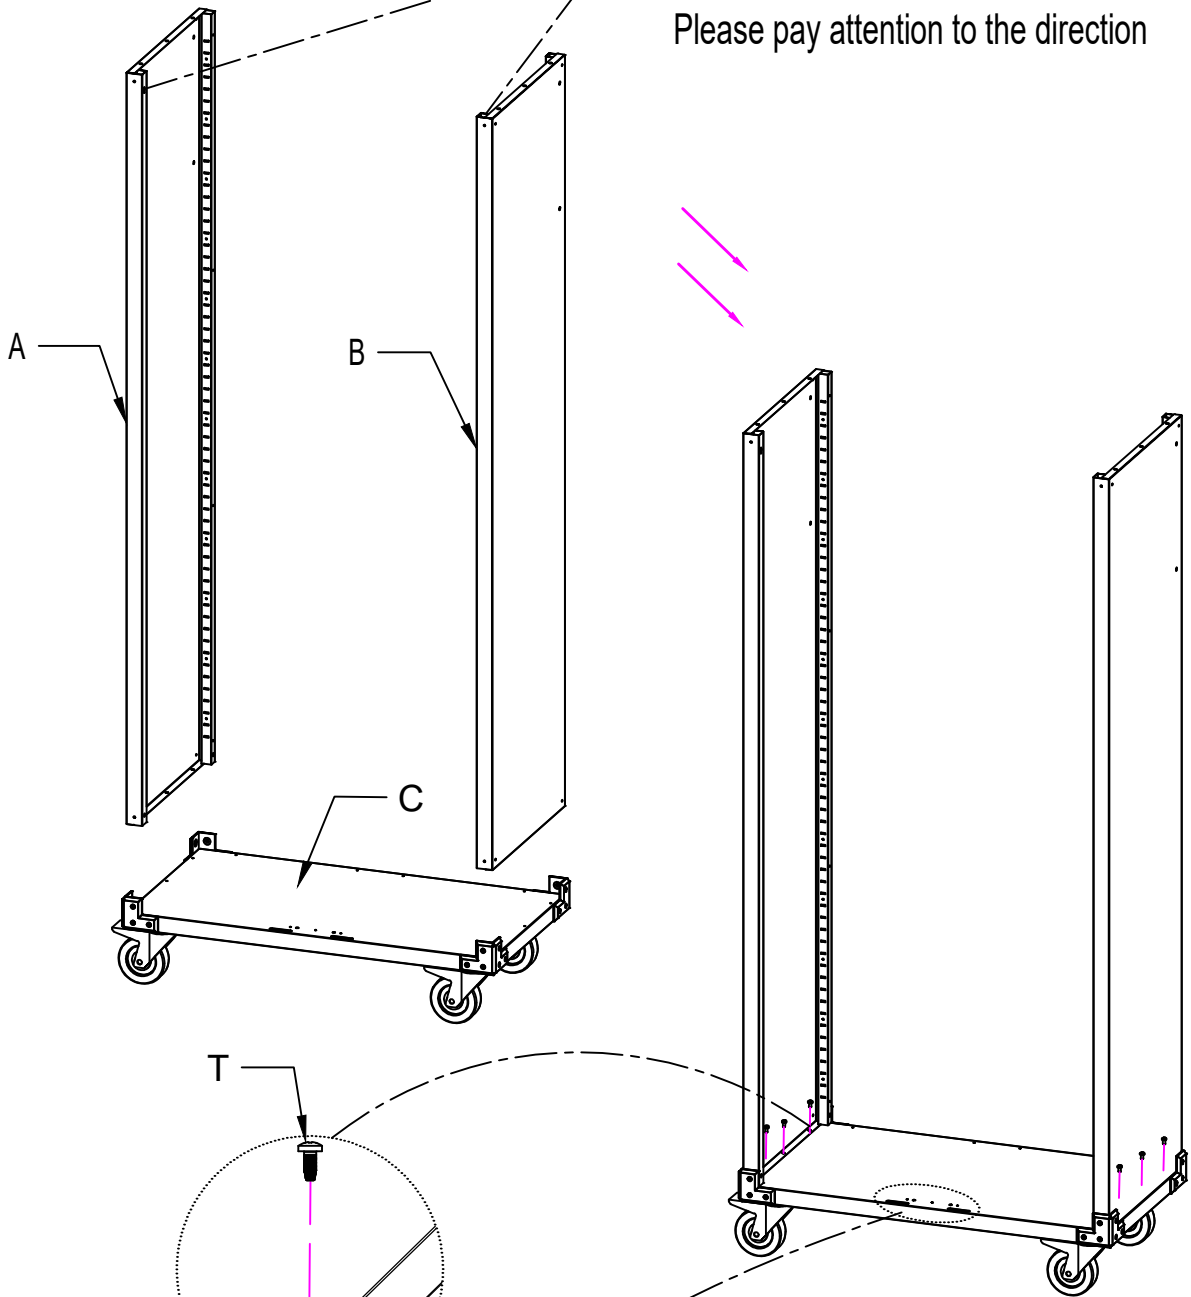

This is the front of the bottom panel

Step 4

R




8PCS

T



6PCS

Connect the side panels (A and B) to the top panel (D) with screws T, then fix the corner protectors with screws R

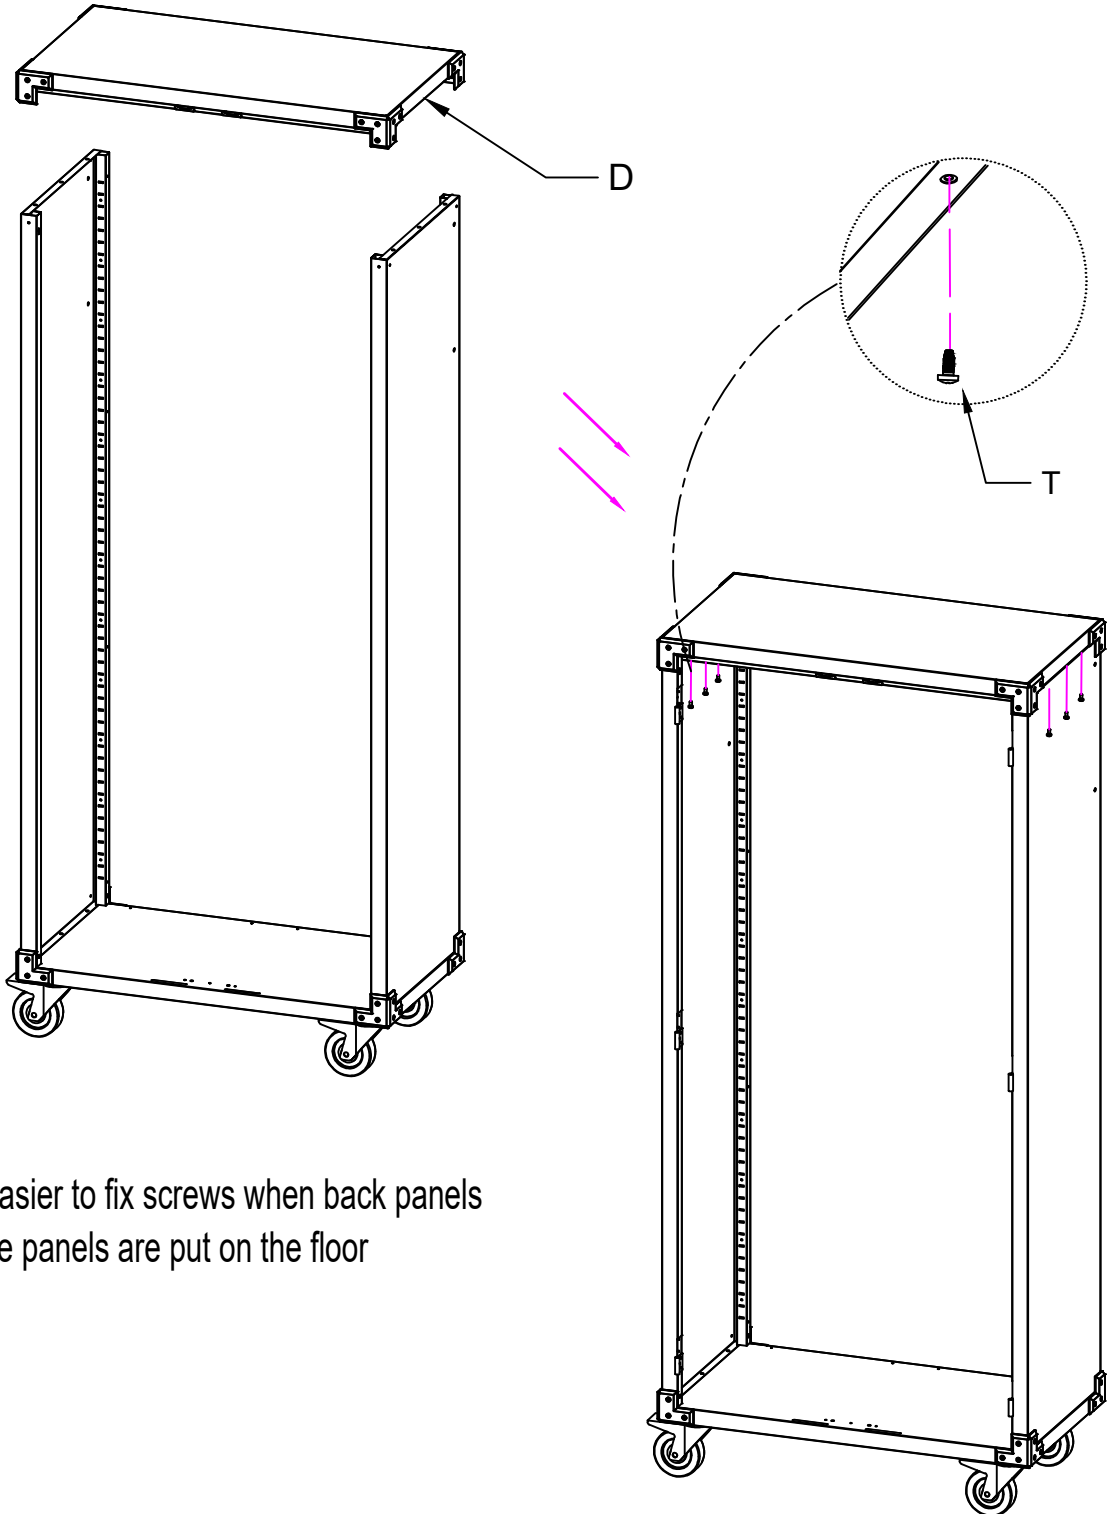

It's easier to fix screws when back panels or side panels are put on the floor



Step 5

T




3PCS

Install the door magnet (M) on the bottom panel (C) with screws T

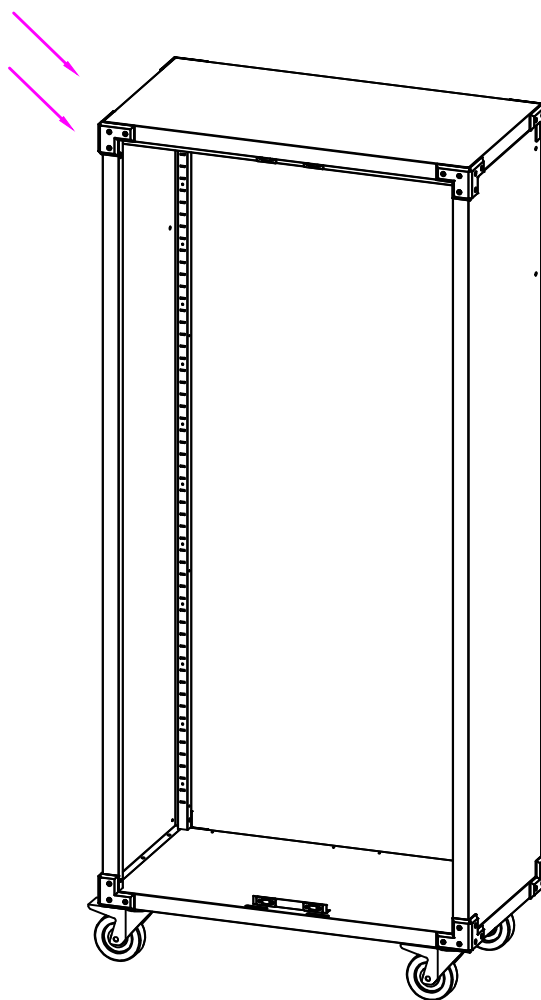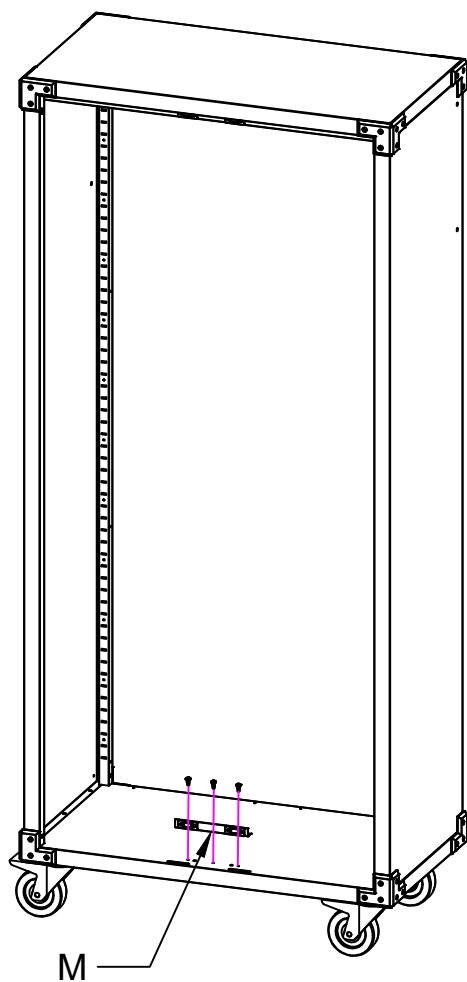


Step 6

T



16PCS

Install the back panels (E) on the side panels with screws T

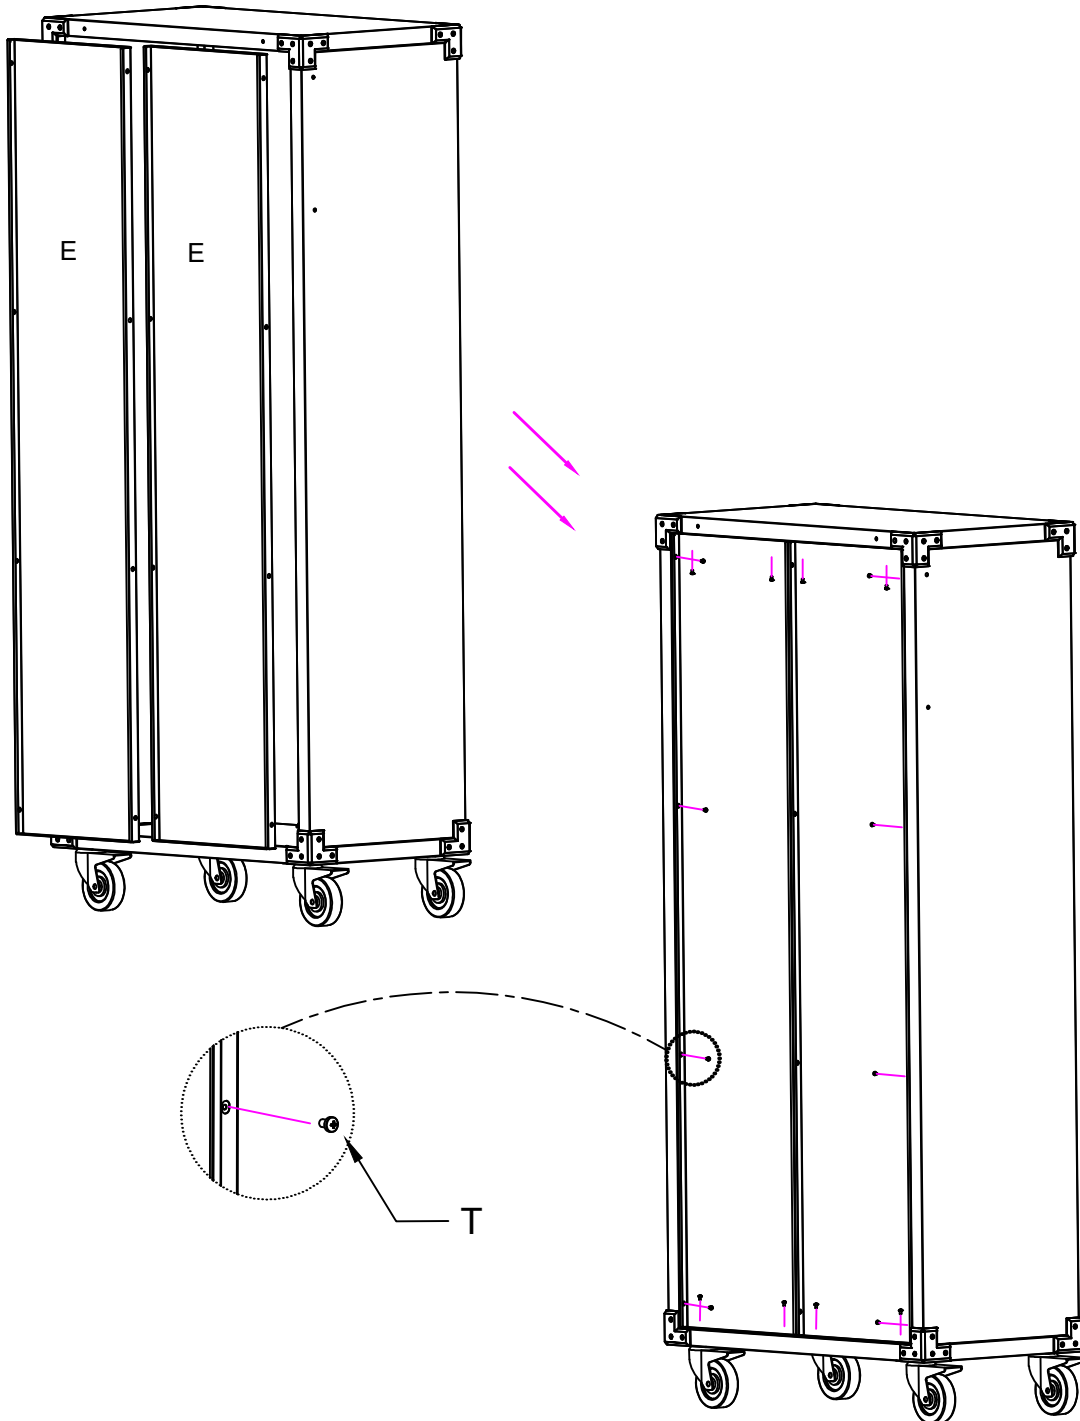

Step 7

Connect the back panels (E) with screws S and N

S




4PCS


N





4PCS

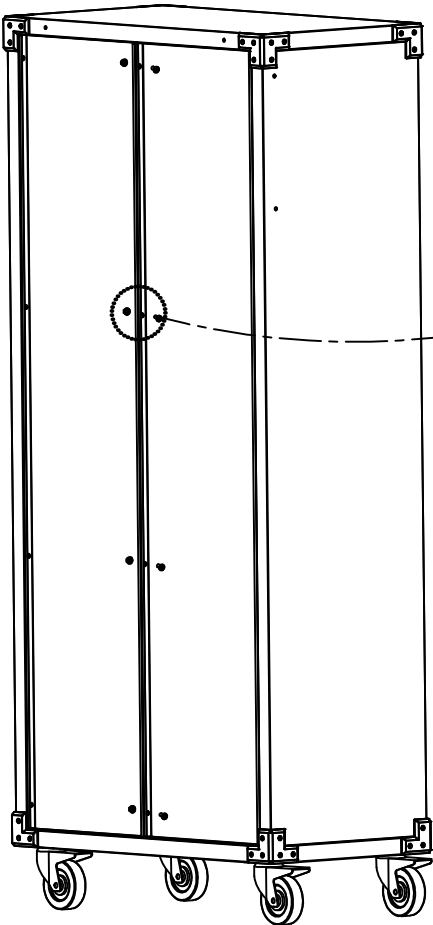

N

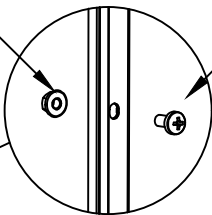

S

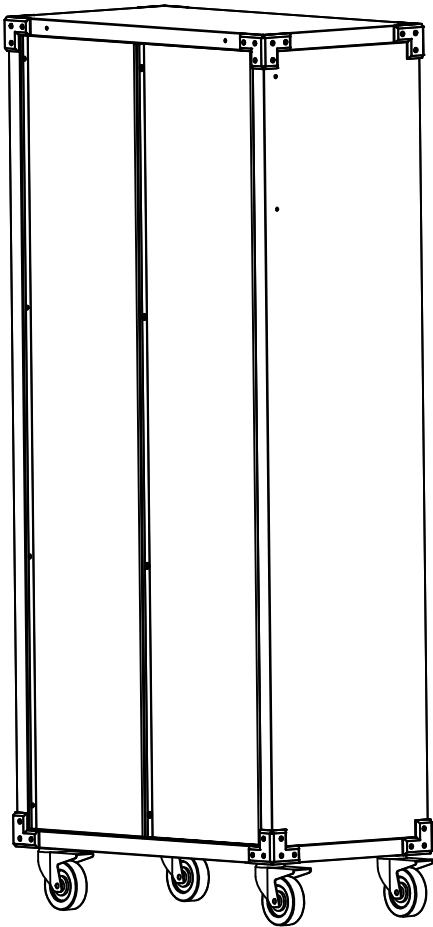


Step 8

P



16PCS

Hang shelf clasps (P) and put the shelves (G) on them

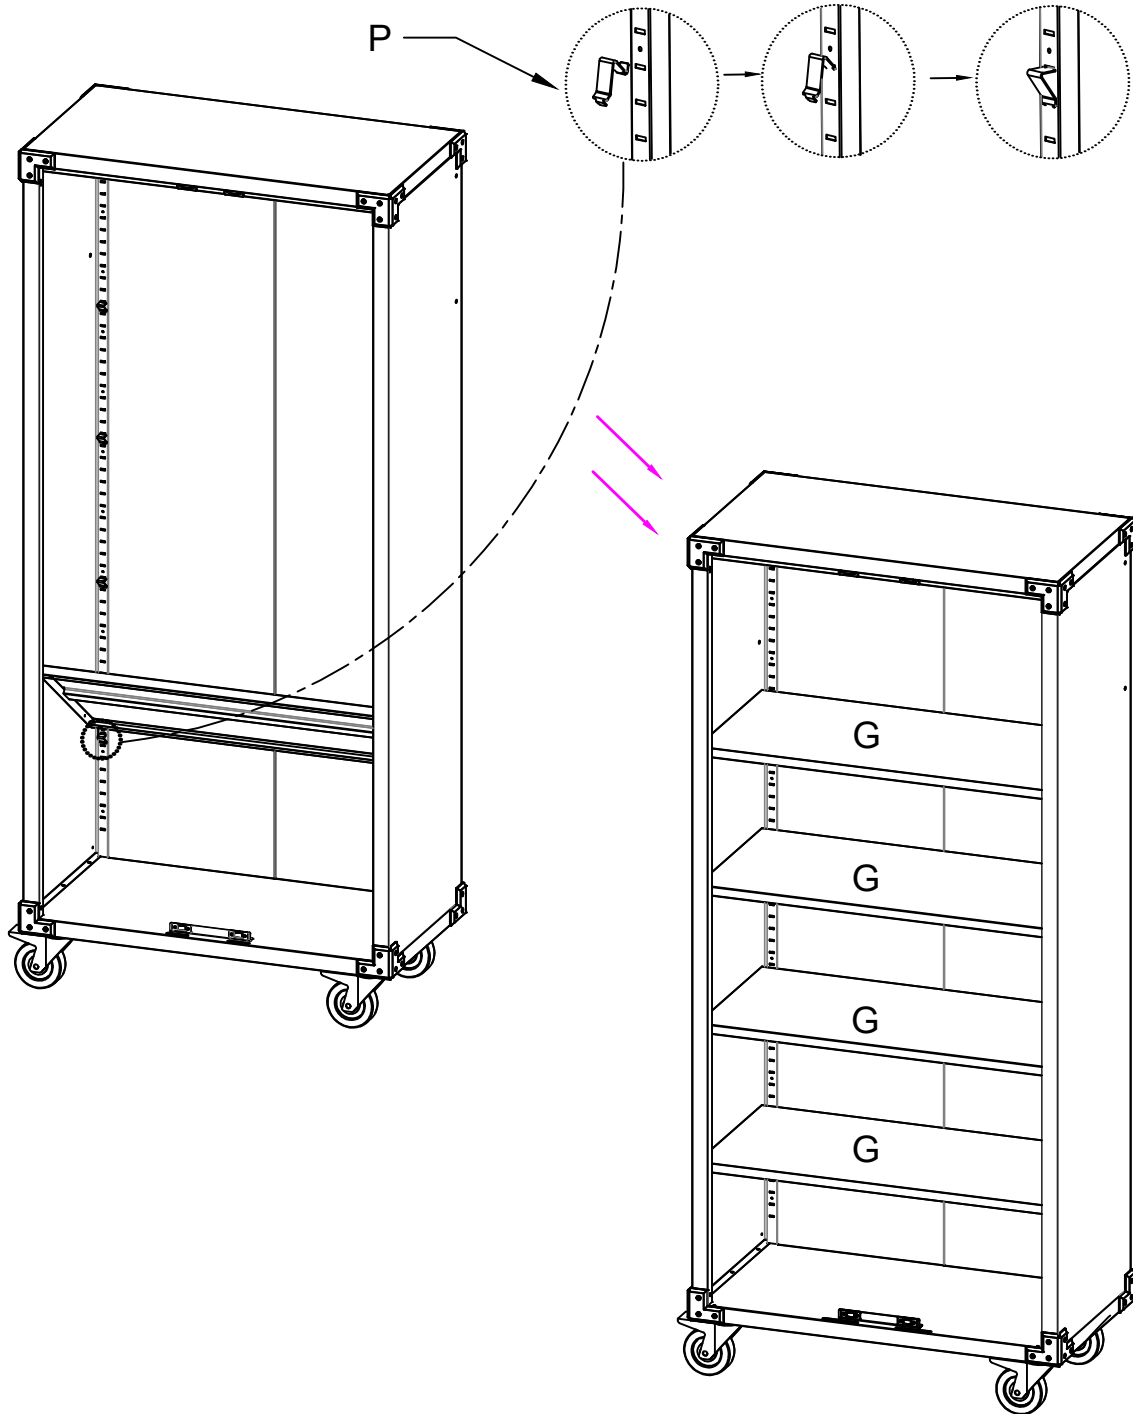

Step 9

U




2PCS

W



4PCS

Put door pivots (U) and shims (W) into the hole of each bottom corner, then insert the doors (H) and (I)

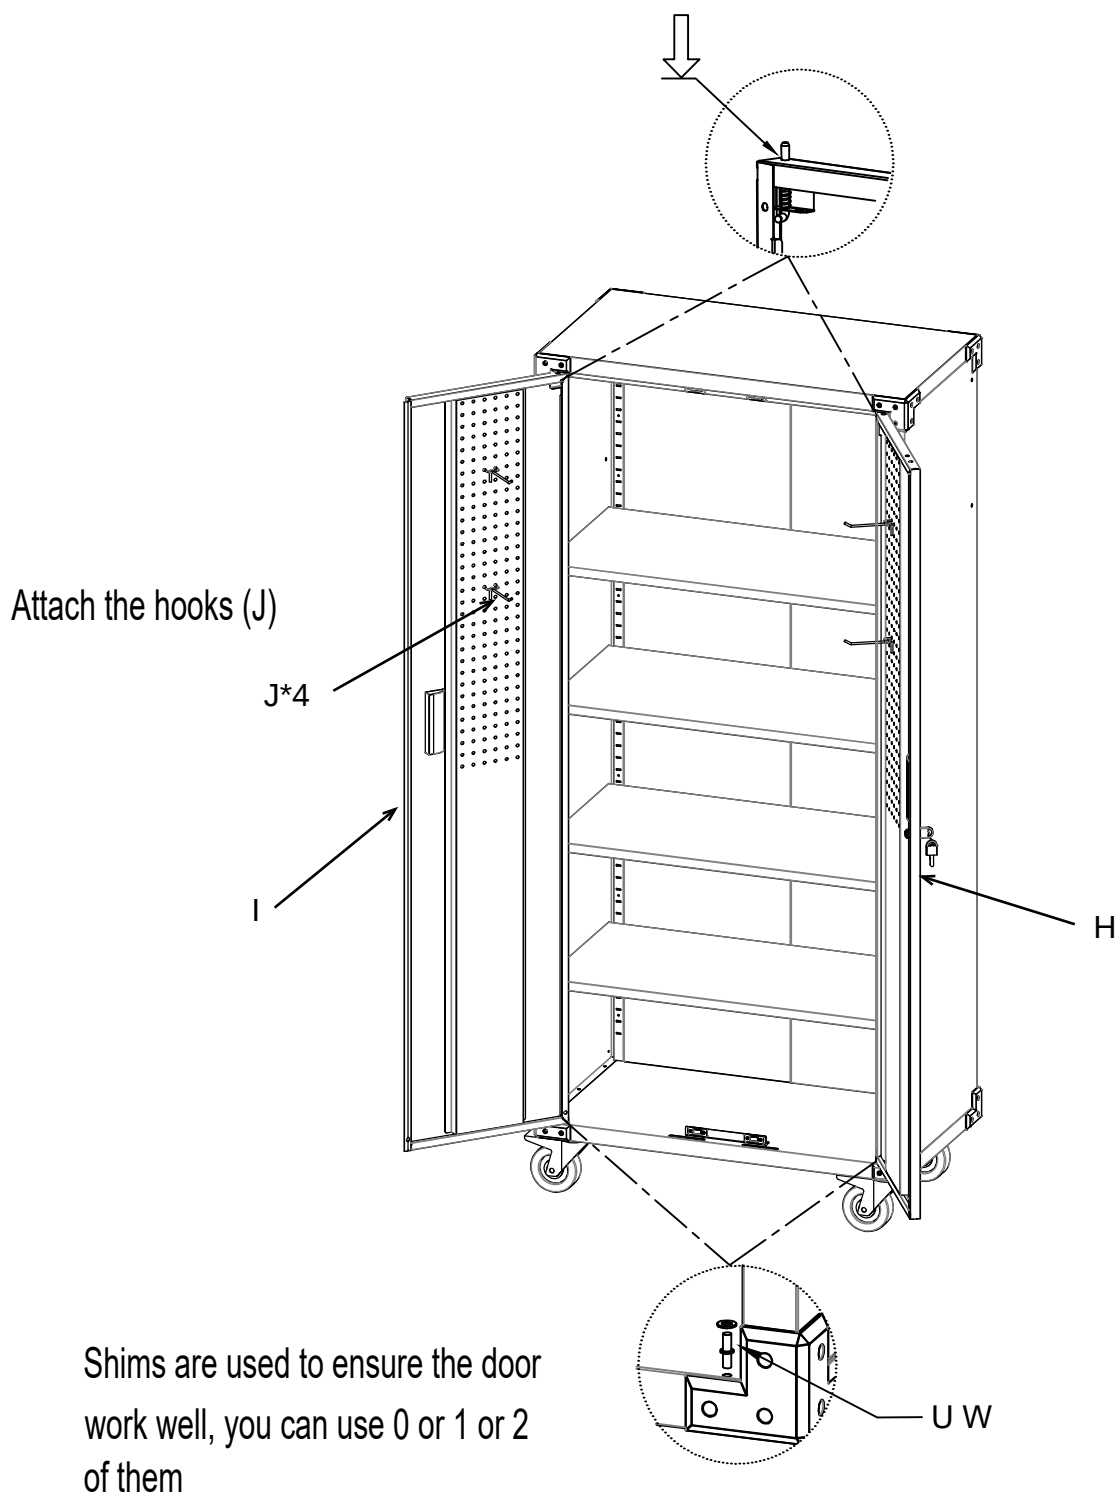


Step 10

R




2PCS

Install anti-tipping straps (O) on the back of the cabinet with screws R

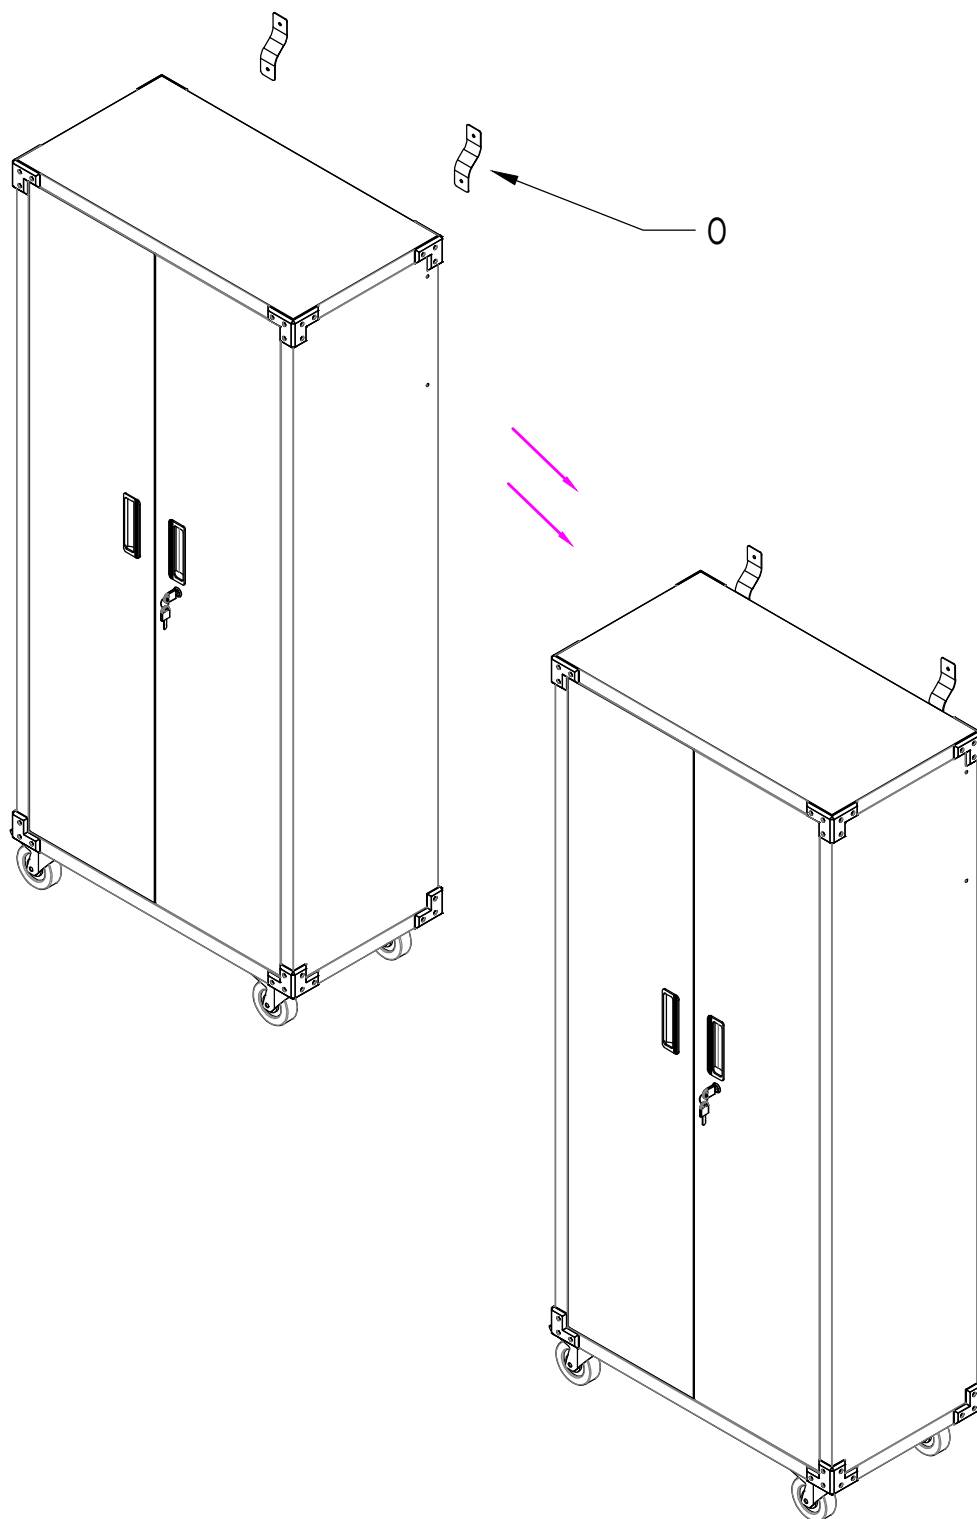


Step 11


V



2PCS

Fix the cabinet to the wall with expansion screws V

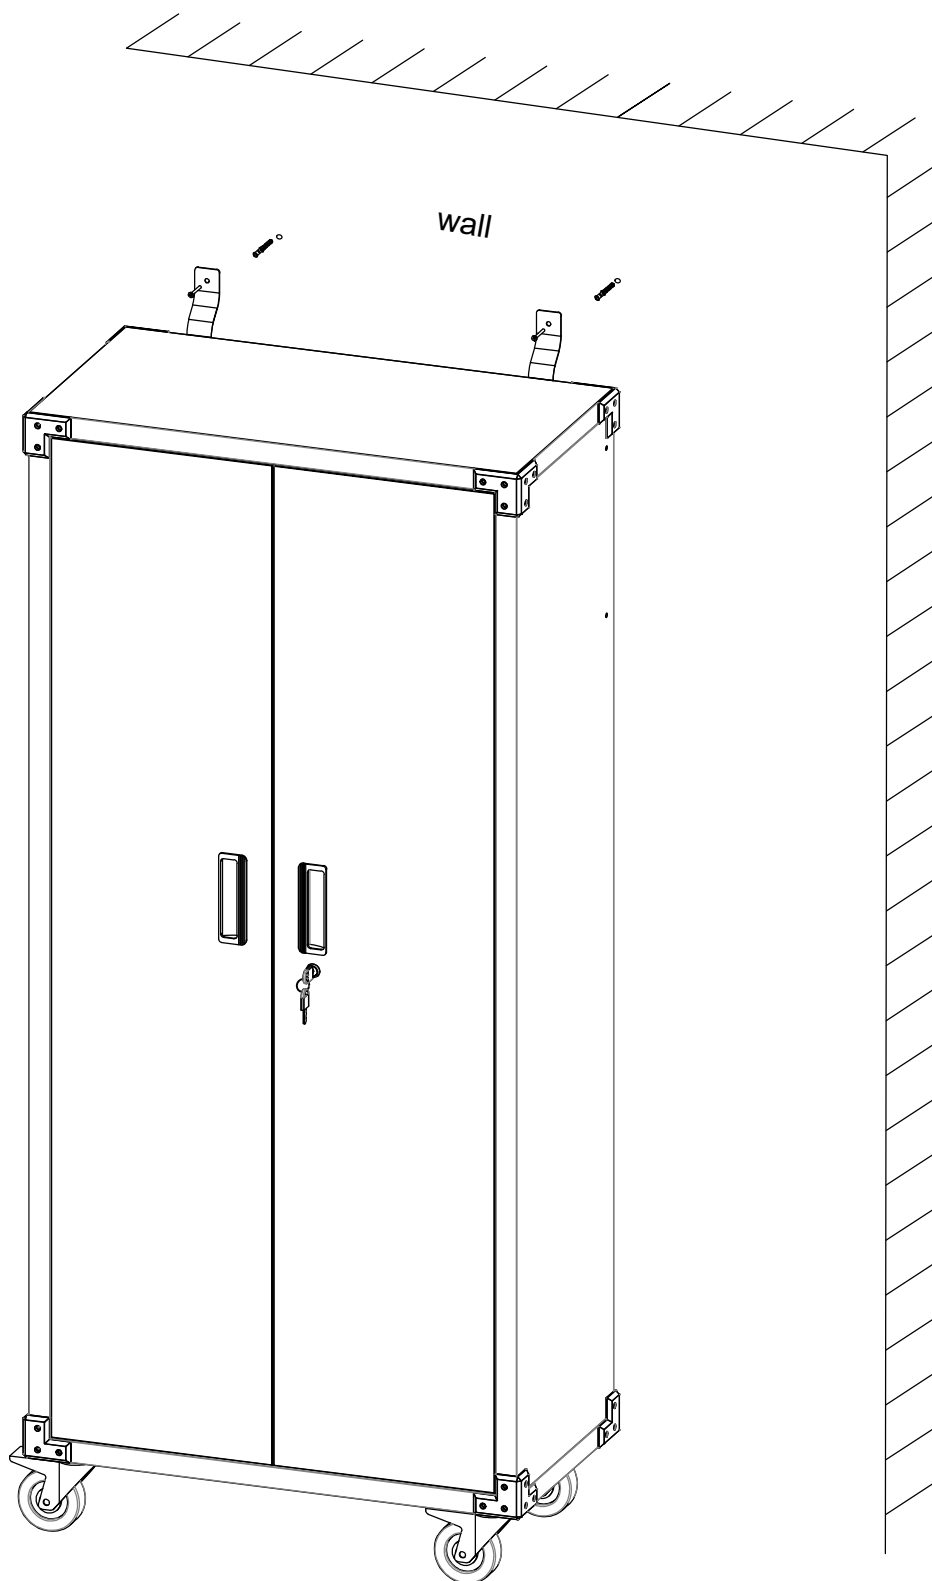

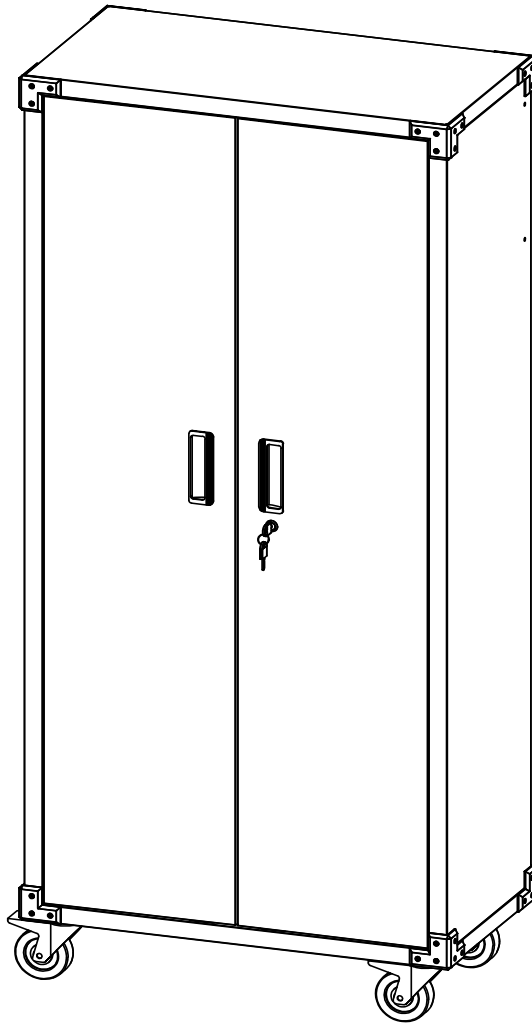

Installation Guide Video