

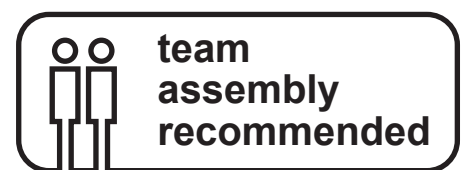


Assembly Instructions

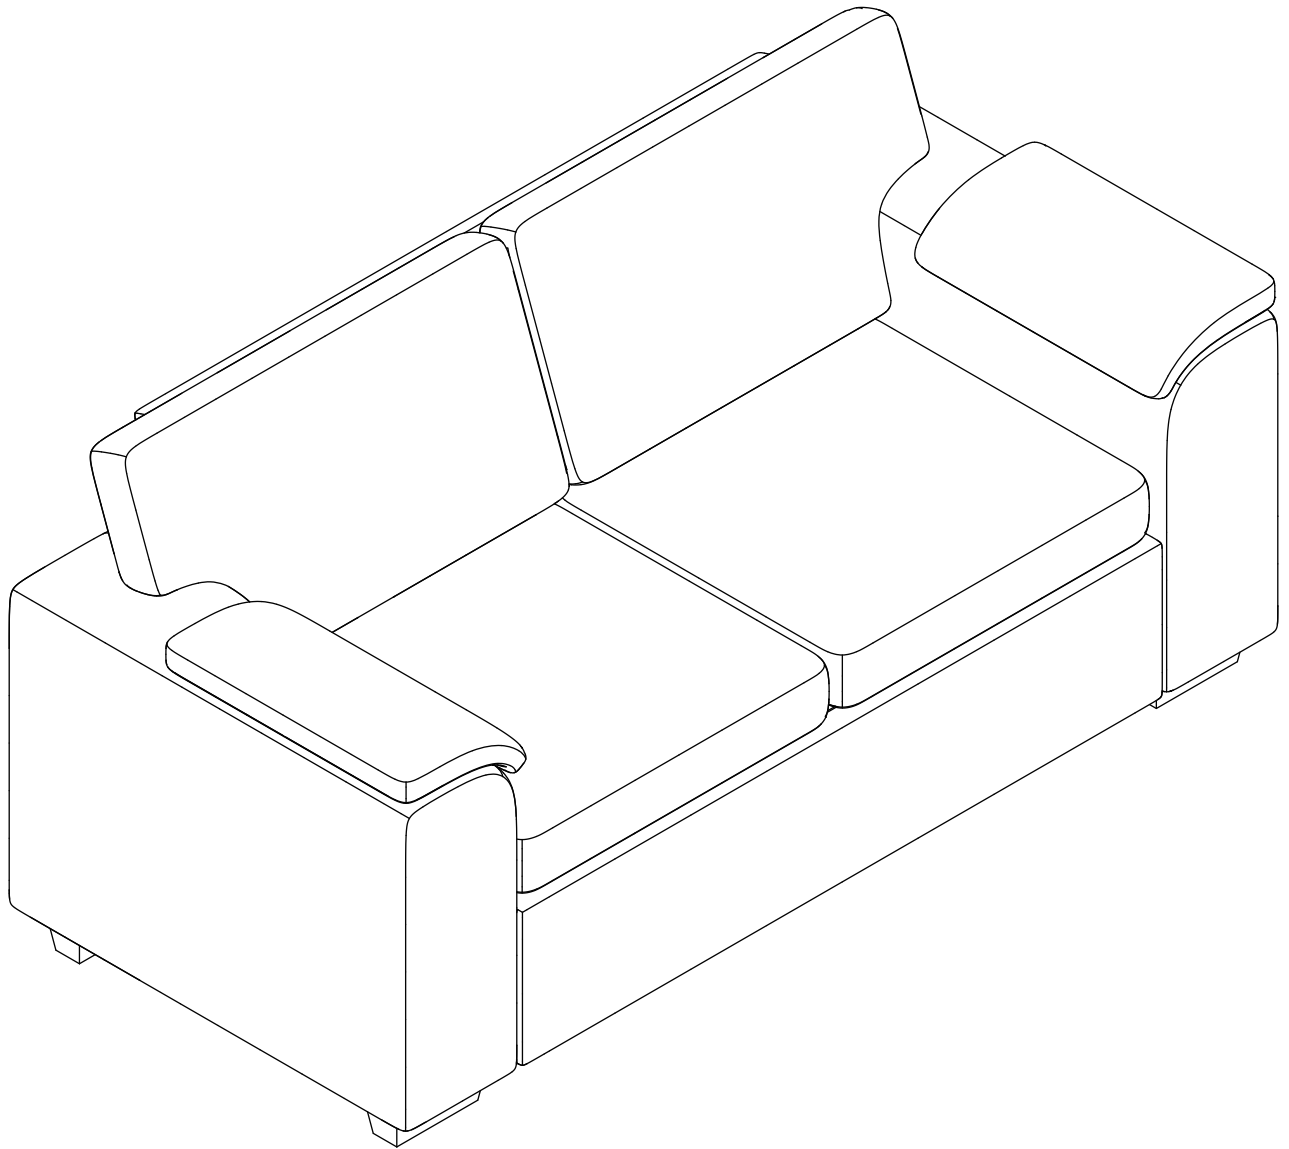


PARTS LIST

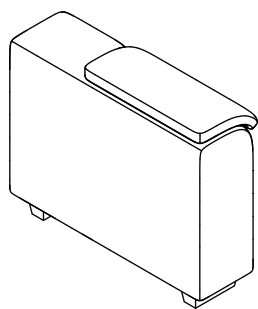


A x1

Left Armrest

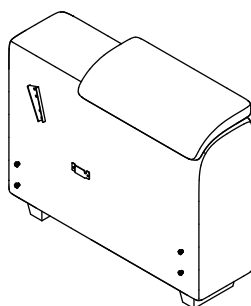


B x1

Right Armrest

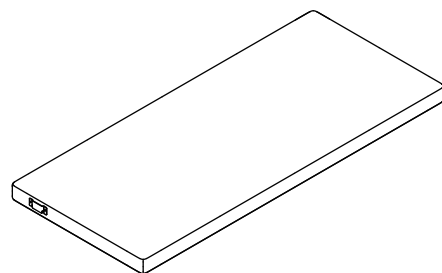


C x1

Base Frame

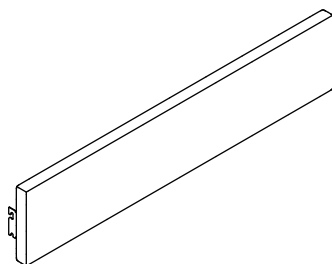


D x1

Front Bezel

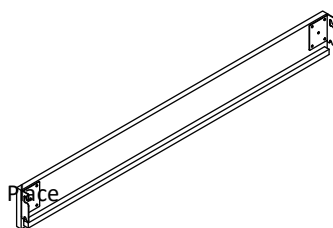


E x1

Backboard

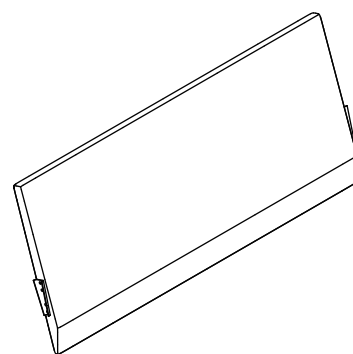


F x1

Backrest Frame

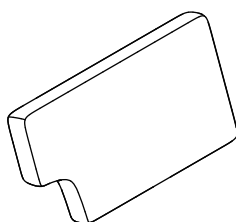


G x1

Left Backrest Cushion

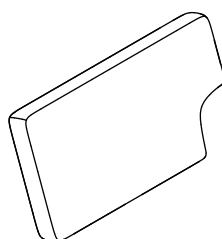

H x1

Right Backrest Cushion

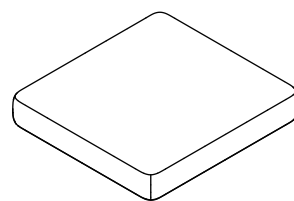


I


Seat Cushion Bag

Unpack the package, take out all the parts, the part number corresponds to the above picture.


Sofa Overall Assembly Drawing

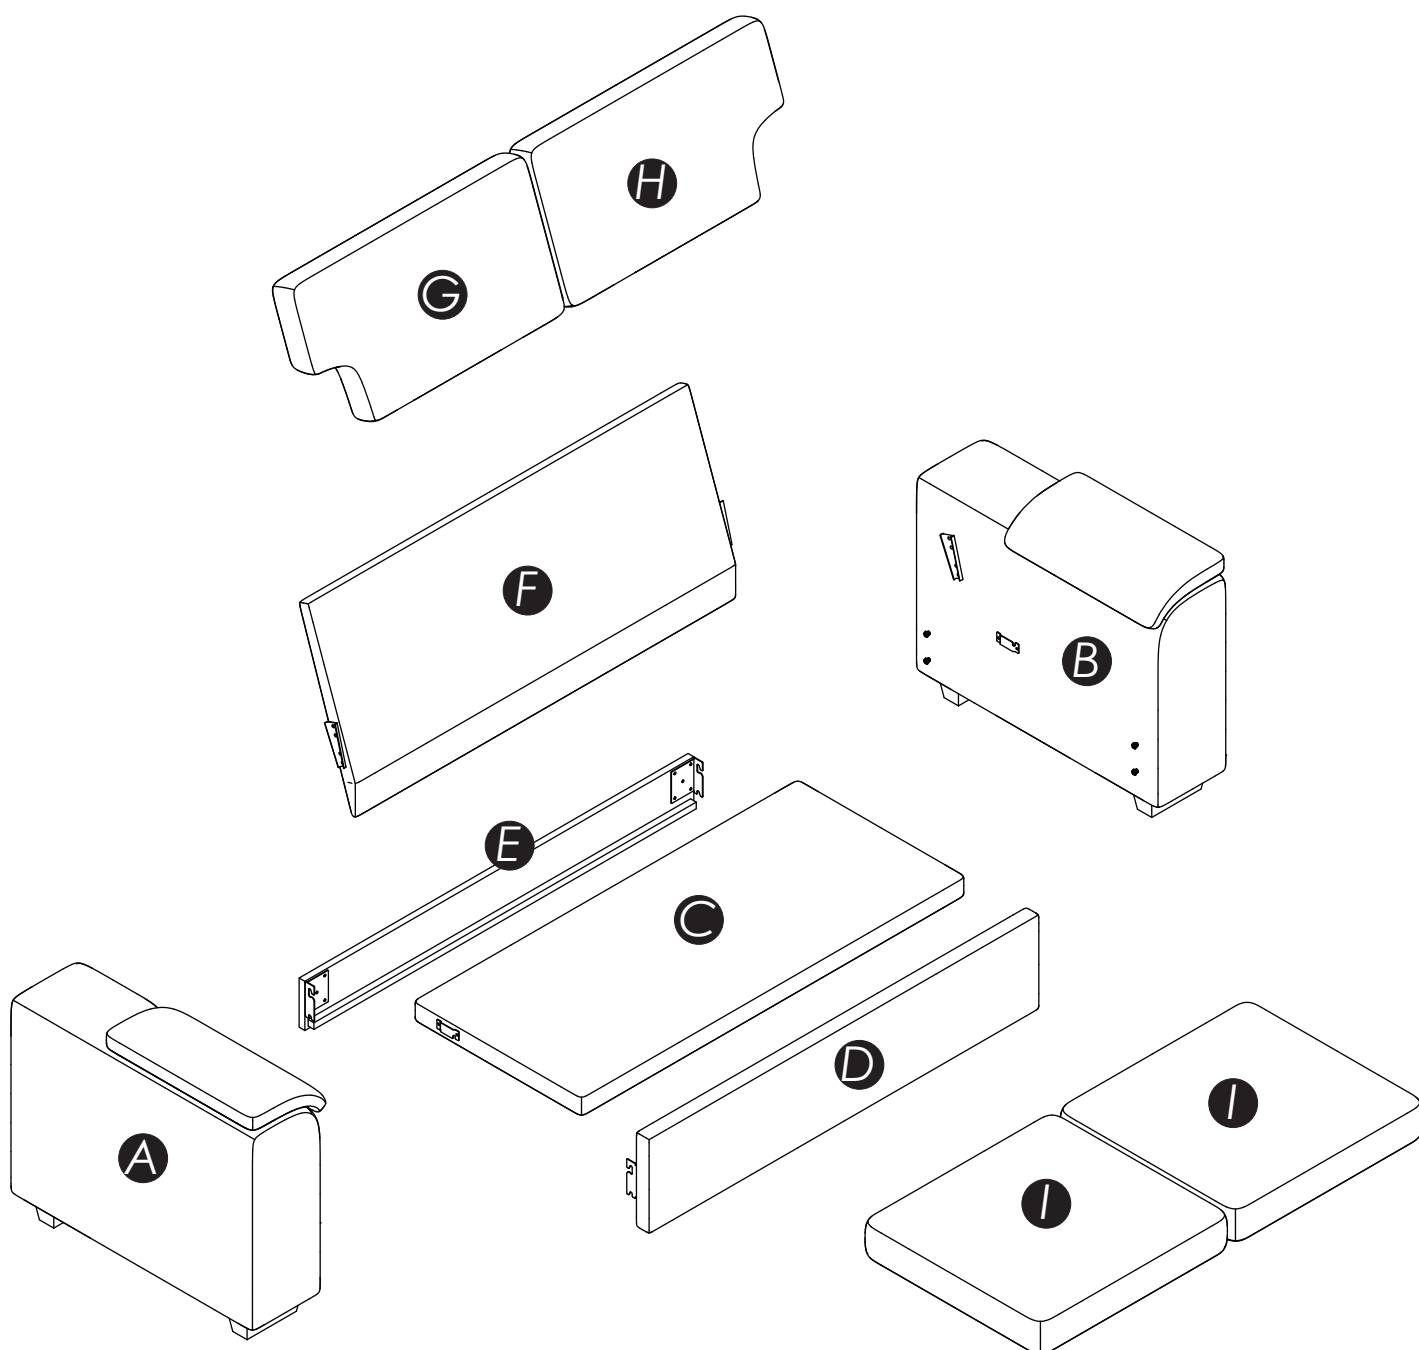

STEP 1 Take out the left and right armrests and place them at a suitable distance, hang the hanging tabs on the backboard and front bezel on the screws of the left and right armrests, and tighten the screws on the armrests to secure the inserts on the backboard and front bezel.

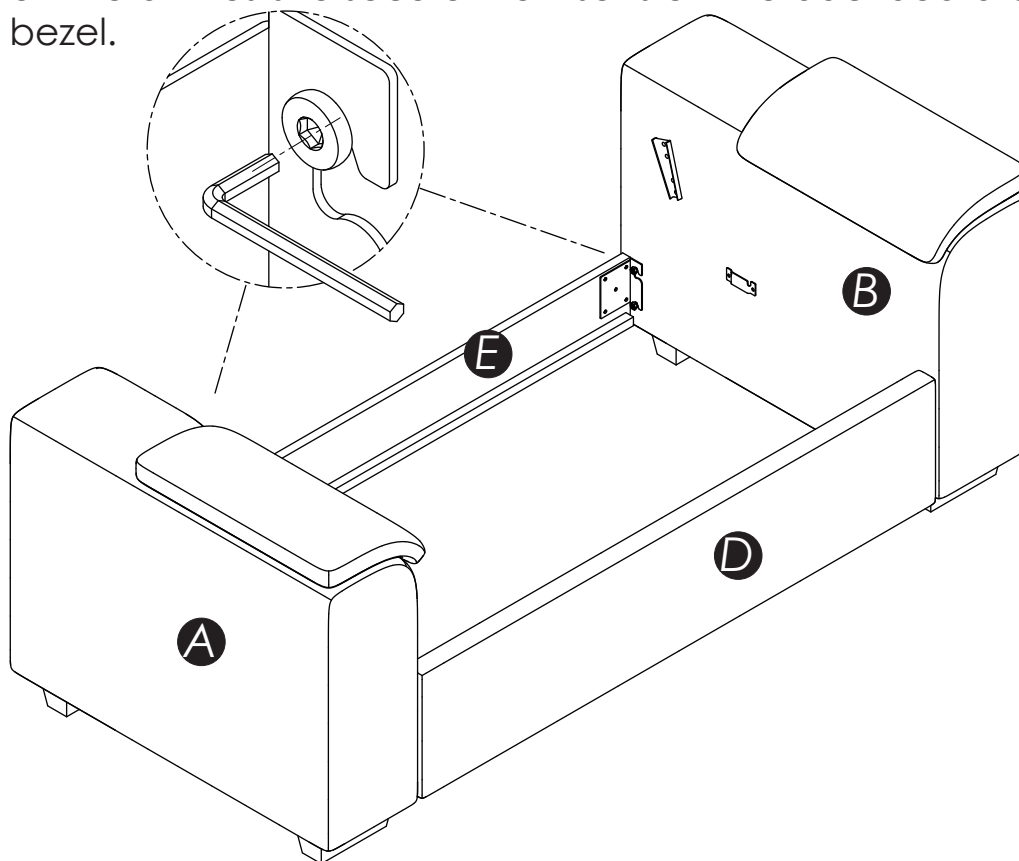


STEP 2 Lay the seat base frame flat against the front bezel and hang the two side mountain inserts on the inserts for the armrests.

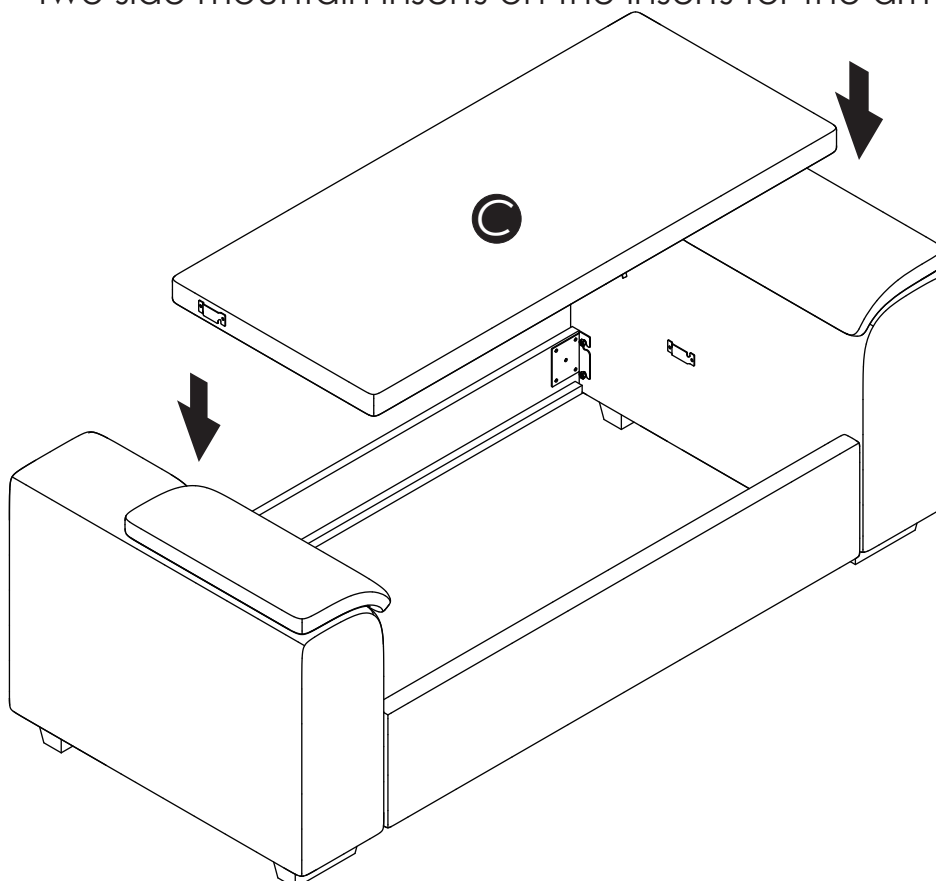


STEP 3

Lower the backrest frame vertically and insert the tapered inserts on both sides into the tapered inserts on the armrests on both sides.

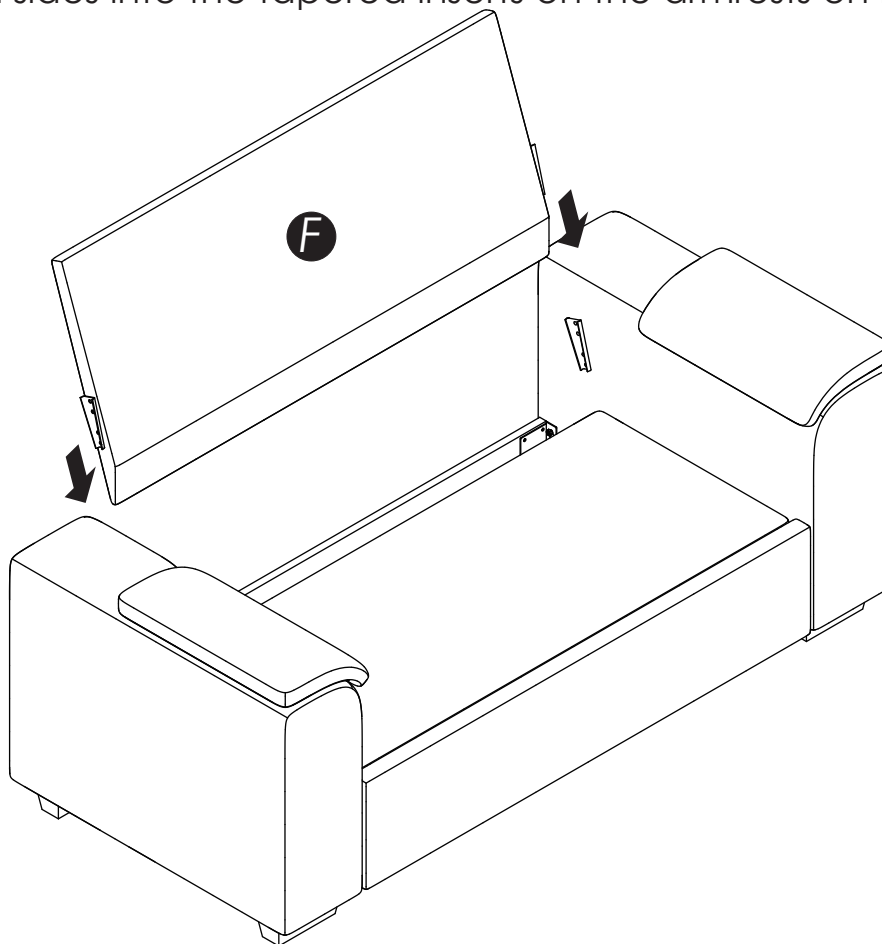


STEP 4


Cut open the compressed seat cushion bag and tap it to let it bounce back and smooth out the wrinkles. **(Note: It takes about 48 hours for the cushion bag to fully bounce back)**

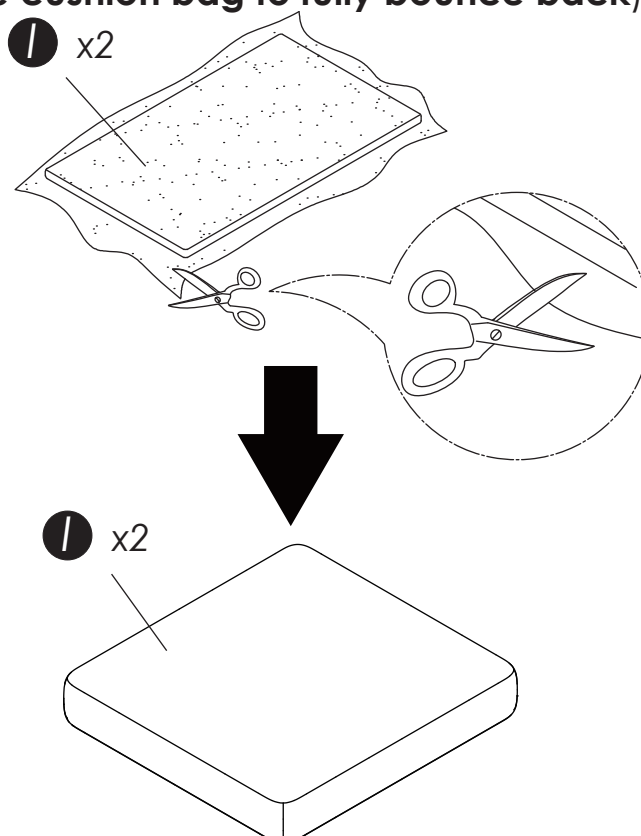


STEP 5 Align the seat cushion bags on the base frame.

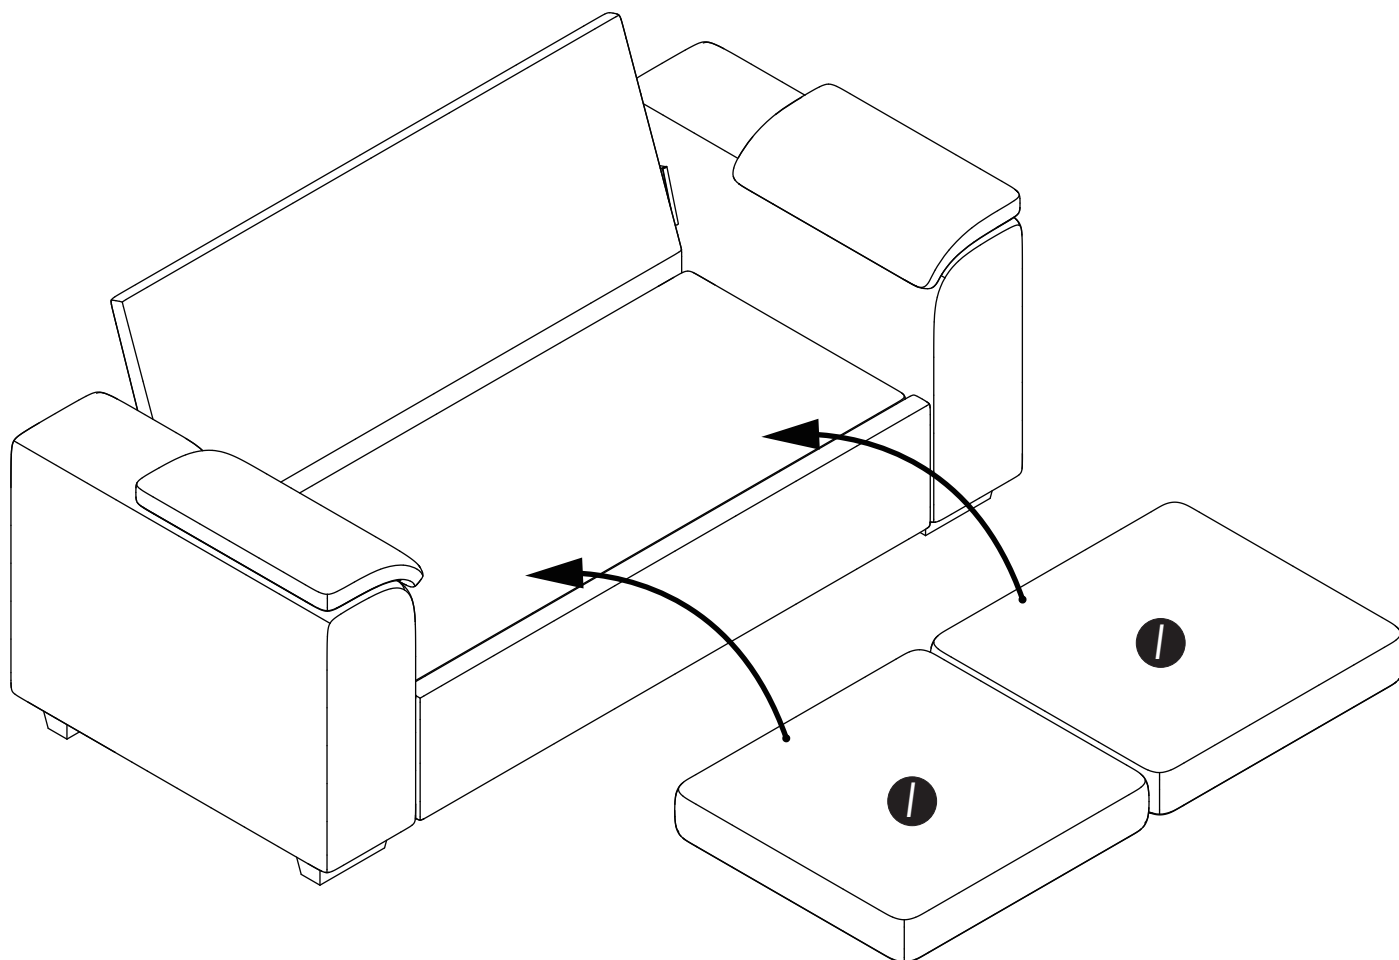

STEP 6 Cut open the compression backrest cushions and tap it to let it bounce back and smooth out the wrinkles. **(Note: It takes about 48 hours for the backrest cushions to fully spring back)**

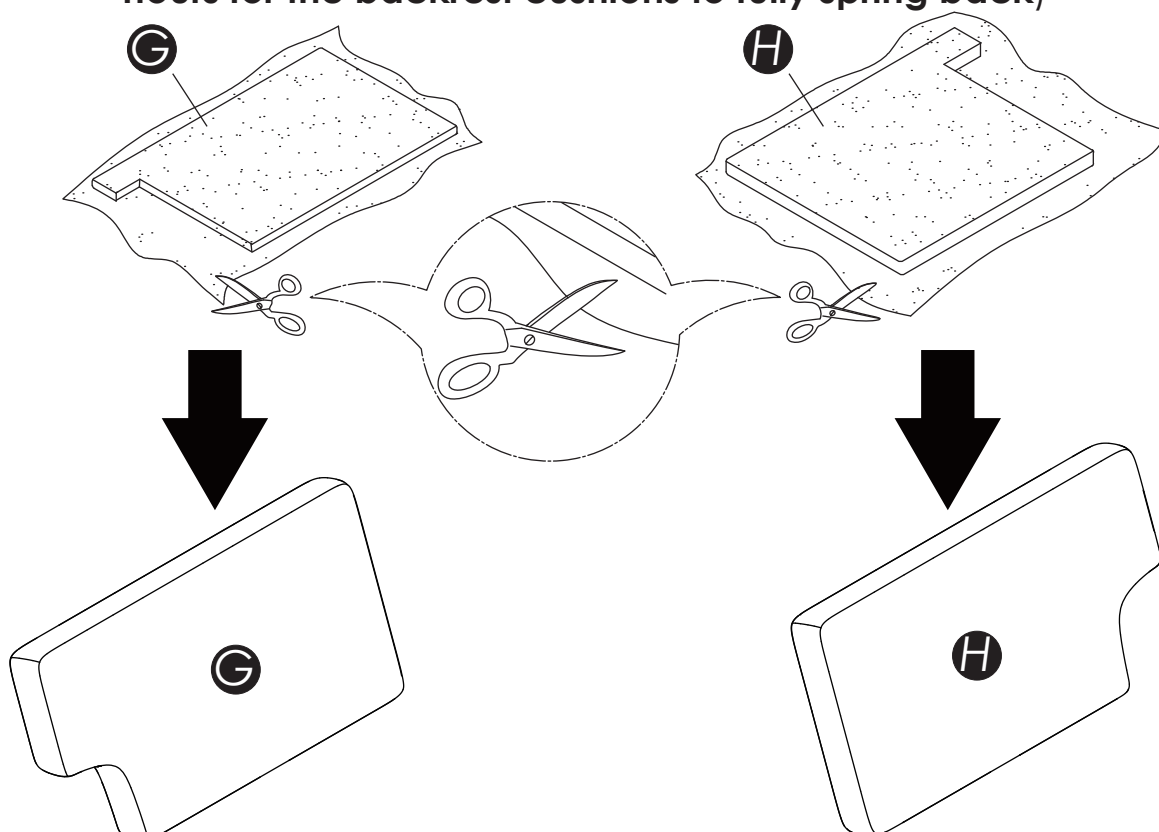

STEP 7 Place the left and right backrest cushions on the backrest frame.

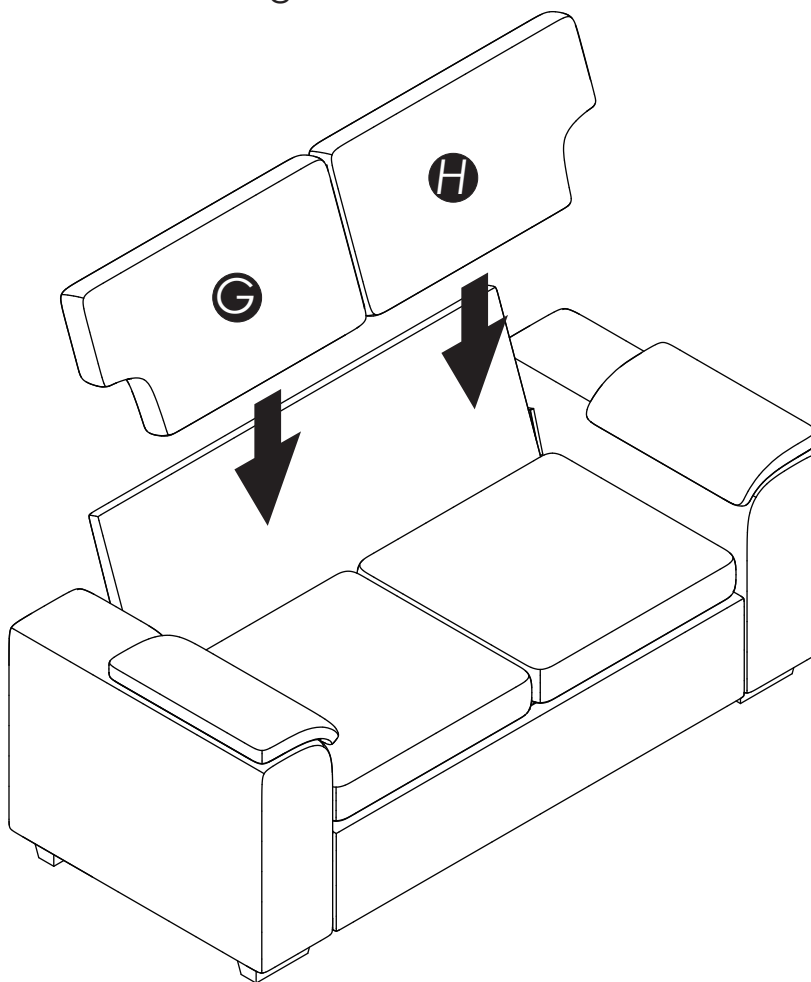

STEP 8

