

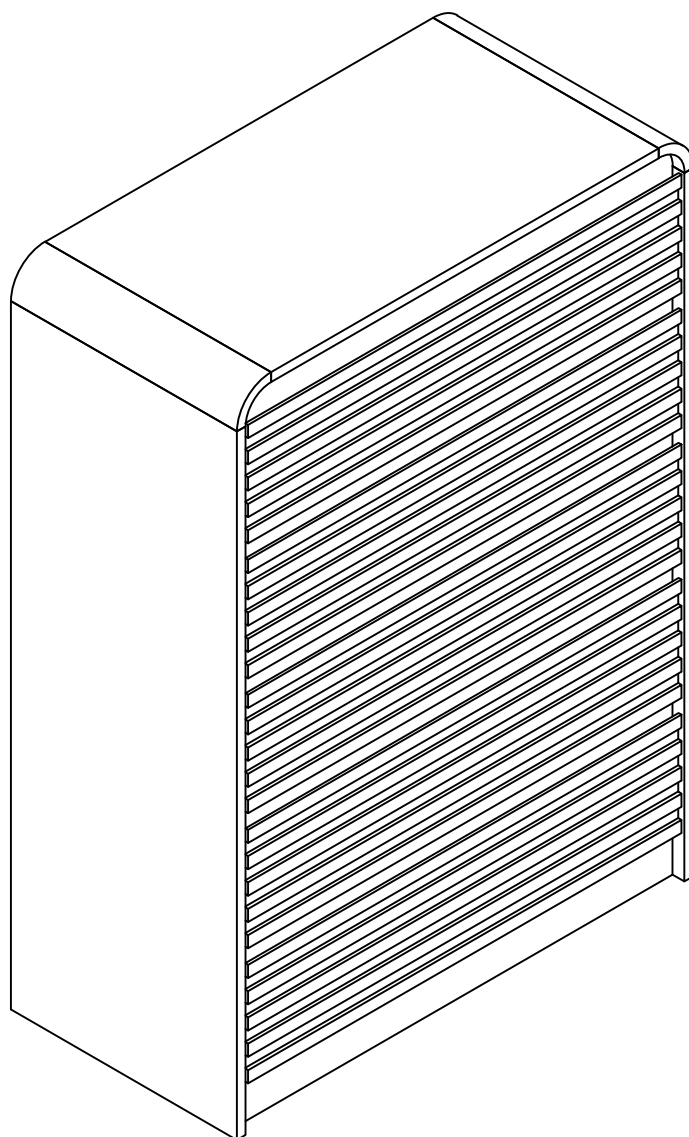
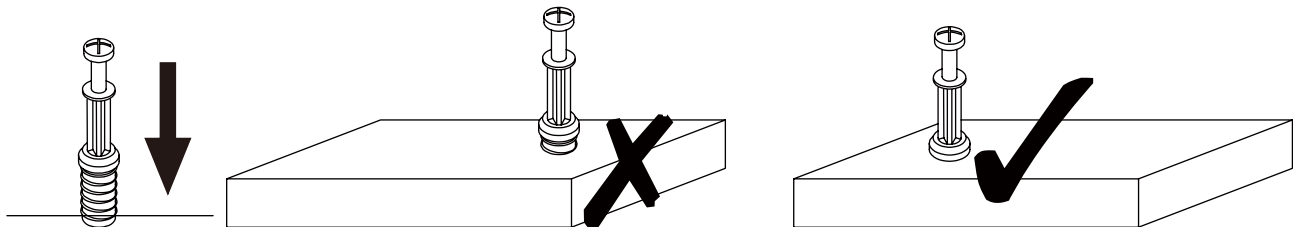
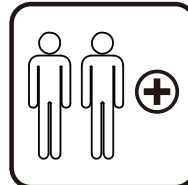



Installation & Assembly

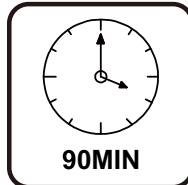


**As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully.
If you have any questions about the product and installation, please contact us.
Our professional after-sales team will serve you online all day.**

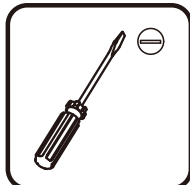


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

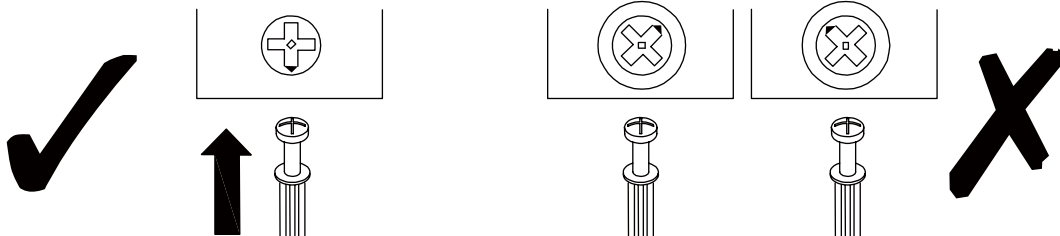











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







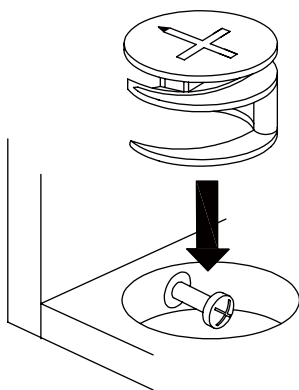




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.





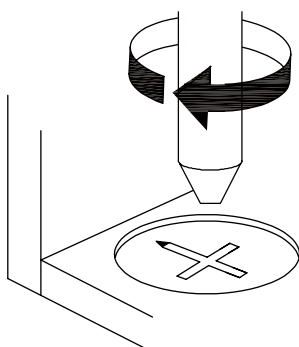




EN_Turn cam lock clockwise to tighten.

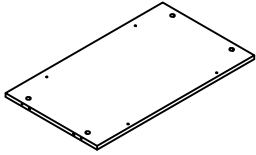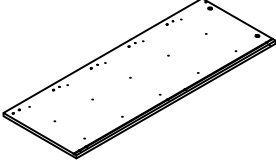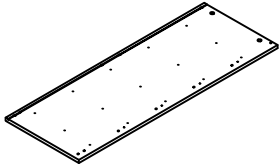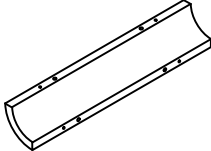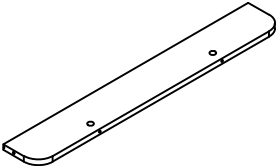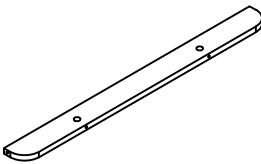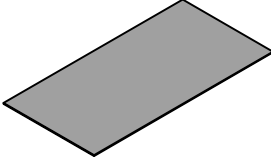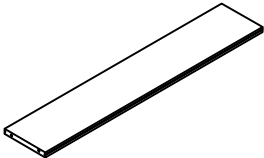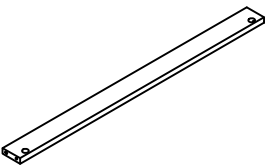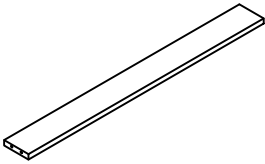NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x2	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x1	
⑨		x4	
⑩		x1	

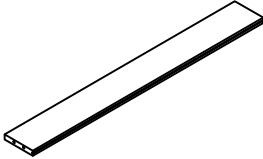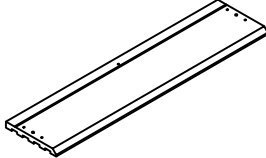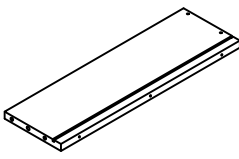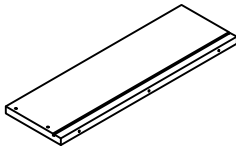
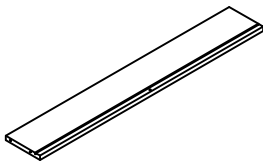
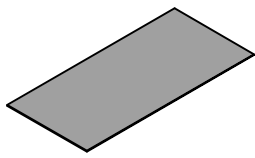
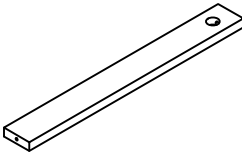
NO.		QTY	SPARE
⑪		x1	
⑫		x5	
⑬		x5	
⑭		x5	
⑮		x5	
⑯		x5	
⑰		x5	
	 Hardware Kit	x1	

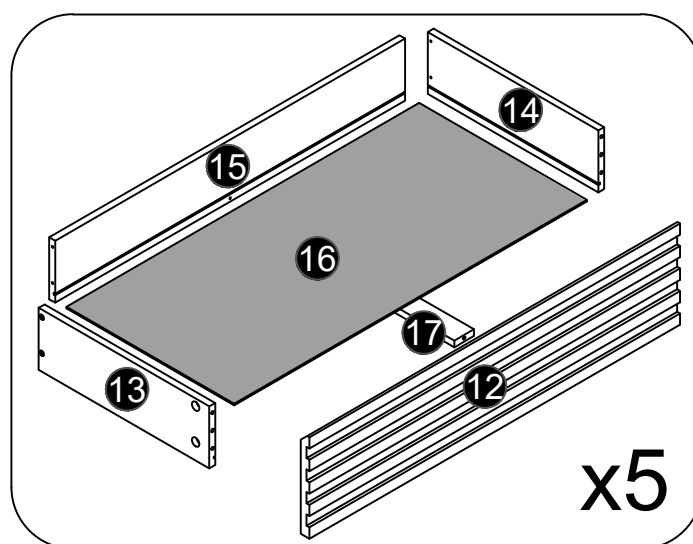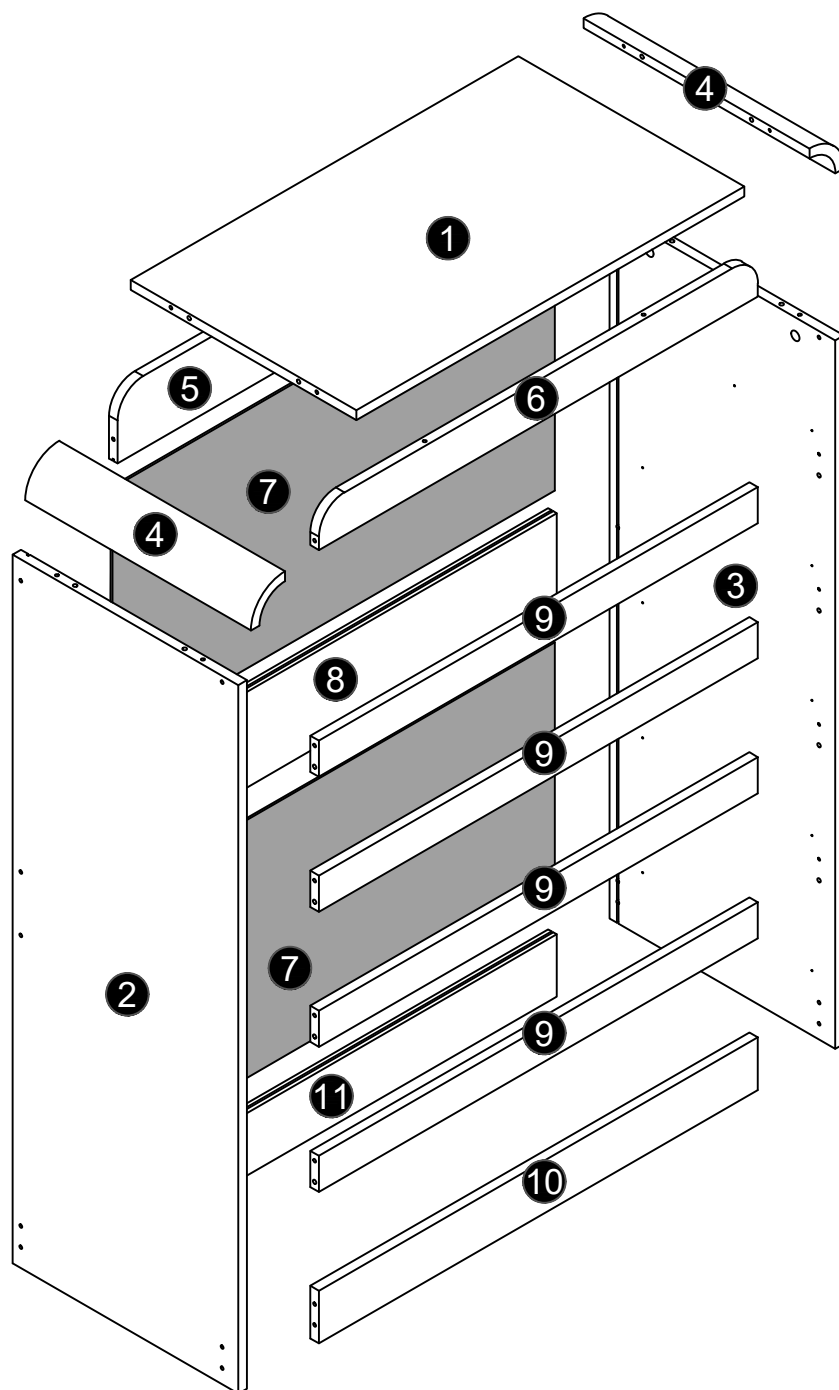

 A x37 Ø6x35mm +3(spare)	 B x45 Ø15x10mm +3(spare)	 C x26 Ø6x30mm +2(spare)	 D x27 Ø4x35mm +2(spare)	 E x60 Ø3.5x12mm +3(spare)	 F x16 Ø5x35mm +1(spare)
 G-1	 G-2	 H-1	 H-2	 H-3	 I x16 +2(spare)
 J x8 Ø6x40mm					
 CL x5 L350mm	 CR x5 L350mm	 DL x5 L350mm	 DR x5 L350mm		

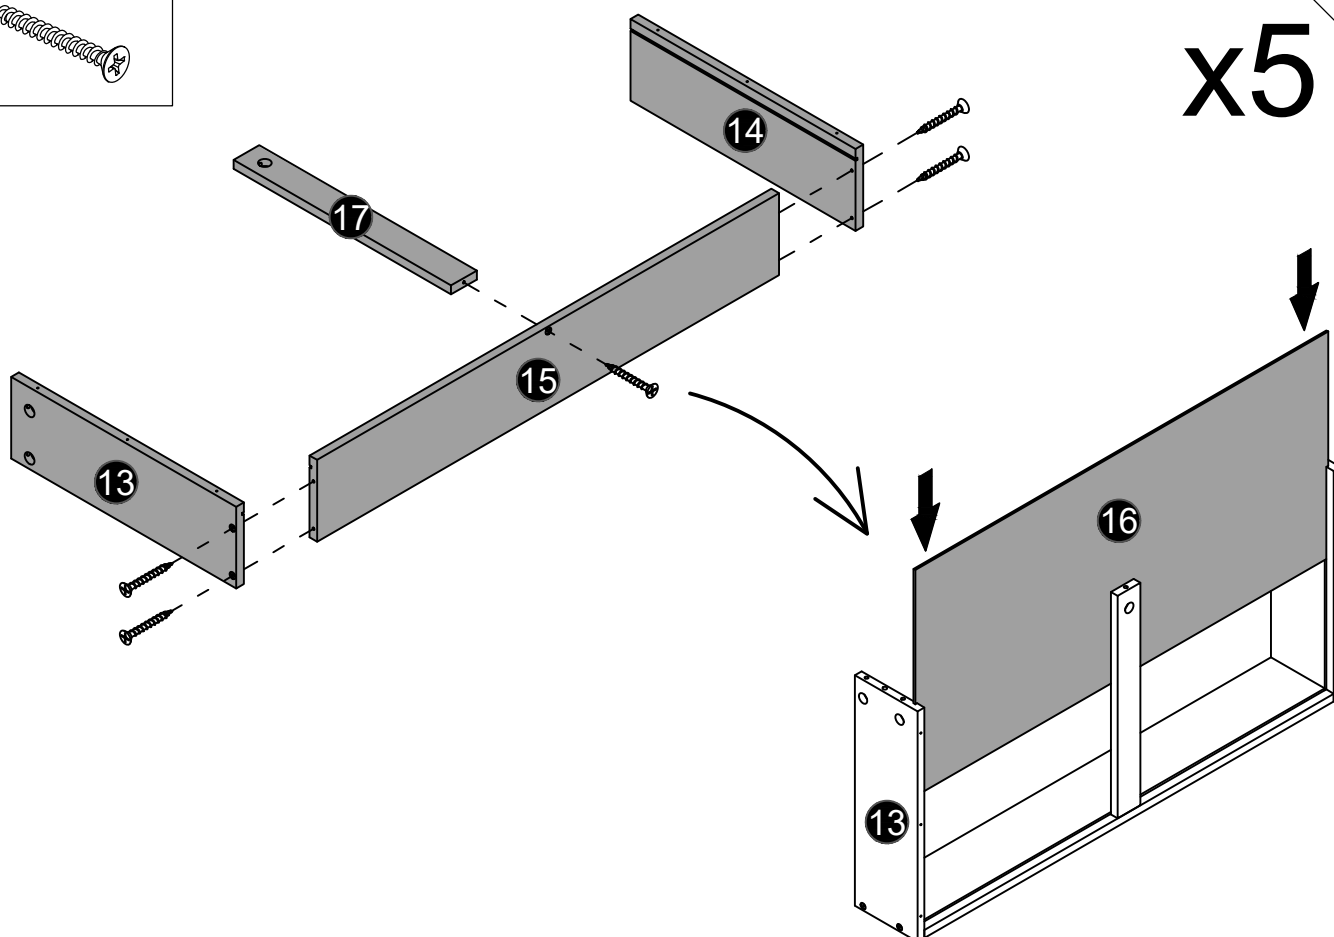D x25**01****x5**



x5

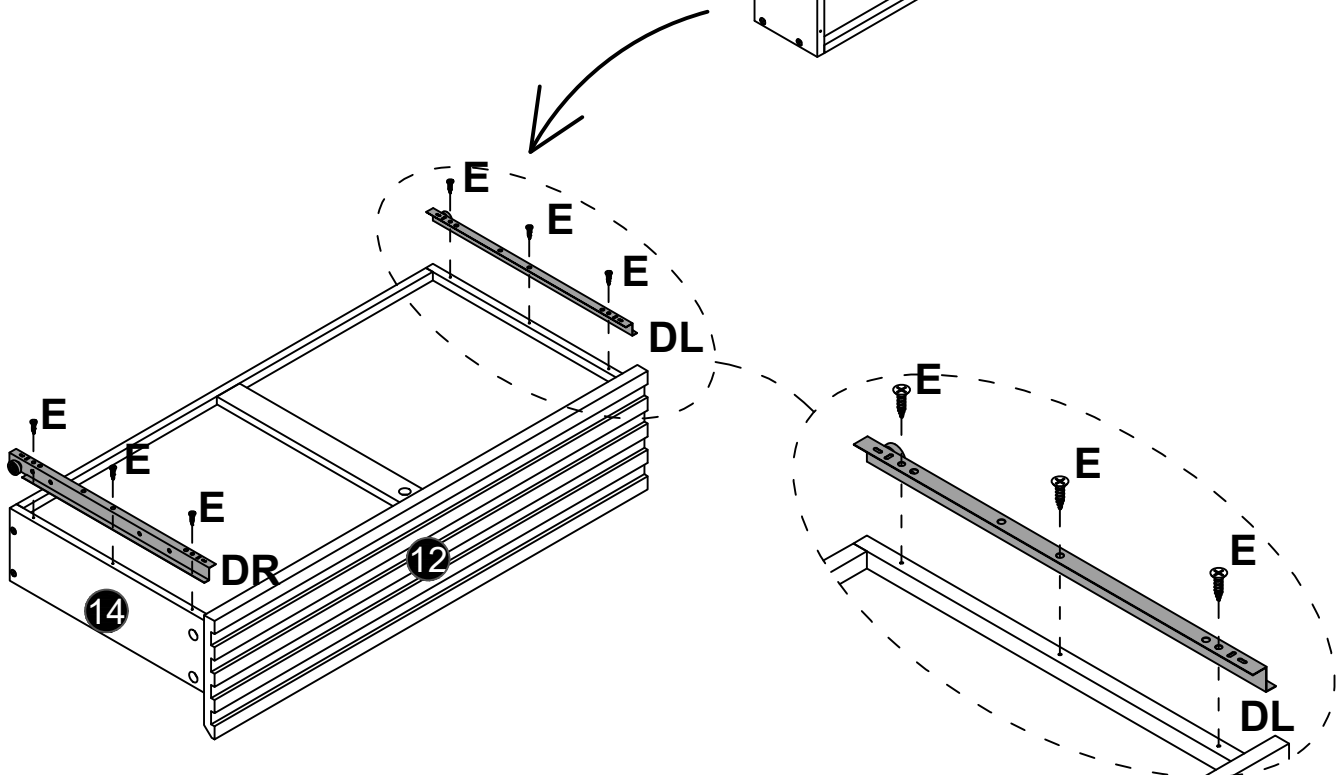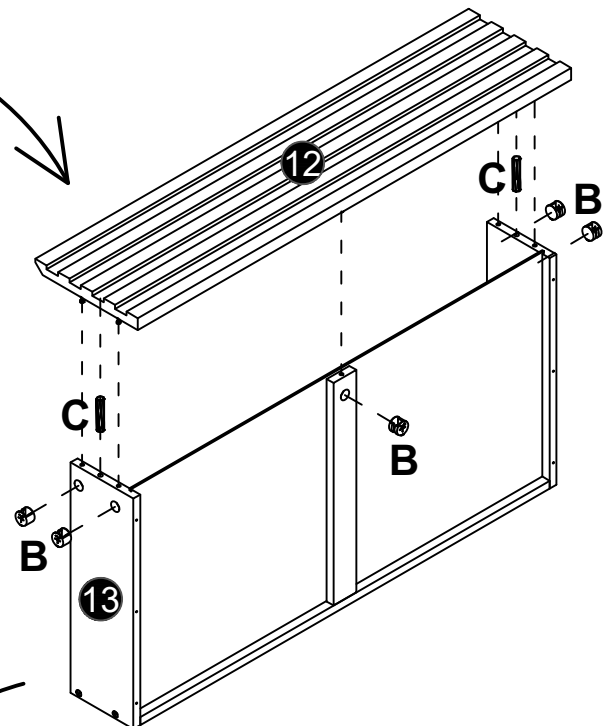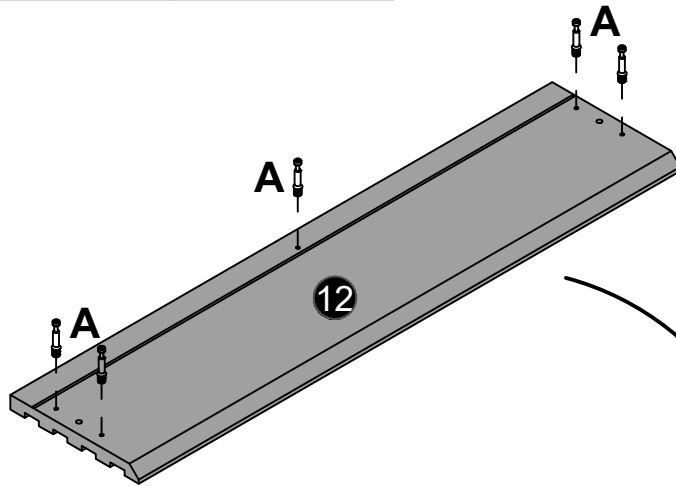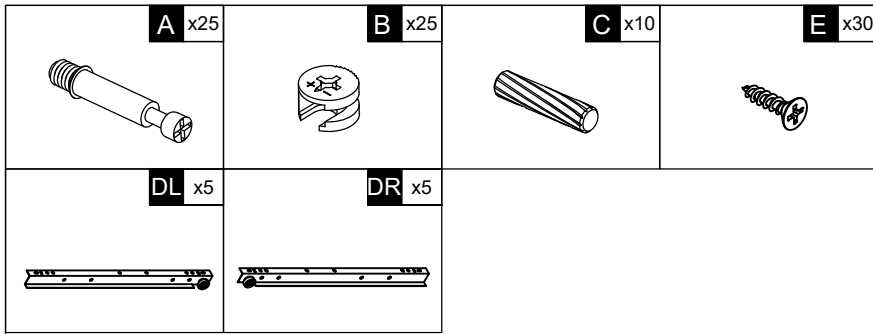

A x4

E x15



CL x5

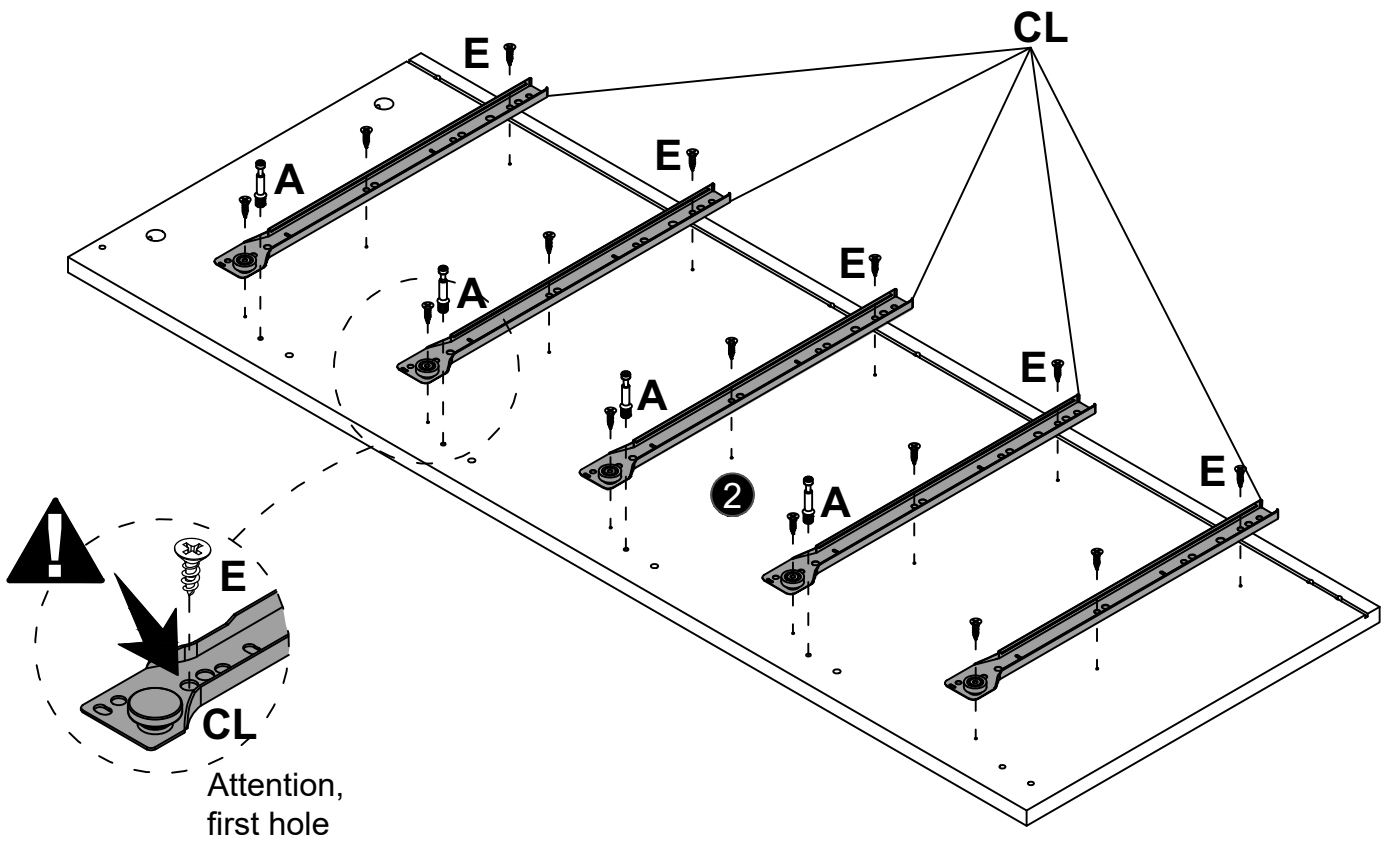

A x4

E x15


CR x5

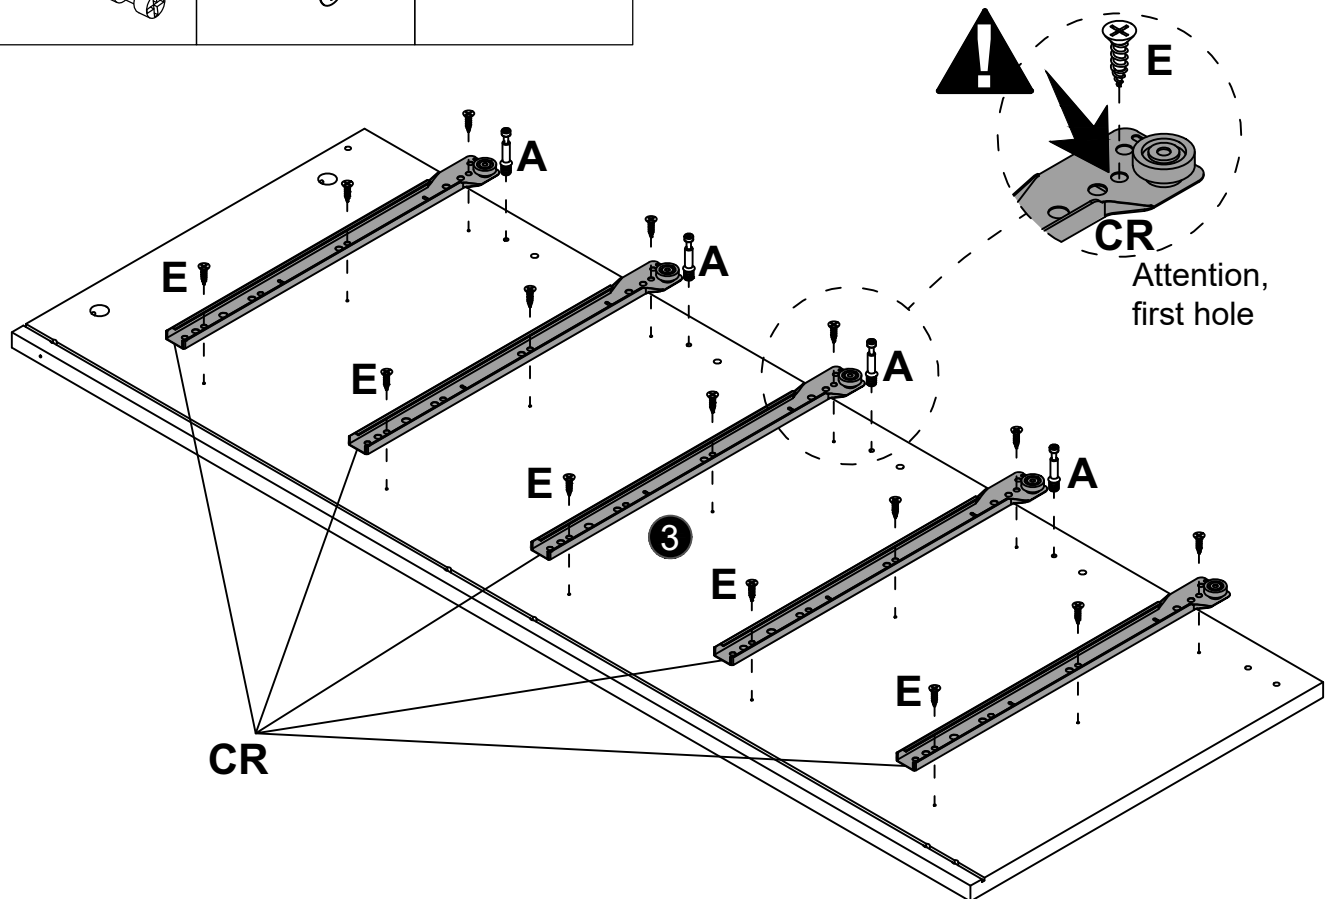

F x6



05

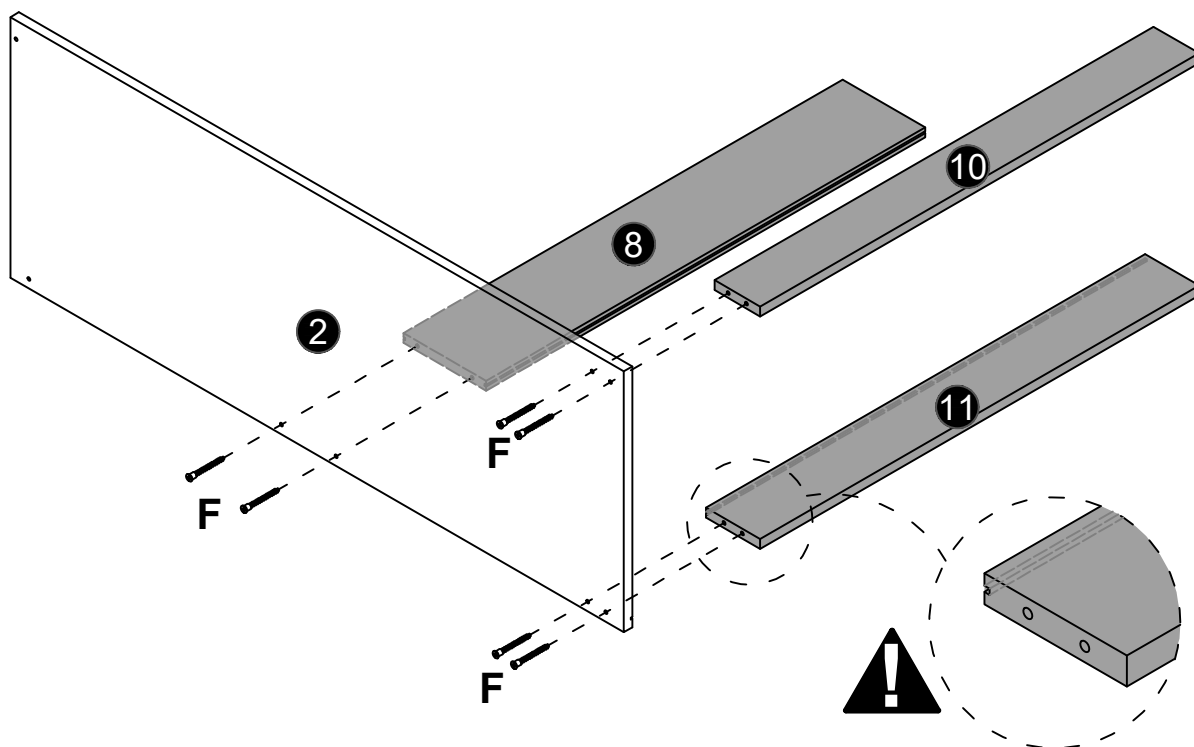


B x4




C x4



06

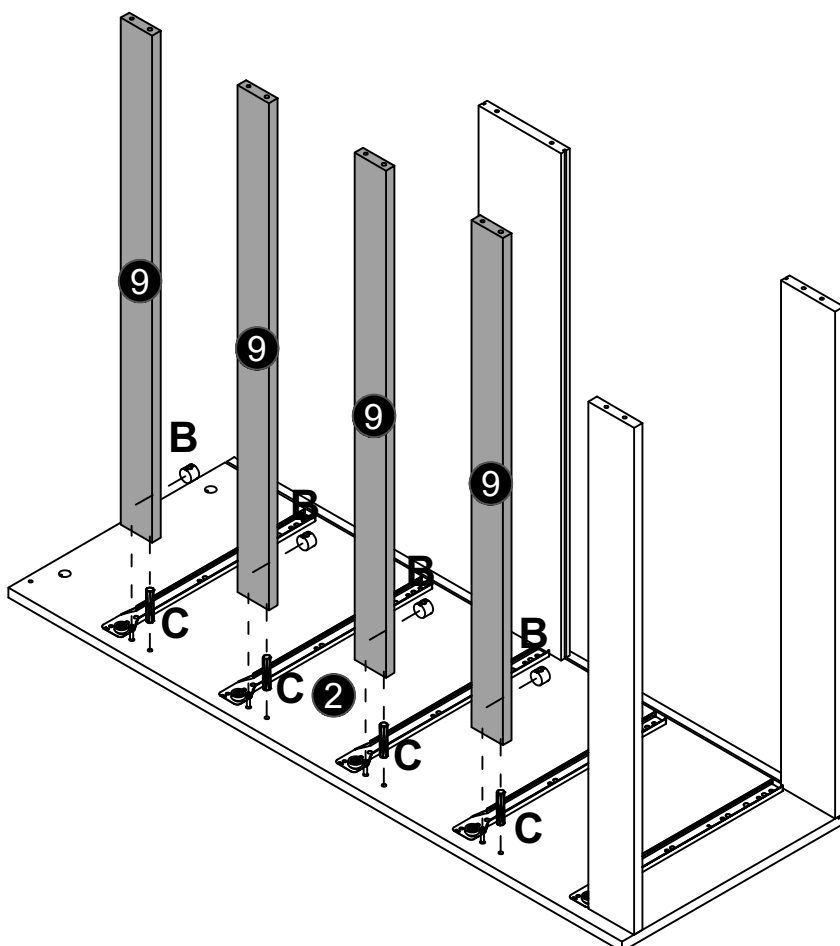

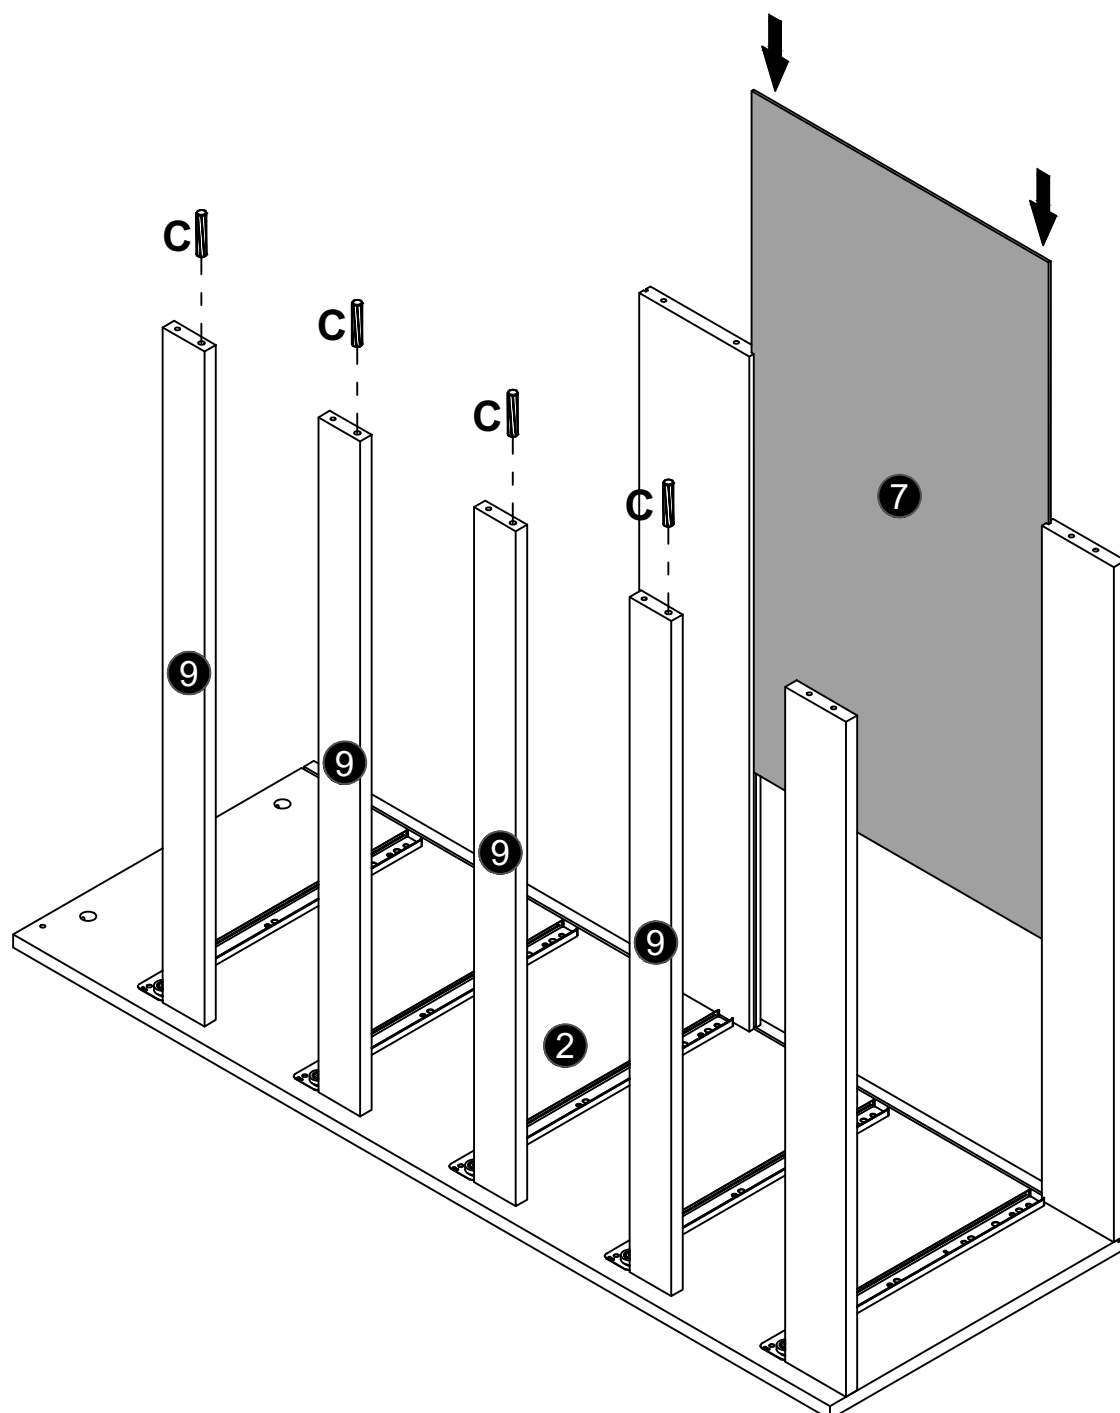



B x4

F x6



08

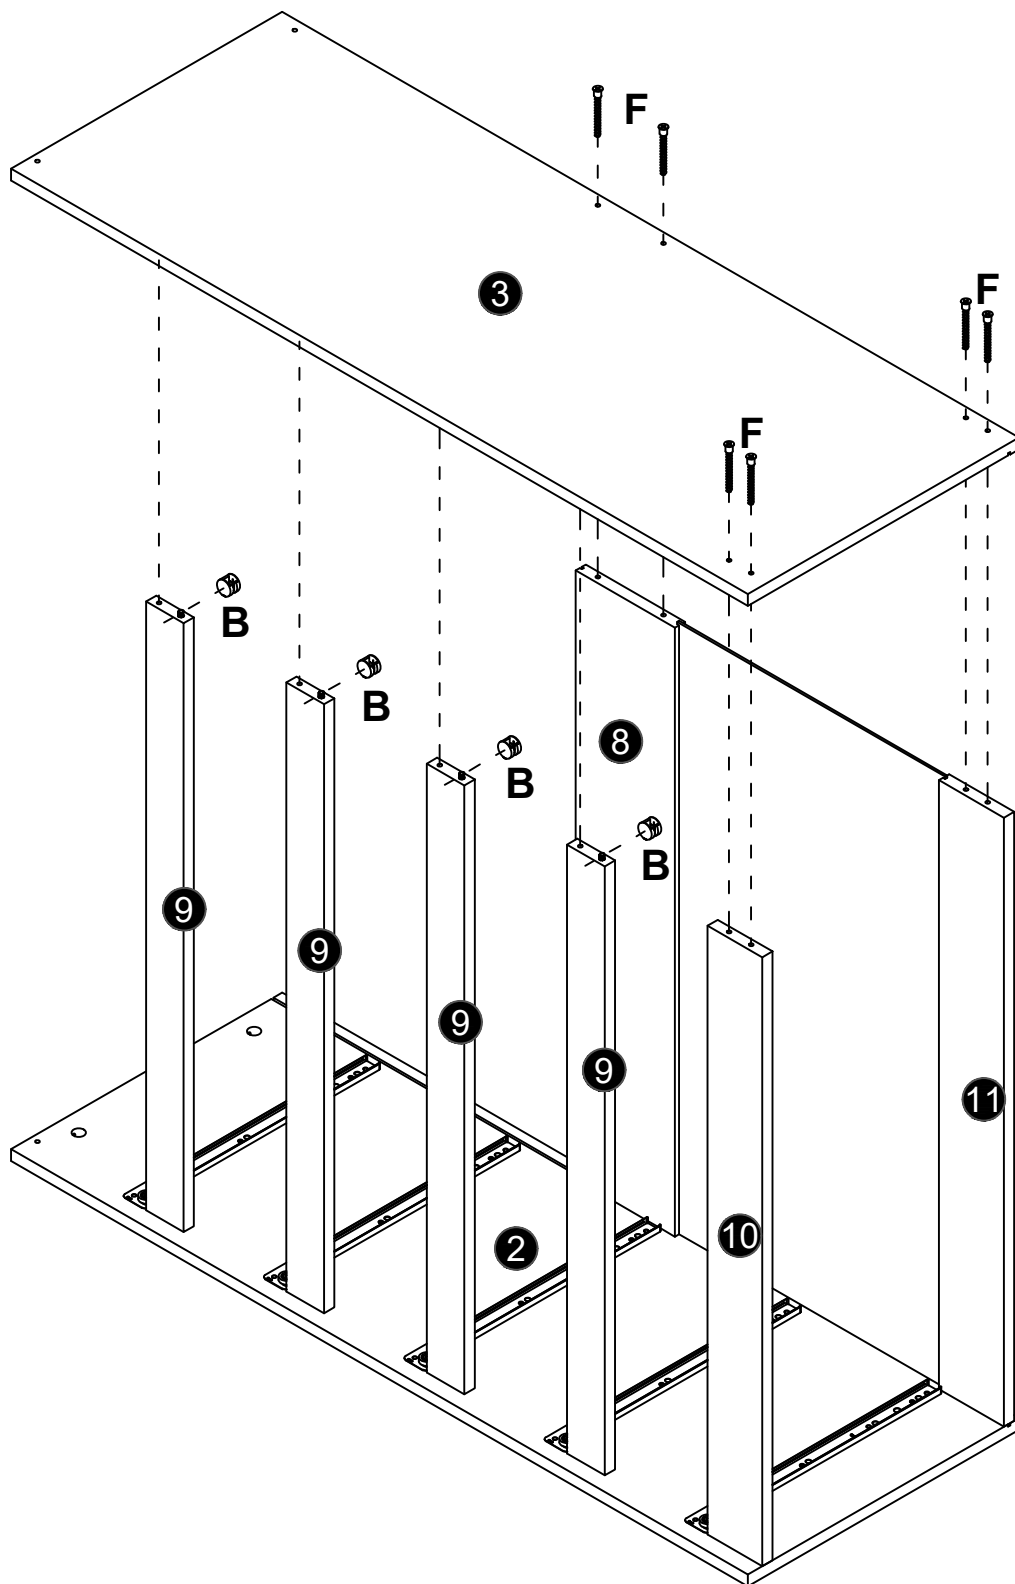


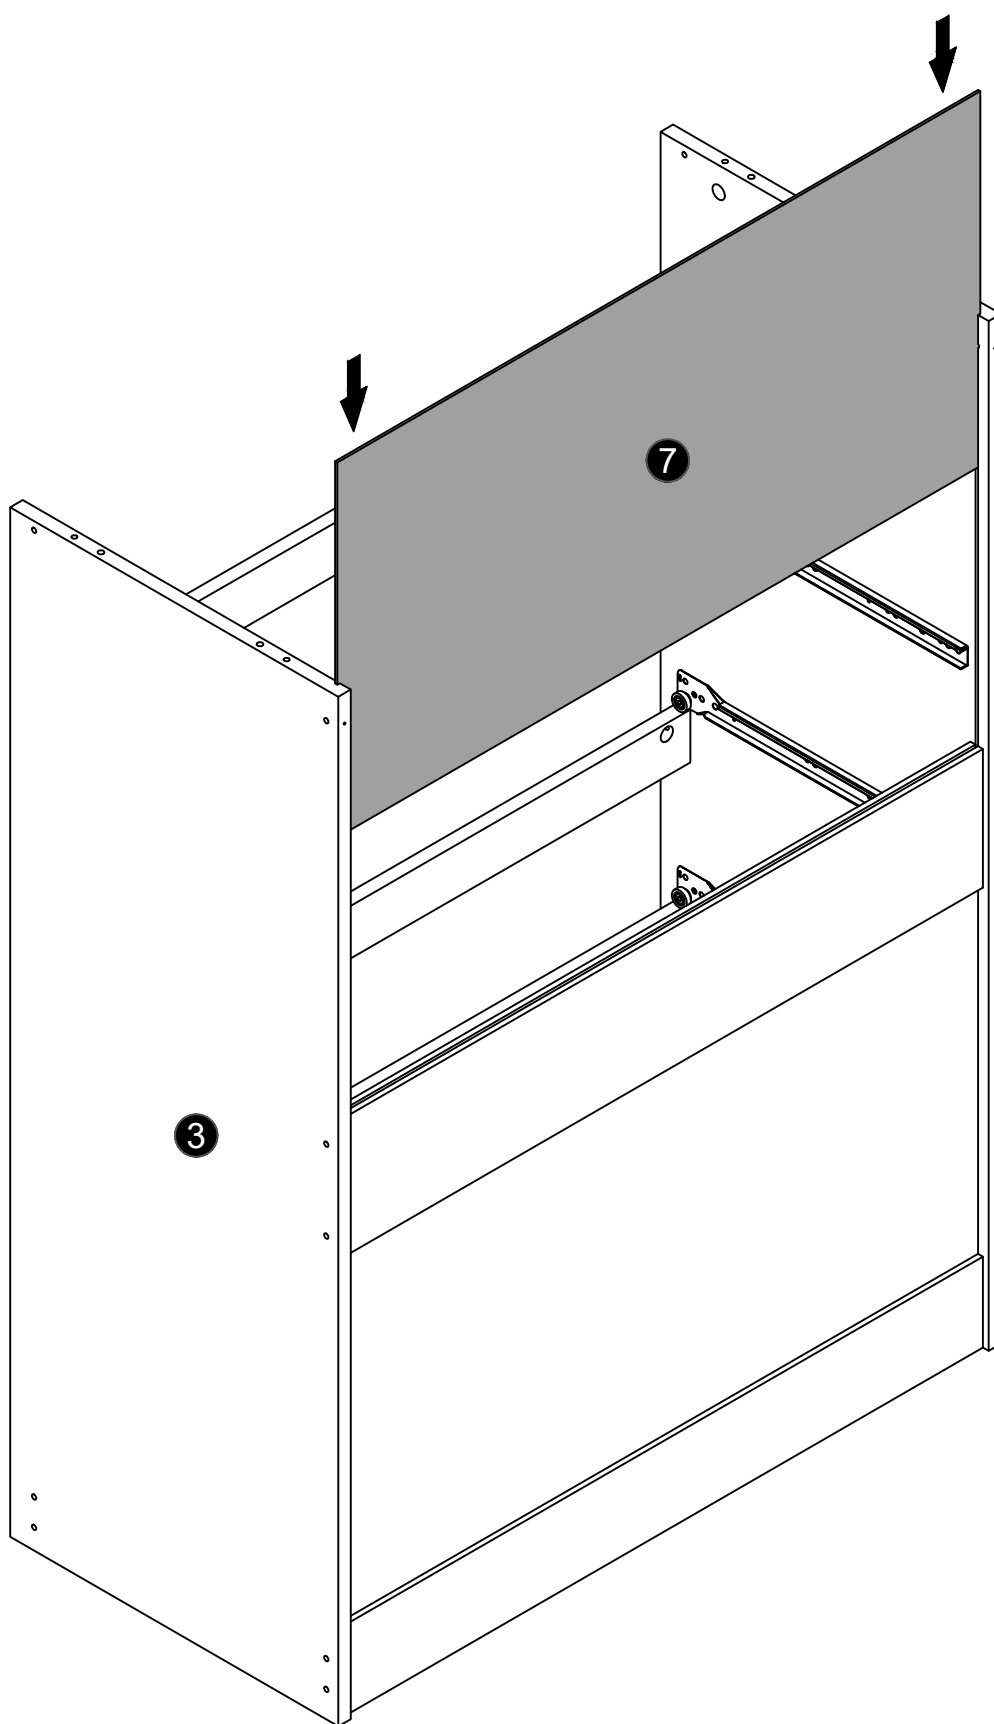



C x4

F x4


10

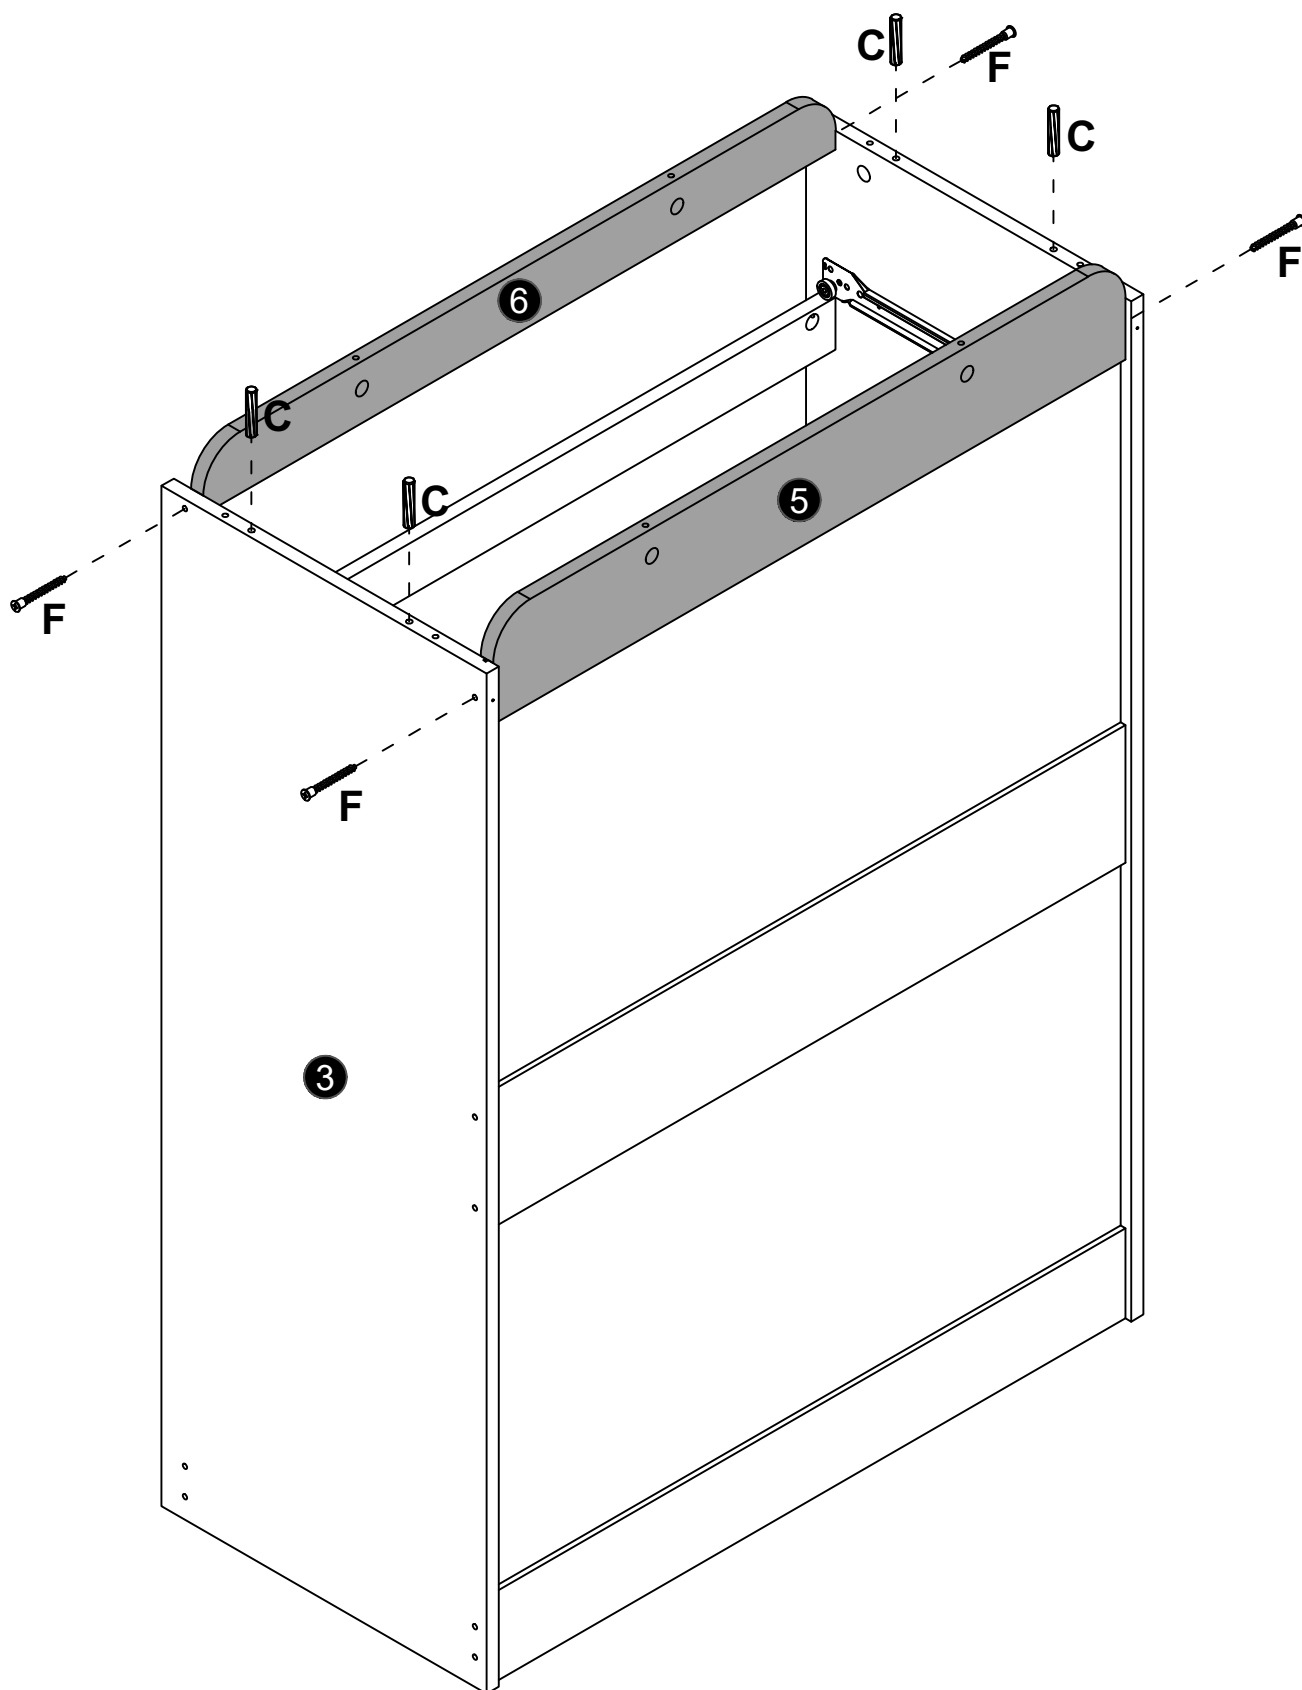

J x8

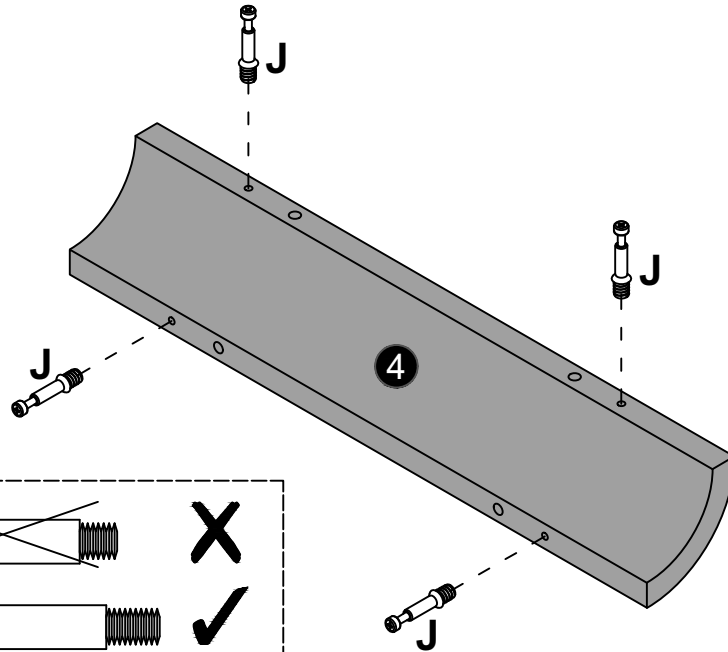


x2

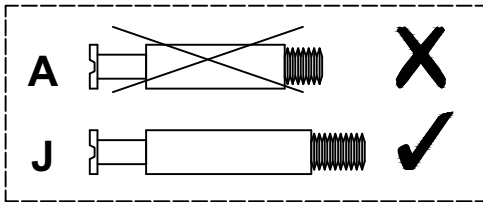

Caution :Need to use the correct part #J instead of part #A.


A x4



B x4




C x4

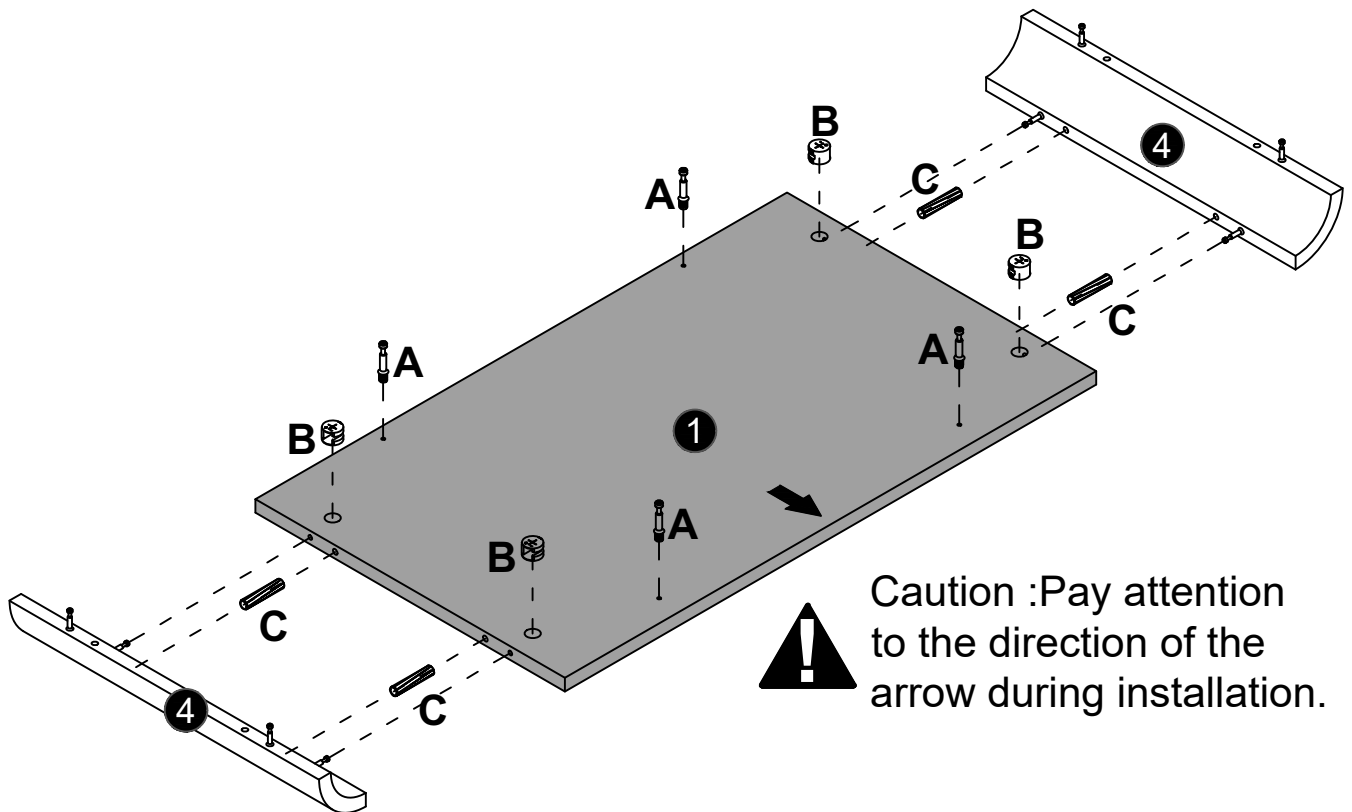


Caution :Pay attention to the direction of the arrow during installation.



Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

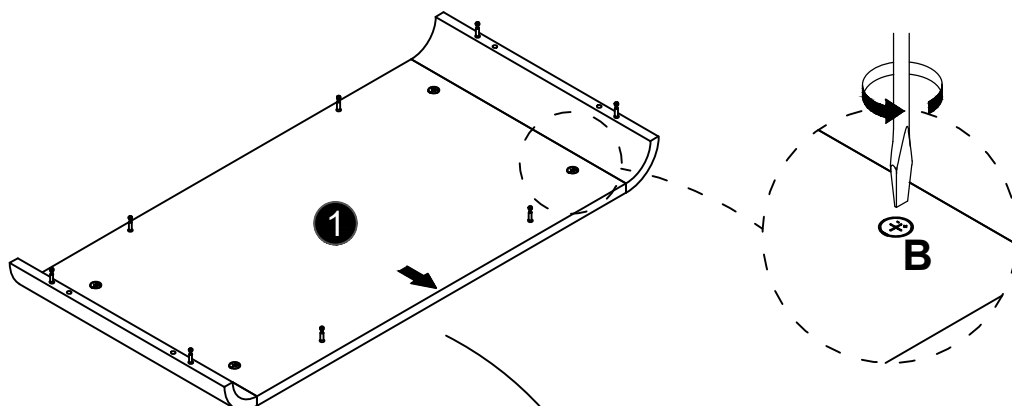

Caution : Pay attention to the direction of the arrow during installation.

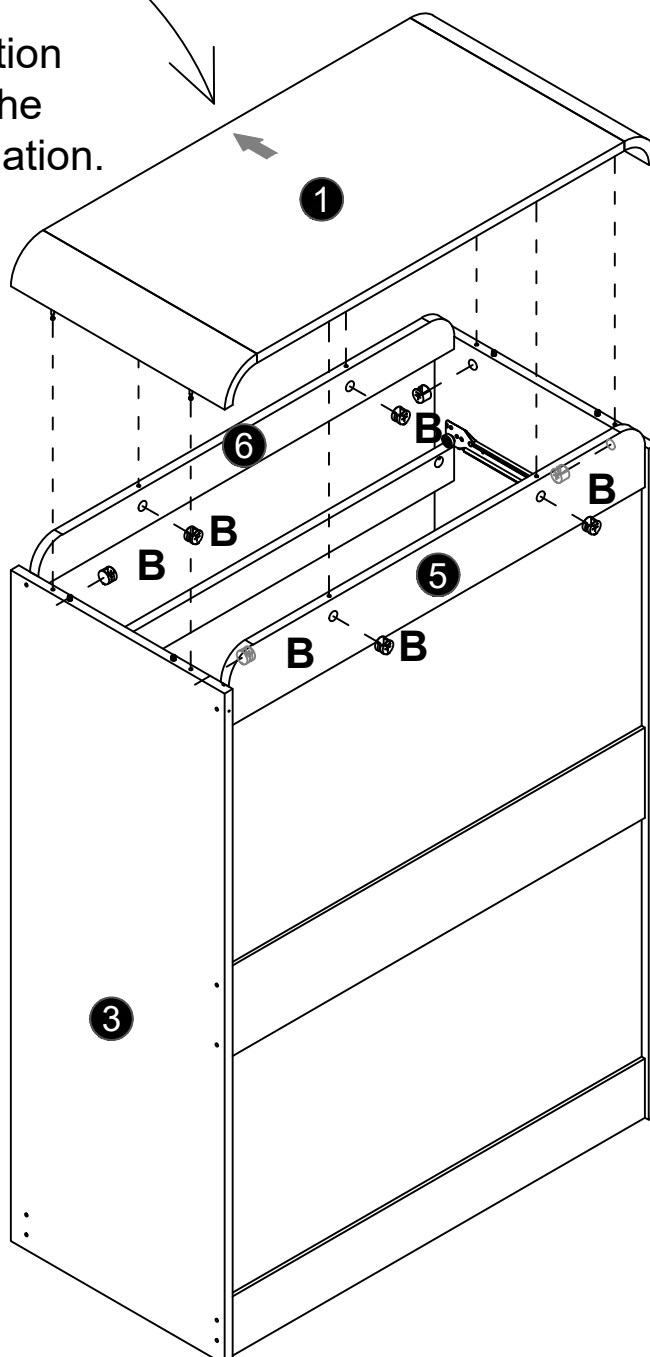


G x8



G-1



G-2

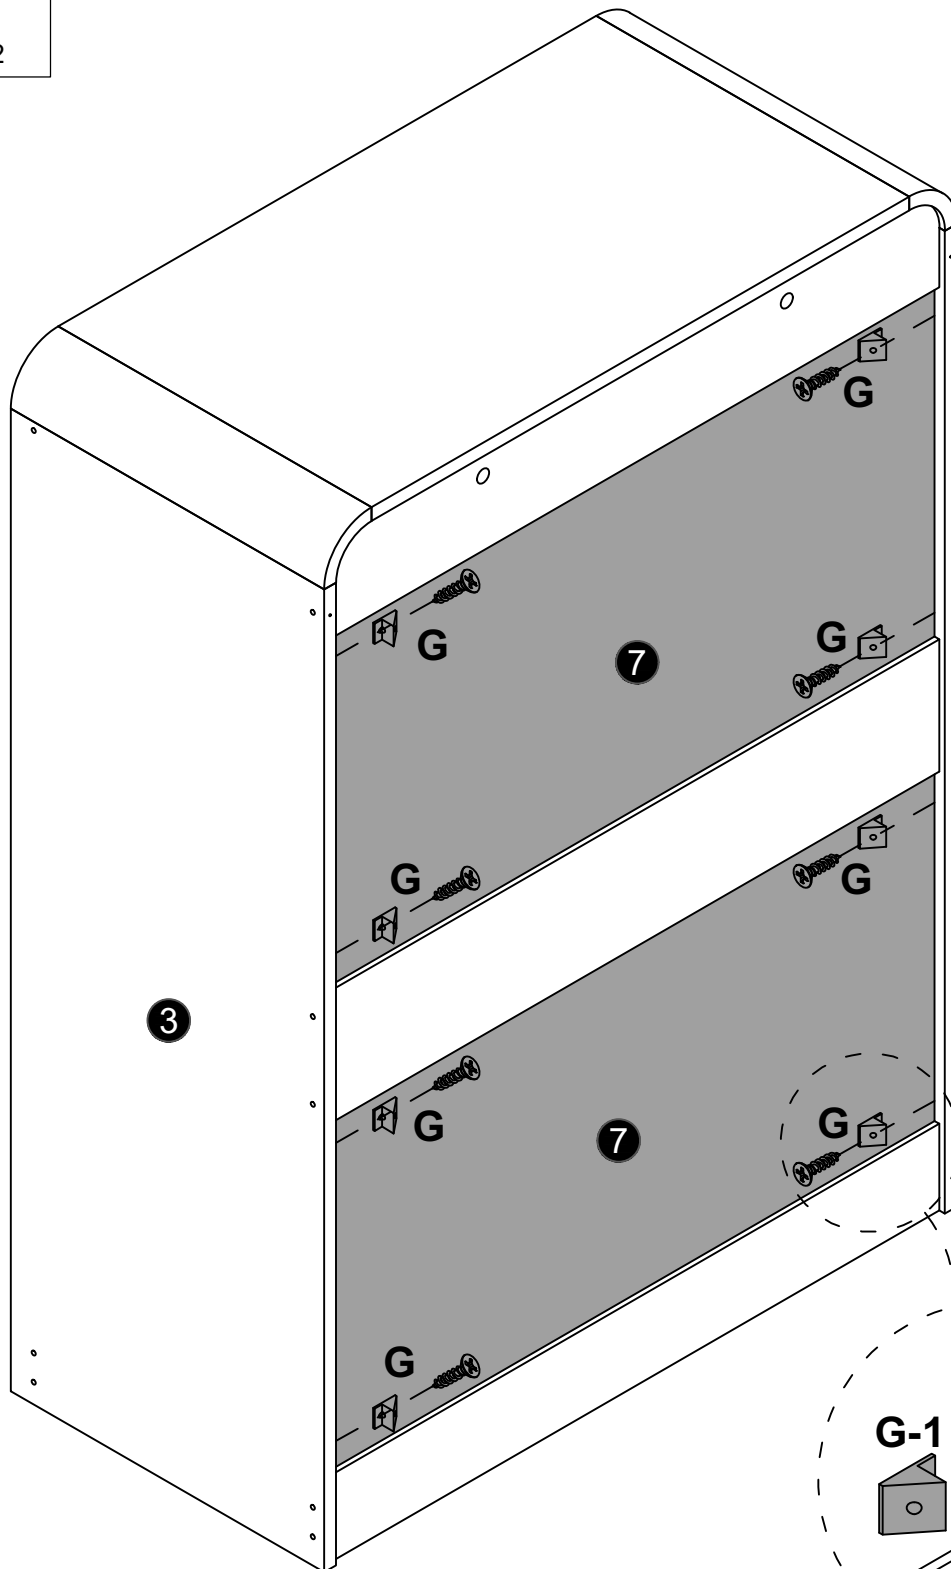


G-1






G-2




(1)

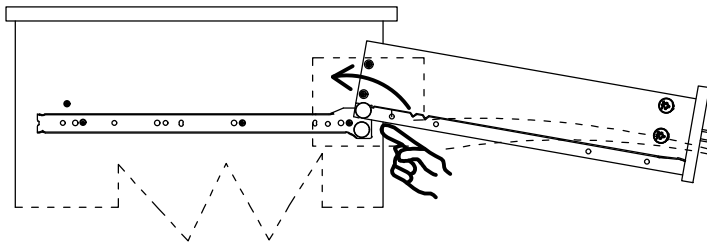


(2)

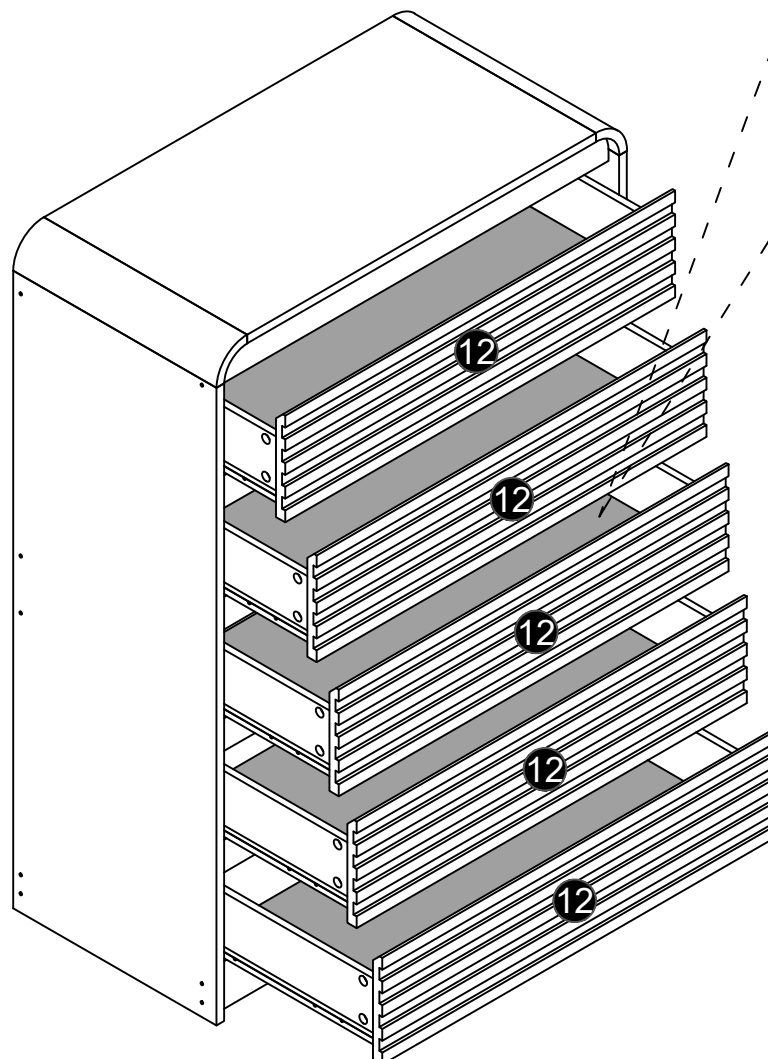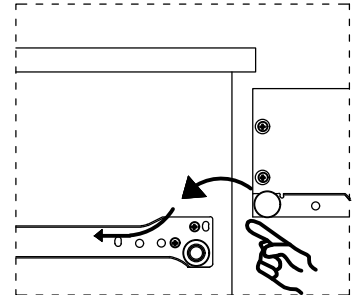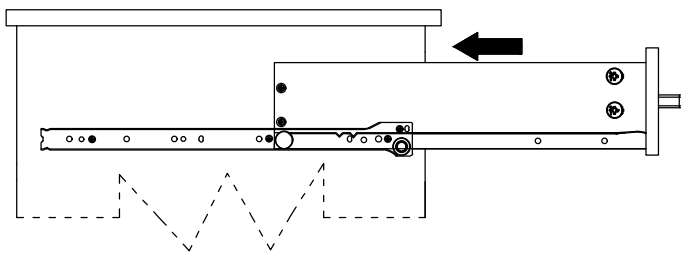

I x16

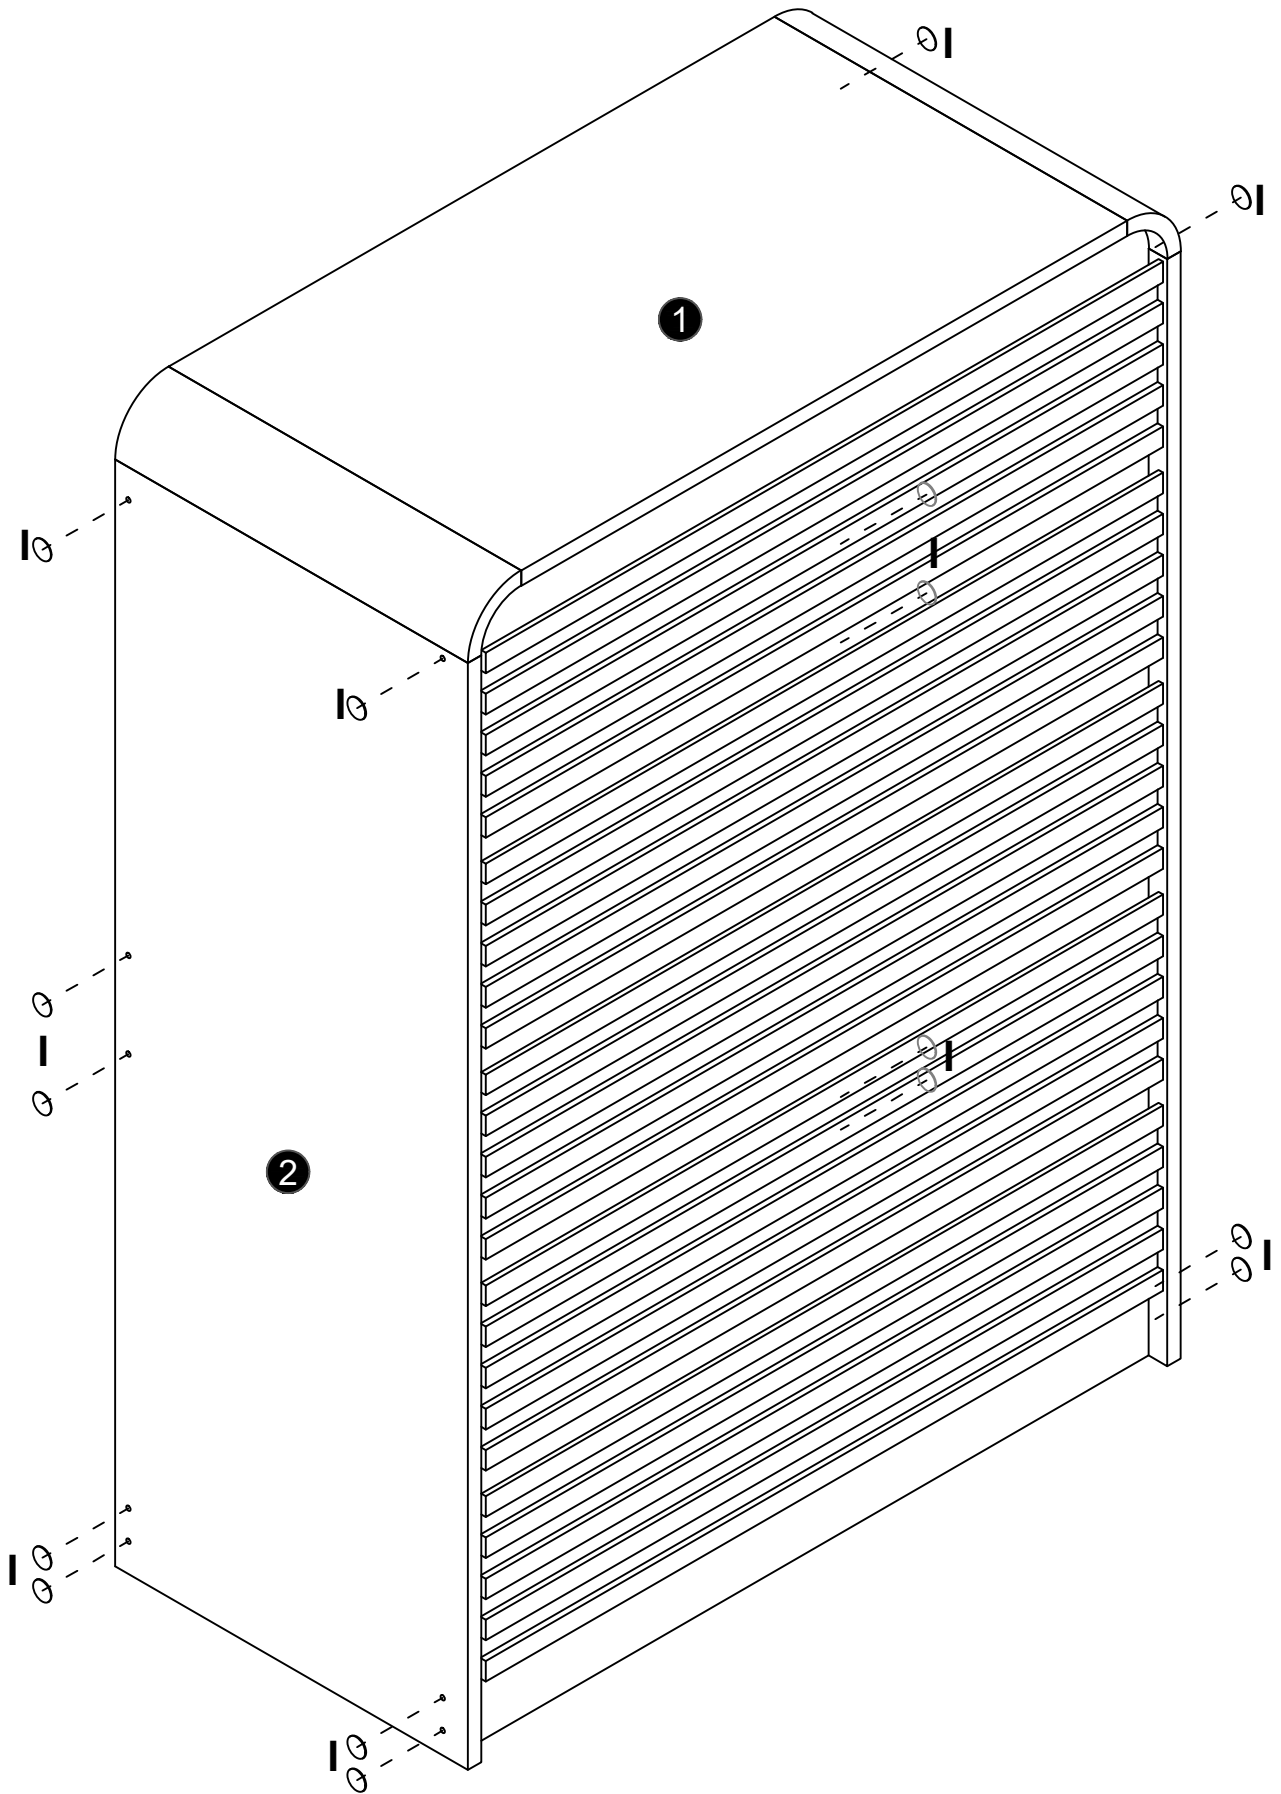

D x2



H x2



H-1



H-2




H-3

H-1

H-2

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

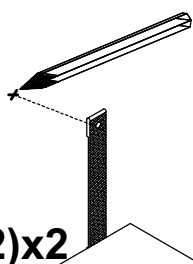

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

+
drilling hole
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

H-3

(4)x2

WALL

H-3

D

(5)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

