










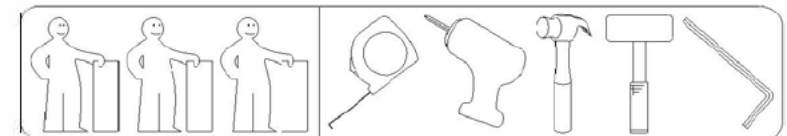
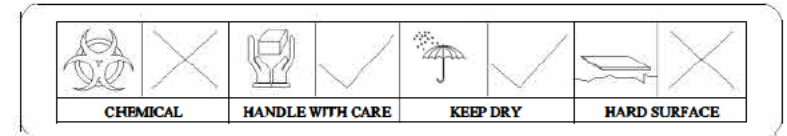




	ACCESSORIES	QUANTITY
A	 WOOD DOWEL M8x30MM	48 PCS
B	 WOOD DOWEL M8x25MM	4 PCS
C	 MINIFIX M5x24MM	34 PCS
D	 MINIFIX CASING	34 PCS
E	 WHITE LEG PIN	18 PCS
F	 SCREW M4x28MM	8 PCS
G	 SCREW M4x38MM	48 PCS
H	 SCREW M6x50MM	16 PCS
I	 CASTER TWR-25 SCREW M3.5x12MM	24 PCS 48 PCS
J	 ALLEN KEY	1 PC
K	 SCREW M4x32MM	20 PCS






# START ASSEMBLY


## STEP 1

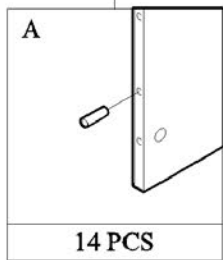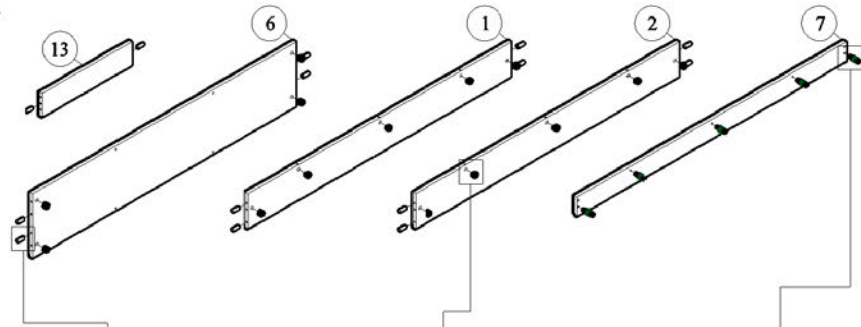

14 PCS


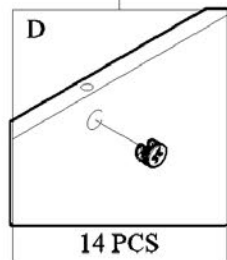


14 PCS

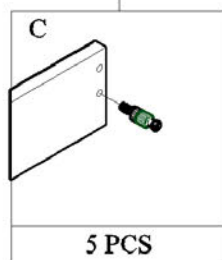


5 PCS


## STEP 2

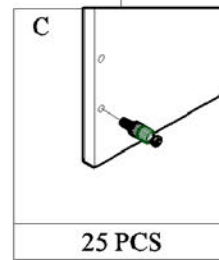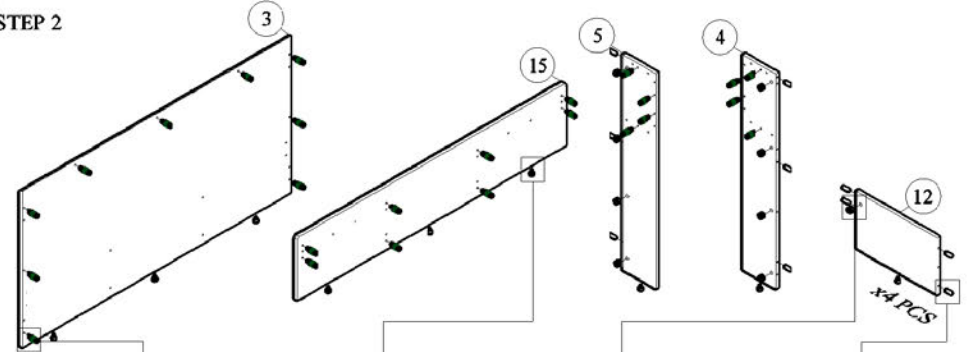


25 PCS

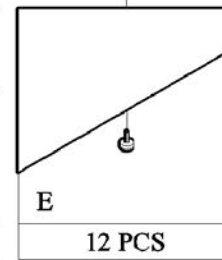

12 PCS


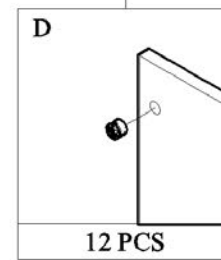


12 PCS

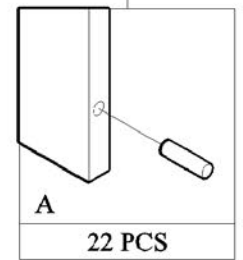


22 PCS


## STEP 3

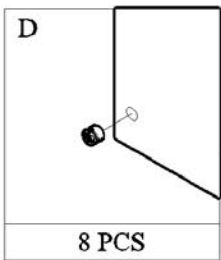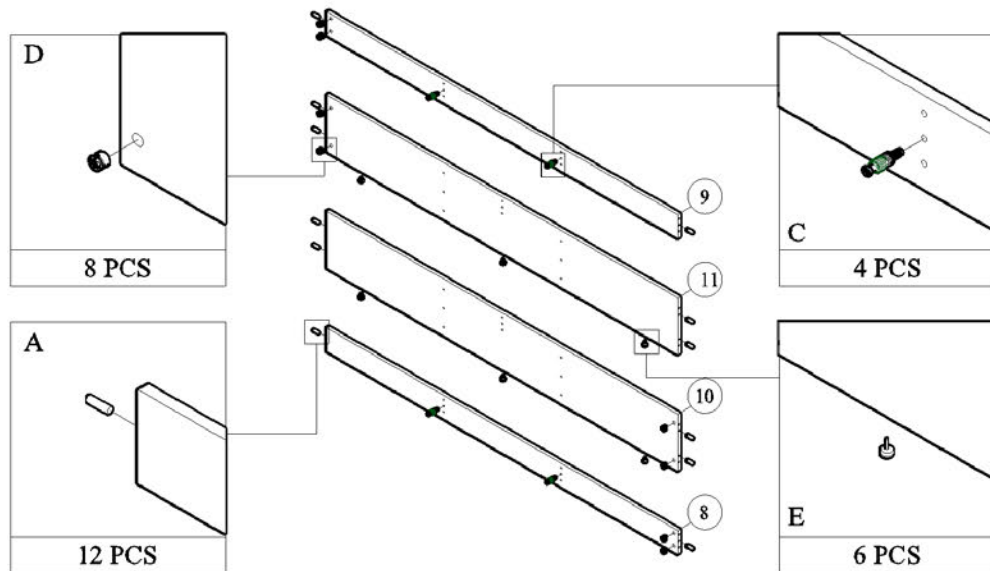


8 PCS

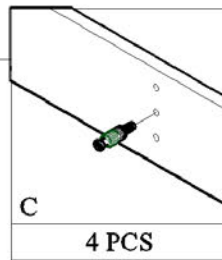

4 PCS


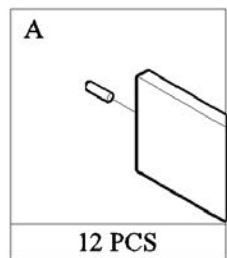


12 PCS

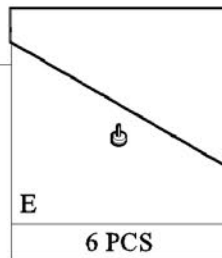


6 PCS


## STEP 4

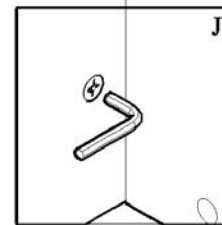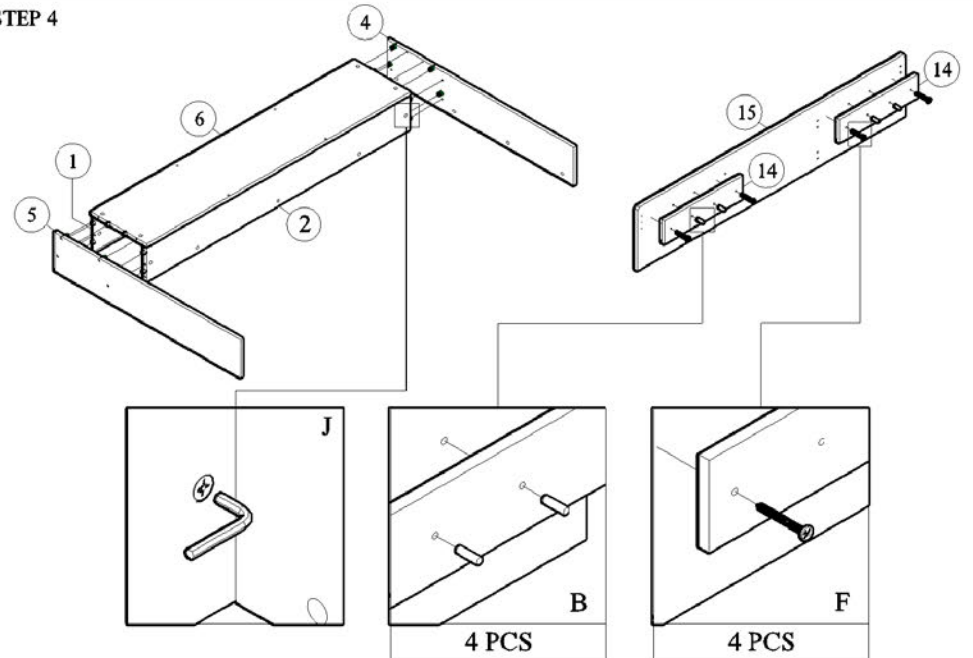


4 PCS

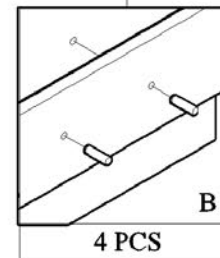


4 PCS

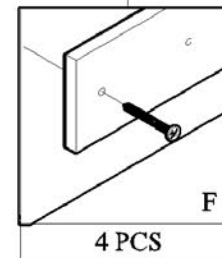


STEP 5

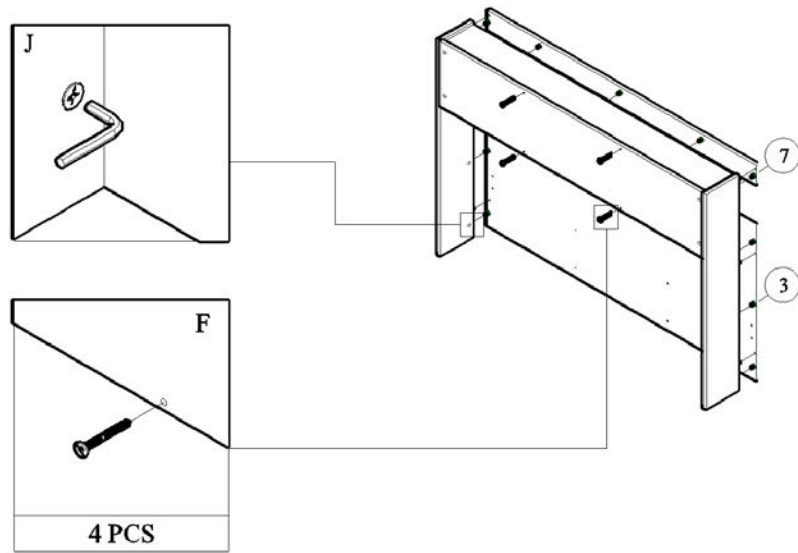


STEP 6

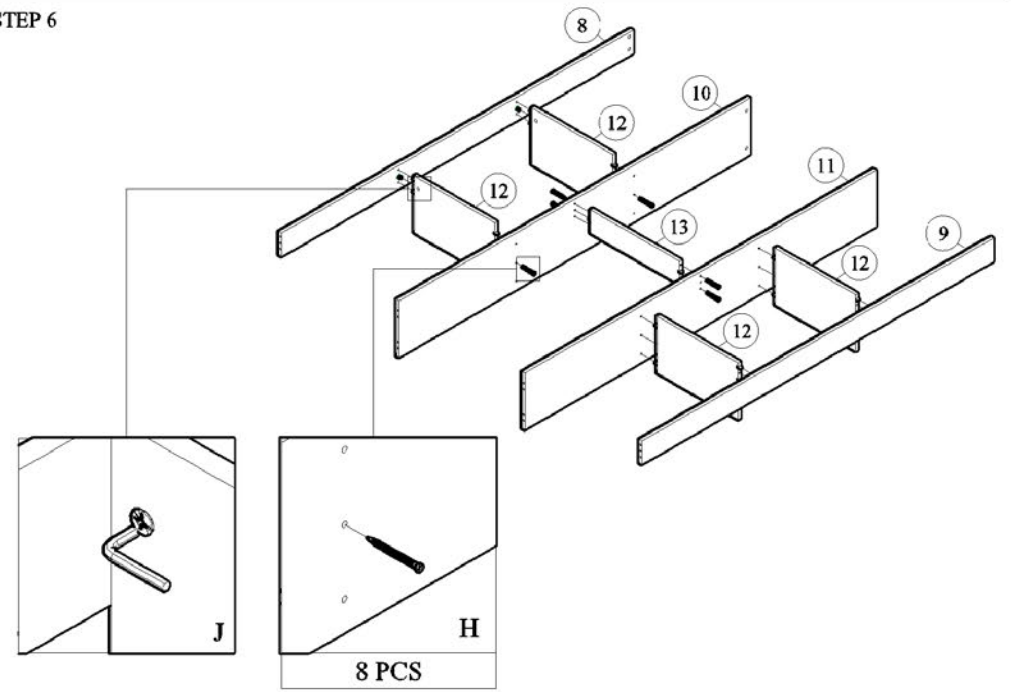


STEP 7

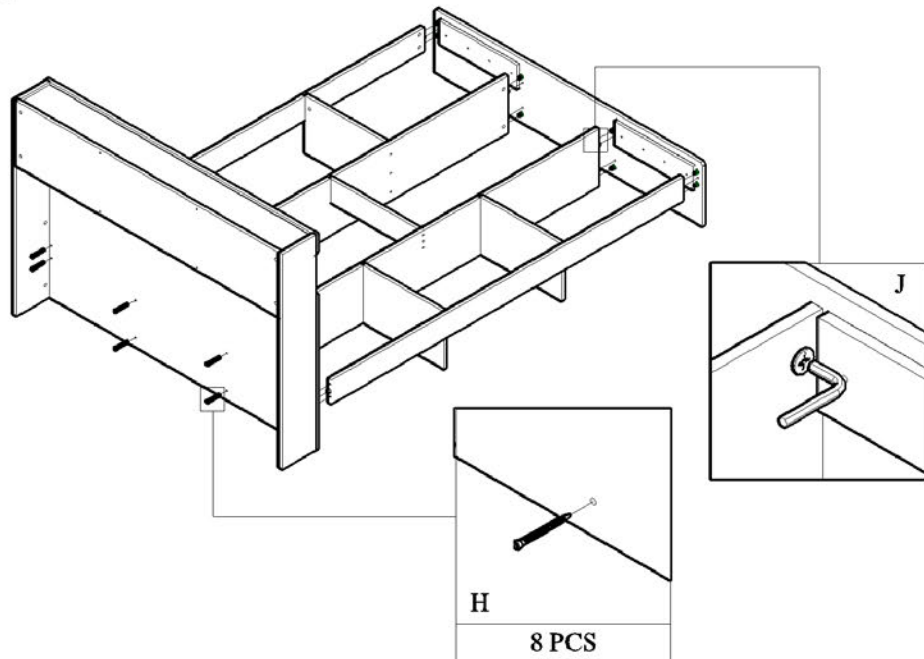


STEP 8

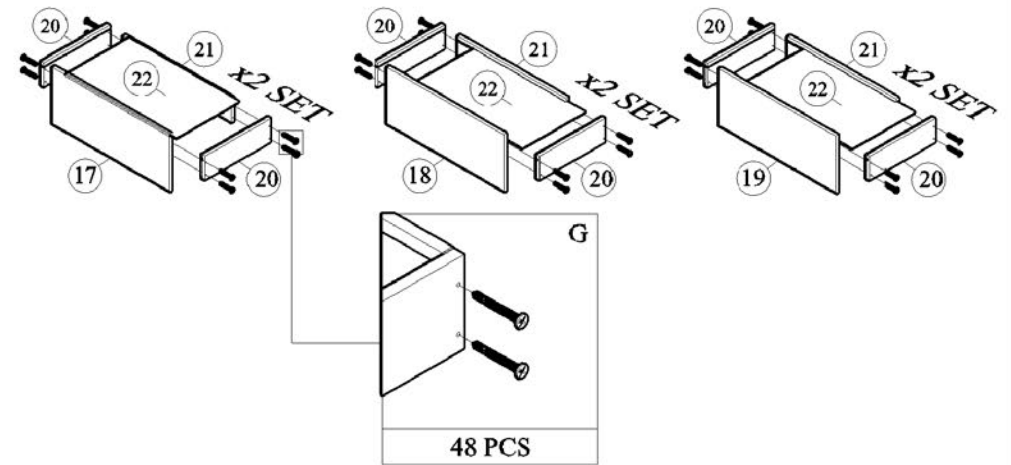


STEP 9

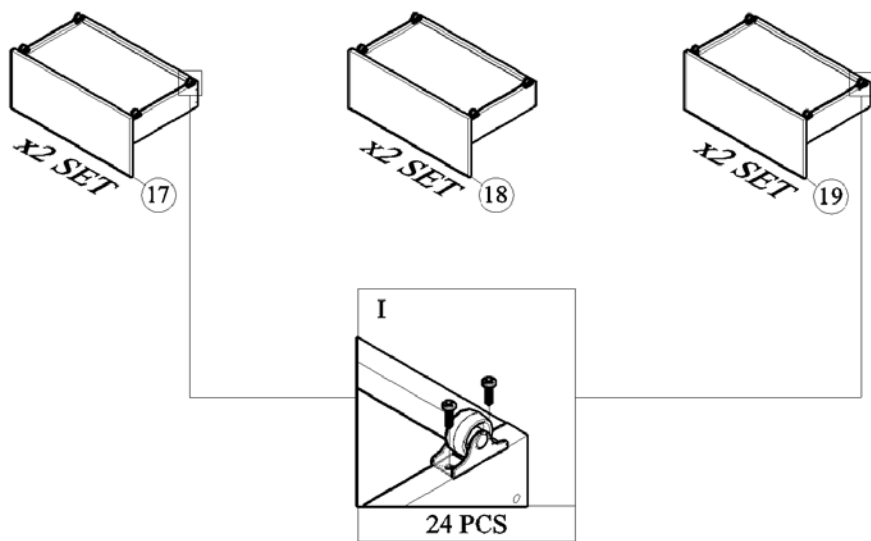

STEP 10

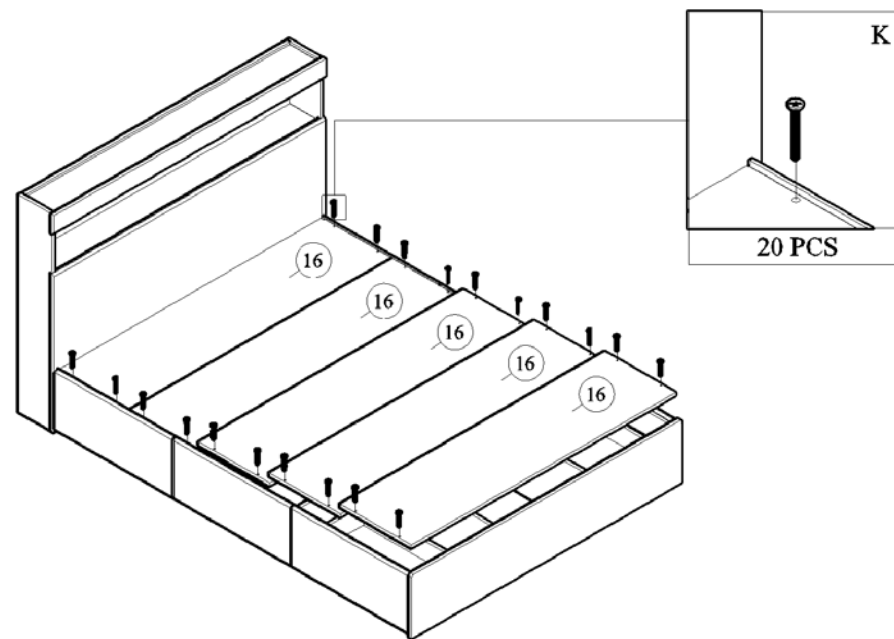

STEP 11

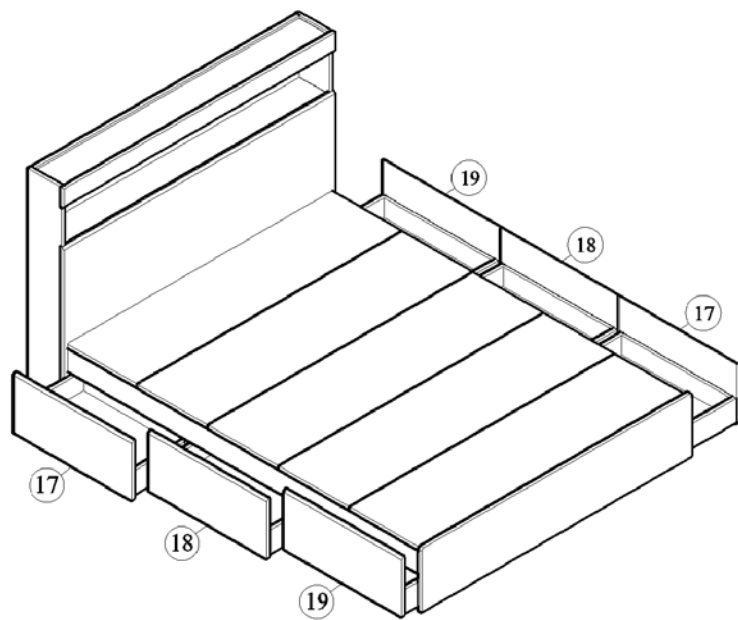

COMPLETED

