


Assembly Instructions

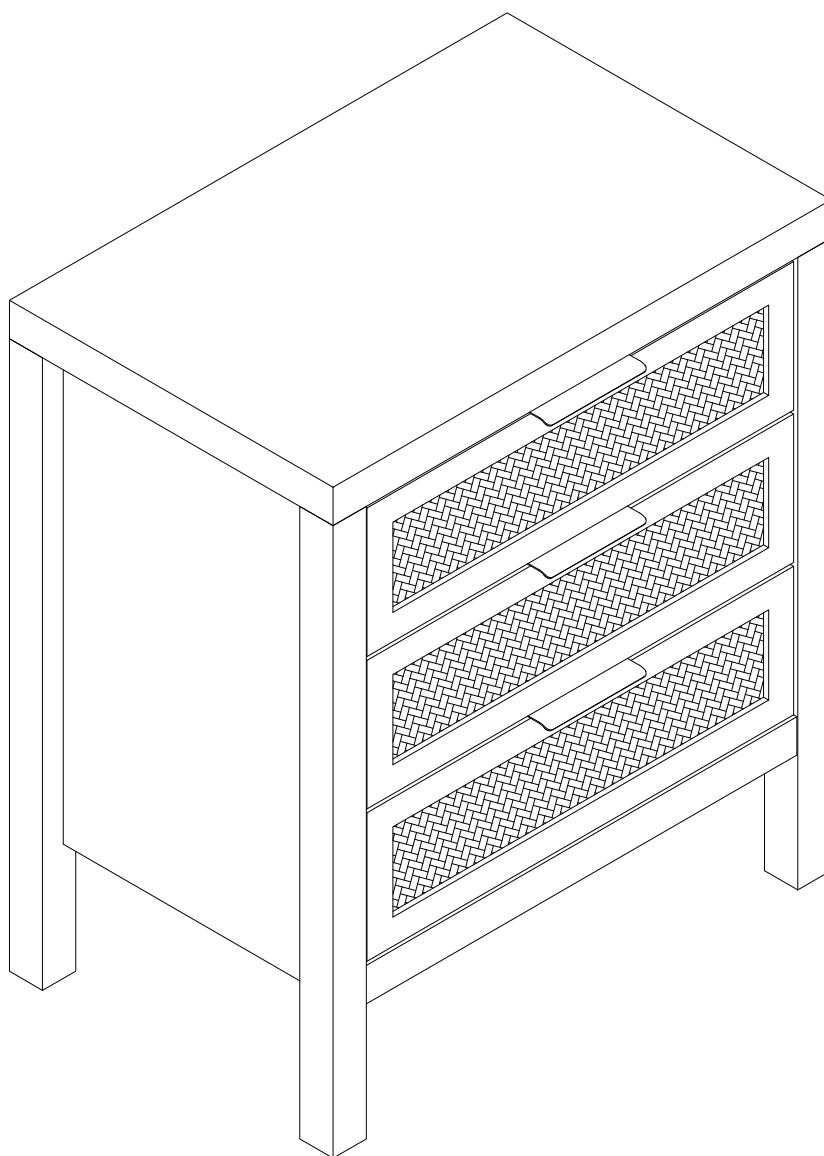


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

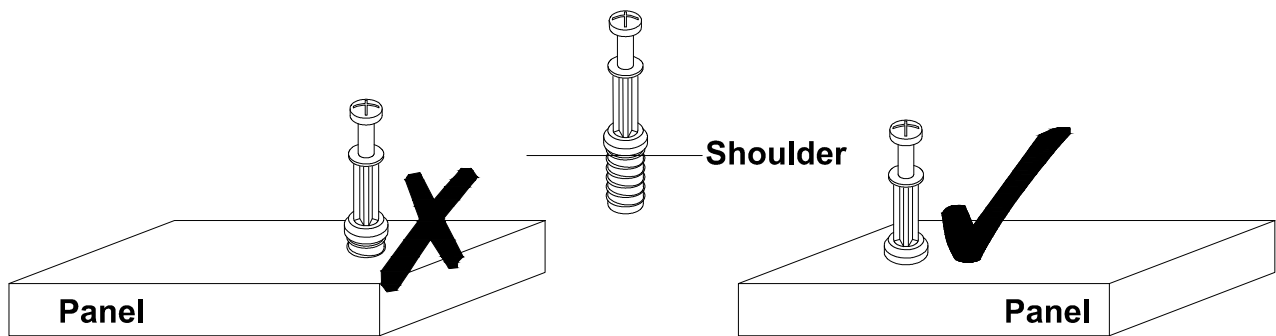

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

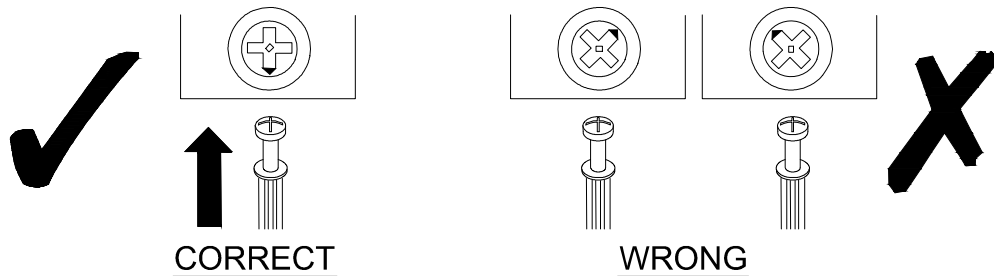

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

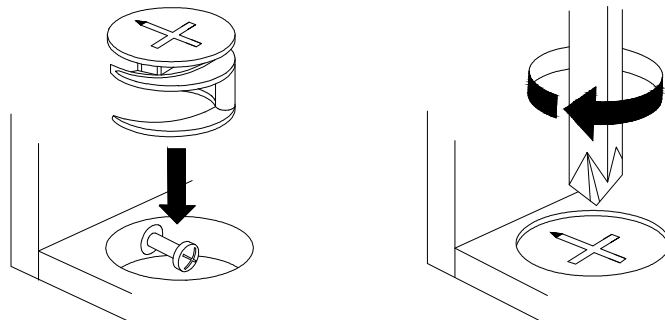


Turn cam lock clockwise to tighten.

Before Assembly


Tips Before Your Start

How to separate the drawer slider:

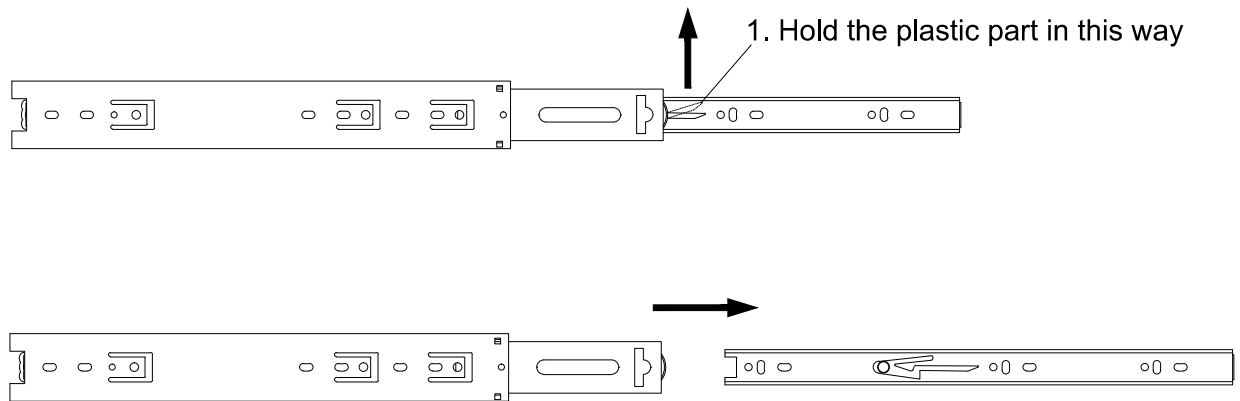


2. Pull out the inner slider for drawer box fixing

Drawer Front Alignment





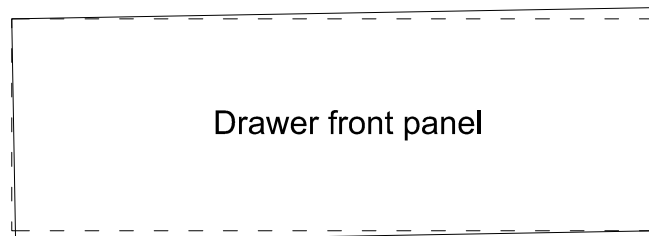


If the drawer front panel is NOT level after being assembled, then...

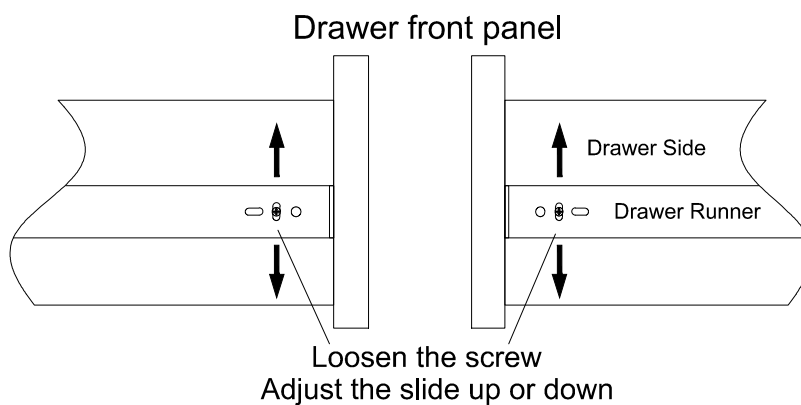


Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.


Part List

No. A Quantity:44 Sets Cam Lock Dowel 	No. B Quantity:15 Pcs Dowel 8*30mm 	No. C Quantity:30 Pcs Screw M3.5*14mm 	No. D Quantity:12 Pcs Screw M4*30mm 
No. E Quantity:3 Sets Drawer Slider 10" 	No. F Quantity:3 Pcs Handle 120*38*17mm 	No. G Quantity:4 Pcs Slip Mat Ø20 	No. H Quantity:4 Sets Plastic Wedge 
No. I Quantity:1 Sets Anti-falling Parts 			

Product structure

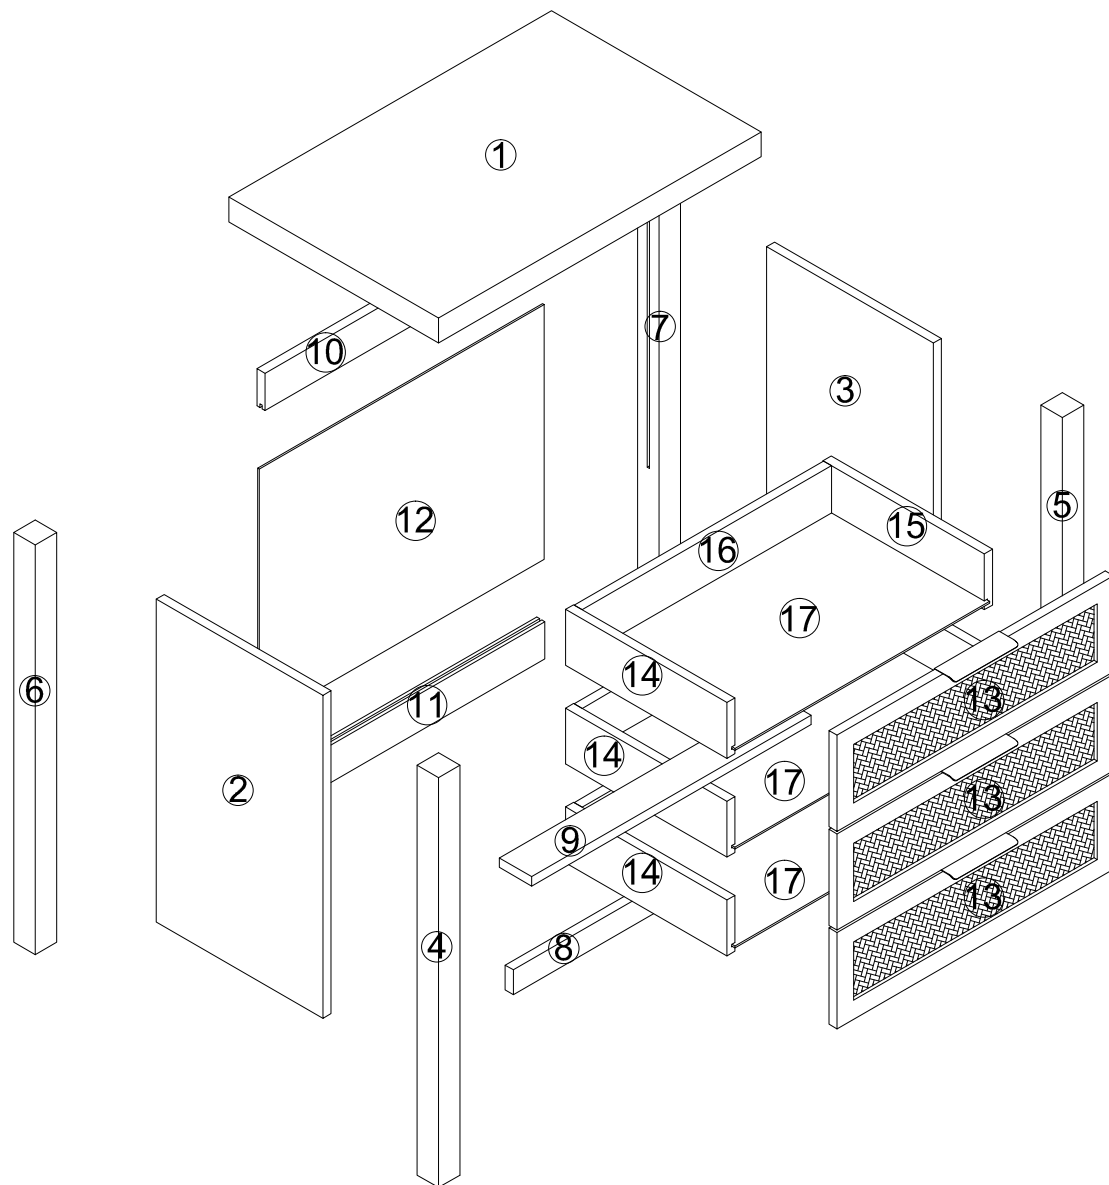


STEP 1

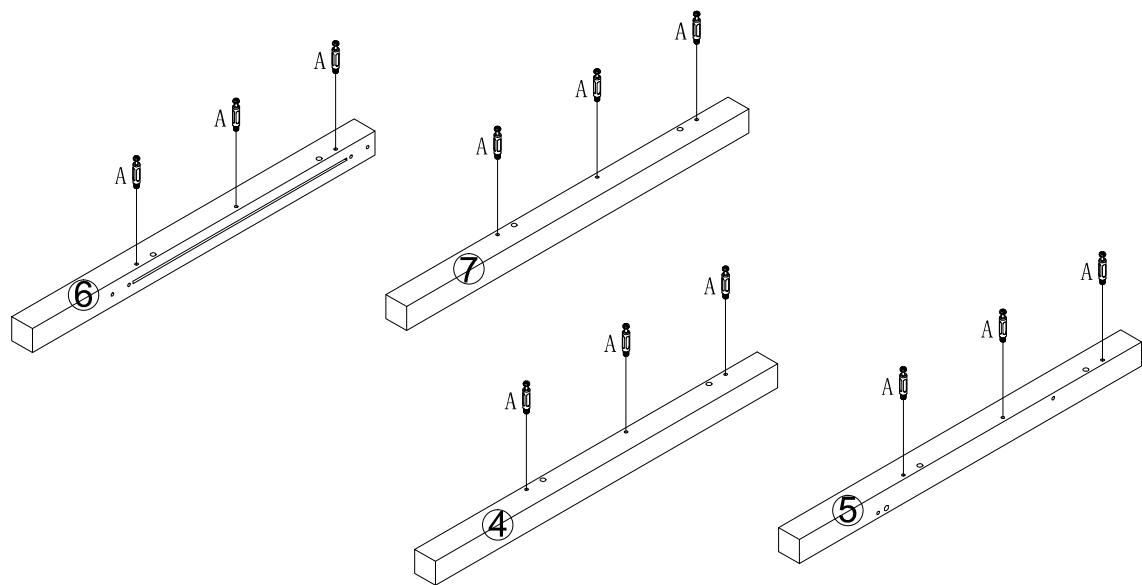

No. A
Quantity: 12 Pcs
8*28 mm




STEP 2

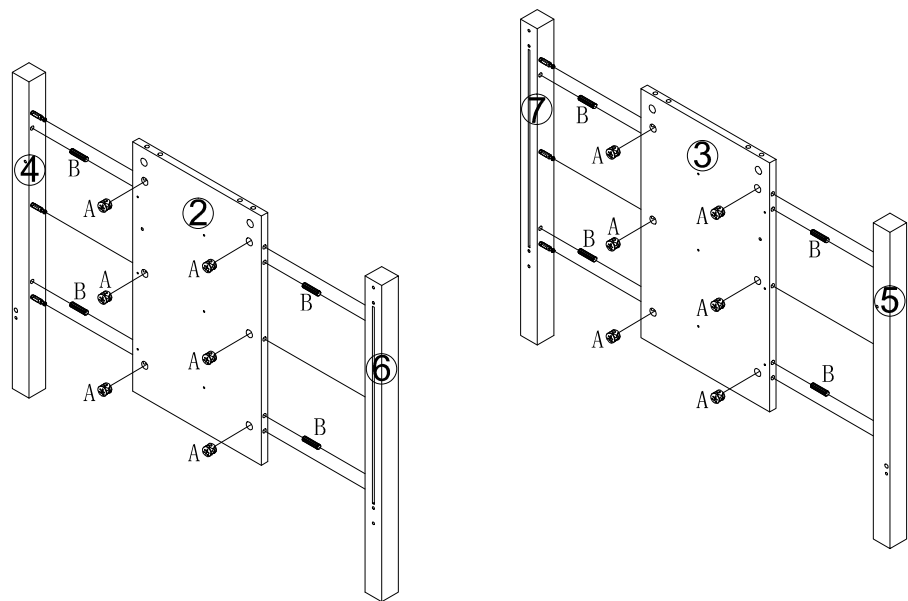


No. A
Quantity: 12 Pcs
Ø15



No. B
Quantity: 8 Pcs
8*30mm



STEP 3

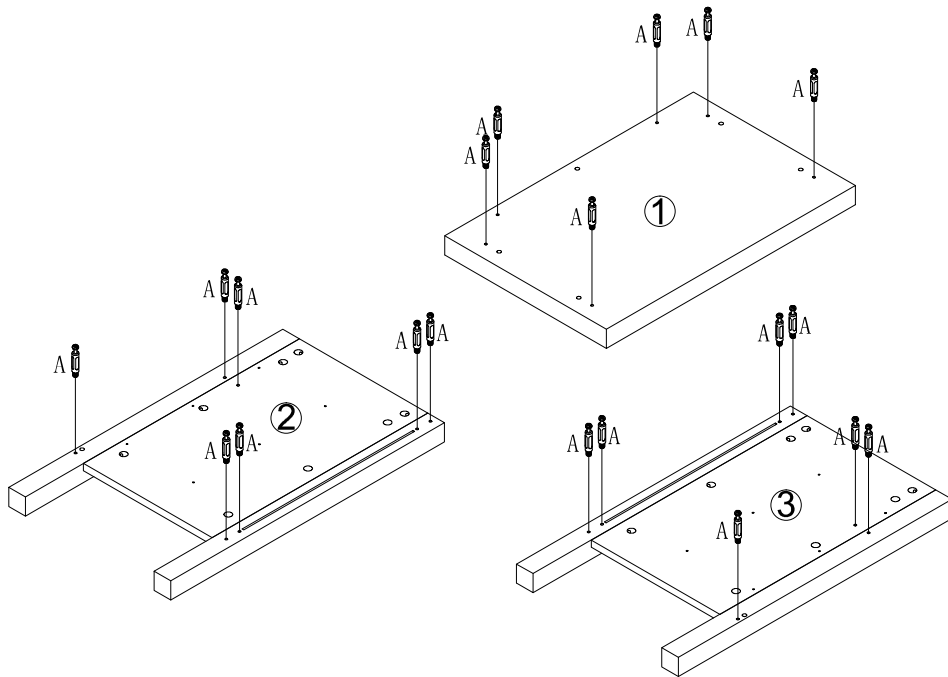


No. A
Quantity: 20 Pcs
8*28 mm



STEP 4




The first screw hole should corresponded with the board location hole

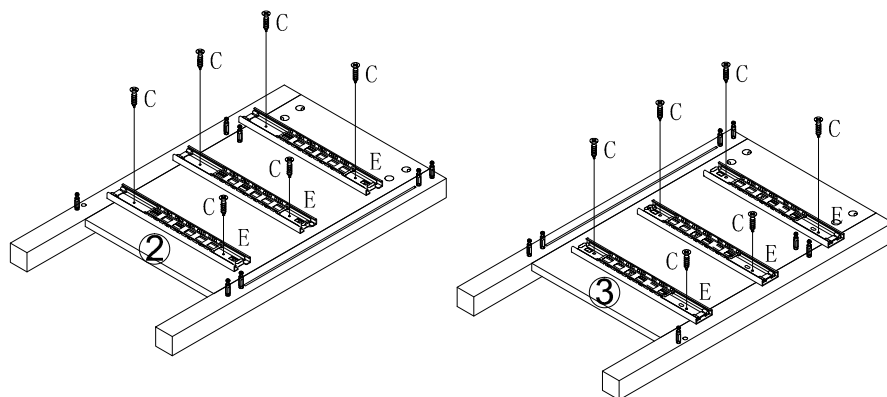


No. C
Quantity: 12 Pcs
M3.5*14mm



No. E
Quantity: 3 Sets
10"




STEP 5

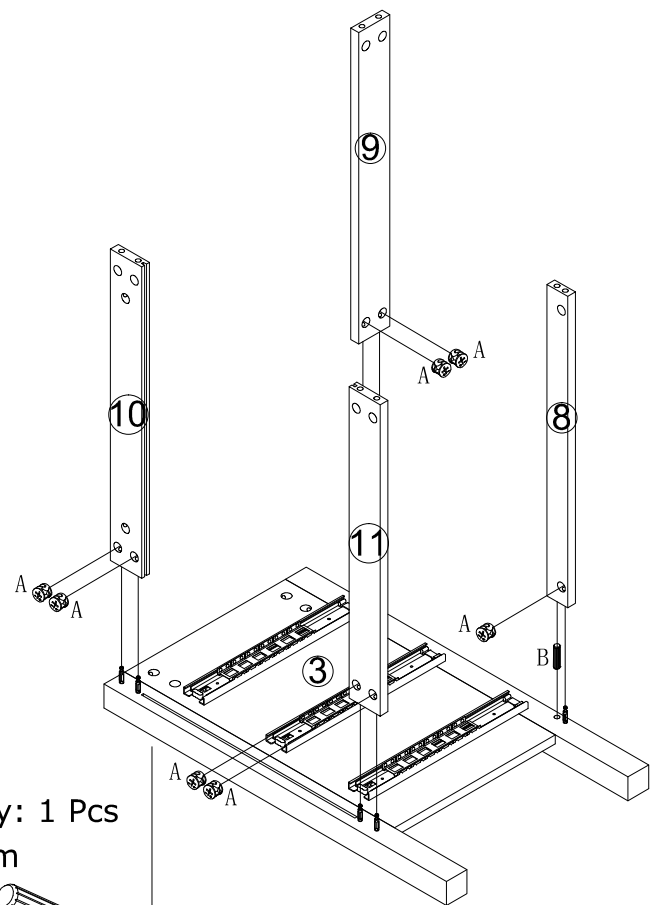


No. A
Quantity: 7 Pcs
Ø15




No. B
Quantity: 1 Pcs
8*30mm



STEP 6

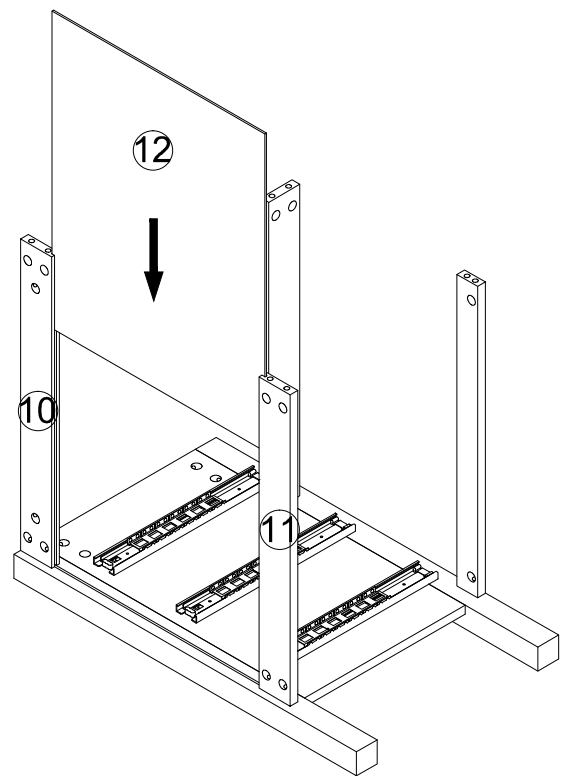


STEP 7

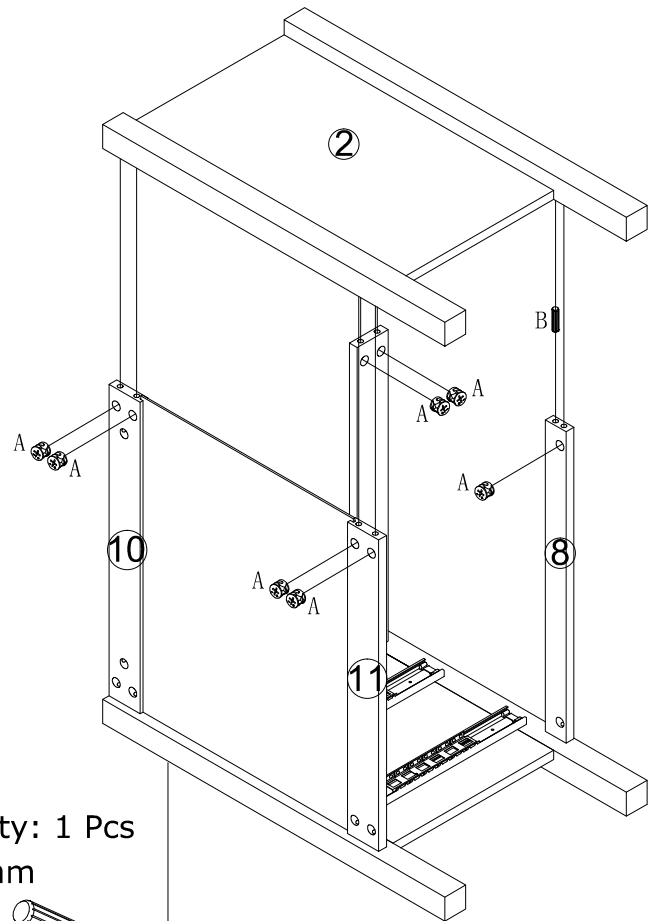


No. A
Quantity: 7 Pcs
Ø15



No. B
Quantity: 1 Pcs
8*30mm




STEP 8

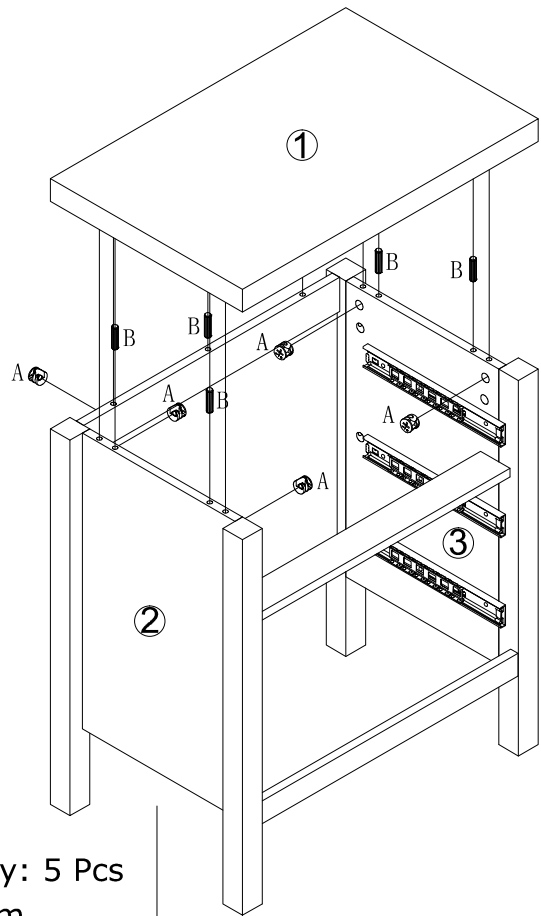


No. A
Quantity: 6 Pcs
Ø15



No. B
Quantity: 5 Pcs
8*30mm



STEP 9

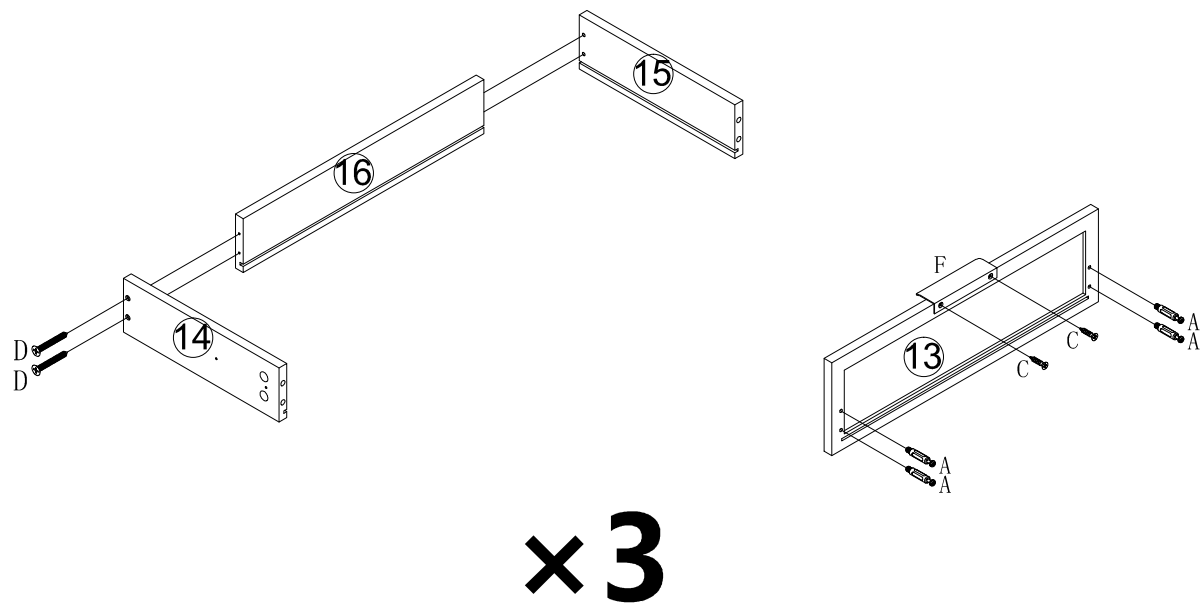


No. A
Quantity: 12 Pcs
8*28 mm




No. C
Quantity: 6 Pcs
M3.5*14mm




No. D
Quantity: 12 Pcs
M4*30mm



No. F
Quantity: 3 Pcs
120*38*17mm



STEP 10

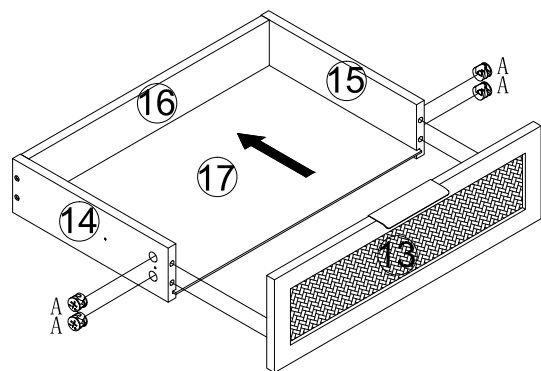


No. A
Quantity: 12 Pcs
Ø15



STEP 11



The first screw hole should corresponded with the board location hole

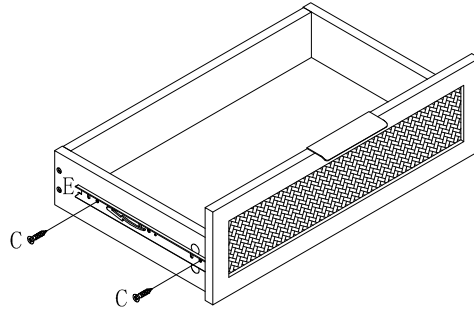


× 3


No. C
Quantity: 12 Pcs
M3.5*14mm




No. E
Quantity: 3 Sets
10"



STEP 12

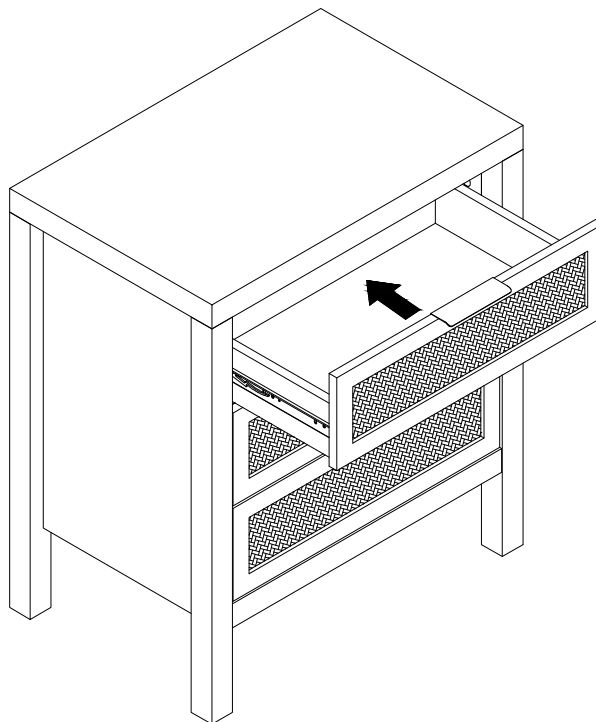


STEP 13

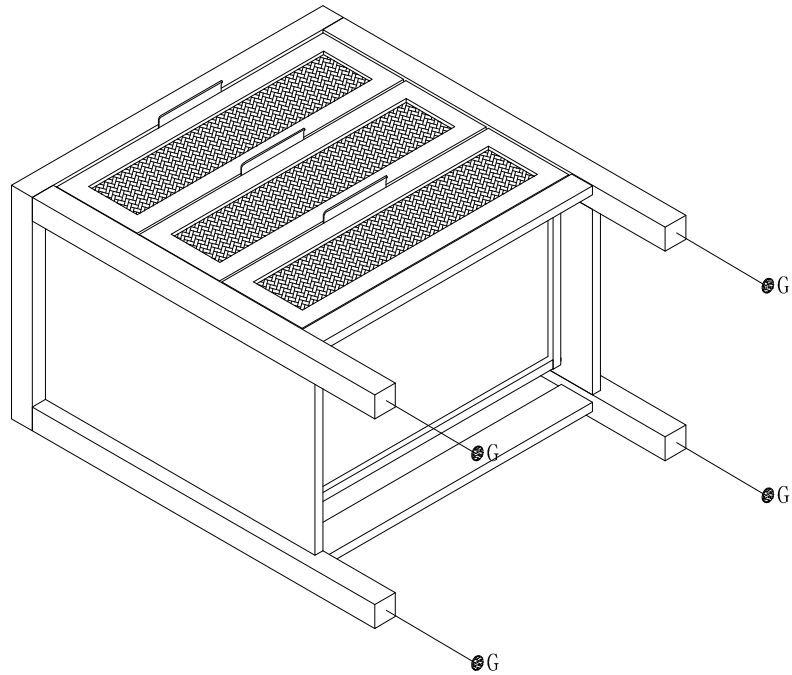

No. G
Quantity: 4 Pcs
Ø20




STEP 14

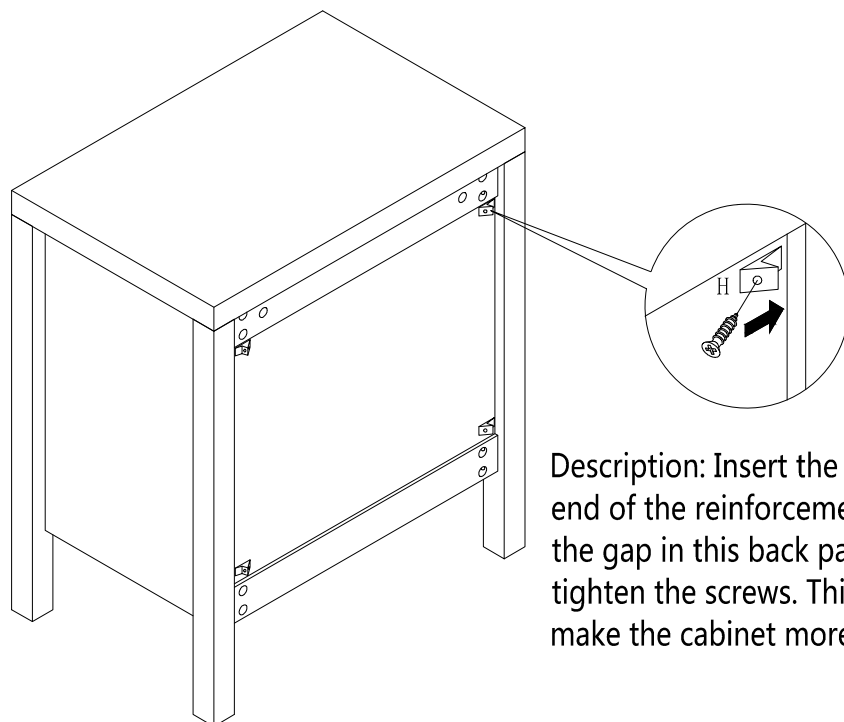


Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

No. H
Quantity: 4 Sets




STEP 15

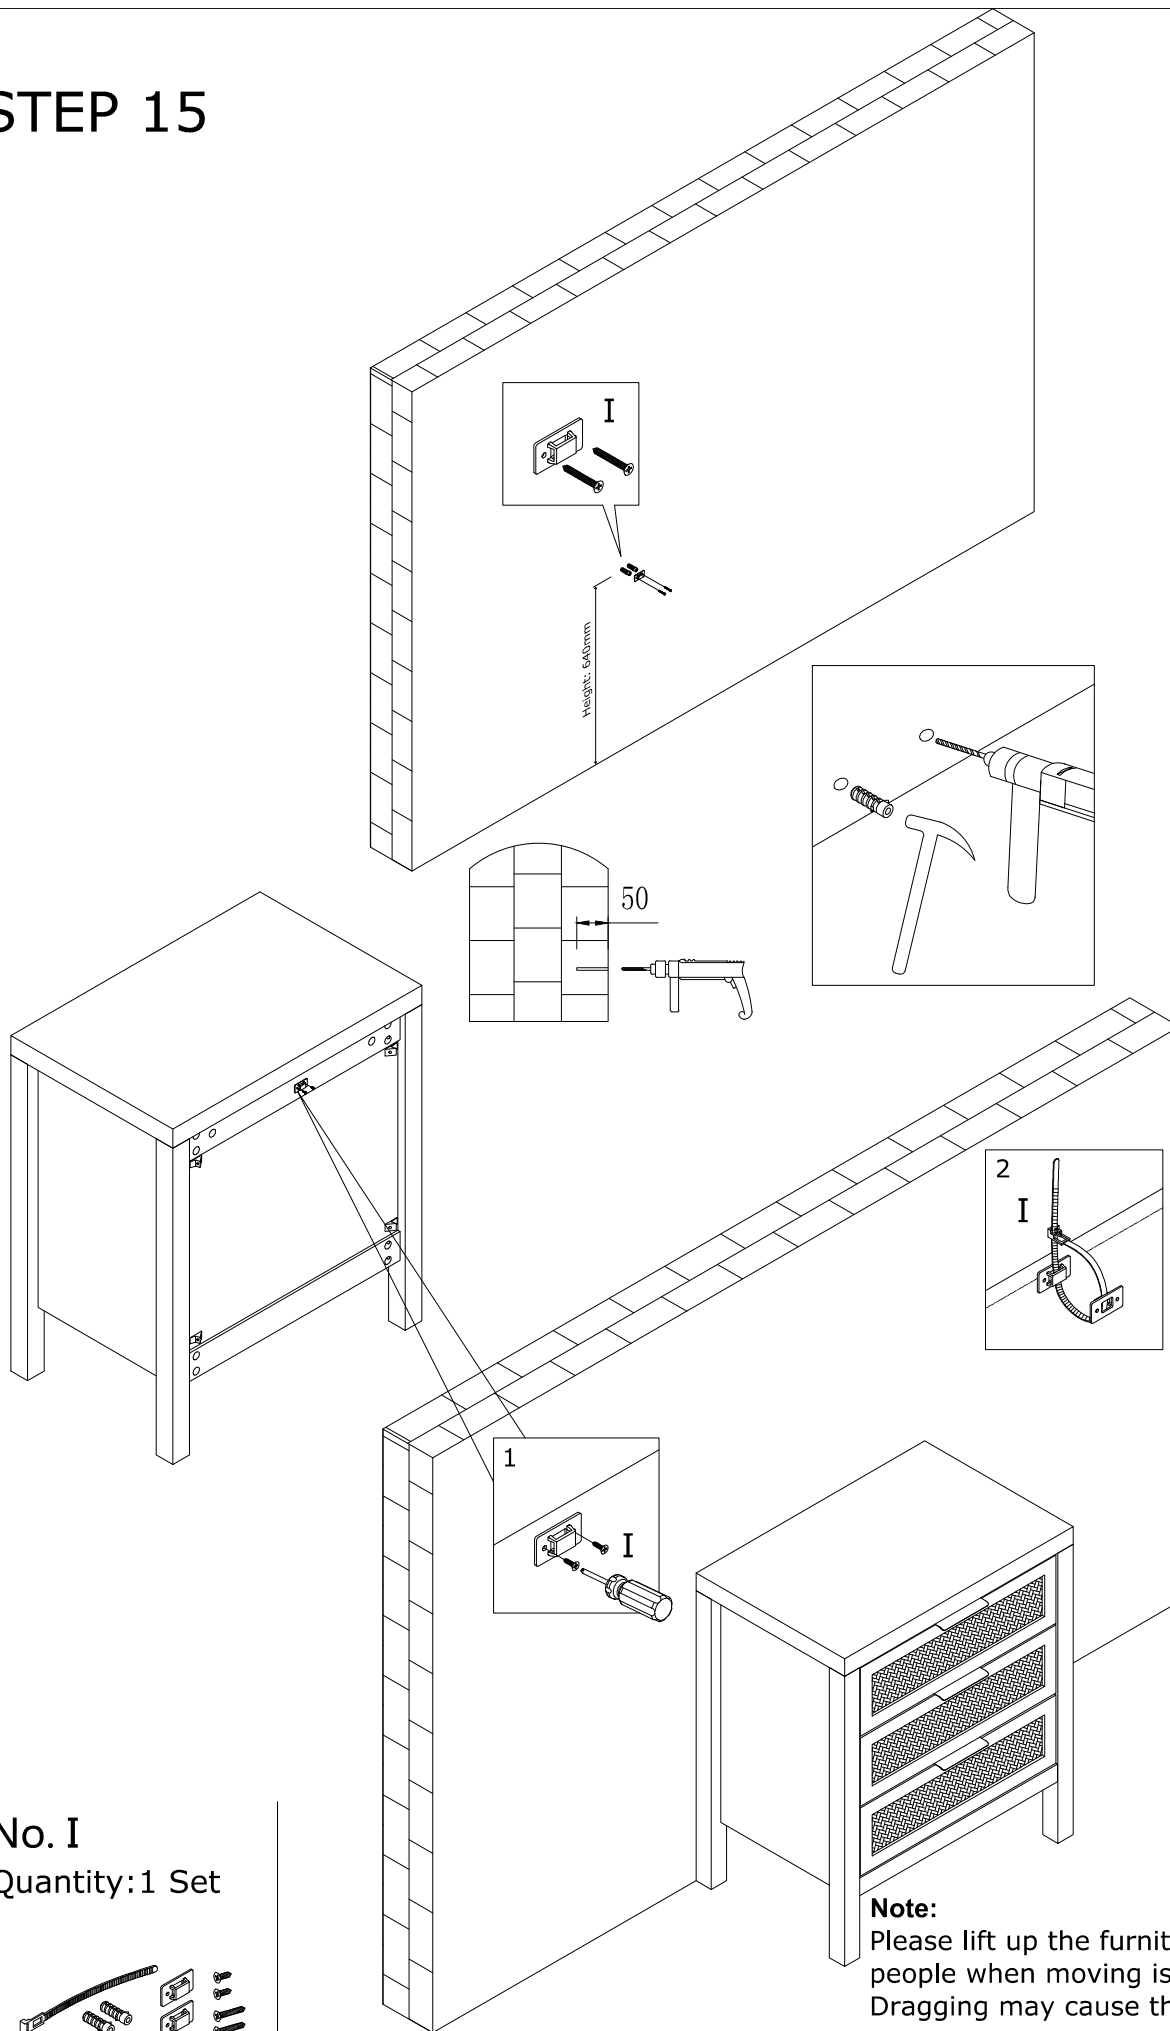

No. I

Quantity: 1 Set



Note:
Please lift up the furniture by two people when moving is needed.
Dragging may cause the legs failure.