


ASSEMBLY INSTRUCTION


7006




A*1



B*1




C*1 LEFT



C*1 RIGHT



D*2



E*2



F*2




J*1



I*5


KINDLY REMINDER

D*2, E*2, F*2, I*4, J*1
PACKED IN SOFA

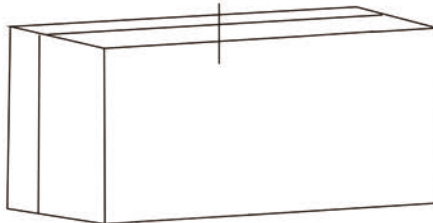


CAREFULLY UNPACK AND PLACE THE SOFA BOOYIAJ ON A CLEAN FLAT SURFACE TO SHOW THE BASE AS SHOWN
UNPACK PARTS FROM THE STORAGE COMPARTMENT


STEP1

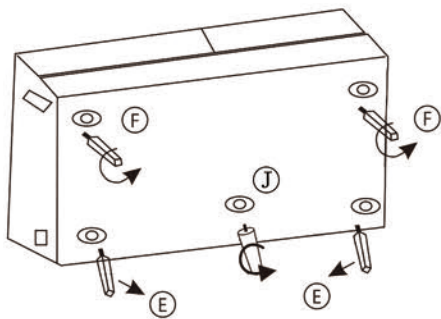

STEP2

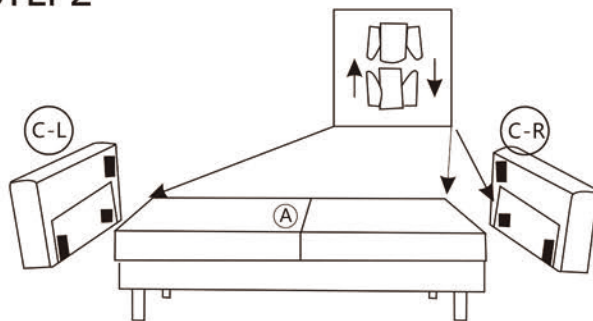

STEP3

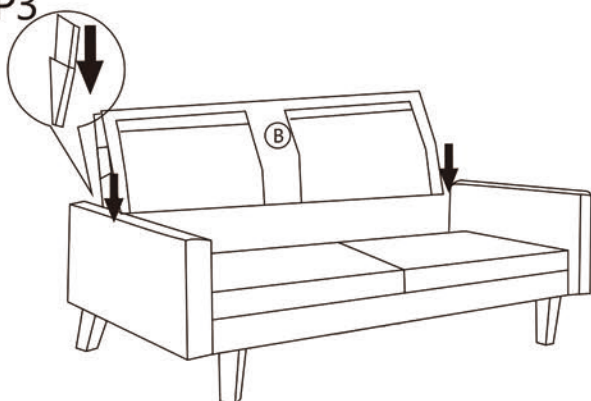

STEP4

