


5-Post Carport CP2602


Scan for Installation Video




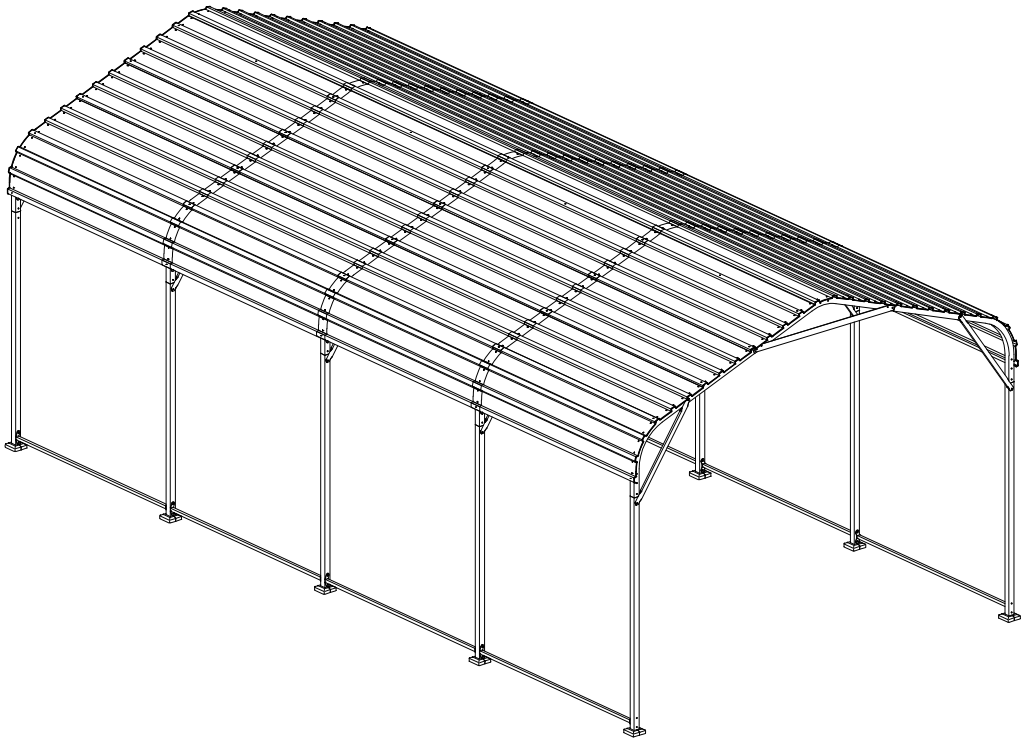









PART LIST

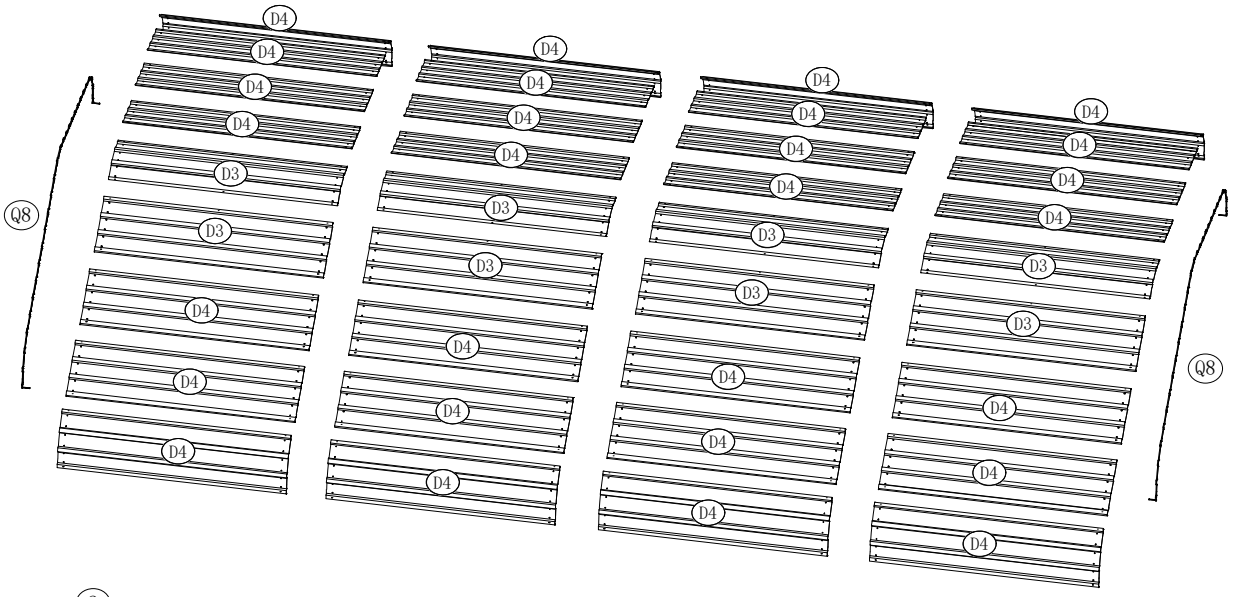

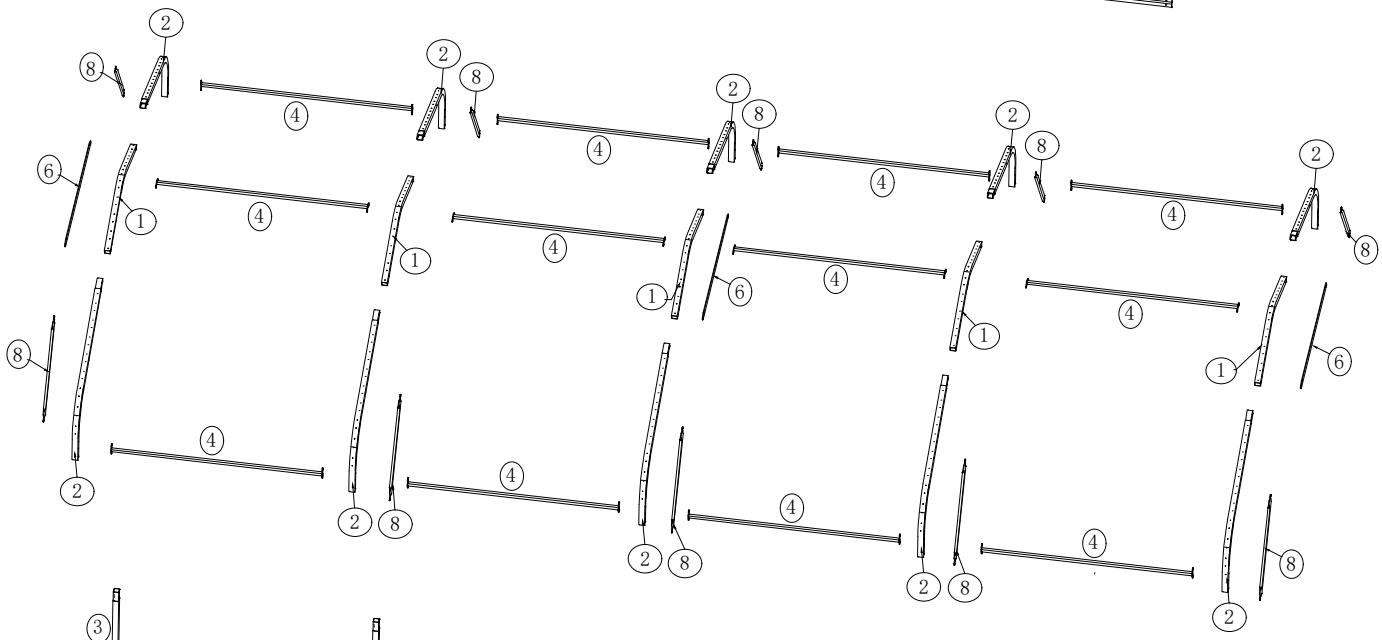


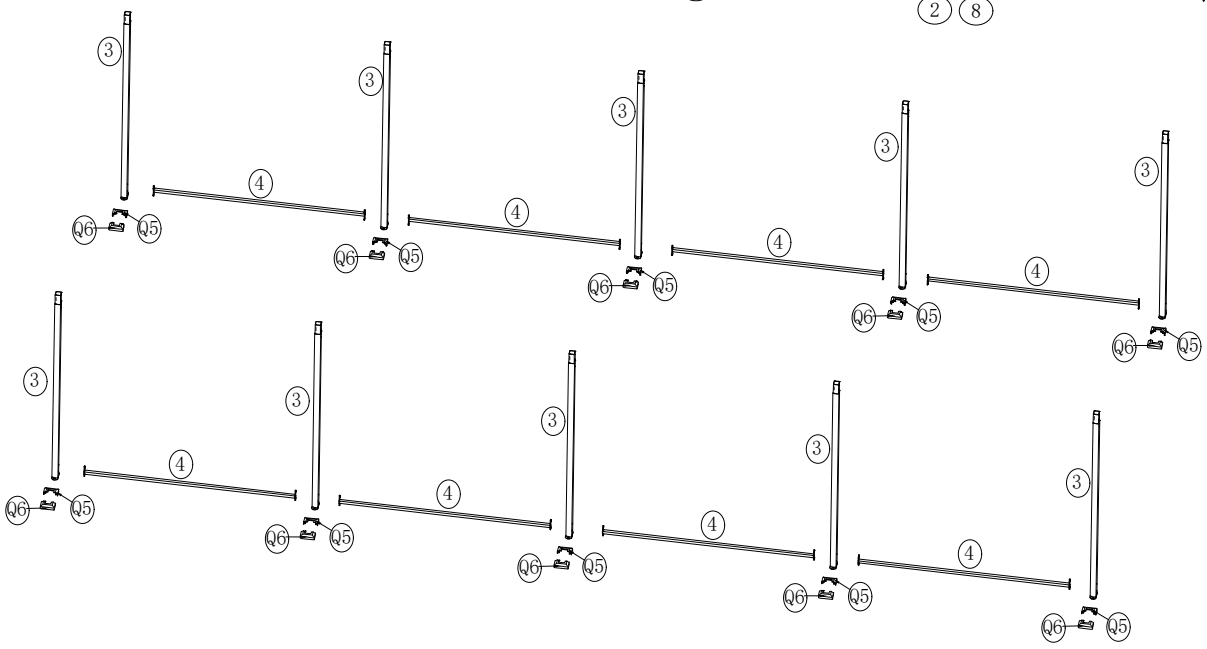


NO.	PART.	Qty.
1		5
2		10
3		10
4		20
6		3
8		10
D3		8
D4		28
Q5		10
Q6		10
Q8		2
Q9		100
Q13		270
Q15		100


NO.	PART.	Qty.
Q17		100
Q18		50
Q19		270
Q20		100
Q21		20
Q32		50
Q22		4
Q23		1
Q24		1
Q25		1
Q26		1
Q27		1
F40		3

NO.	PART.	Qty.
1		2
2		4
Q15		8
Q17		8
Q20		8

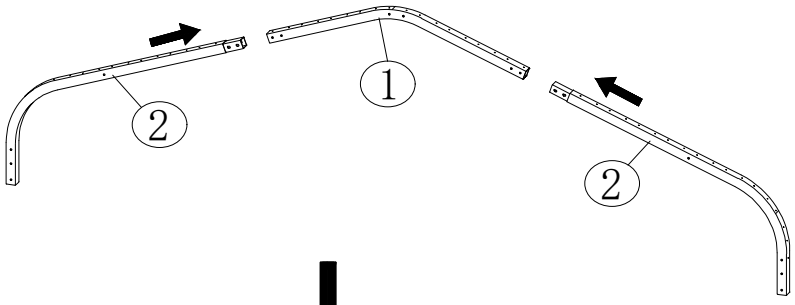


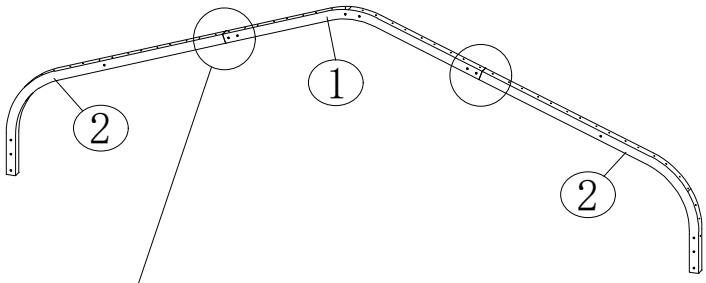



X2

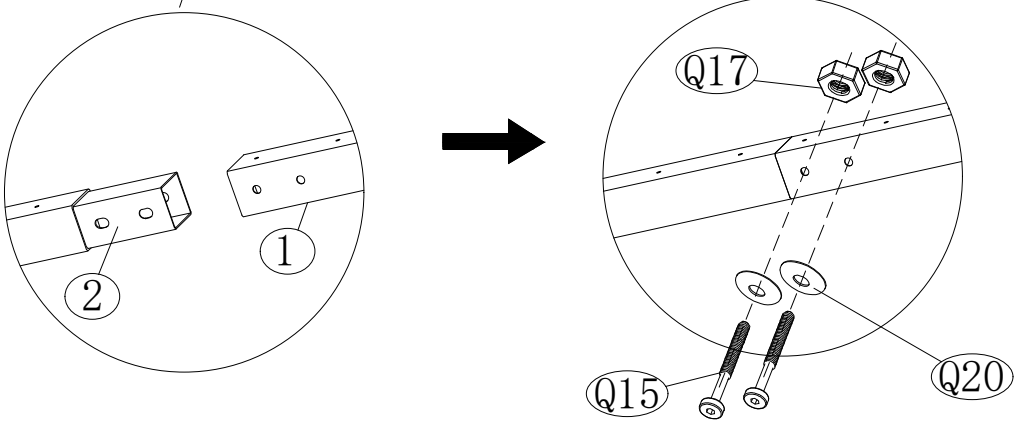


NO.	PART.	Qty.
1		3
2		6
6		3
Q15		12
Q17		12
Q20		12

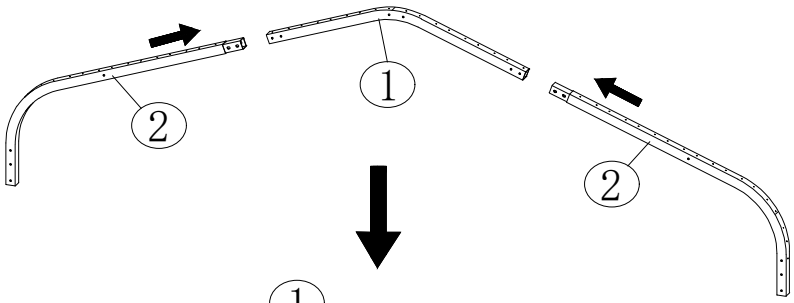


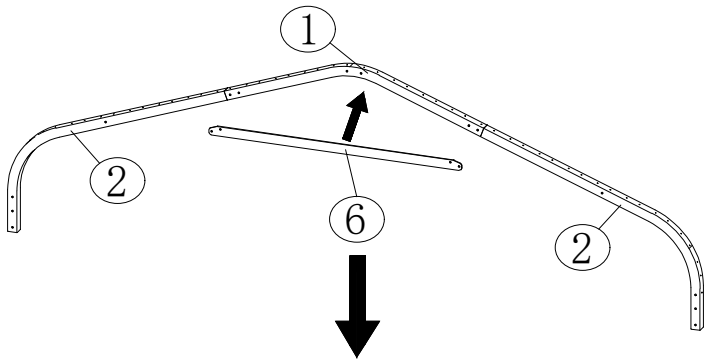

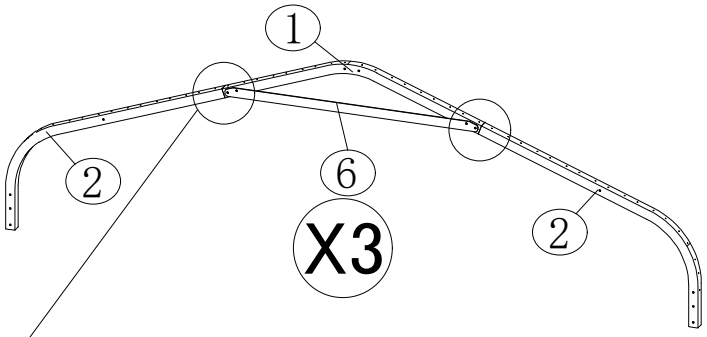


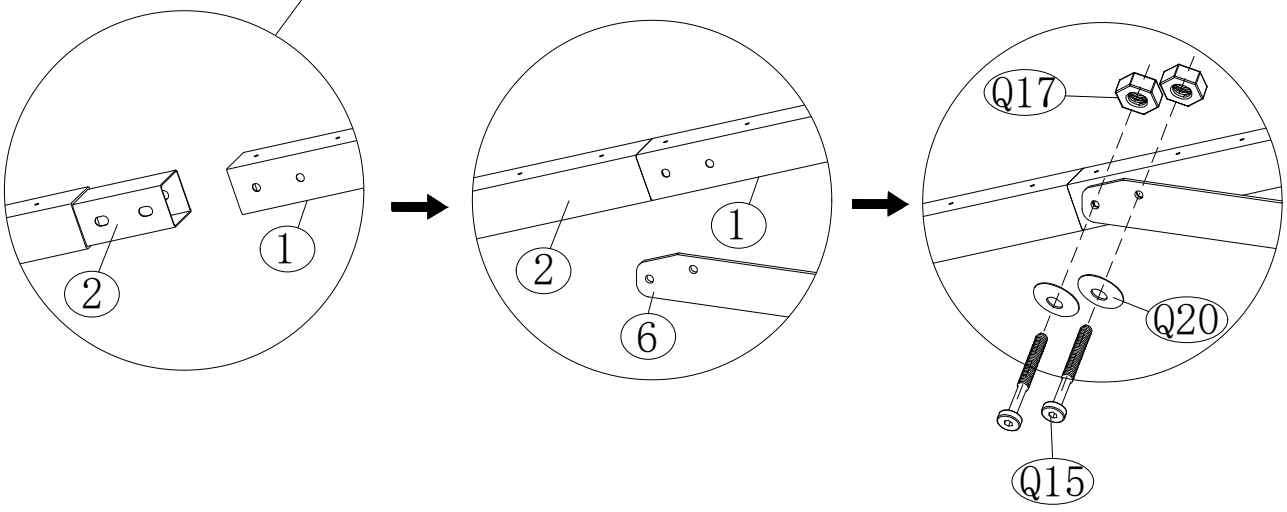


NO.	PART.	Qty.
4		12
Q15		30
Q17		30
Q20		30

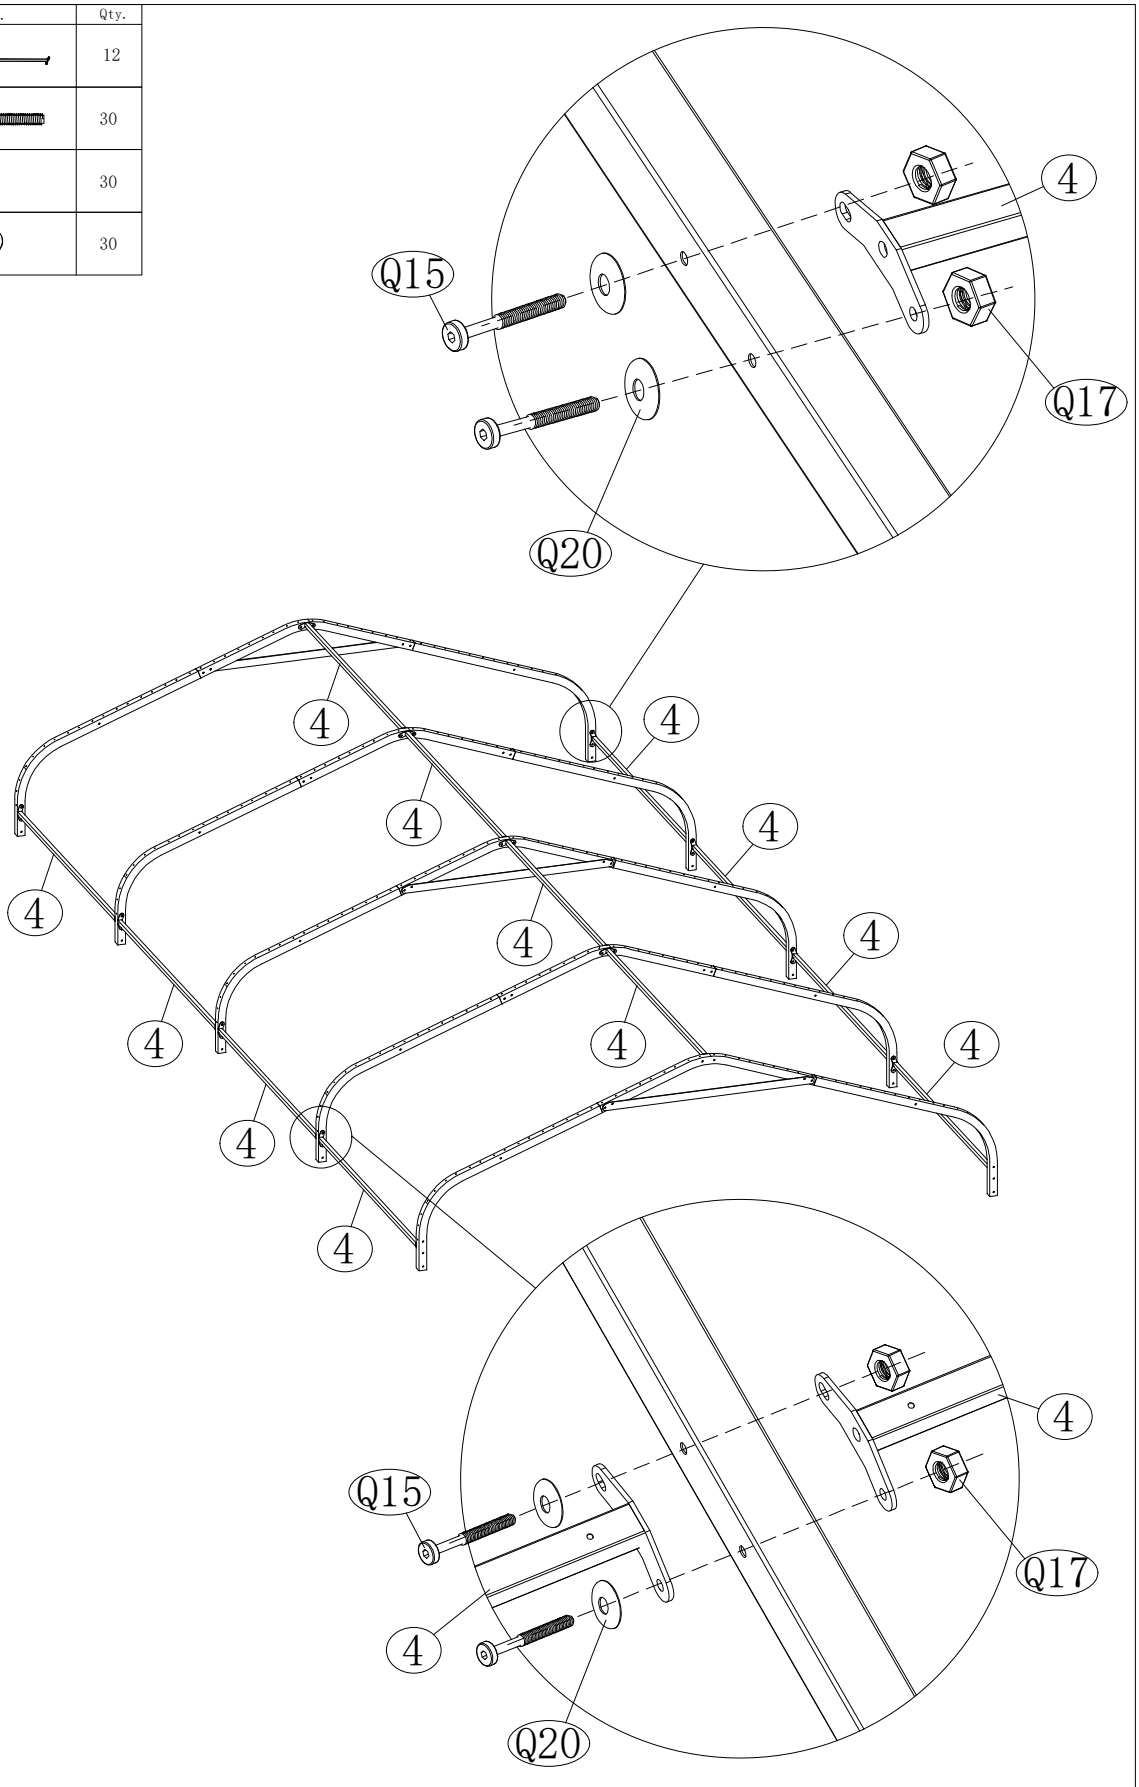


NO.	PART.	Qty.
3		10

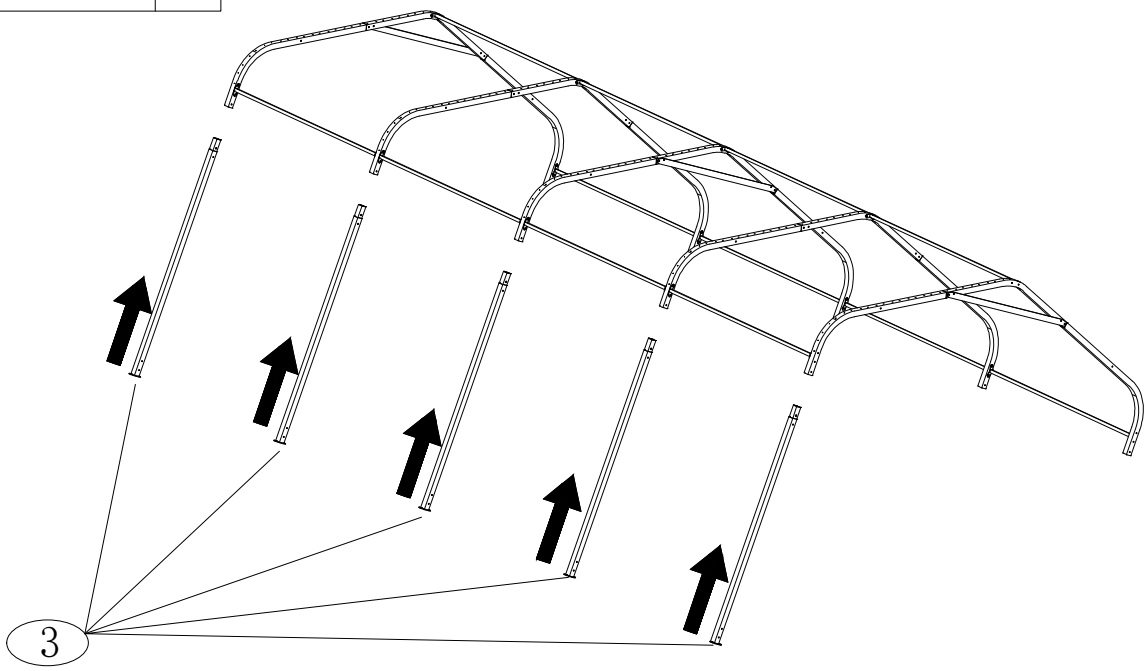


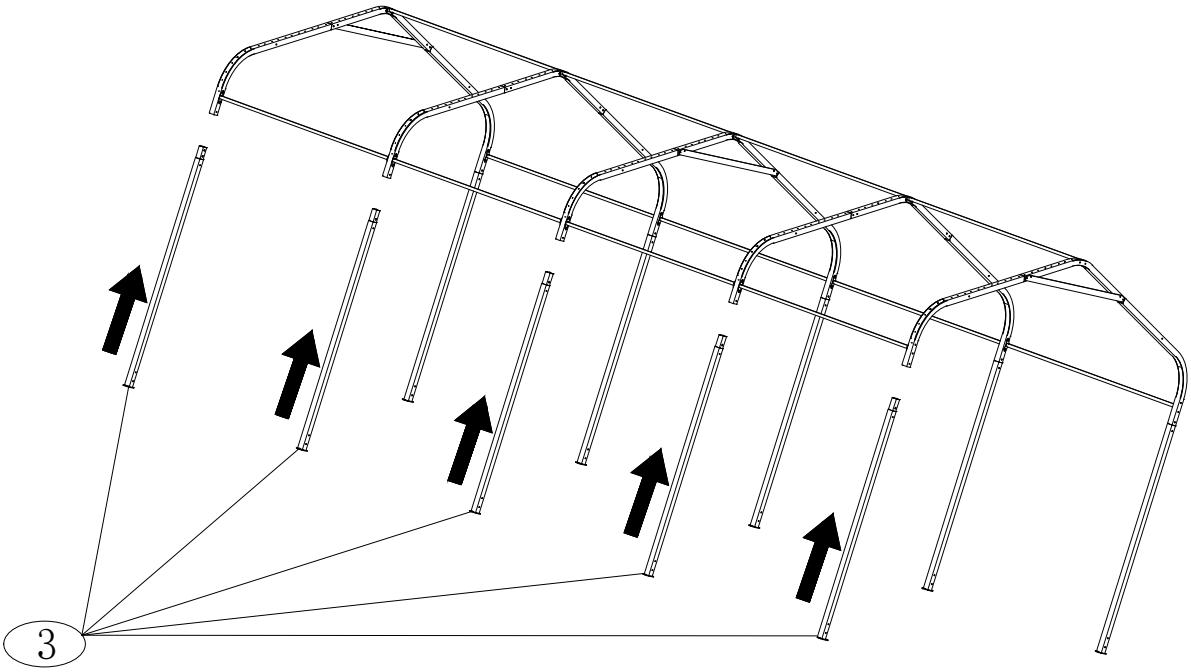


NO.	PART.	Qty.
Q15		10
Q17		10
Q20		10

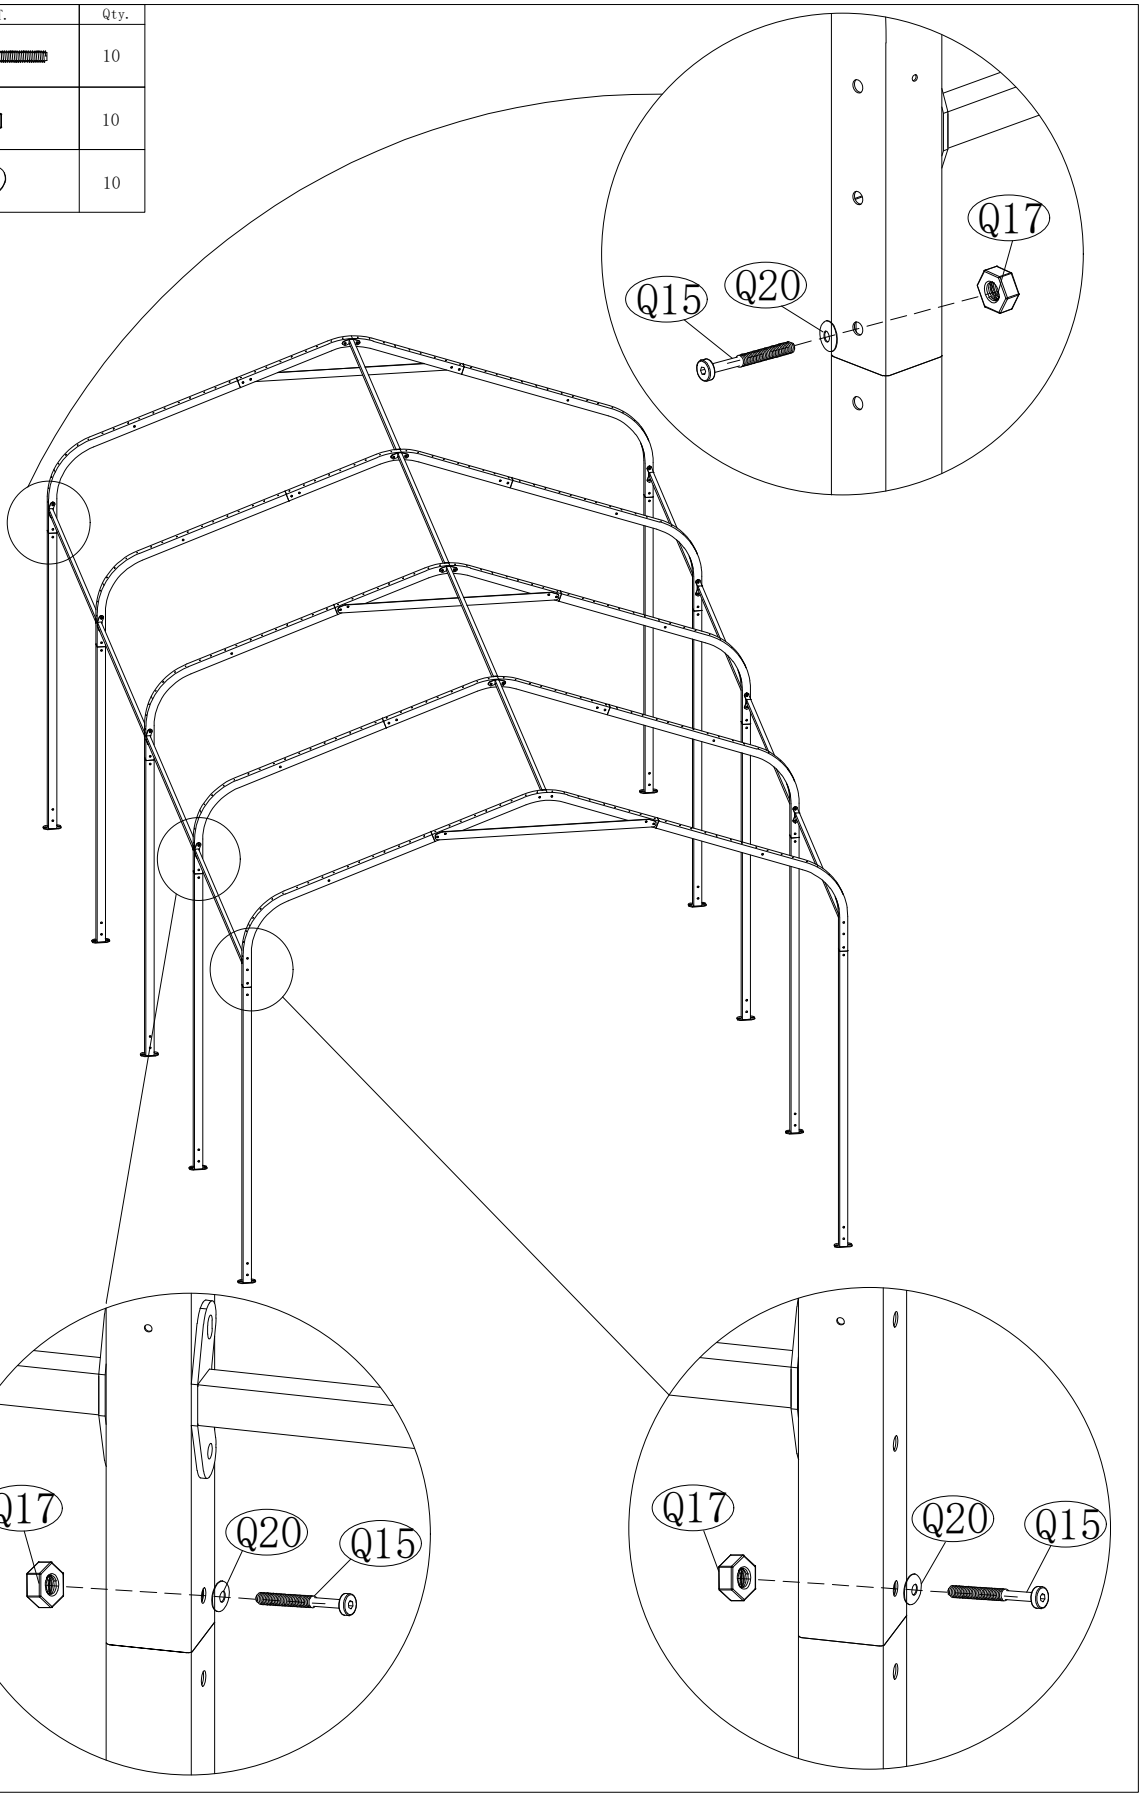


NO.	PART.	Qty.
8		10
Q15		20
Q17		20
Q20		20

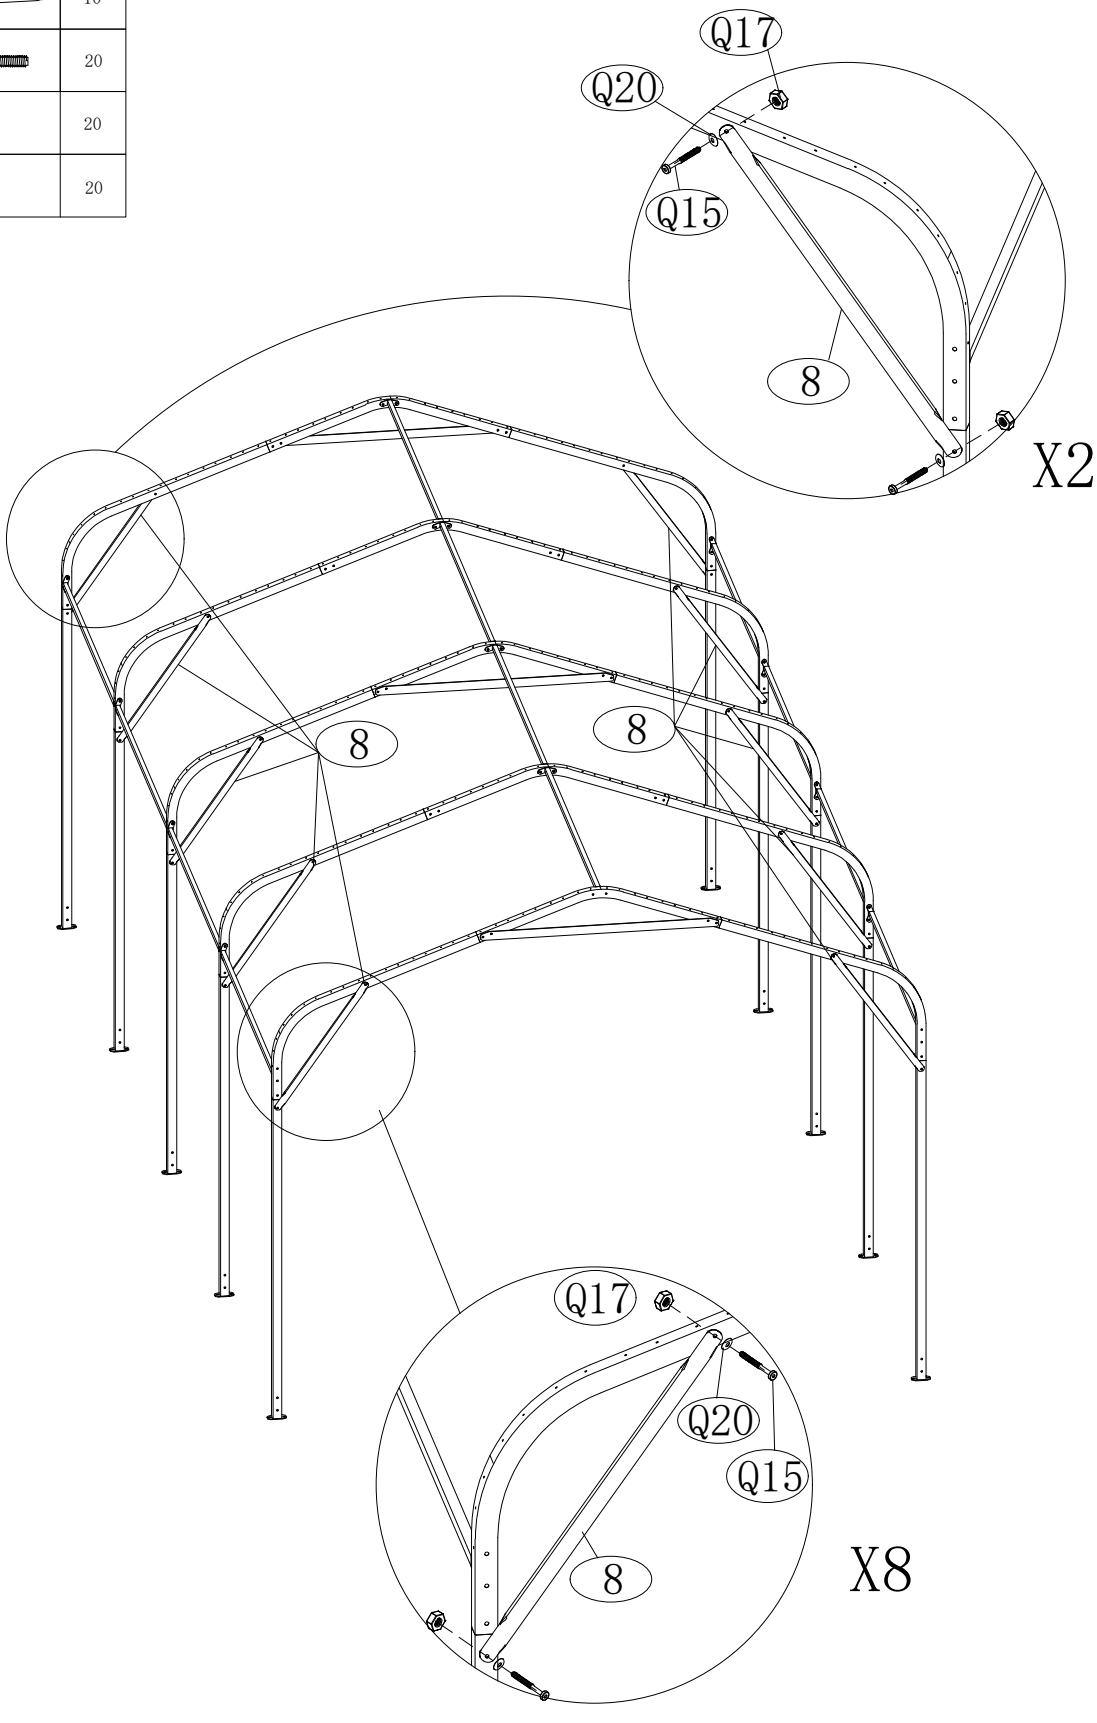


NO.	PART.	Qty.
4		8
Q15		20
Q17		20
Q20		20

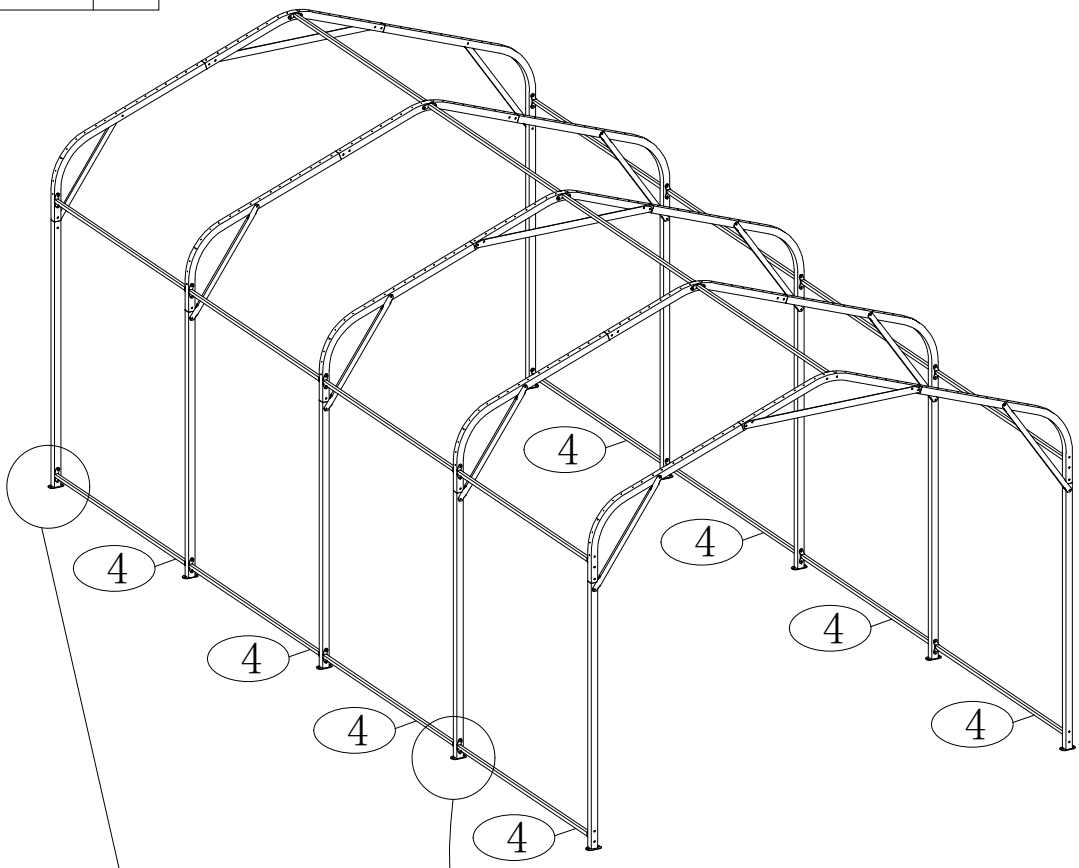


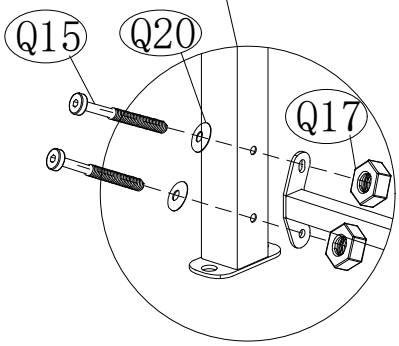



X4

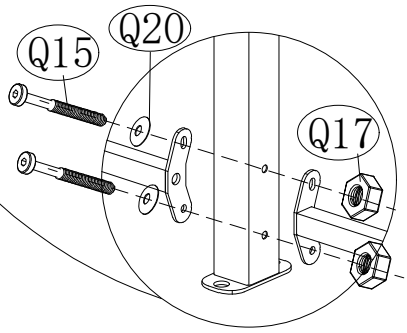


X6


NO.	PART.	Qty.
D3		4
Q13		30
Q19		30
F40		

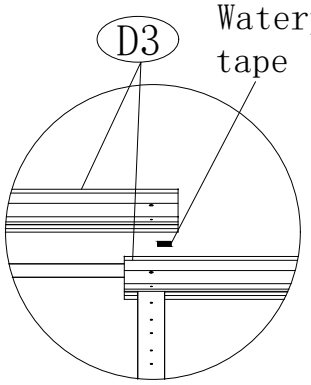

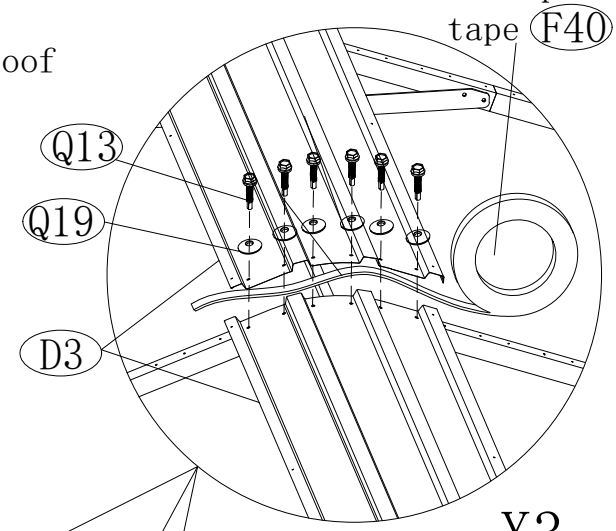


X3

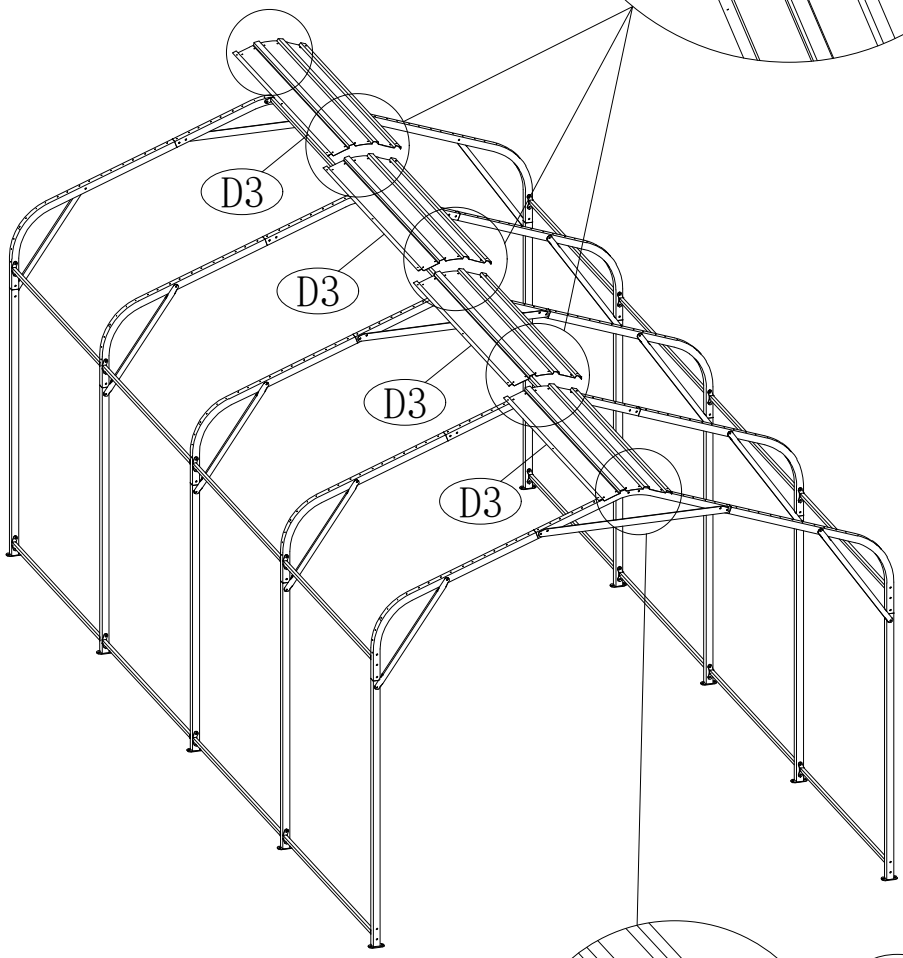

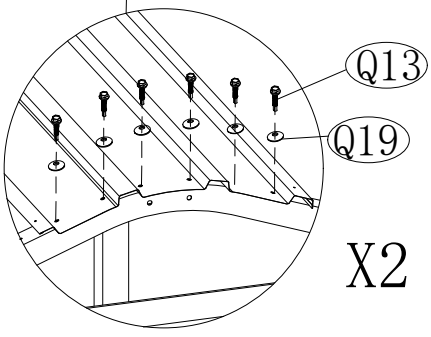


X2

NO.	PART.	Qty.
D3		4
Q13		30
Q32		9
Q18		9
Q19		30
F40		

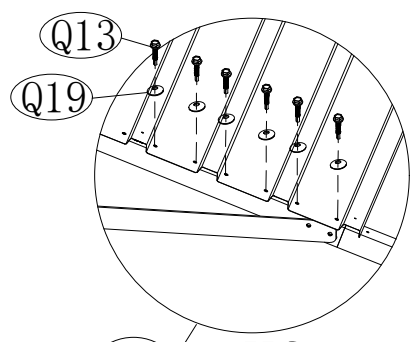


X2

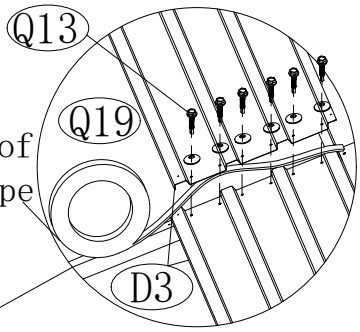


Waterproof
F40 tape

X3

Step 2

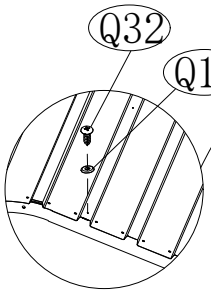


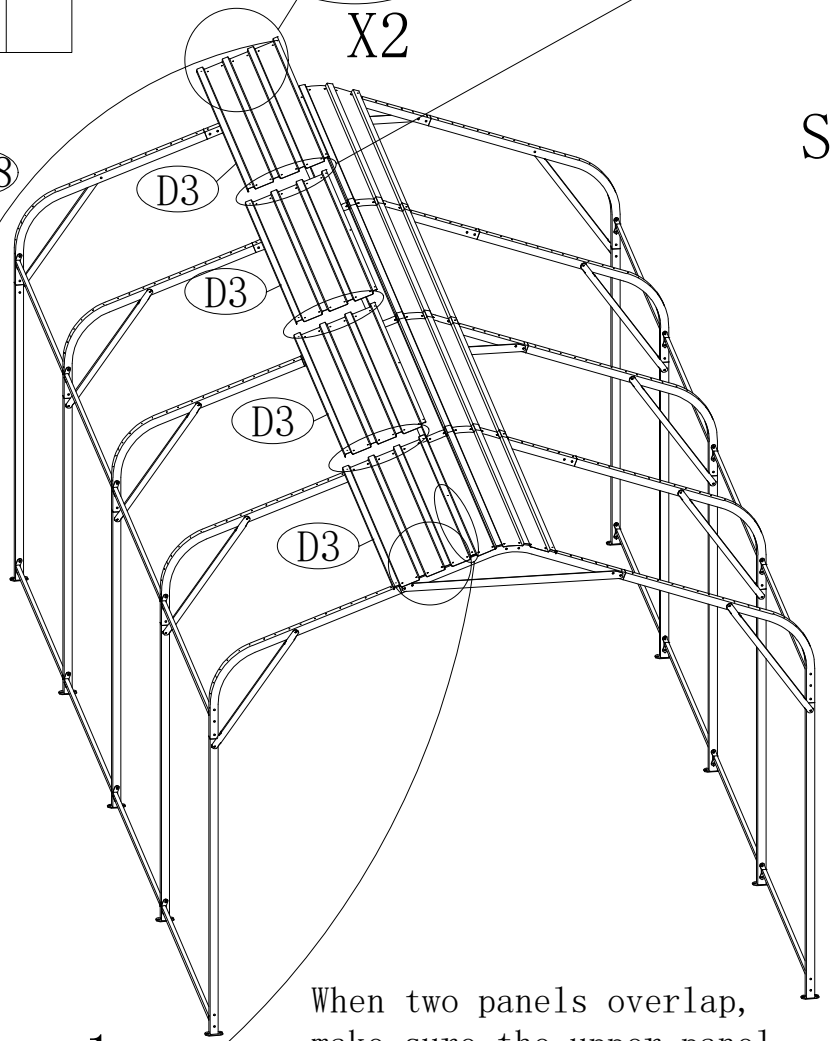


When two panels overlap, make sure the upper panel covers the lower panel.


Step 1


X4

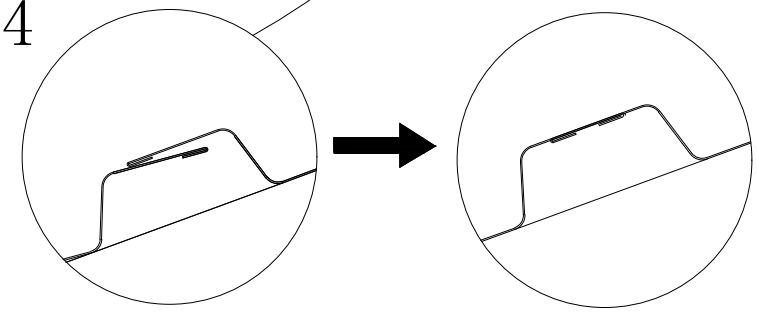

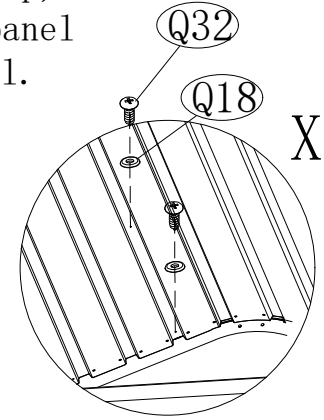


X4

NO.	PART.	Qty.
D4		4
Q13		30
Q32		5
Q18		5
Q19		30
F40		

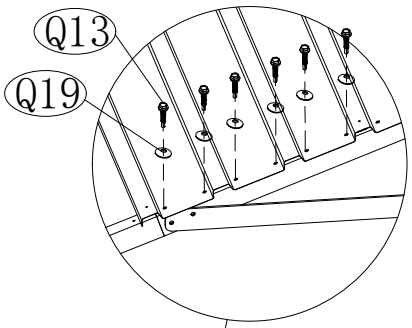


X2

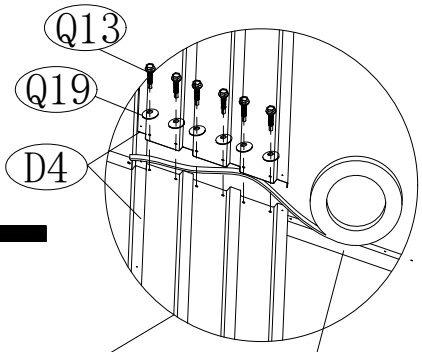


Waterproof tape F40

X3

Step 2

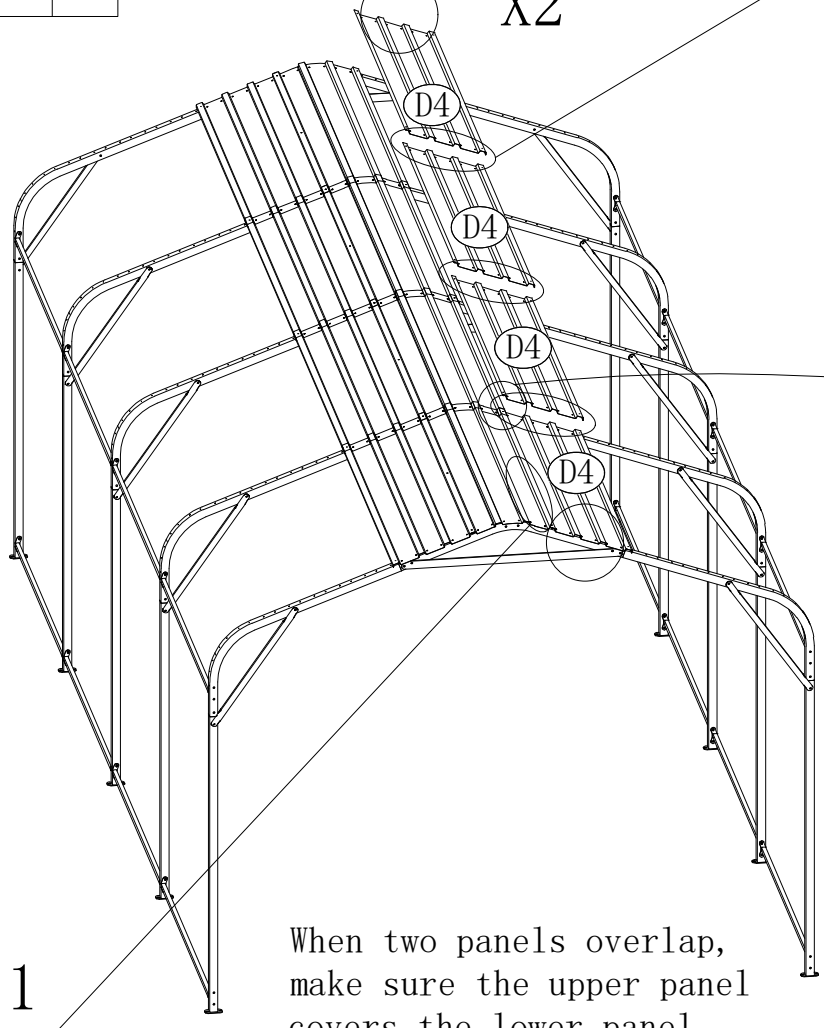

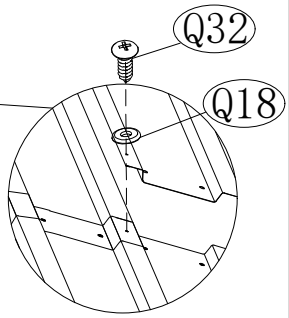


X3


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X4

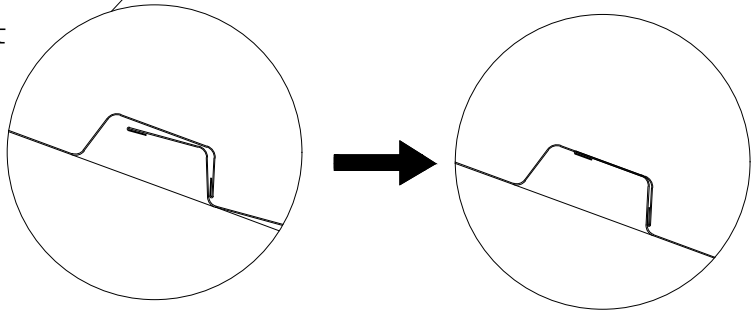


X2

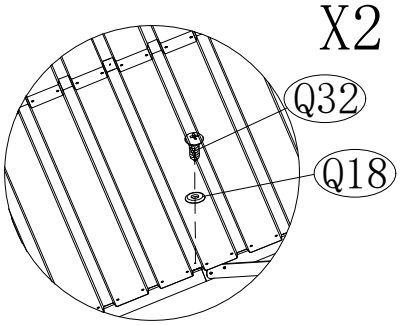

NO.	PART.	Qty.
D4		8
Q13		60
Q32		10
Q18		10
Q19		60
F40		

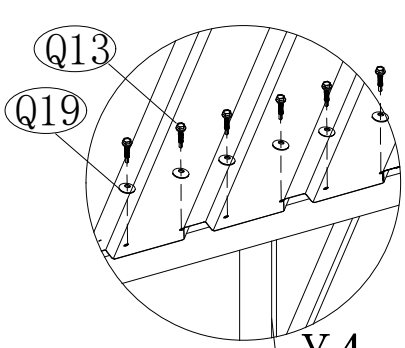


X4

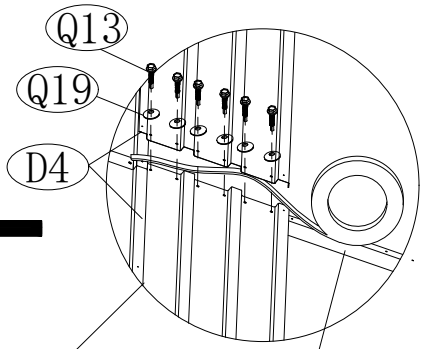


Waterproof tape F40

X6

Step 2

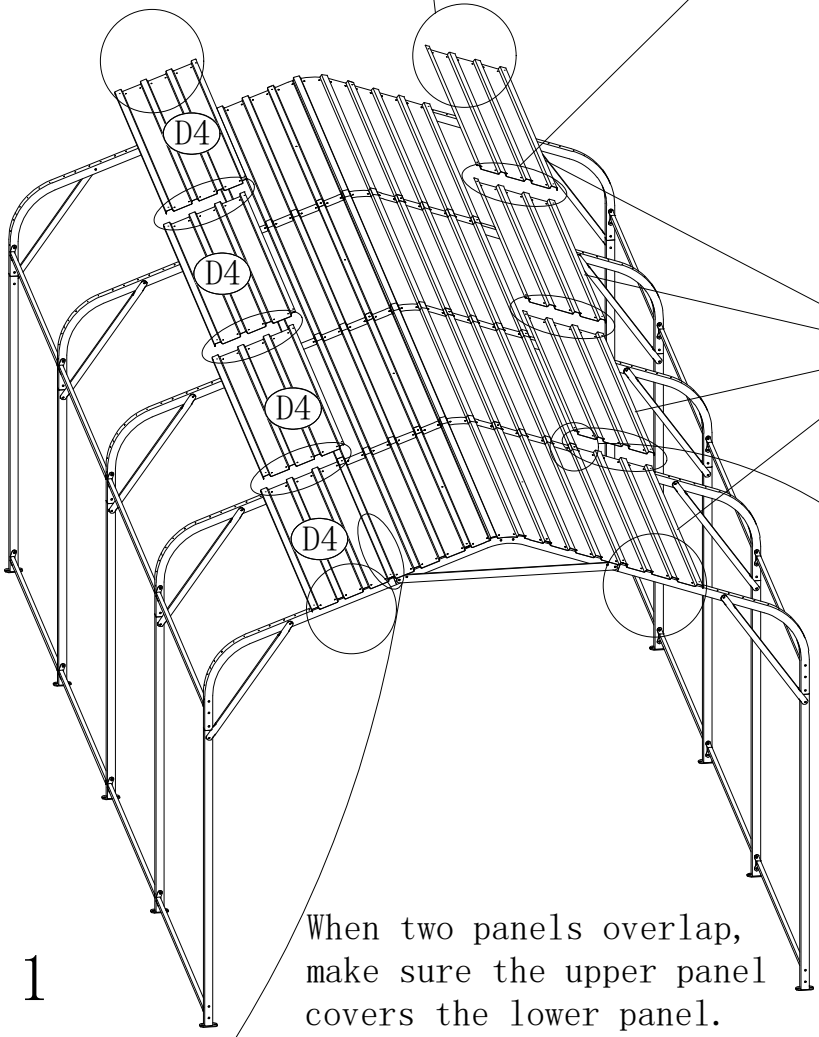

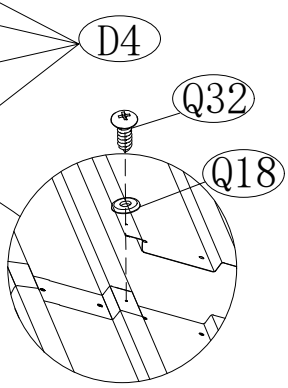



X6

When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X8

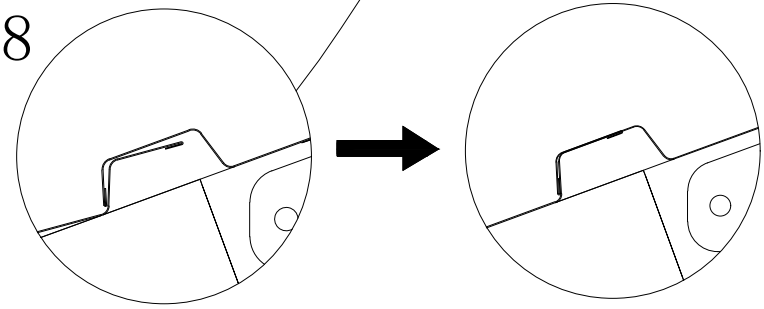

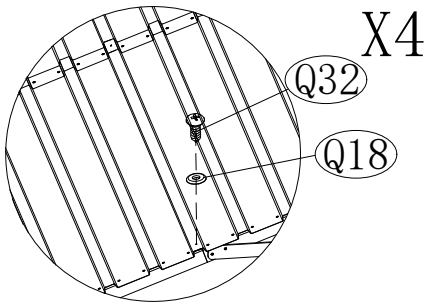



X4

NO.	PART.	Qty.
D4		8
Q13		60
Q32		10
Q18		10
Q19		60
F40		

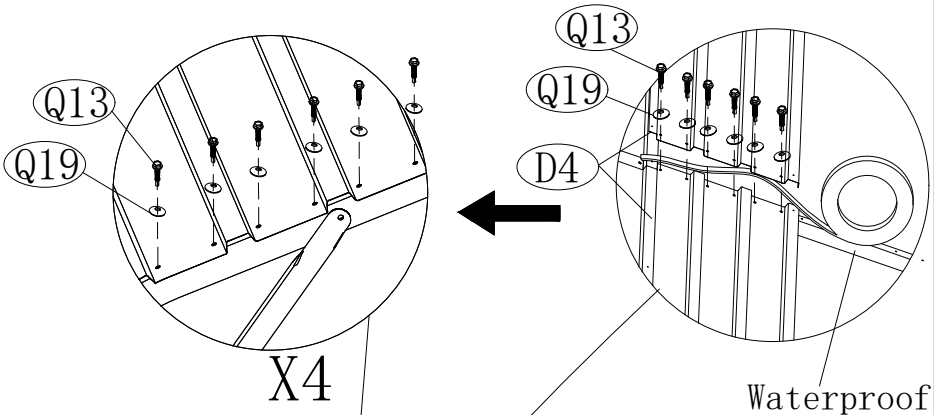


Step 2

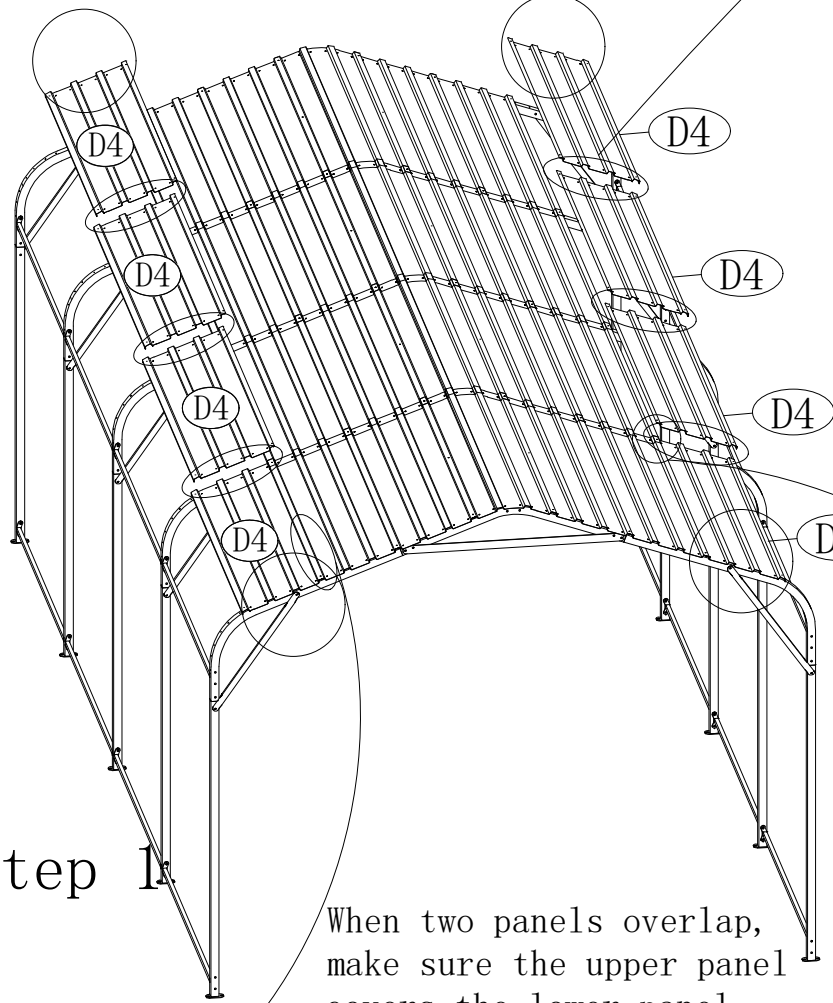


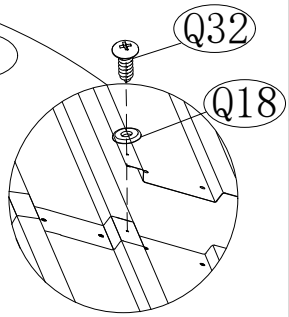


Step 1

When two panels overlap, make sure the upper panel covers the lower panel.

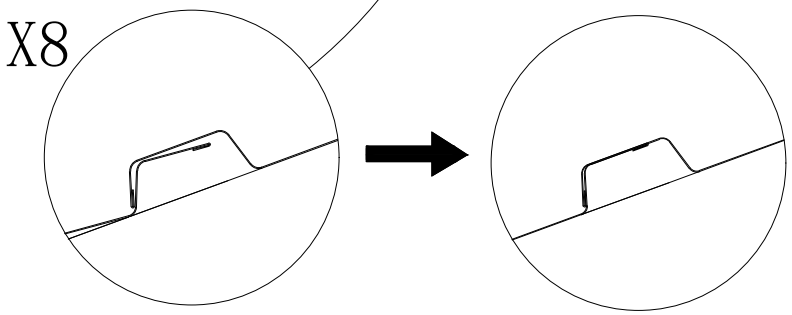


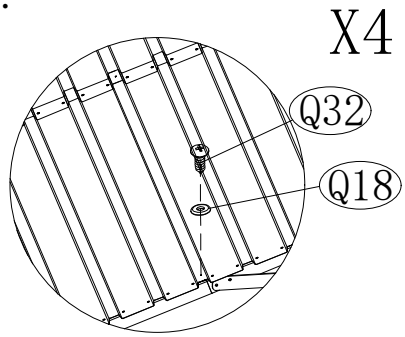

NO.	PART.	Qty.
D4		8
Q13		60
Q32		16
Q18		16
Q19		60
F40		

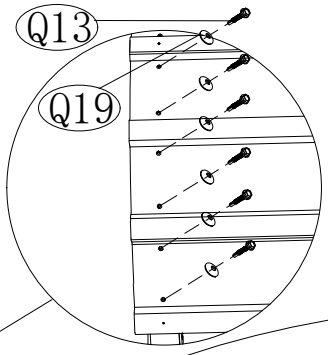


X4

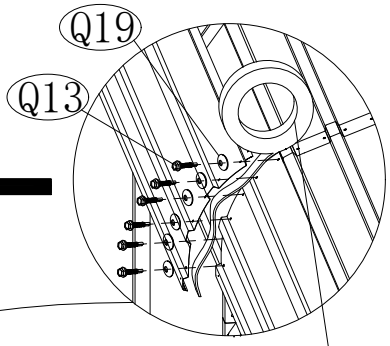


Waterproof tape F40

X6

Step 2

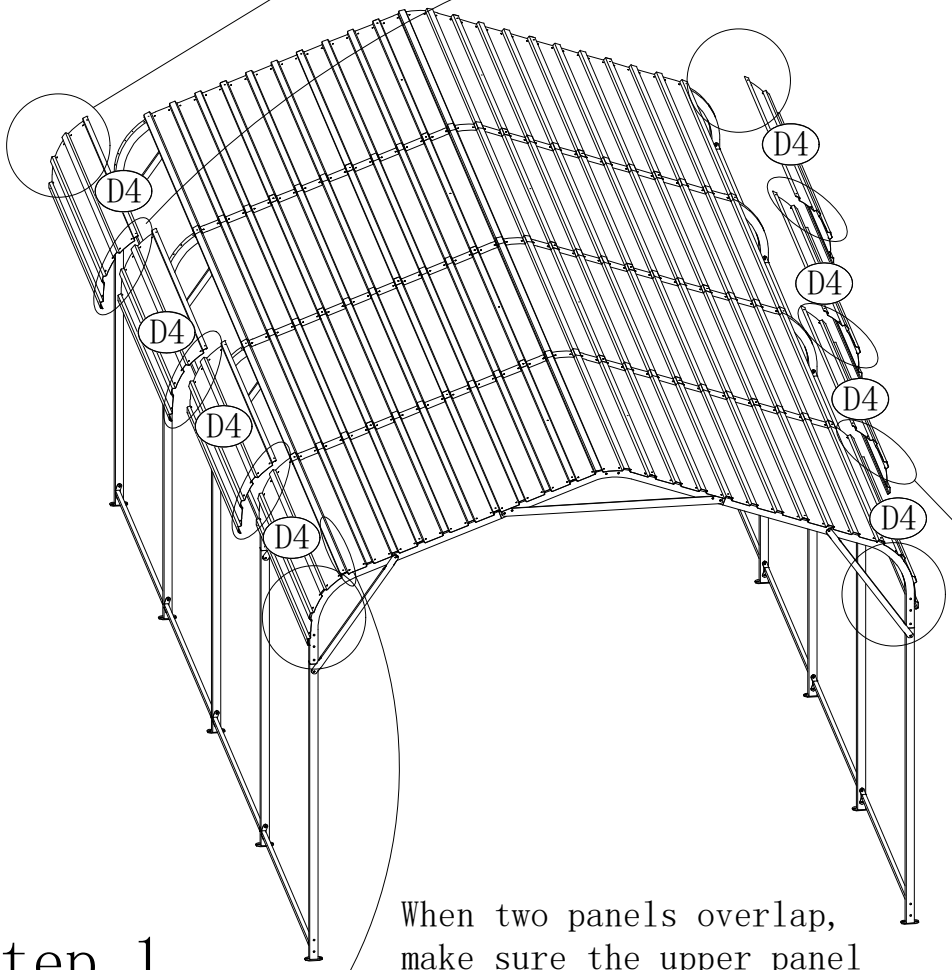

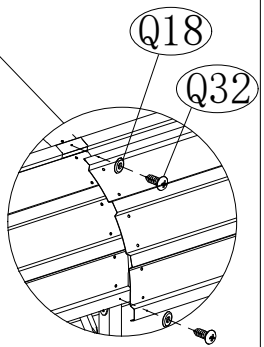


X6


When two panels overlap, make sure the upper panel covers the lower panel.

Step 1


X8

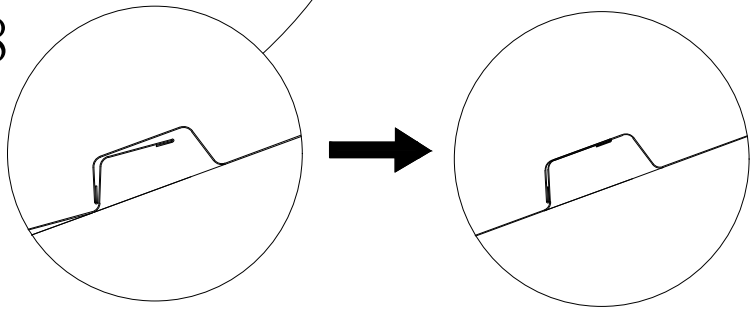



X4

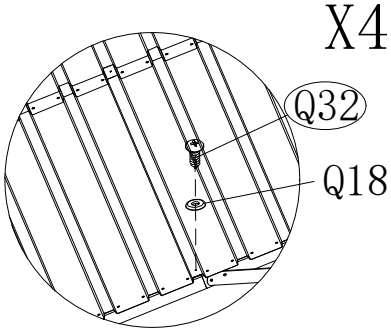

NO.	PART.	Qty.
Q8		2

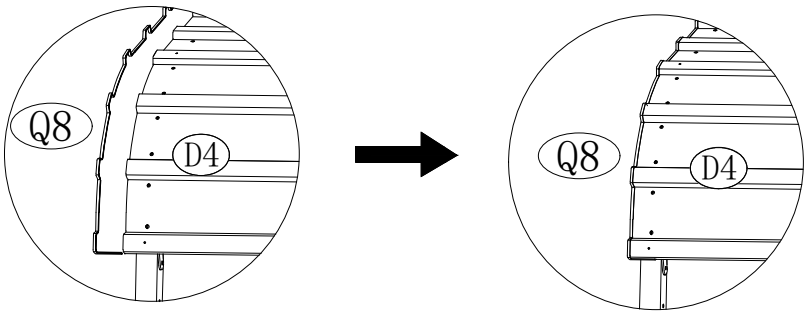

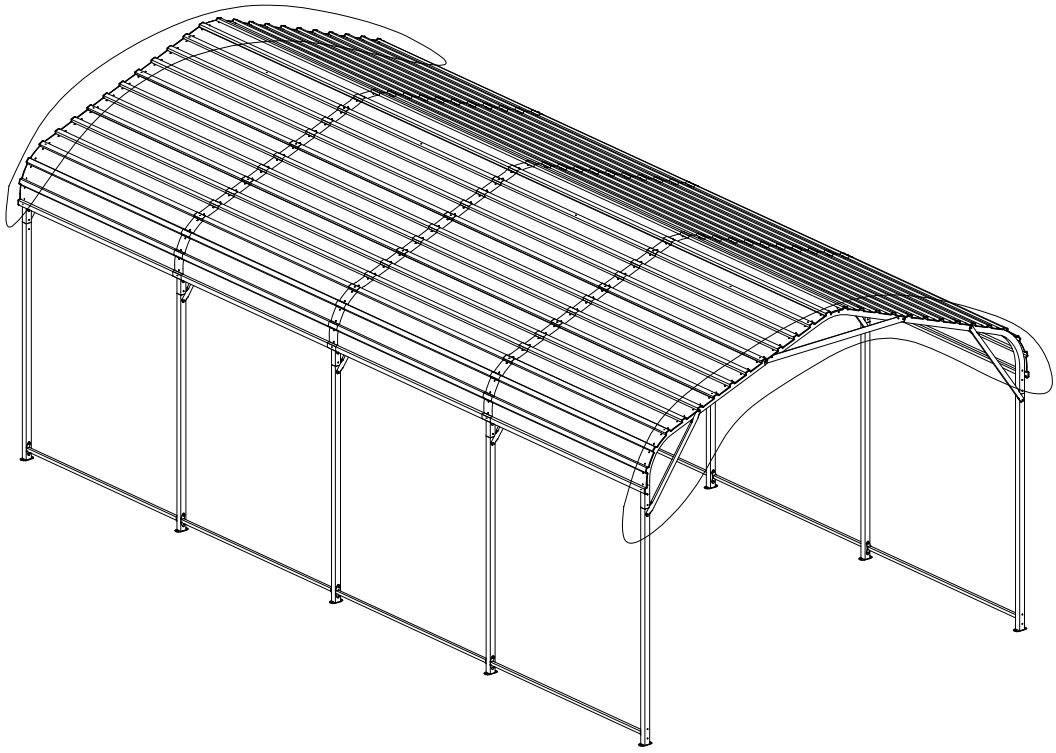

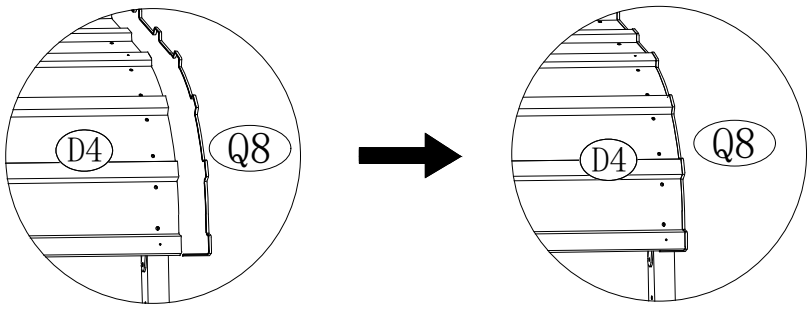

NO.	PART.	Qty.
Q5		10
Q6		10
Q21		20
Q9		100

