



Teflon tape





Tape



# Installation Method

## & Tools

### Wall mounted


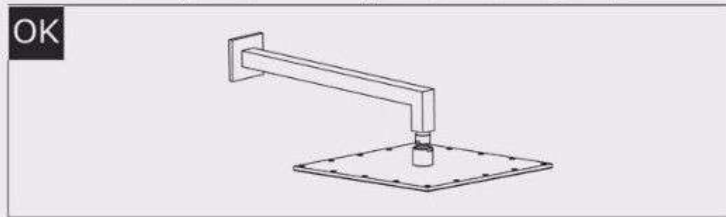
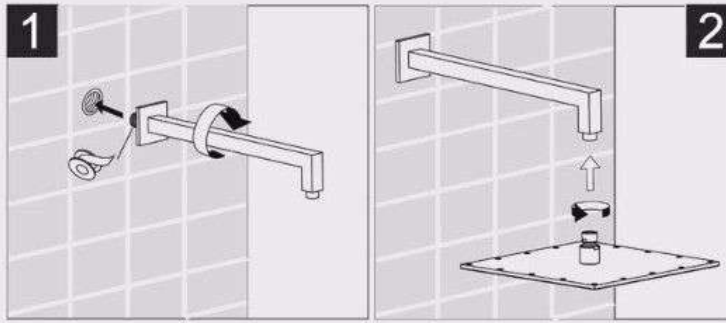


### Ceiling

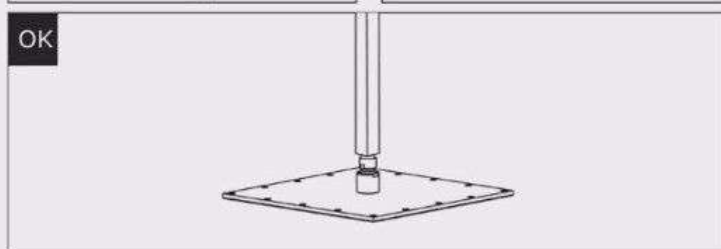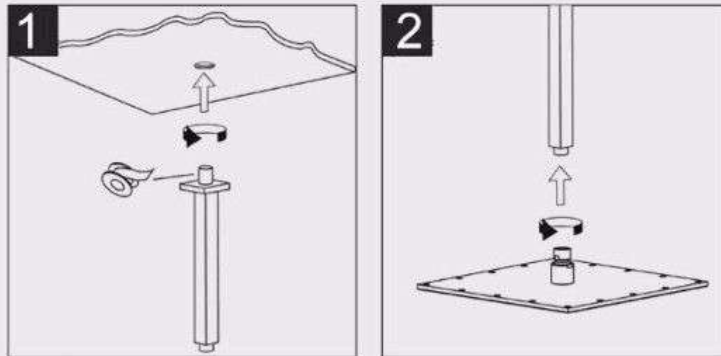

Aqualem Bathroom Tech Limited

*Less is more...*

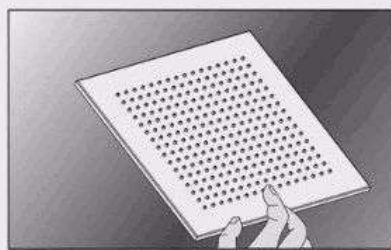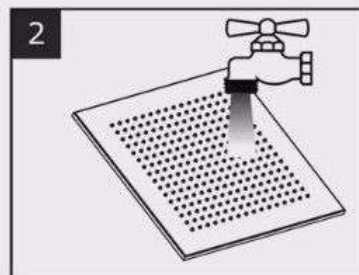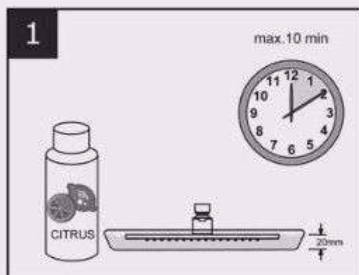

- Just clean: simply rub over the spray nozzles to remove lime scale.