









INSTALLATION GUIDE




Part List

A (Post x 4)	B End Rails x 4 (Holes only one side)	C Middle Rails x 2 (Holes both side)	D Slats x 28
			
E End Cap x 12	F Screws & Drill butt	G Connector x 4	H Top Cap x 4
			

Tool Required Not Provided: Electric Drill

Step 1

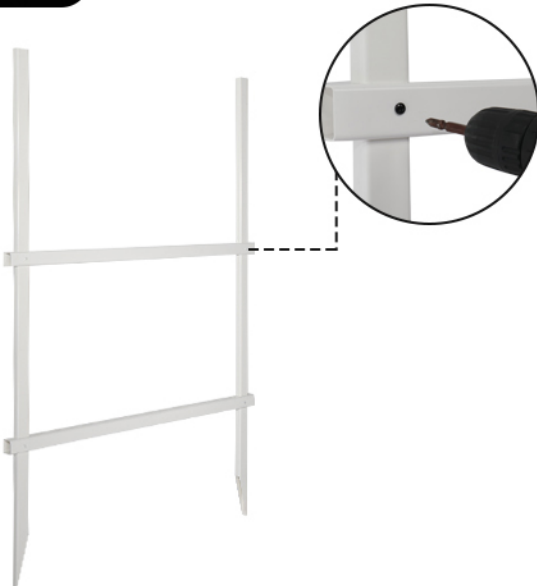

Slide end and bottom rails to the post, use Electric drill to screws (There are holes on the rails and post to help with positioning)

Step 2



Align the holes and keep them vertical, Then Slide the Slats. You can insert them better by shaking

Step 3



Slide top rails, Toggle slats inserted into the top rails.

Step 4



Install the end/top cap

Step 5



Finish a panel

Step 6



Use connector to connect more panles

Step 7



Insert the panel the ground (A hammer, ground spikes, etc. can be used to help insert the soil)