

ASSEMBLY INSTRUCTION


OUTDOOR SUNBED

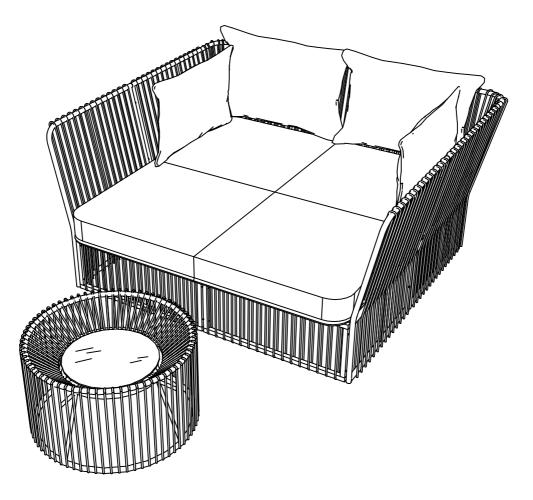



Please read all instructions carefully:

- 1. Have 2 adults on hand for assembly.
- 2. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 3. Place the item on a flat ground to adjust and make sure it remains stable.
- 4. Tighten up all screws with tools gradually.
- 5. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 6. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 7. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

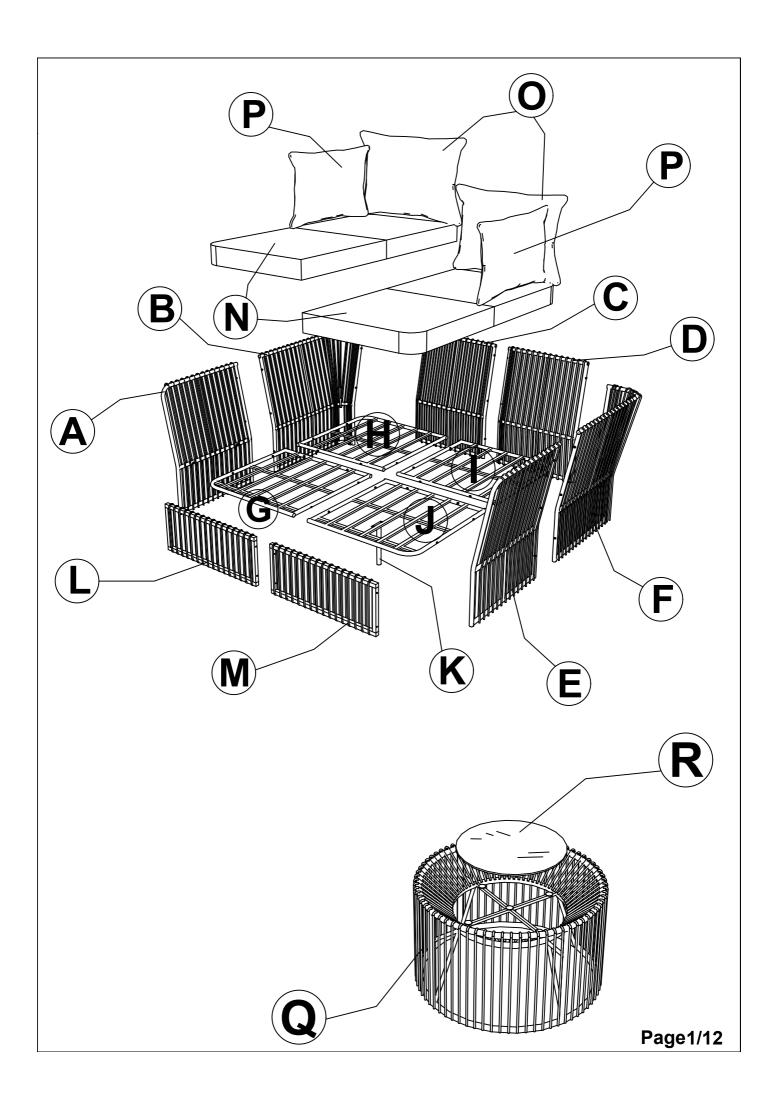


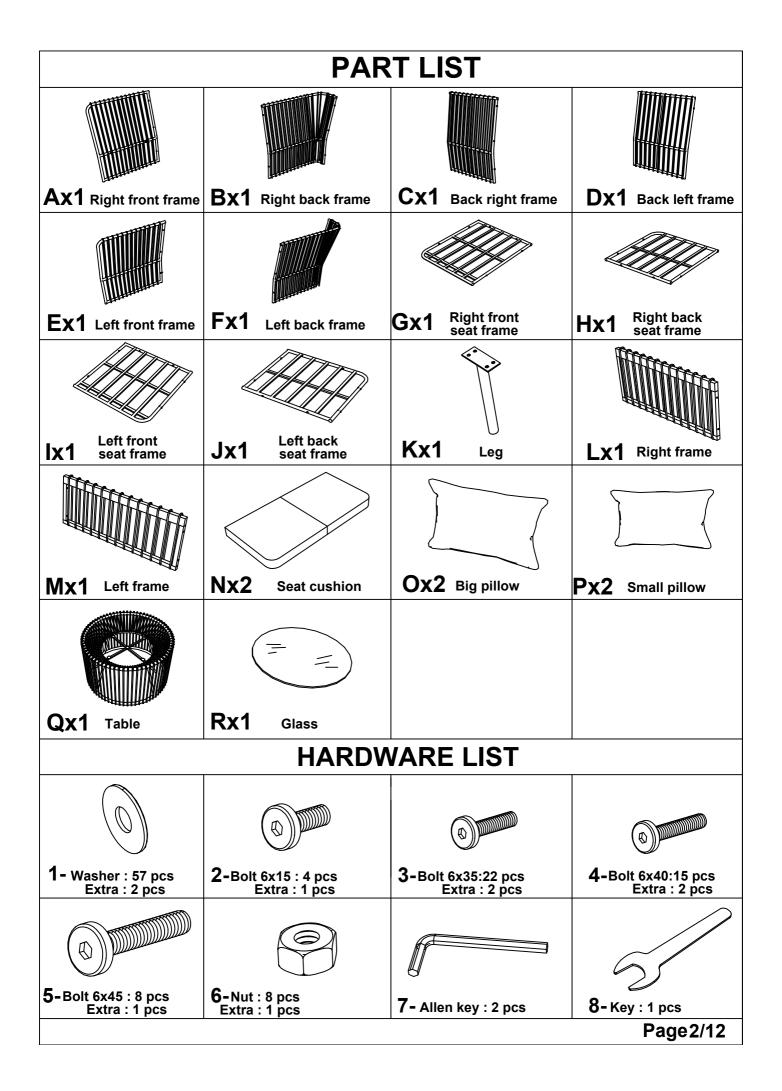

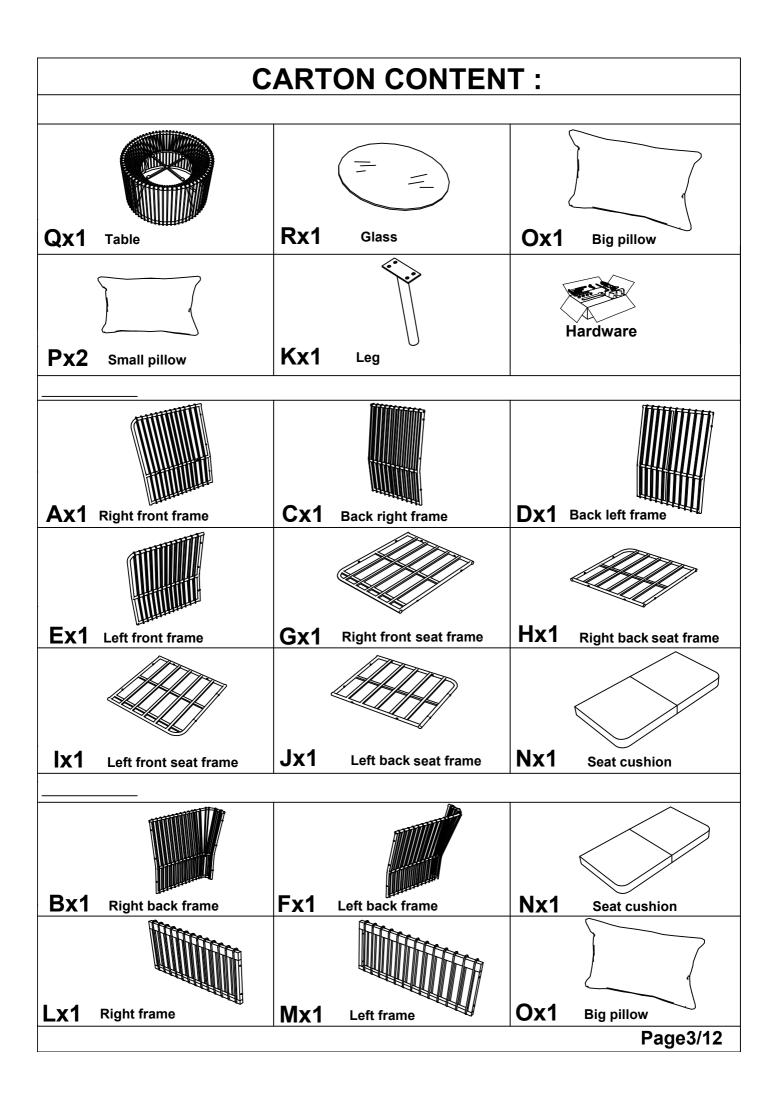


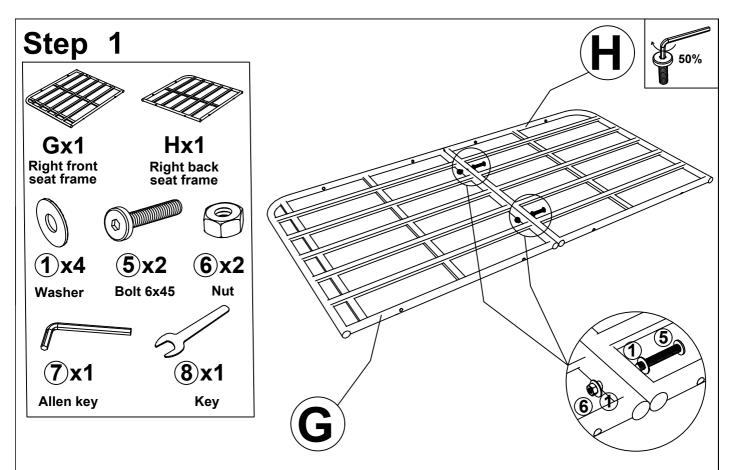


Connect The Right front seat frame (G) & Right back seat frame (H), tighten Bolt (5), Nut (6), Flat Washer (1) With Allen key (7), Key (8)

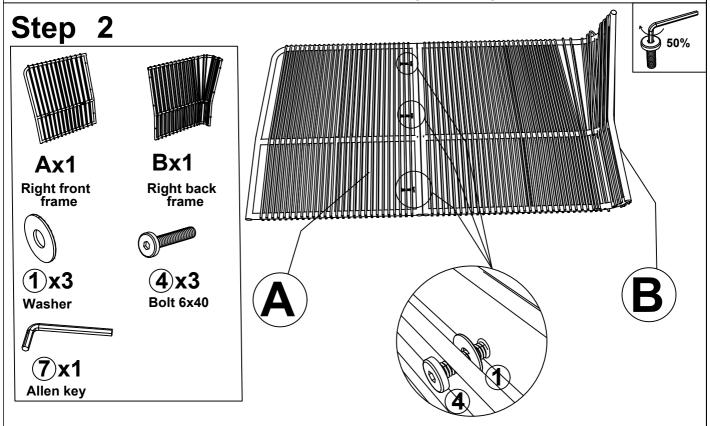

Connect The Right front frame (A) & Right back frame (B), tighten Bolt (4), Flat Washer (1) With Allen key (7)

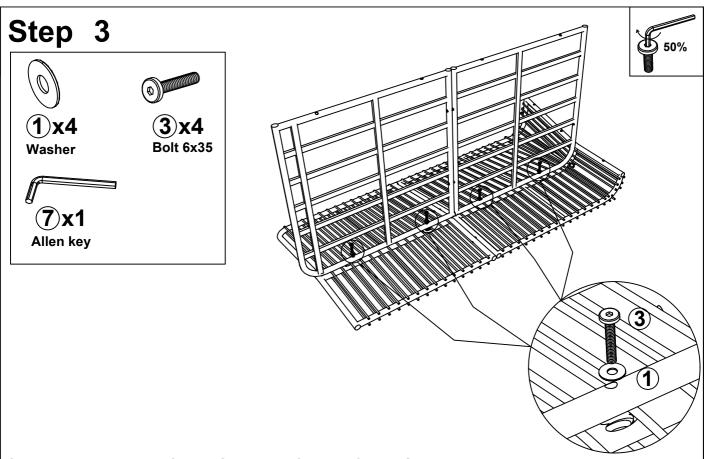


Connect The part from Step (1) & part from Step (2), tighten Bolt (3), Flat Washer (1) With Allen key (7)

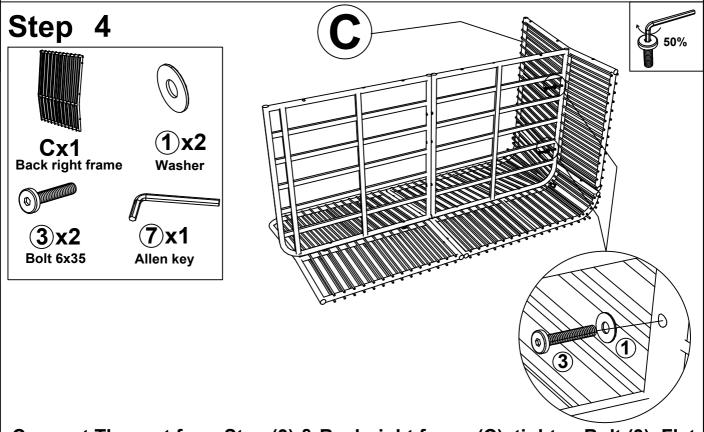


Connect The part from Step (3) & Back right frame (C), tighten Bolt (3), Flat Washer (1) With Allen key (7)

Page 5/12

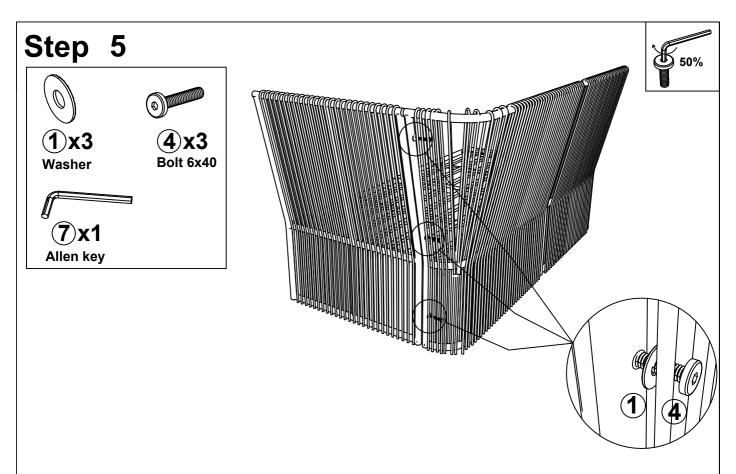


Tighten Bolt (4), Flat Washer (1) With Allen key (7)

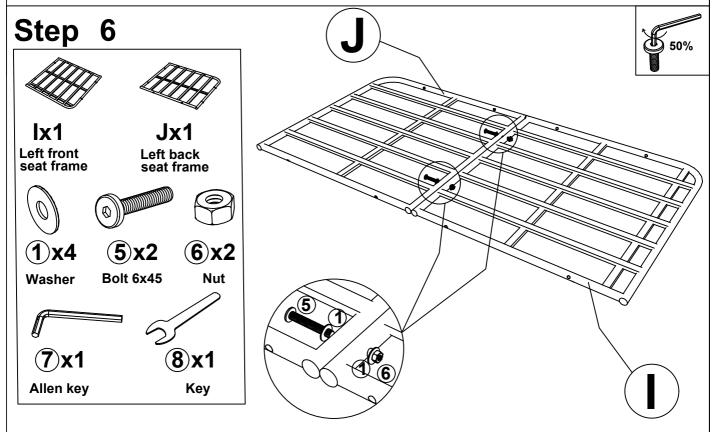


Connect The Left front seat frame (I) & Left back seat frame (J), tighten Bolt (5), Nut (6), Flat Washer (1) With Allen key (7), Key (8)


Page 6/12

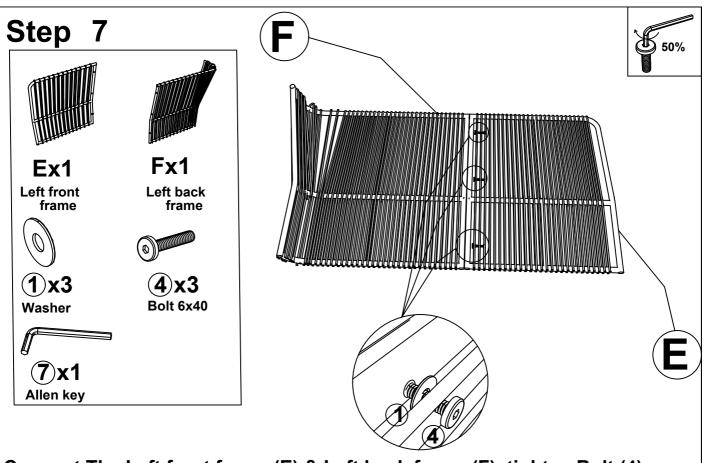


Connect The Left front frame (E) & Left back frame (F), tighten Bolt (4), Flat Washer (1) With Allen key (7)

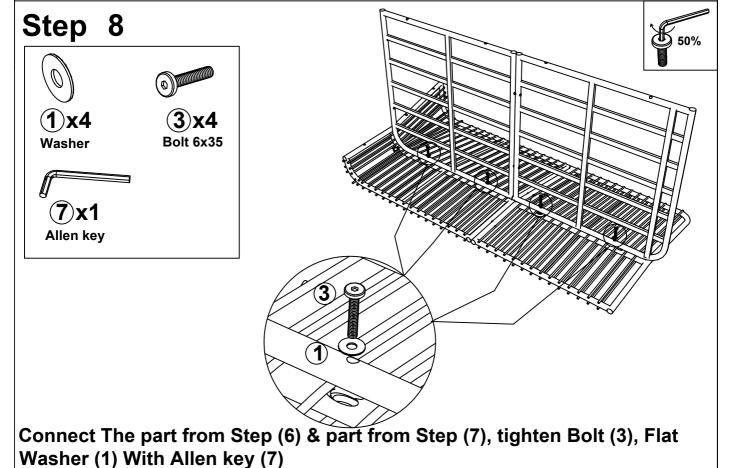


Page 7/12

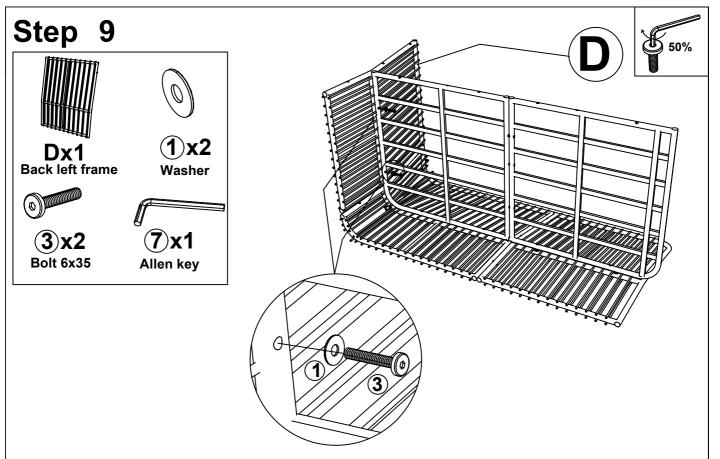



Connect The part from Step (8) & Back left frame (D), tighten Bolt (3), Flat Washer (1) With Allen key (7)

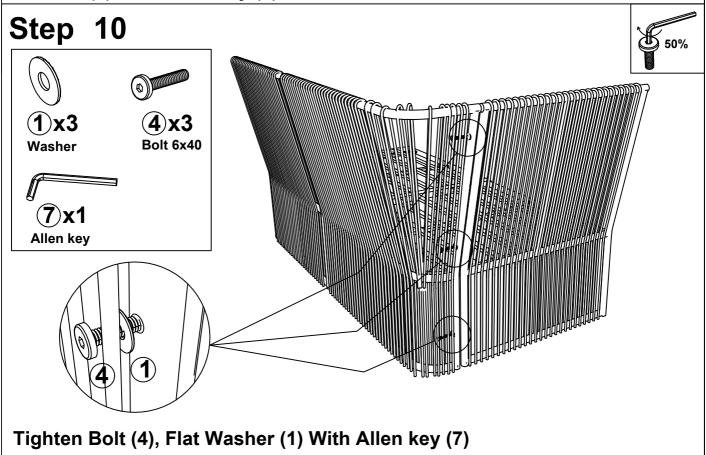


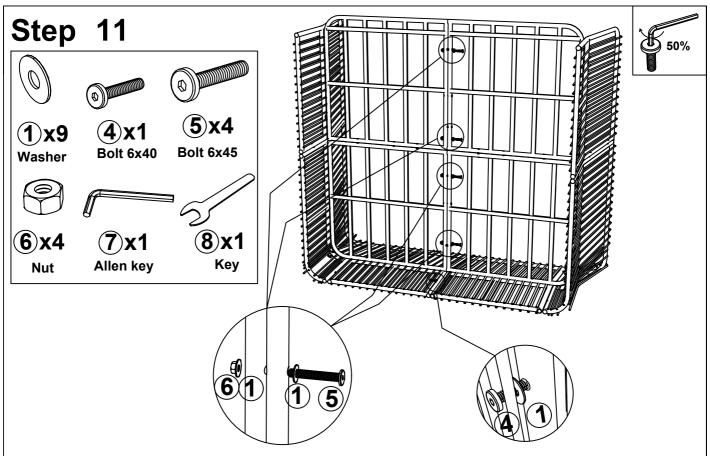


Connect The part from Step (5) & part from Step (10), tighten Bolt (4), Bolt (5), Nut (6), Flat Washer (1) With Allen key (7), Key (8)

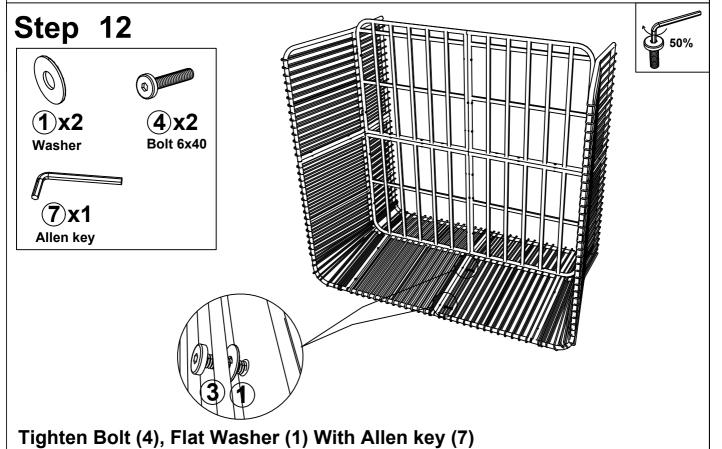

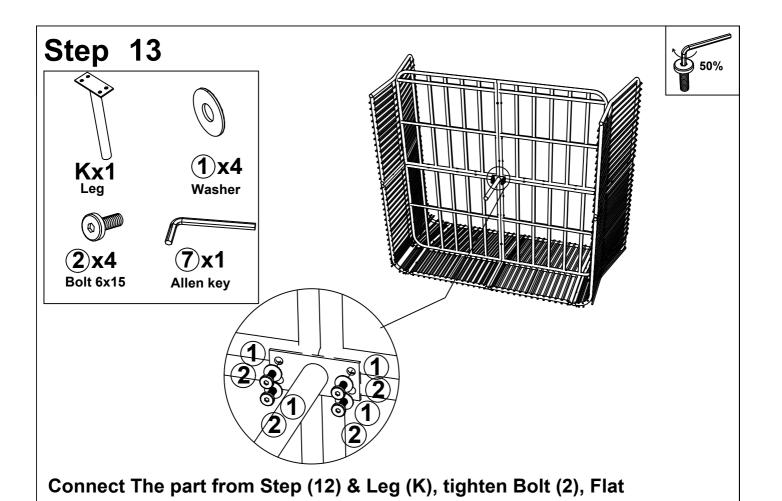


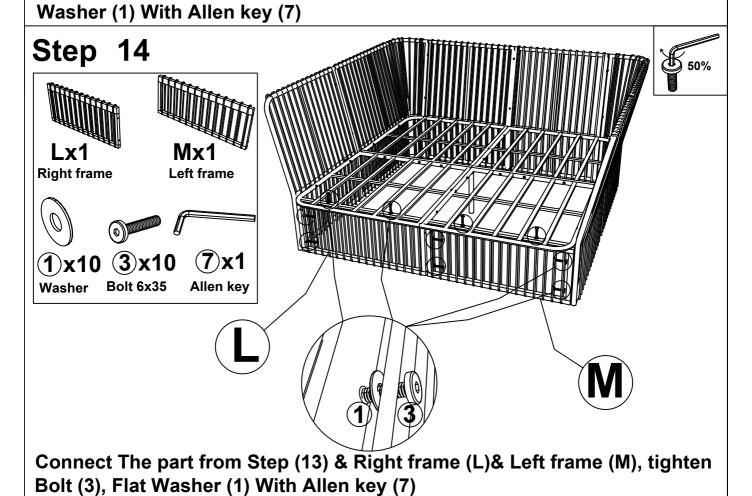


Page10/12

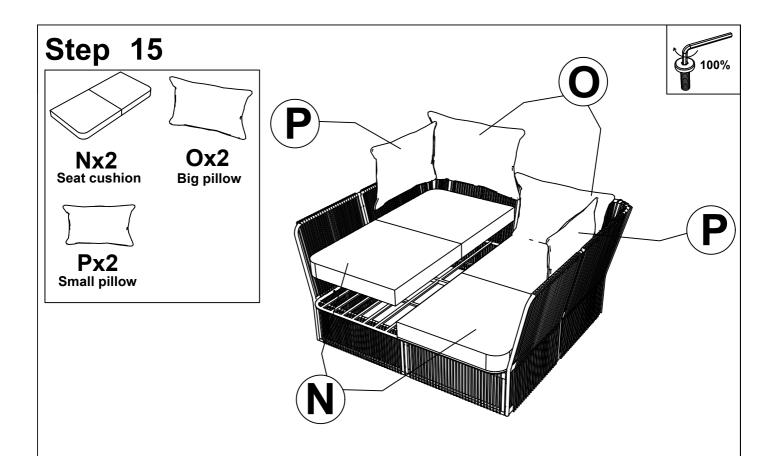


Put on Seat cushion (N), Big pillow (O), Small pillow (P), to bed to finish bed

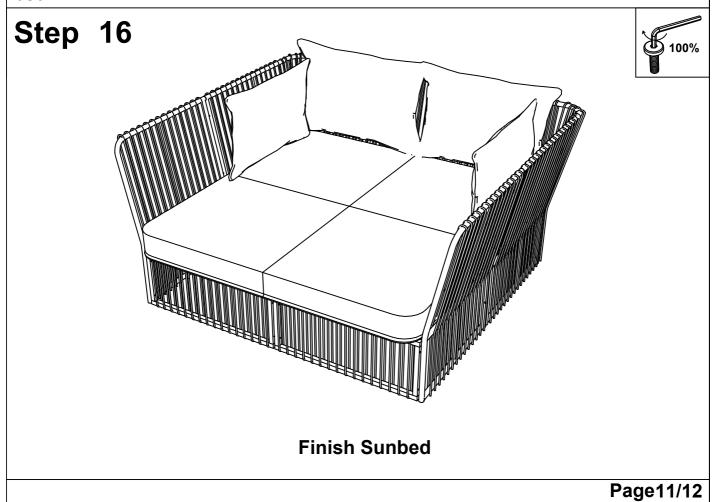




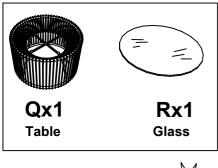

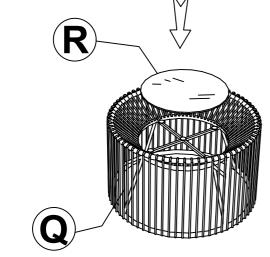


Put on Glass (R) to Table (Q) to finish

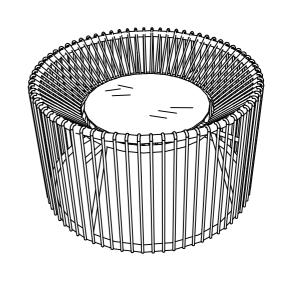

Finish Table



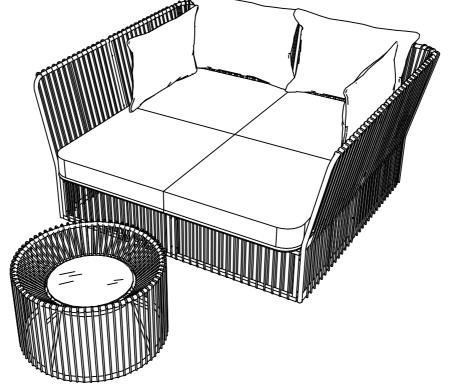

Finish Outdoor Sunbed