


Let's build the

Jett Storage Cabinet

SKU 32420

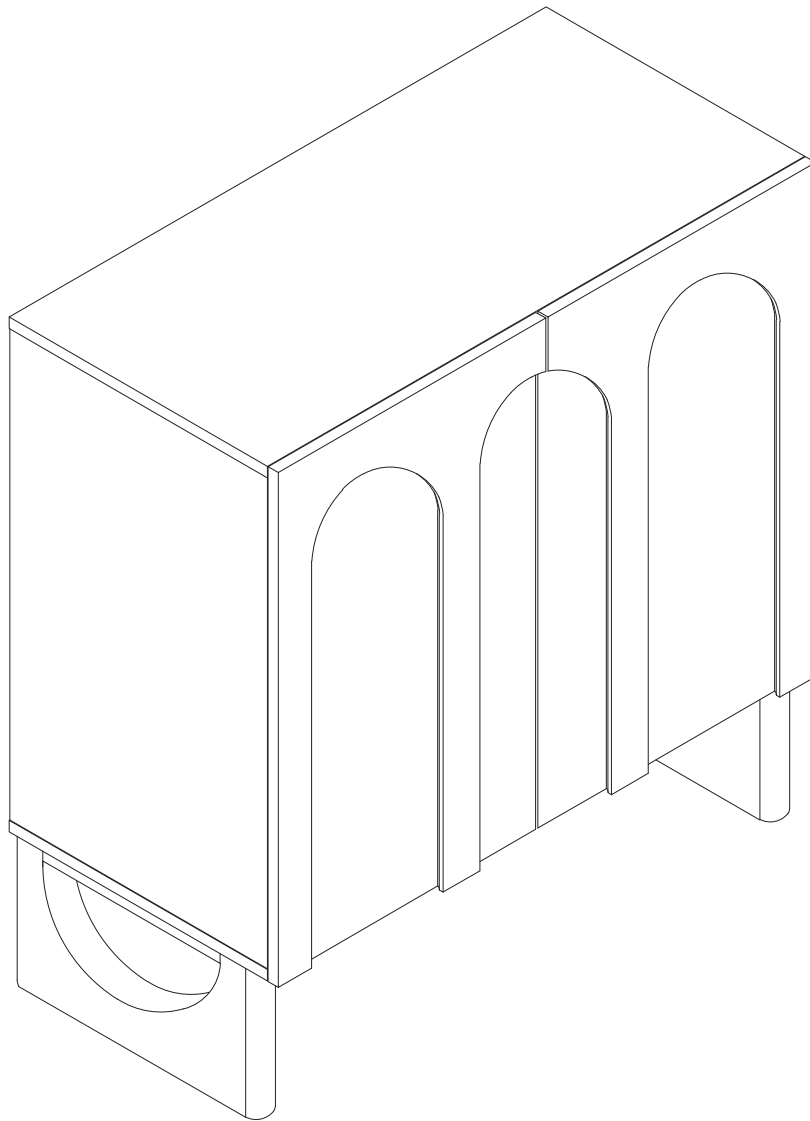

Scan me!

Free Lifetime
Guarantee

 **nathan james**

25-1217-VN

Ok, let's get rolling

This should be easy, just follow our instructions and you will be back to Netflix in no time.

Estimated time for assembly



90:00


What you need

- Some of your favourite bubbly or your preferred relaxant
- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips-head screwdriver
- Drill bit 1/4" or 5/16"

Weight Limitation



100
lbs

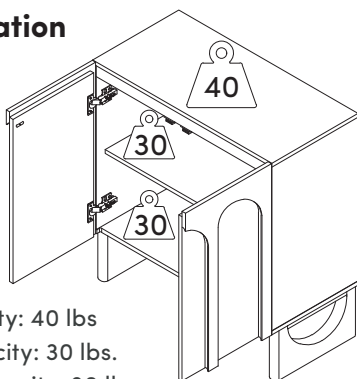

Top Max. Capacity: 40 lbs
Shelf Max. Capacity: 30 lbs.
Bottom Max. Capacity: 30 lbs.


Toll-free at 1-866-619-1004
Help@nathanjames.com
Nathanjames.com/help

What's included


Description		Qty
A	Top Panel	1
B	Side Panel (Right)	1
C	Side Panel (Left)	1
D	Back Panel (Left)	1
E	Back Panel (Right)	1
F	Bottom Panel	1
G	Leg	2
H	Top Stretcher (Front)	1
I	Left Door	1
J	Right Door	1
K	Adjustable Shelf	1

Scan me!

Free Lifetime
Guarantee

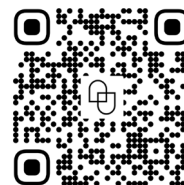

The goods

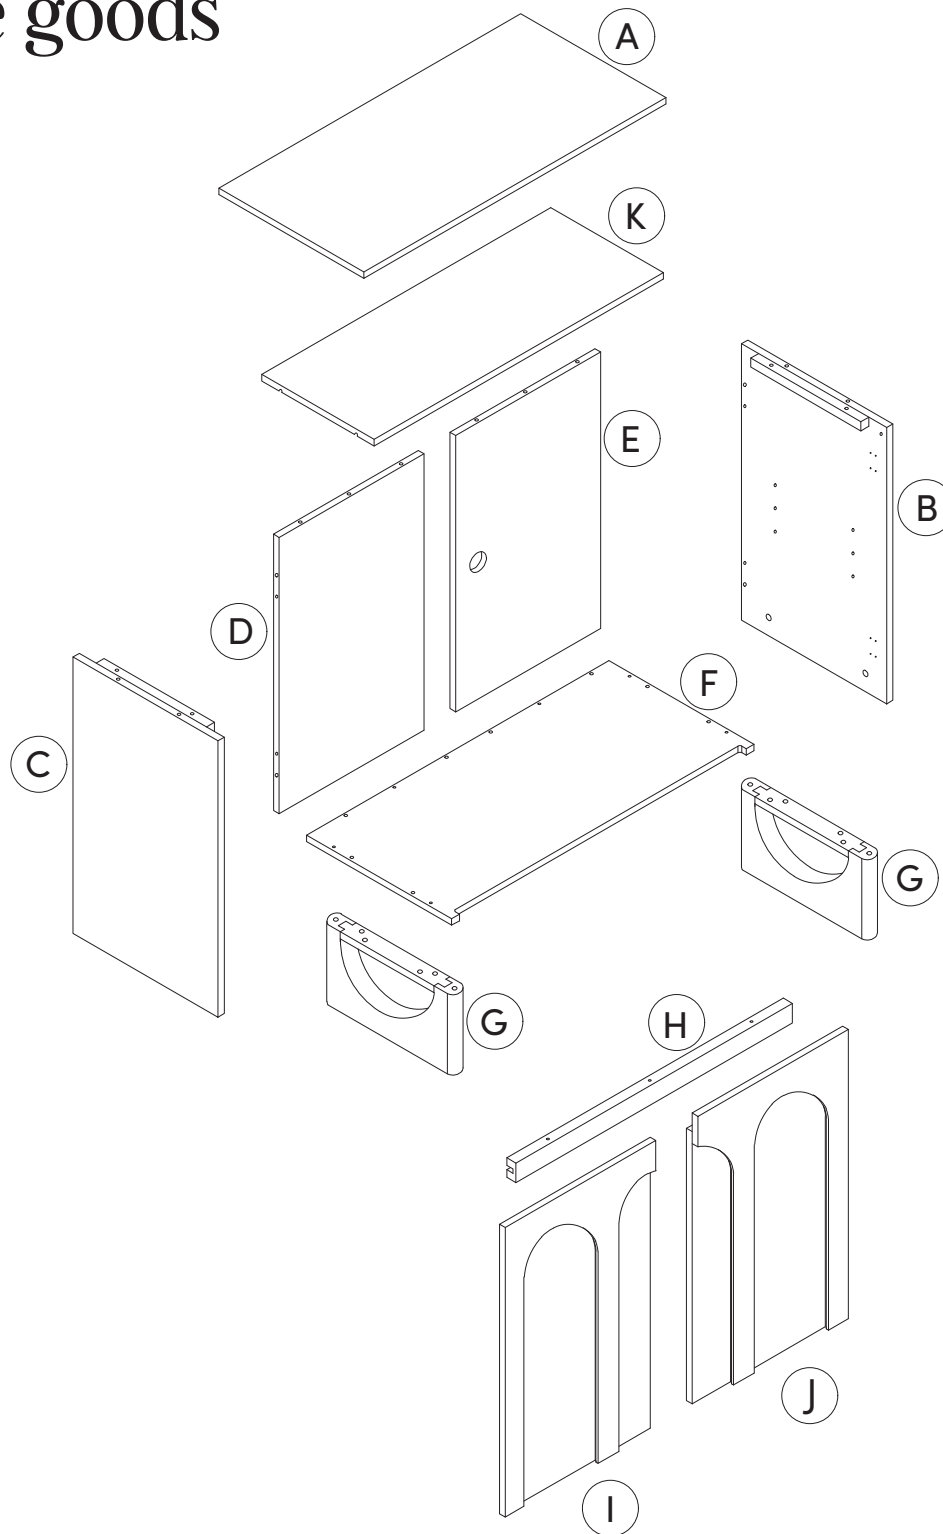


IMPORTANT

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product.

What's included

Description		Qty	Description		Qty
1	Cam Bolt (Extra 1pc)	15	16	Plastic Bracket (for Anti-Tip Kit)	2
2	Cam Lock (Extra 1pc)	15	17	Non - Drywall Anchor (for Anti-Tip Kit)	2
3	Ø8 x 30mm Wooden Dowel (Extra 2pcs)	26	18	M3.5 x15mm Screw (for Anti-Tip Kit)	2
4	Ø1/4" x 32mm Hex Button Head Bolt	12	19	Plastic Strap (for Anti-Tip Kit)	1
5	Ø1/4" x 15mm Flat Washer	12	20	M4 x 50mm Screw (for Anti-Tip Kit)	2
6	Allen Key	1	21	Drywall Anchor (for Anti-Tip Kit)	2
7	M4 x 35mm Screw	3			
8	Hinge	4			
9	M3.5 x 15mm Screw (Extra 2pcs)	26			
10	Shelf Pin	4			
11	Door Catch Plate	2			
12	M3 x12mm Screw	2			
13	Magnetic Door Catch	2			
14	M3 x15mm Screw	4			
15	Leveler (Extra)	2			

The goods

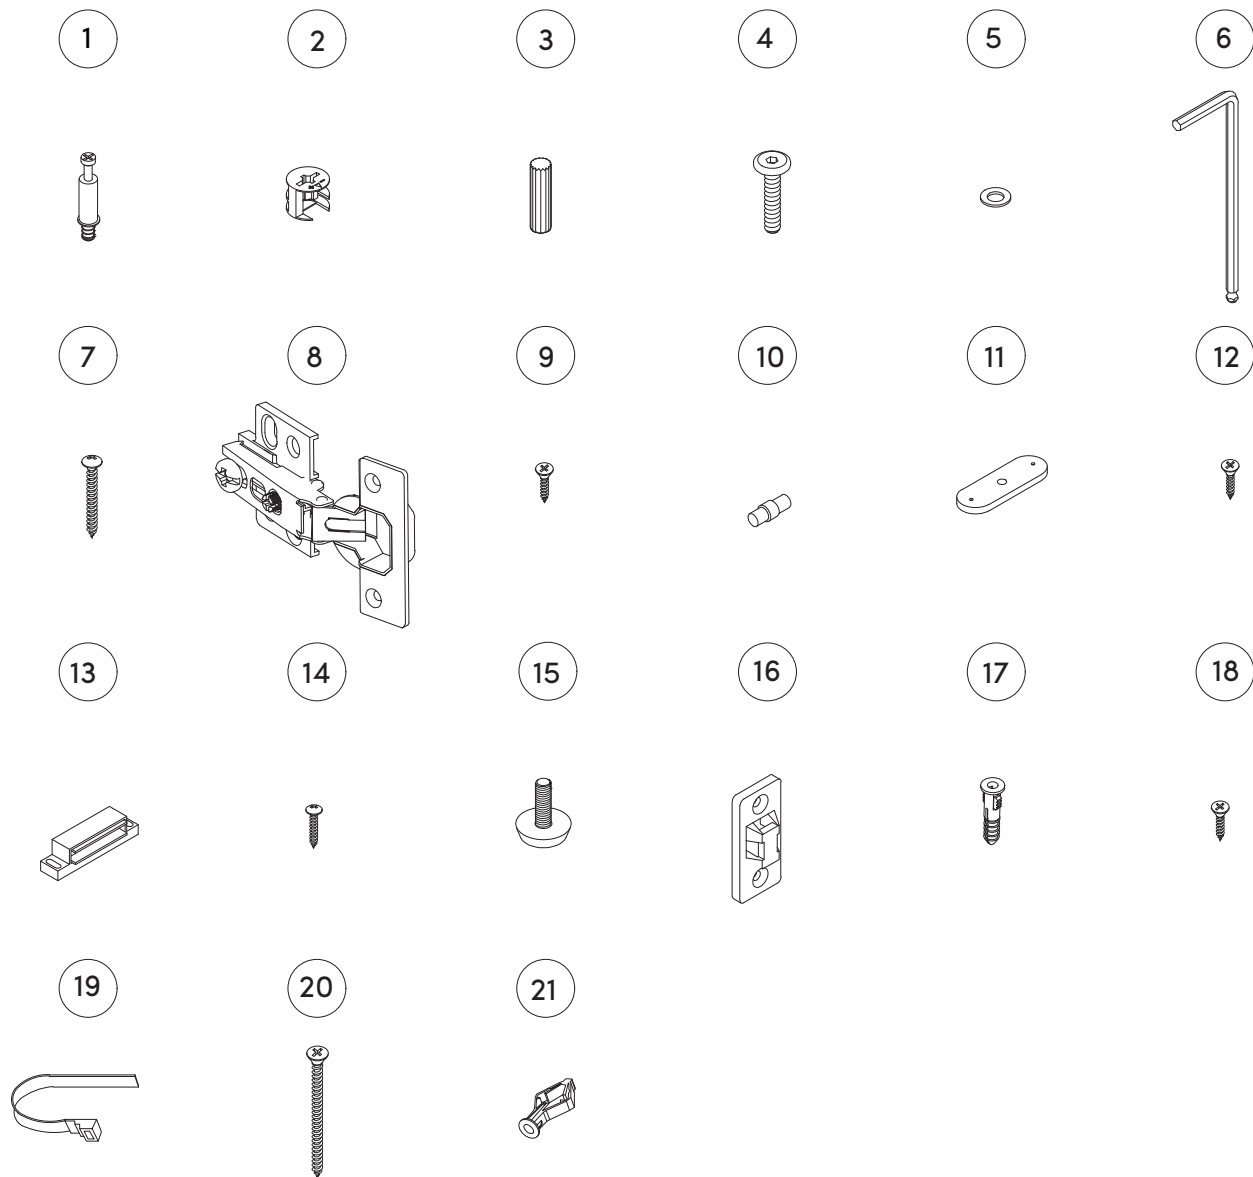


How to use cam locks

Did you know?

Cam locks are used to join two panels together, usually the edge of one to the flat side of another.


First, your cam bolt (or cam pin) will need to be properly inserted into the flat side of the board.

Important Note: Only tighten the cam bolt until it is secure. Do not over-tighten.

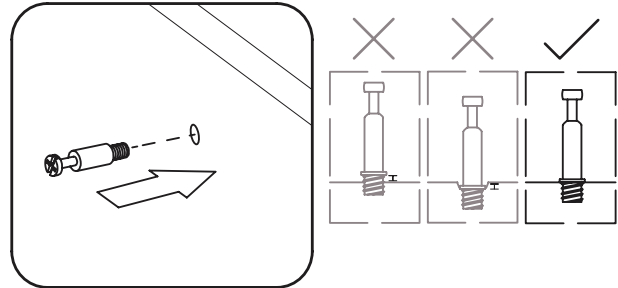


Next, you will fit the proper hole on the edge of the associated joining panel over the cam bolt.

Important Note: When installed properly, the head of the cam bolt will be visible through the larger hole on the side of the joining panel.

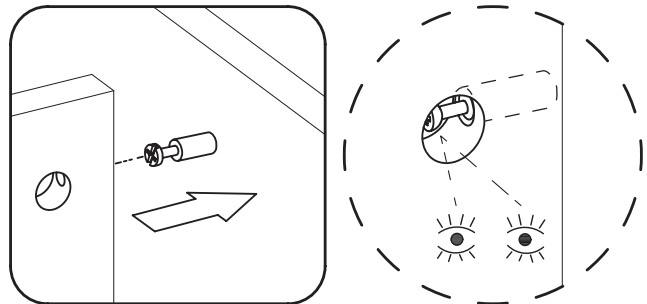


Next, you will notice the cam lock has a “C” shaped back. Commonly, an arrow on the front of the cam lock points in the same direction as the open section on back.

Using these as your cue, insert the cam lock into the large hole so the opening of the “C” fits over the head of the cam bolt.

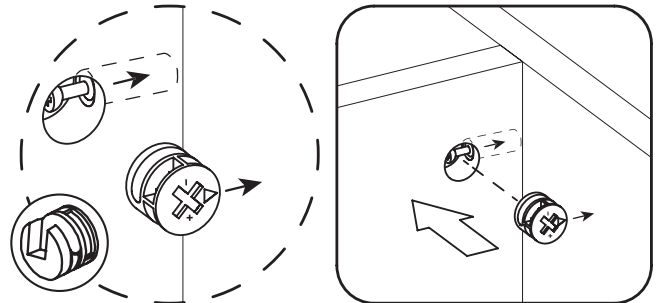

Using a screwdriver, you will turn the cam lock until it stops, usually at 90° or 180°. You will feel the panels pulling closer until they are secured.

Important Note: Only turn the cam lock until the panels are fully engaged & feel secure. Turning too far may lead to hardware failure.

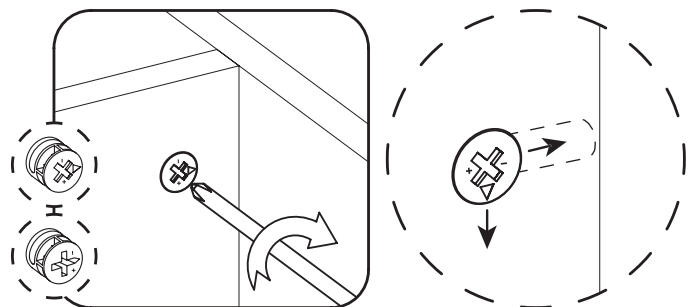

Still having issues?

If a cam lock seems to be spinning in place or is not “catching” or pulling the panels together as expected, first remove the cam lock & try again while making sure that everything is properly positioned & oriented.

If you are still having issues getting things working as expected, first remove the cam lock, then unscrew the cam bolt slightly (less than 1 complete turn) to see if that helps with the alignment of the cam lock & bolt.







Step 1

Screw the Cam Bolts (1) into the Top Panel (A), the Bottom Panel (F), the Side Panel (Left) (C), and the Side Panel (Right) (B).

1





x14pcs

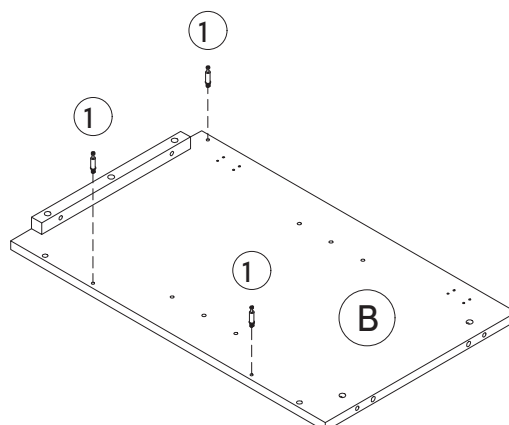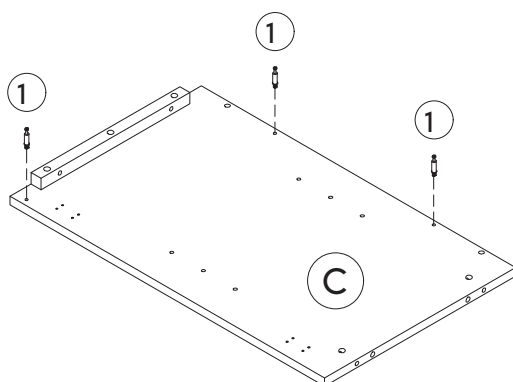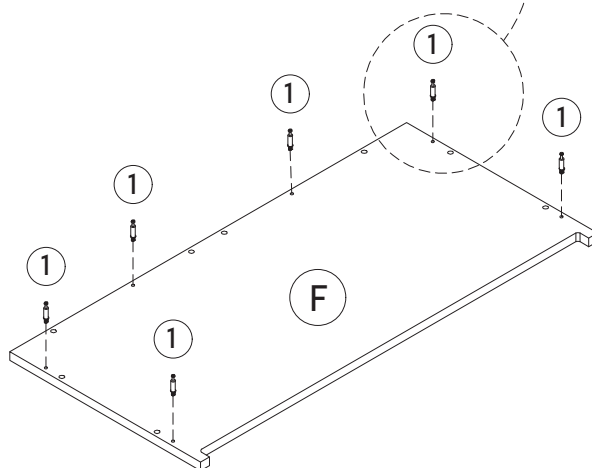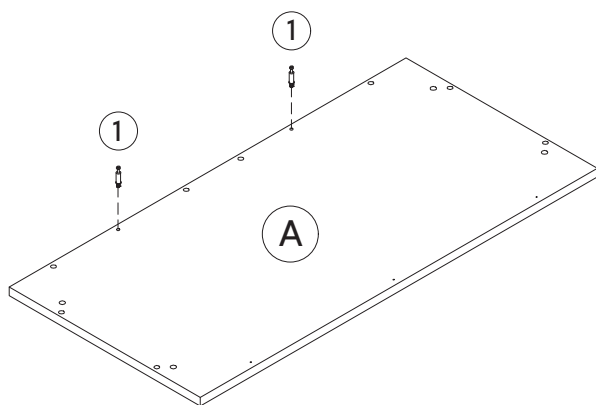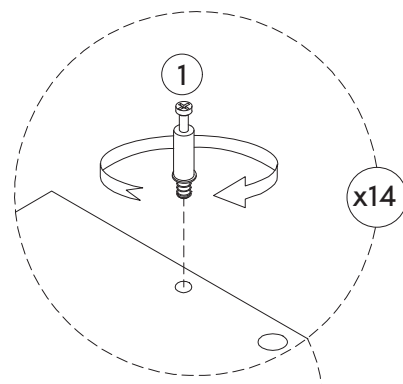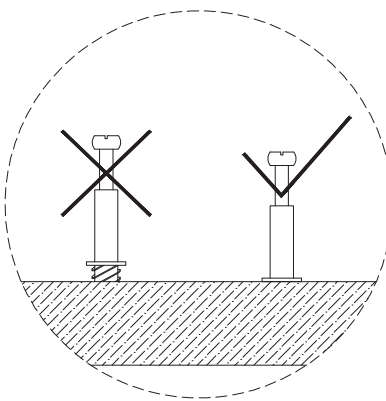

Step 2



Insert two Wooden Dowels (3) into the Side Panel (Left) (C). Then place the Back Panel (Left) (D) onto the Wooden Dowel (3). Make sure to line things up as shown below. Finally, use the Cam Lock (2) to secure the Side Panel (Left) (C) and the Back Panel (Left) (D) together.

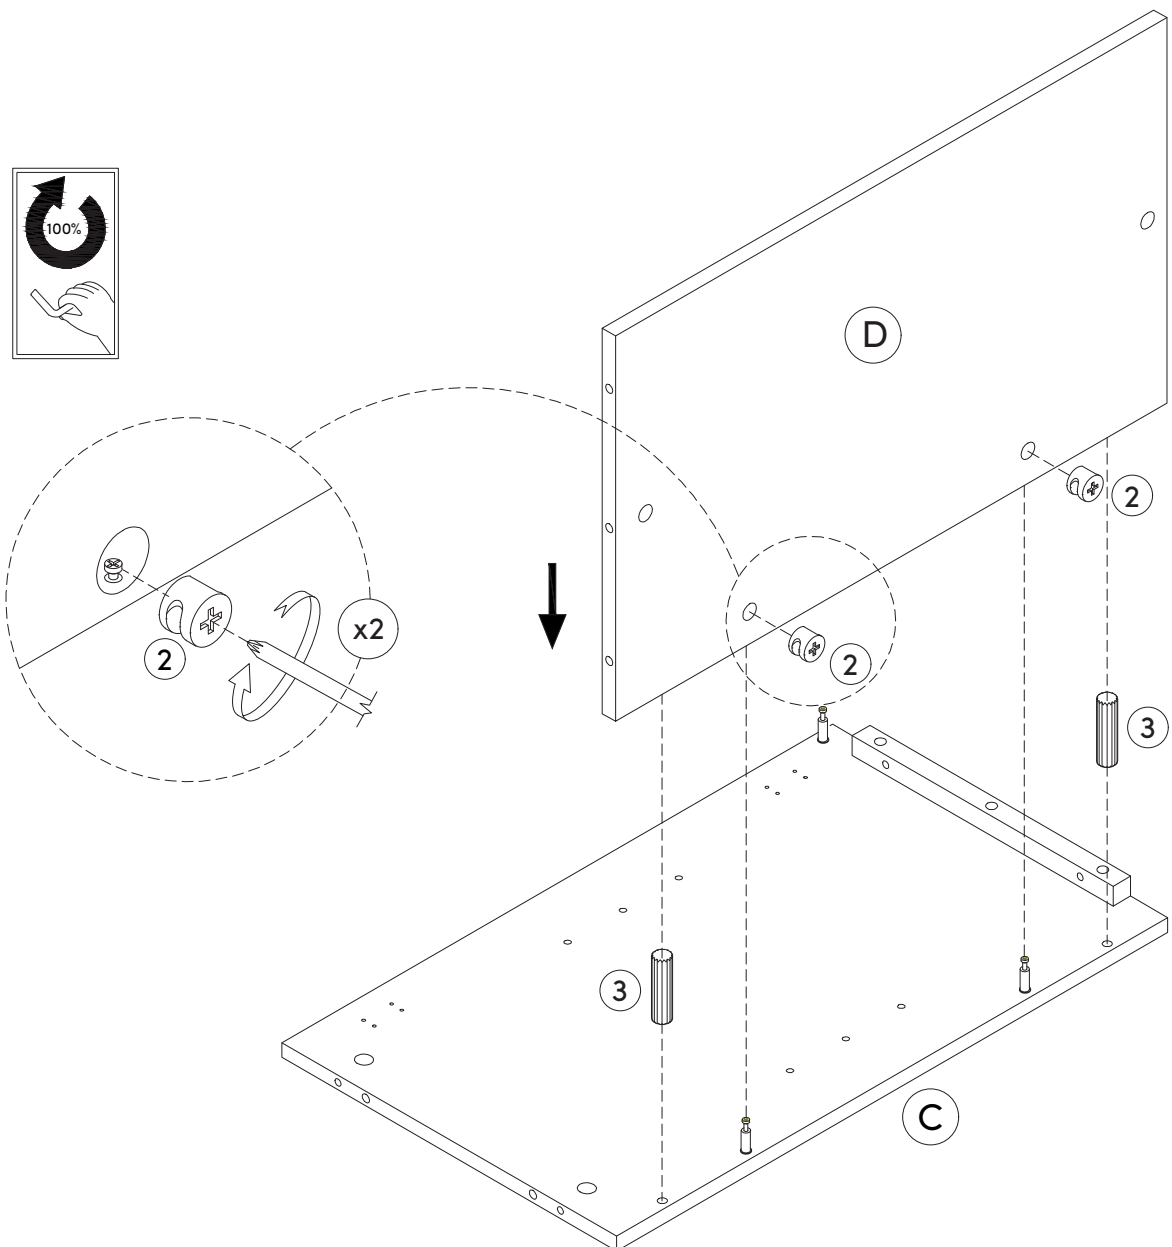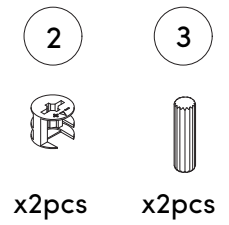

Step 3

Continue by inserting another two Wooden Dowels (3) into the Side Panel (Right) (B). Then place the Back Panel (Right) (E) onto the Wooden Dowel (3). Make sure to line things up as shown below.



Finally, use the Cam Lock (2) to secure the Side Panel (Right) (B) and the Back Panel (Right) (E) together.

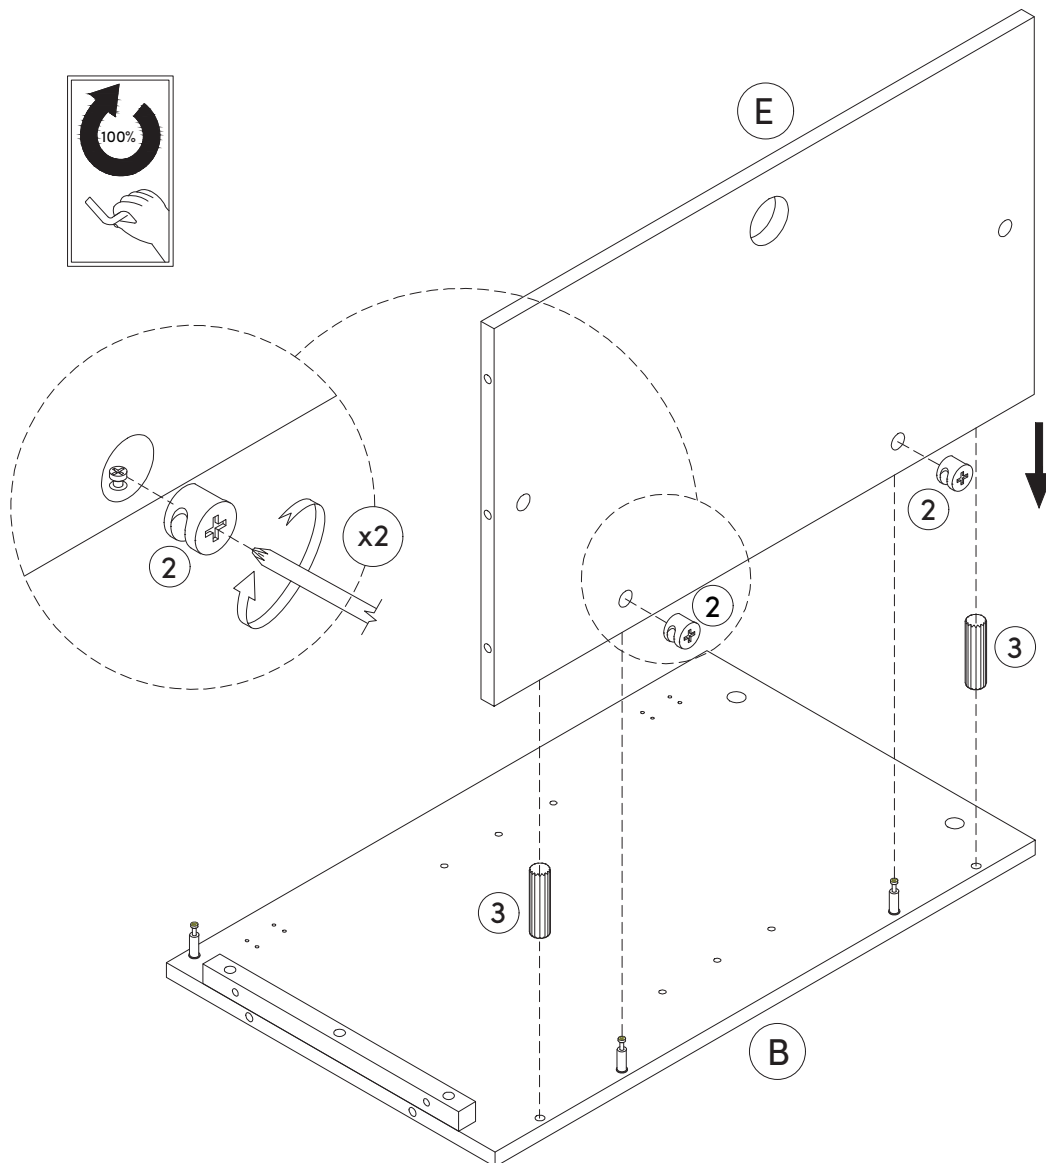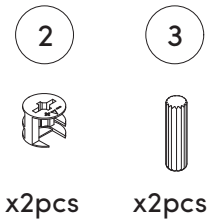

Step 4

First, insert four Wooden Dowels (3) into the Top Panel (A). Then place the piece you assembled in Step 3 onto the Wooden Dowel (3). Make sure to line things up as shown below. Next, slide the Flat Washers (5) onto the Bolts (4). Use these parts and the Allen Key (6) to secure the Top Panel (A) and the Side Panel (Right) (B) together.

Finally, use the Cam Lock (2) to secure the Back Panel (Right) (E) and the Top Panel (A) together.

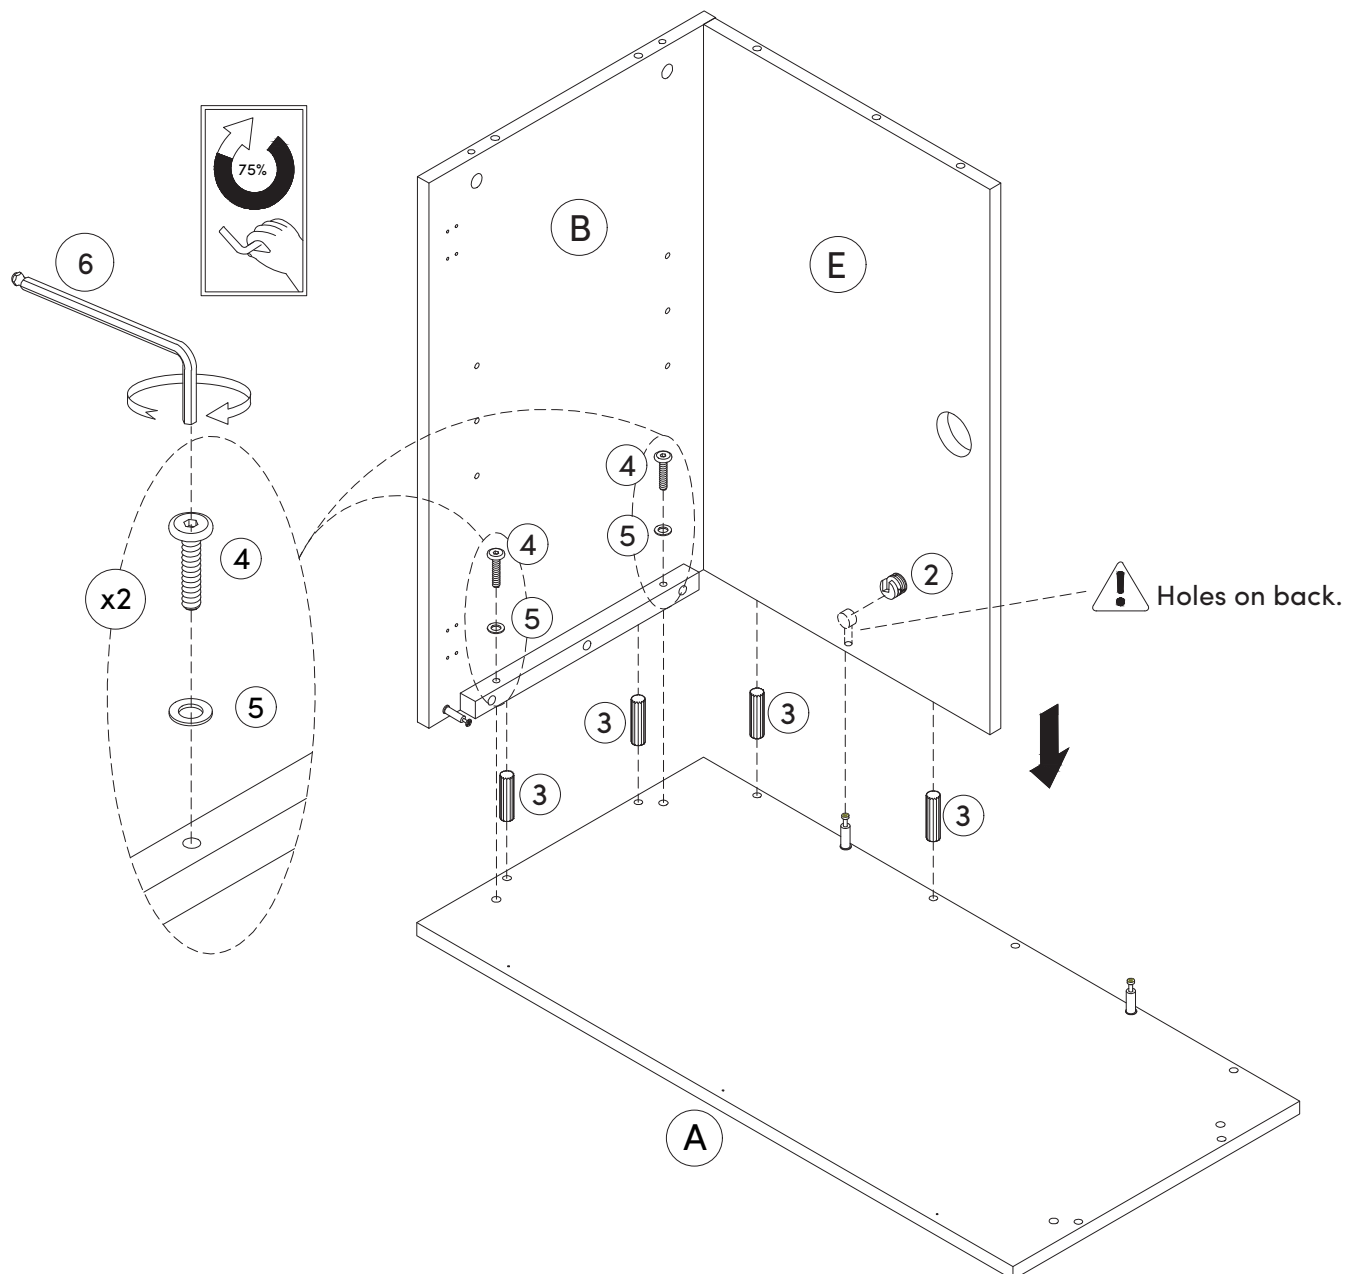
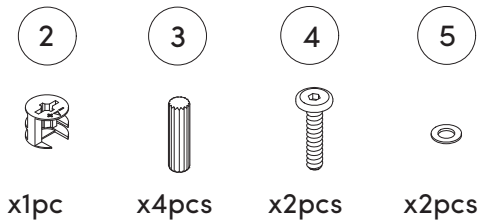


Step 5

First, insert four Wooden Dowels (3) into the Top Panel (A). Then place the piece you assembled in Step 2 onto the Wooden Dowel (3). Make sure to line things up as shown below.

Next, slide the Flat Washers (5) onto the Bolts (4). Use these parts and the Allen Key (6) to secure the Top Panel (A) and the Side Panel (Left) (C) together.

Finally, use the Cam Lock (2) to secure the Back Panel (Left) (D) and the Top Panel (A) together.

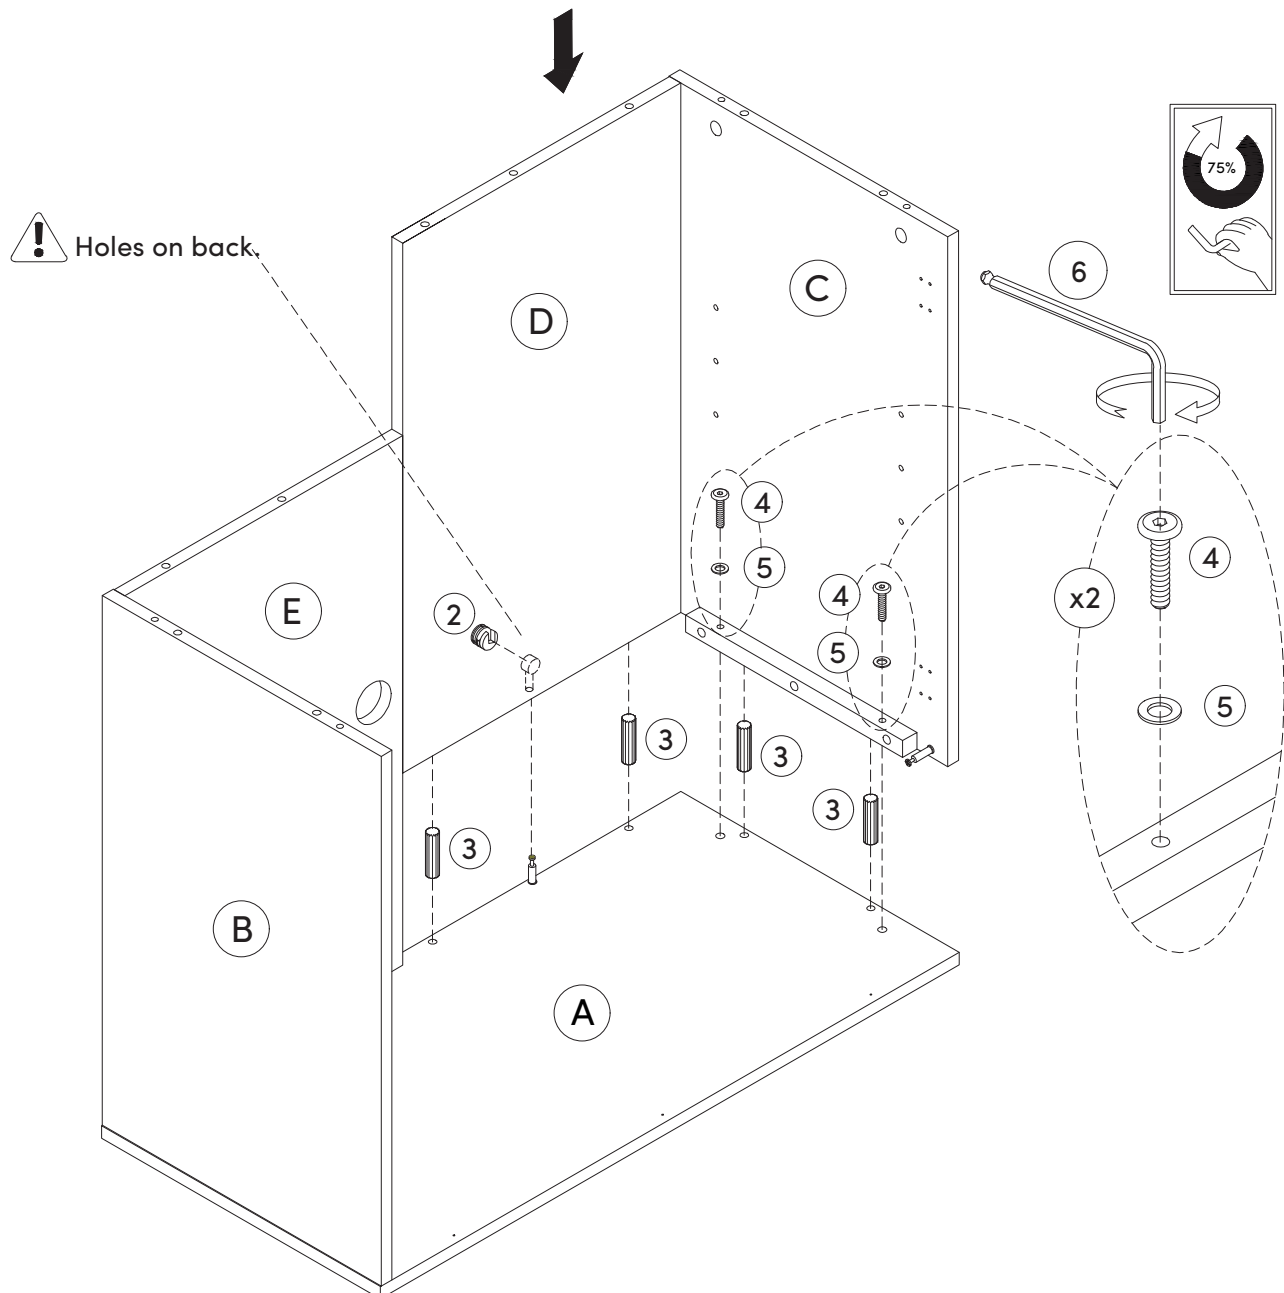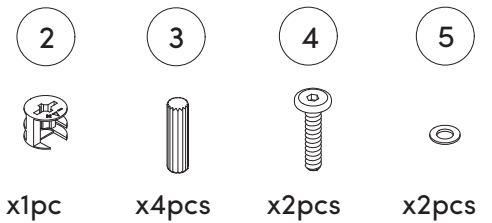

Step 6

First, secure the Magnetic Door Catch (13) onto the Top Stretcher (Front) (H) using the screw (14).

Next, Place the Top Stretcher (Front) (H) by guiding the Cam Bolts into their respective holes as shown below.

Finally secure the Top Stretcher (Front) (H) in place by using the Cam Locks (2) and M4 x 35mm Screw (7).

2




x2pcs

7



x3pcs

13




x2pcs

14





x4pcs

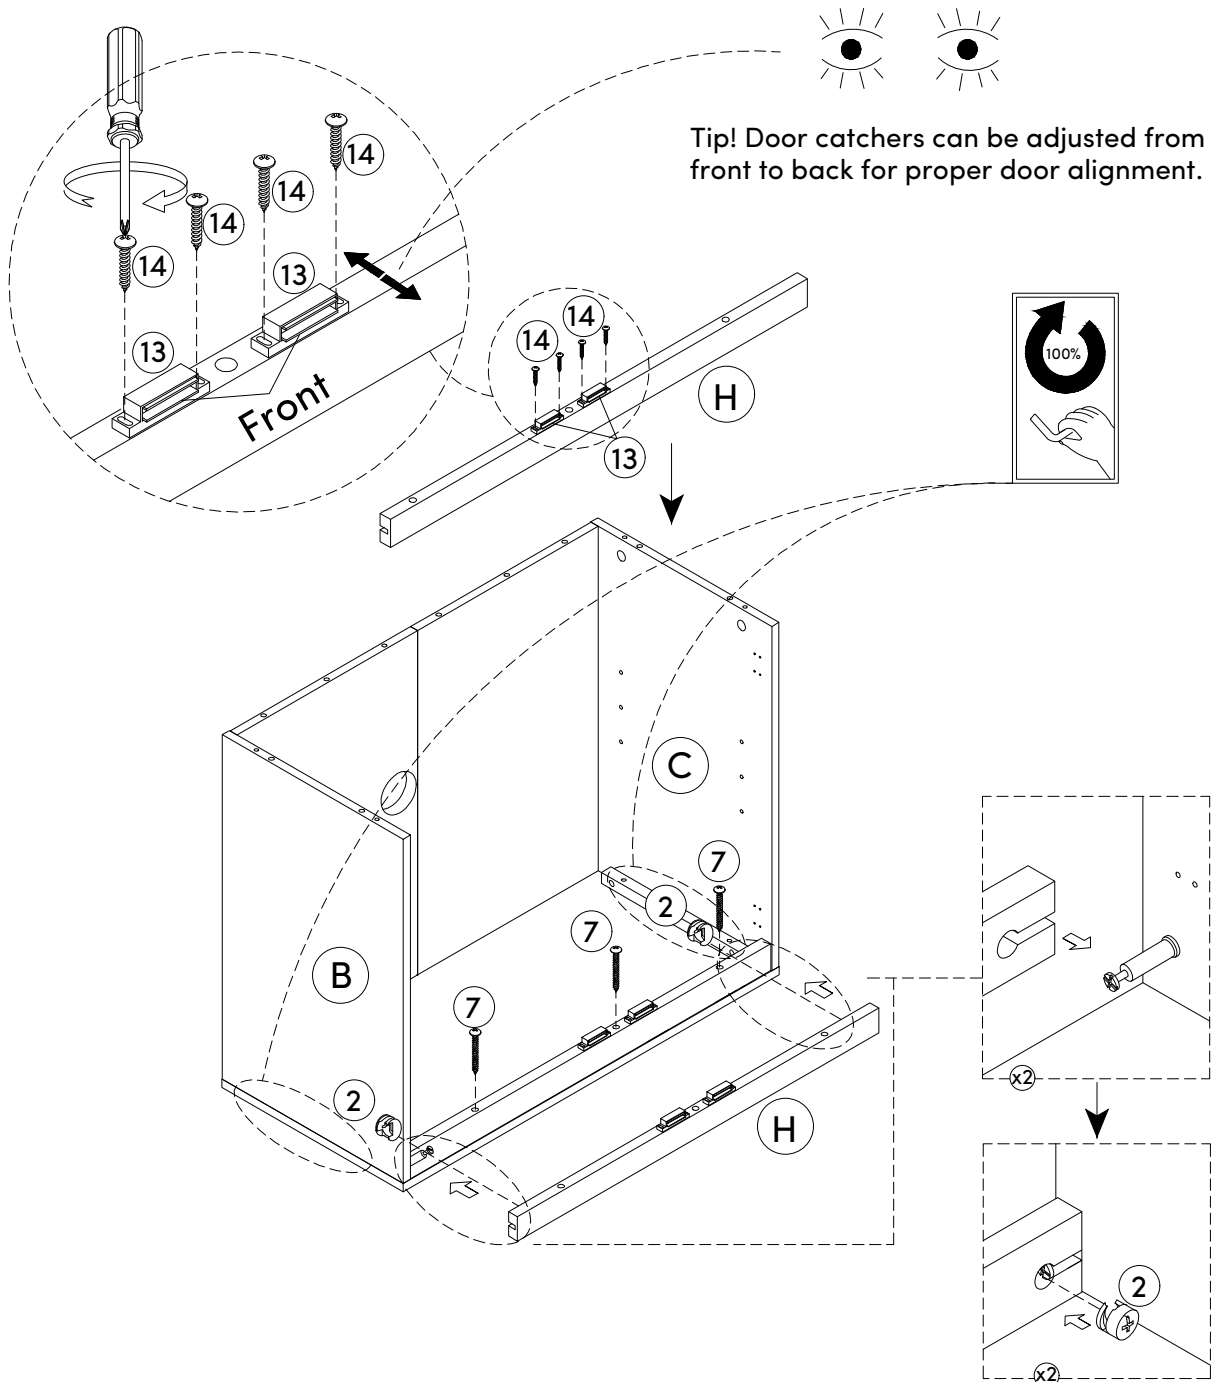

Step 7



Insert eight Wooden Dowels (3) into the assembly completed in Step 6. Place the Bottom Panel (F) over top of the Wooden Dowels (3). Finally, use the six Cam Locks (2) to secure the Bottom Panel (F) in place.

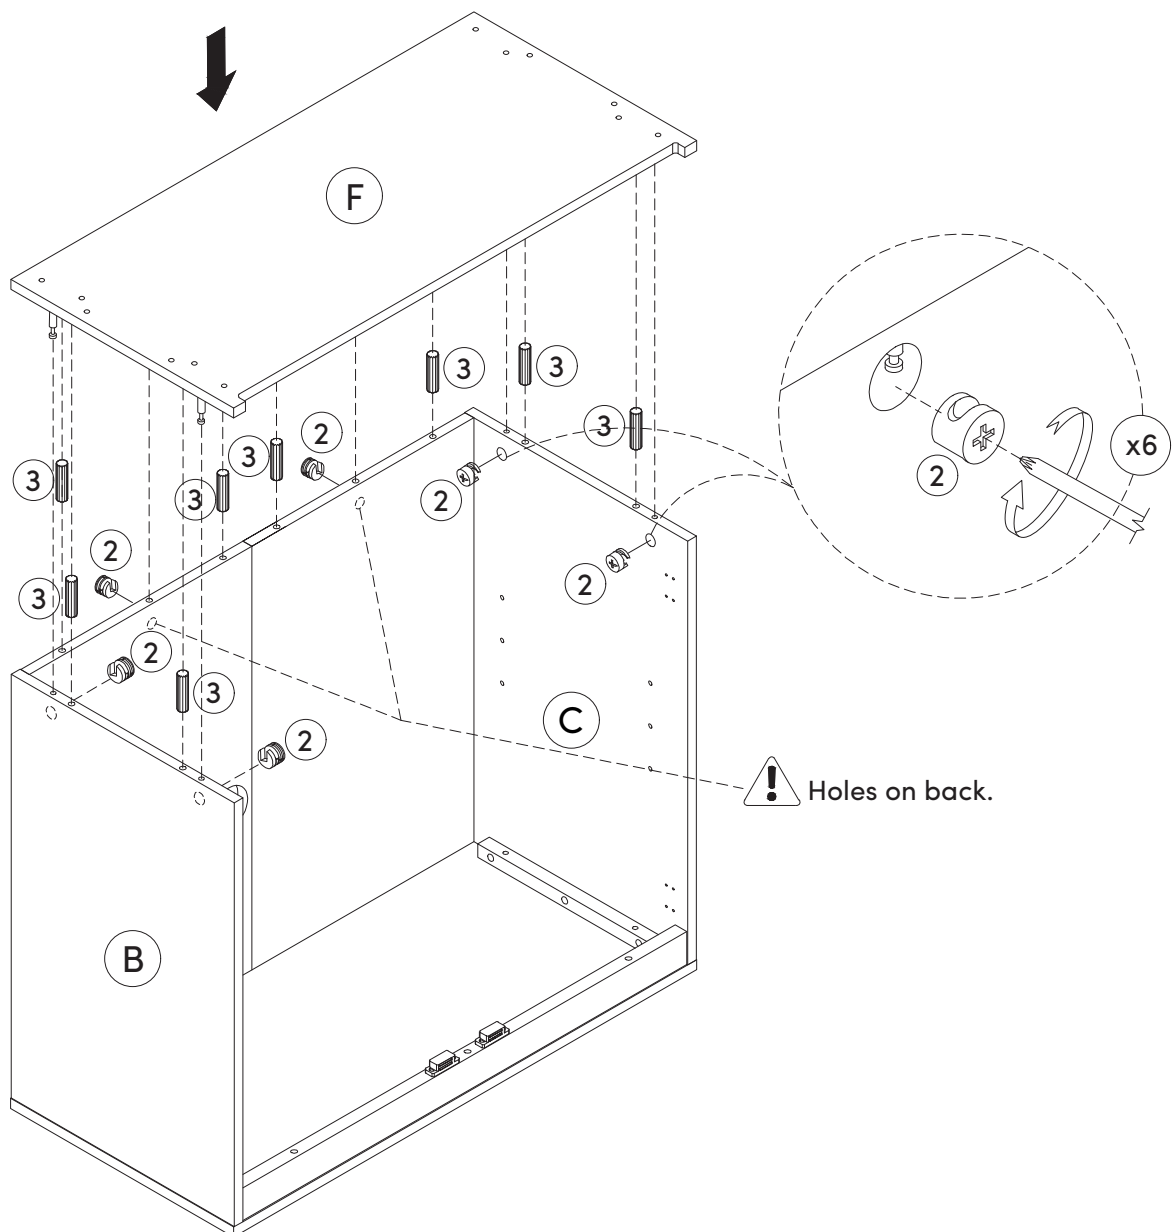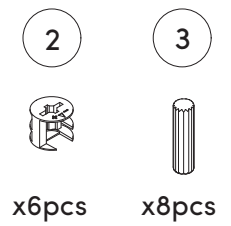

Step 8

First, insert the Wooden Dowels (3) into the assembly completed in Step 7. Place the Legs (G) over top of the Wooden Dowels (3).


Next, slide the Flat Washers (5) onto the Bolts (4). Use these parts and the Allen Key (6) to secure the Legs (G) in place.

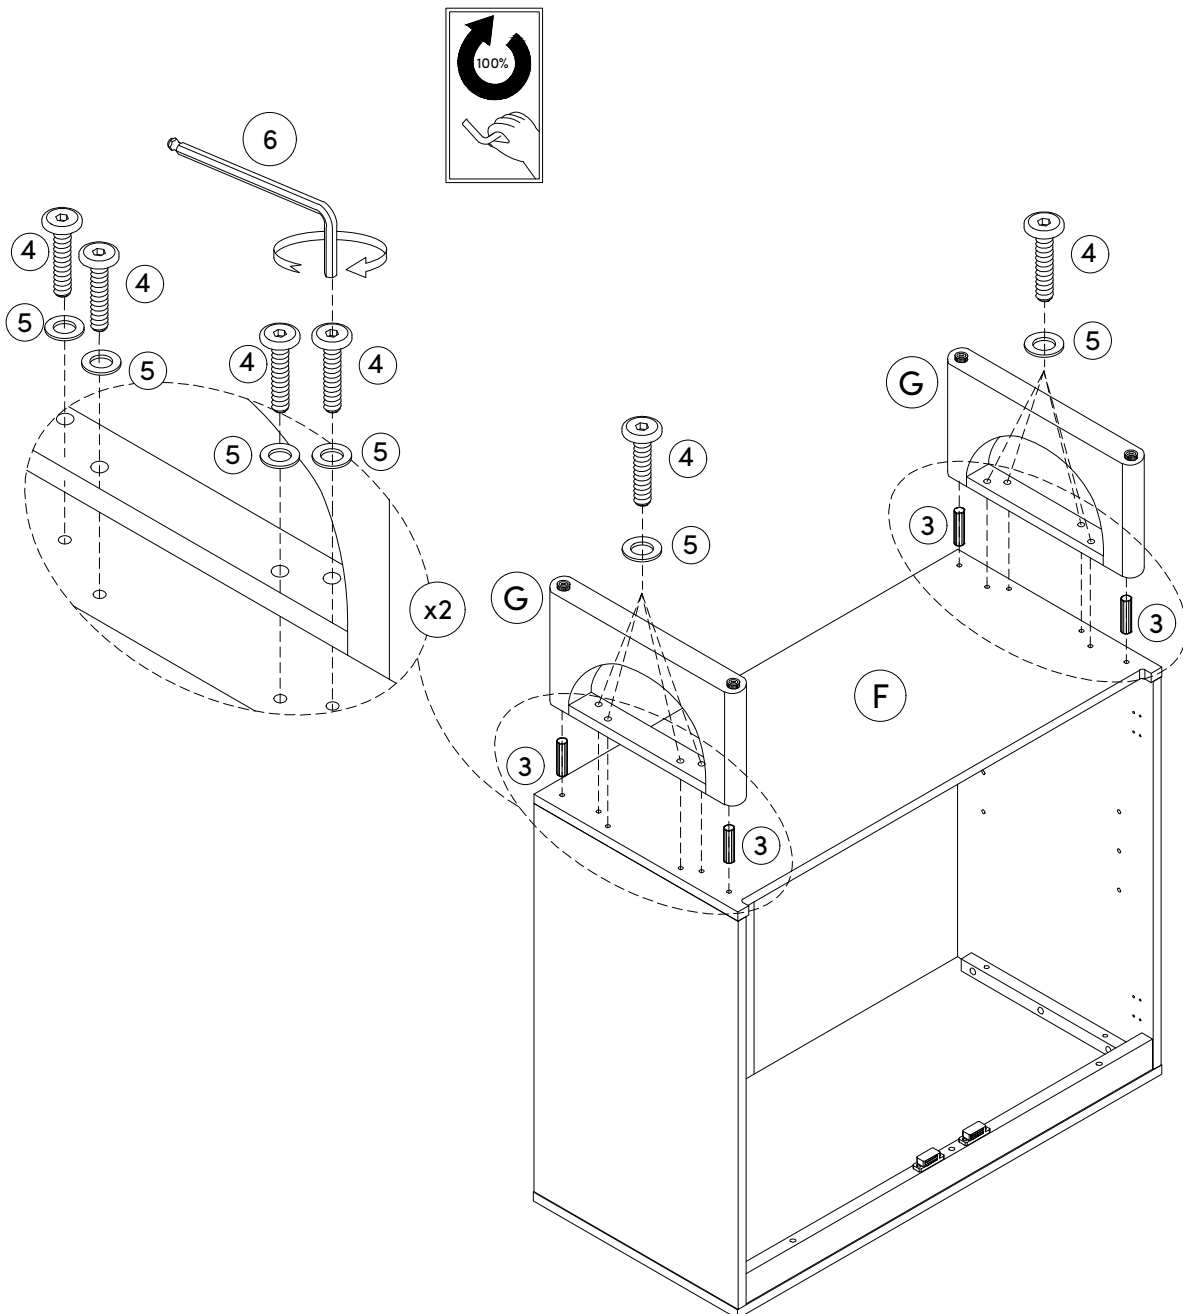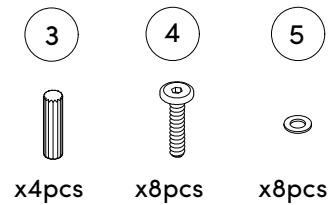

Step 9

Let's get started on the doors! Secure the Hinges (8) to the doors using two of the M3.5 x 15mm Screws (9) per hinge.

Next, secure the Door Catch Plate (11) onto the Doors, using the M3x12mm Screw (12).

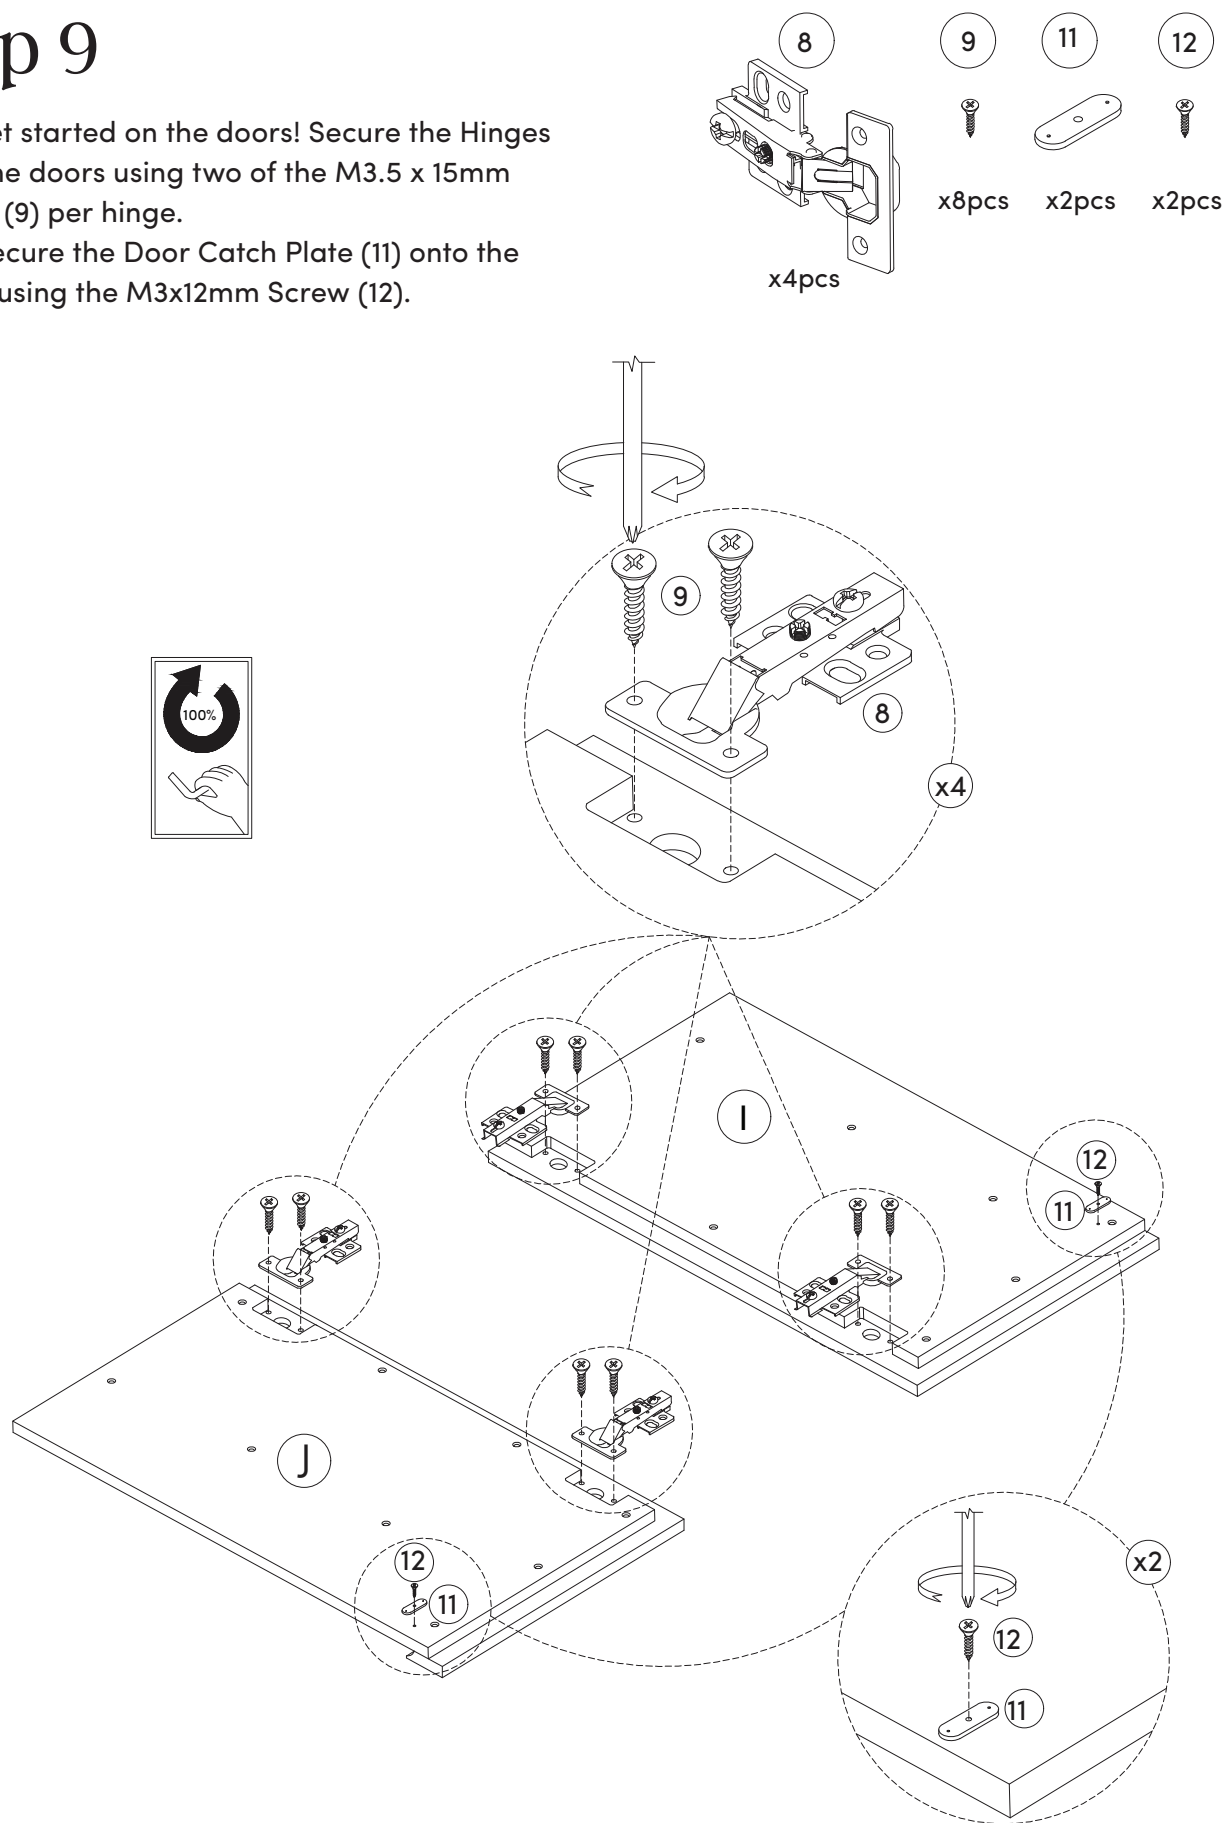


Step 10

10

Flip the unit upright (you might need a friend for this).
Next, Push the Shelf Pins (10) into place at your
desired shelf height then carefully place the Shelf (K)
on top of the pins.



x4pcs

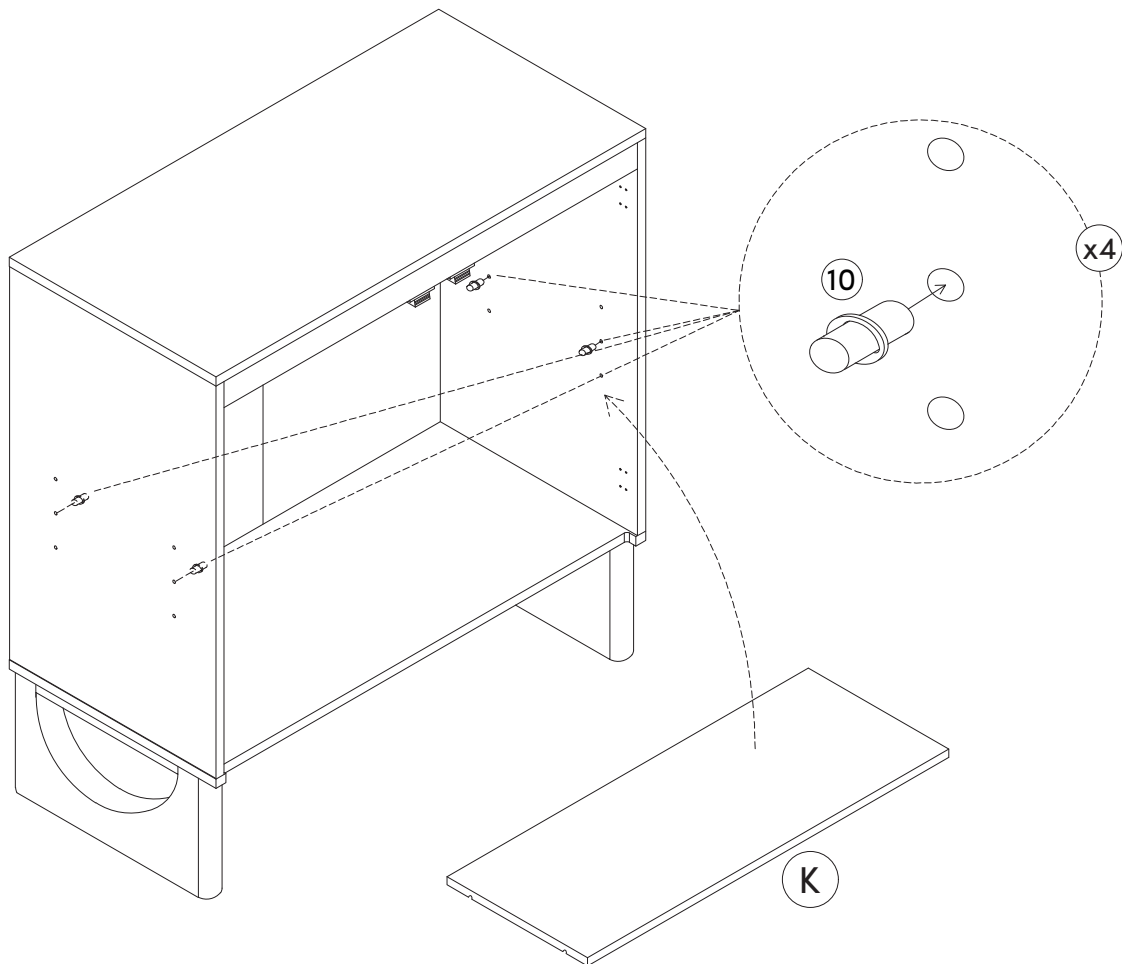


Step 11

Time to get out those muscles because it's time to attach the doors! Mount the doors (I) & (J) by securing the Hinges (8) to the Cabinet using the M3.5x15mm Screws (9). You'll need four screws per hinge.

9






x16pcs

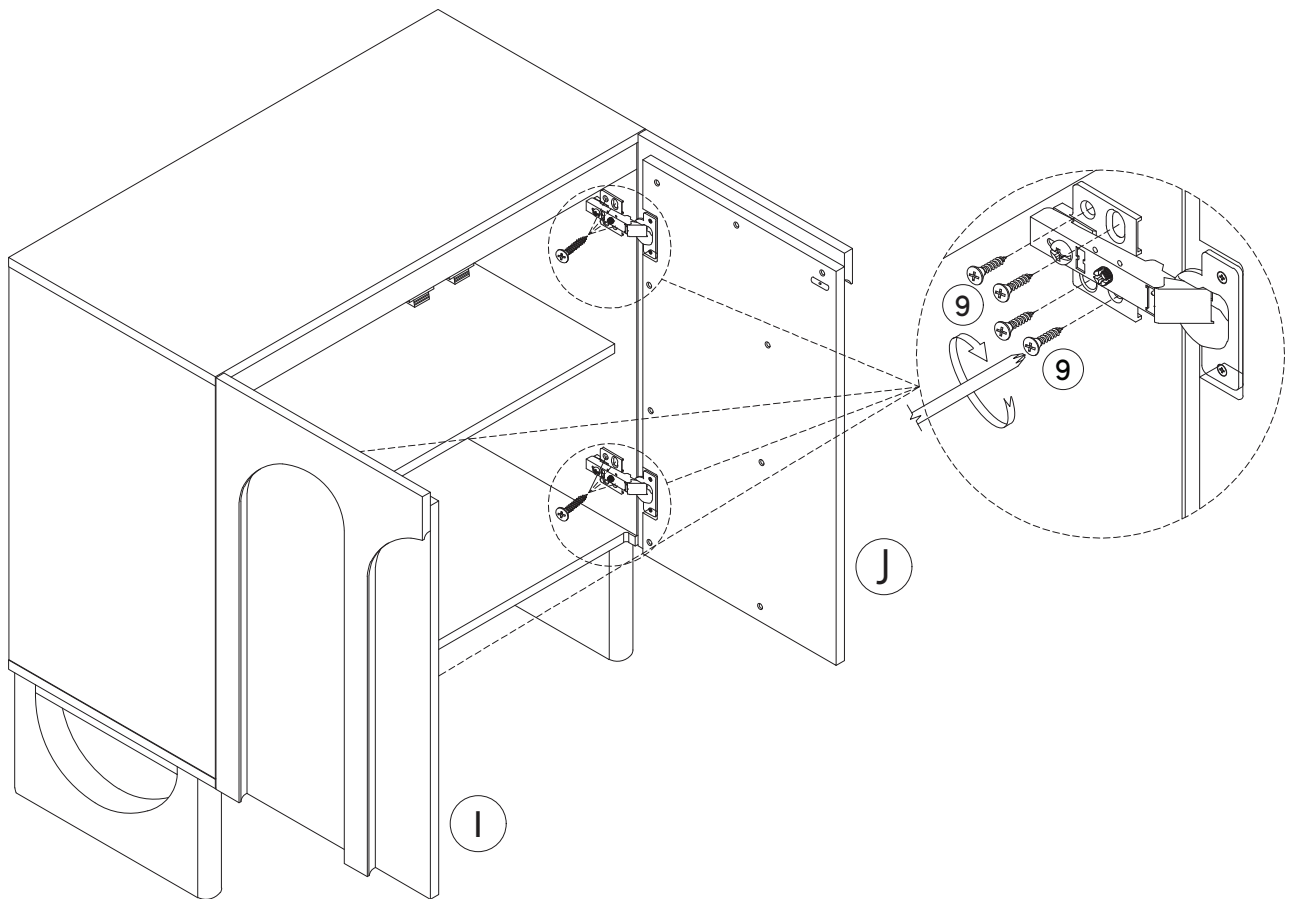

Is your cabinet door looking crooked or unevenly spaced?




Then you've come to the right place. Follow the illustrations below to get your cabinet door aligned and ready for action.

If your door is too low or too high...

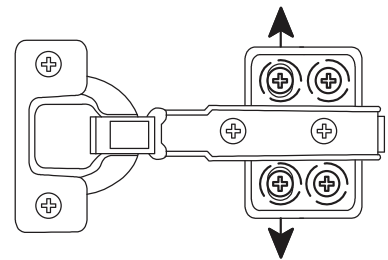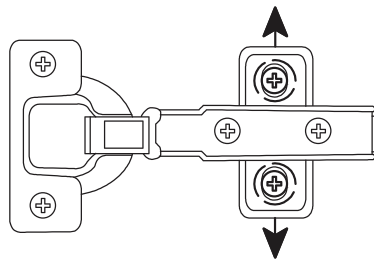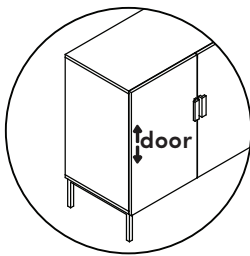




Loosen the height screws, then move the door up or down to make it level.

If the space between your doors is off...

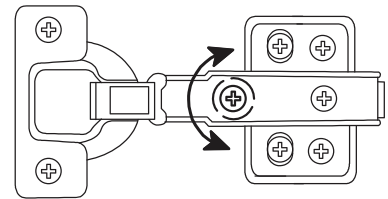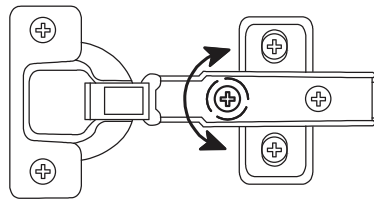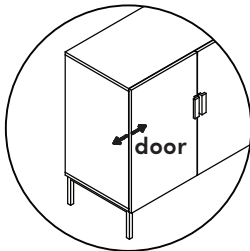

Loosen the side-to-side screws, then screw counter-clockwise to make the gap wider or clockwise to close any gaps.


If you need to adjust the depth of the doors...

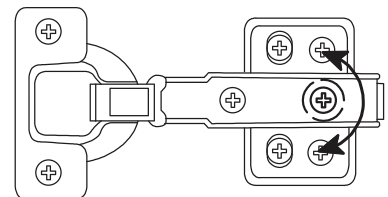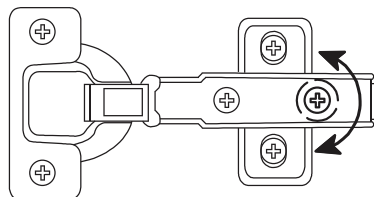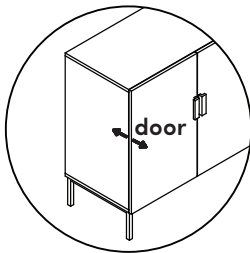

Adjust the in-and-out screws until the door is aligned with the side of the cabinet.


Step 12

Now go ahead and check that your Jett Storage Cabinet is level and not wobbly. If it's looking a little unlevel, adjust the levelers on the feet until it's nice and level.

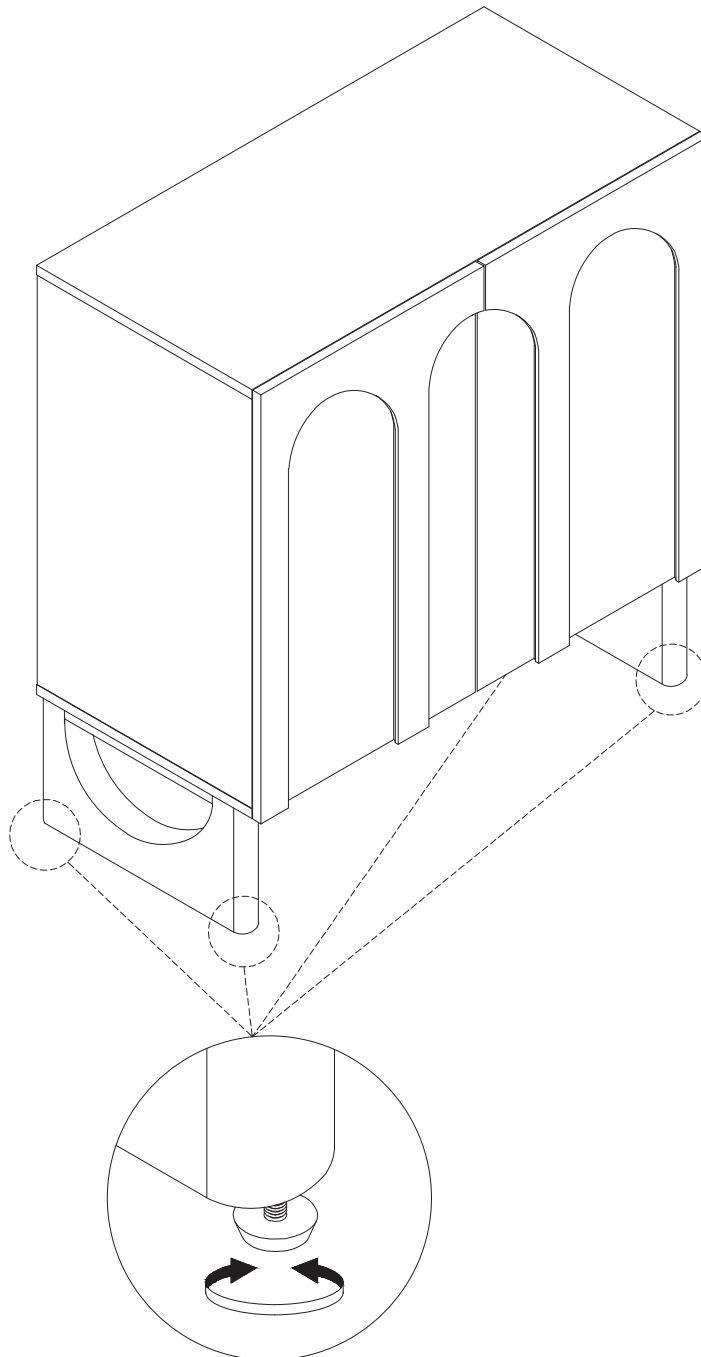


Wobbly or unlevel
Adjust the feet until stable


How to Use Drywall Anchors

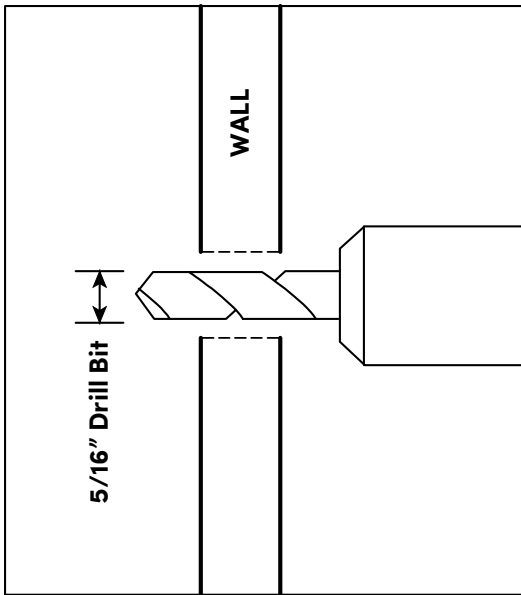


1. Drill hole 5/16 bit.

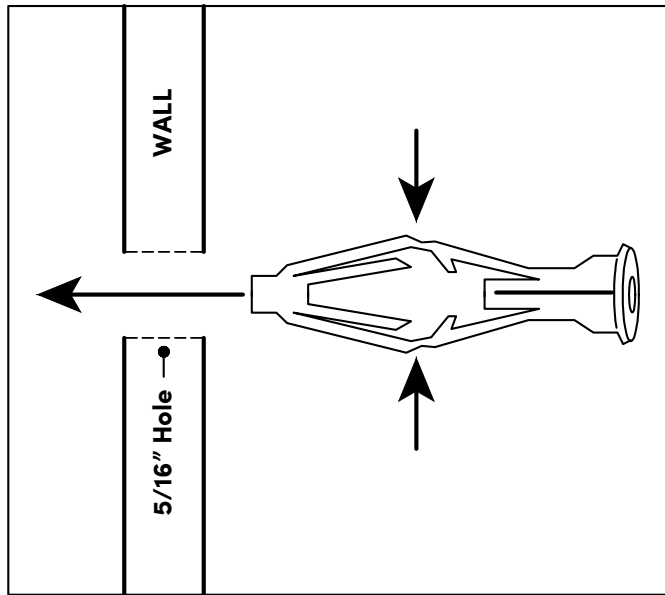

2. Pinch and insert.

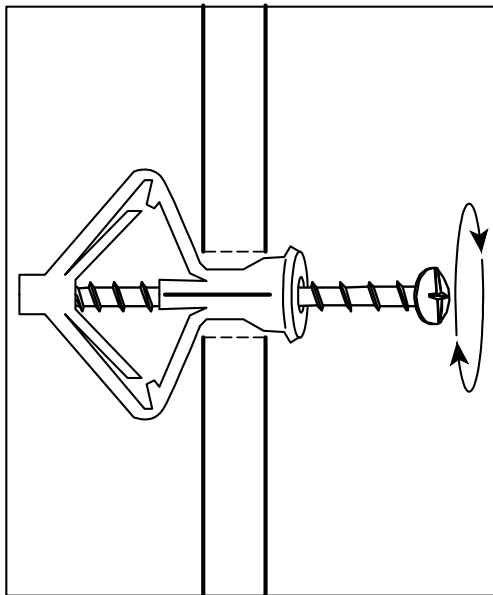

3. Begin tightening.

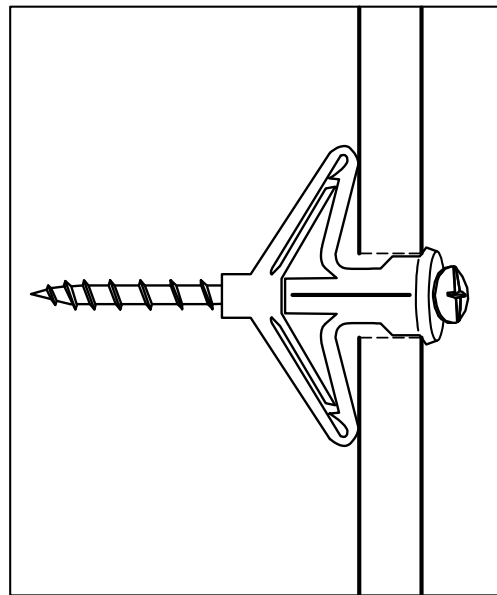

4. Anchor is secure when screw is tightened to 100%.


Step 13

Safety first! Let's get this cabinet secured to the wall. Find where you want your cabinet to live before you begin installing the wall anchors.

First, determine which style of wall anchor you will need, then using the proper, recommended drill bit & the Plastic Bracket (16) as your hole guide, you will drill 2 holes in your wall before finally inserting the anchors into the wall.

You will need either a 1/4" drill bit or a 5/16" drill bit for this step, depending on your wall type.

16

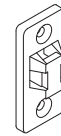


x1pc

17



x2pcs

20




x2pcs

21



x2pcs


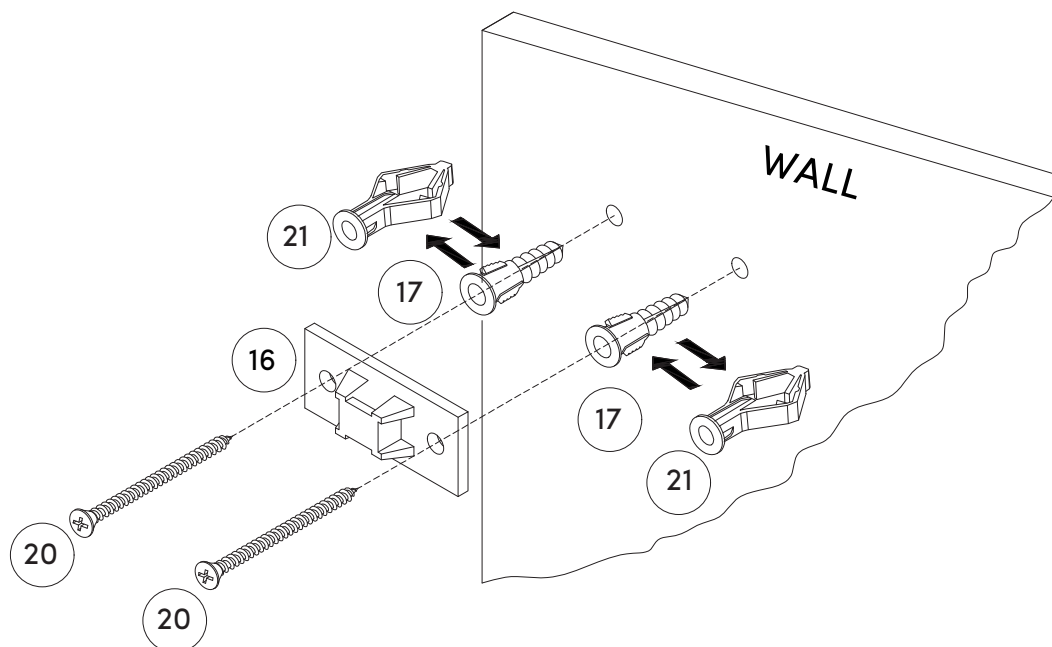


IMPORTANT NOTE:

Non-Drywall Anchor (17) requires 1/4" Drill Bit
Drywall Anchor (21) requires 5/16" Drill Bit

Step 14

Next, you will secure the other Plastic Bracket (16) to the back of the cabinet using the M3.5 x 15mm Screws (18) before looping the Plastic Strap (19) through both Plastic Brackets & pulling it through itself to secure the cabinet.

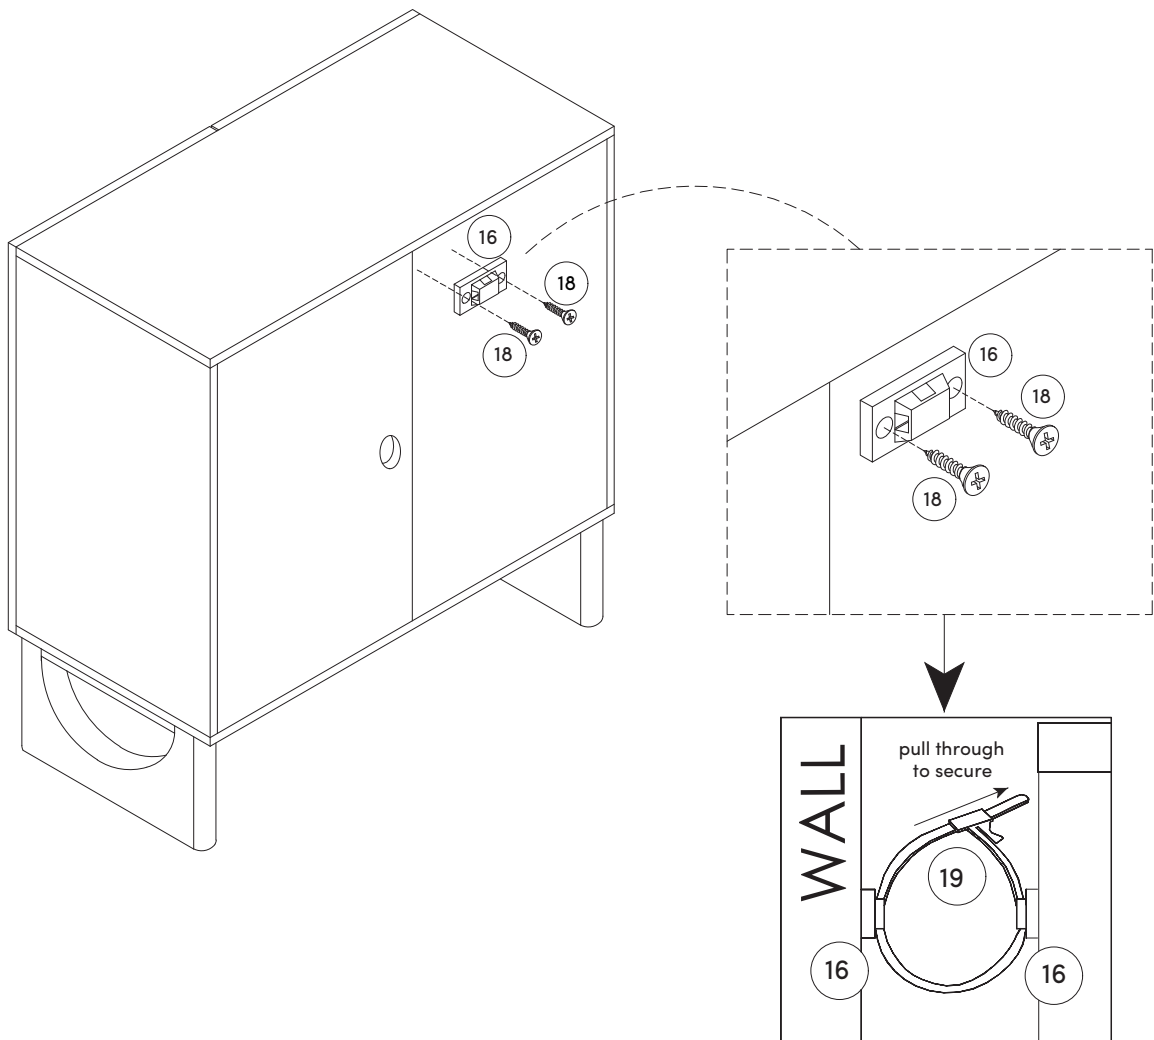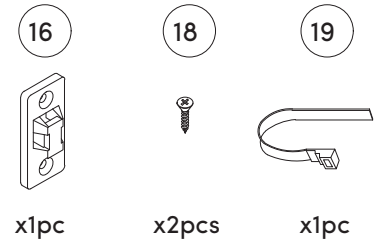

IMPORTANT NOTE:

Young children (and/or pets) can be seriously injured by tipping furniture units.

You must install the provided anti-tip kit hardware solution, as instructed, to prevent the furniture units) from tipping over - which could possibly lead to injuries or damage.


The provided anti-tip kit hardware solution is intended only as an additional safety measure & deterrent; it is not a substitute for proper adult supervision.

The provided anti-tip kit hardware solution is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased & installed separately.


Is your cabinet door looking crooked or unevenly spaced? (Cont.)

If you're still having trouble lining everything up, your next step should be to adjust the leveling glides to square up the cabinet and doors and make sure things are level. Follow the instructions below:

If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

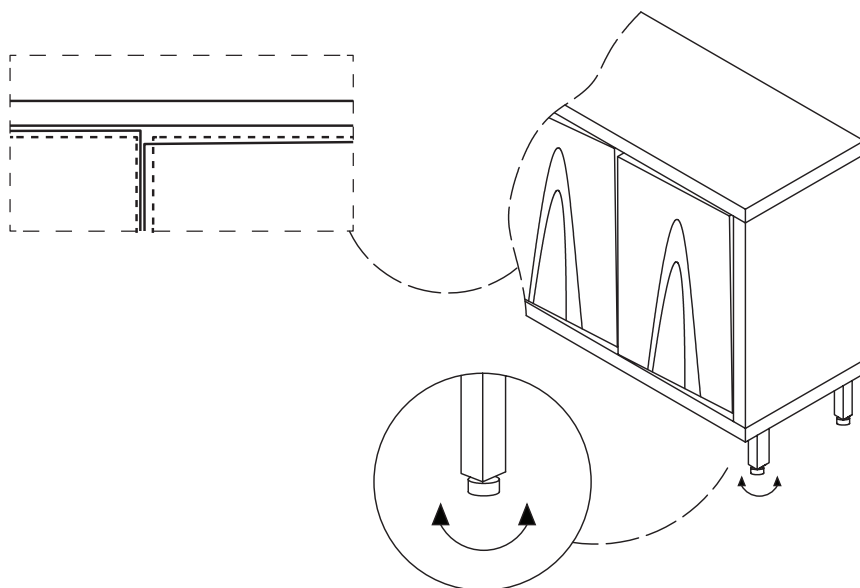

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

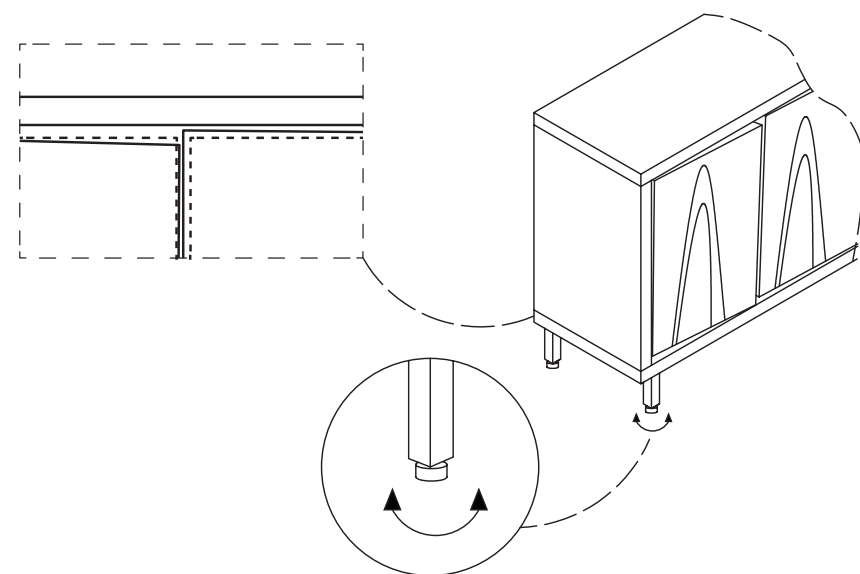

No heartburn, when we handle the return

Give us a call **1-866-619-1004** or shoot us a message
at **help@nathanjames.com** we will issue you a free
replacement with **zero hassle**.

Our way



Give us a call



Replacement



You

Their way



Re-package item



Schedule pick up



Track package



Replacement



You

We really don't want you to go through the hassle of re-packaging your item
and sending it back, because let's be honest...nobody has time for that.

Safety first, fun later

We want your product to last as long as possible, so we recommend that you tighten the screws 2 weeks after assembly and for added safety check the tightness of all screws every 2 months.

For proper care and treatment, please check our website at NathanJames.com/products

Safe use of this product starts with you.

Use this product responsibly with the primary concern for your safety. Follow assembly instructions carefully and inspect product upon receipt and each use.

Nathan James and its parent companies cannot be held legally responsible for any injuries or death resulting from failure to follow instructions or improper use of this product.

Do not modify the structure of this product in any way.

Our products have been tested to meet specific safety measures as they were originally intended to be sold. Any modifications will present the risk of creating significant safety issues which NJ will not be responsible for.

Proper use

DO NOT	use for commercial purposes
DO NOT	climb on storage unit
DO NOT	exceed weight limit
DO NOT	leave spilled liquid on storage unit
DO NOT	use if storage unit is damaged or broken
DO NOT	make temporary repairs
DO NOT	use outdoors

We are only in business if you're happy

For starters, thanks for being you.

☎ Toll-free at 1-866-619-1004

✉ Help@nathanjames.com

🌐 NathanJames.com/help

We do our best to ensure your furniture arrives without any problems, but occasionally mistakes happen—as humans we are imperfect beings. In the event that a part is damaged or missing, we will be more than happy to provide you with replacement part(s) for free.

Lifetime Guarantee

We believe in making things that last. That's why every product is backed by our Lifetime Guarantee. No hidden clauses. No runaround. If it breaks, we'll replace it—plain and simple. This isn't just a promise—it's our commitment to quality, and to you.

This product comes with a Lifetime Guarantee from the date of purchase. Please use your phone to scan the QR code on the cover of this booklet to register your product or visit <https://goo.gl/i9dk3q>



Did we do alright? Please spread the love!

If you are happy with your product, tell your friends and family about us, or even better, leave us a review online. Spreading the word gives us the opportunity to make more people happy and keep our prices low for your next purchase.

Brooke Burdon

Founder, Nathan James