



# ASSEMBLY INSTRUCTION

WF300331

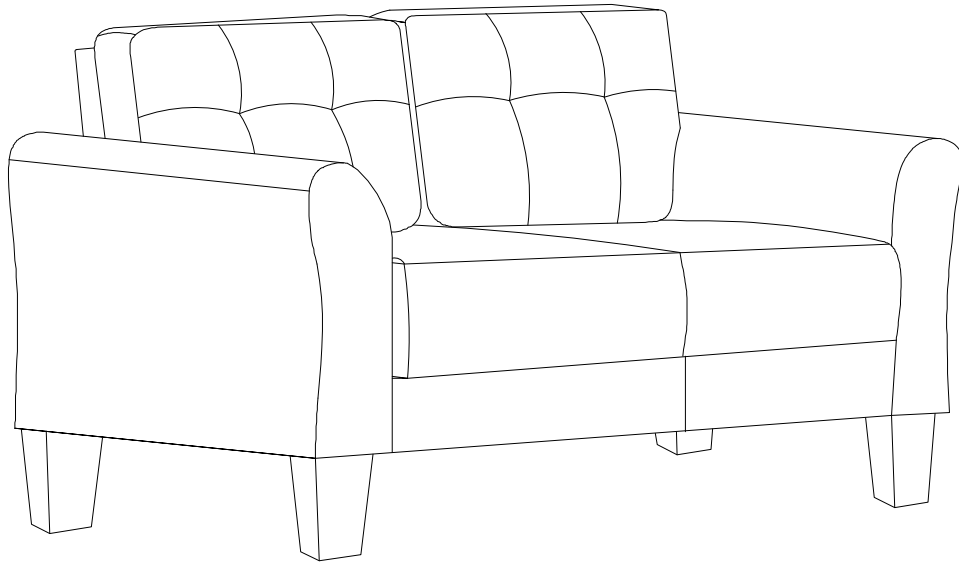


## PARTS

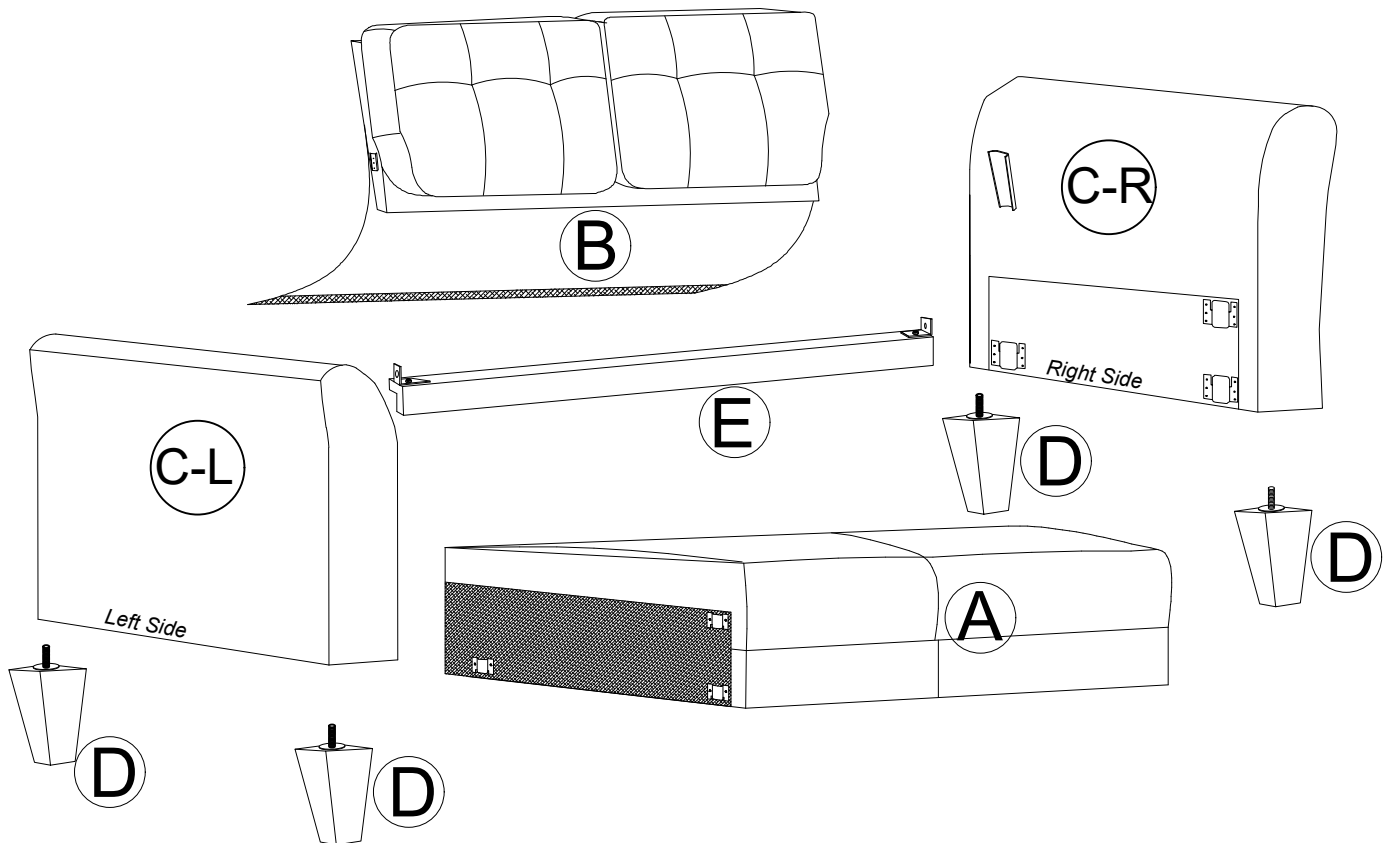


# WF300331 - COMPONENT LIST

**A**

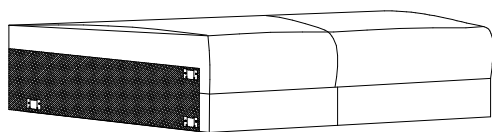


**SEAT BODY**  
**QTY: 1PC**

**B**

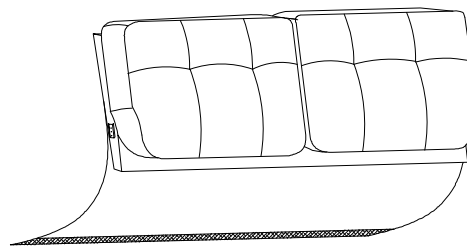


**BACK REST**  
**QTY: 1PC**  
(In the storage underneath of seat body)

**C-L**

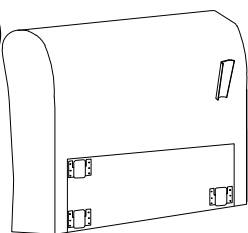


**LEFT ARM**  
**QTY: 1PC**

**C-R**

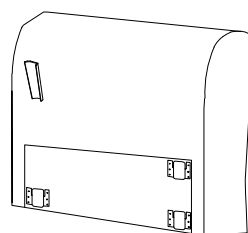

**RIGHT ARM**  
**QTY: 1PC**

**D**

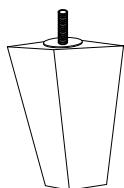

**PLASTIC LEGS**  
**QTY: 4PCS**


**E**



**METAL SUPPORT**  
**QTY: 1PC**


## HARDWARE (in box WF300331)

**F**



**ALLEN KEY**  
**QTY: 1PC**

**G**

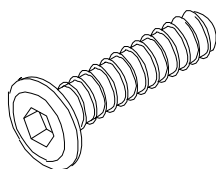

**BOLT Ø1/4"x20MM**  
**QTY: 2PCS**


**H**



**FLAT WASHER**  
**QTY: 2PCS**


**Step 1:**

Remove the hardware and the leg box from packet.  
Place all parts on a clean, smooth surface.

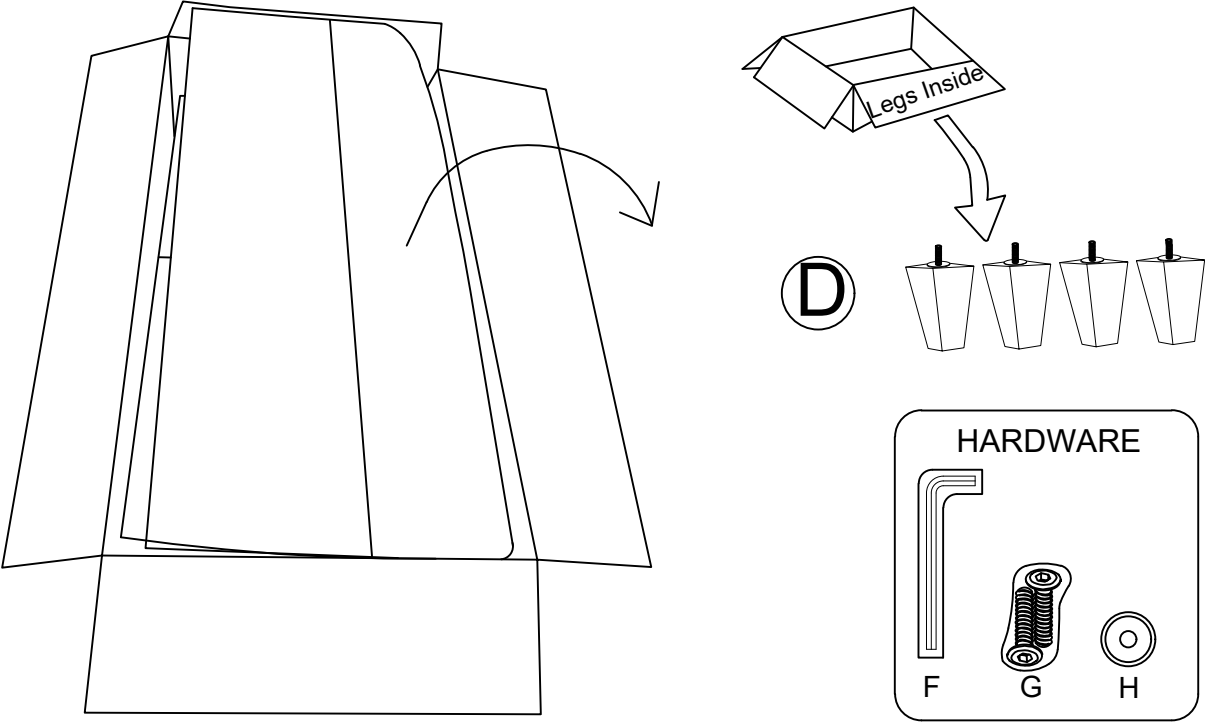


**Step 2:**

Manually legs D x 2 to C-R/C-L , as shown.

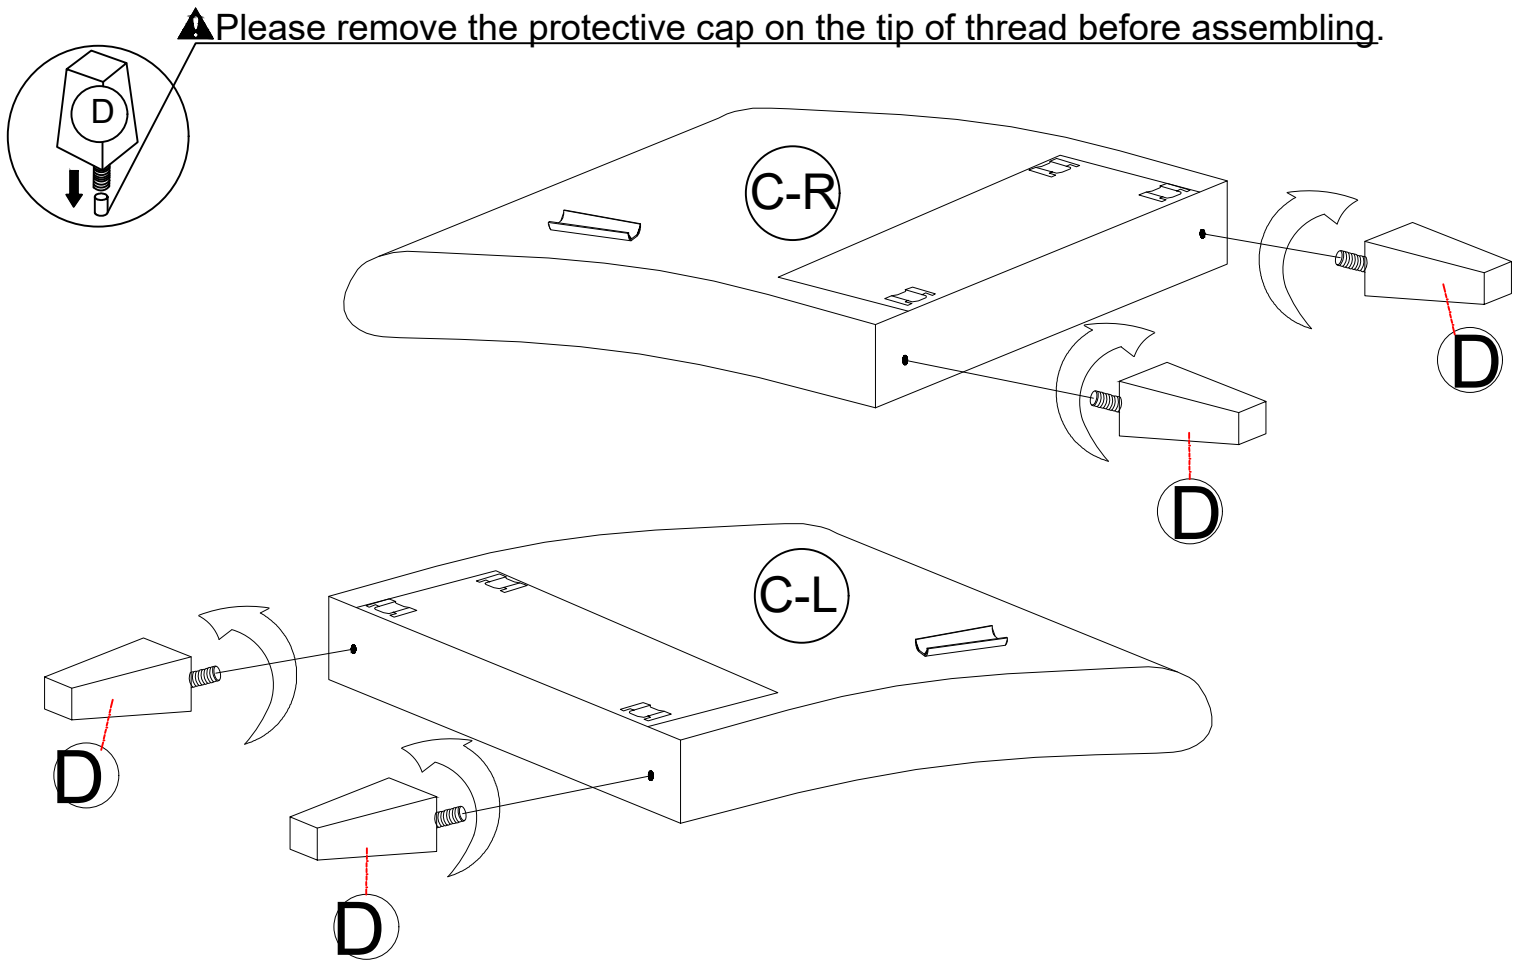


**Step 3:**

Attach C-R/C-L to A by inserting C-R/C-L into the metal glides on A. Push C-R/C-L with A downward force to secure it into place.

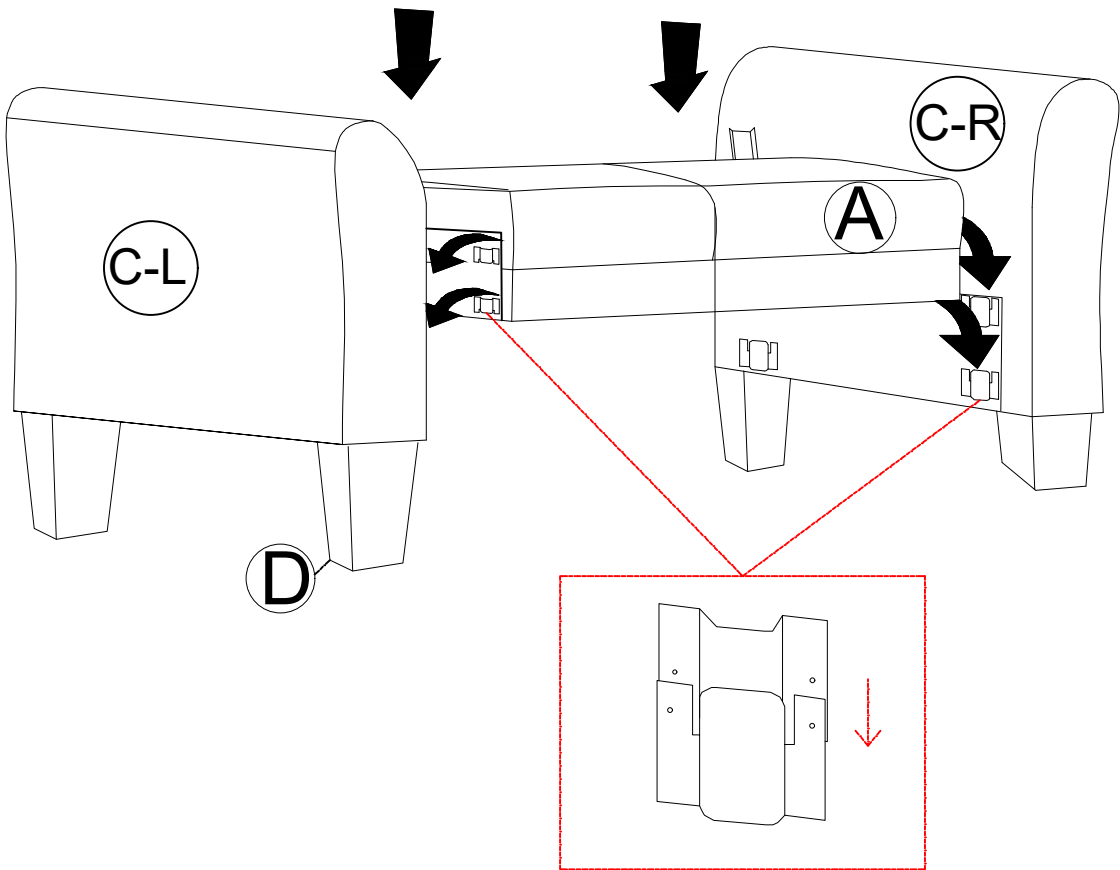


**Step 4:**

Attach B to C-R/C-L by inserting B into the metal glides on C-R/C-L. Push B with C-R/C-L downward force to secure it into place.

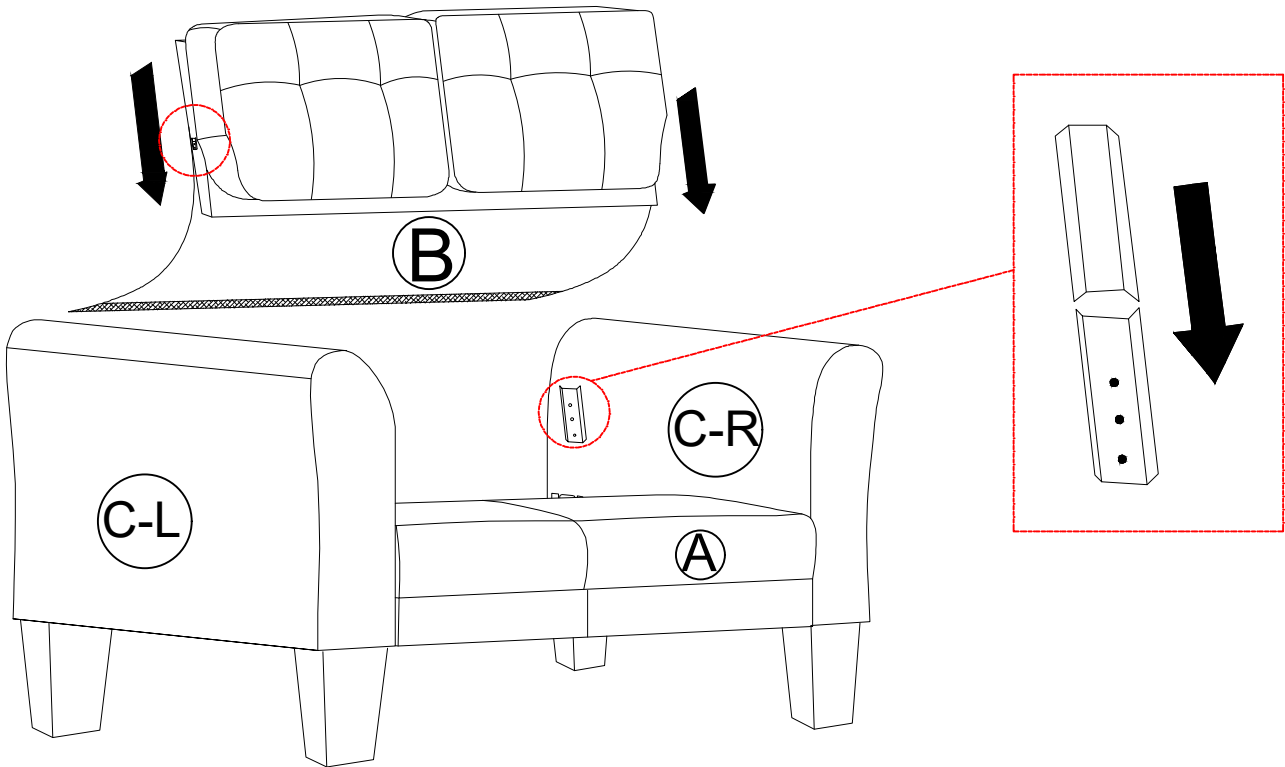


**Step 5:**

Turn to the back, fix E to the back rest by using F, G and H.

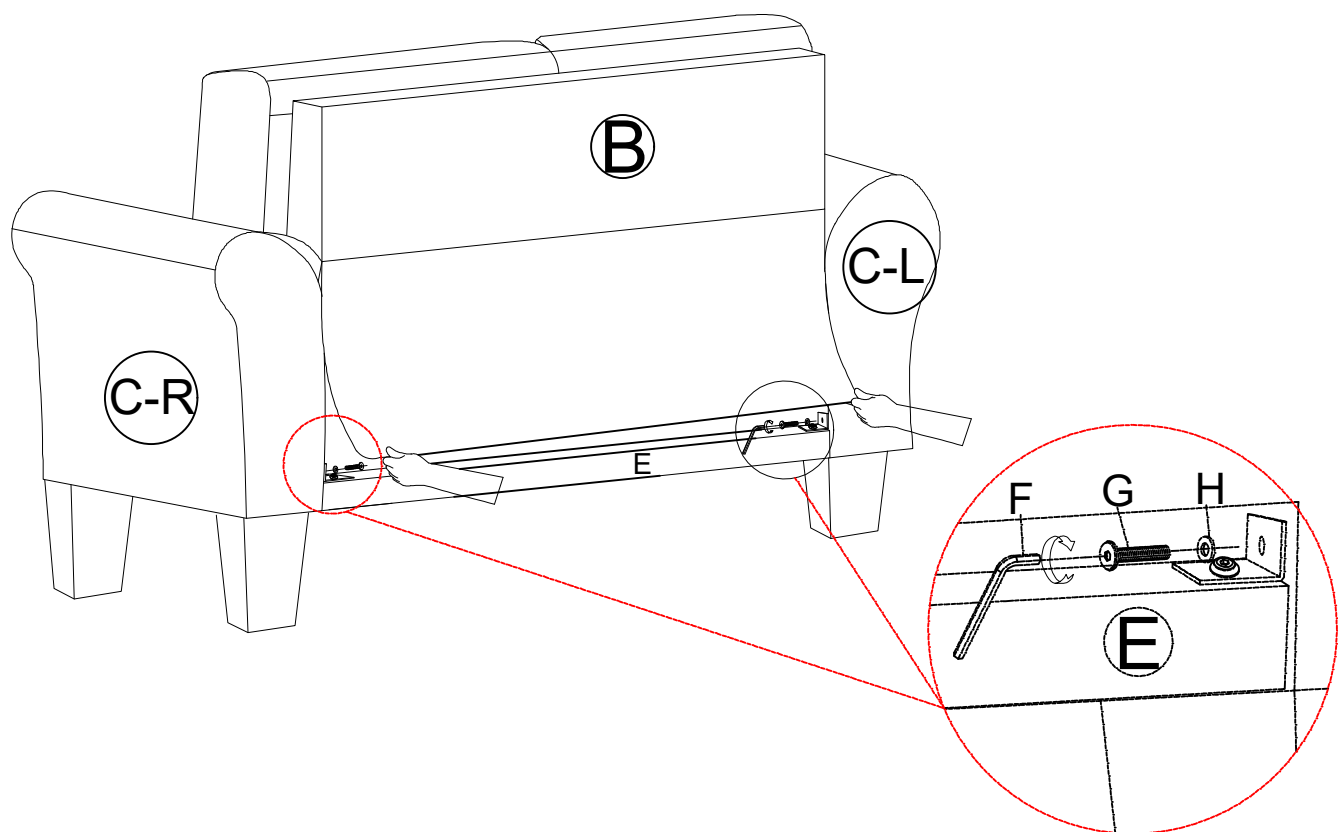


**Step 6:**

Stretch and pull down rear cover evenly before securing velcro strip to seat base.

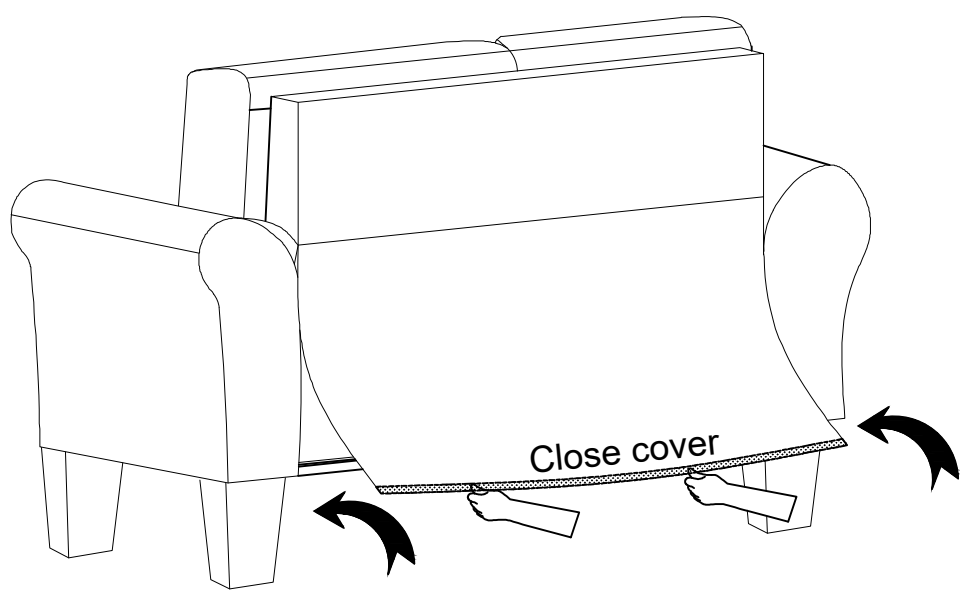

## BACK VIEW

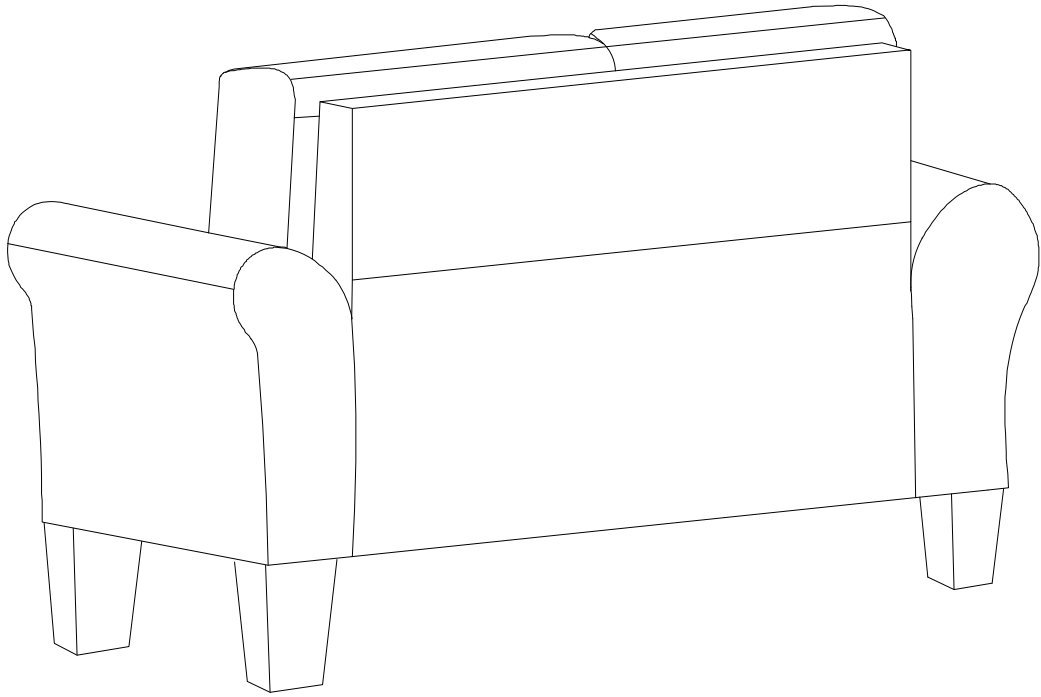

## FRONT VIEW

