


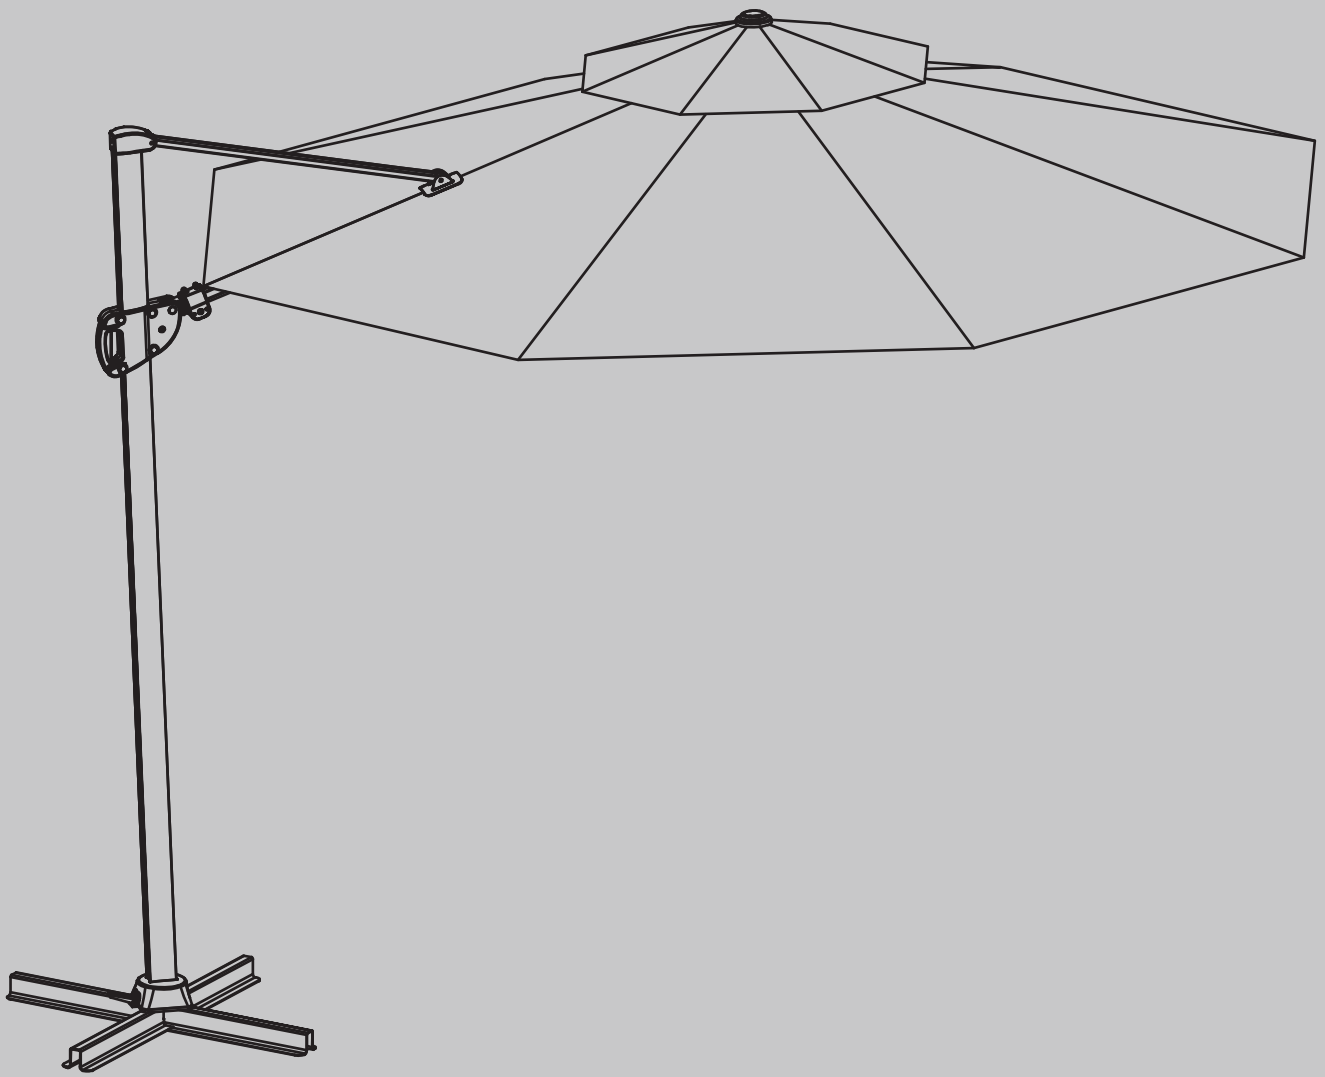

INSTRUCTION MANUAL

PATIO UMBRELLA

BEFORE INSTALLATION


- Please list all parts as below first to check if any part is missing and make assembly easier.
 - Do be careful that some parts are heavy and sharp.
 - Please follow the assembly steps to install the product, if you find spare parts left, don't be worried, the left spare parts are prepared for bad ones if occurred.
 - Once you hand tighten all of your bolts into place, we are going to use our wrench to fully tighten into place.
 - Please do not exceed the bearing limitations of the product.
 - Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Please retain these instructions for future reference.

TOOLS REQUIRED

K



1PC

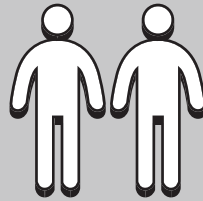

2 person assembly



30min assembly


PARTS

A



1PC

B



1PC


C



1PC

D

M8X25mm



1PC

E

M8X15mm



8PCS


F

Ø8mm



8PCS

G

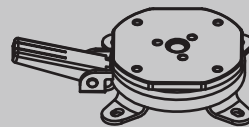


1PC

H




1PC

I



1PC

J

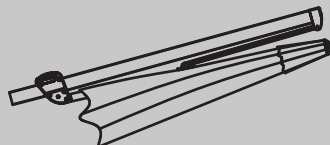


1PC

ASSEMBLY

PARTS REQUIRED

1

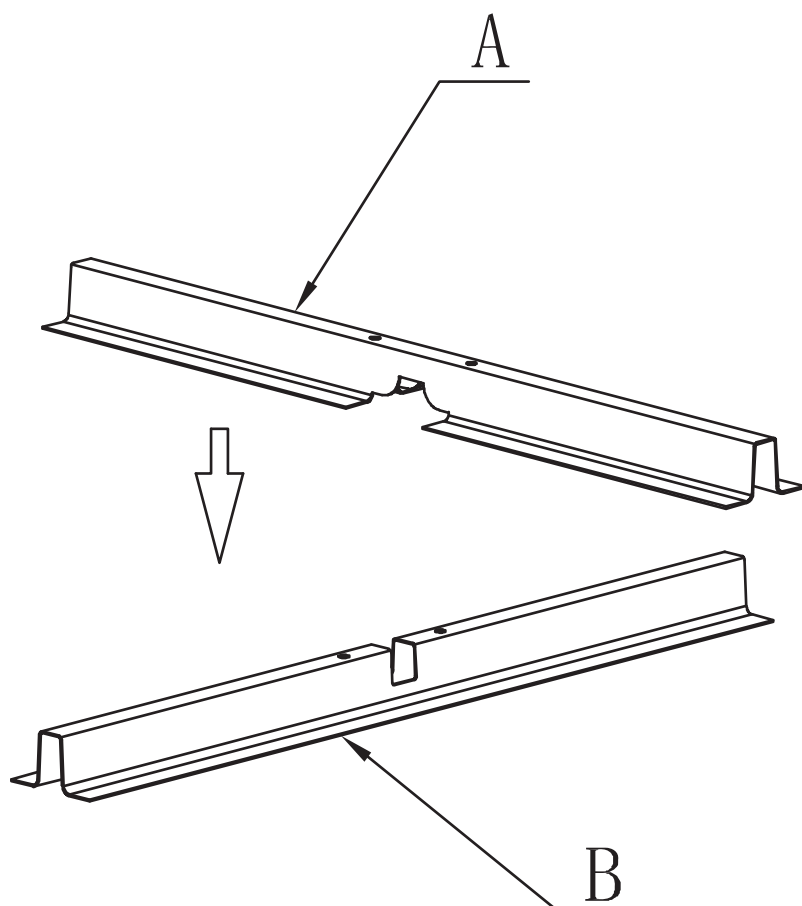


A




1PC

B



1PC

2

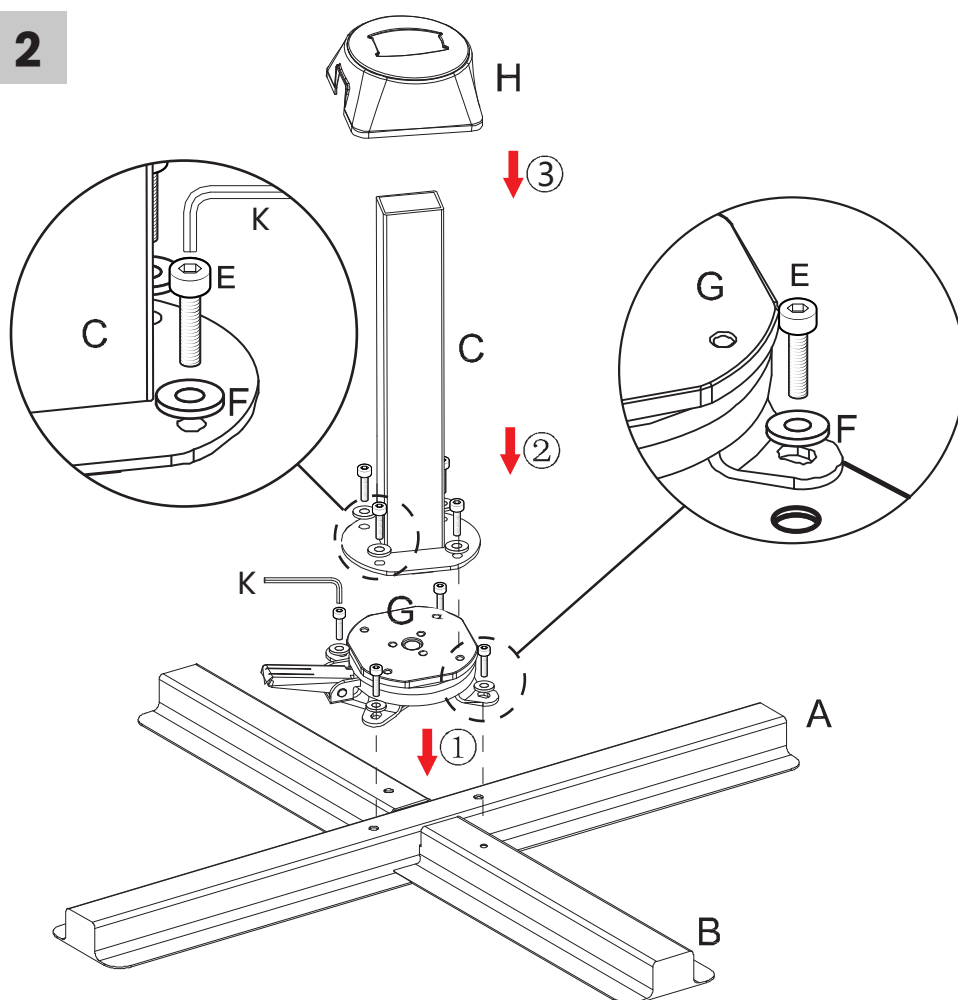

C



1PC

E M8X15mm



8PCS


F

Ø8mm



8PCS

G



1PC

H




1PC


ASSEMBLY

PARTS REQUIRED

3

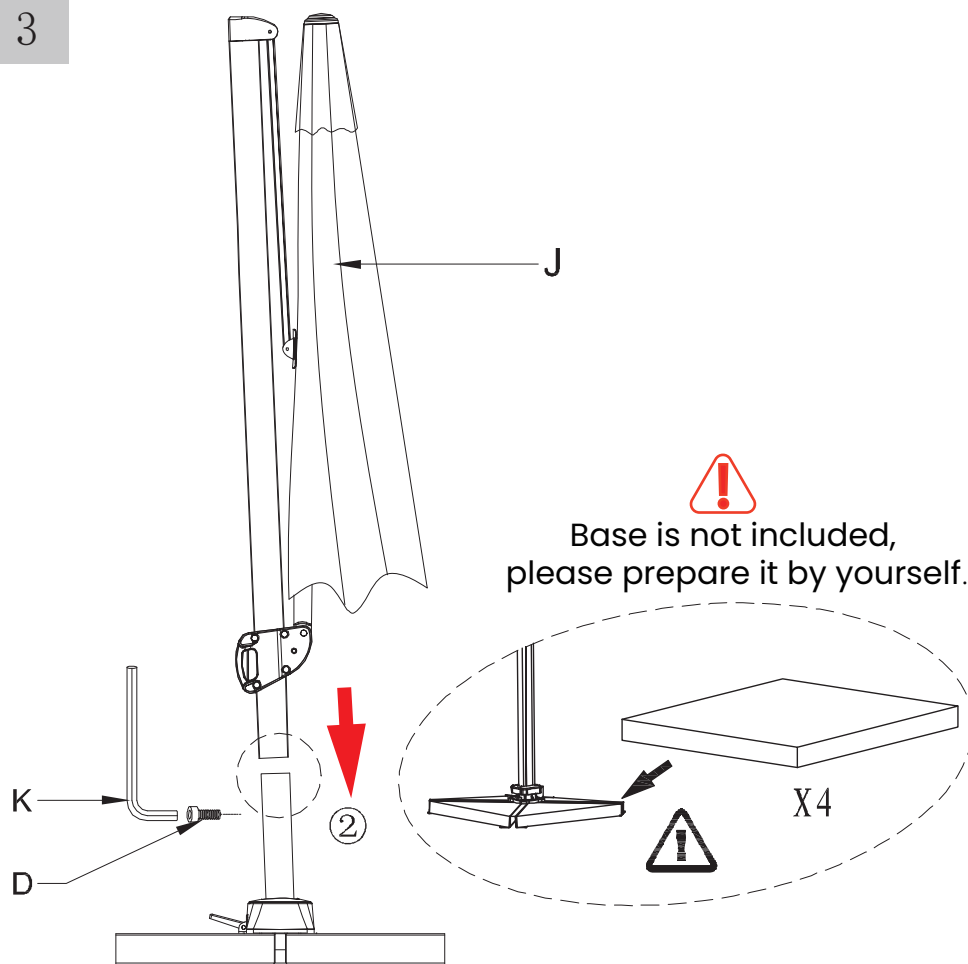


4

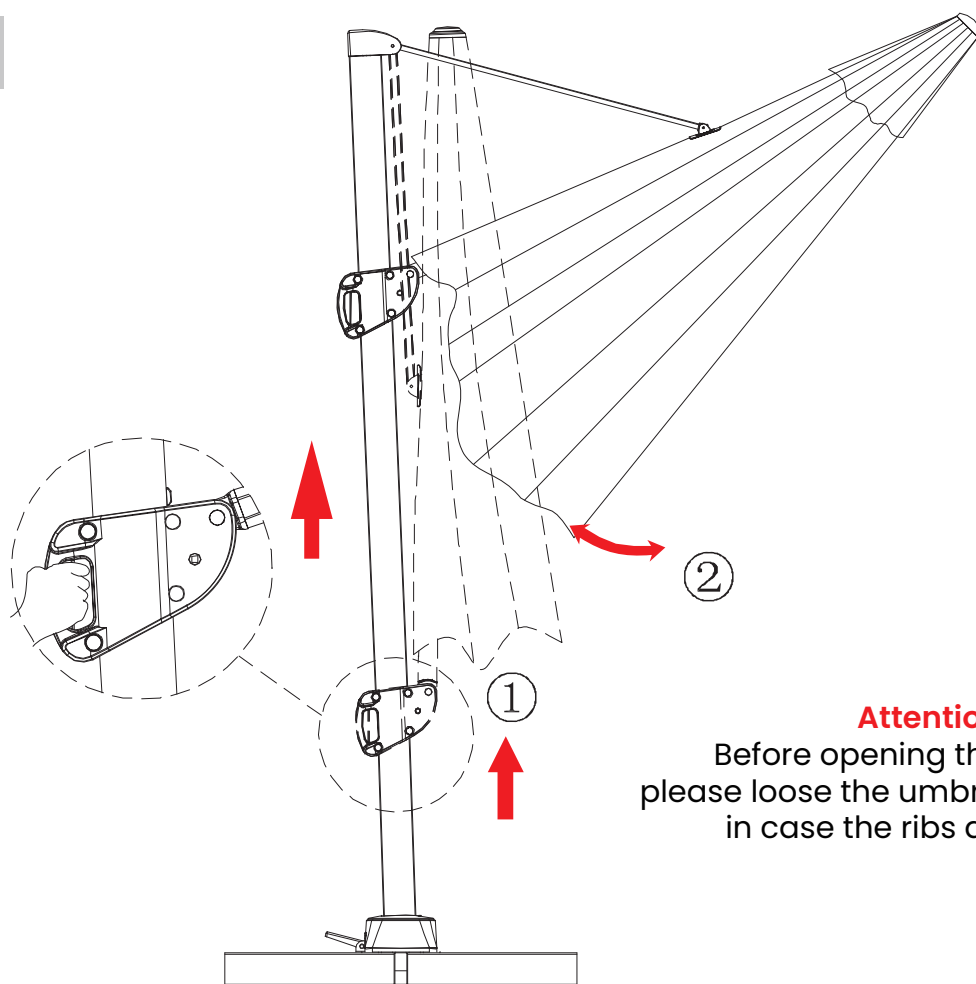

OPERATION

5

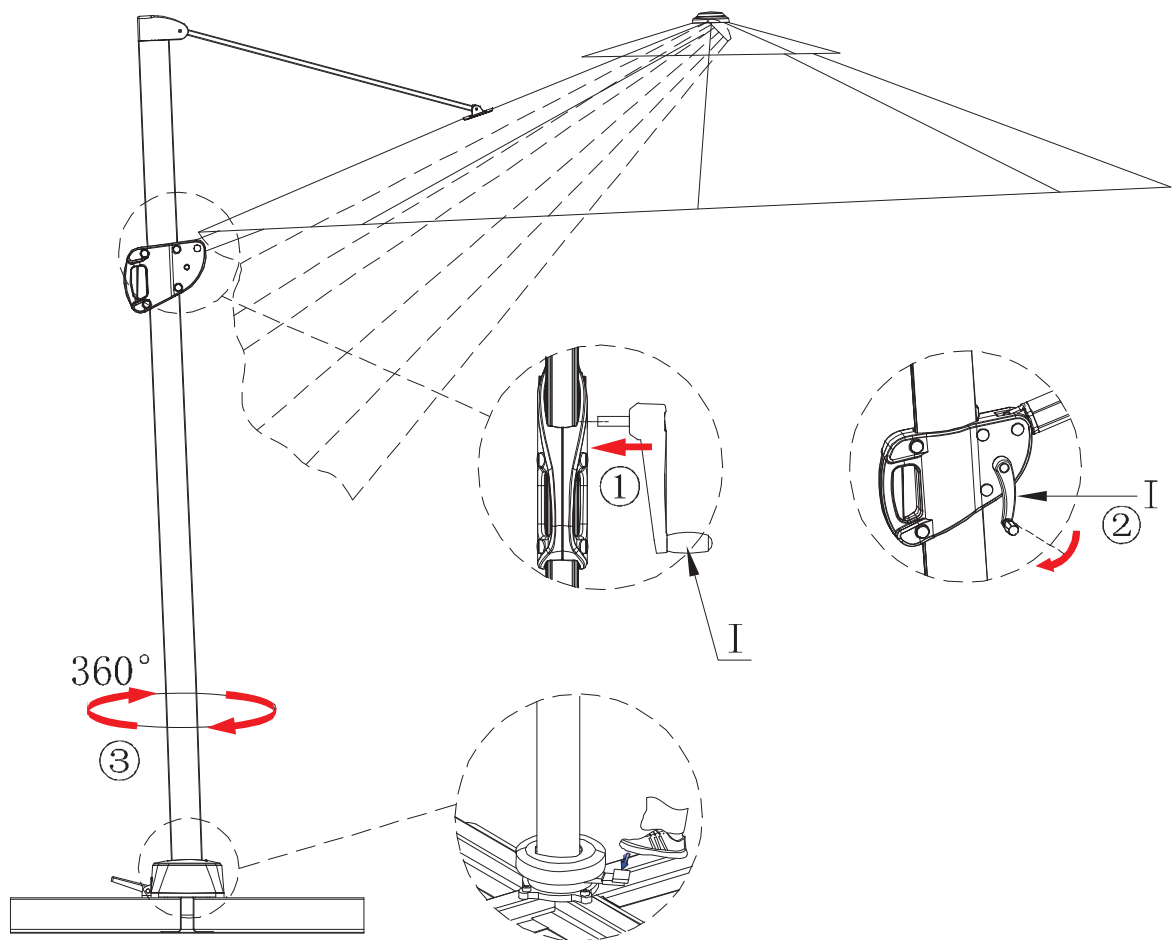

6

