


# ASSEMBLY INSTRUCTION


## PATIO SOFA SET

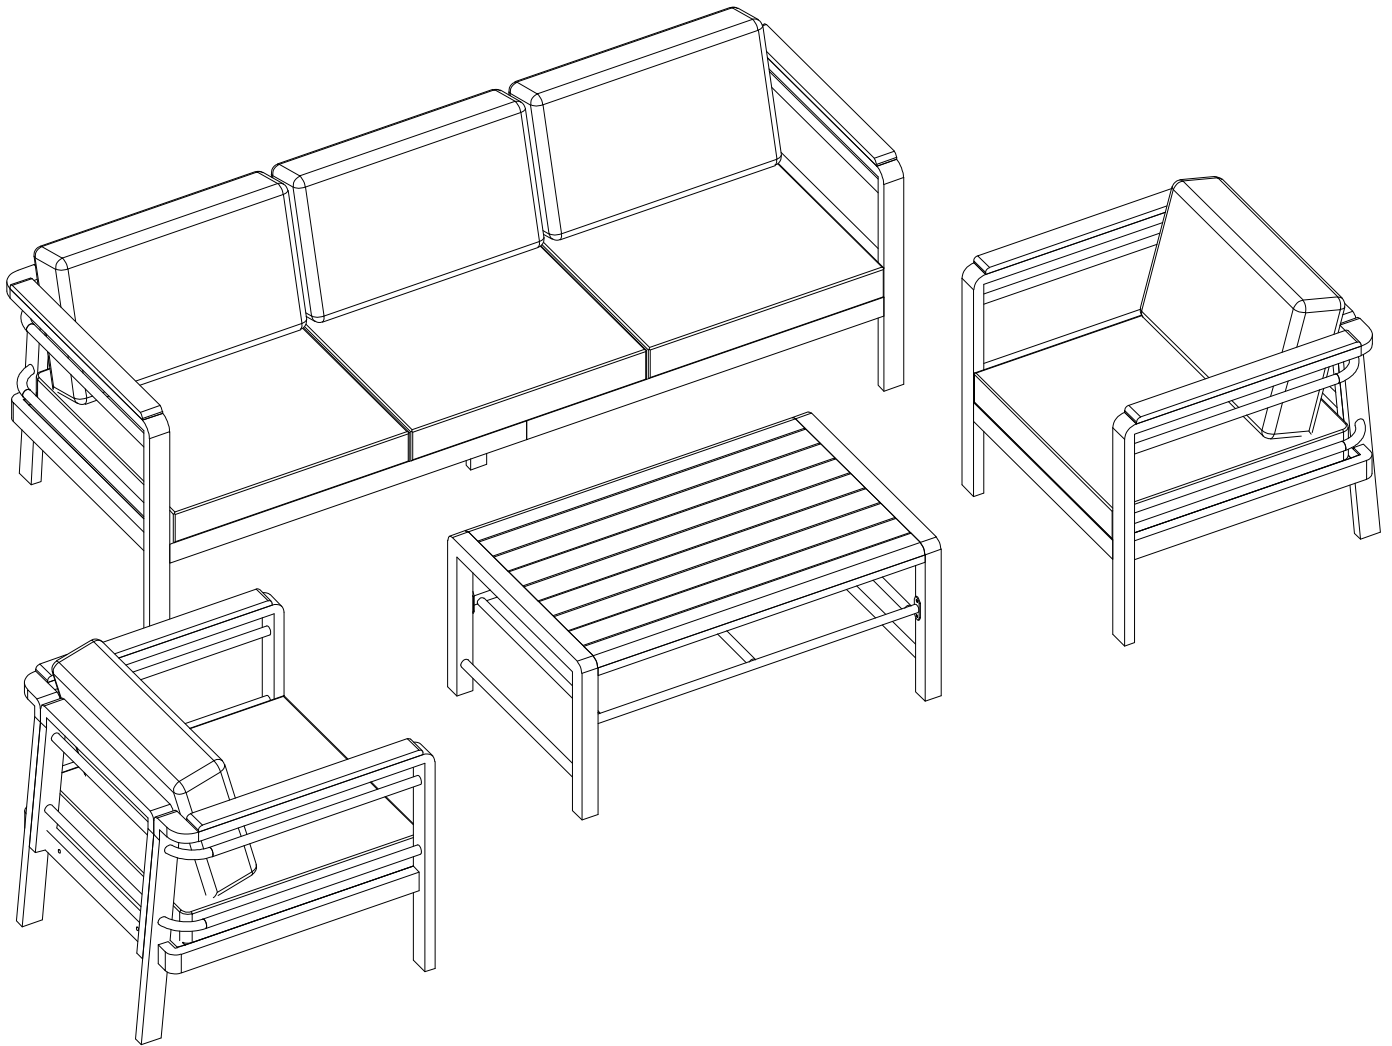


### Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


**x1**

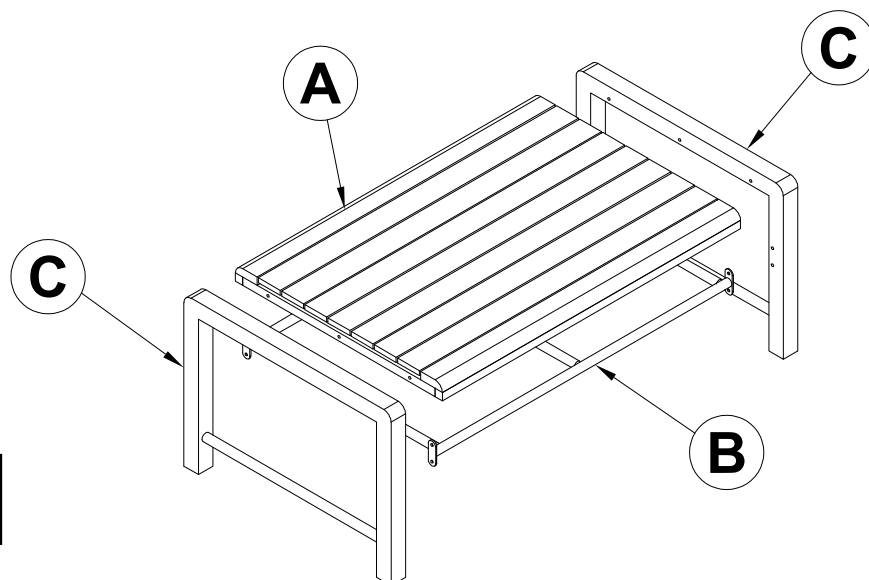

**x2**

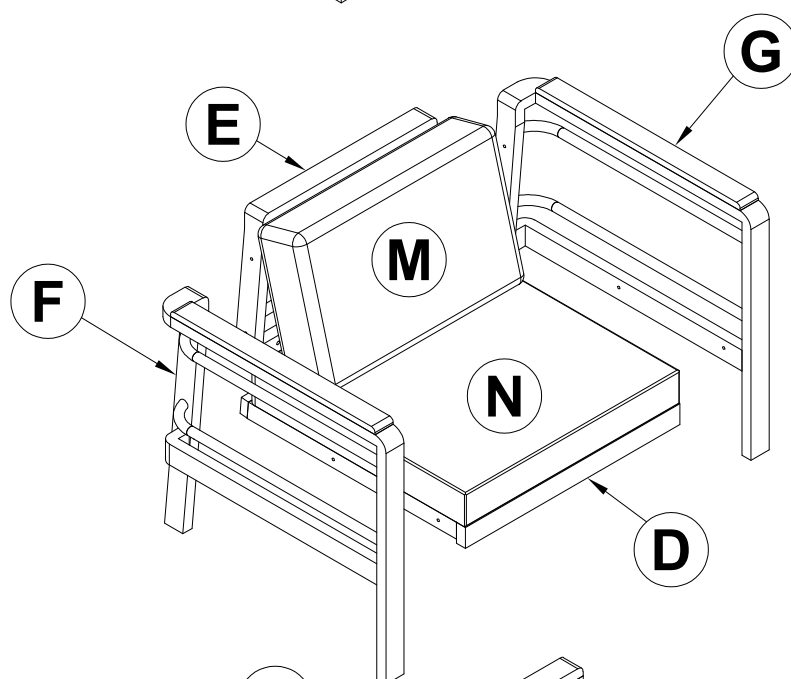


**x1**

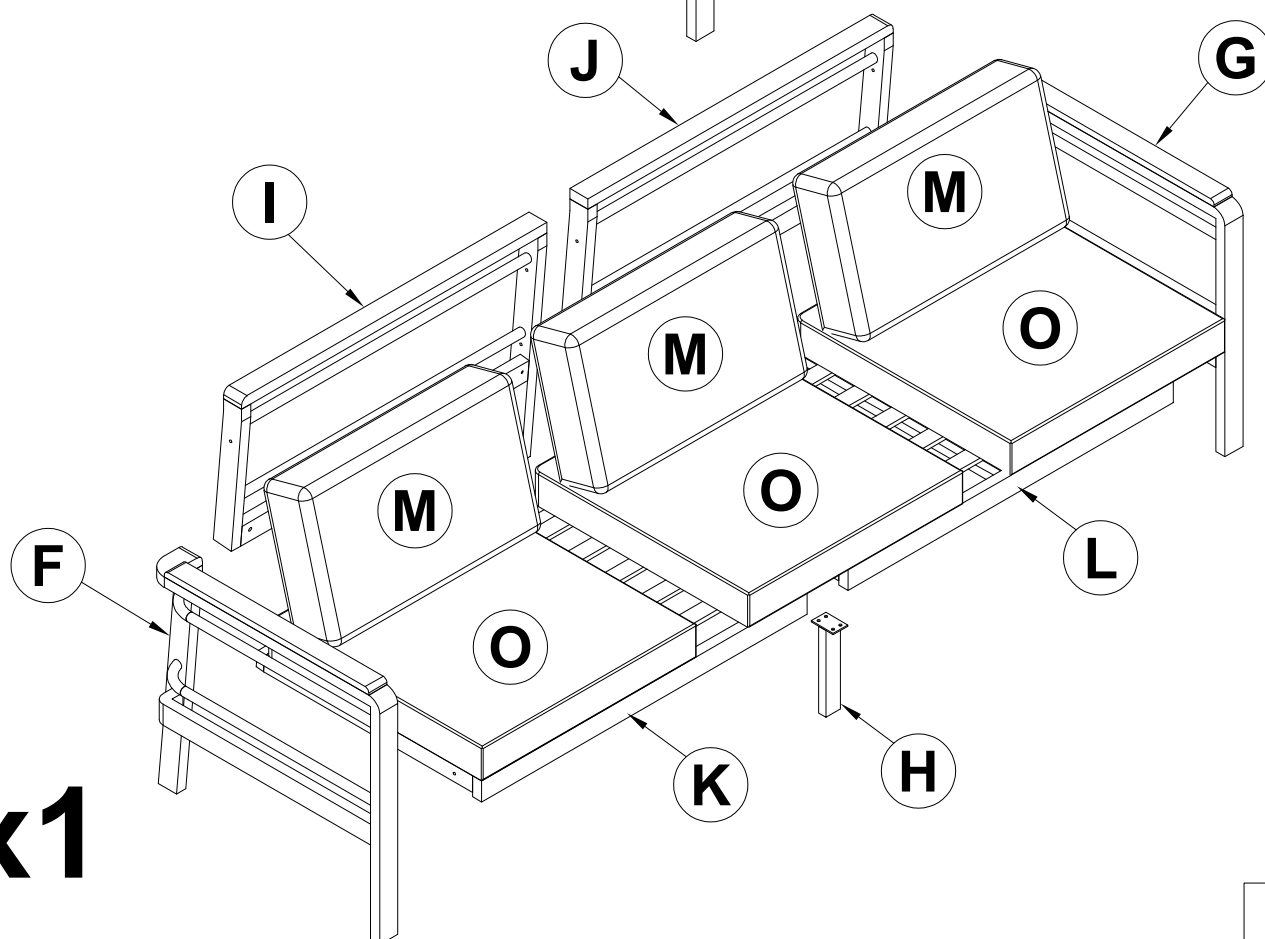


# Parts List :

A

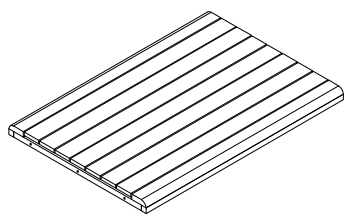


Top Table (1pc)

B

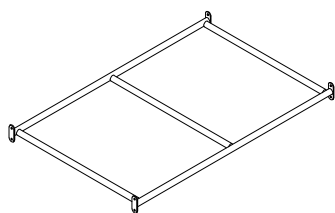


Connect Table (1pc)

C

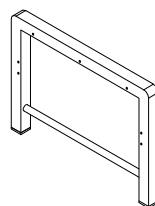


Leg Table (2 pcs)

D

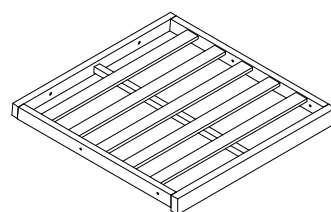


Seat Chair Frame (2 pcs)

E

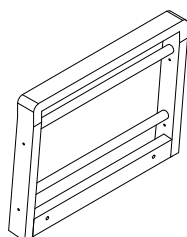


Back Chair Frame (2 pcs)

F

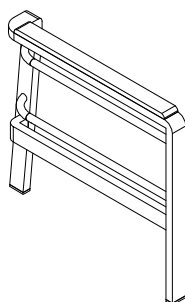


Left Armless (3 pcs)

G

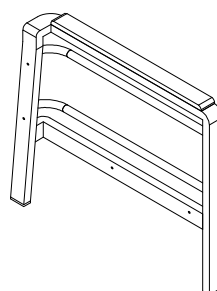


Right Armless (3 pcs)

H




Middle Support Leg (1 pc)

I

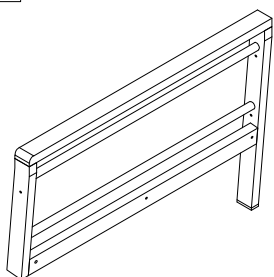


Left Back Bench (1 pc)

J

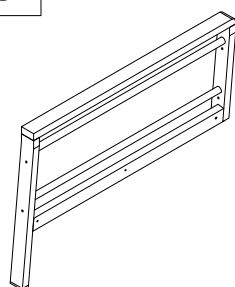


Right Back Bench (1 pc)

K

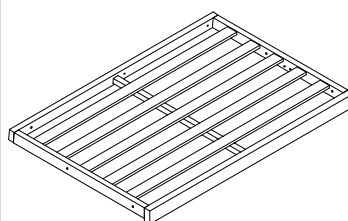


Left Seat Bench (1 pc)

L

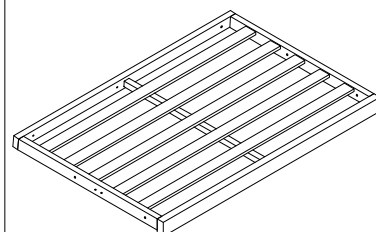


Right Seat Bench (1 pc)

M

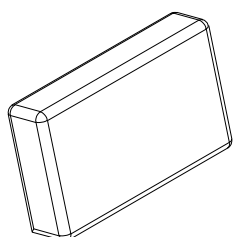


Back Cushion (5 pcs)

N

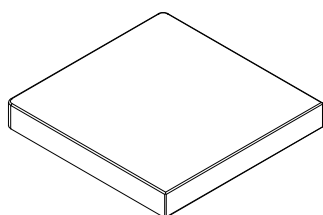

Seat Chair Cushion (2 pcs)


O

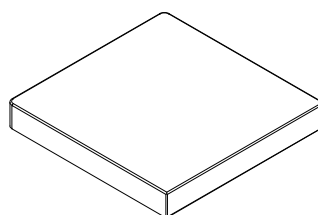

Seat Chair Cushion (3 pcs)


# Hardware :

1

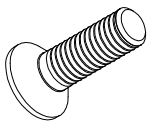


Bolt M6x20 (12 pcs)  
Extra (2 pcs)

2

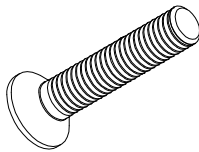


Bolt M6x40 (40 pcs)  
Extra (3 pcs)

3

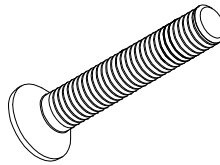


Bolt M6x50 (2 pcs)  
Extra (1 pc)

4

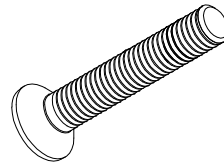


Bolt M6x60 (3 pcs)  
Extra (1 pc)

5




Flat Washer M6 (62 pcs)  
Extra (5 pcs)

6

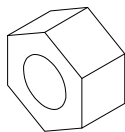


Nut M6 (5 pcs)  
Extra (1 pc)

7

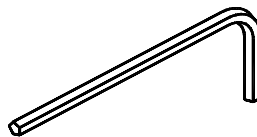

Allen Key (2 pcs)


8

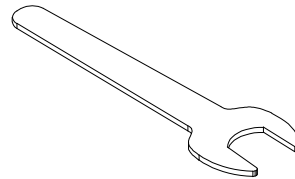


Key (1 pc)

# CARTON CONTENT:


N719P225854

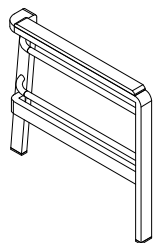


(F) x2

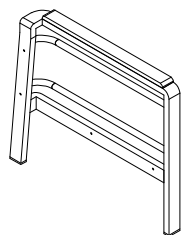


(G) x2

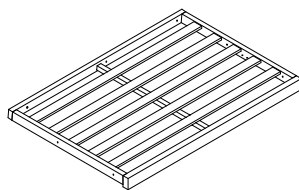

(K) x1

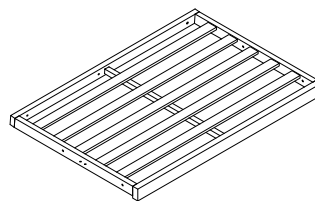


(L) x1

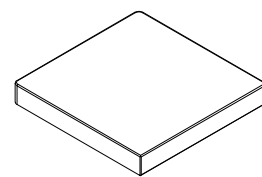


(N) x2


N719P225855

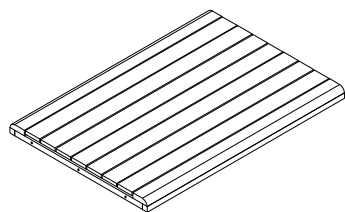


(A) x1

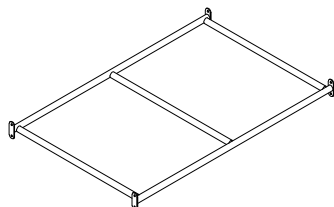


(B) x1

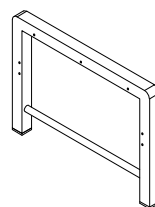


(C) x2

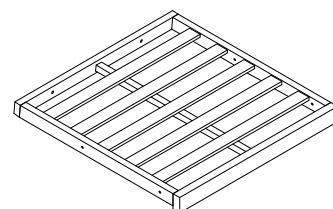

(D) x2

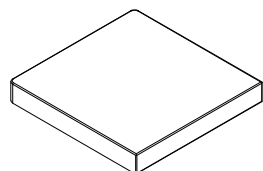


(O) x2

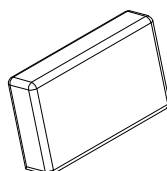


(M) x3


N719P225856

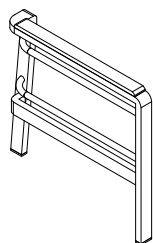


(F) x1

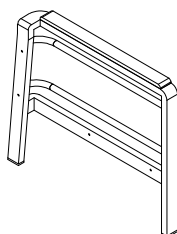


(G) x1

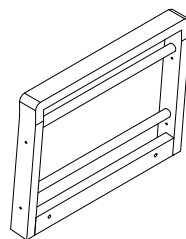


(E) x2

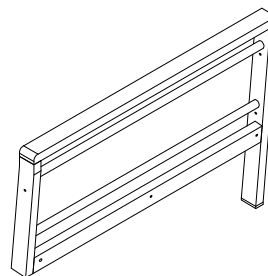


(I) x1

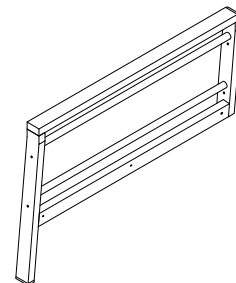


(J) x1




(H) x1

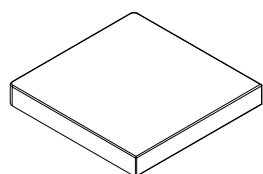

(O) x1

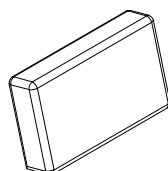


(M) x2

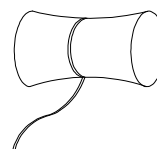

Hardware

## STEP 1


- A x1
- C x2
- ② x6
- ⑤ x6

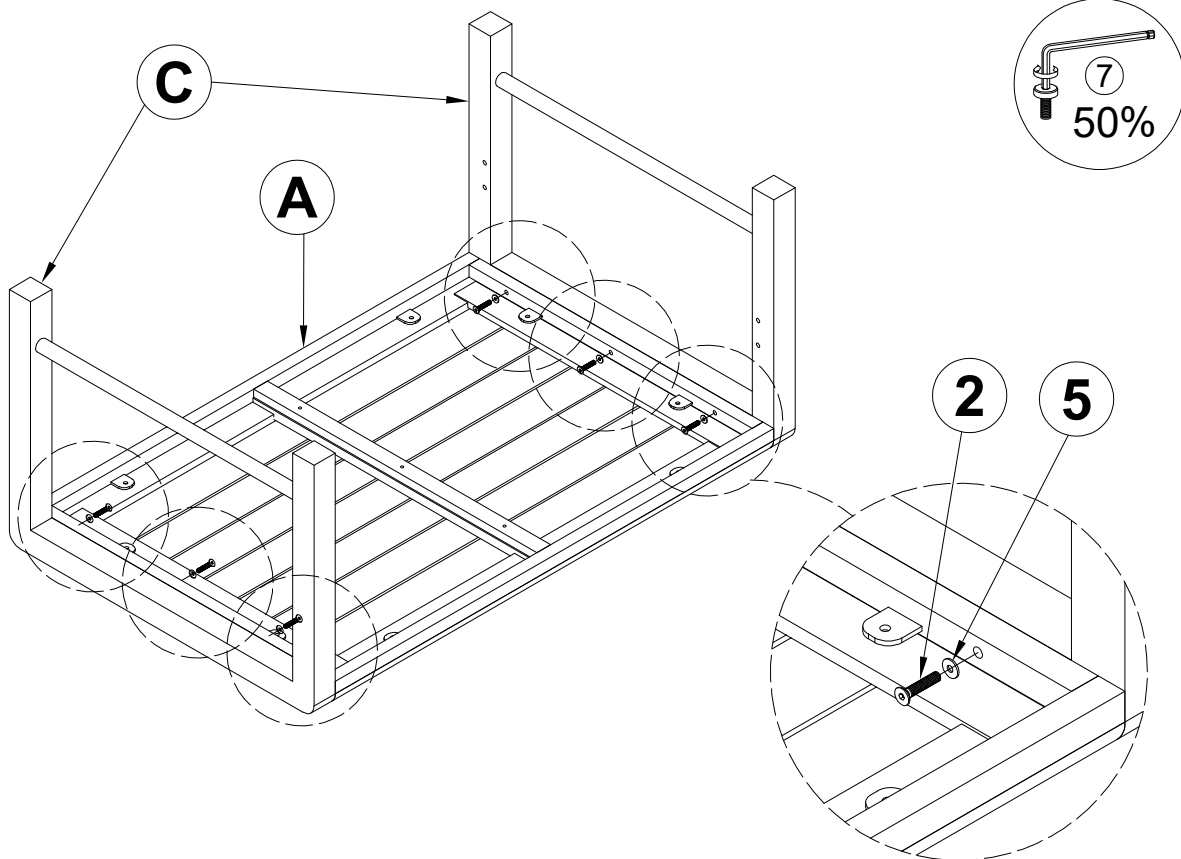

Connect Leg Table (C) & Top Table (A), tighten Bolt (2) & flat washer (5) with Allen Key (7).



## STEP 2

- B x1
- ① x8
- ⑤ x8

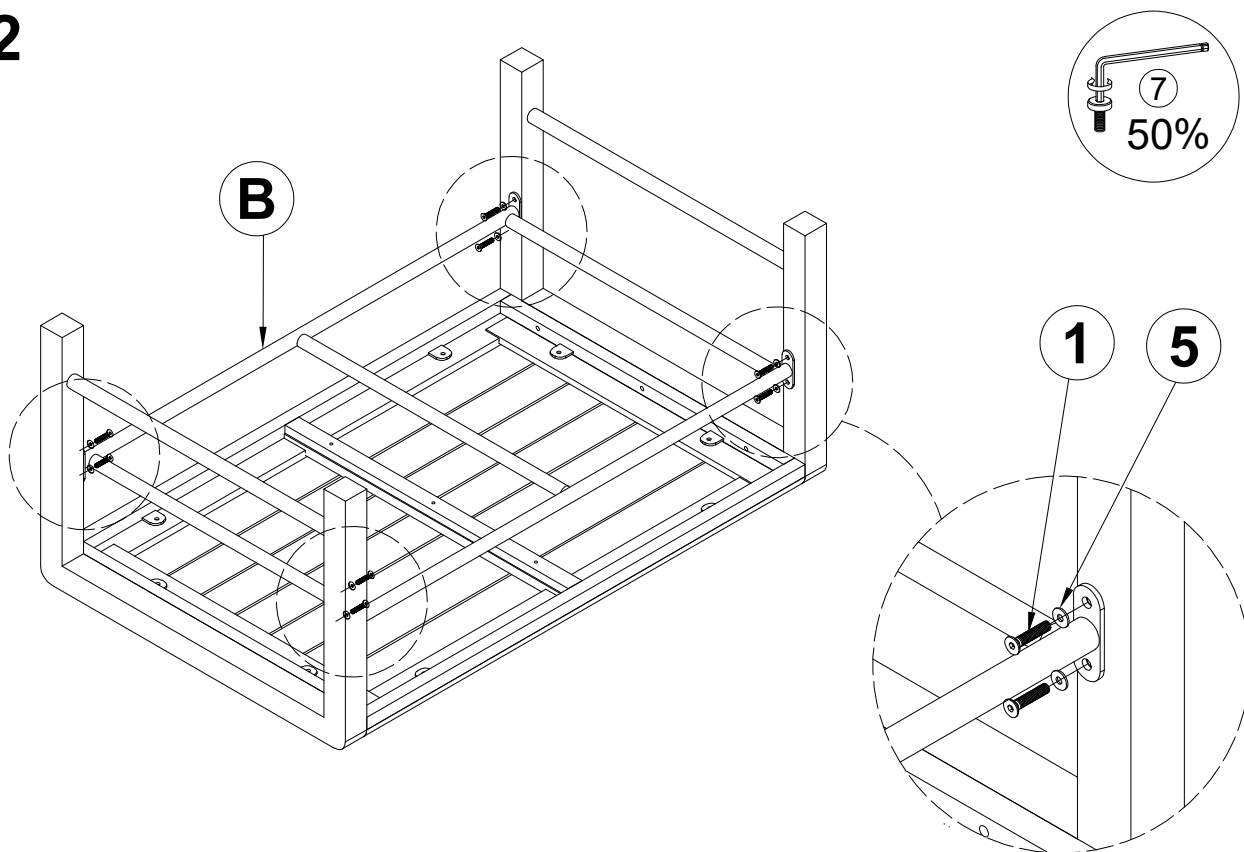

Connect Leg Table (C) & Connect Table (B), tighten Bolt (1) & flat washer (5) with Allen Key (7).

## STEP 3

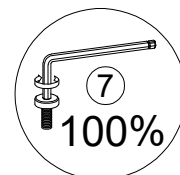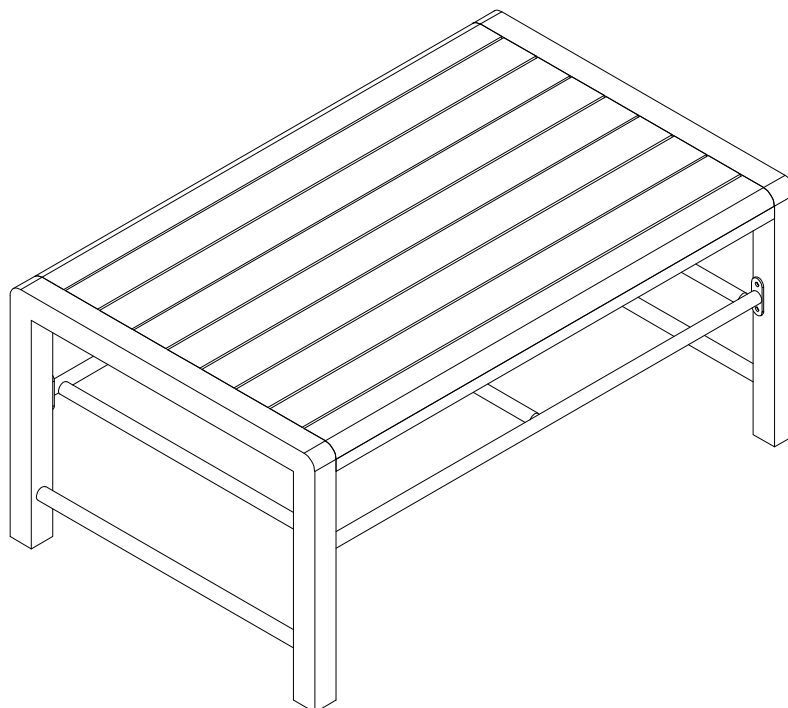

Put The table upright, then firmly tighten Bolts with Allen Key (7) to finish Table.


## STEP 4

D x1

E x1

2 x2

5 x2

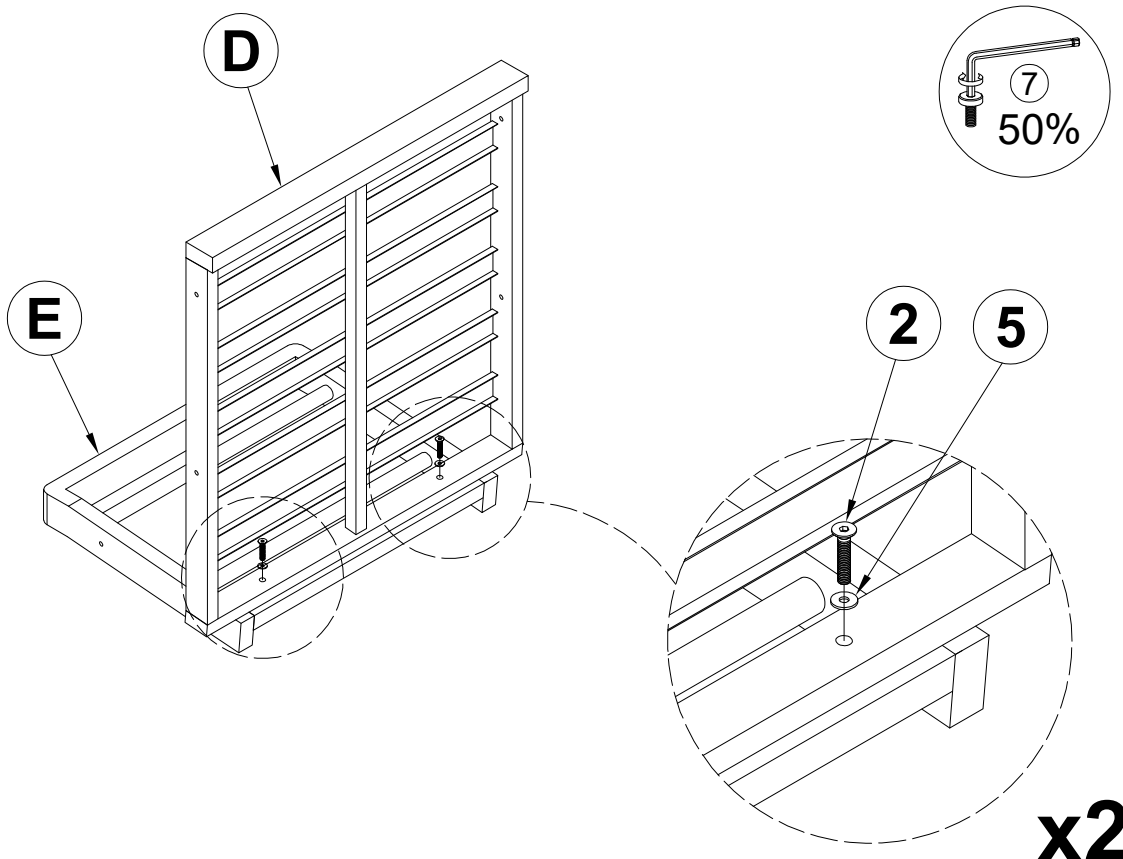


Connect Seat Chair Frame (D) & Back Chair Frame (E), tighten Bolt (2) & Flat Washer (5) & Allen Key (7).

## STEP 5

F x1

② x4

⑤ x4

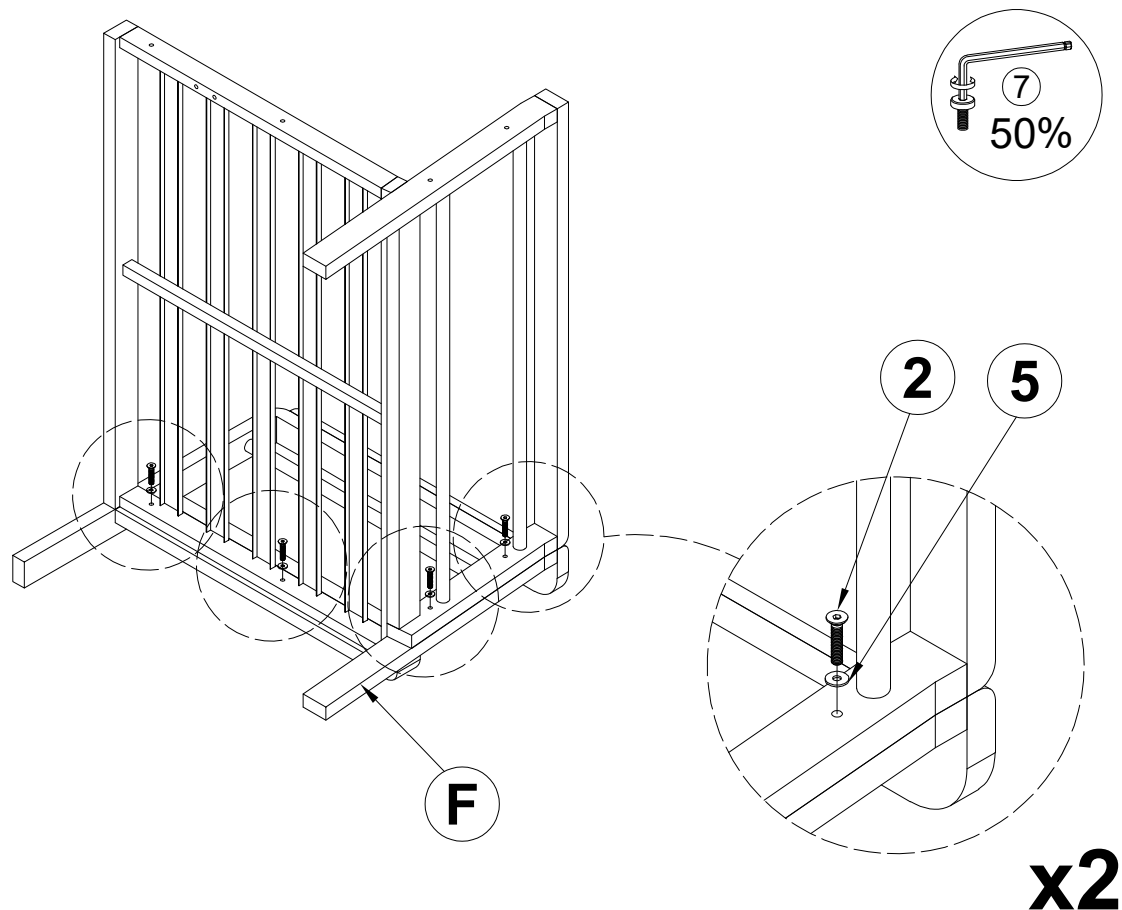


Connect The part from Step 4 & Left Armless (F), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).

## STEP 6

G x1

② x4



⑤ x4

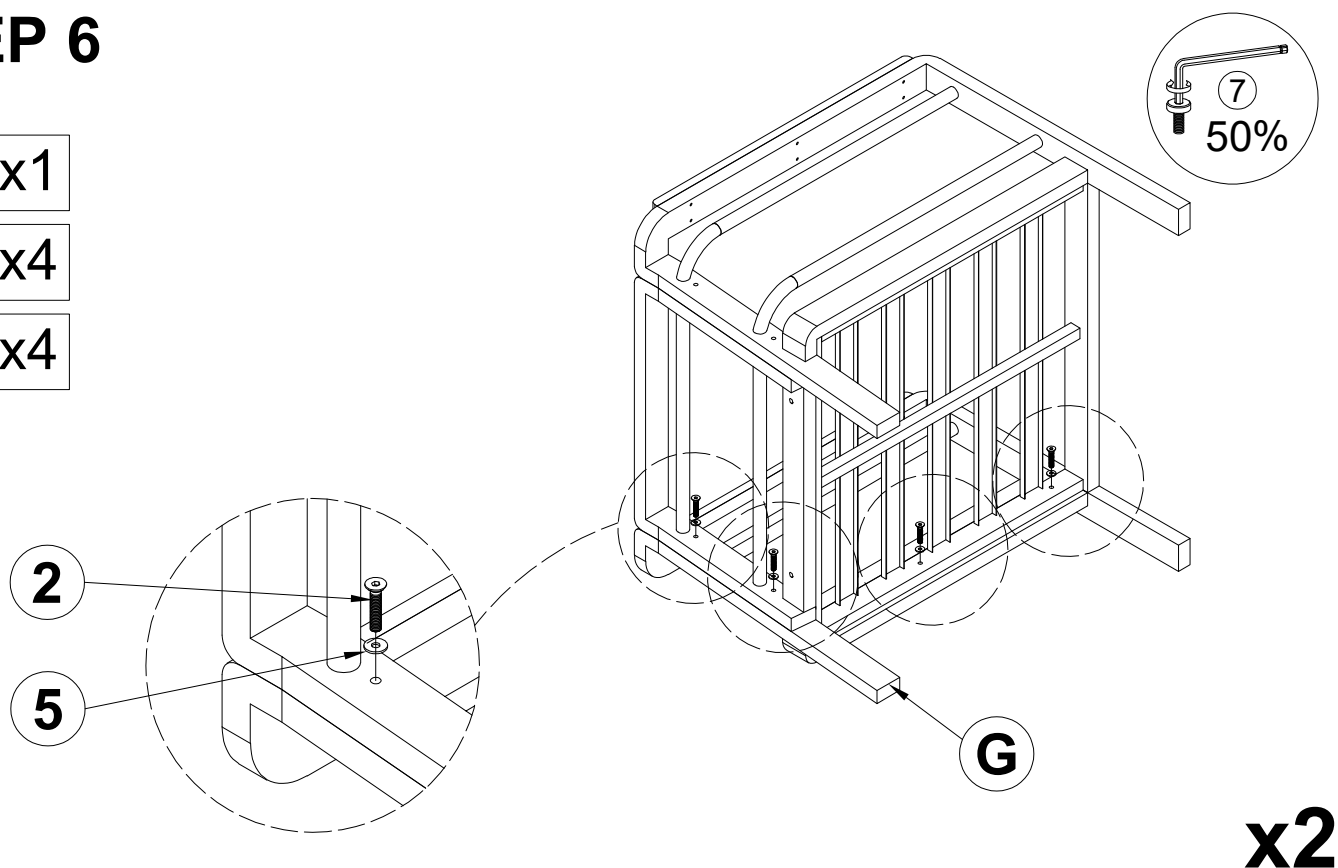

Connect The part from Step 5 & Right Armless (G), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).



## STEP 7

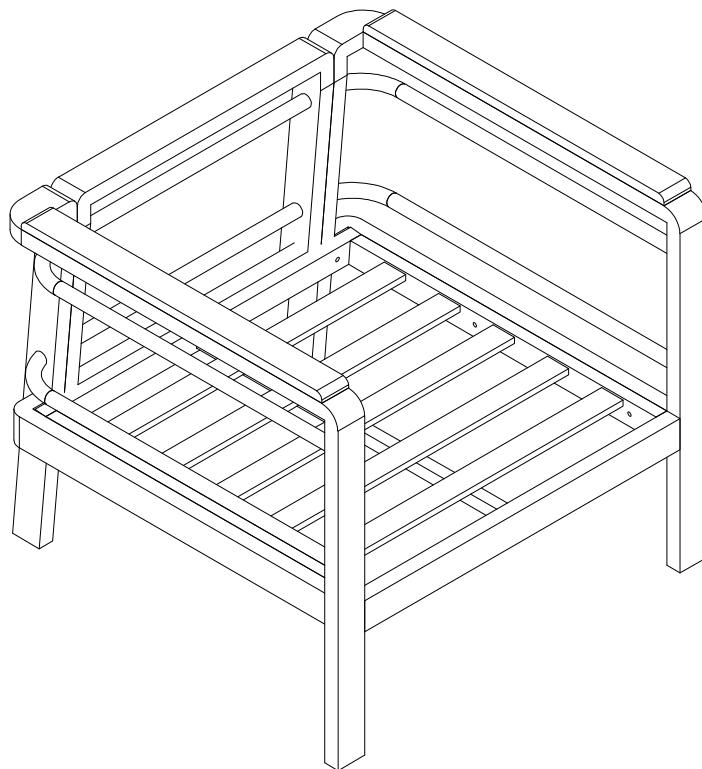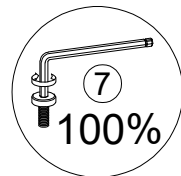


**x2**

Put The chair upright, firmly tighten Bolts with Allen Key (7) to finish Chair.

## STEP 8

M x1


N x1

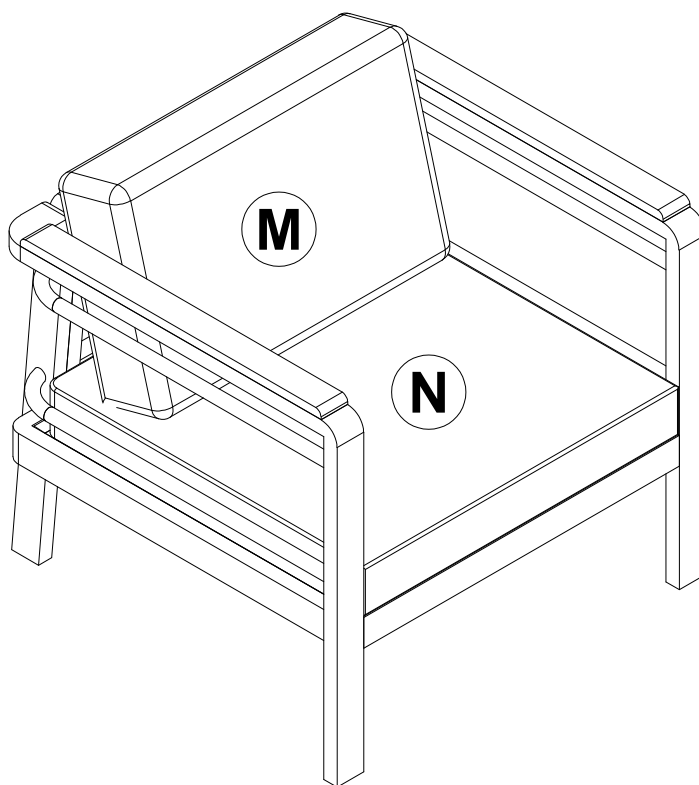

**x2**

Open all the vacuum bags, adjust the cushions. Set up the Cushions (M) + (N) to finish Chair.

## STEP 9

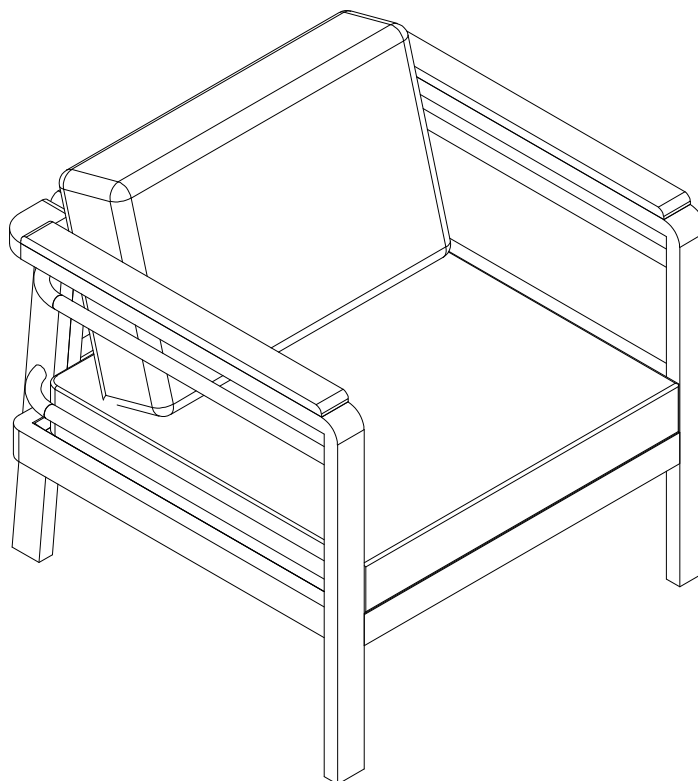

**x2**

Finish Chair.

## STEP 10


**I** x1

**J** x1

**4** x3

**5** x6


**6** x3

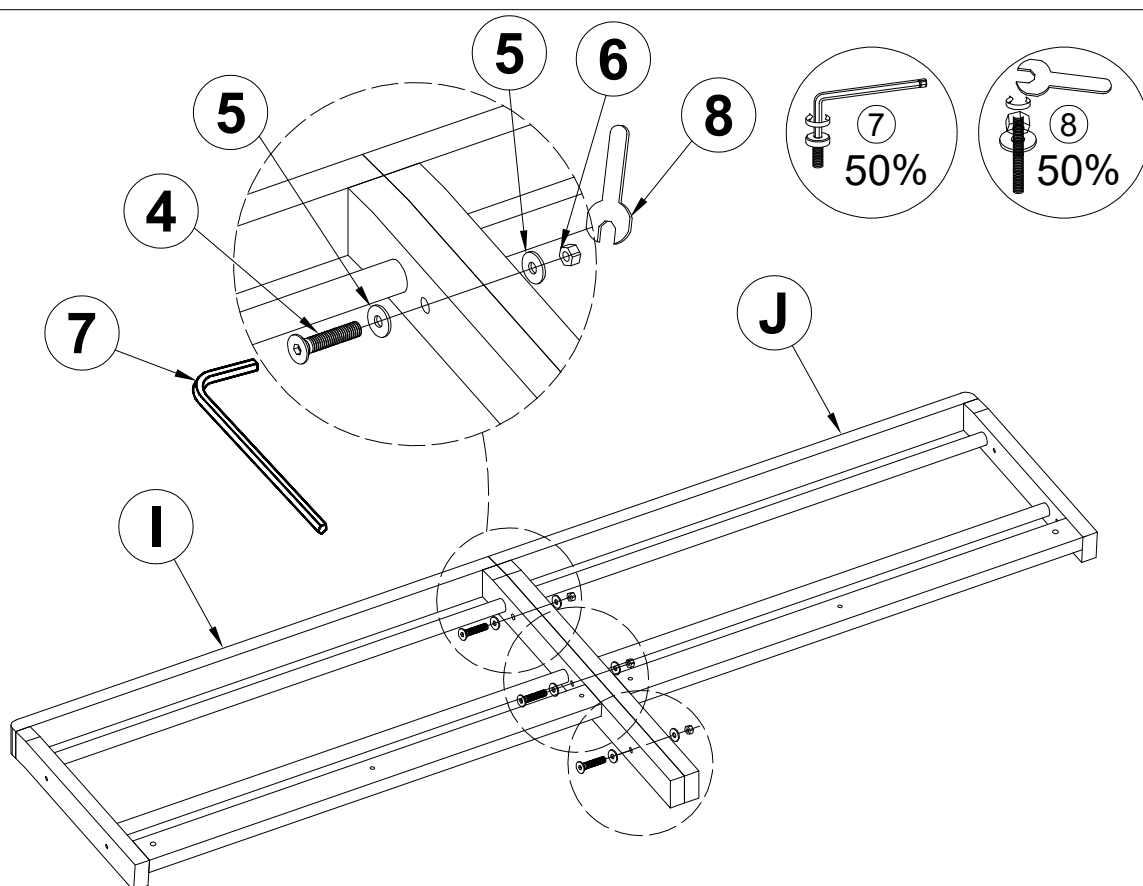

Connect Back Bench Frames (I) & (J), tighten Bolt (4) & Flat Washer (5) & Nut (6) with Allen Key (7) & Key (8).

## STEP 11


- K** x1
- L** x1
- 3** x2
- 5** x4
- 6** x2

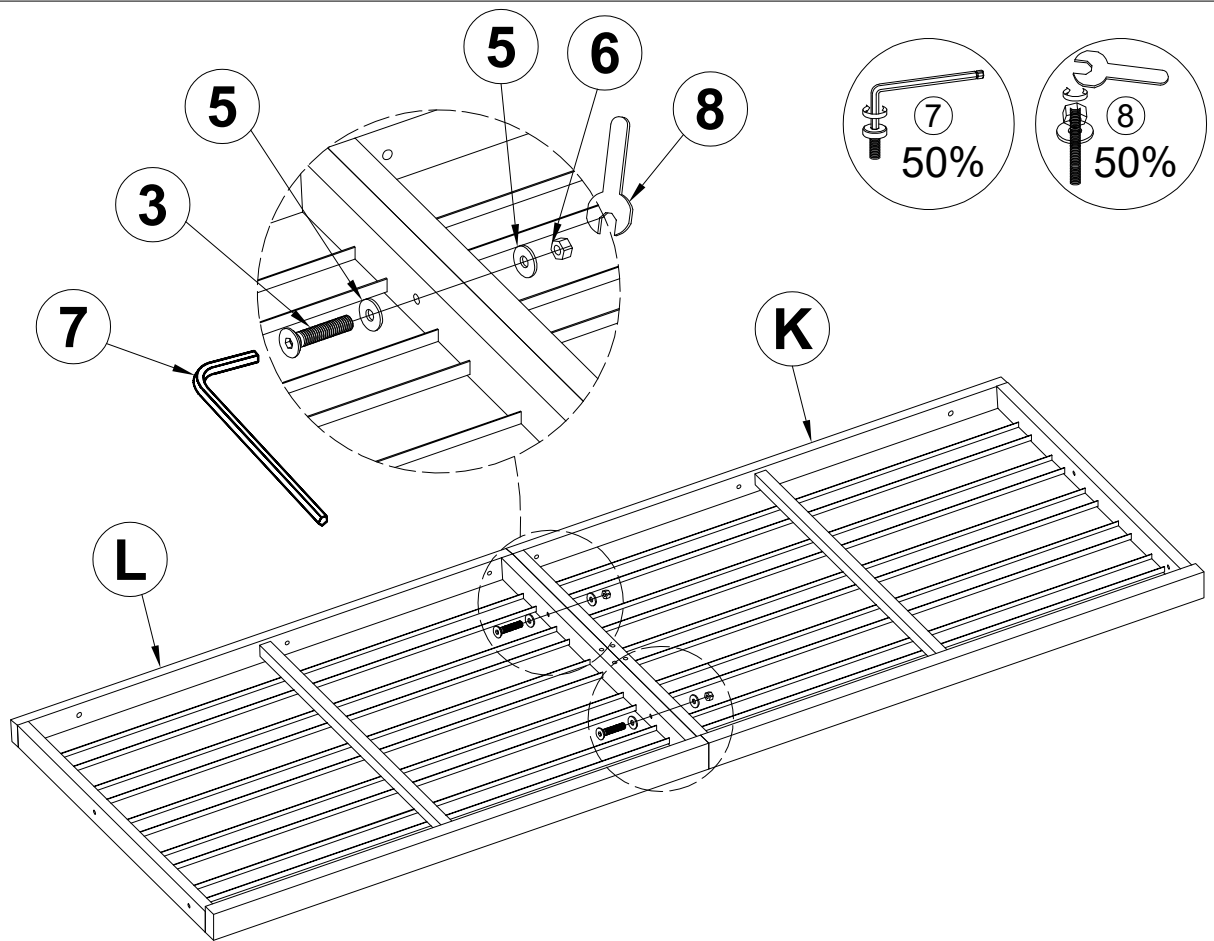

Connect Right Seat Bench (L) & Left Seat Bench (K), tighten Bolt (3) & Flat Washer (5) & Nut (6) with Allen Key (7) & Key (8).

## STEP 12

- 2** x6
- 5** x6

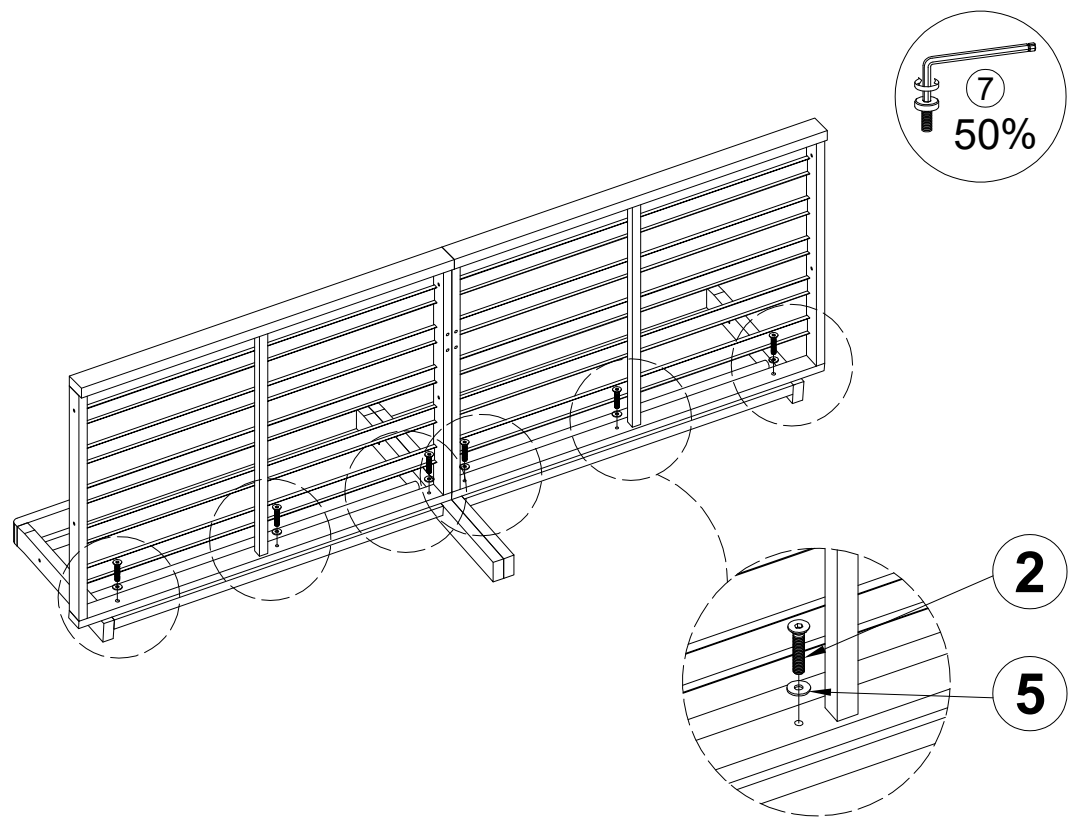


Connect The part from Step 10 & The part from Step 11, tighten Bolt (2) & Flat Washer (5) & Allen Key (7).

## STEP 13

F x1

② x4

⑤ x4

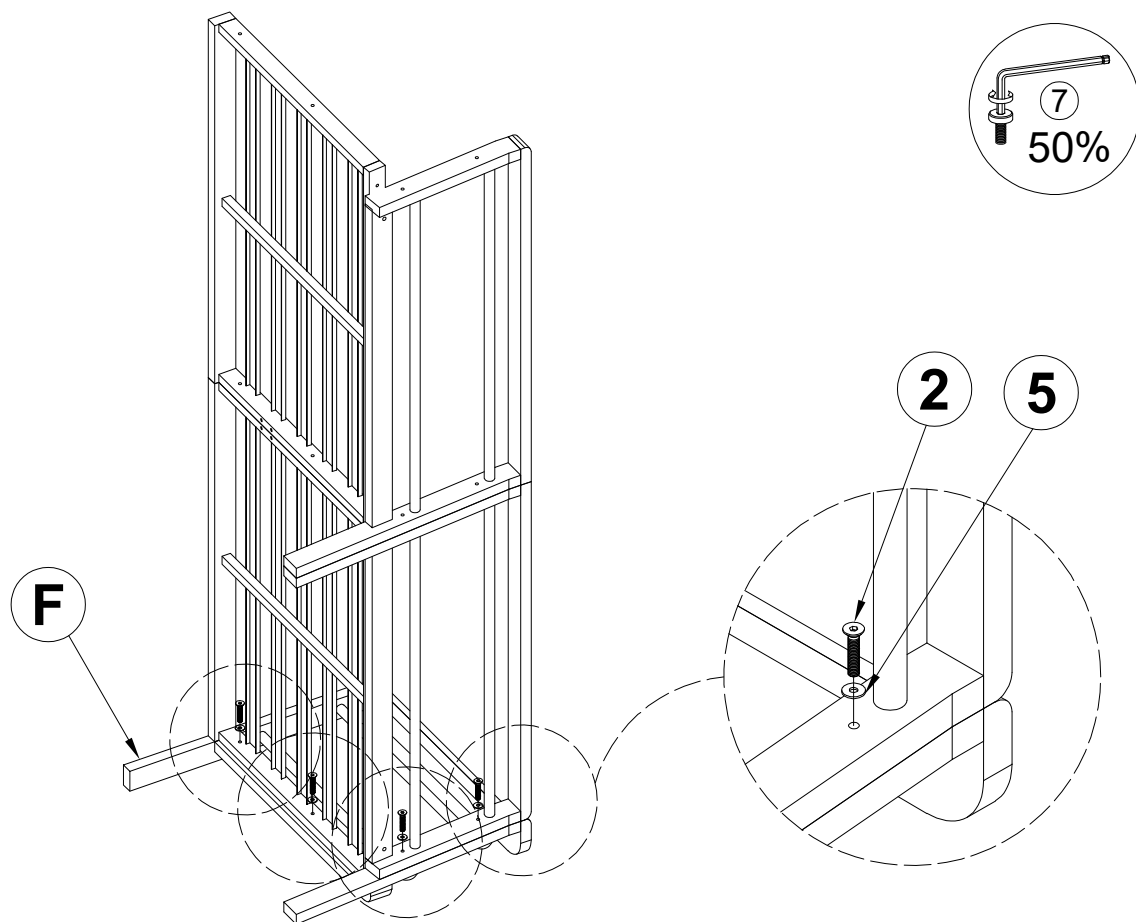


Connect The part from Step 12 & Left Armless (F), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).

## STEP 14

G x1

② x4

⑤ x4

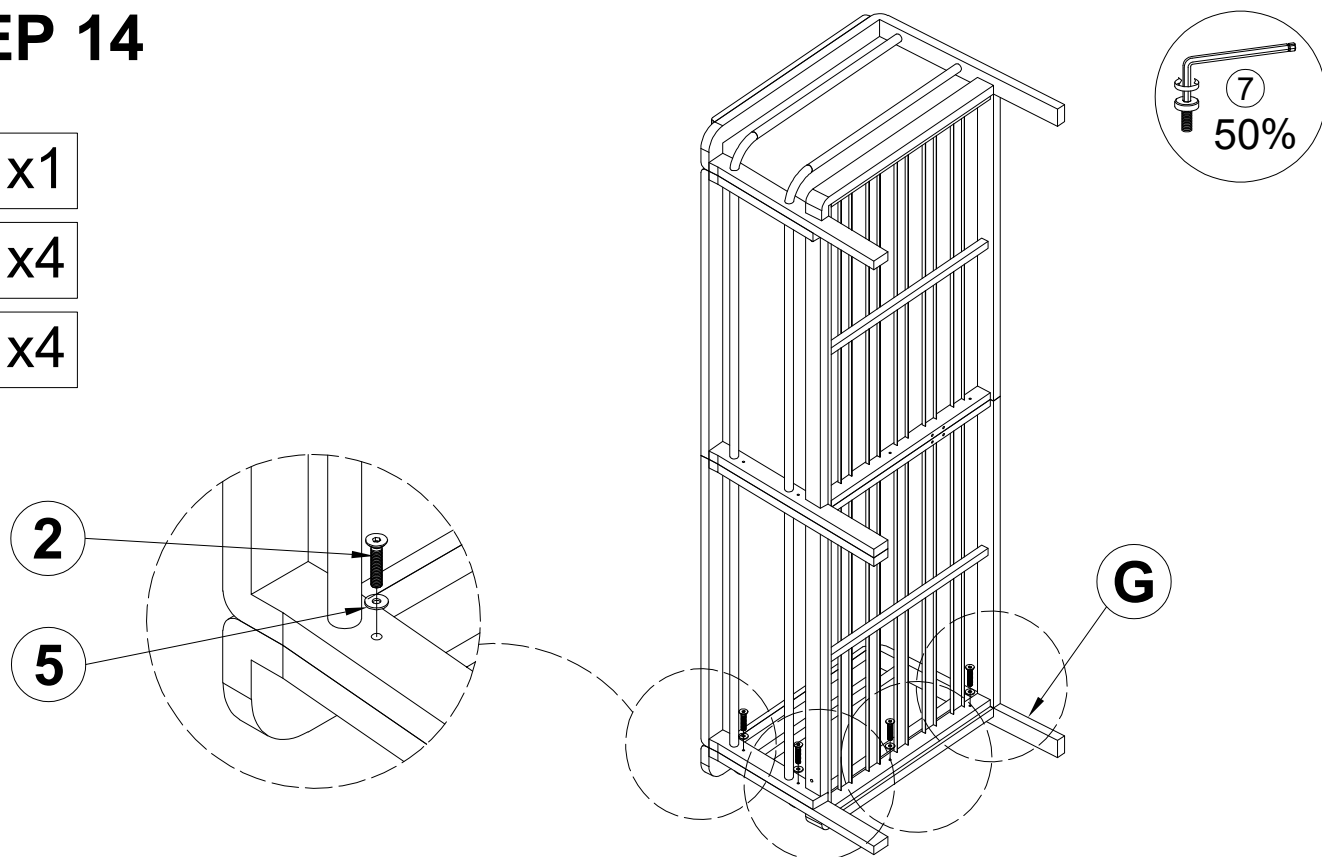




Connect The part from Step 13 & Right Armless (G), tighten Bolt (2) & Flat Washer (5) with Allen Key (7).

## STEP 15

H x1



① x4

⑤ x4

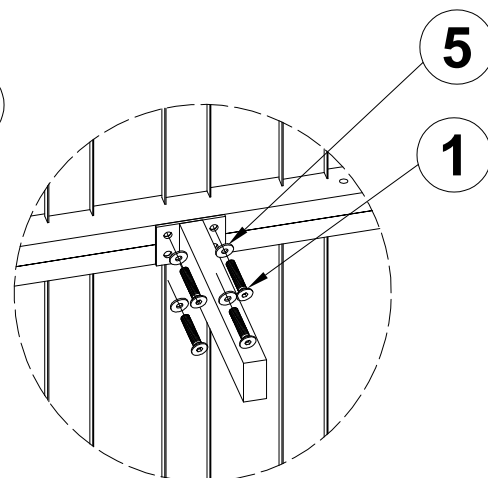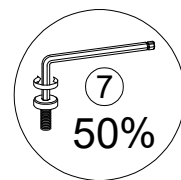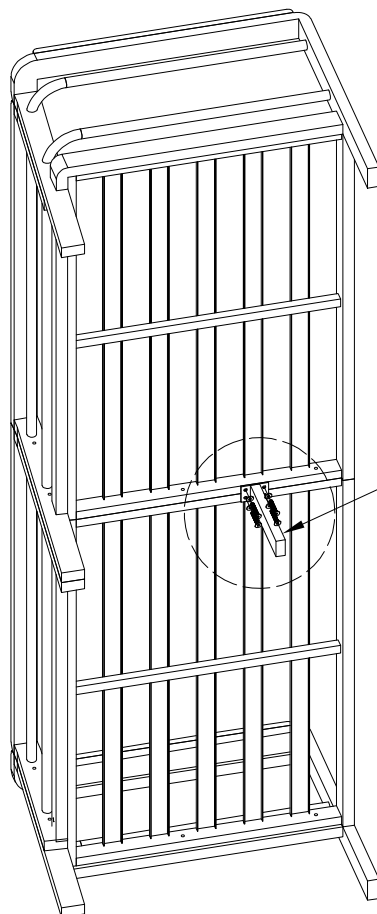



Connect The part from Step 14 & Middle Support Leg (H), tighten Bolt (1) & Flat Washer (5) with Allen Key (7).

## STEP 16

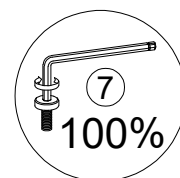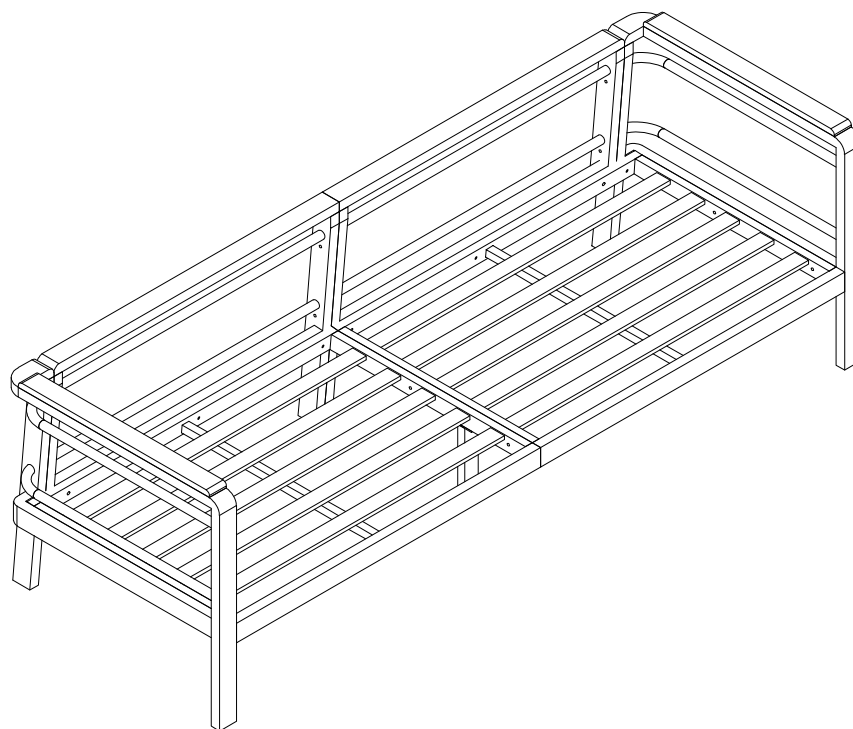


Put the Bench upright, firmly tighten Bolts with Allen Key (7), to finish Bench.

## STEP 17

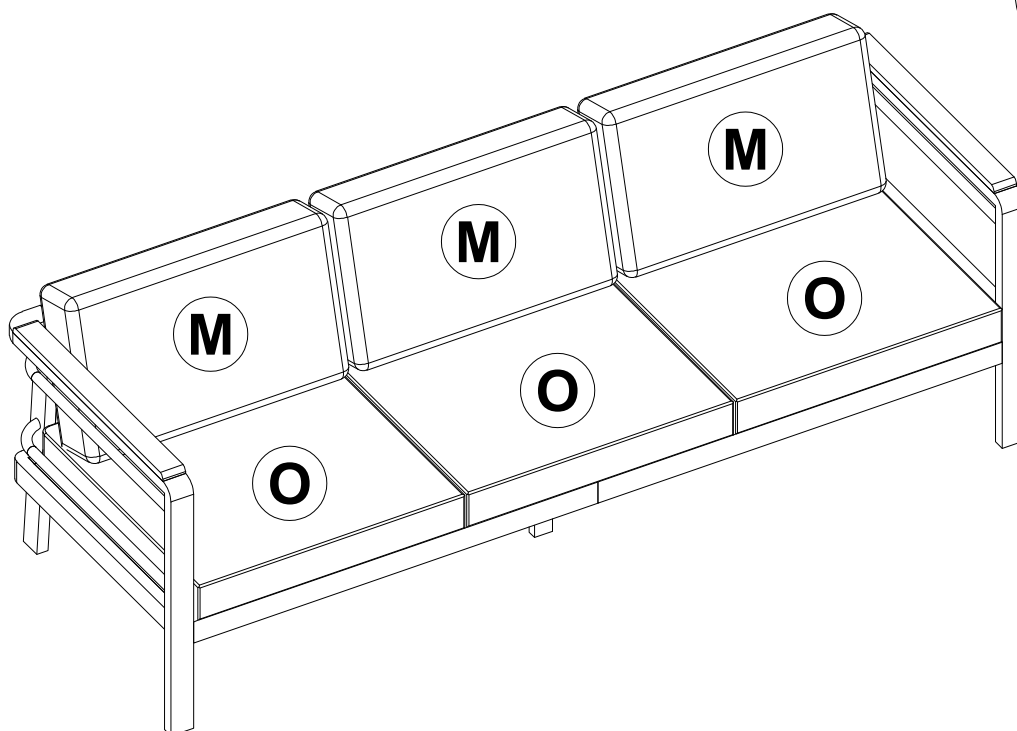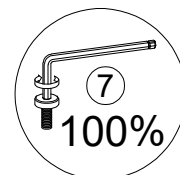

Open all the vacuum bags, adjust the cushions. Set up the Cushions (M) + (O) to finish Bench.

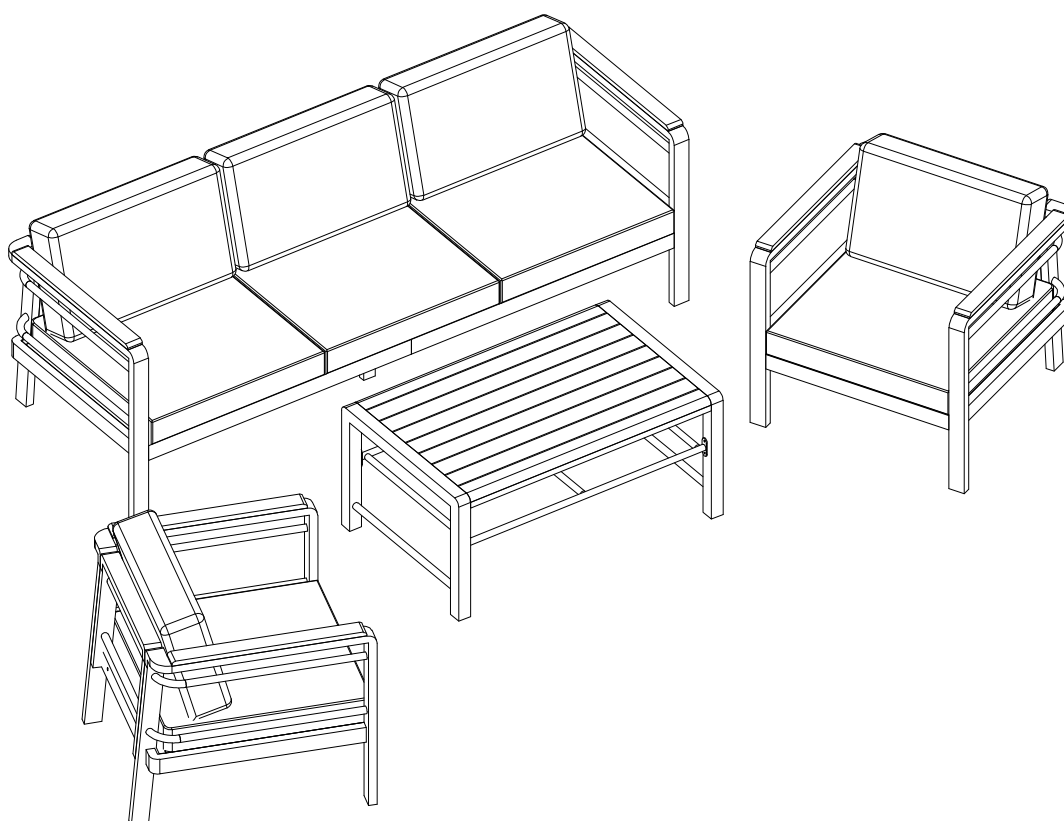

Finish