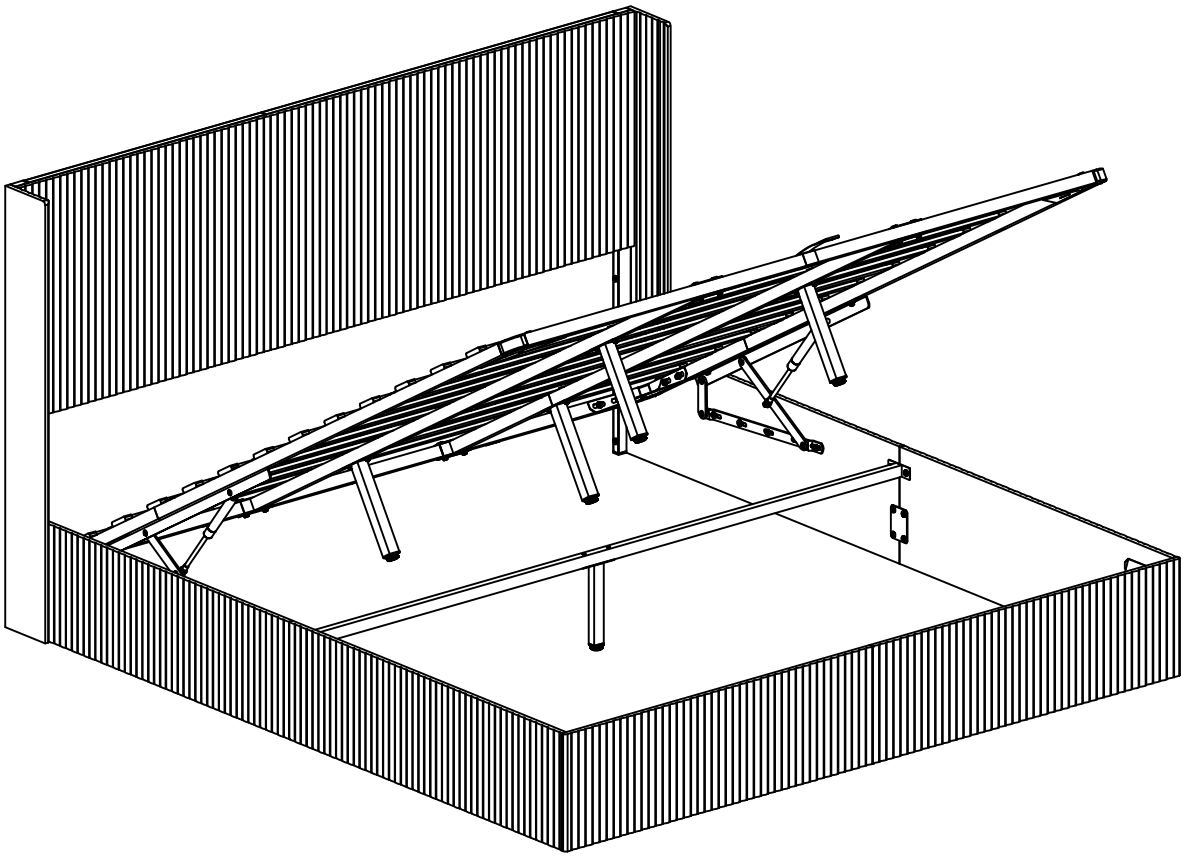
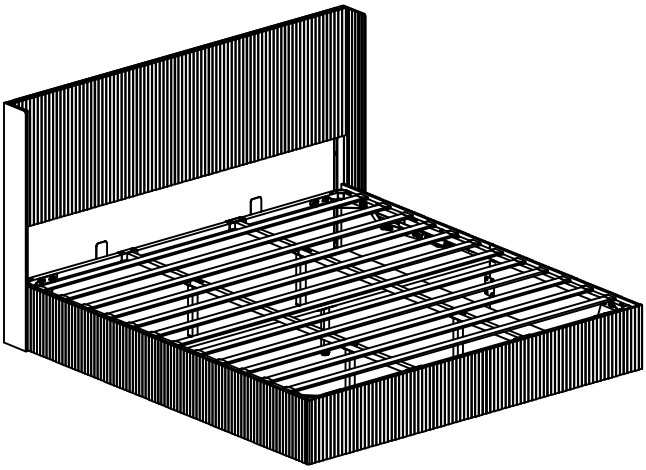
Installation & Assembly

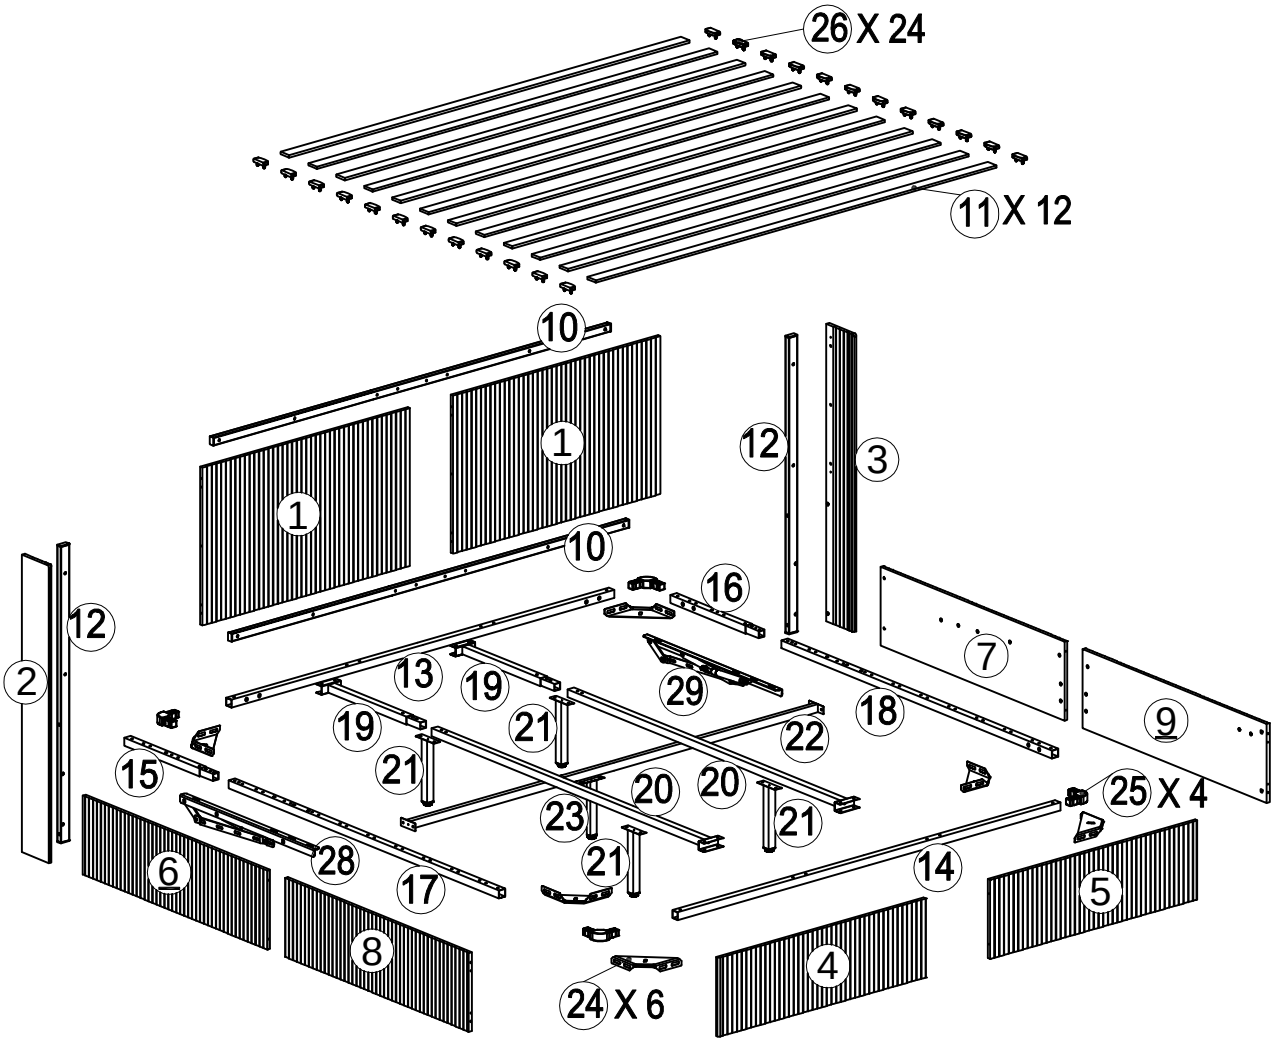

























TIPS

1. Please read the instructions fully before assembly. These instructions include important information which could ensure correct assembly. We have been working on providing high quality products for you.However, in the rare instance that your product is defective, missing parts or there!are some issues, please don't hesitate to contact our customer service to submit parts requirements,assembly suggestion or warranty claims, and we will give the best solution as soon as possible. If necessary, we need you to provide some more clear pictures of the issue.
2. insert the screws in holes and tighten the screws, but not too tight,70%~80% is ok, finally tighten all the screws. If some issues happened that some screws cannot target to the hole or some parts are difficult to install, please adjust the tightness of the screws.
3. 2 people are recommended to finish















Components


26 X 24
11 X 12
10
1
1
10
12
3
16
12
2
7
13
19
29
18
9
19
21
22
15
21
20
20
25 X 4
23
21
6
28
21
14
17
5
8
4
24 X 6

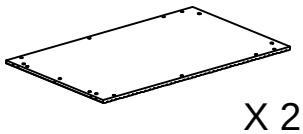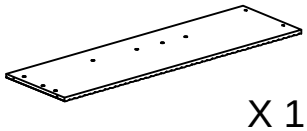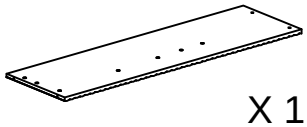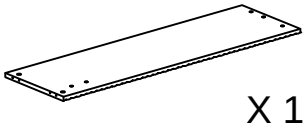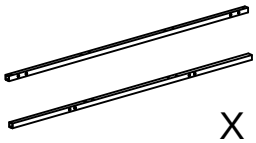Hardware


①  X 2	②  X 1	③  X 1	④  X 1
⑤  X 1	⑥  X 1	⑦  X 1	⑧  X 1
⑨  X 1	⑩  X 2	⑪  X 12	⑫  X 2
⑬  X 1	⑭  X 1	⑮  X 1	⑯  X 1
⑰  X 1	⑱  X 1	⑲  X 2	⑳  X 2
㉑  X 4	㉒  X 1	㉓  X 1	㉔  X 6
㉕  X 4	㉖  X 24+2	㉗  X 2	㉘  X 1
㉙  X 1	㉚  X 1		

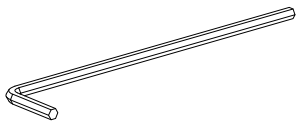Hardware

A M6 x 50  X 8+1	B M6 x 40  X 26+2	C M6 x 30  X 20+2	D M6 x 18  X 8+1
E M6 x 12  X 70+4	F Ø24 x 5  X 8+1	G M6 x 6  X 26+2	H M6 x 35  X 10+1
J Ø5 x 60  X 2	K Ø15 x 9.5  X 14+1	L Ø9.8 x 10.5  X 4	M Ø6 x 30  X 17+2
N 12 x 100  X 16+2	O 84 x 60 x1.5  X 2	P 188 x 60 x 2  X 2	Q 100 x 60 x 2  X 2
R M8 x 6  X 4+1	S  X 1	T 10 / 13  X 1	U M4  X 1

01


J	K	M	S
Ø5 x 60	Ø15 x 9.5	Ø6 x 30	
X2	X4	X7	X1

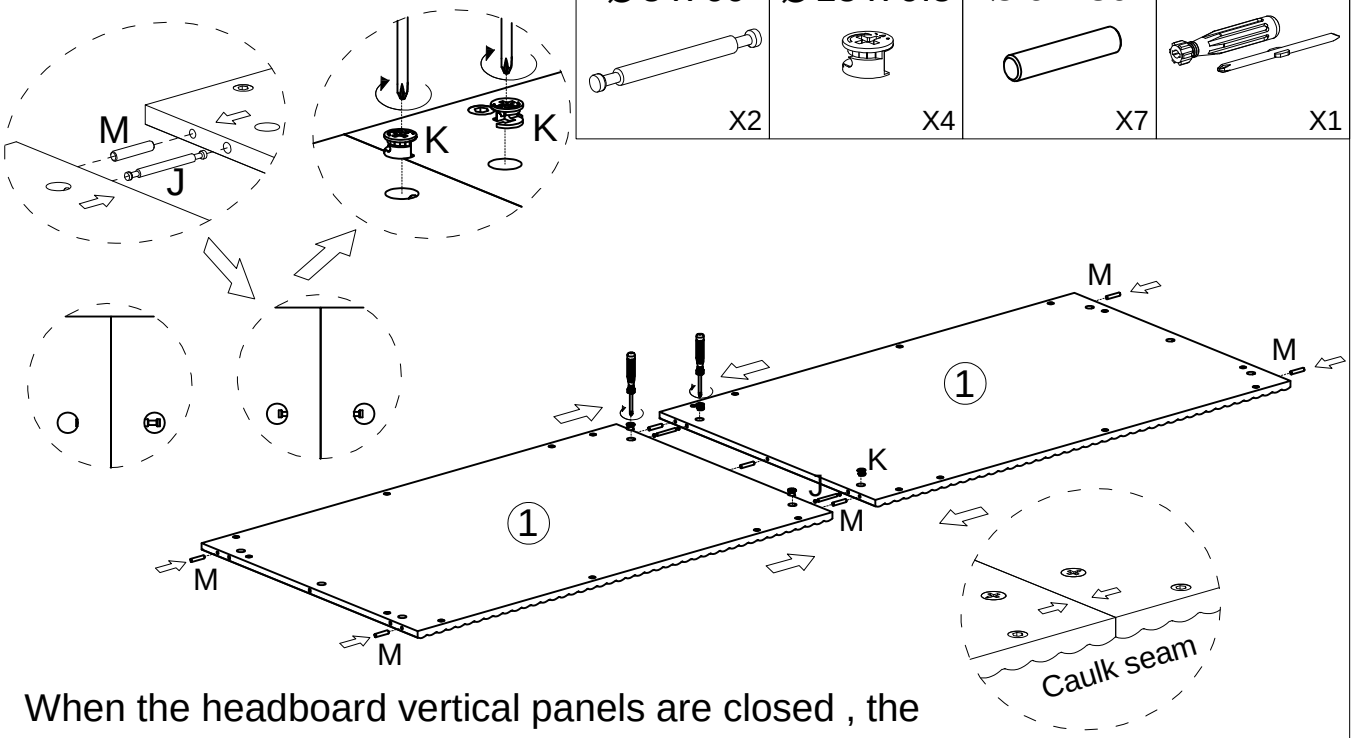

When the headboard vertical panels are closed , the distances on both sides of the double-headed part should be symmetrical . Place the three-in-one plate and lock the seams of the wooden panels clockwise at both ends .


02

C	U
M6 x 30	M4
X16	X1

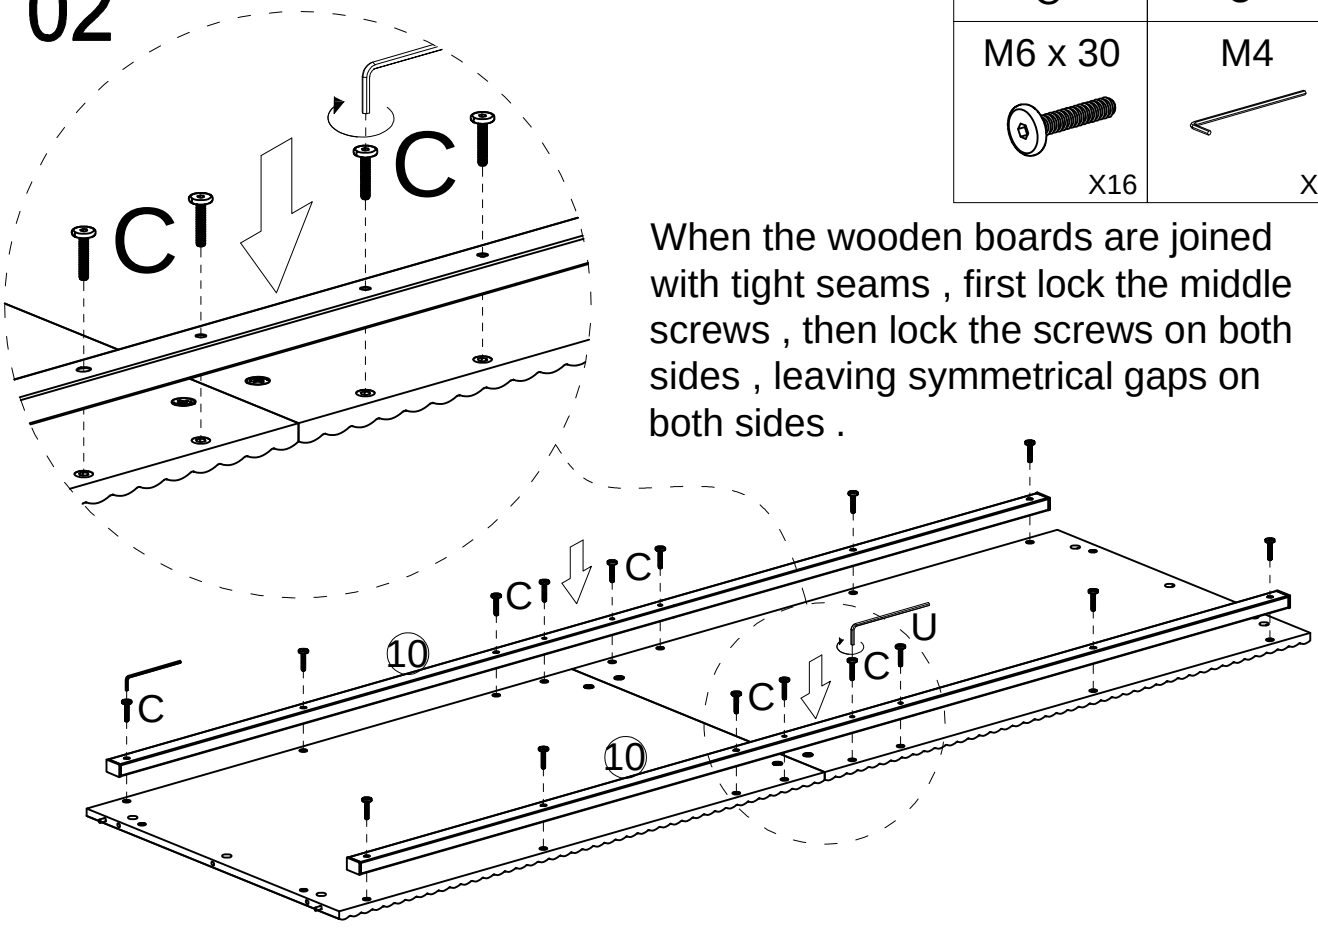


03

N	H	S
12 x 100 X2	M6 x 35 X6	X1

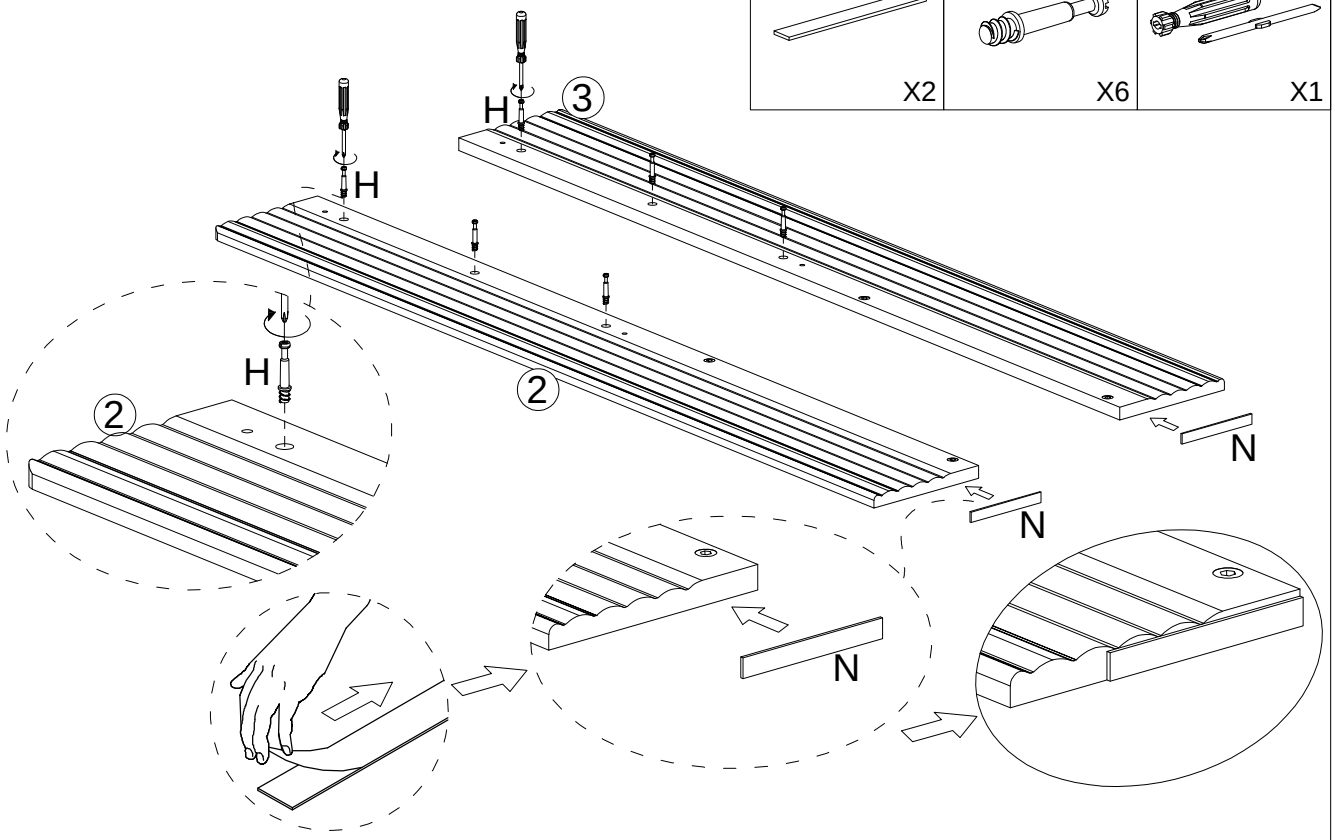


04

K	S
Ø15 x 9.5 X6	X1

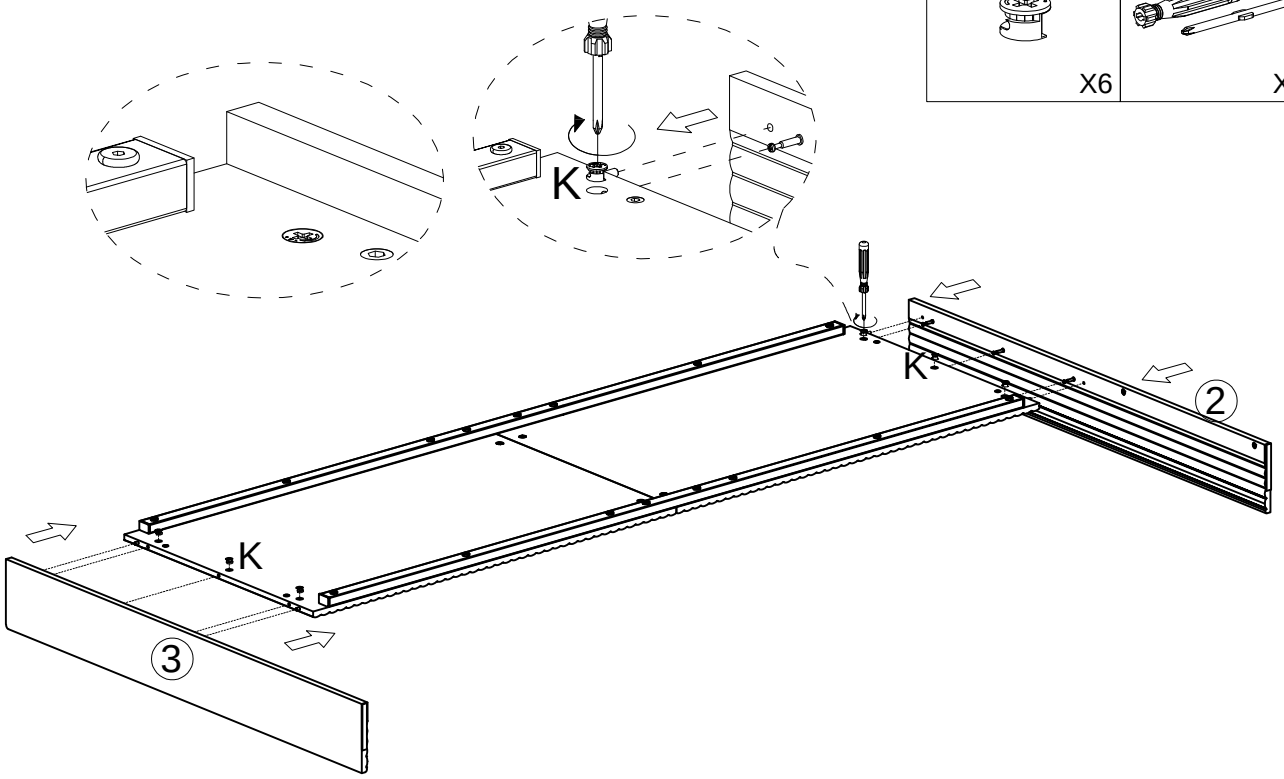


05

C	U
M6 x 30	M4
X4	X1

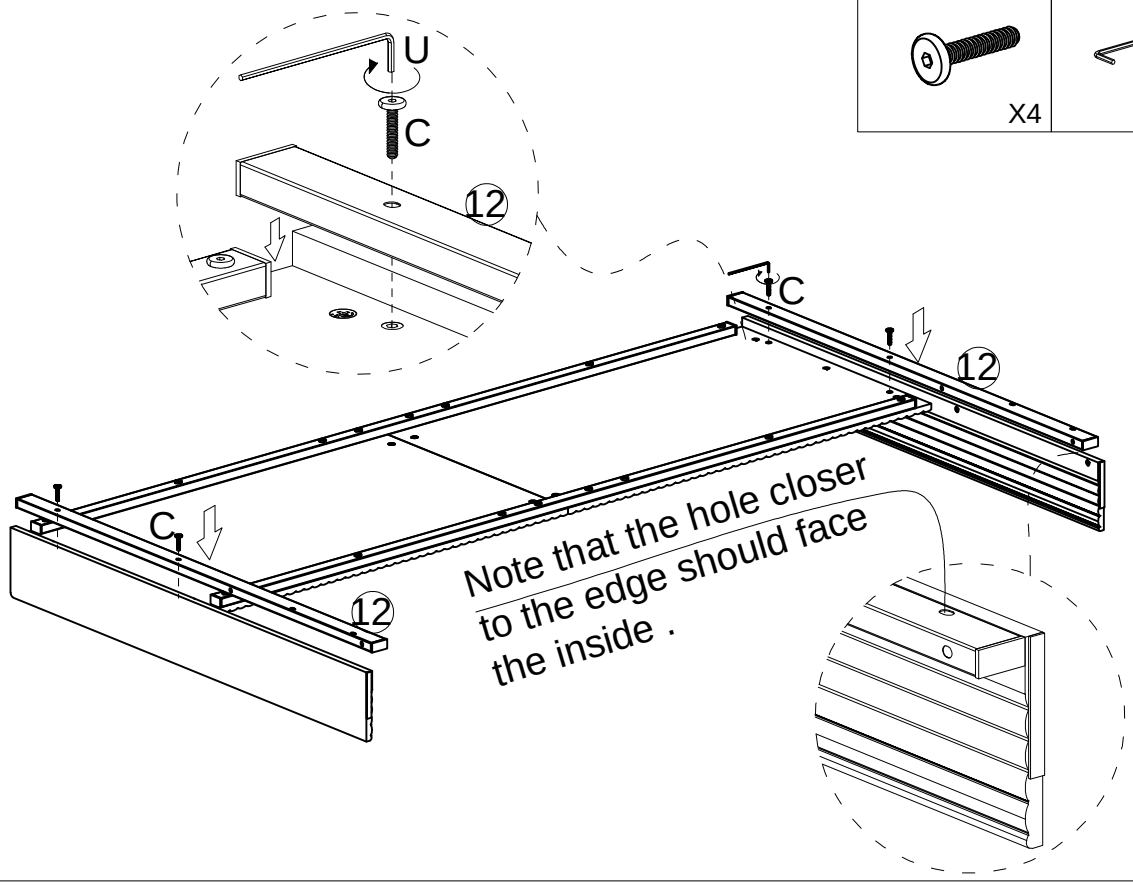


06

A	U
M6 x 50	M4
X4	X1


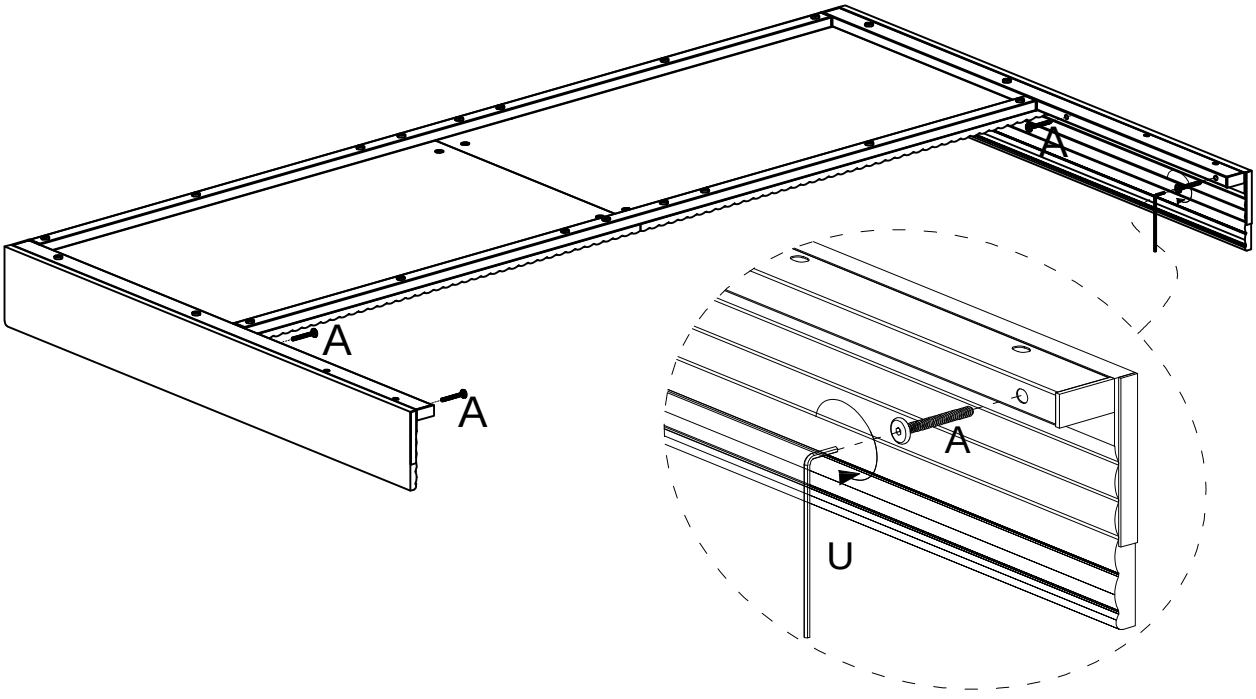



07

N	M
12 x 100  X4	Ø 6 x 30  X2

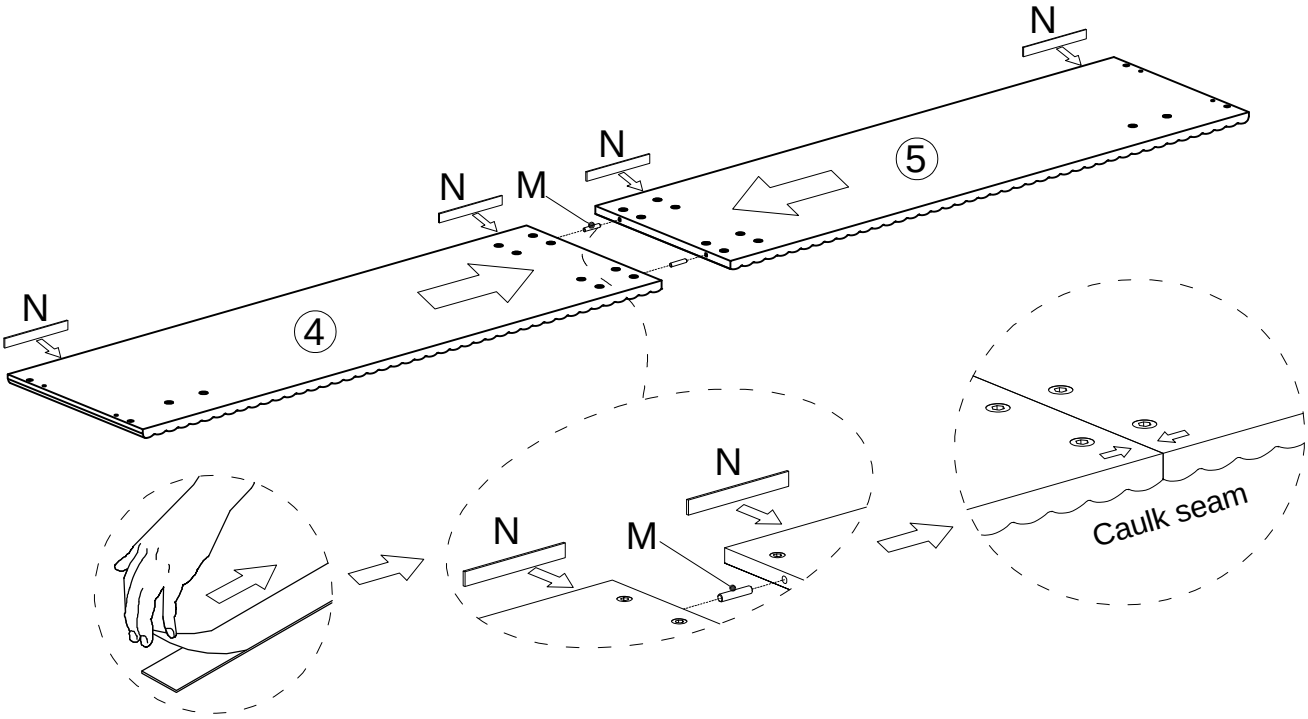


08

H	S	E	U	P
M6 x 35  X4	 X1	M6 x 12  X16	M4  X1	188x60x2  X2

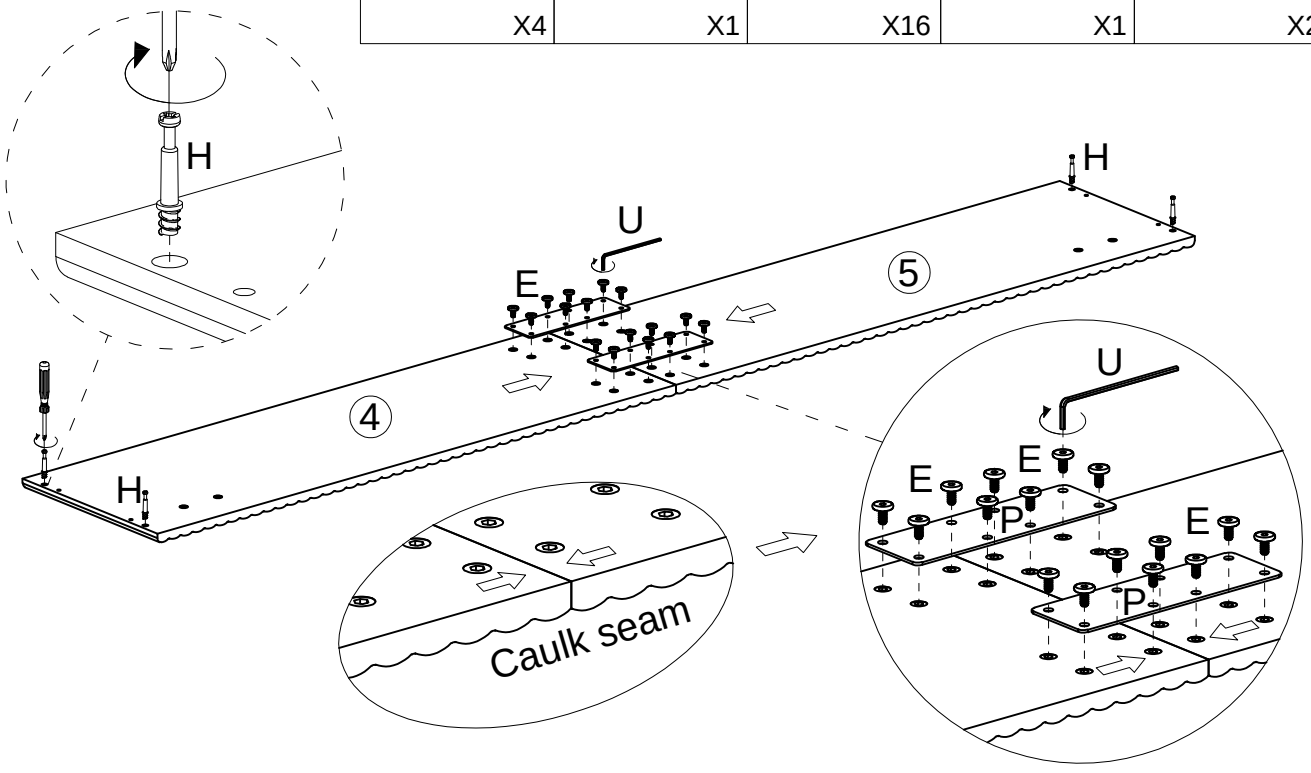


09

N	M
12 x 100	Ø 6 x 30
X8	X8

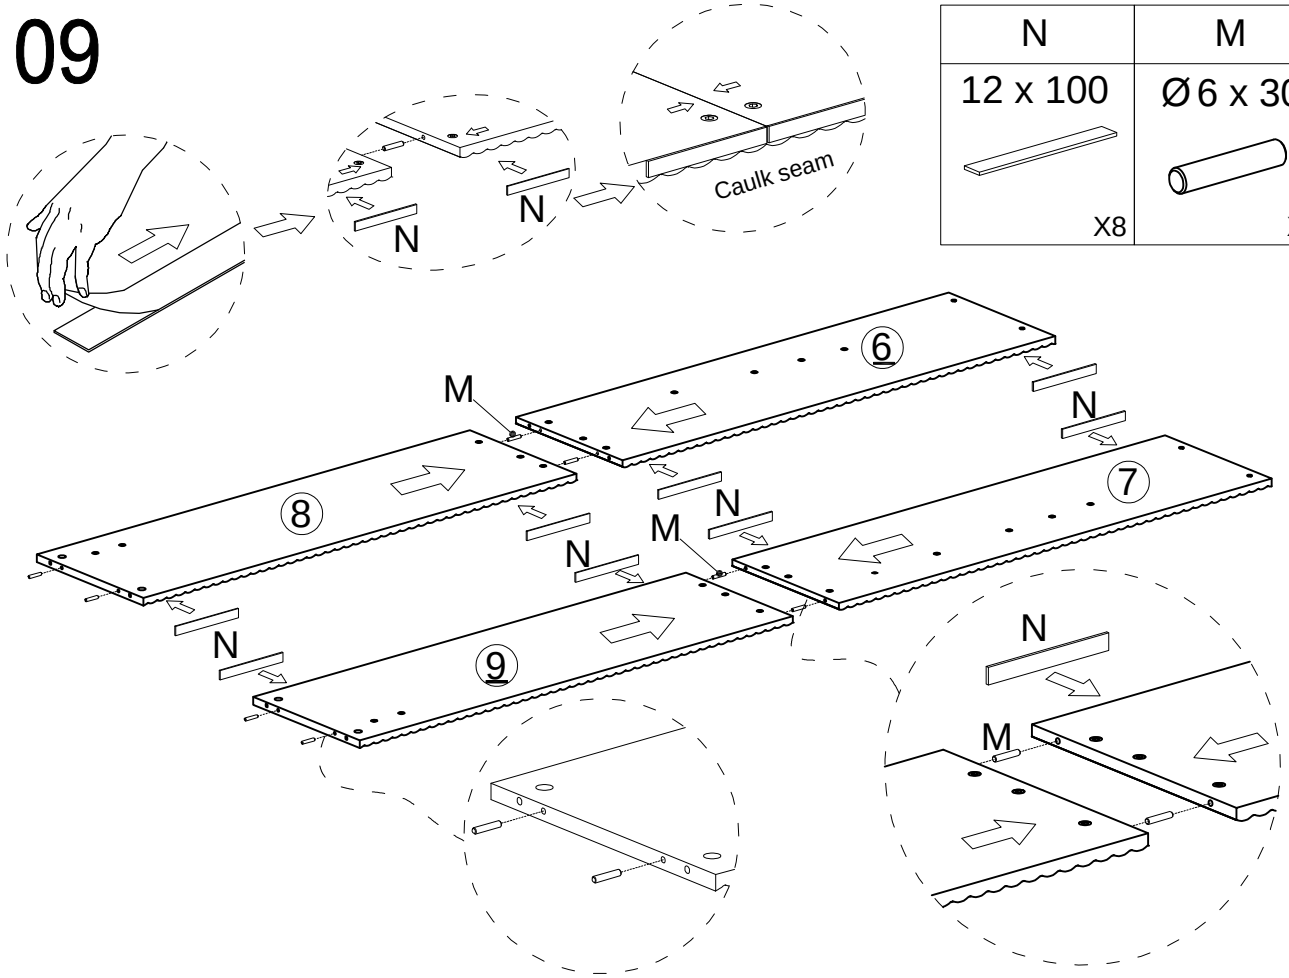


10

E	O	U
M6 x 12	84x60x1.5	M4
X8	X2	X1

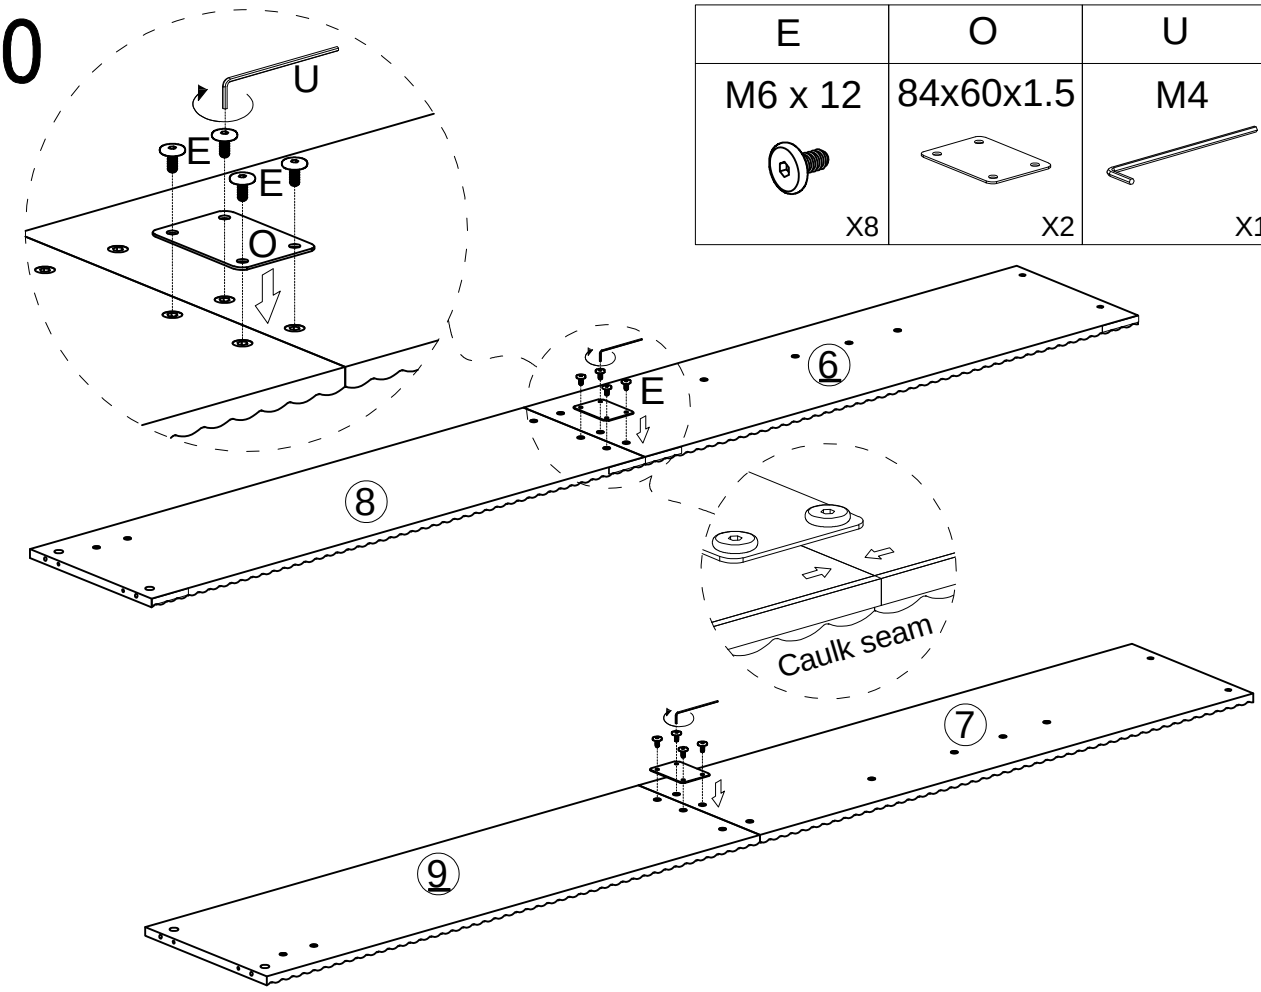


11

28	29	D	F	U
L750	L750	M6 x 18	Ø24 x 5	M4
				
X1	X1	X8	X8	X1

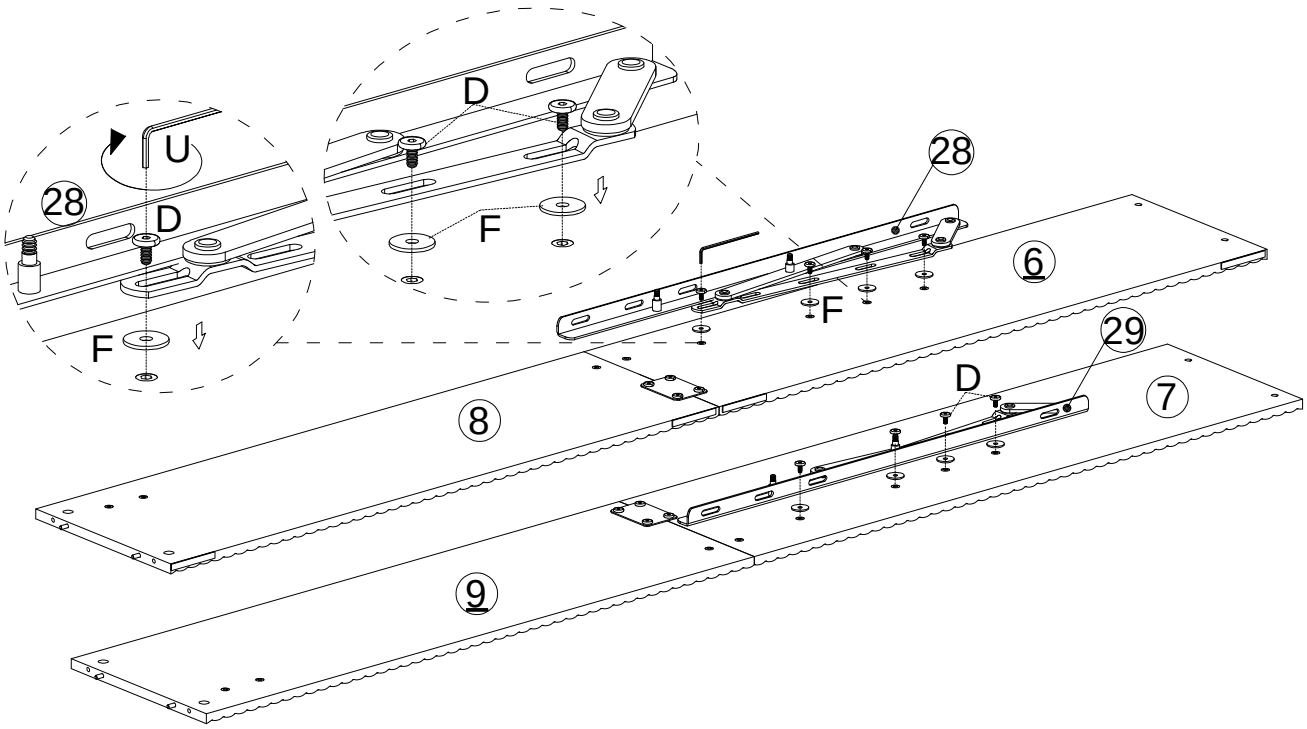

12


B	G	T	U
M6 x 40	M6 x 6	10 / 13	M4
			
X2	X2	X1	X1

13

When joining closely , tighten the screw clockwise again .


E	U
M6 x 12  X4	M4  X1

14

K	S
Ø15 x 9.5  X4	 X1

15

28	E	U
 X2	M6 x 12  X8	M4  X1

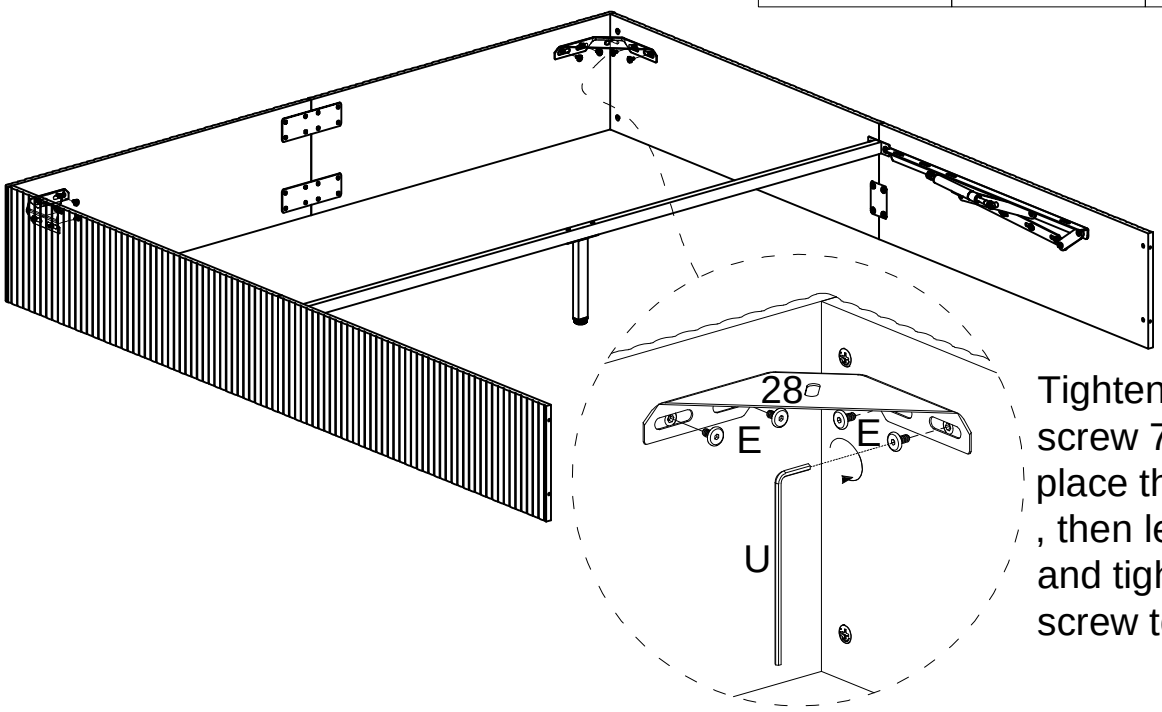


Tighten the screw 70%, place the frame , then level it and tighten the screw to 100%.

16


A	L	S	U
M6 x 50  X4	Ø9.8x10.5  X4	 X1	M4  X1

17

E	U
M6 x 12	M4
X2	X1

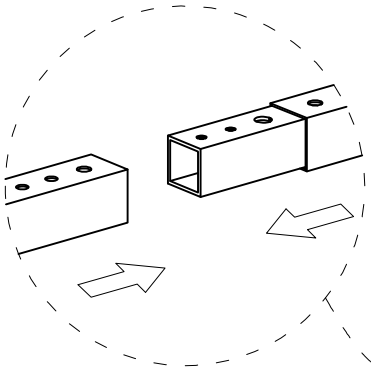

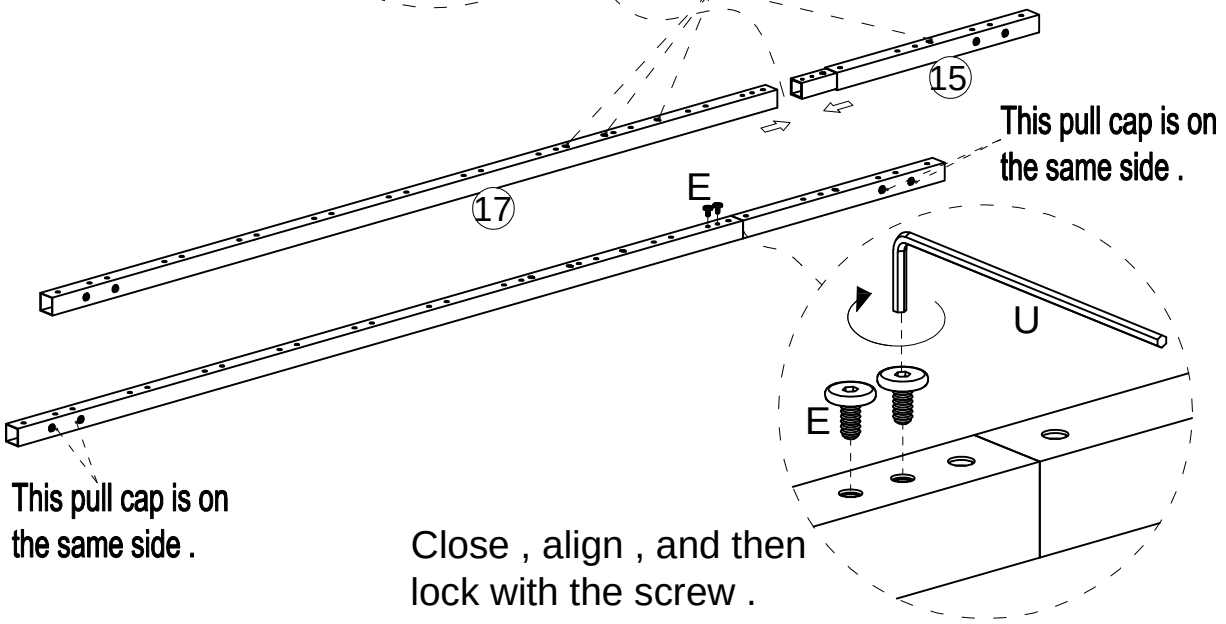
Note the position of the long holes during assembly .




Close , align , and then lock with the screw .

18

E	U
M6 x 12	M4
X2	X1

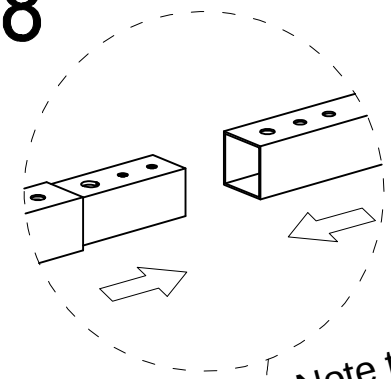

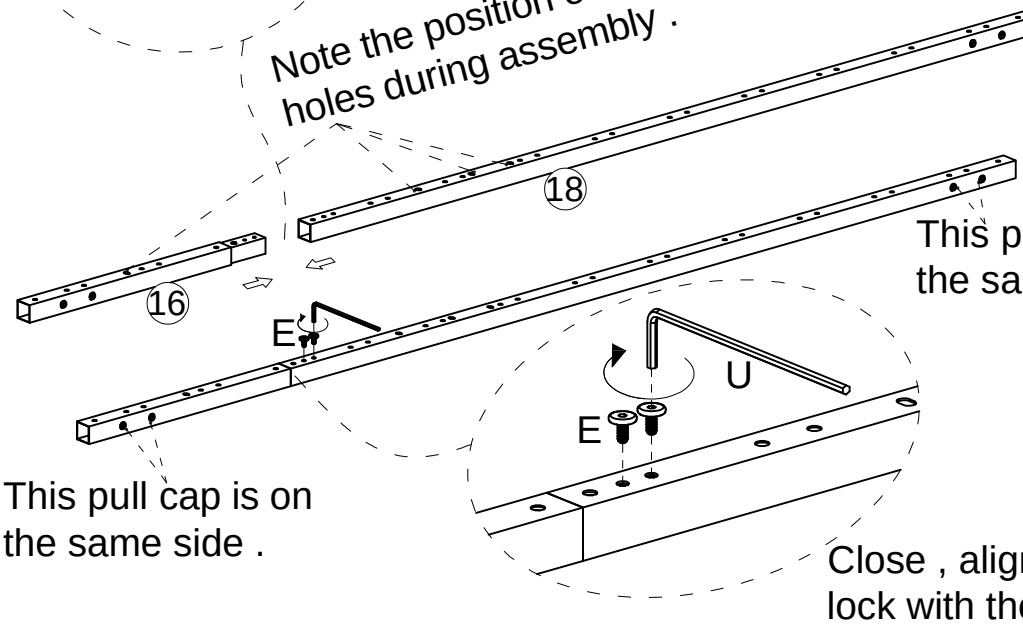
Note the position of the long holes during assembly .



Close , align , and then lock with the screw .

19


E	U
M6 x 12  X2	M4  X1

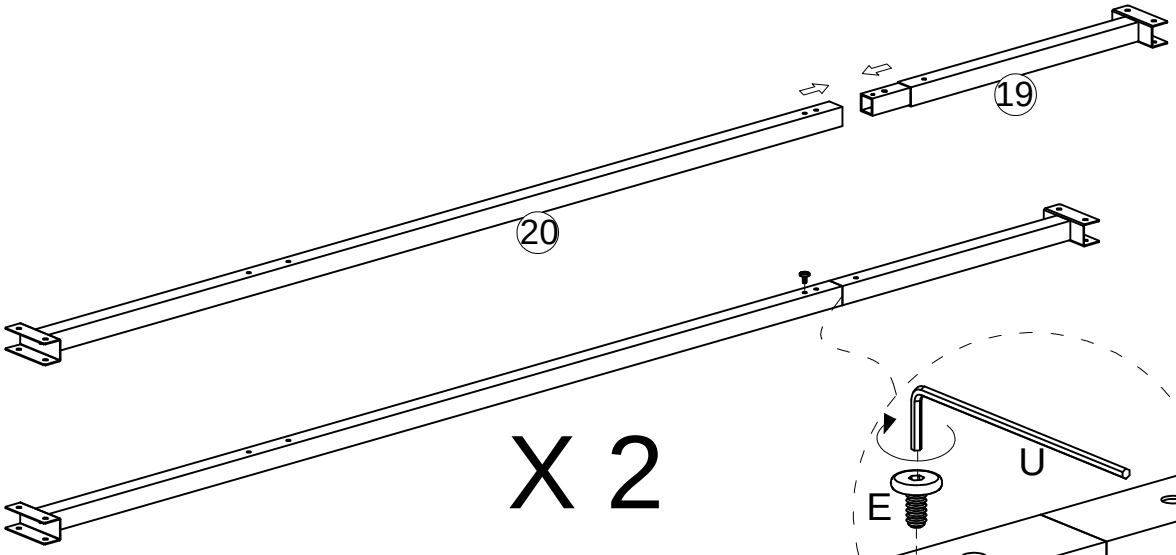

X 2

Close , align , and then lock with the screw .


20

B	G	U	T
M6 x 40  X8	M6 x 6  X8	M4  X1	 X1

X 2

21

Q	E	U
100 x 60 x 2  X2	M6 x 12  X4	M4  X1

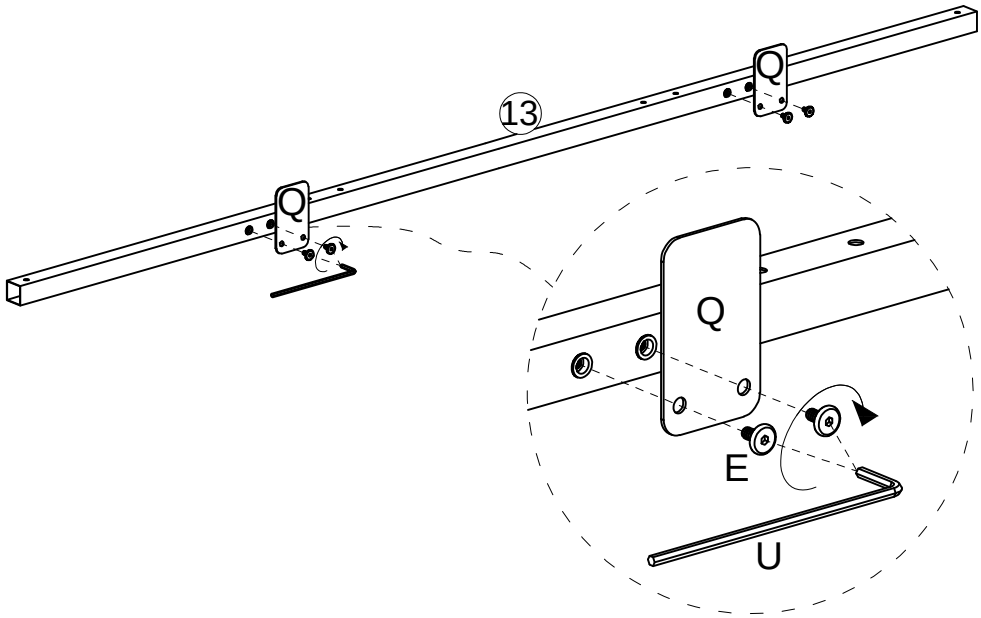


22

25	E	U
 X2	M6 x 12  X2	M4  X1


23

25	E	U
 X2	M6 x 12  X2	M4  X1

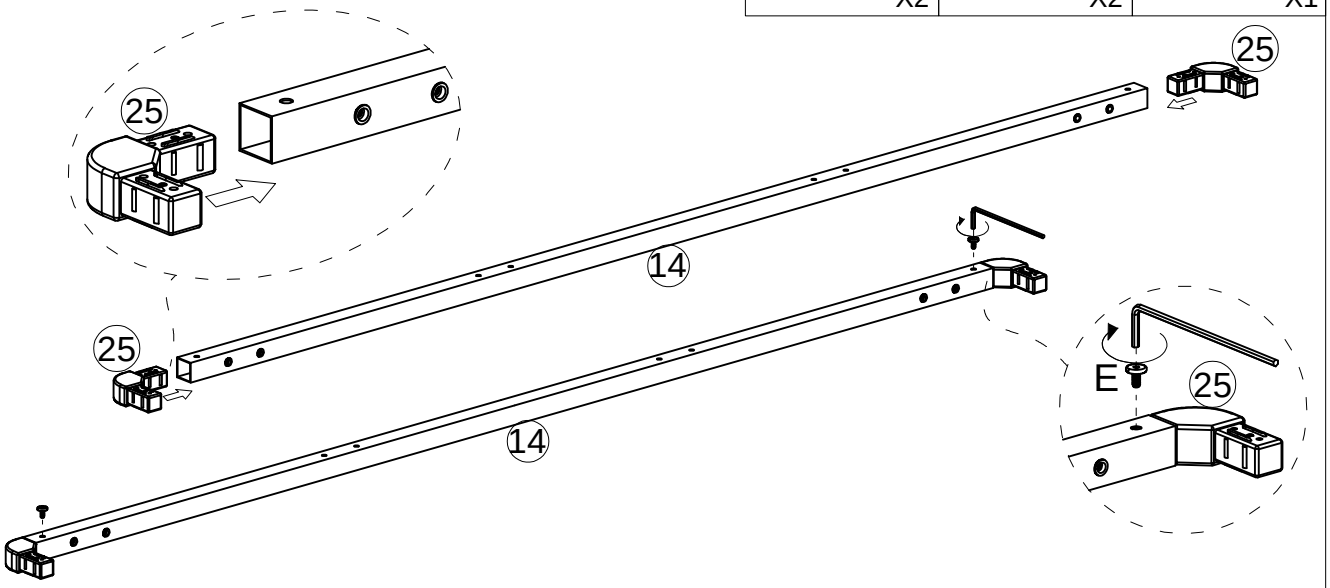


24

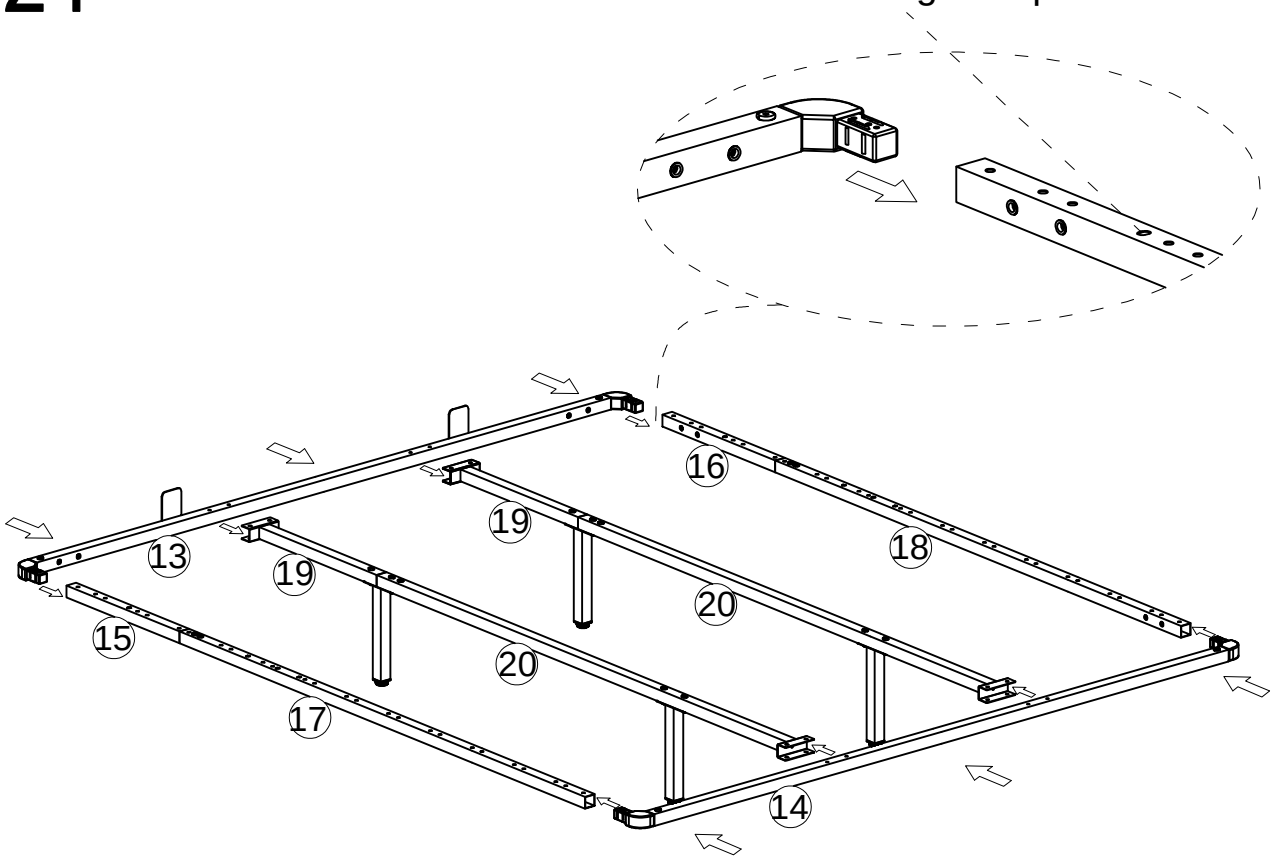The long hole points forward




26

B	E	G	T	U
M6 x 40	M6 x 12	M6 x 6		M4
X8	X4	X8	X1	X1

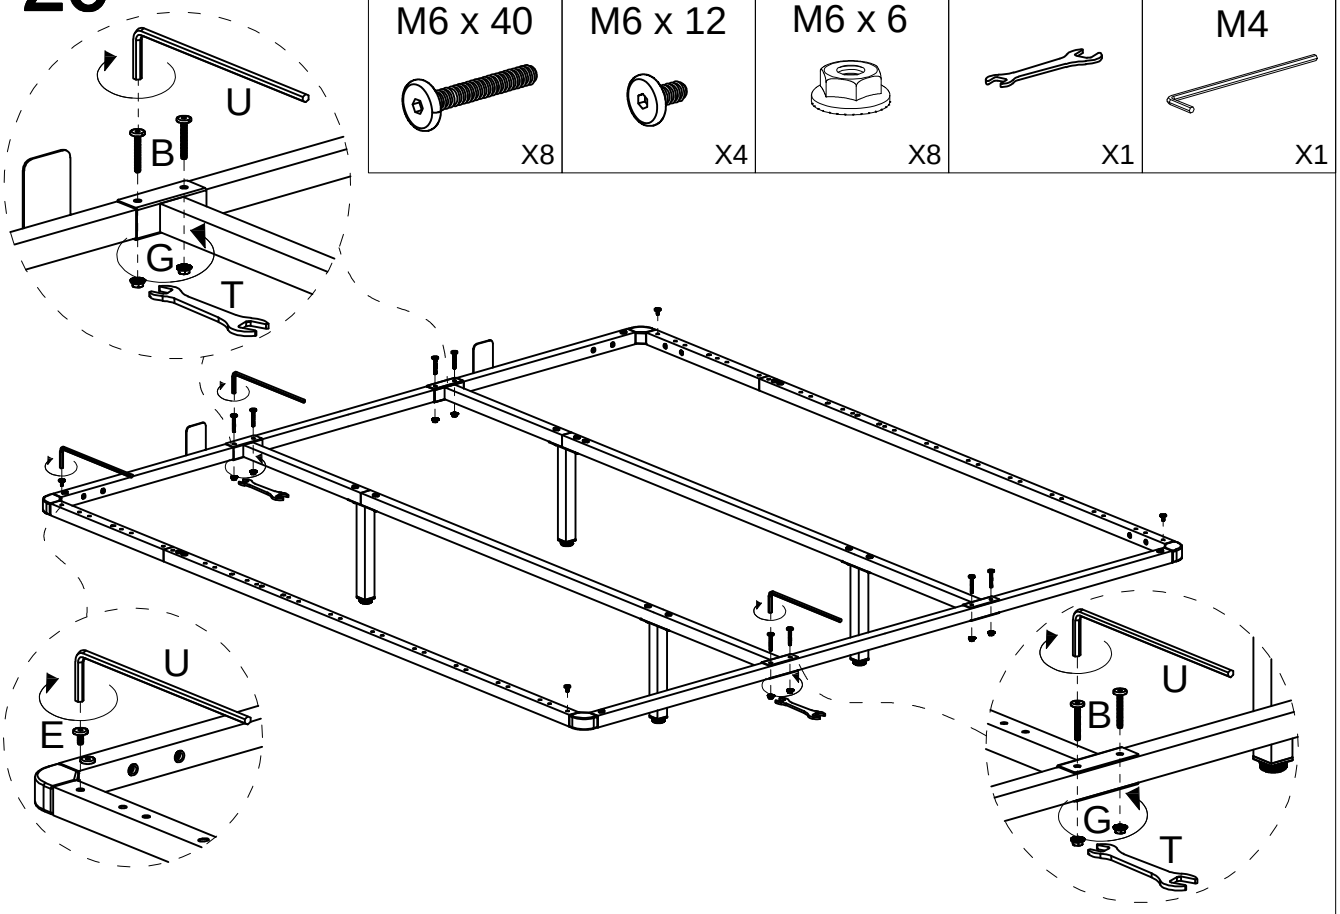


24	E	U
	M6 x 12	M4
X4	X16	X1

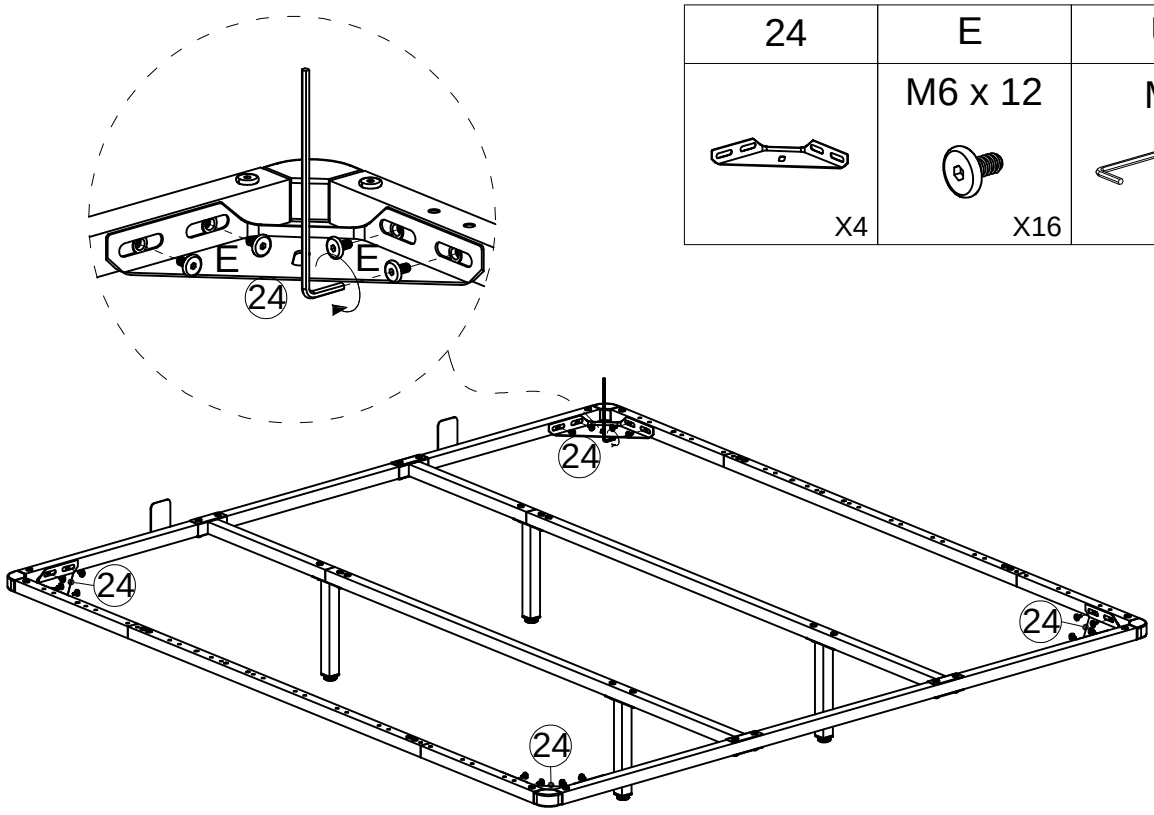


27


27

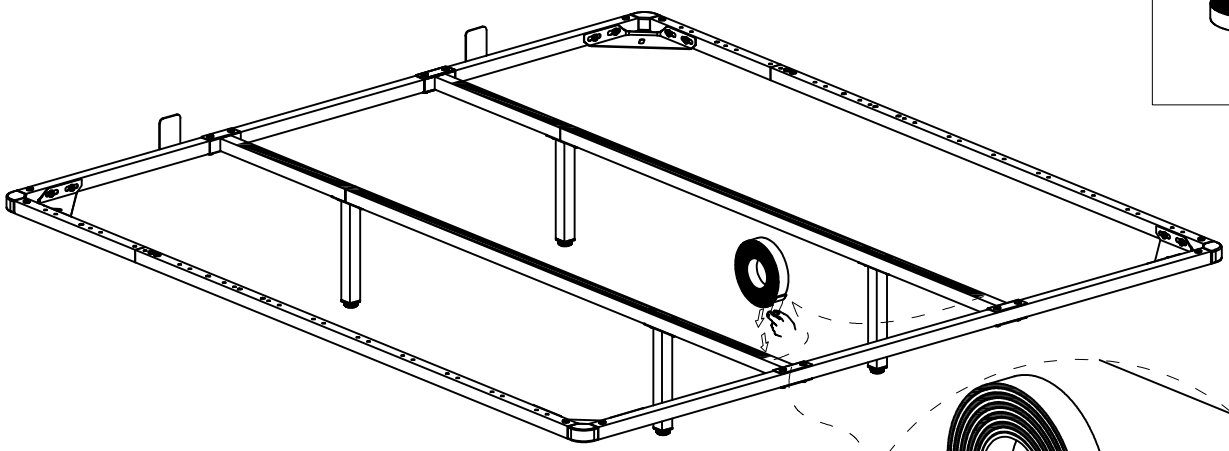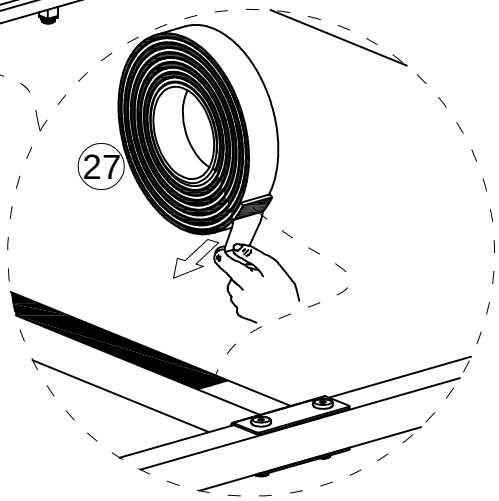X2








28

B	G	U	T
M6 x 40	M6 x 6	M4	
			
X8	X8	X1	X1

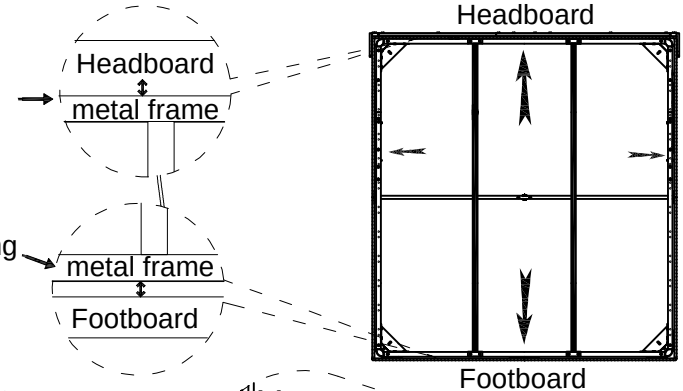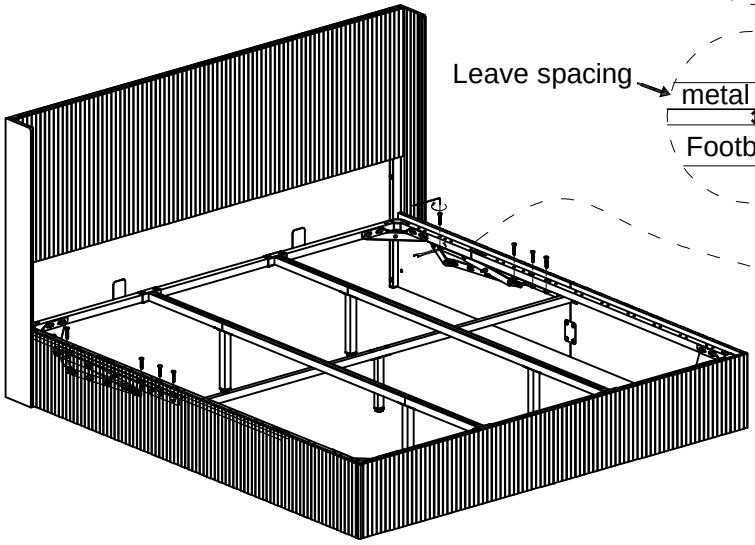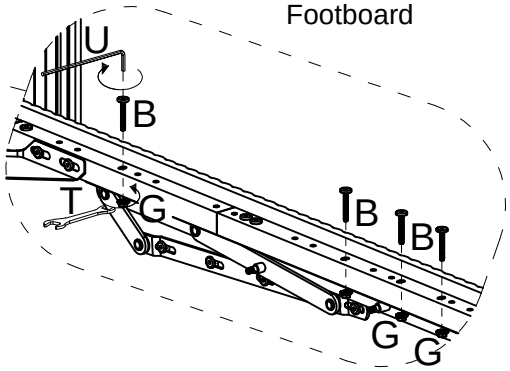Place the frame in the center position , lock the screw and nut to 70%, adjust the clearance on the left , right , front and b ack , and then lock it to 100%









29


30	R	T
X1	X4	X1

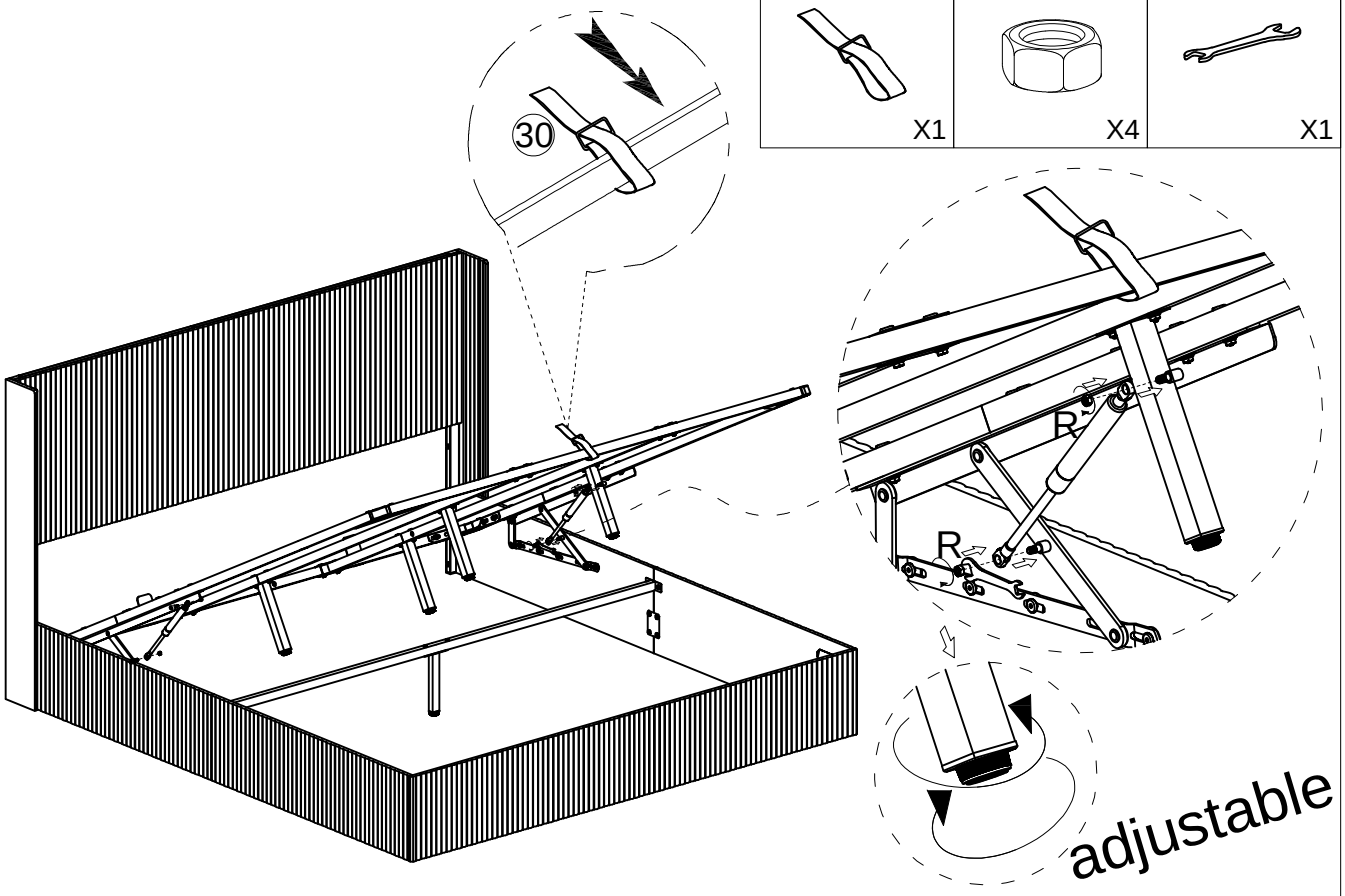


26
X24

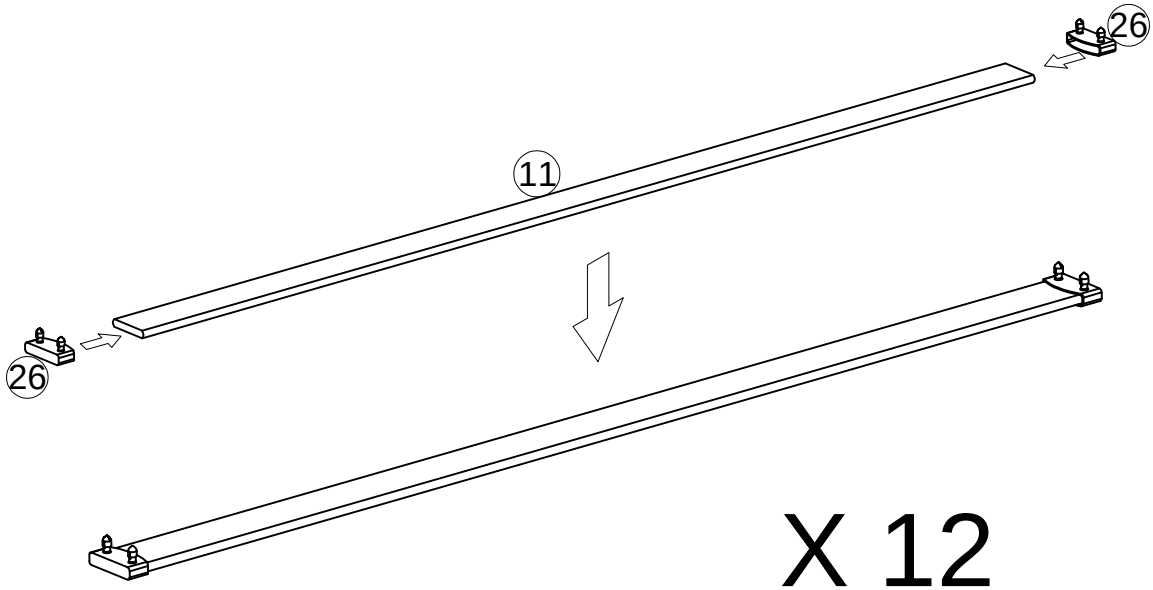

31

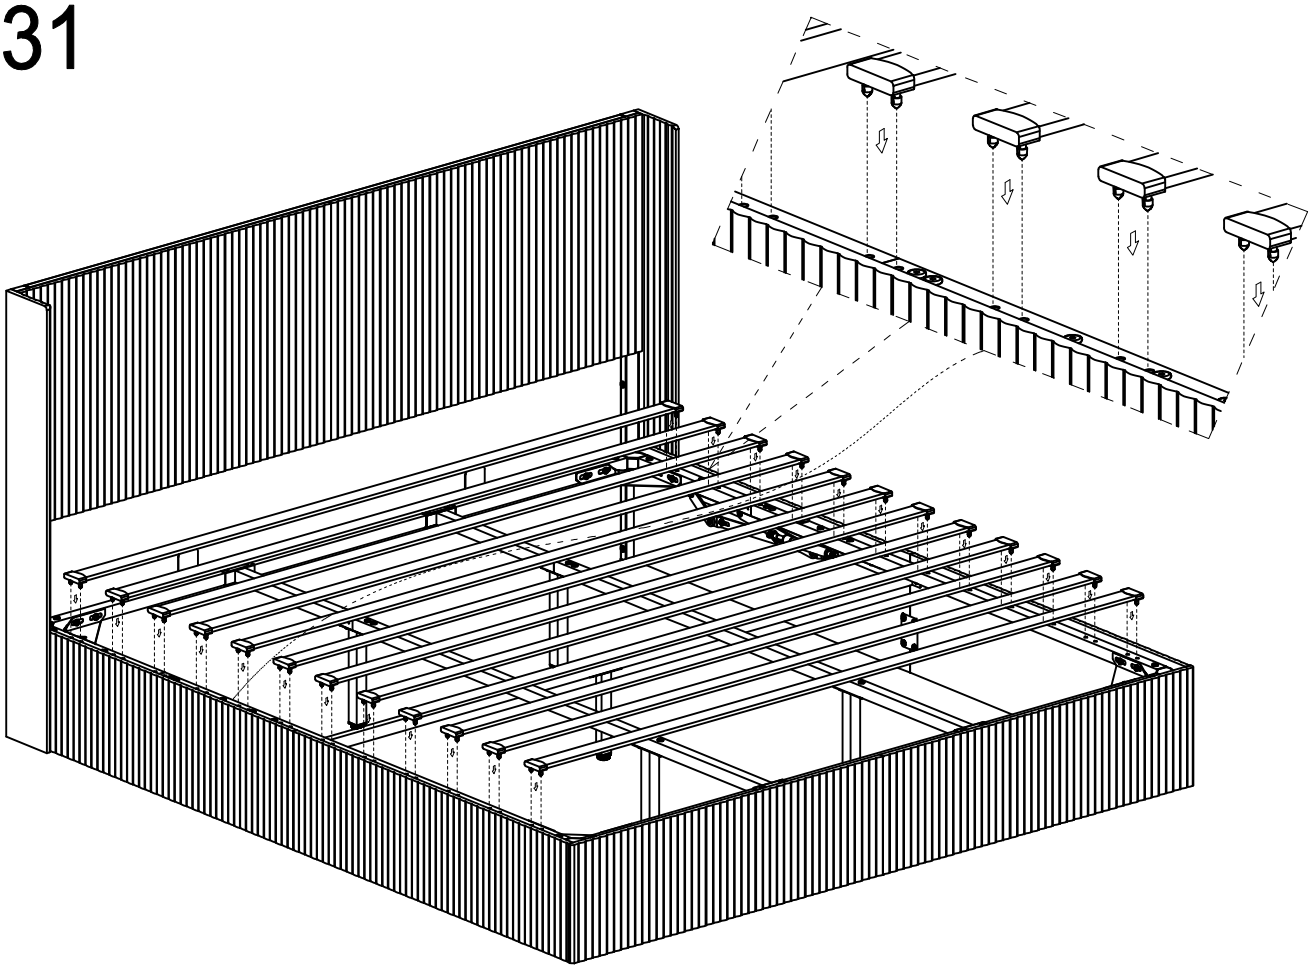

32

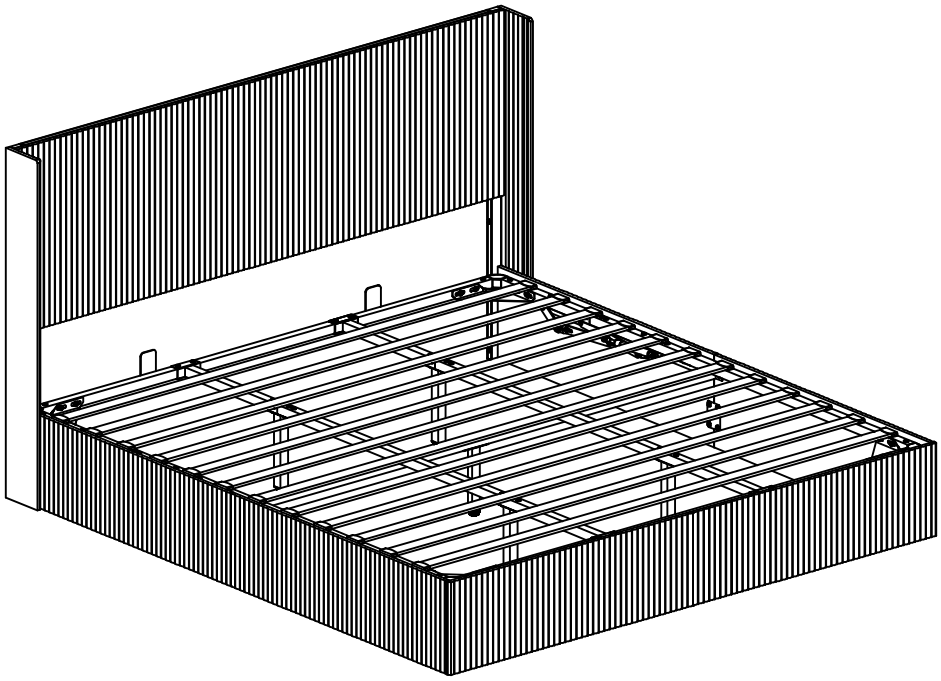

Note : When adjusting , clockwise rotation means locking , and counterclockwise rotation means loosening .