


ASSEMBLY INSTRUCTIONS

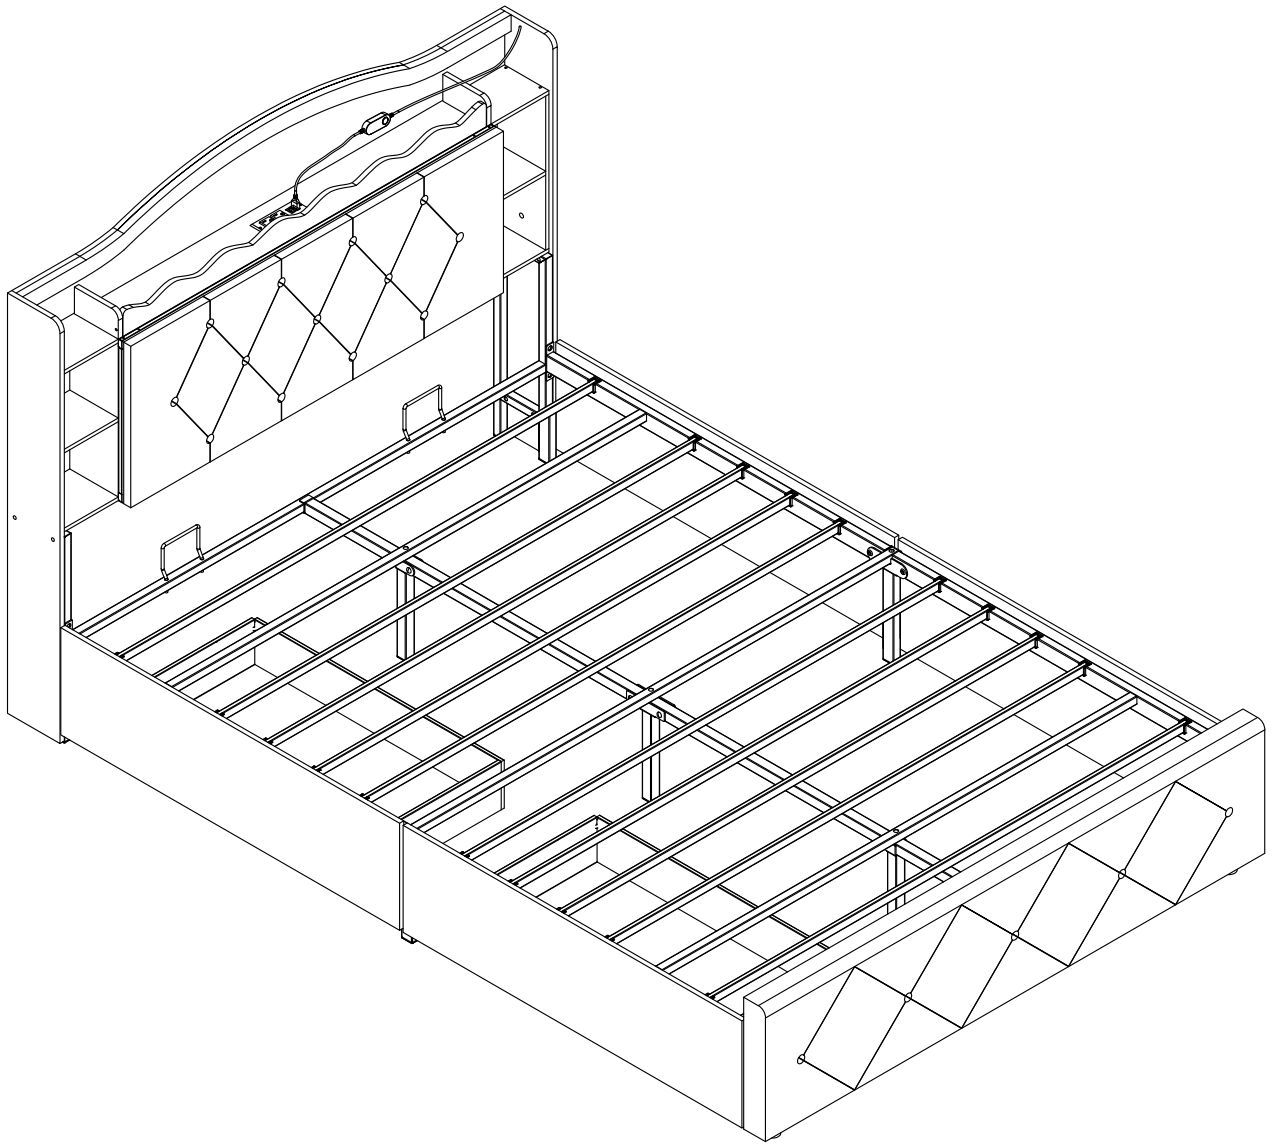


Should be assembled on flat ground
to keep balance.
It needs at least two people to install

AJ_DJ505671_1
AJ_DJ505672_1

Package Contents

Plates and iron components | Assembly tool kit | Instruction manual


Precautions

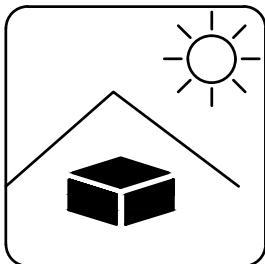


1. Avoid long-term direct sunlight exposure




2. Stay away from fire

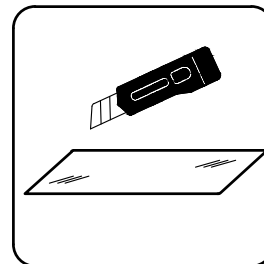


3. Keep away from sharp objects

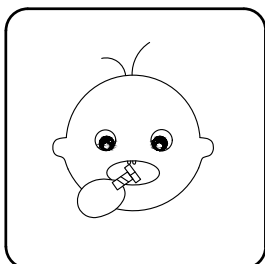


4. Keep infants/children away from assembly parts to avoid choking and suffocation.

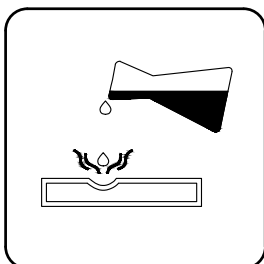


5. Keep away from corrosive substances

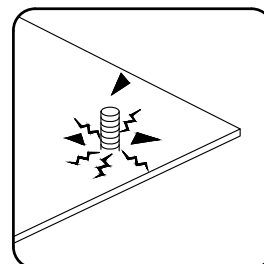


6. Please use the correct screws, otherwise the plate will be damaged.

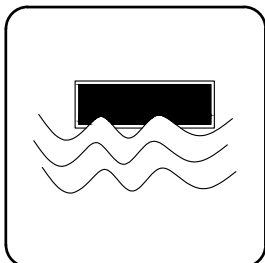

7. Prevent objects from being damaged by immersion in water

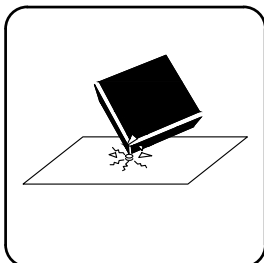

8. Prevent object collision and damage

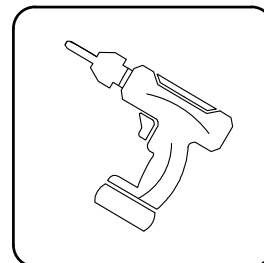

9. It is recommended to use an electric screwdriver for installation. Please be careful not to set the speed too high.

Problems You May Encounter

PART	PROBLEM	SOLUTION
------	---------	----------

Whole Product

Parts are missing, defective or having wrong parts in package.

You can contact us and we will get back to you within 24 hours

Having issue(s) while reading the instruction or completing the assembly.

Feel free to contact us and we will get back to you within 24 hours.

Encountering non-human caused damage during usage.

If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

Product Surface

Board Surface is broken, scratched or lack of some screw holes.

Feel free to contact us and we will get back to you within 24 hours.

The screw holes on the wooden board and other wooden boards are not aligned.

1. Please tighten the screws on the board by 70 %, do not tighten completely.
2. Adjust the wooden board and board. Until the holes are arranged neatly, then tighten all screws

table top misalignment and unevenness

1. Please tighten the screws connecting two table boards by 70%, do not tighten them completely, so that to facilitate subsequent installation and adjustment.
2. It will be easier to adjust the gaps between the two tabletop panels after the overall installation is completed. So we advice to tighten the screws, after whole installation.
3. If your problem still can ' t be solved , please feel free to contact us .

Metal accessories

Metal accessories are damaged, rusted, bent, and broken.

Feel free to contact us and we will get back to you within 24 hours.

unstable after being assembled.


1. Check if the screws are tightened.
2. Read throughout the manual, check if there are any parts installed incorrectly or some parts are missed to be installed.
3. If the problem still can't be solved, please feel free to contact us.

Encountering non-human caused damage during usage.


If the product is damaged due to non-human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

Parts List :


⚠ Pls make sure all the accesories are complete!

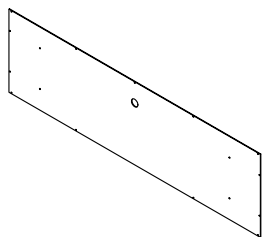


1 x1

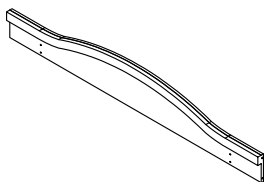


2 x1

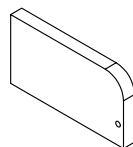

3 x2

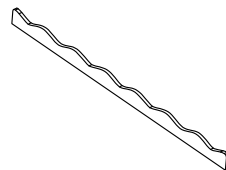

4 x1

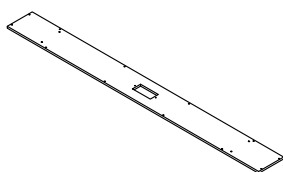


5 x1



6 x1




7 x2

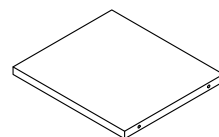

8 x2




9 x1




10 x1




11 x1

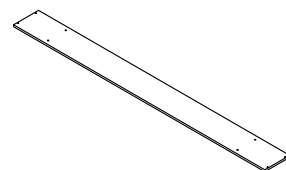

12 x1

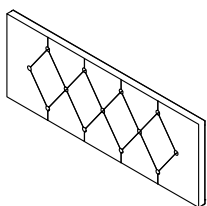


13 x1




14 x1




15 x1

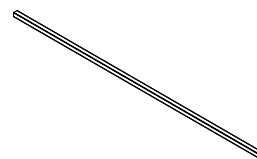


16 x1

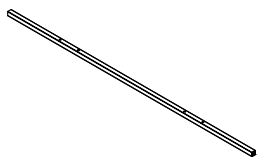


17 x1



18 x2

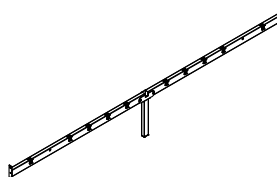


19 x2

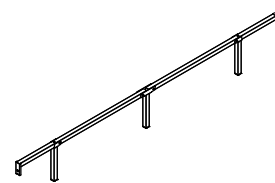


20 x1

Parts List :


⚠ Pls make sure all the accesories are complete!

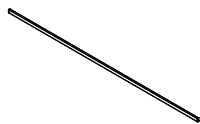


21 x10

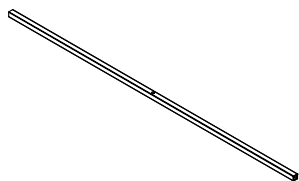


22 x2

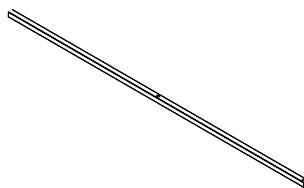


23 x1

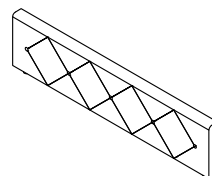


24 x1

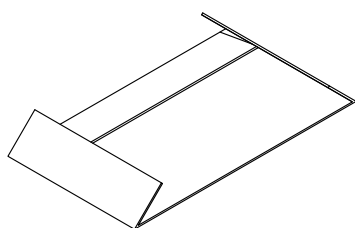


25 x2

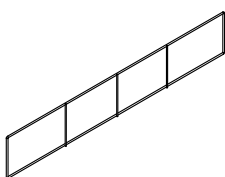


26 x2

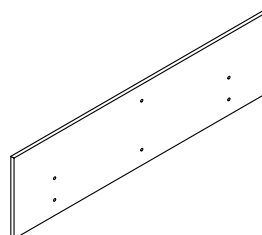


27 x2

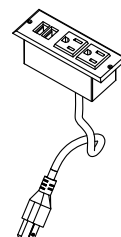

28 x1

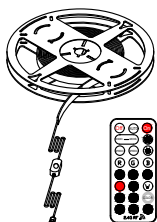

29 x1

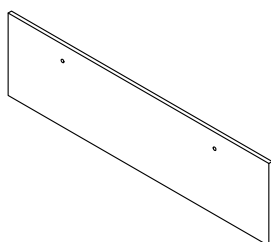


30 x2

Hardware List :


⚠ Pls make sure all the accesories are complete!

A



M6*10mm 10+1PCS


B



φ 13


2PCS

C



M6*30mm 12+1PCS

D




M6*35mm 4PCS

E




M8*10mm 8+1PCS

F




M8*20mm 13+2PCS

G




M8*30mm 5PCS

H




M8*55mm 5PCS

I



M6*15mm 2PCS

J




ST4*35mm 56+3PCS

K




ST3*12mm 2+3PCS

L



4PCS

M



S5 1PC

N




1PC

O




1PC

P




2PCS

Q




2PCS

R

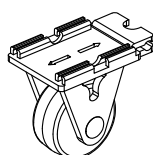

8PCS


S



10PCS

Note:


1. should be assembled on flat ground to keep ballance.
2. Before completing the installation,do not tighten the screws.

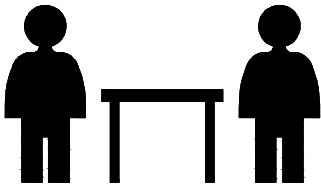

It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions

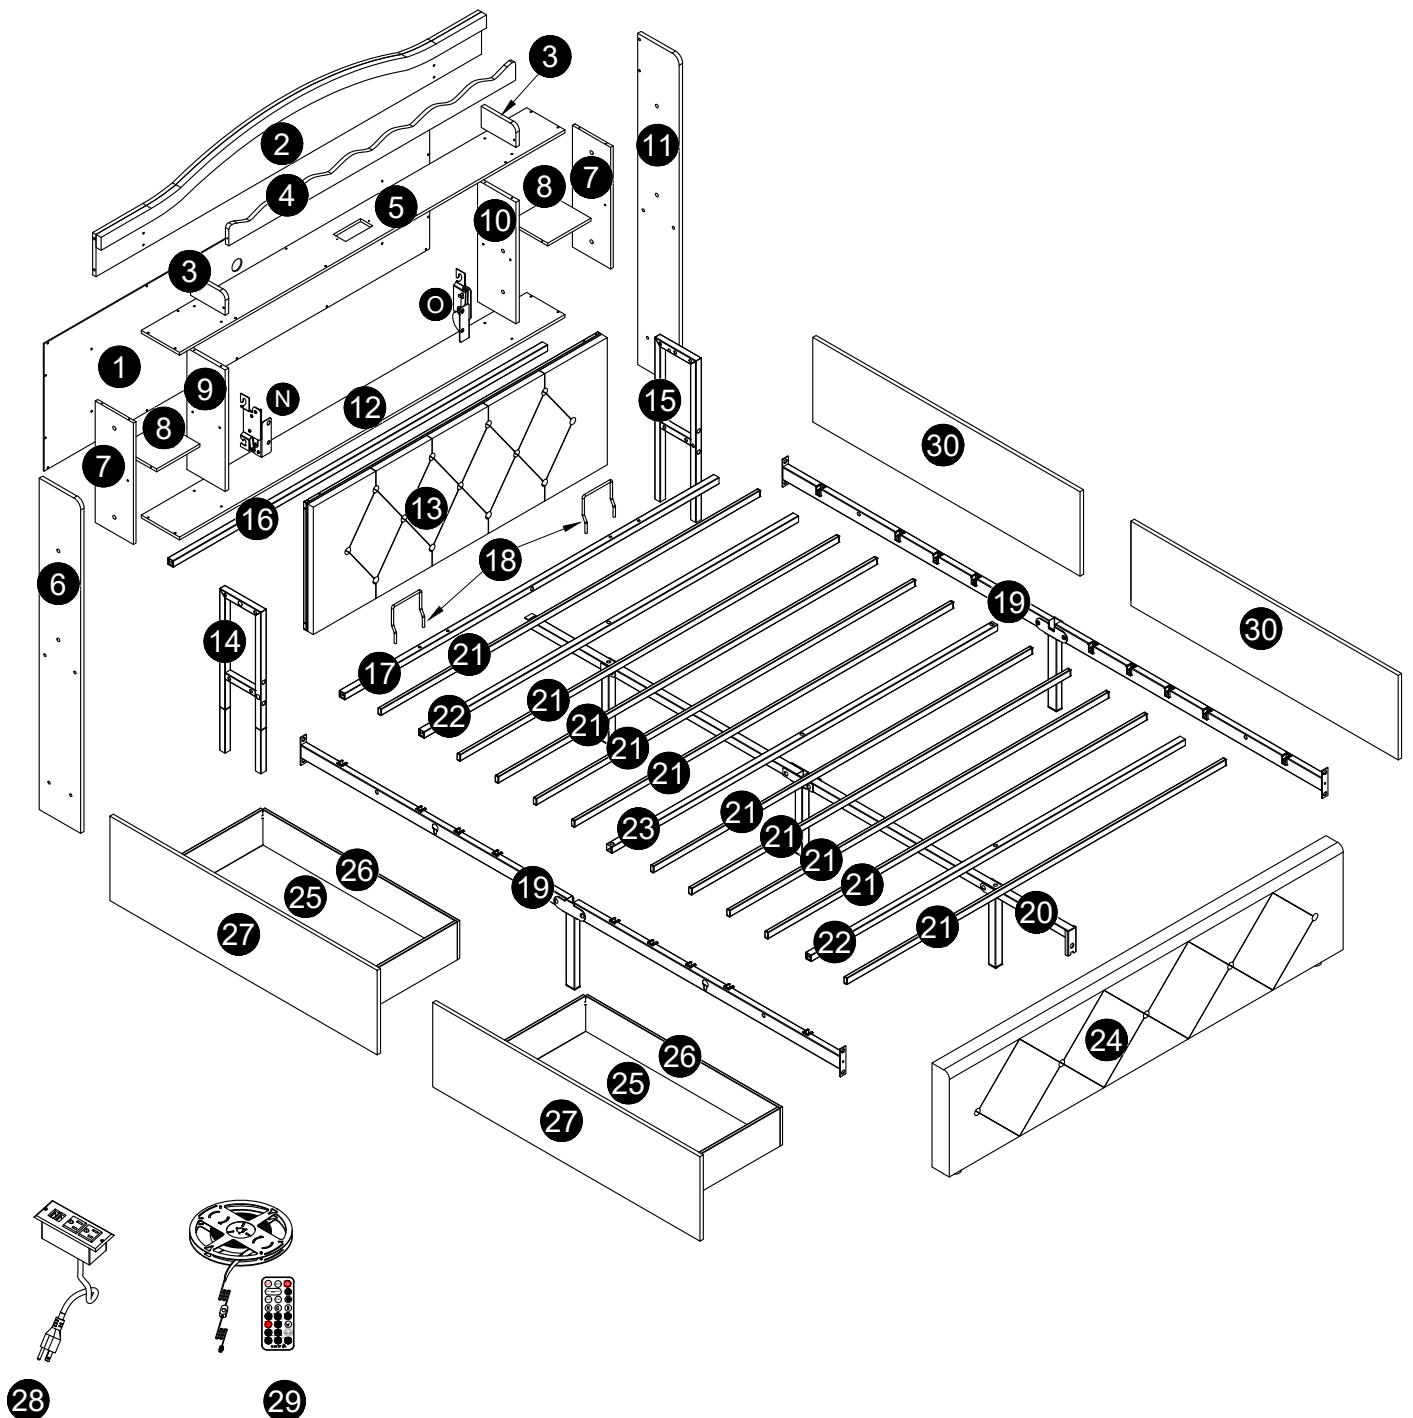


J x8  ST4*35mm

1

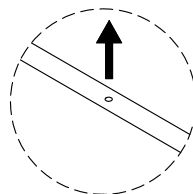

The small holes face the same direction.

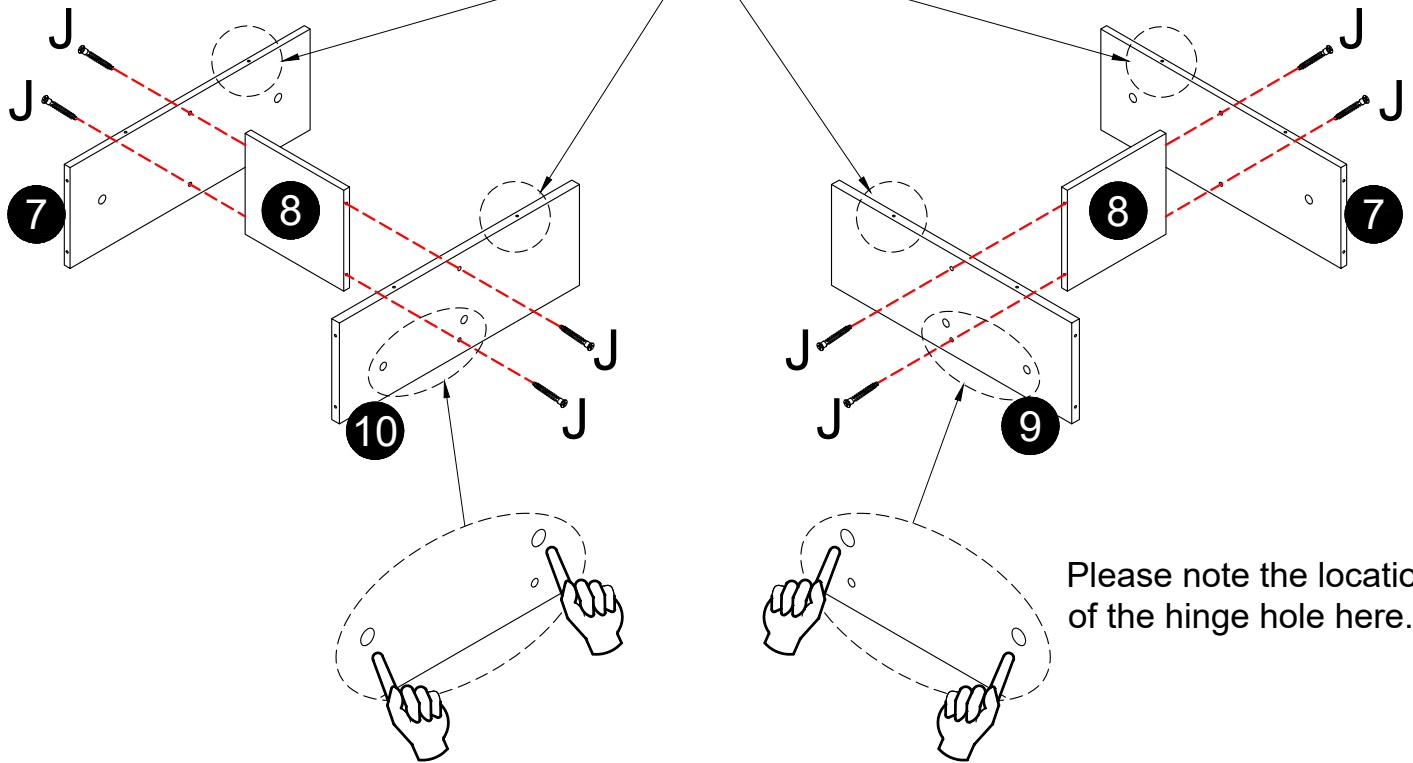


Please note the location of the hinge hole here.

J x8  ST4*35mm


2

The small holes face the same direction.

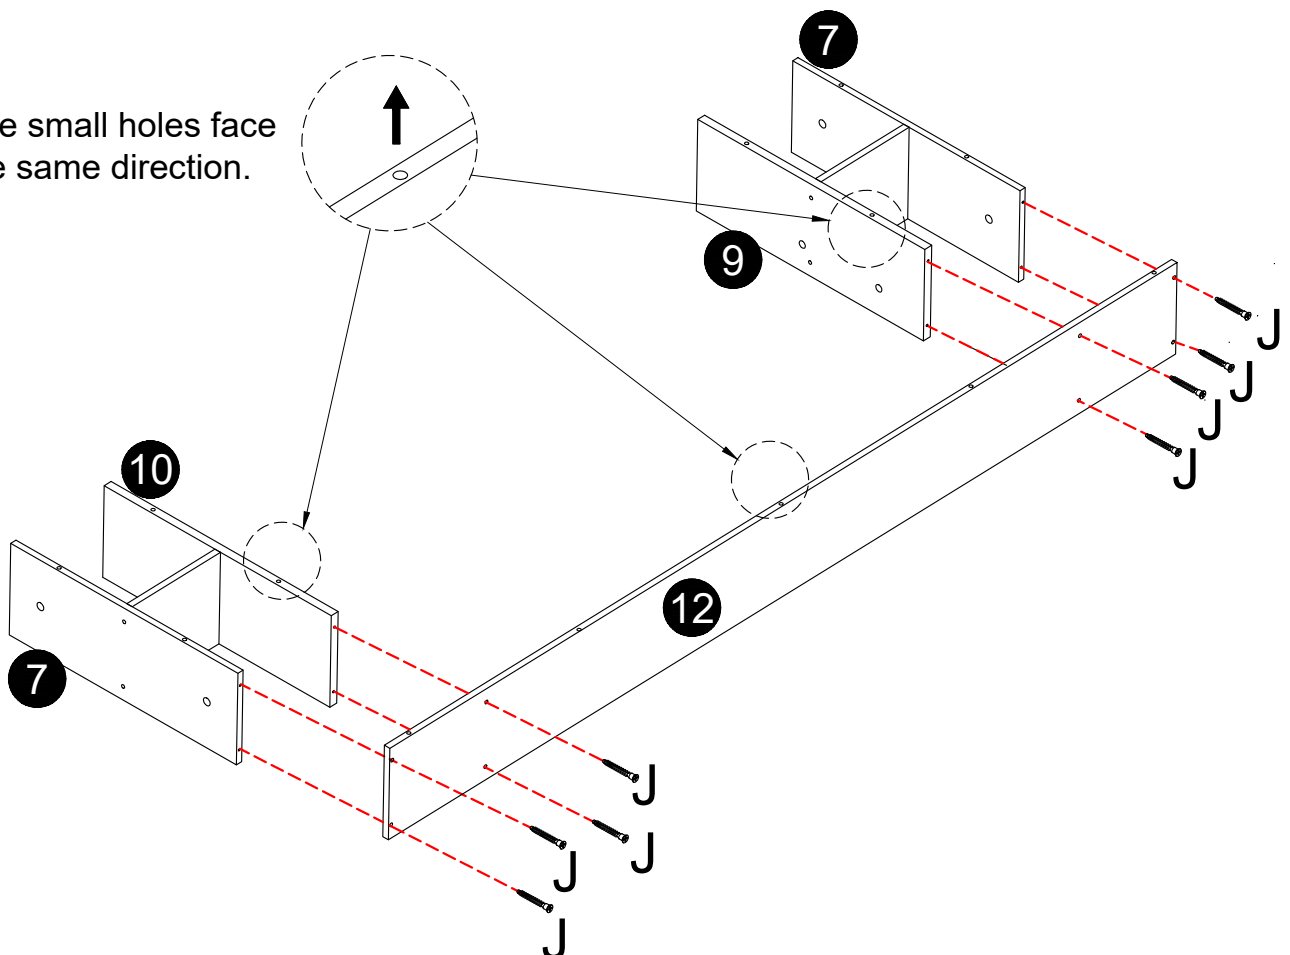


J x8
ST4*35mm

Screw holes facing upwards

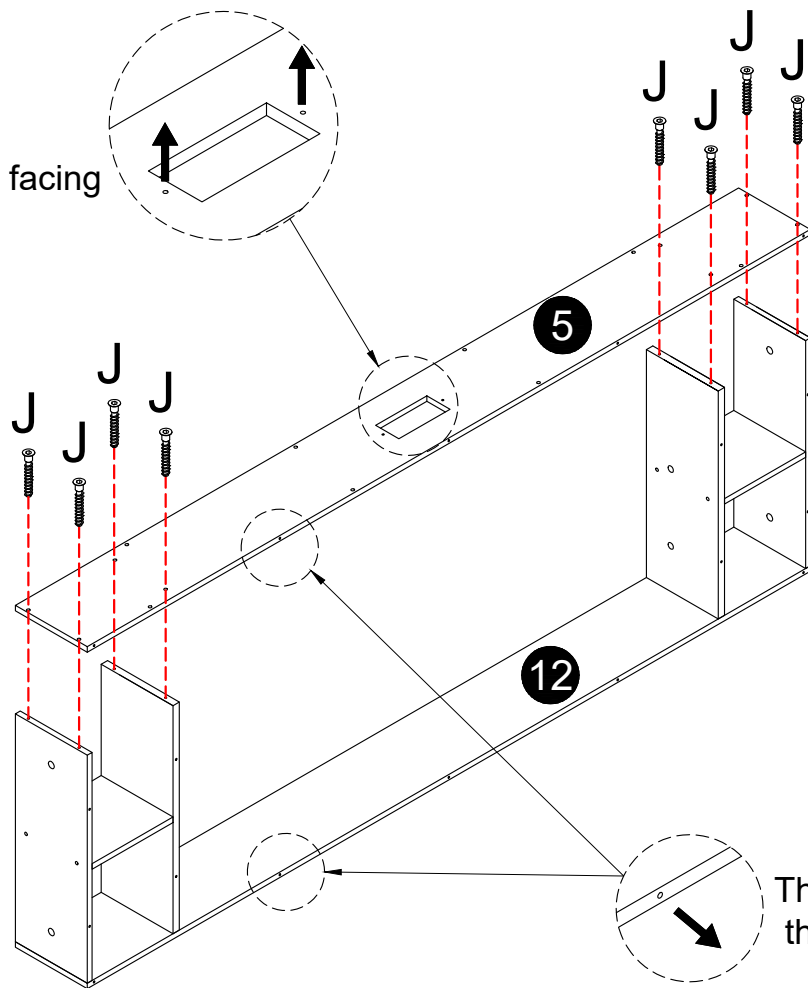


The small holes face the same direction.

J x8
ST4*35mm

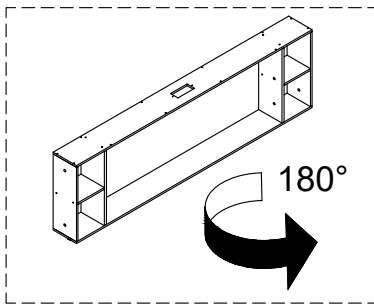


Rotate the box 180° so that the nail holes face backward.

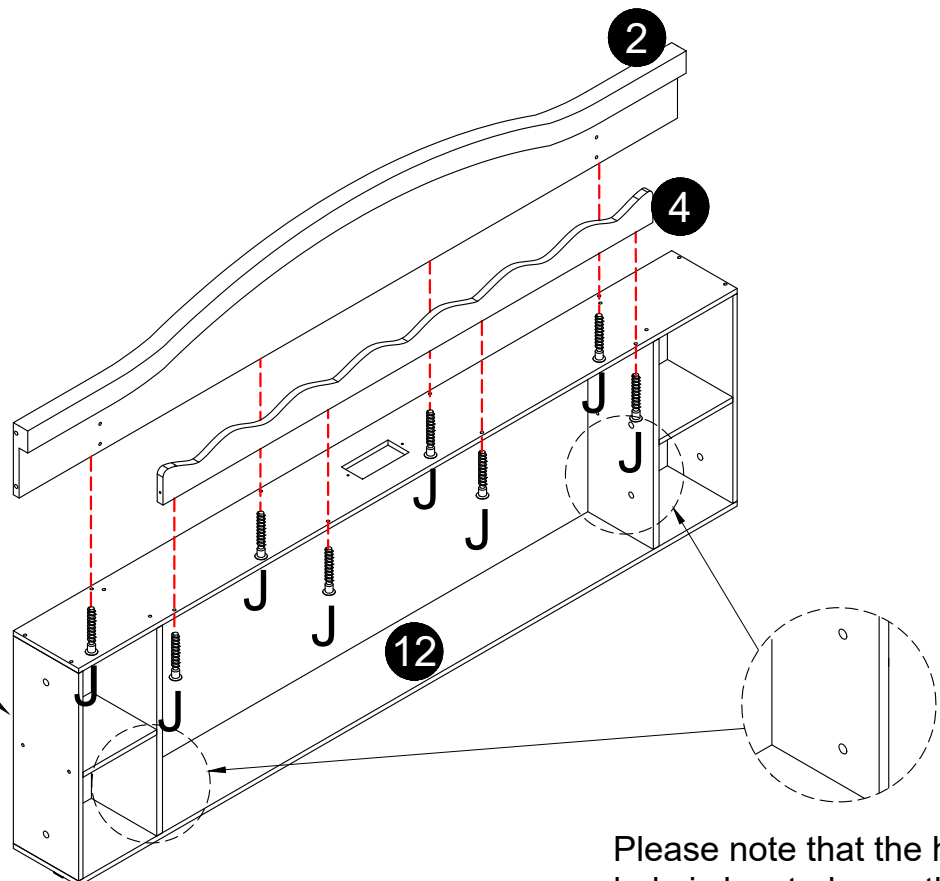


Please note that the hinge hole is located near the front.


J x6
ST4*35mm

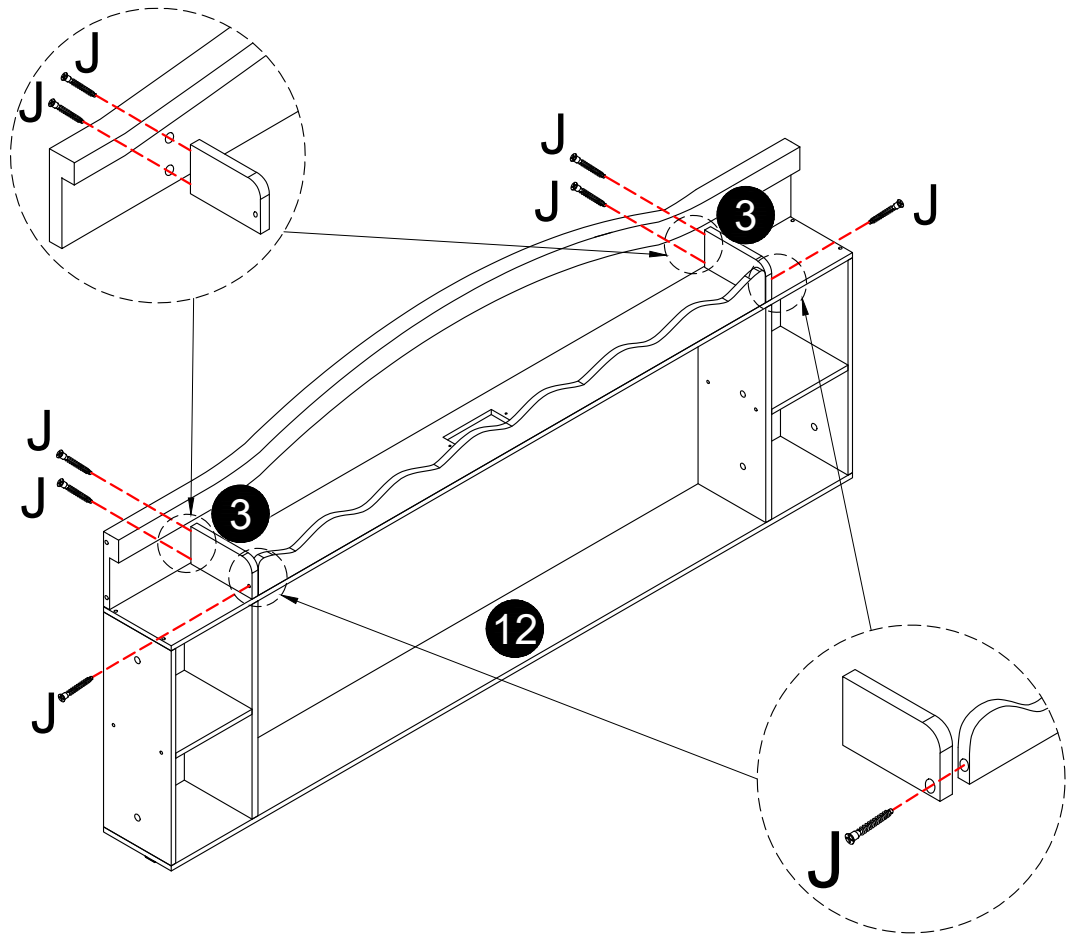



C x4
M6*30mm

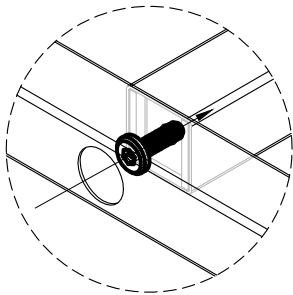


Tighten the screw through the large hole

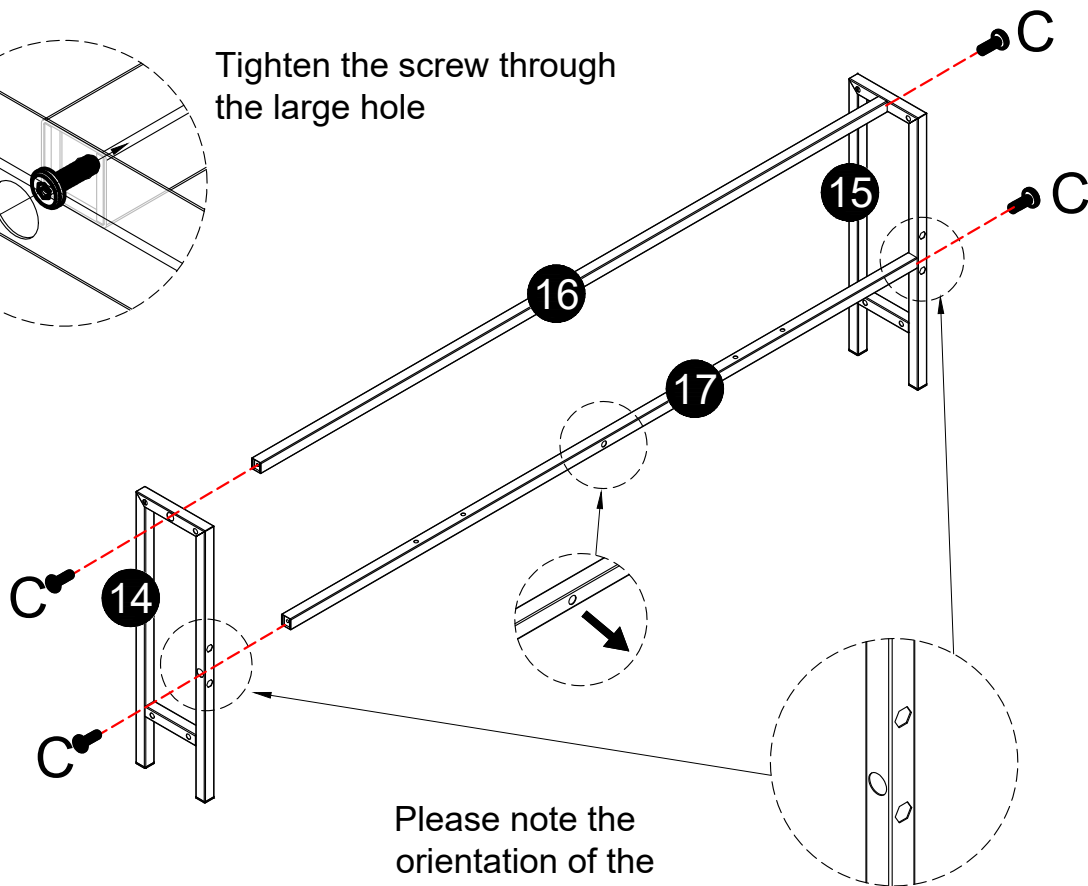

Please note the orientation of the hole.

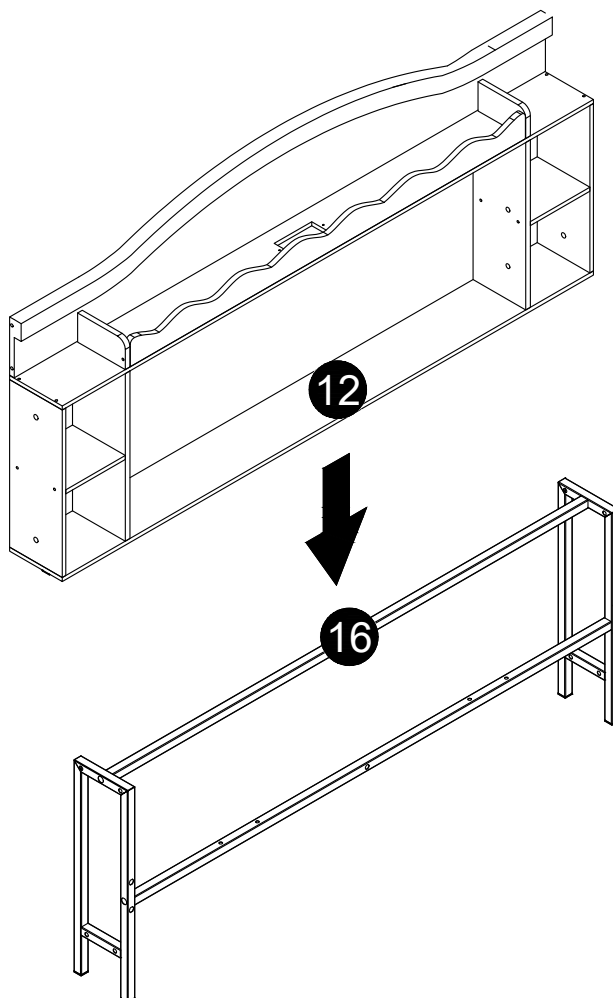
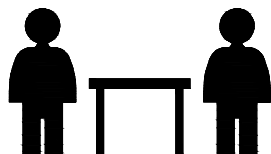


- C** x8  M6*30mm
- F** x4  M8*20mm
- L** x4  M6*30mm

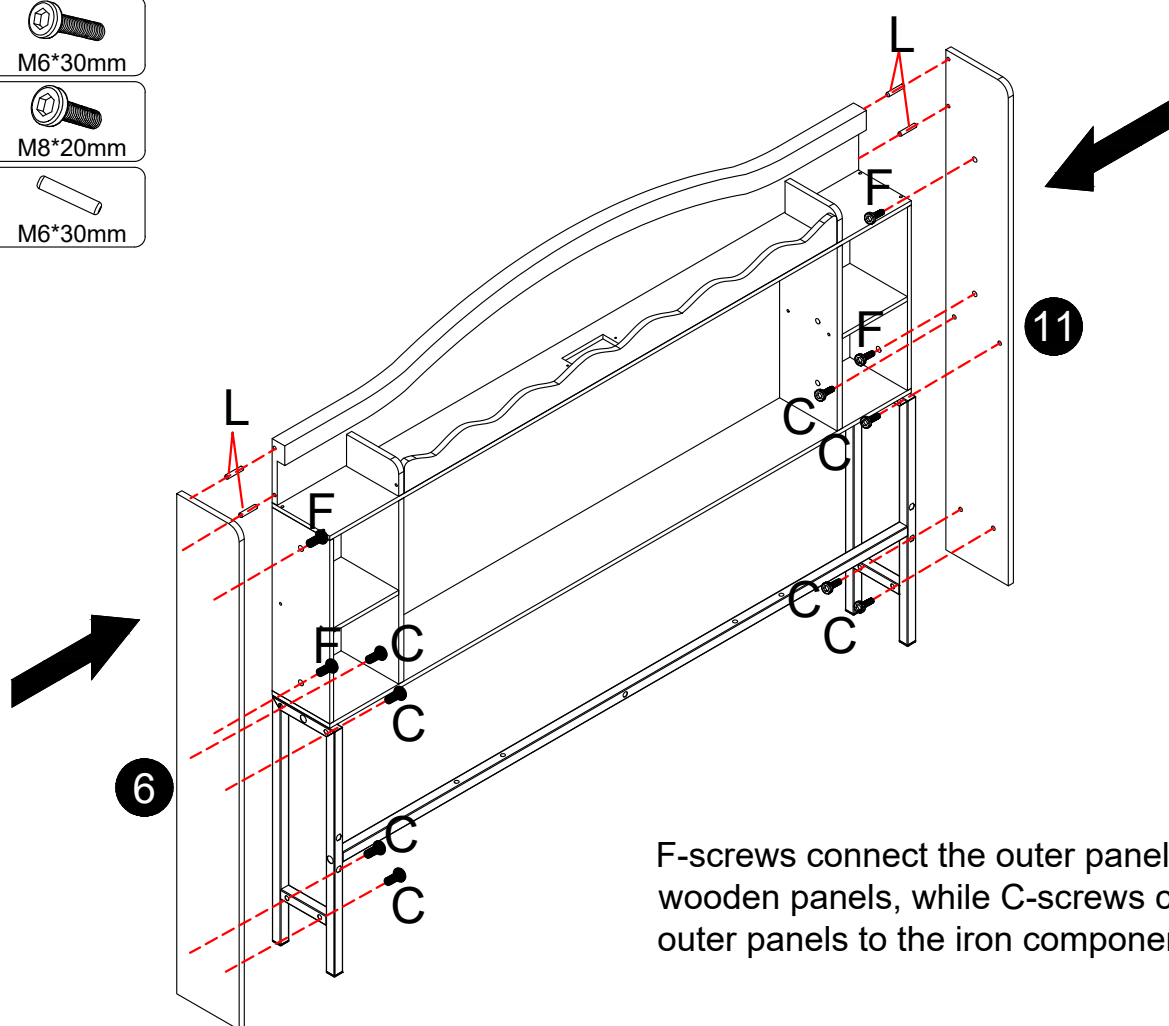


F-screws connect the outer panels to the wooden panels, while C-screws connect the outer panels to the iron components.


- E** x4  M8*10mm
- N** x1 
- O** x1 

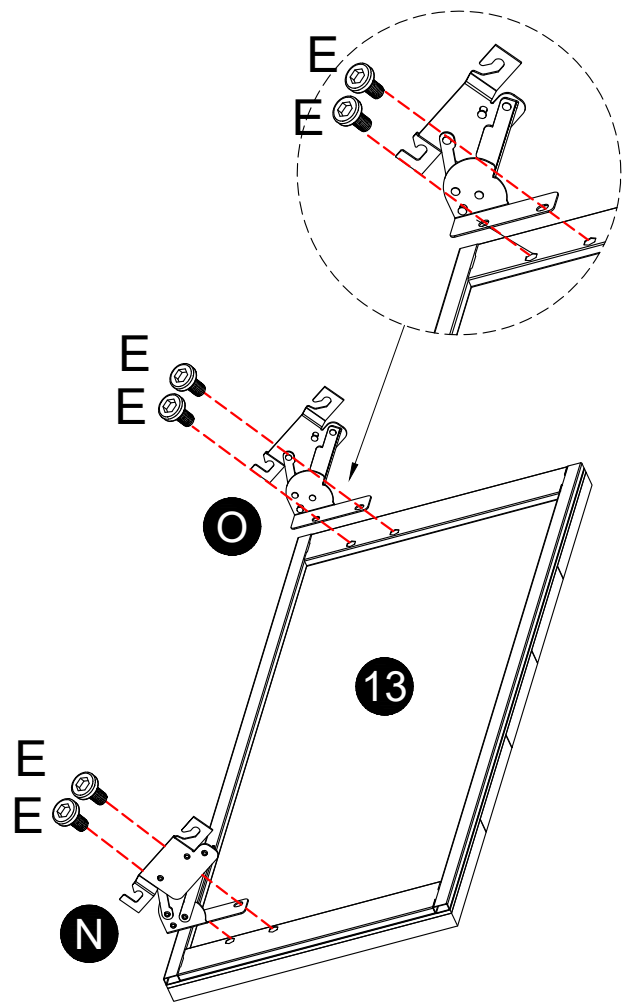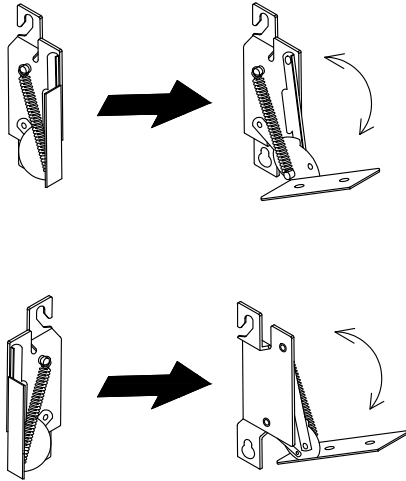


- E** x4  M8*10mm


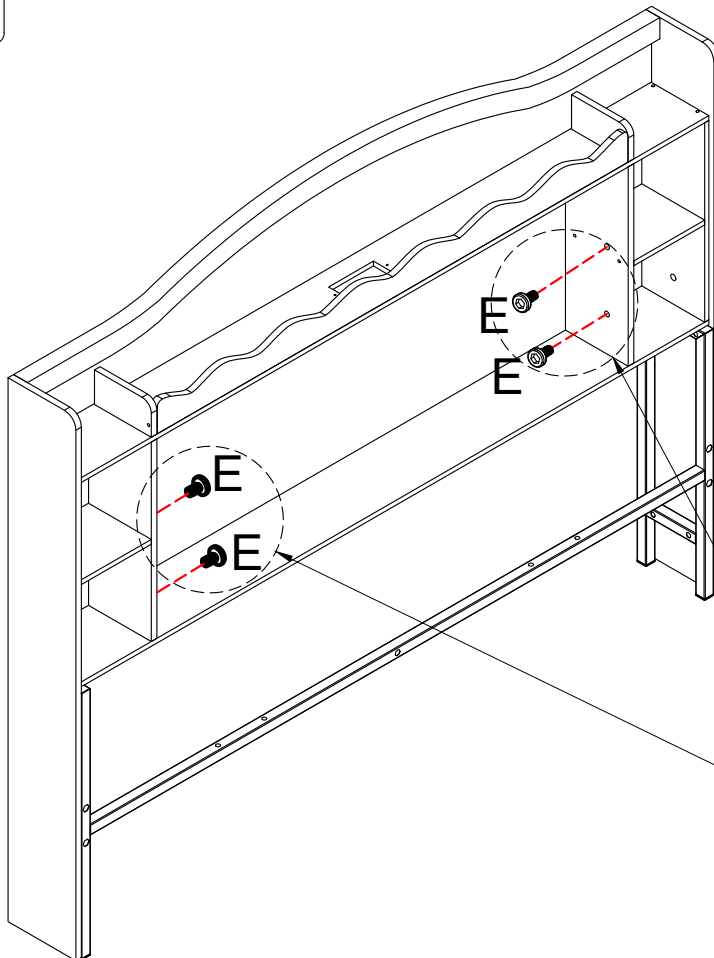


Pre-tighten the
screw by 50%

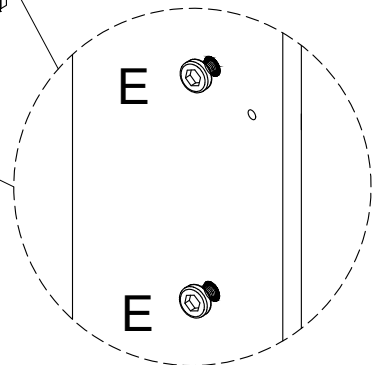


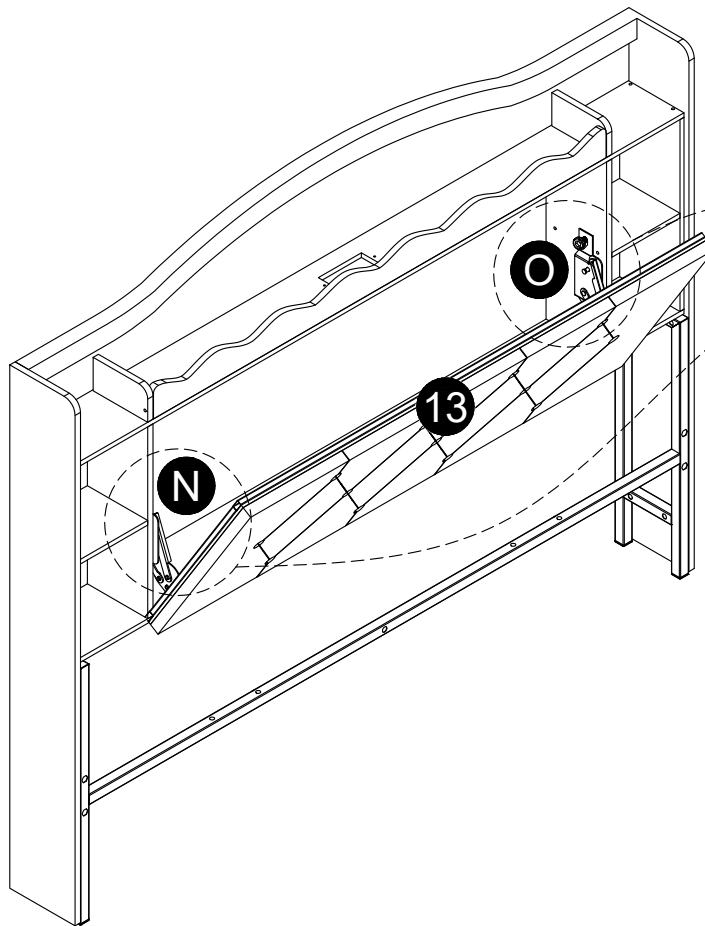



First, hook the hinge into screw E.

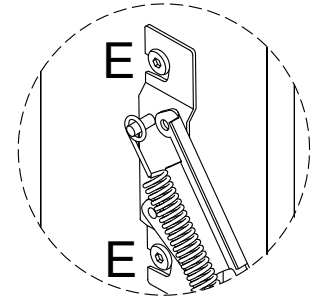


Tighten the screws to 100%.

Jx18
ST4*35mm

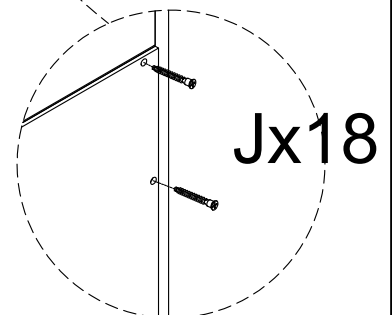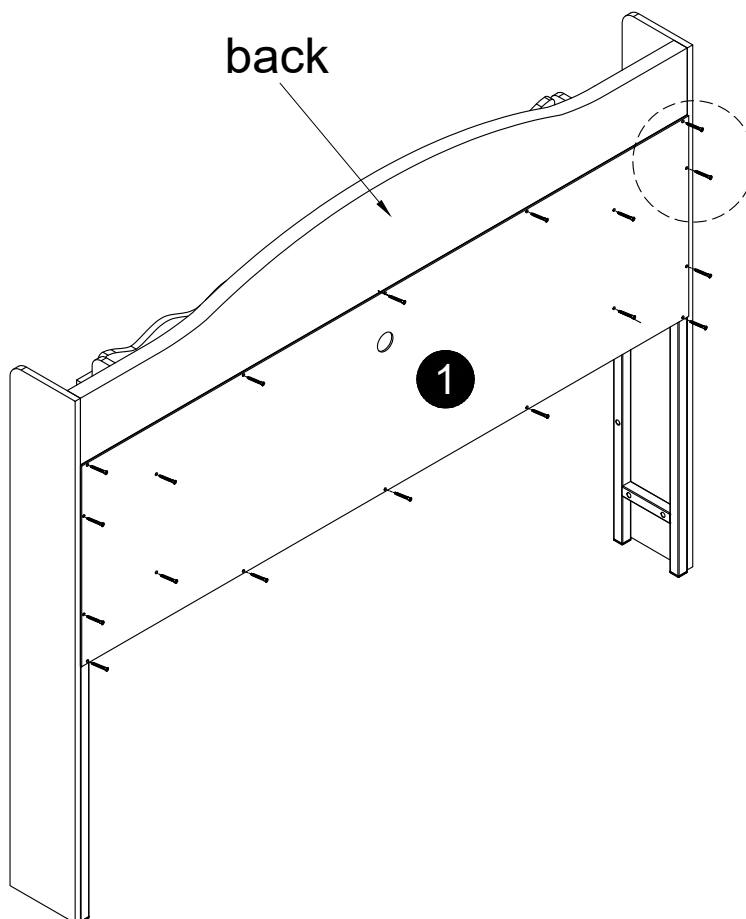


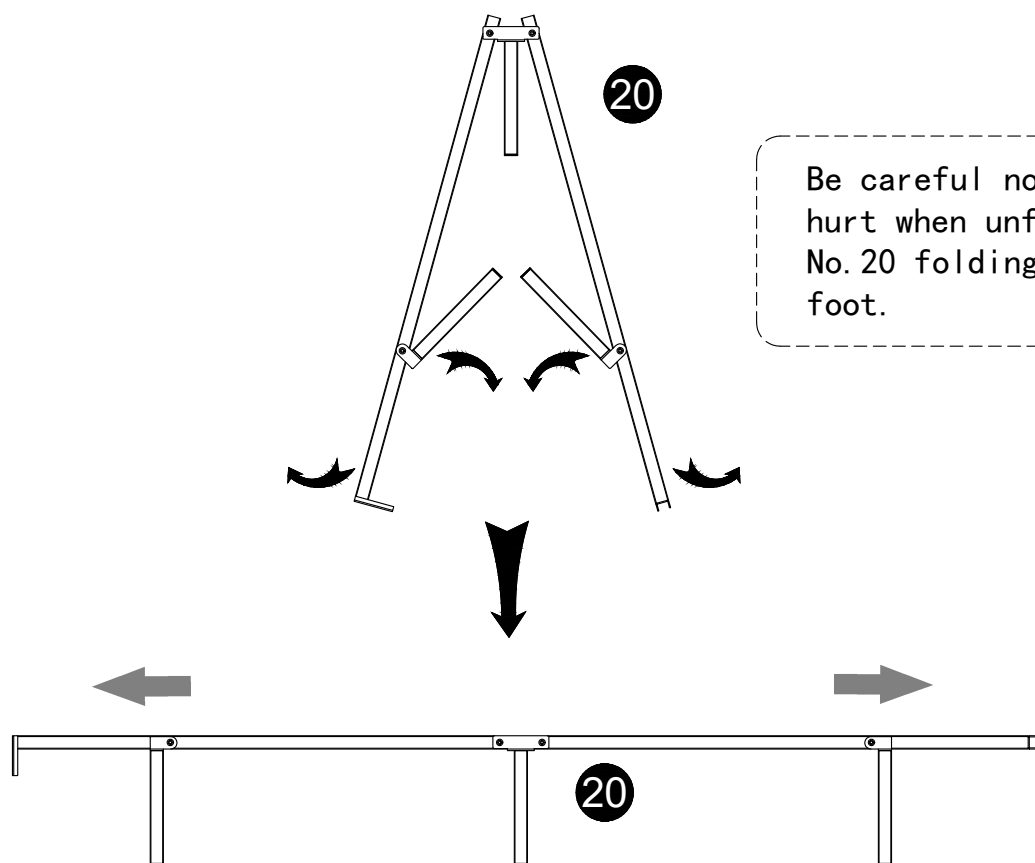


Be careful not to get hurt when unfolding the No. 20 folding support foot.

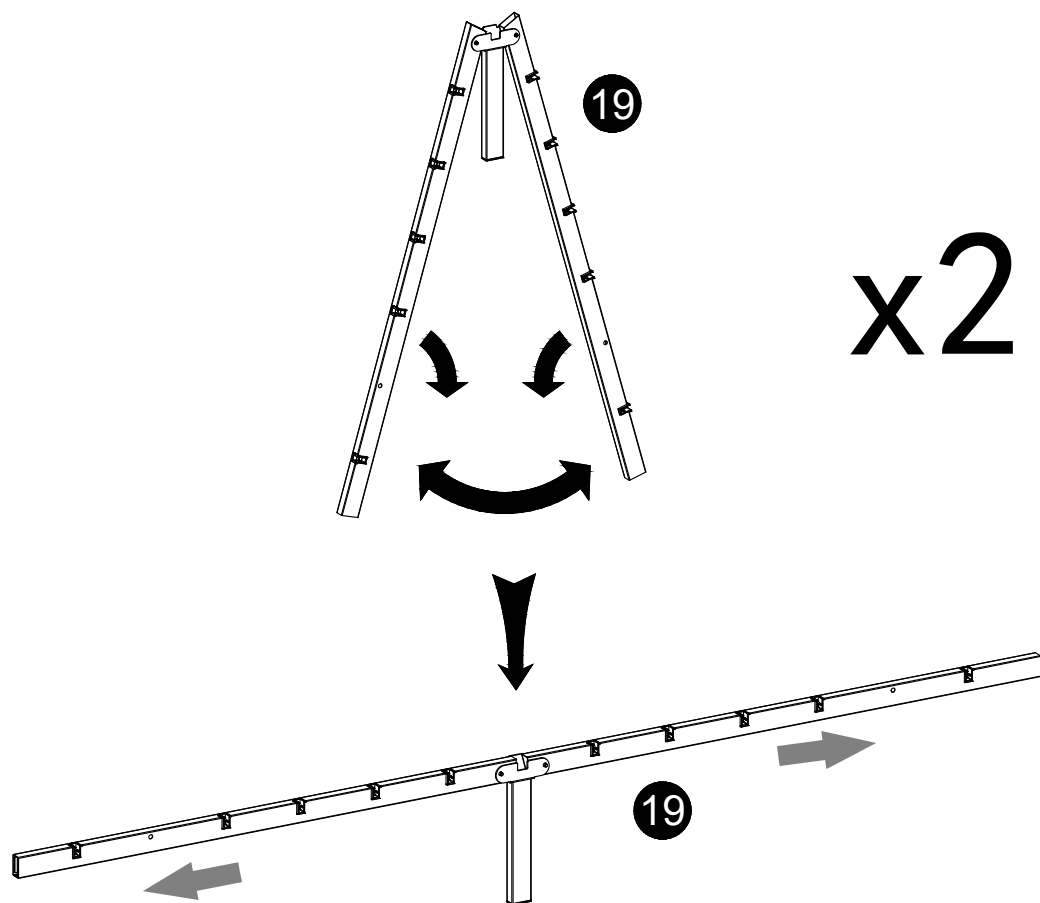

- F** x4 M8*20mm
- G** x1 M8*30mm

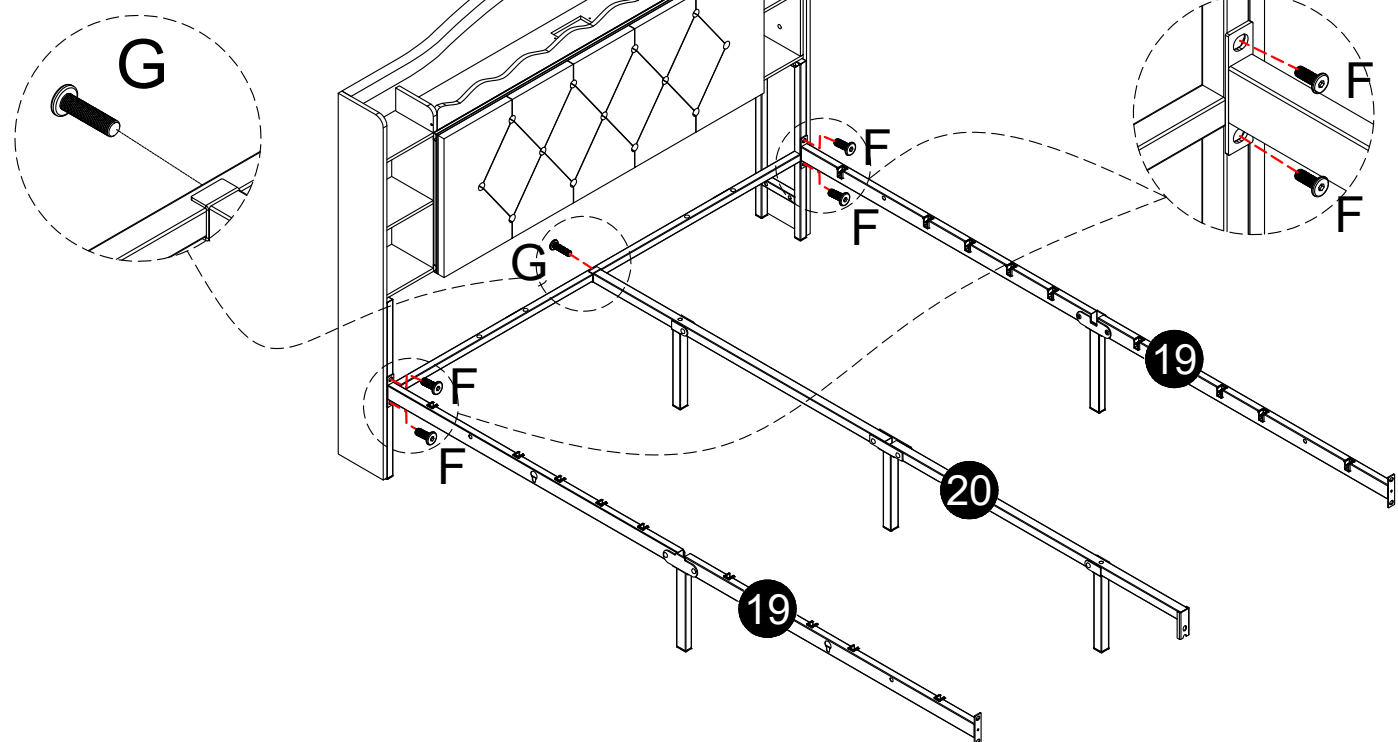


- P** x2

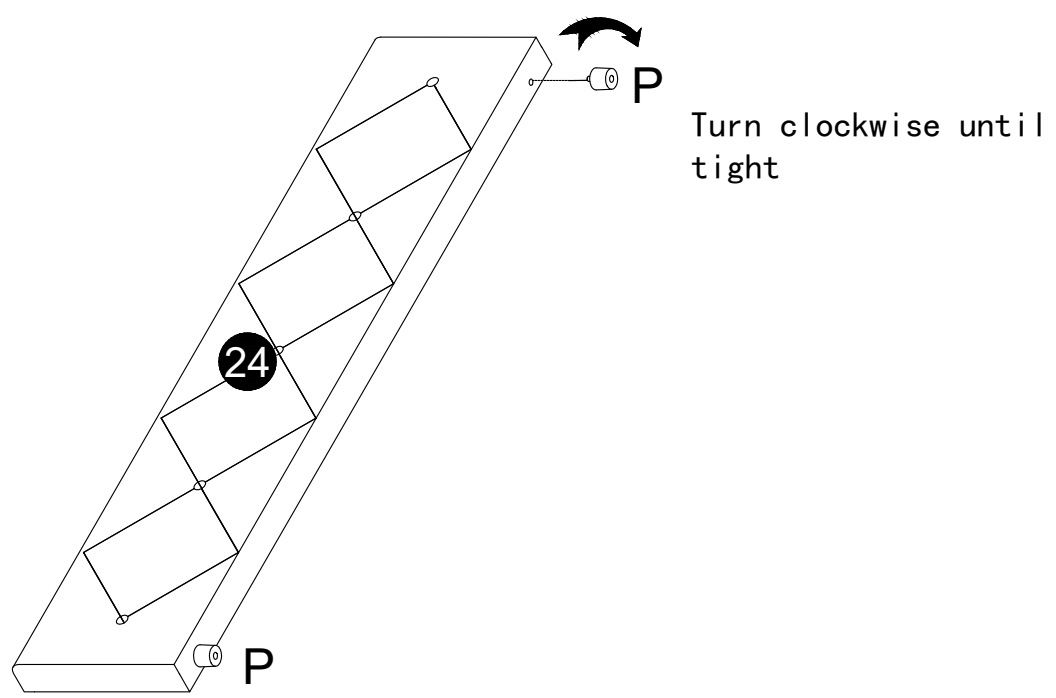


F x5
M8*20mm



17

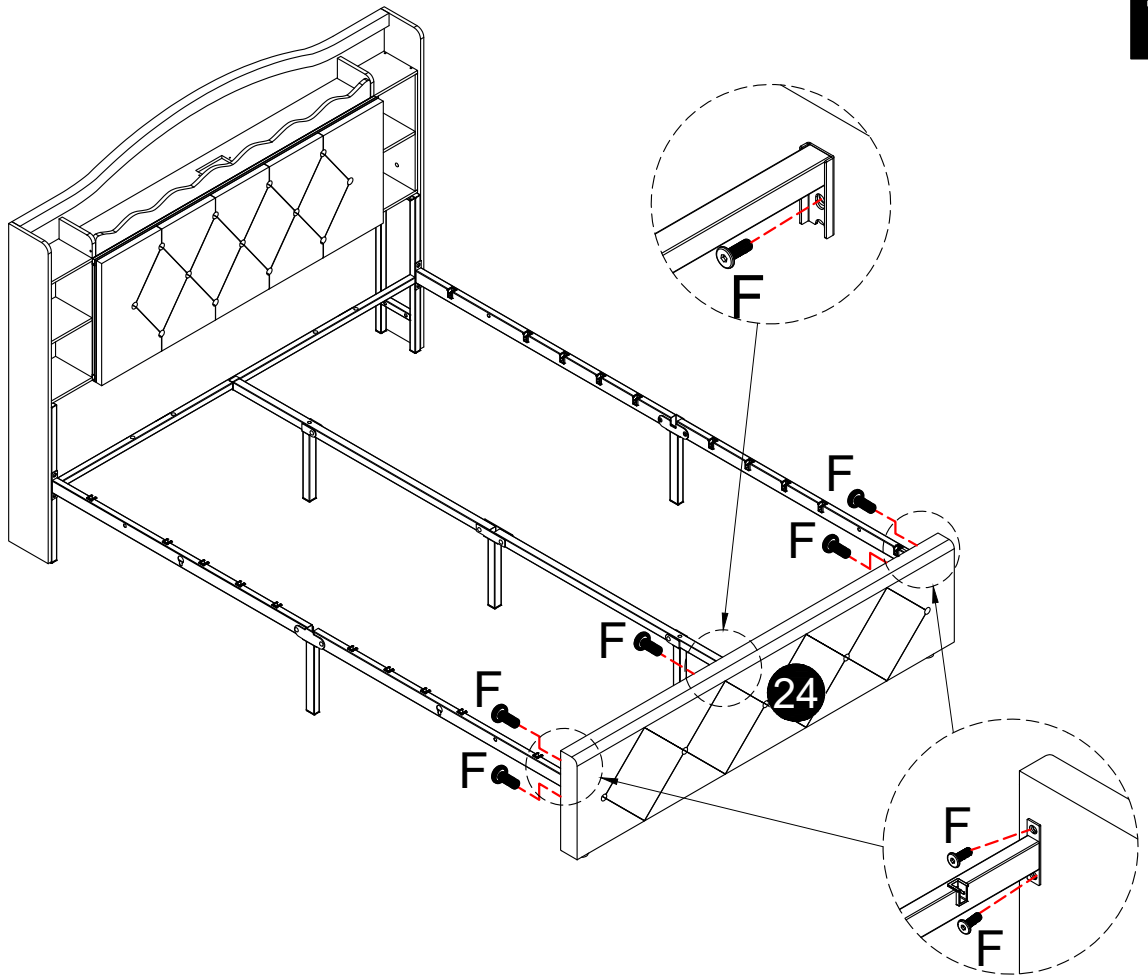

K x2
ST3*12


18

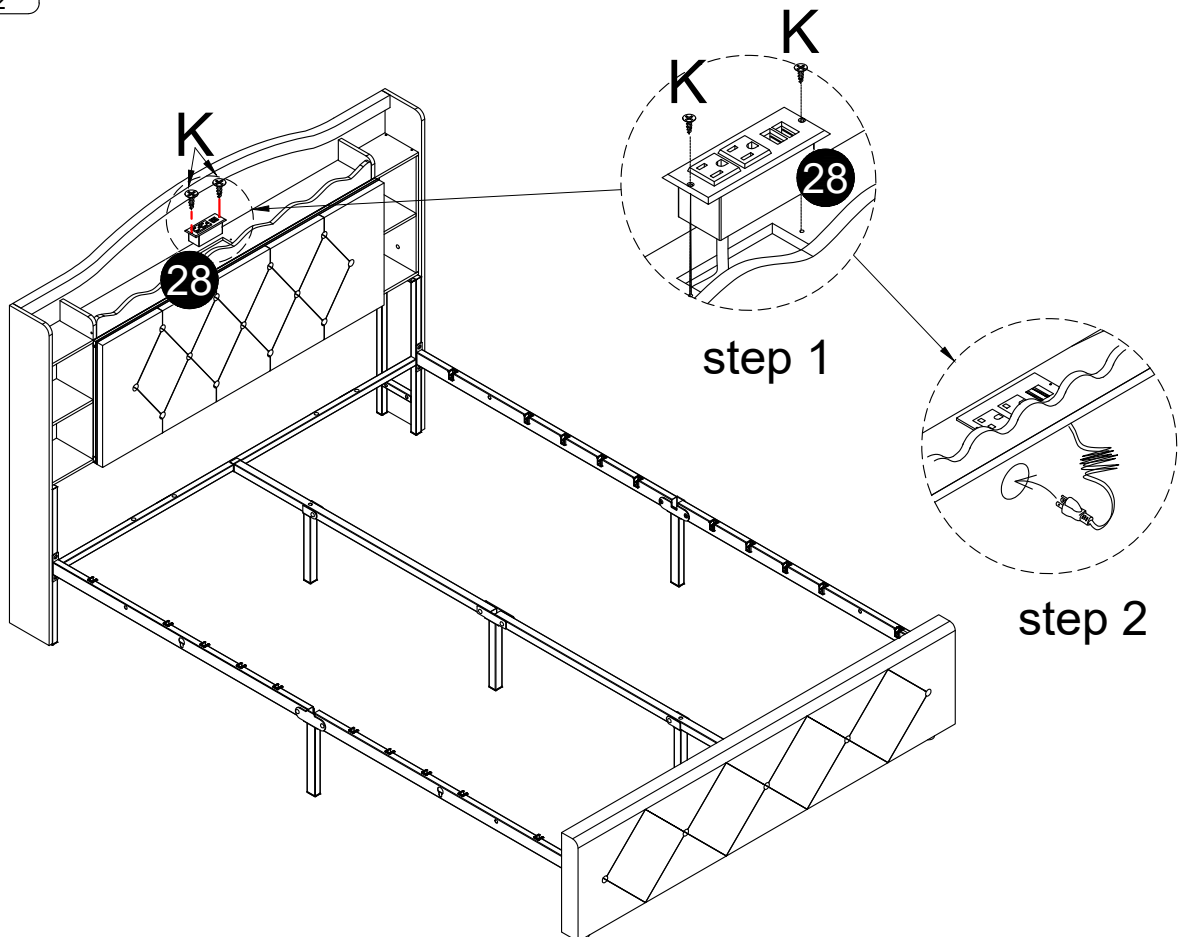

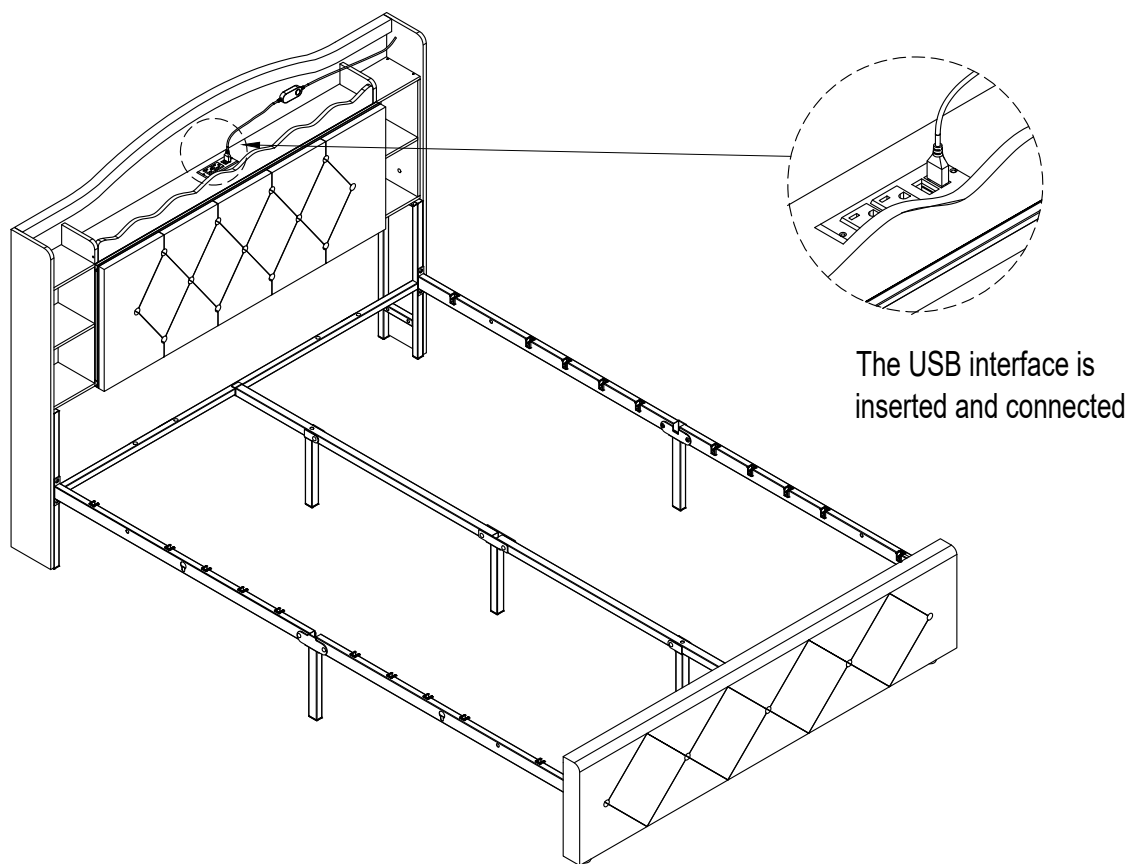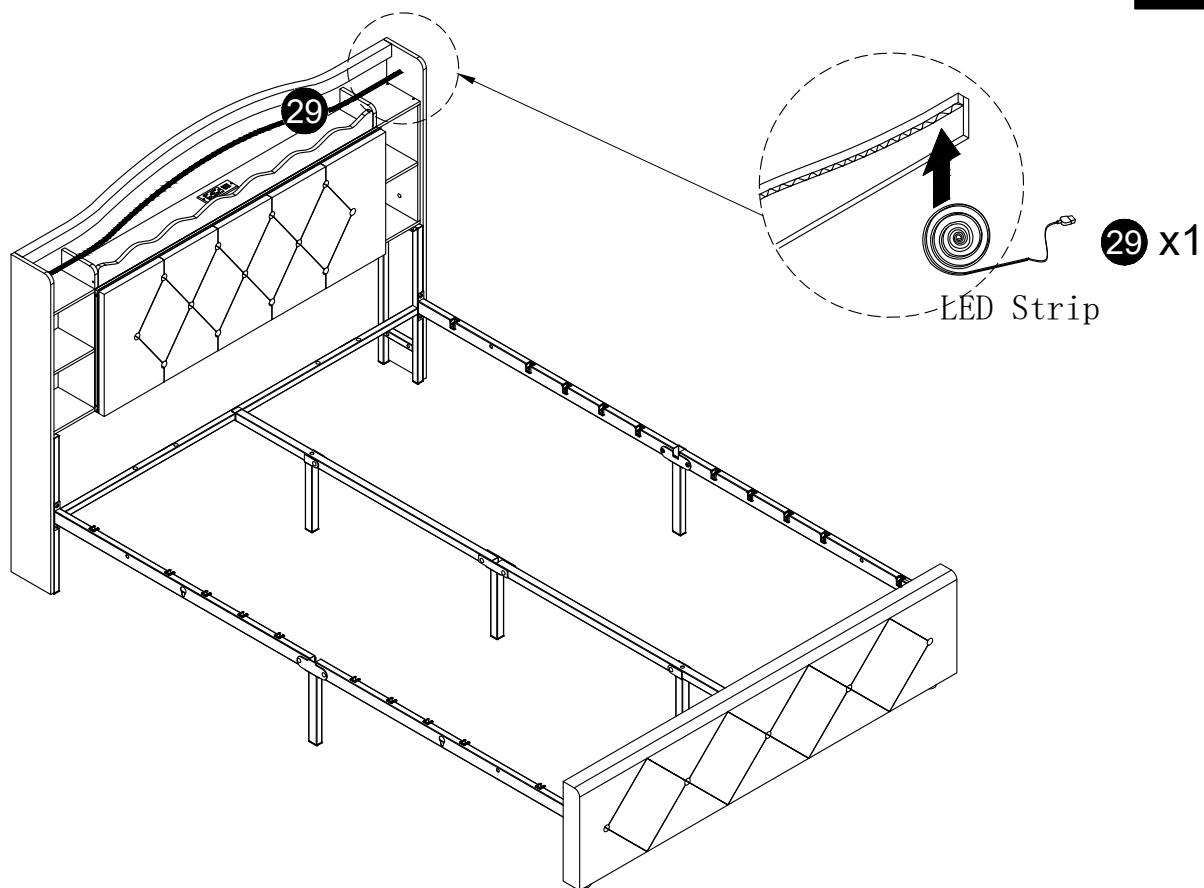

H x5
M8*55mm

21

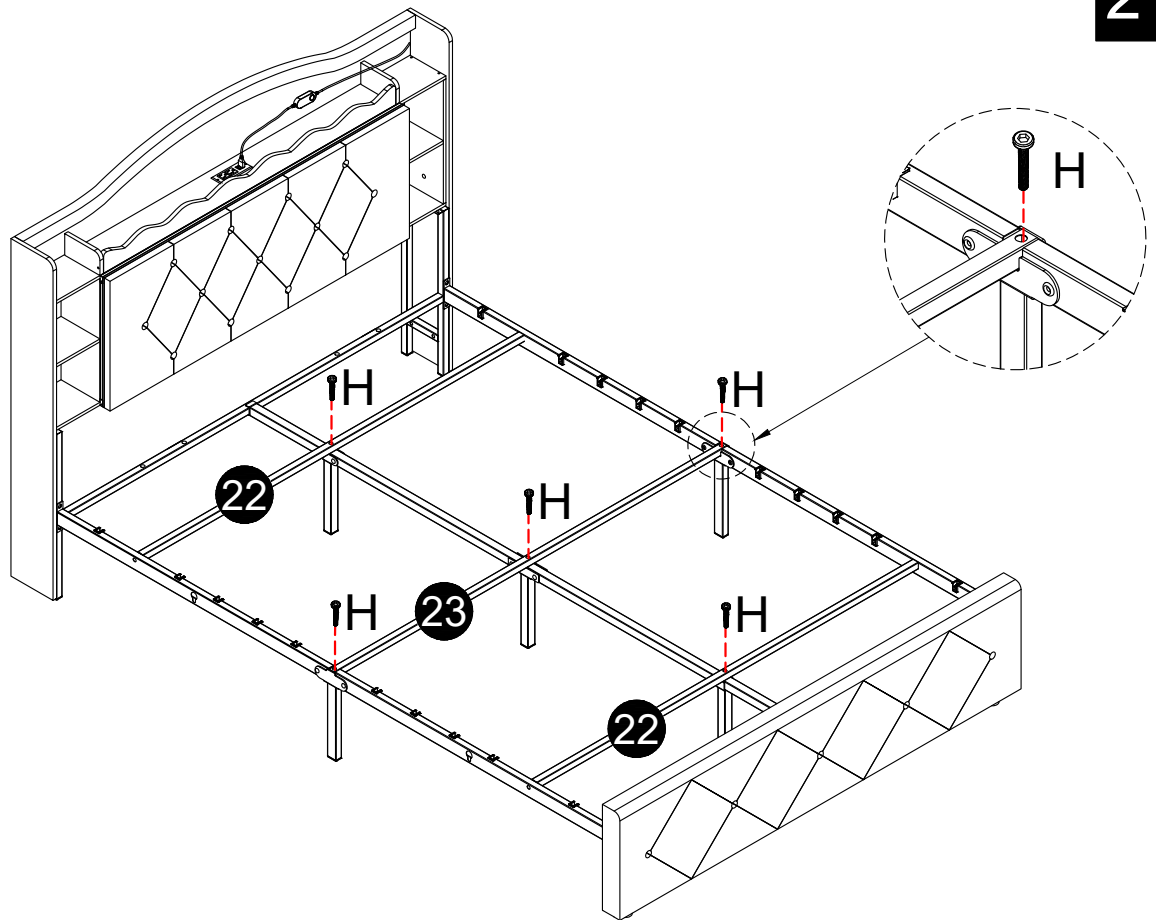



D x4
M6*35mm

22




Pre-tighten the
screw by 50%



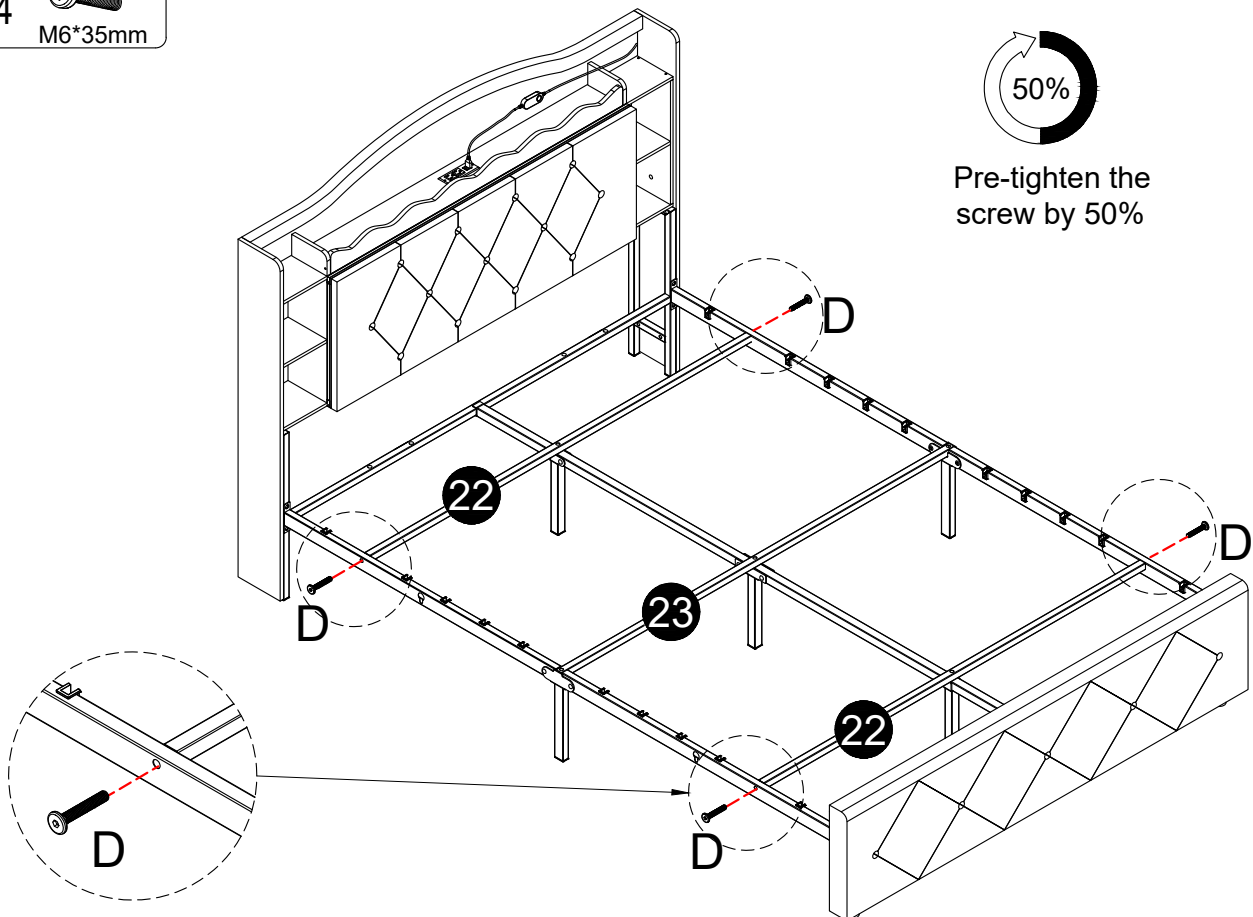


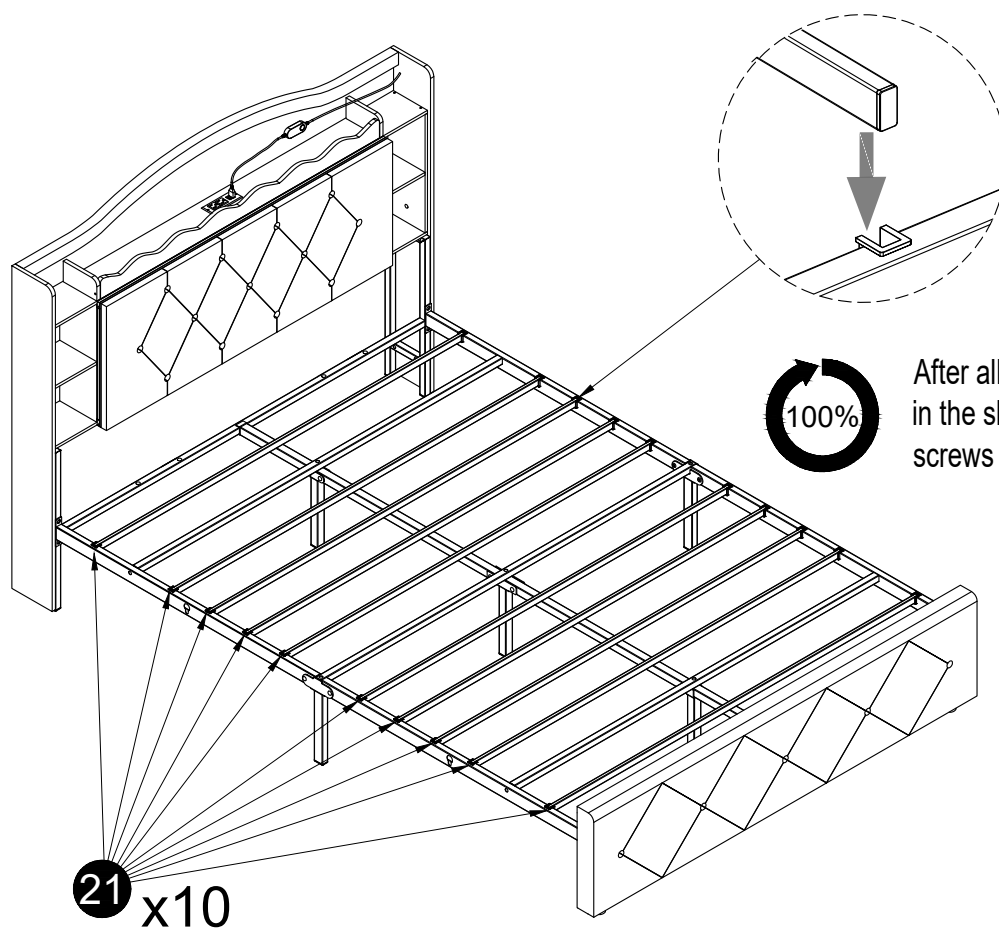

Q x2

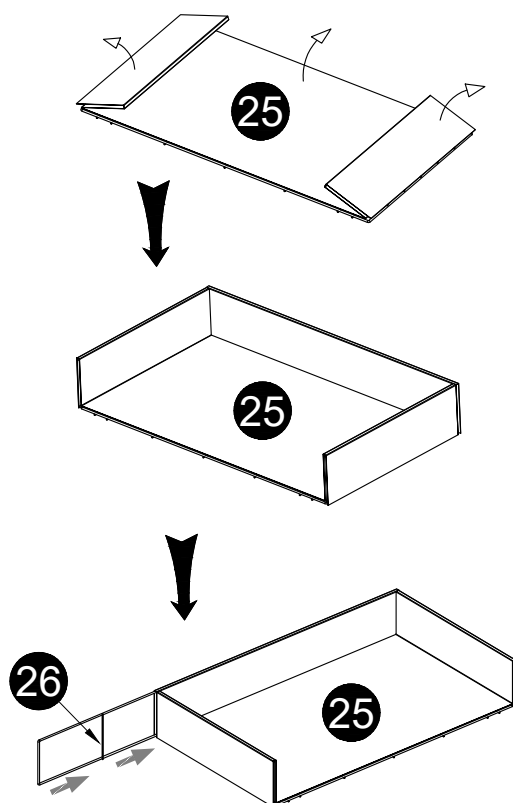

x2

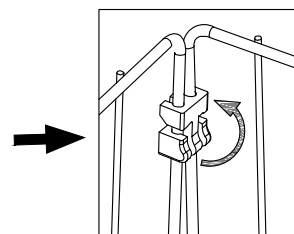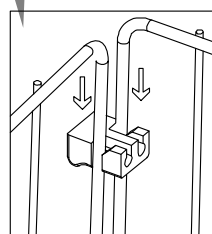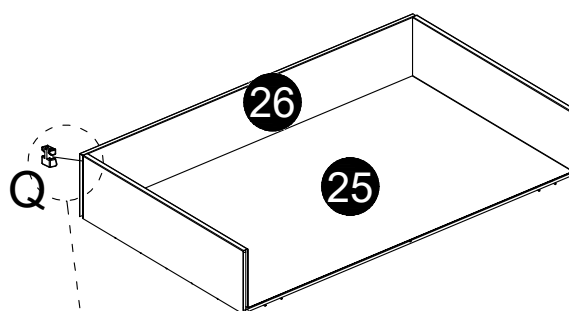


After installation, ensure it fits tightly with the Velcro


R x8




step 1

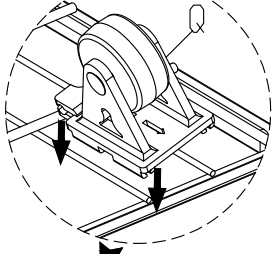


step 2

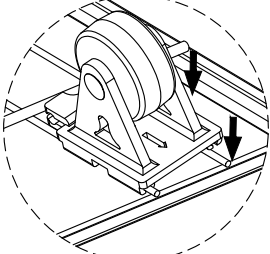

step 3

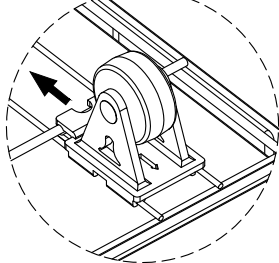

x2

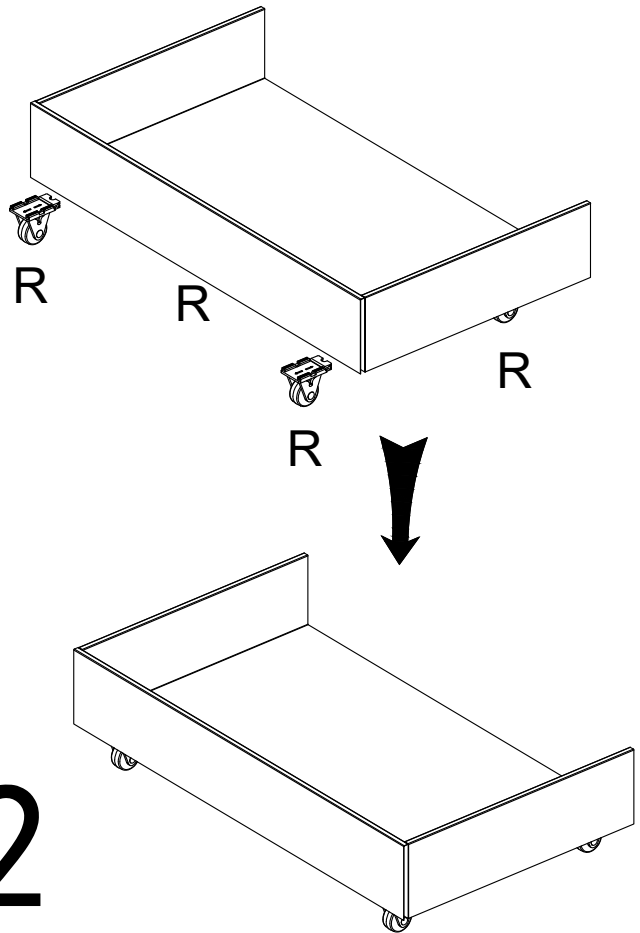

25

A x10



M6*10mm

I x2




M6*15mm


B x2



S x10

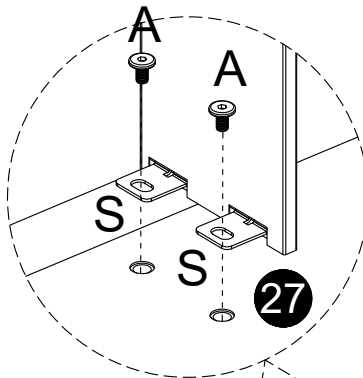

Pay attention to lift the drawer cloth cover up first when installing S parts.

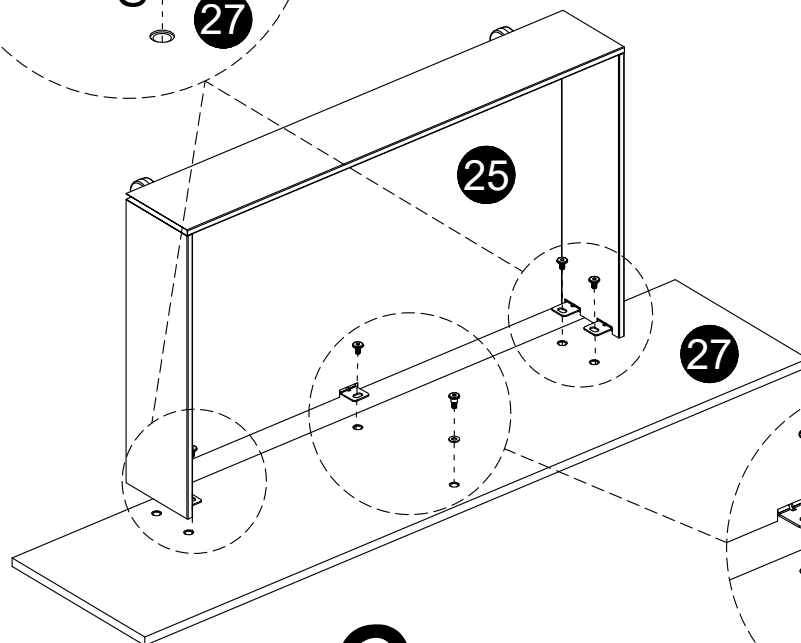


x2

26

G x4
M8*30mm

27

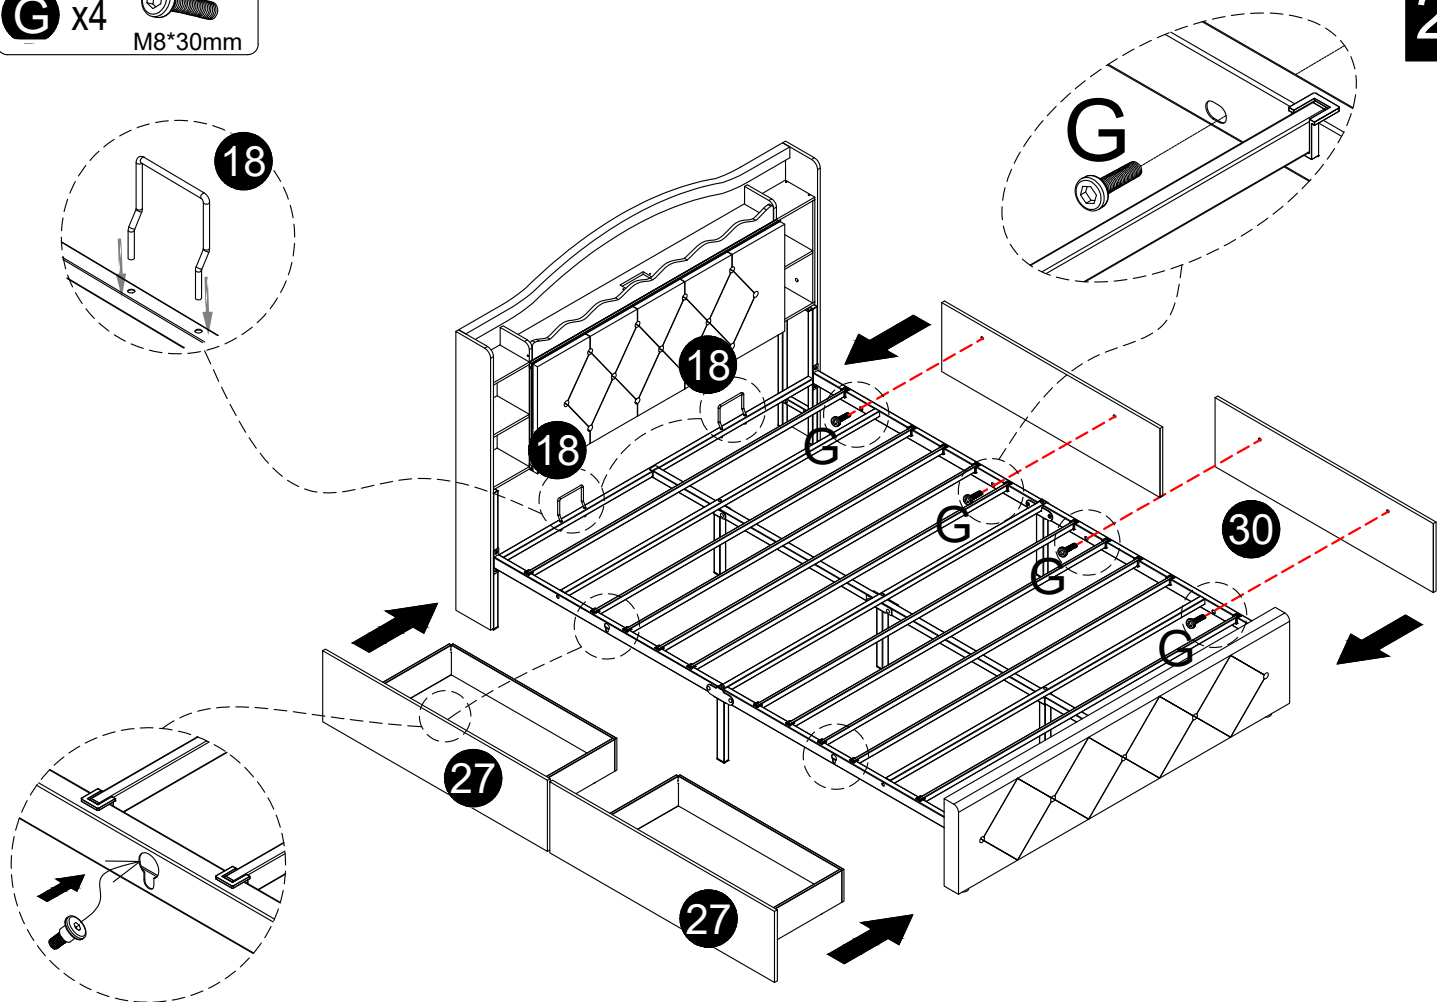

28

