


ASSEMBLY INSTRUCTIONS
BATH VANITY-CABINET

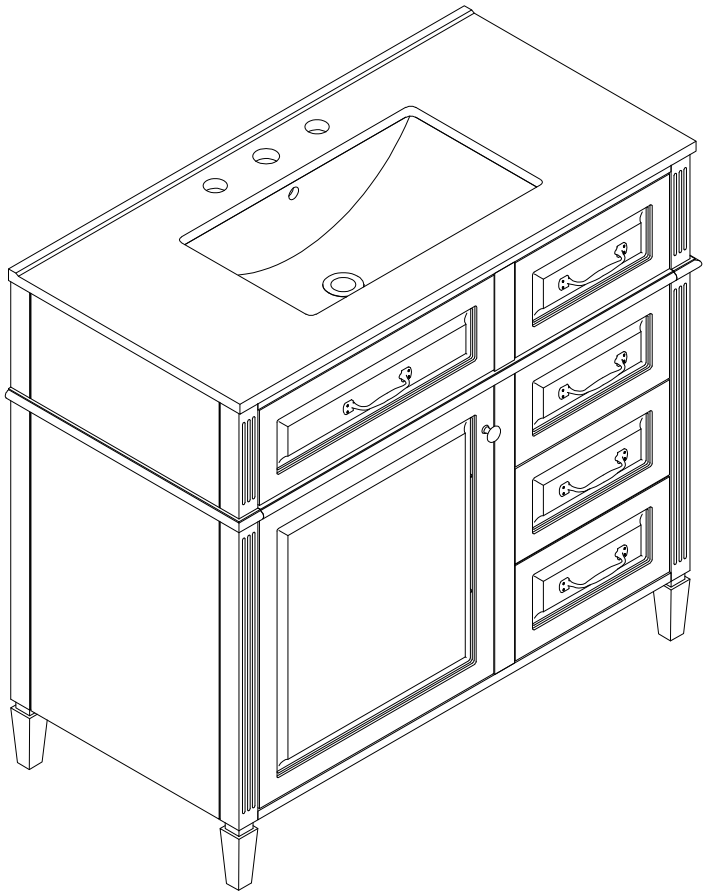


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.
Compare with the parts list to be sure all parts are present.
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

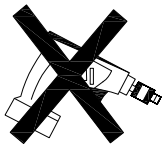

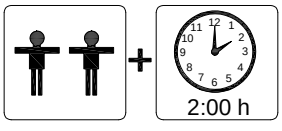


Tools Required


(Not included)


(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

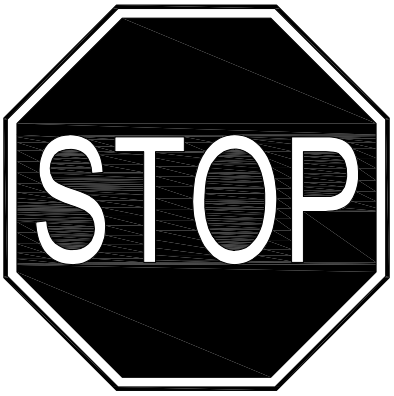

Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important-Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


• We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.

• Please do not over tighten screws or bolts until the assembly is completed.


• Keep children and animal away from the work area, small parts could choke if swallowed.

• Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.


Cam Lock Assembly Instructions

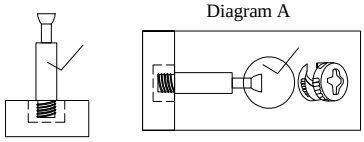


Insert Cam Ball into hole as shown in diagram A.

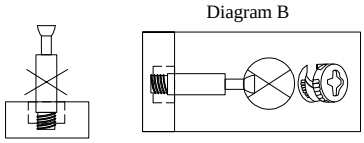


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interock properly.

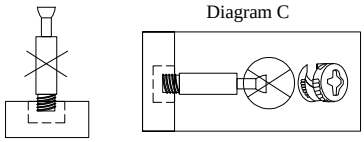


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.



Connect the panels together.

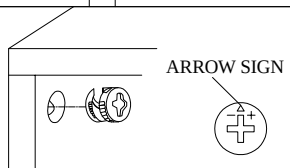


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.




















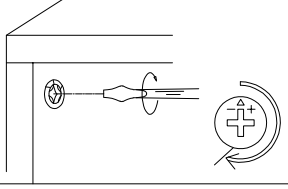














To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View










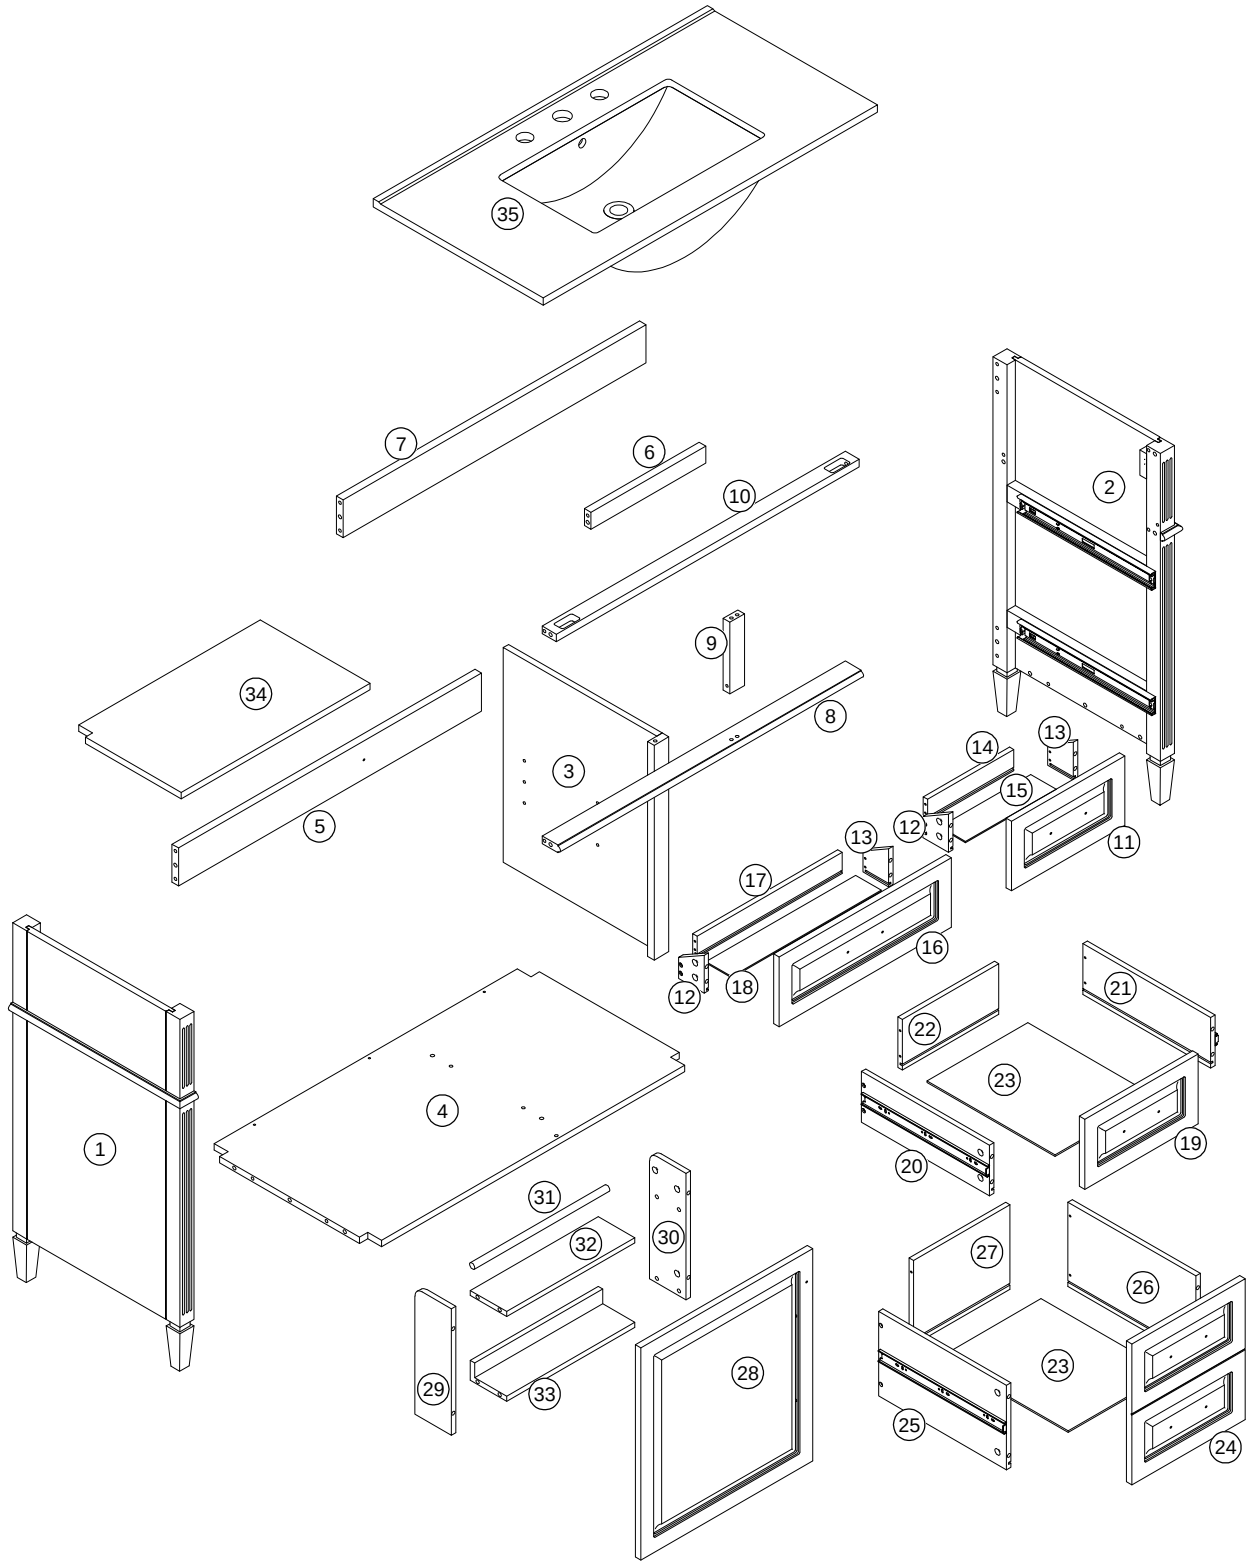


Identifying the Hardware-Identify the hardware using the illustrations below.

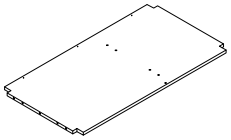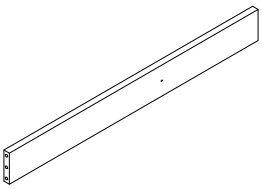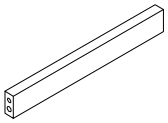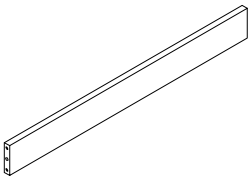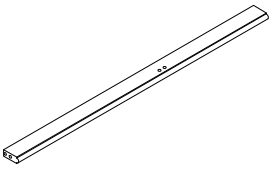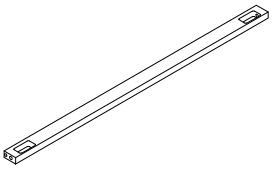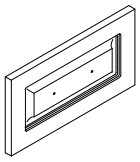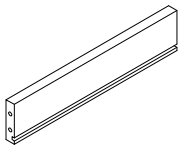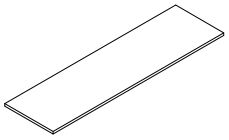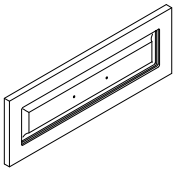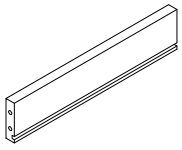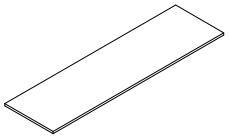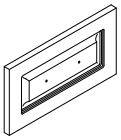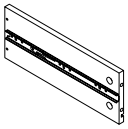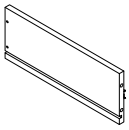
1  Side Frame (L) - 1pc	2  Side Frame (R) - 1pc	3  Middle Panel - 1pc
4  Bottom Panel - 1pc	5  Bottom Rear Crossbar - 1pc	6  Side Rear Crossbar - 1pc
7  Top Rear Crossbar - 1pc	8  Middle front Crossbar - 1pc	9  Vertical Front bar - 1pc
10  Top Front Crossbar - 1pc	11  Flip Drawer Face (R) - 1pc	12  Drawer Side Panel (L) - 1pc
13  Drawer Side Panel (R) - 1pc	14  Drawer Back Panel - 1pc	15  Drawer Bottom Panel - 1pc
16  Flip Drawer Face (L) - 1pc	17  Drawer Back Panel - 1pc	18  Drawer Bottom Panel - 1pc
19  Drawer Face - 1pc	20  Drawer Side Panel (L) - 1pcs	21  Drawer Side Panel (R) - 1pc

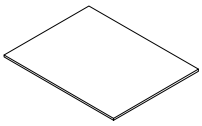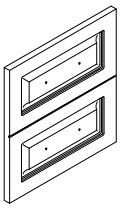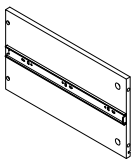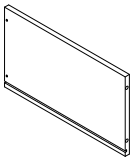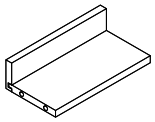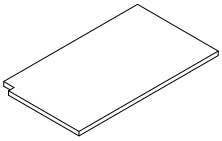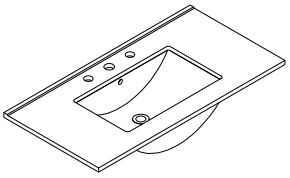
22  Drawer Back Panel - 1pc	23  Drawer Bottom Panel - 2pcs	24  Drawer Face - 1pc
25  Drawer Side Panel (L) - 1pcs	26  Drawer Side Panel (R) - 1pc	27  Drawer Back Panel - 1pc
28  Door Cabinet - 1pc	29  Door Side Panel (L) - 1pc	30  Door Side Panel (R) - 1pc
31  Round Bar - 1pc	32  Door Mid Panel - 1pc	33  Door Bottom Panel - 1pc
34  Adjustable Shelf - 1pc	35  Sink - 1pc	


Hardware Lists

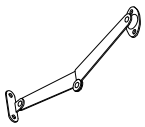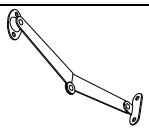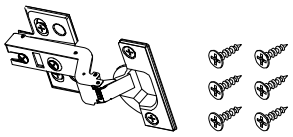
A  M6x30mm	B  Ø1/4 "x13x1mm	C  Ø6*32mm
Hex-Head bolt (8pcs)	Washer (8pcs)	Three in on bolts (42pcs)
D  Ø14.5*9.5mm	E  45*12*1mm 45*17*14mm	F  Ø3.5x12mm
Three in one locks (42pcs)	Plastic Door Magnet (3 set)	Flat head screw (26pcs)
G  Ø8x30mm	H 	I  K4mm
Wood dowel (22pcs)	Pin shelf (4pcs)	Allen key (2pcs)
J  Ø4x25mm	K 	L 
Flat head screw (4pcs)	Handle (1pcs)	Handle (5pcs)
M  Ø3.5x15mm	N 	O 
Round head screw (6pcs)	Left elbow hinge (1pc)	Rotary Hinge(2 sets)
P  Ø10x10mm	Q  M4x35mm	R  M4x22mm
Plastic Canopy (16pcs)	Round head screw (16psc)	Handle screw (11pcs)
S 	T 	U 
Right elbow hinge (1pc)	Damping hinge (2 sets)	Anti fall Hardware (2 sets)


STEP:1

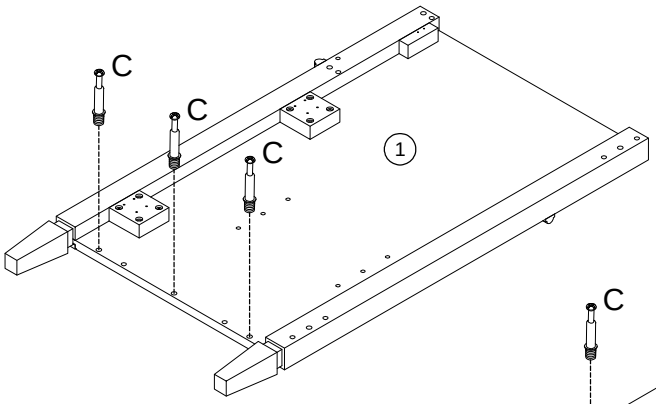


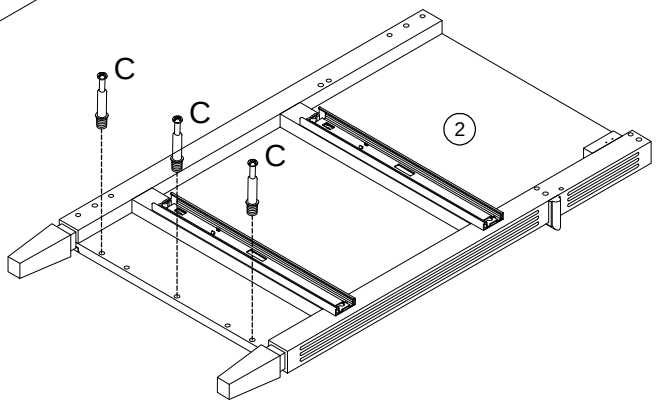


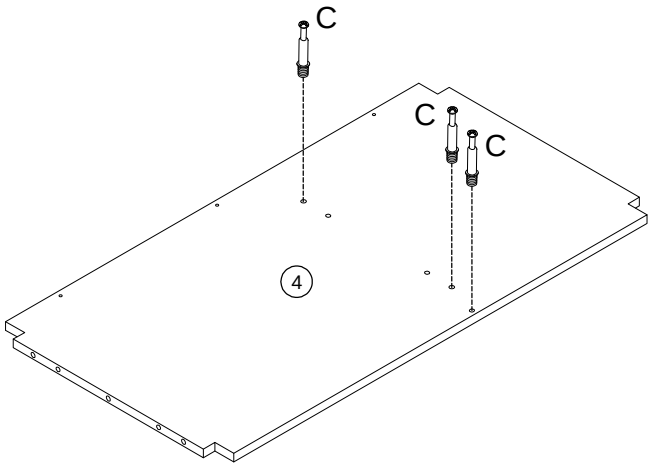

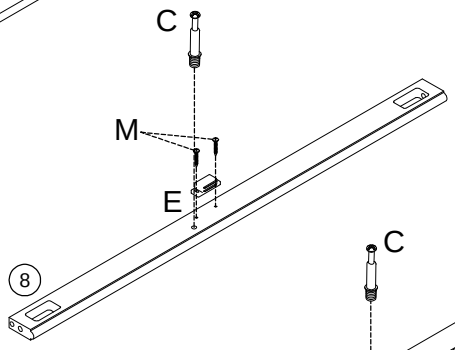


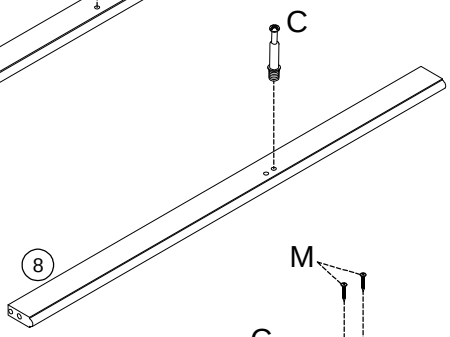

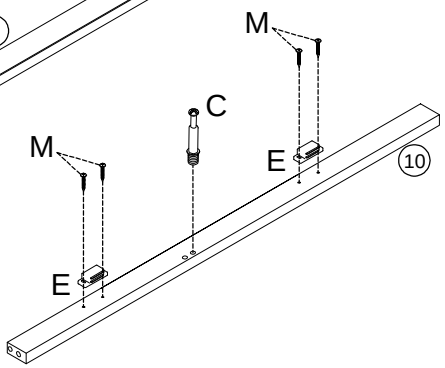

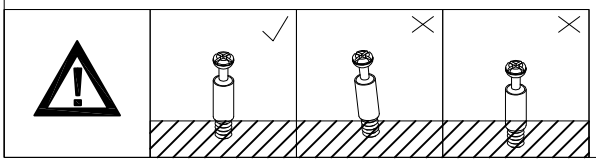


C



12pcs

E




3pcs

M



6pcs

STEP:2

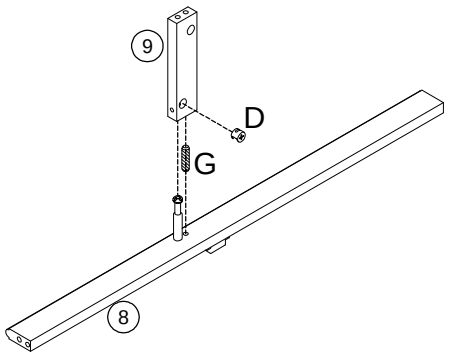

D




1pc

G



1pc

STEP:3

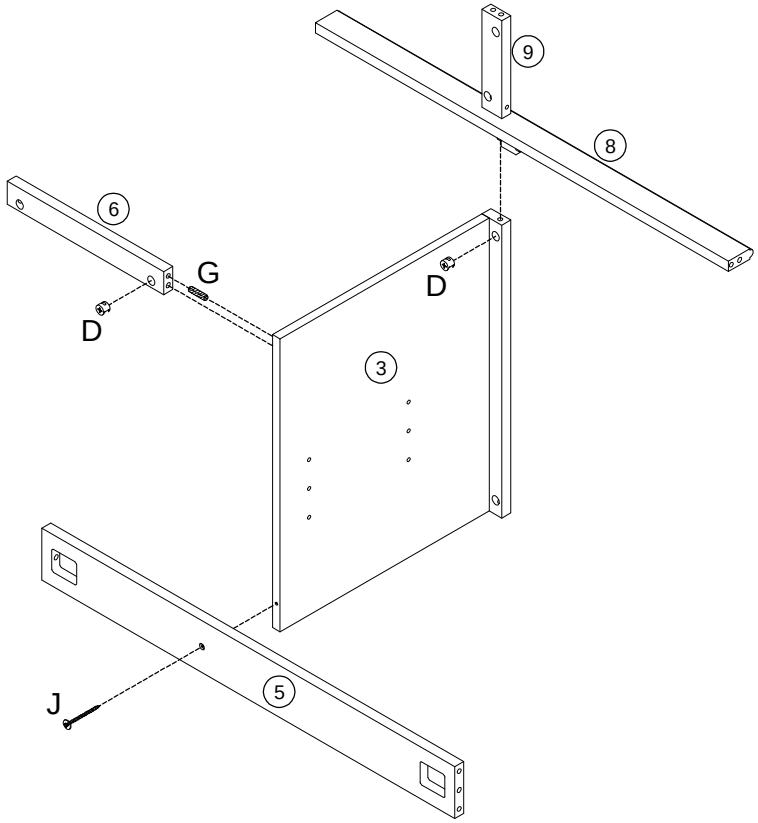

D




2pcs

G




1pc


J



1pc

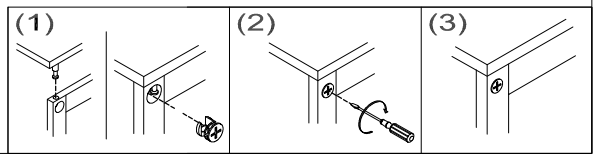

STEP:4

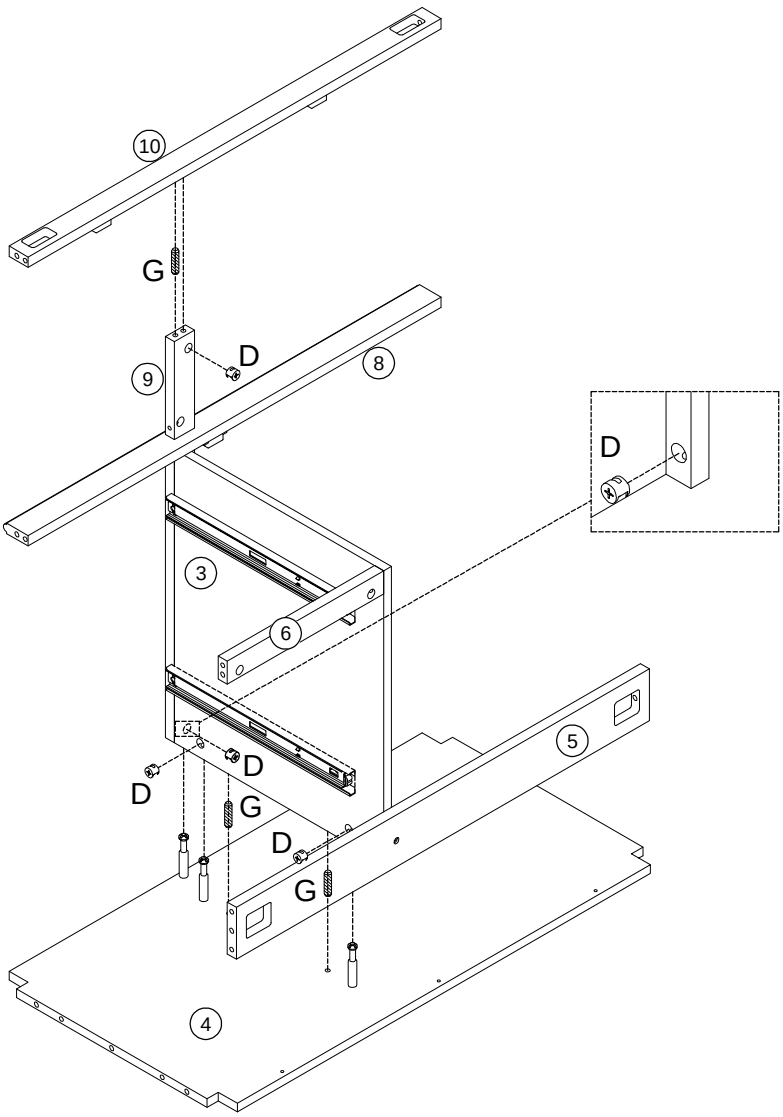

D



4pcs

G




3pcs


J



3pcs

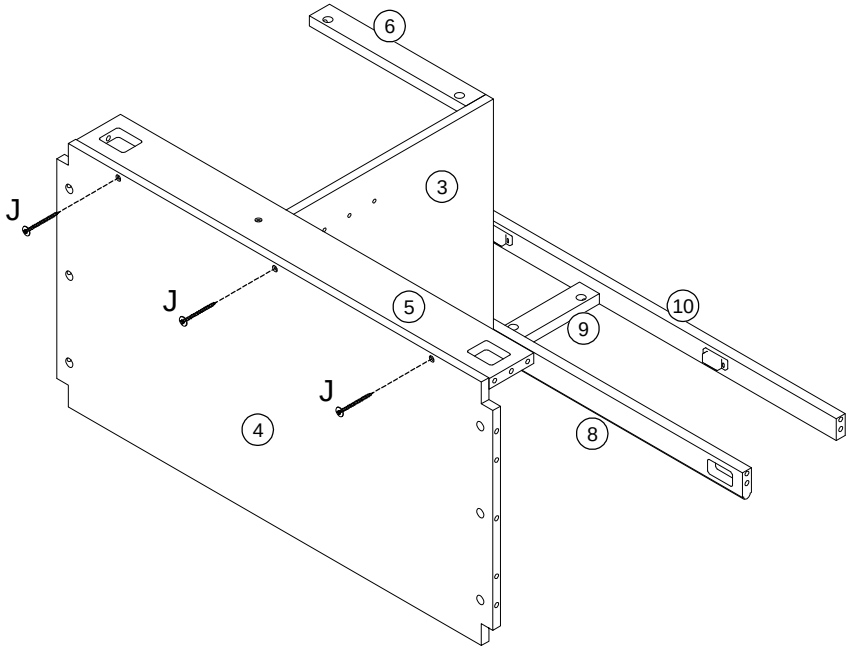



STEP:5

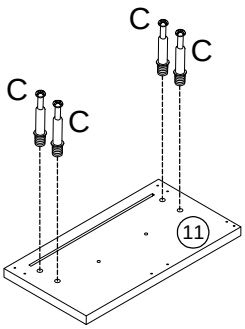



C	D	E	F	P
4pcs	4pcs	1pc	6pcs	4pcs


Q	L	R	O
4pcs	1pcs	2pcs	2pcs

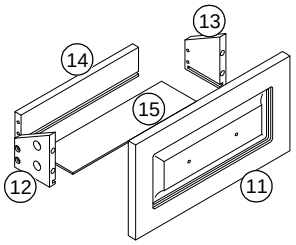

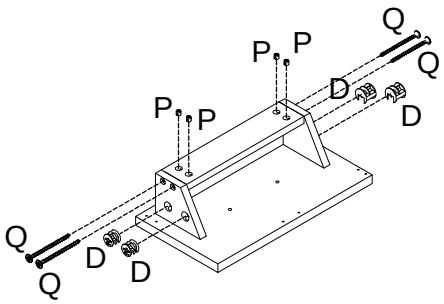

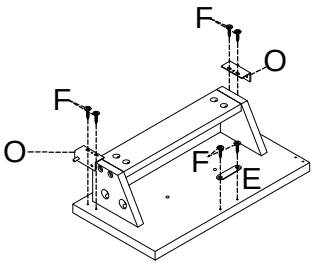

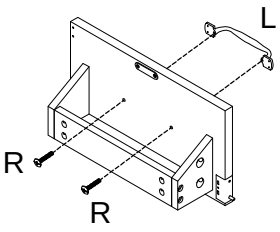


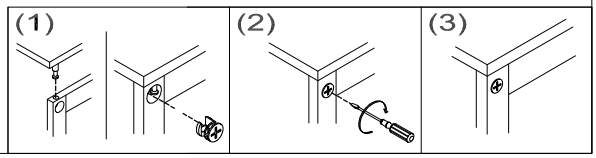



STEP:6


C	D	E	F	P
4pcs	4pcs	1pc	6pcs	4pcs


Q	L	R	O
4pcs	1pcs	2pcs	2pcs

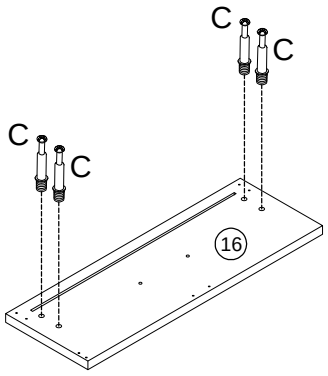


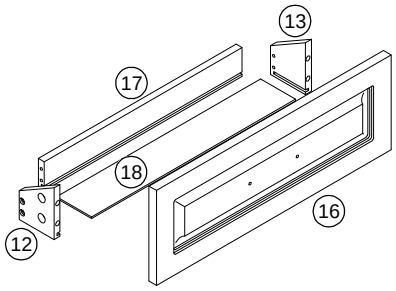

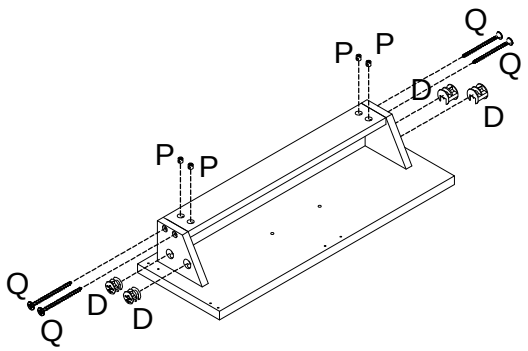


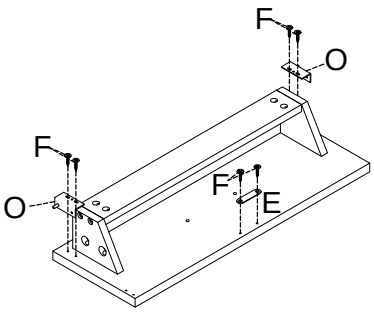

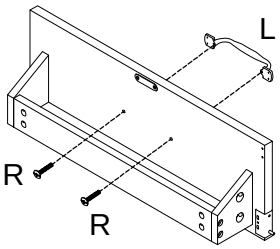


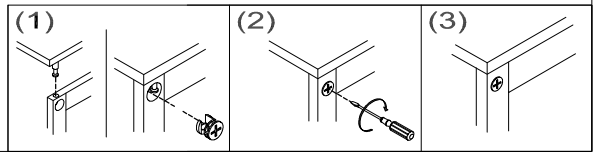


STEP:7

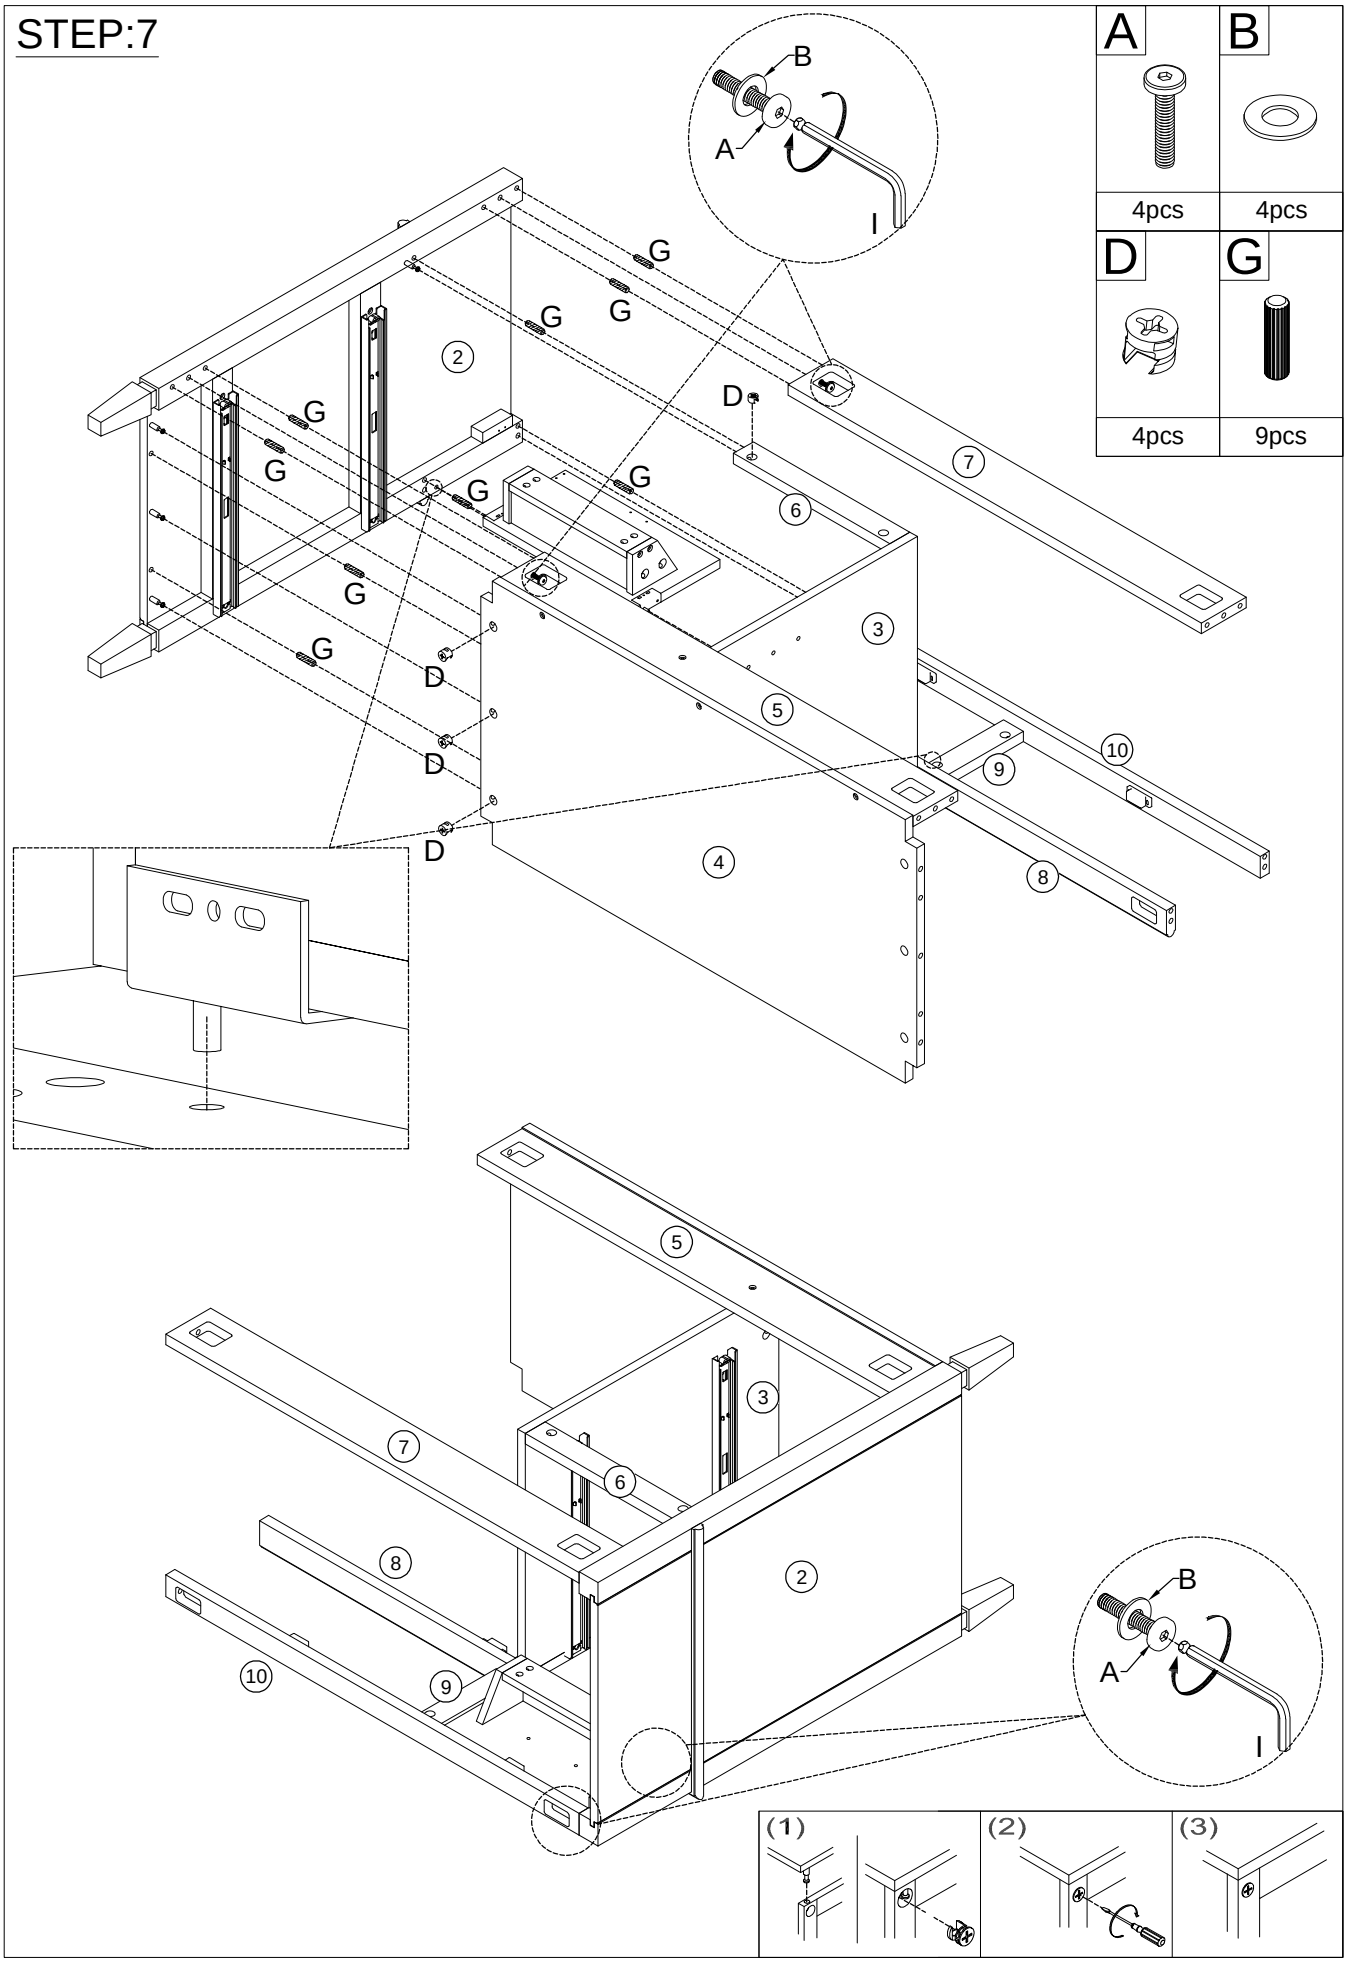

STEP:8

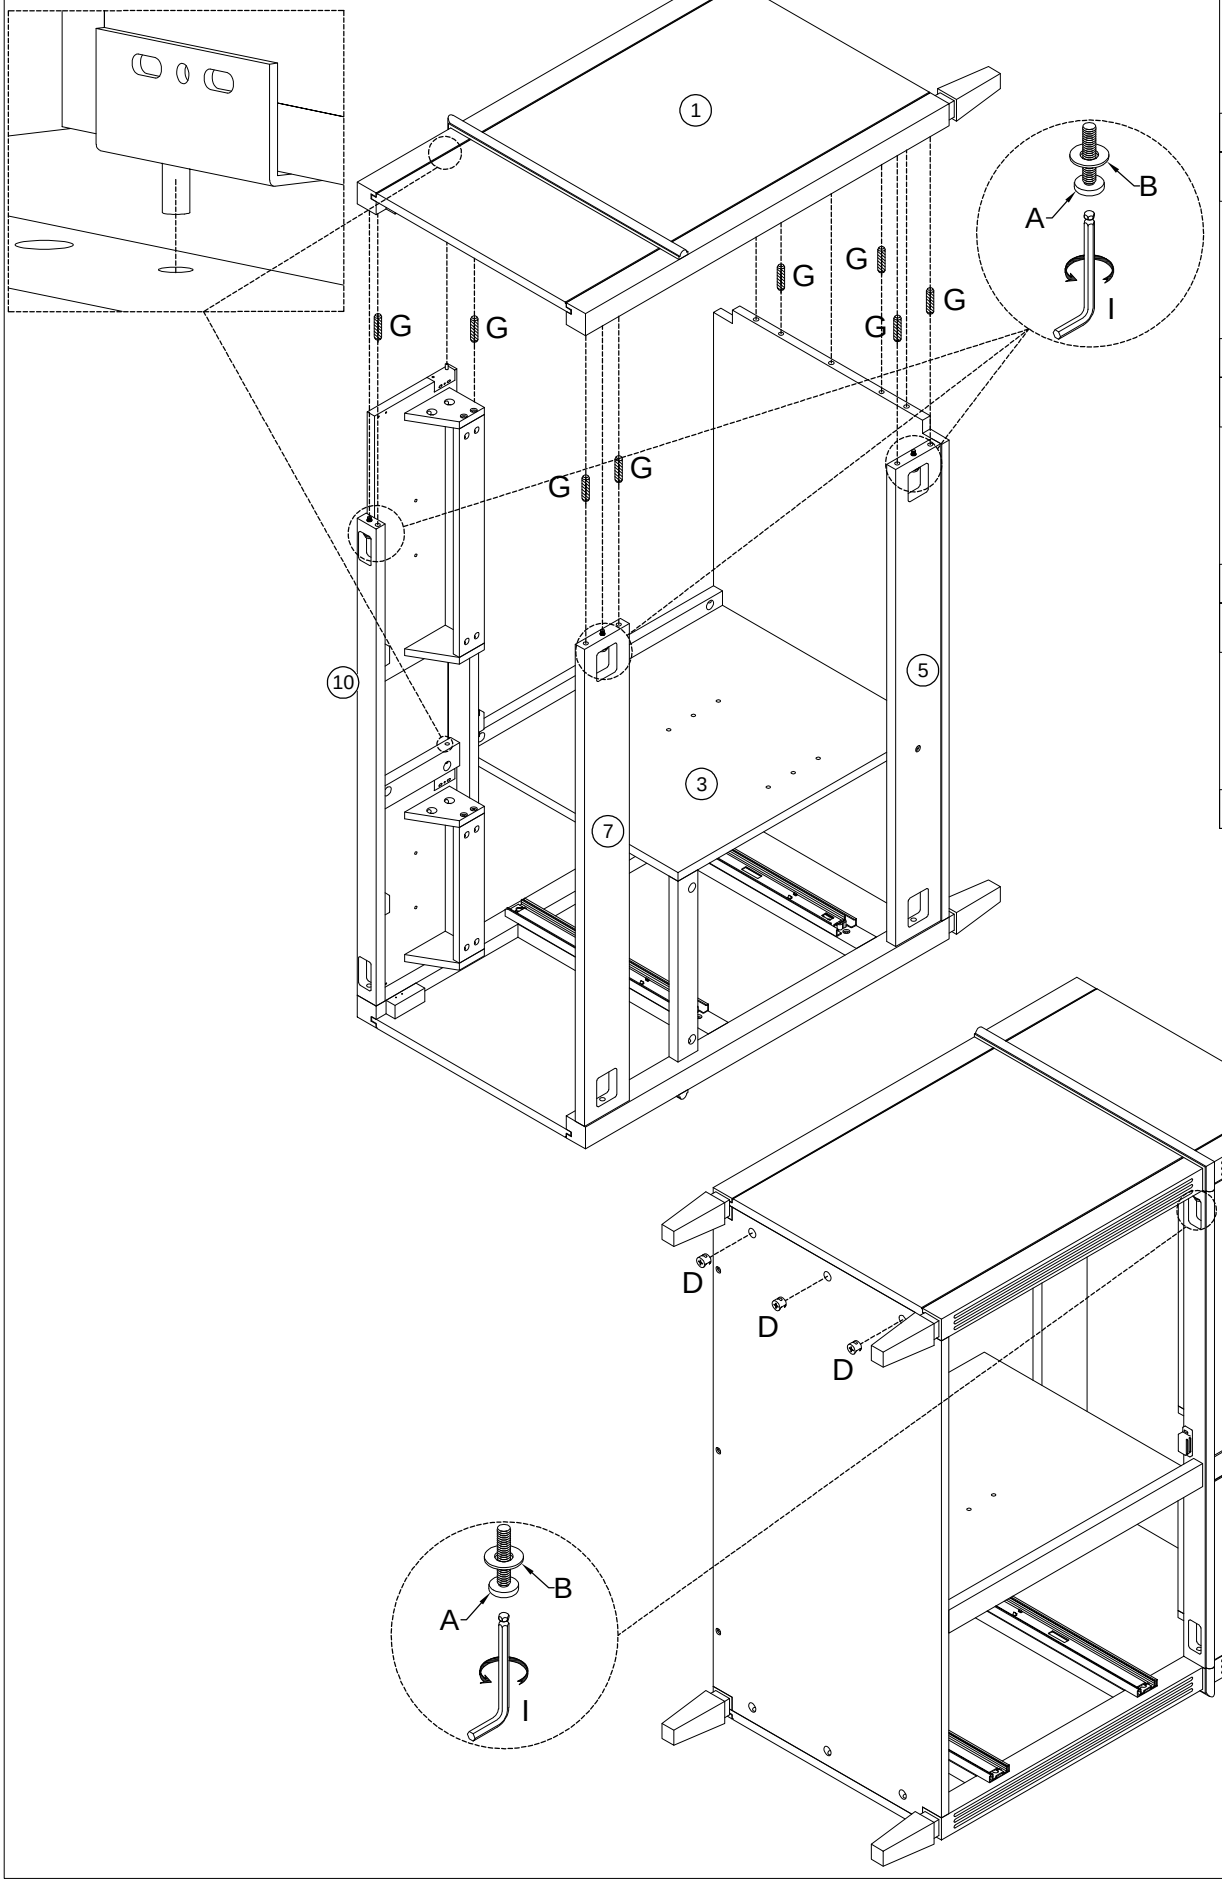

A



4pcs

B



4pcs

D




3pcs


G





8pcs


STEP:9


F	N	S
		
8pcs	1pc	1pc

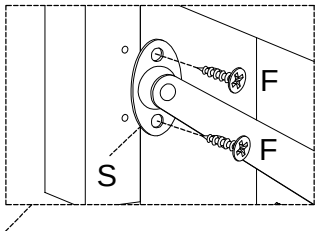

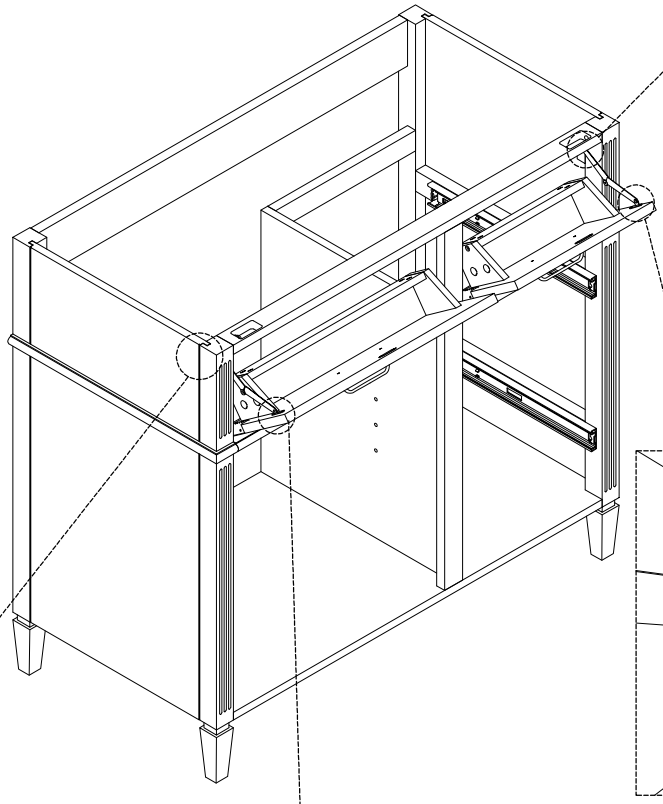

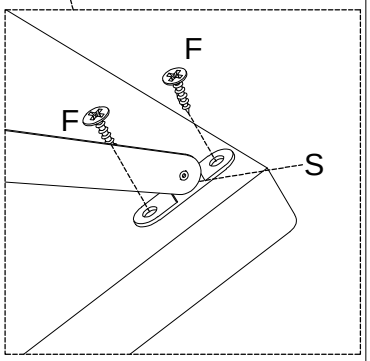


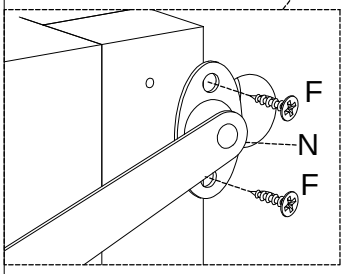


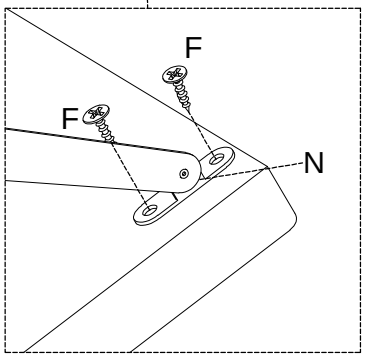



*** Please note that hinges U and V are diferent, please do not install them backwards.**


STEP:10

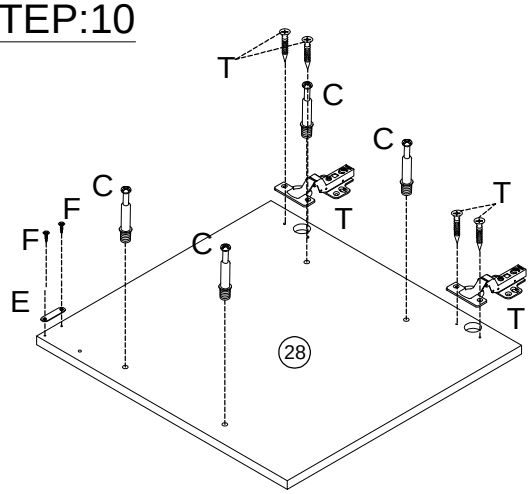


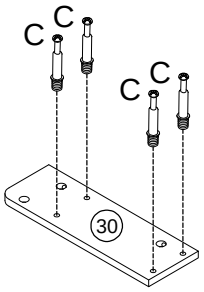


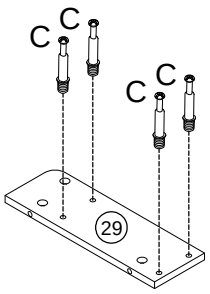


C	D
	
12pcs	12pcs
E	**F**
	
1pcs	2pcs
T	**T**
	
2pcs	4pcs

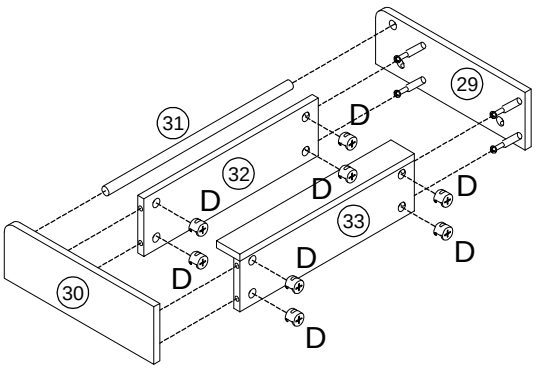


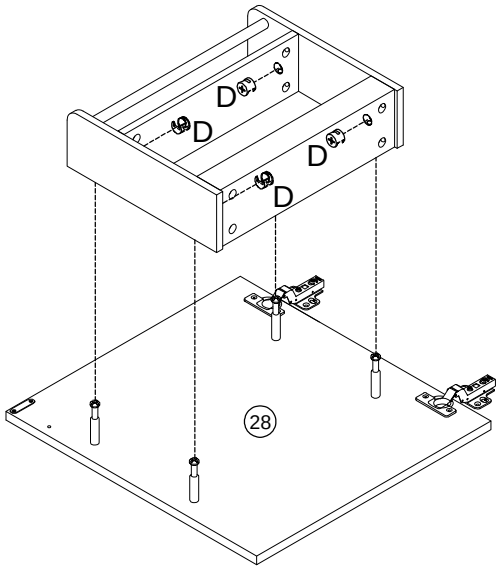


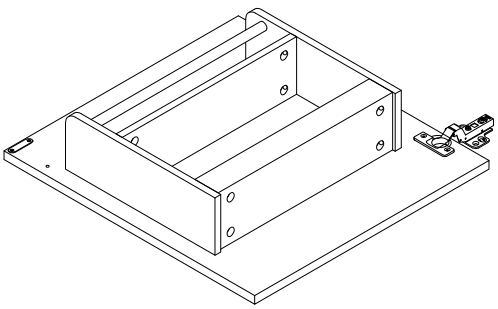


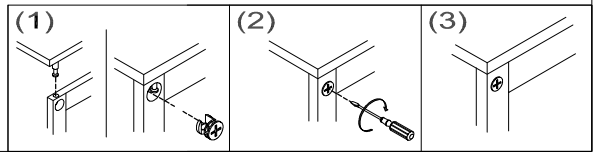


STEP:11


K	R	T
		
1pc	1pc	8pcs

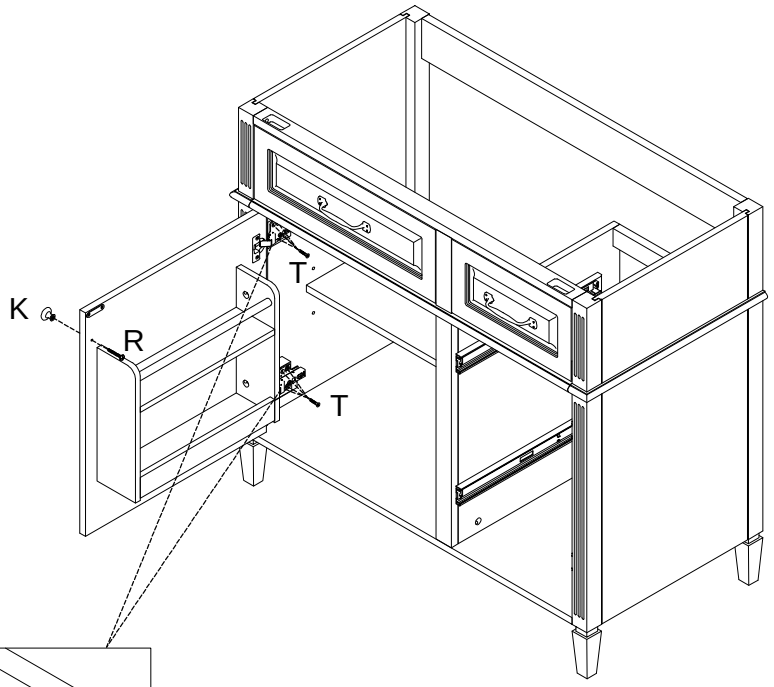



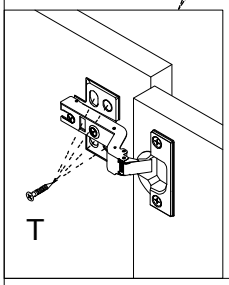


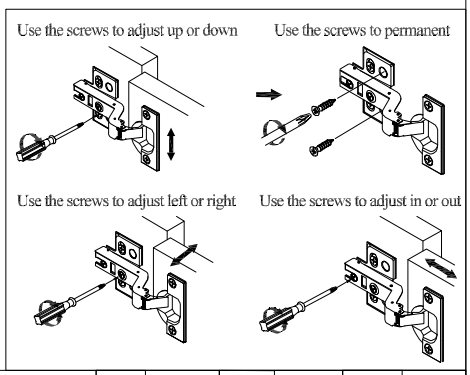



STEP:12

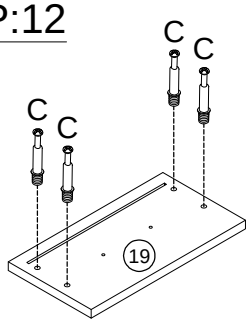


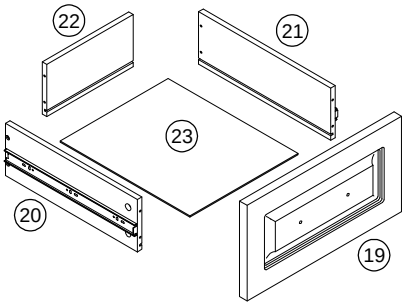


C	D	L
		
4pcs	4pcs	1pcs

R	P	Q
		
2pcs	4pcs	4pcs

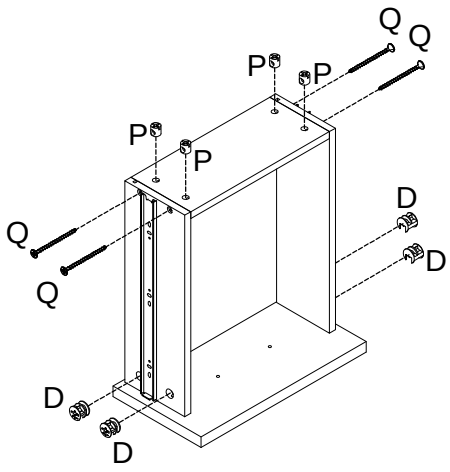

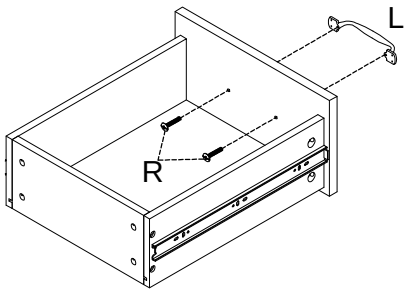


STEP:13

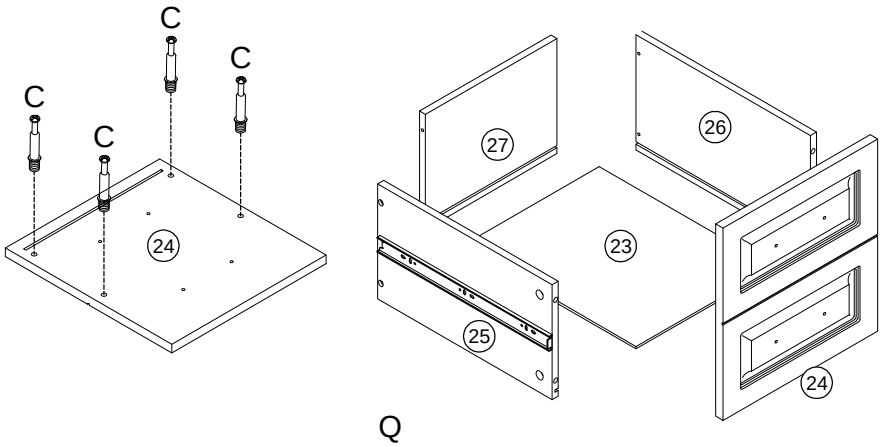


C	D	L
4pcs	4pcs	2pcs



R	P	Q
4pcs	4pcs	4pcs

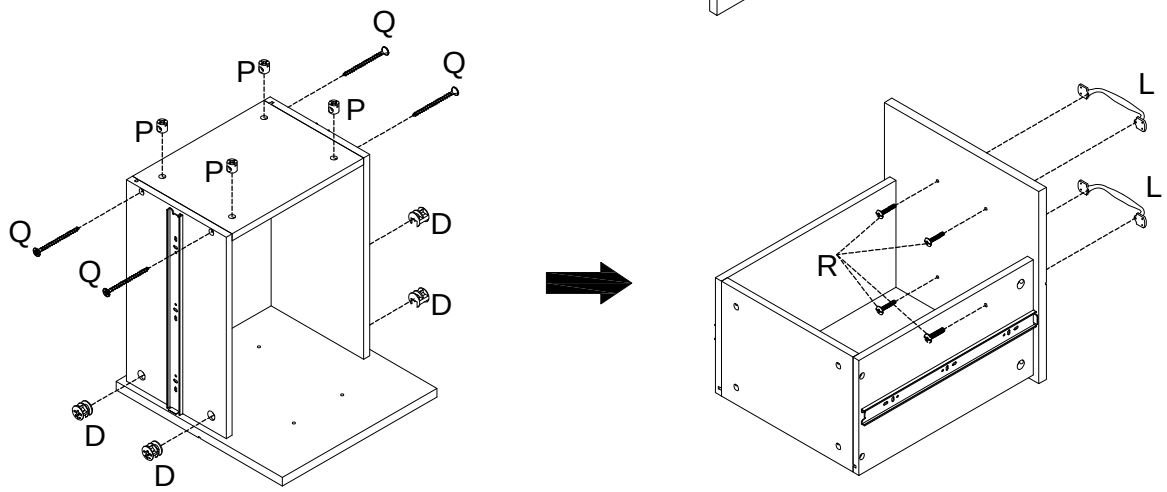



STEP:14

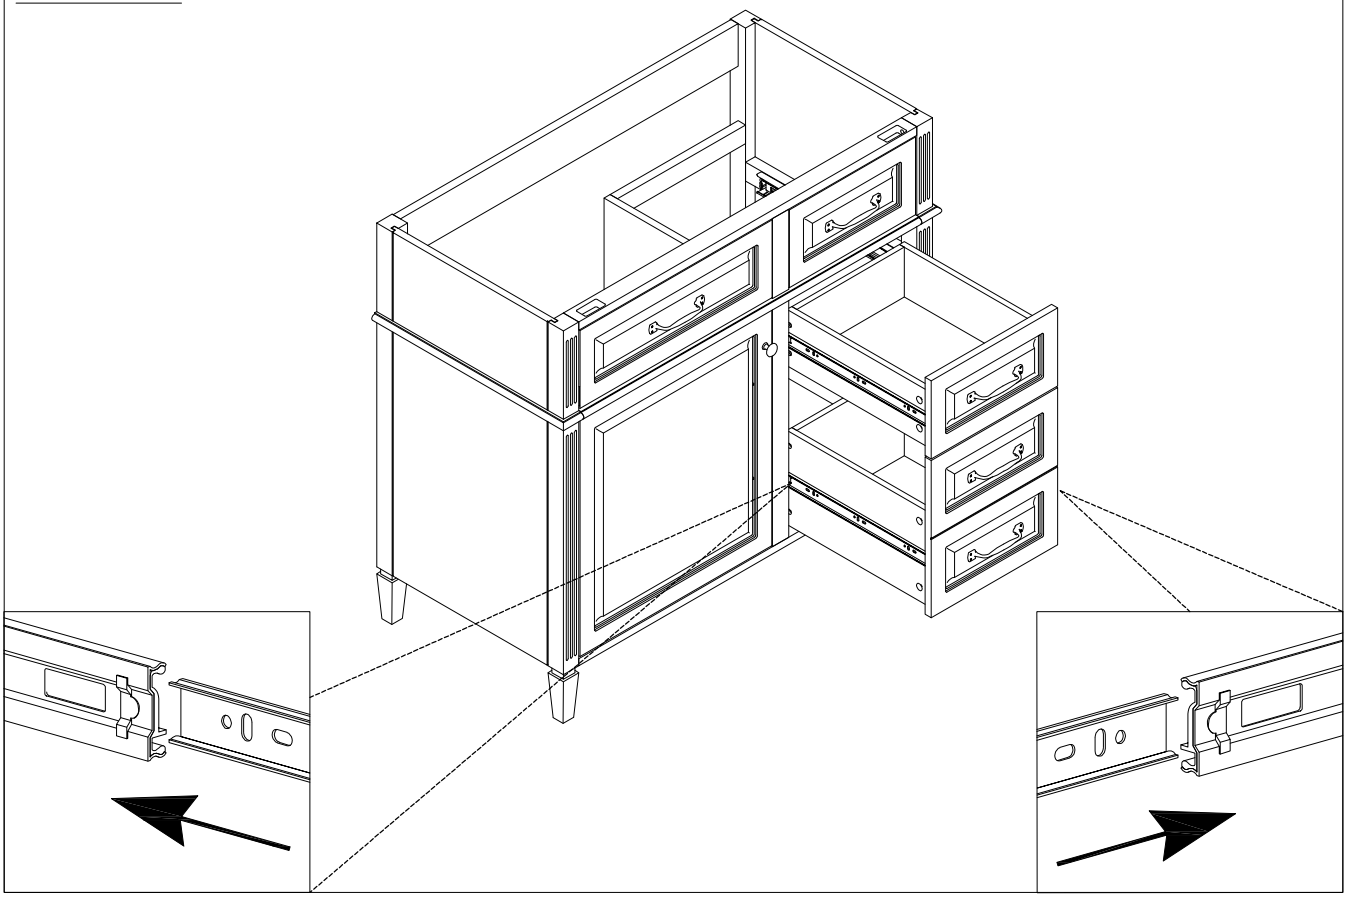


STEP:15

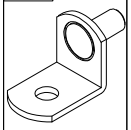
F	H
	
4pcs	4pcs

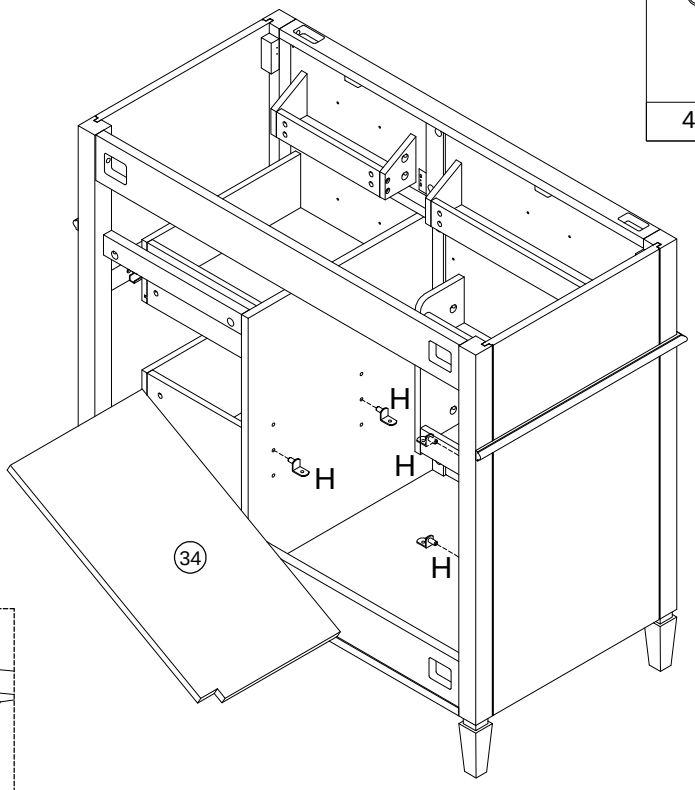

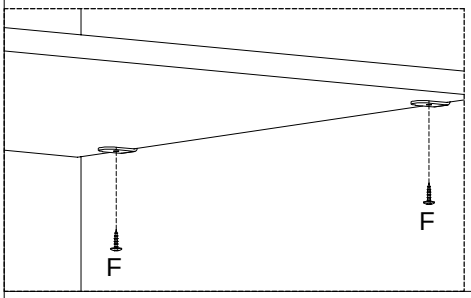


STEP:16

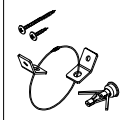
U

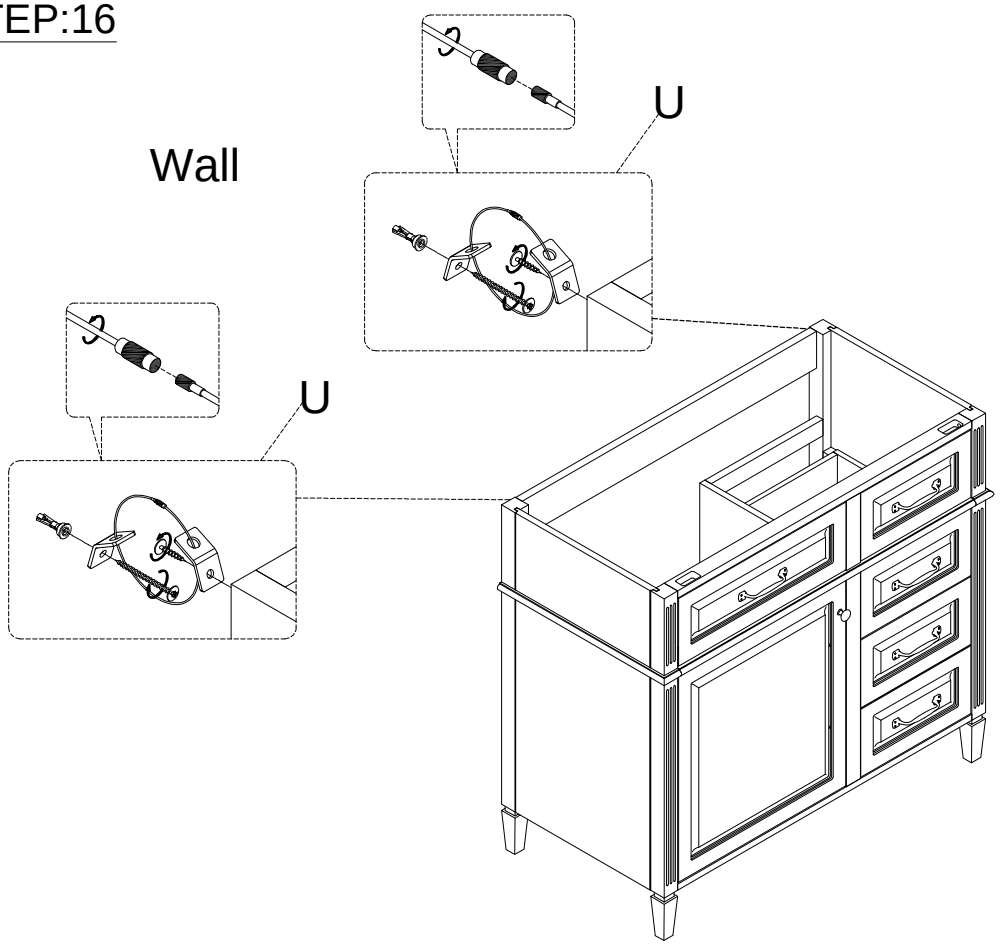2pcs




STEP:17

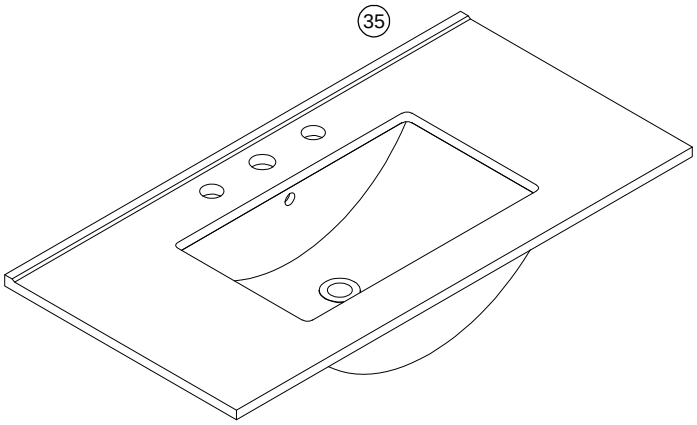
Install the sink on the cabinet with glue.
Let stand for 24 hours

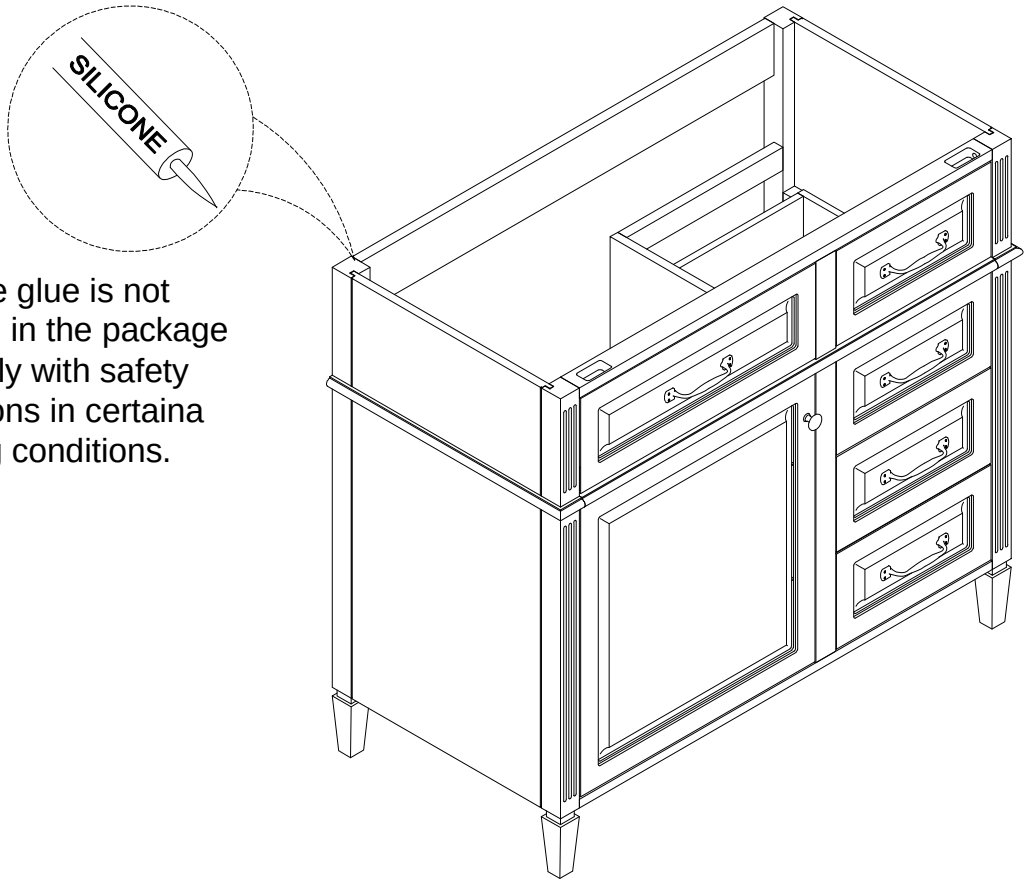




*Silicone glue is not included in the package to comply with safety regulations in certaina shipping conditions.

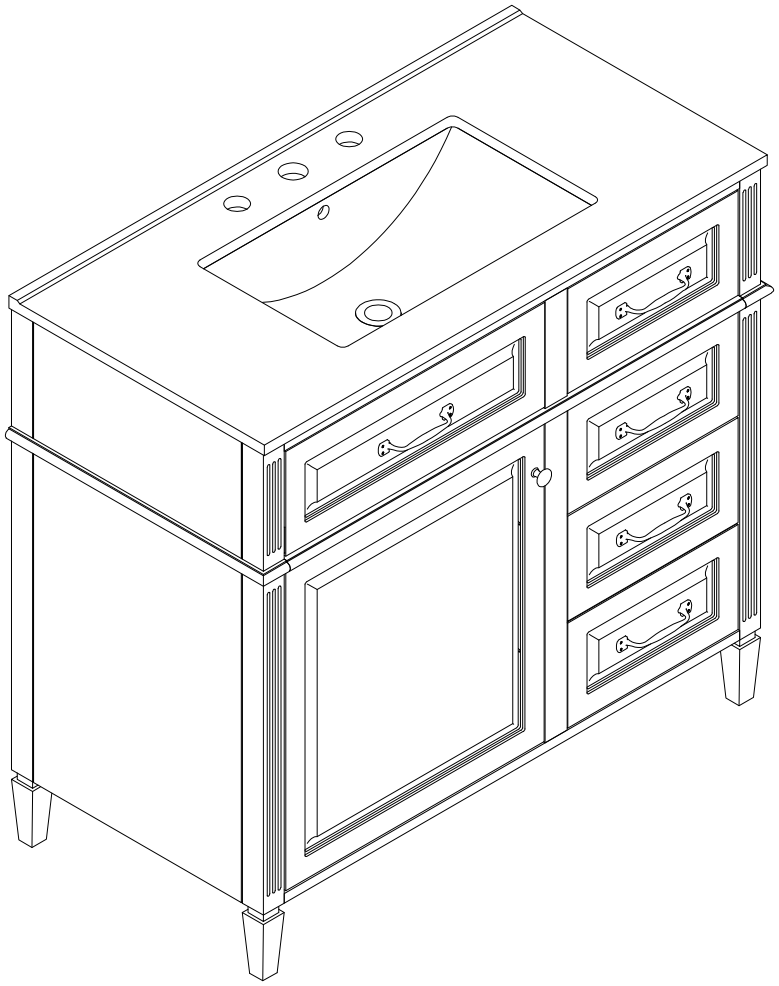


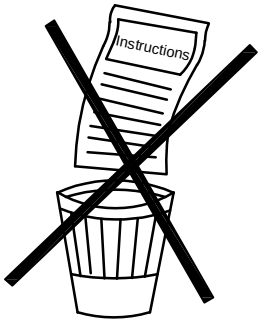
Instructions

HINGE ADJUSTMENTS

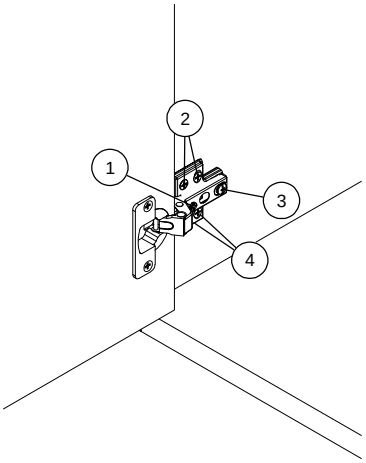


(1) Sideways / Tilt adjustment

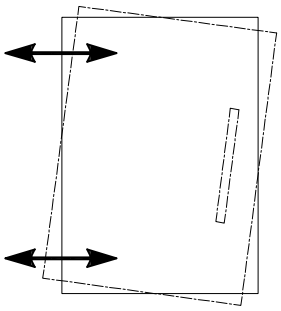

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

(2) (4) Height adjustment

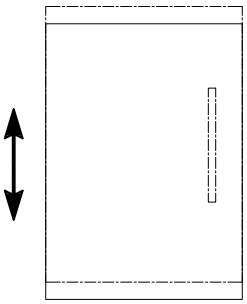

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

(3) Forward and back adjustment

