


EASY 5 STEP INSTALLATION




1
Bracket mounts slide to align with studding



2
Align bracket mounts to match stud centers

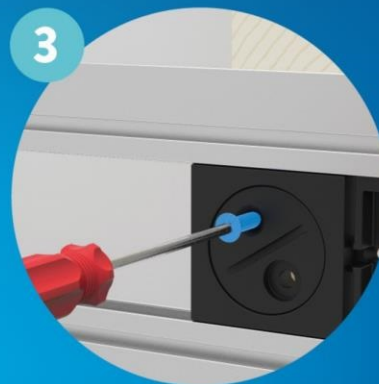

3
Loosely screw bracket mount to studding

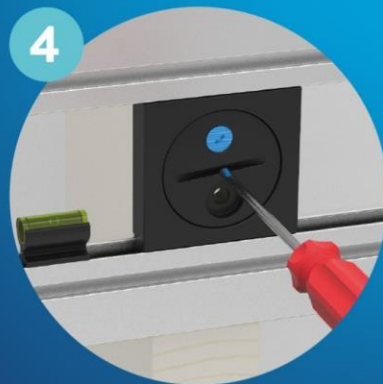

4
Rotate bracket mount cams to level bracket and tighten to lock



5
Hang the cabinet on the bracket and secure with locking studs