


REGINA ANDREW WALL LIGHTING TIPS

REGINAANDREW.COM

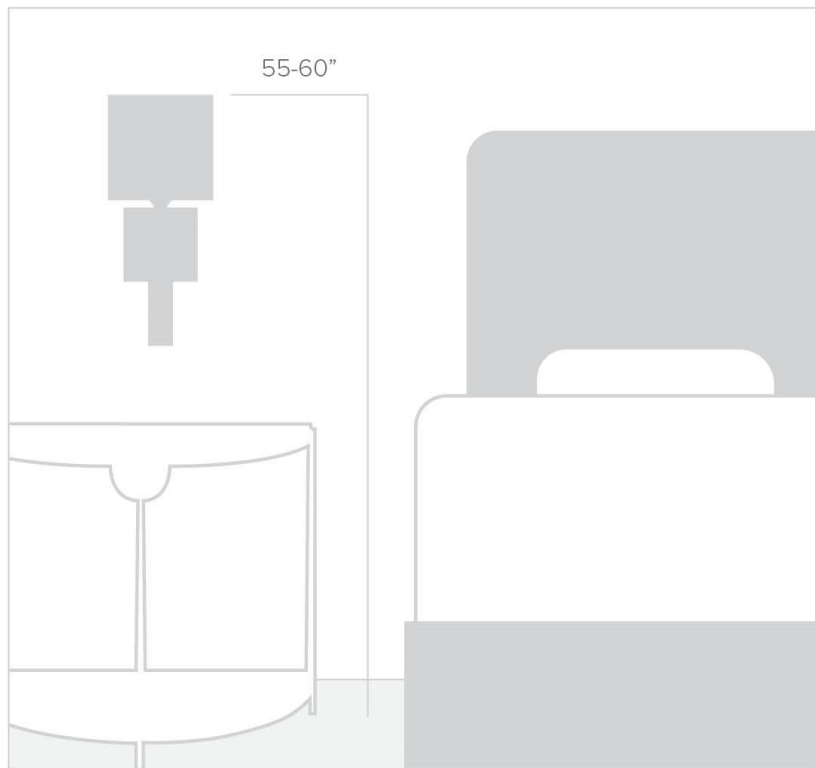

Bedside Fixtures

REGINA ANDREW THOUGHTS ON HEIGHT:

We suggest leaving about 55-60" of space between the floor and the top of the sconce. If your sconce has a switch, make sure that it is easily accessible from a sitting position on the bed.