


STORAGE CABINET

User Manual

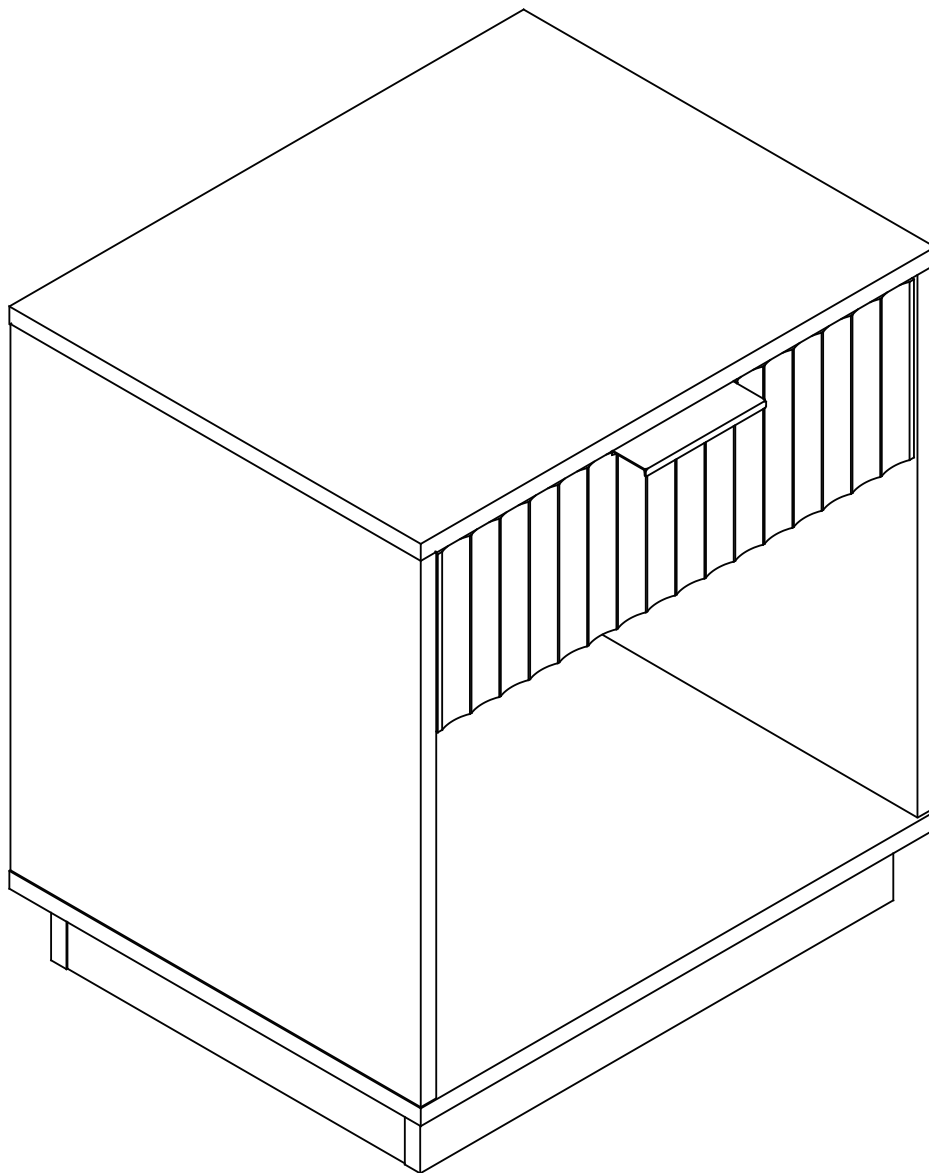

Made in China

For a Hassle-Free installation

1. Ensure you have received all cartons and familiarize yourself with the workload.

Make sure there are enough helping hands to assist you, and that you have allocated the time required to assemble your new product.

2. Make sure you have cleared enough space in your home for the assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

3. Read instructions carefully and check no parts are missing.

4. Lay out all hardware on a soft surface so you can easily identify them.

5. Carefully identify all components according to the labeled alphabet to ensure that the parts are in the correct place.

6. Install your new product carefully following the instructions. Don't skip ahead!

* If any parts are missing or damaged, we will gladly ship you replacement parts free of charge. Please contact us order ID and the Store Name of your purchase, we're always here to help :)

WARNING

Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.

2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.



3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

4. Unless specially designed to accommodate, do not set heavy objects on top of this product.













5. Place the heaviest items on the lowest shelf.

6. Never allow children to climb or bang on drawers, doors or shelves.



PANEL LAYOUT

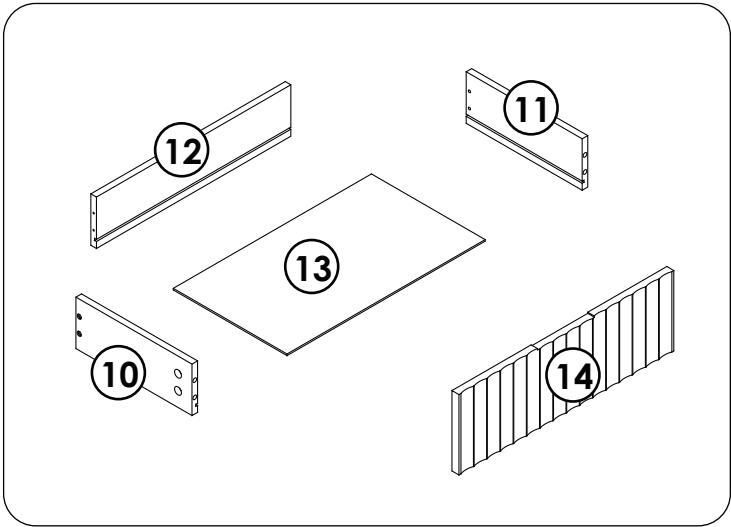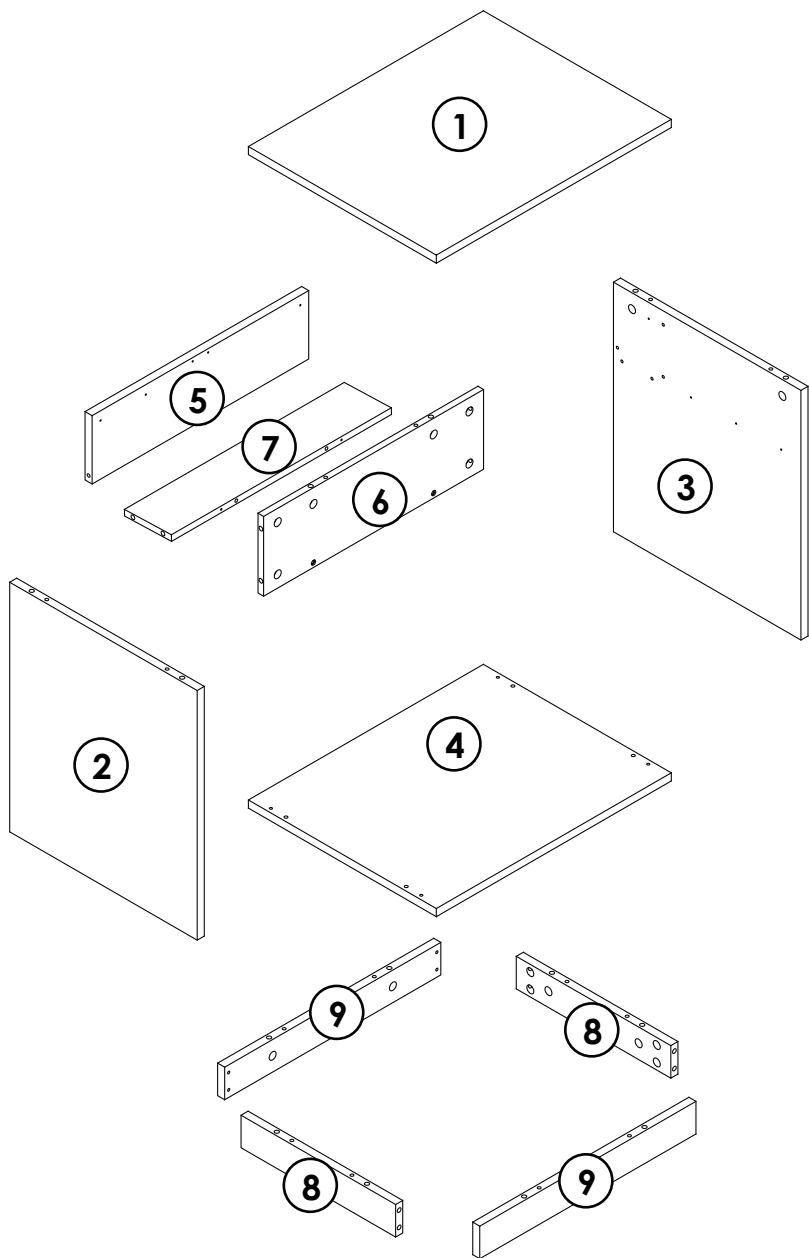





PARTS LIST




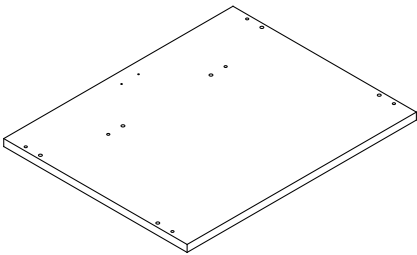
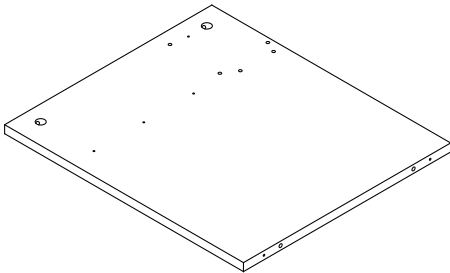
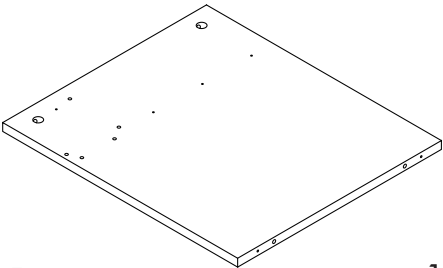
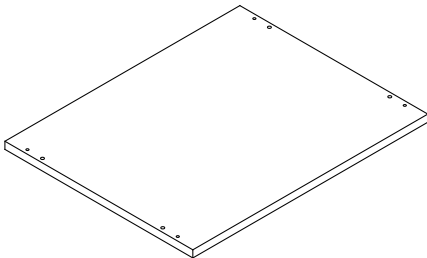
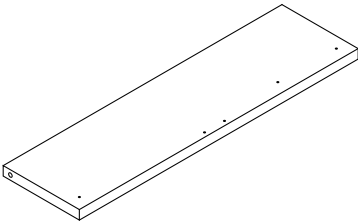
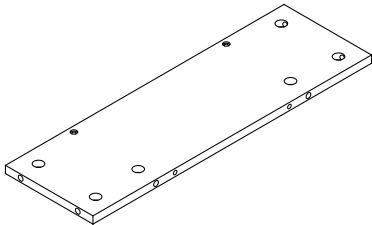
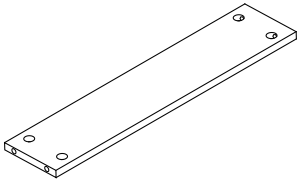
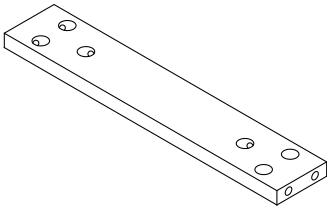
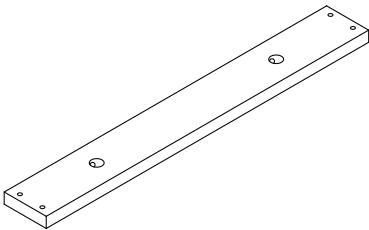
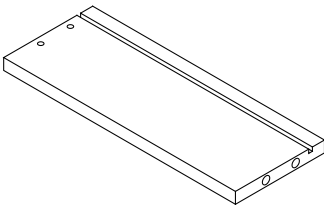
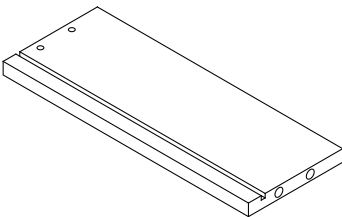
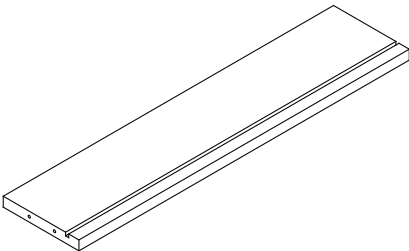
1  499*399*15mm 1 pc	2  460*398*15mm 1 pc
3  460*398*15mm 1 pc	4  499*399*15mm 1 pc
5  460*126*15mm 1 pc	6  468*146*12mm 1 pc
7  468*99*12mm 1 pc	8  329*59*15mm 2 pcs
9  459*59*15mm 2 pcs	10  250*95*12mm 1 pc
11  250*95*12mm 1 pc	12  419*95*12mm 1 pc

PARTS LIST

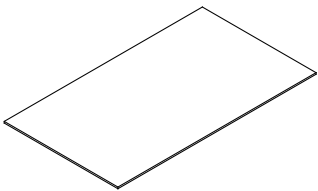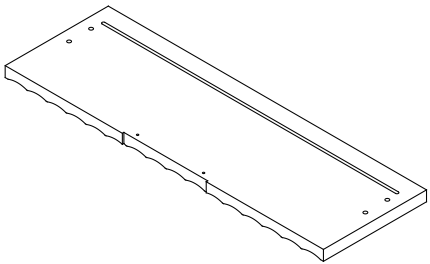13  427*245*3mm 1 pc	14  463*150*15mm 1 pc
---	---


HARDWARE LIST

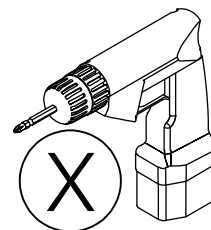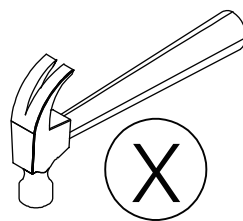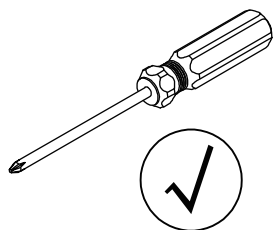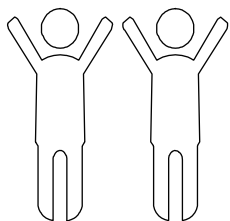

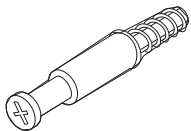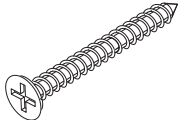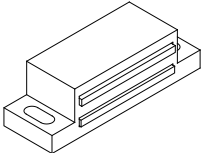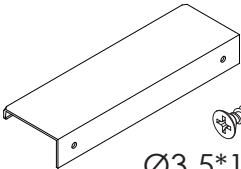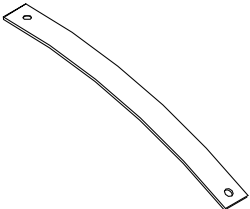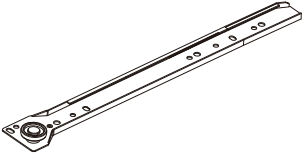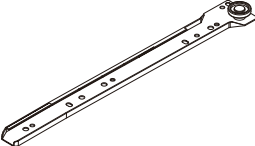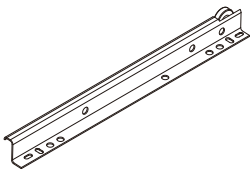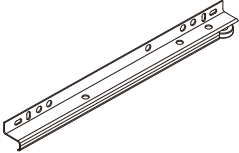A  Ø6*35mm 34 pcs	B  Ø15*10mm 34 pcs	C  Ø6*30mm 20 pcs	D  Ø4*40mm 10 pcs
E  Ø3*14mm 14 pcs	F  +  45*16mm 3*14mm 1pc		G  45*12mm 1pc
H  120*34*16mm 1 pc Ø3.5*12mm	I  215*20mm 2 pcs	J  230*12mm 1 pc	K  4*14mm 6 pcs
L  Ø5mm 2 pcs	CL  L 250mm 1pc	CR  L 250mm 1pc	DL  L 250mm 1pc
DR  L 250mm 1pc			

ASSEMBLY STEPS

CAM BOLT INSTALLATION AS BELOW:

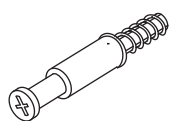

Cam bolt




Connecting piece

Pin


Panel

No gap

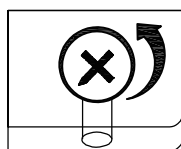





X

Rotate connecting piece if found in the position illustrated above.

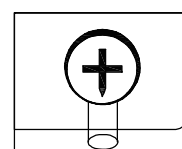

✓

Correct orientation to receive bolts.

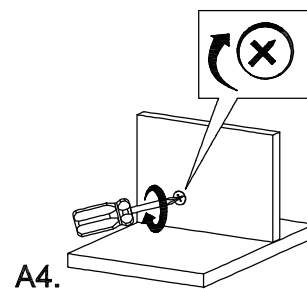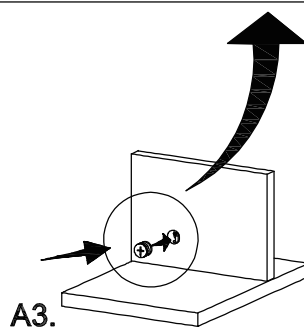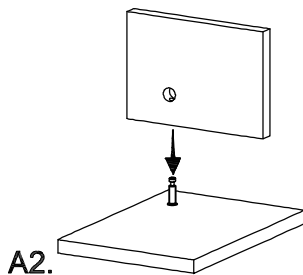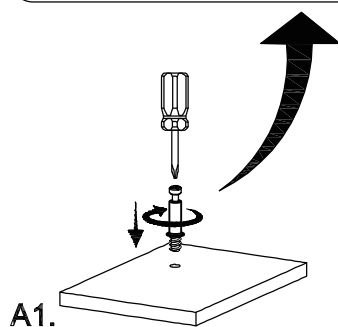


CR

CL

DR

DL




1

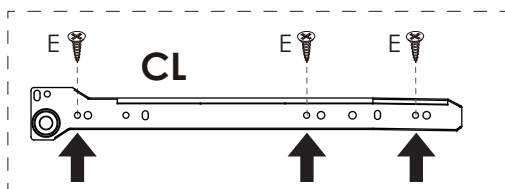


Lock the slides onto the plate according to the holes shown in the illustration.

YOU WILL NEED

CL x1	E x3	A x4
-------	------	------

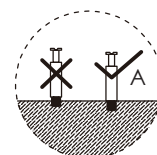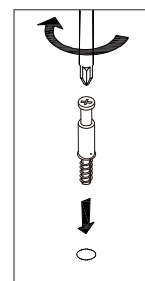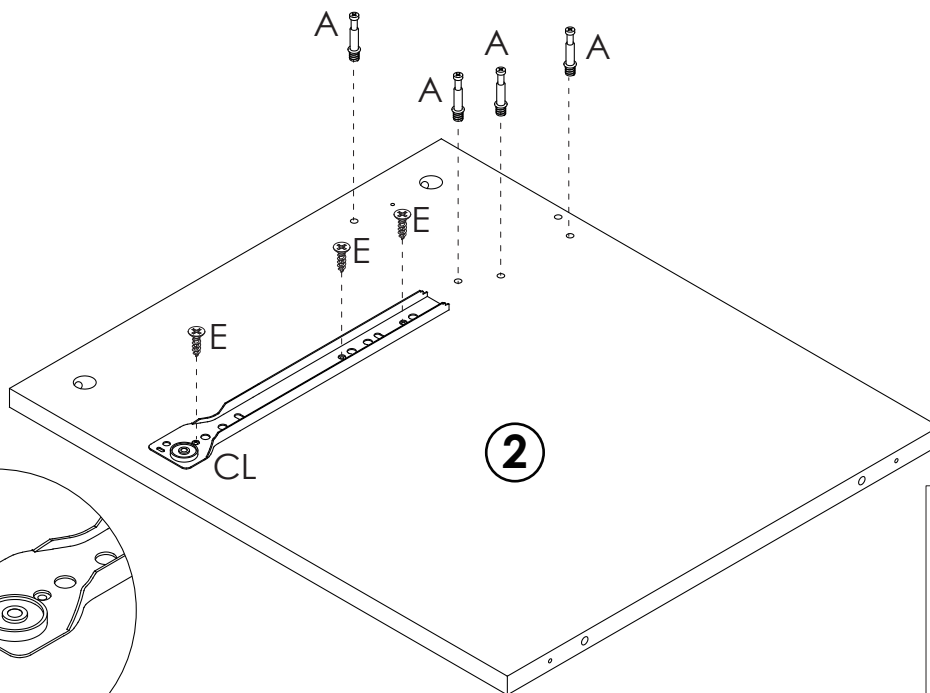




2

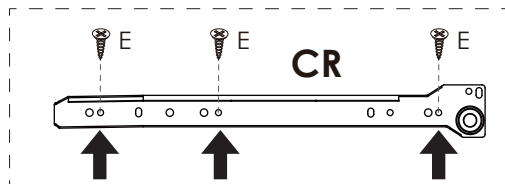

Lock the slides onto the plate according to the holes shown in the illustration.

YOU WILL NEED

CR x1	E x3	A x4
-------	------	------

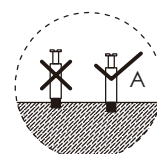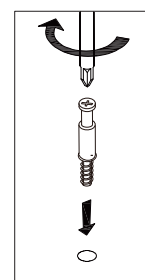
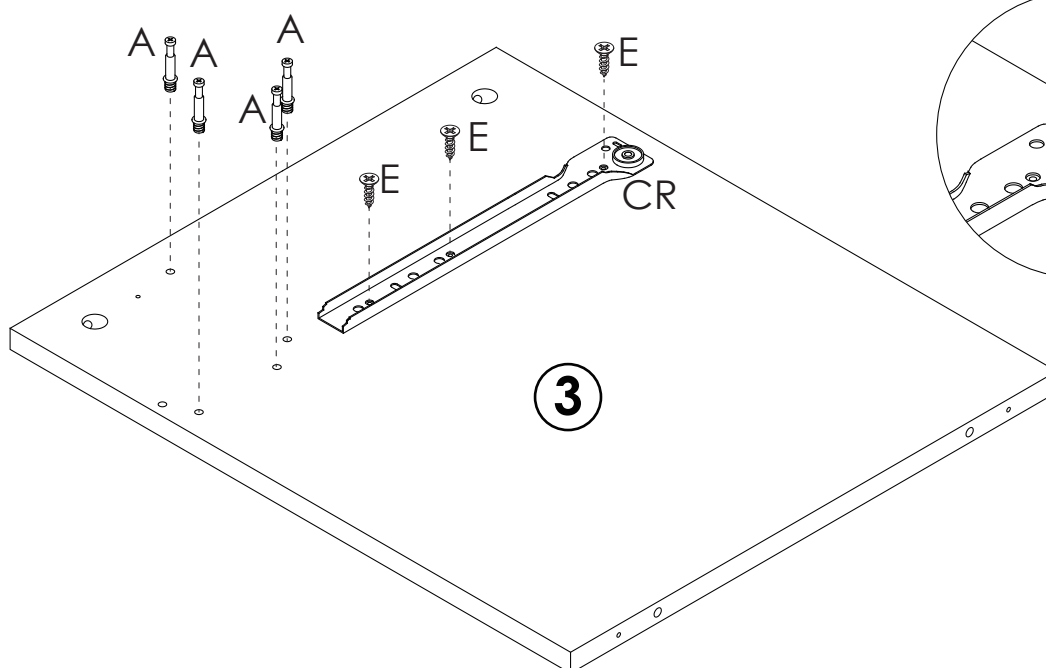


3

YOU WILL NEED

C x2



D x2

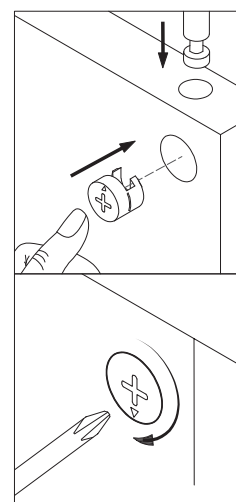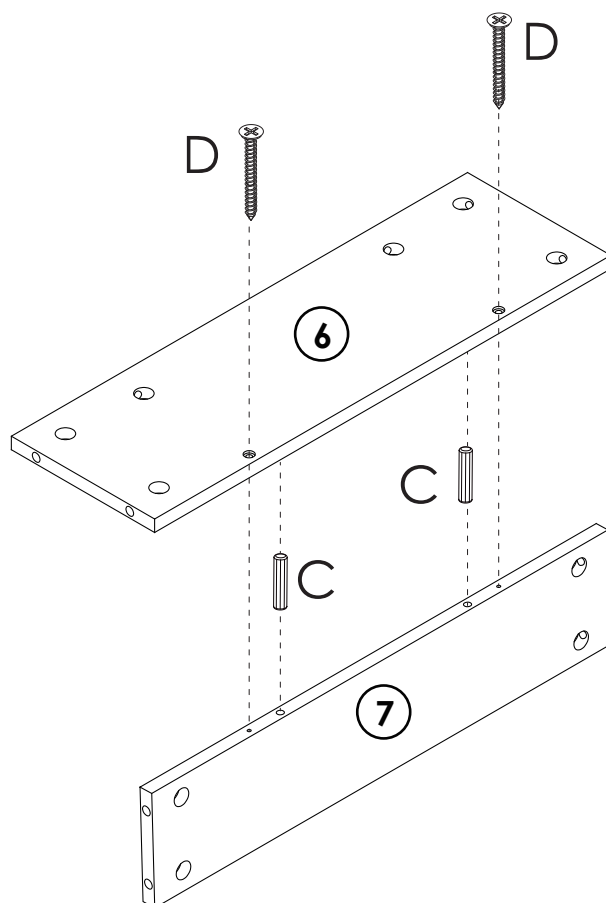

4

YOU WILL NEED



B x4

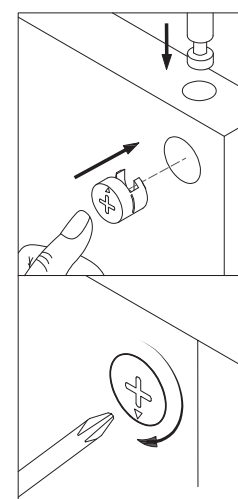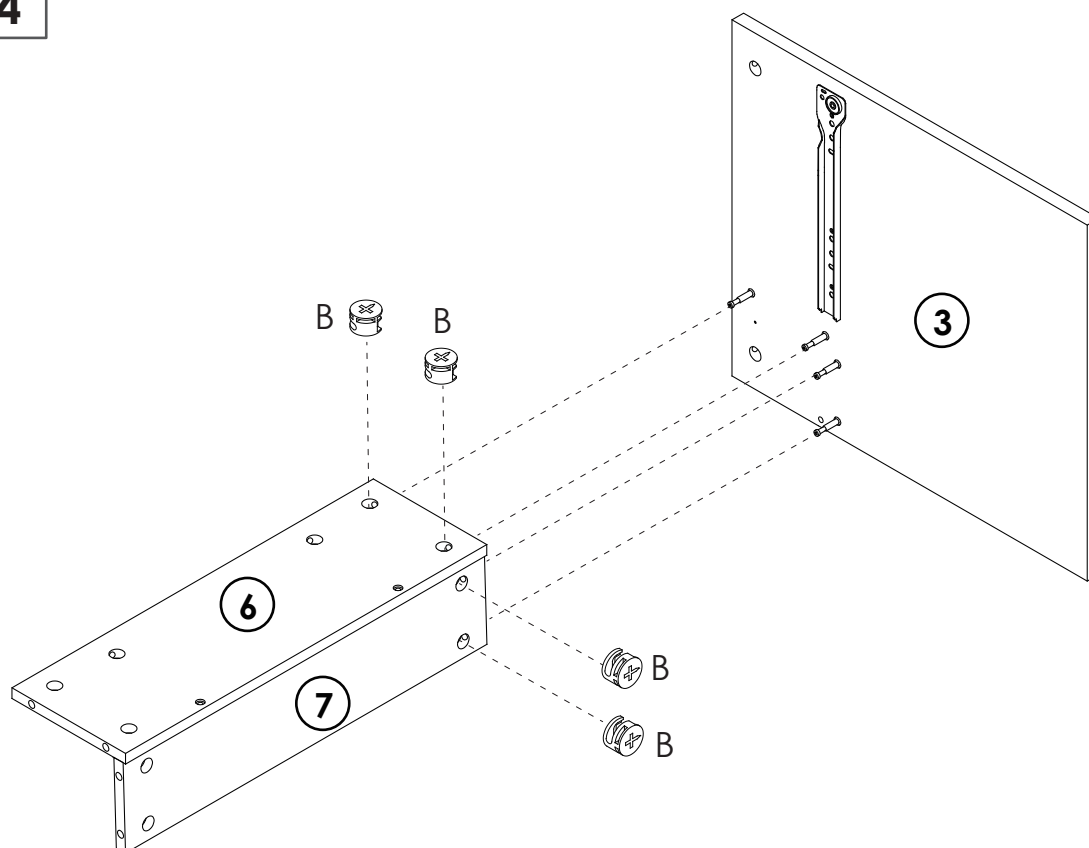

5

YOU WILL NEED




B x4

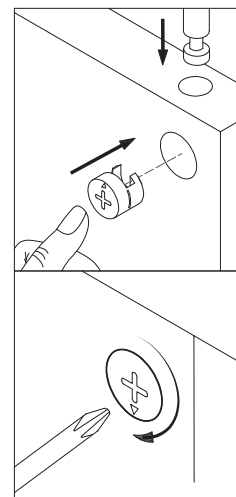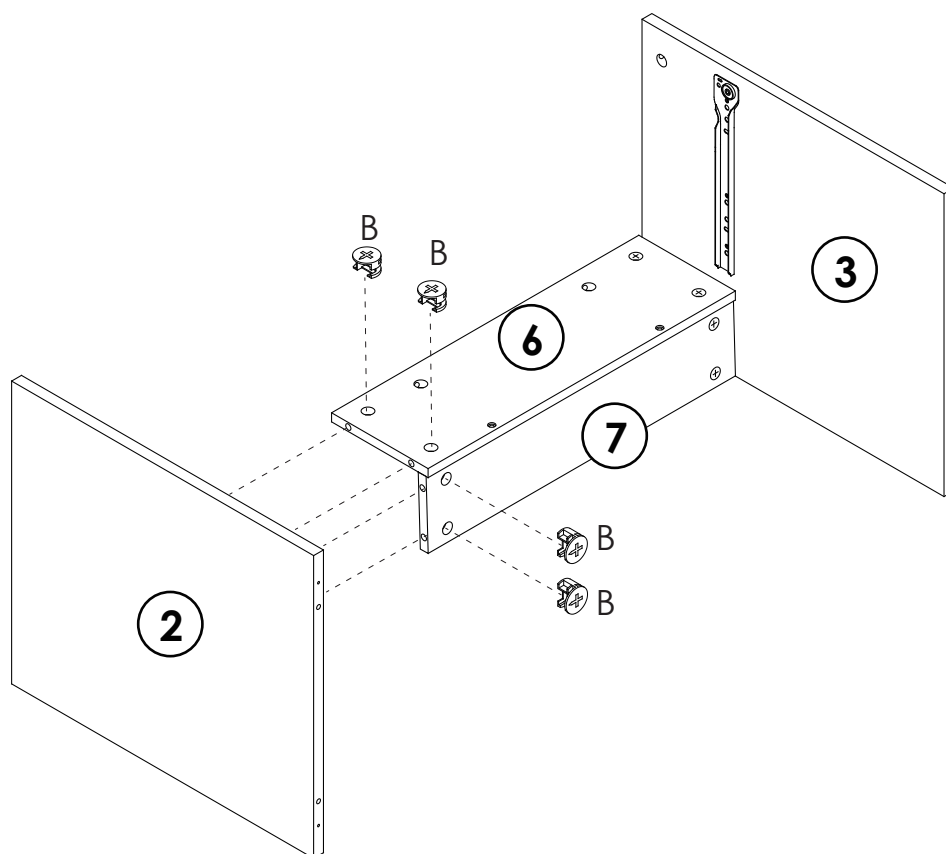

6

YOU WILL NEED

A x8

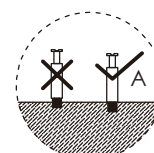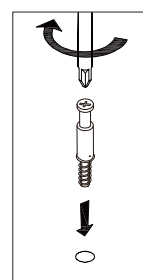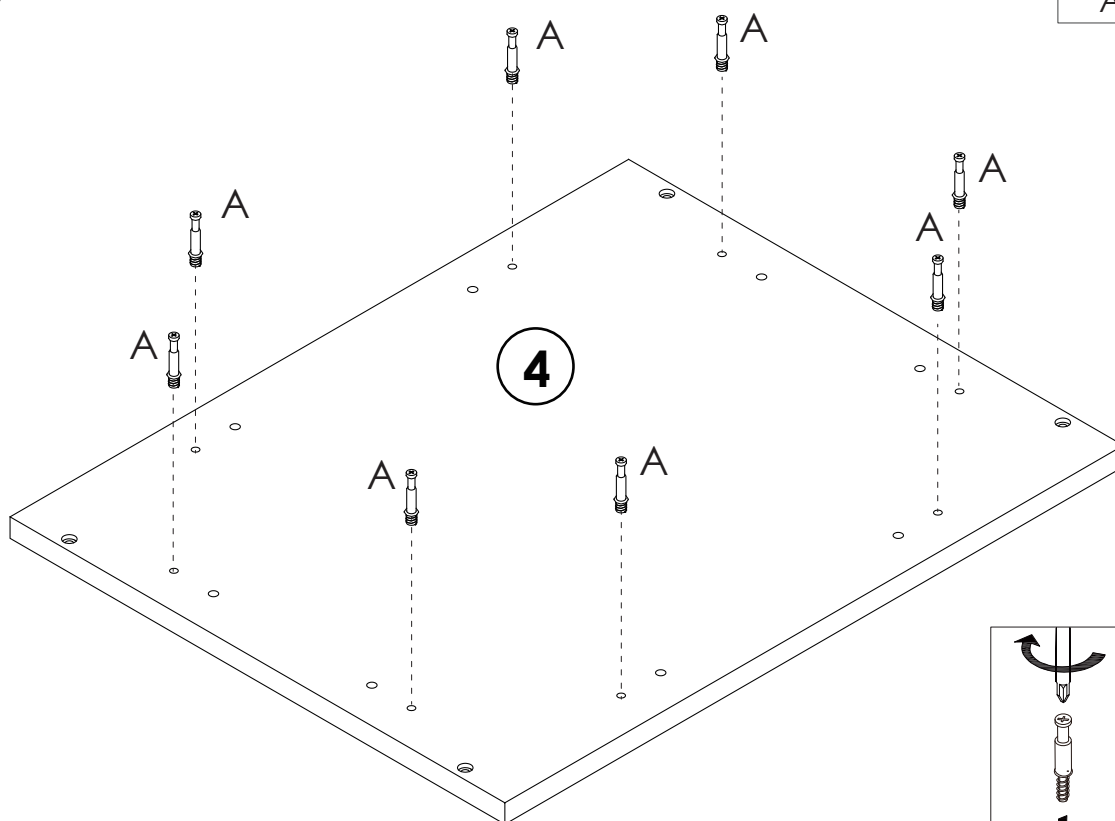


7

YOU WILL NEED

C x4


D x4

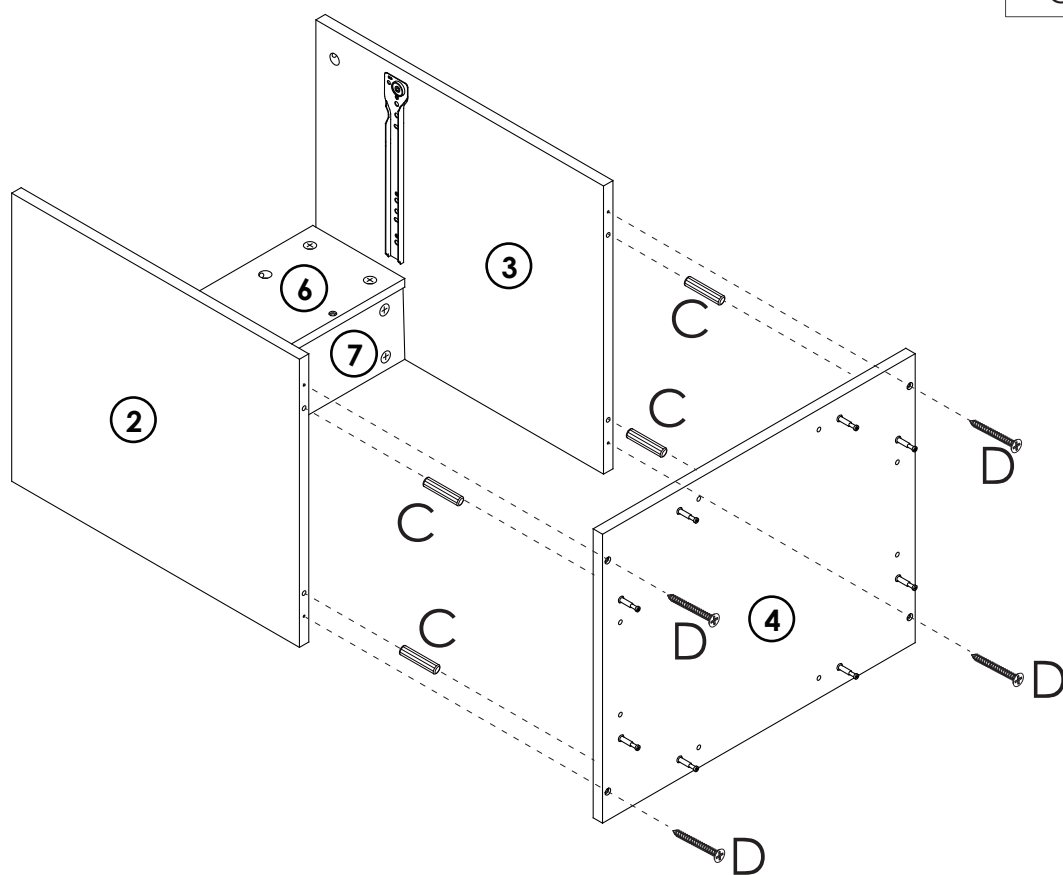



8

YOU WILL NEED

A x8

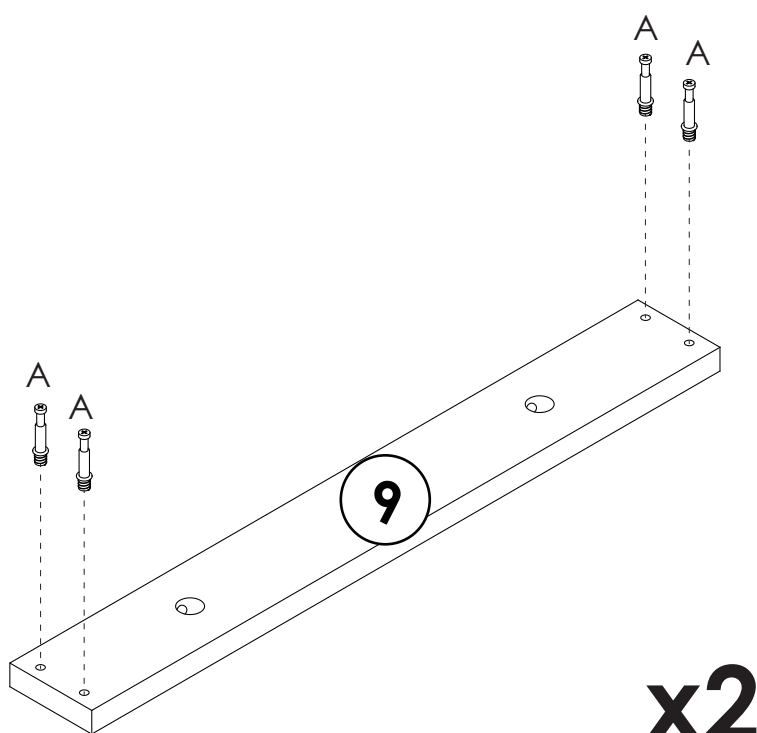



x2

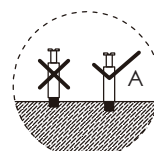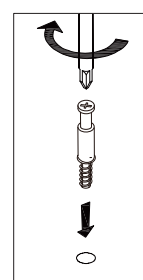

9

YOU WILL NEED

B x8

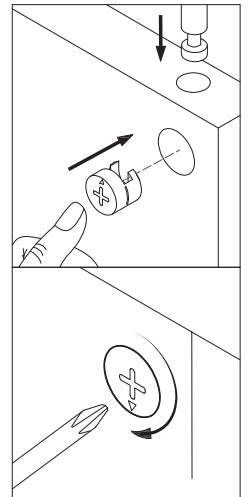
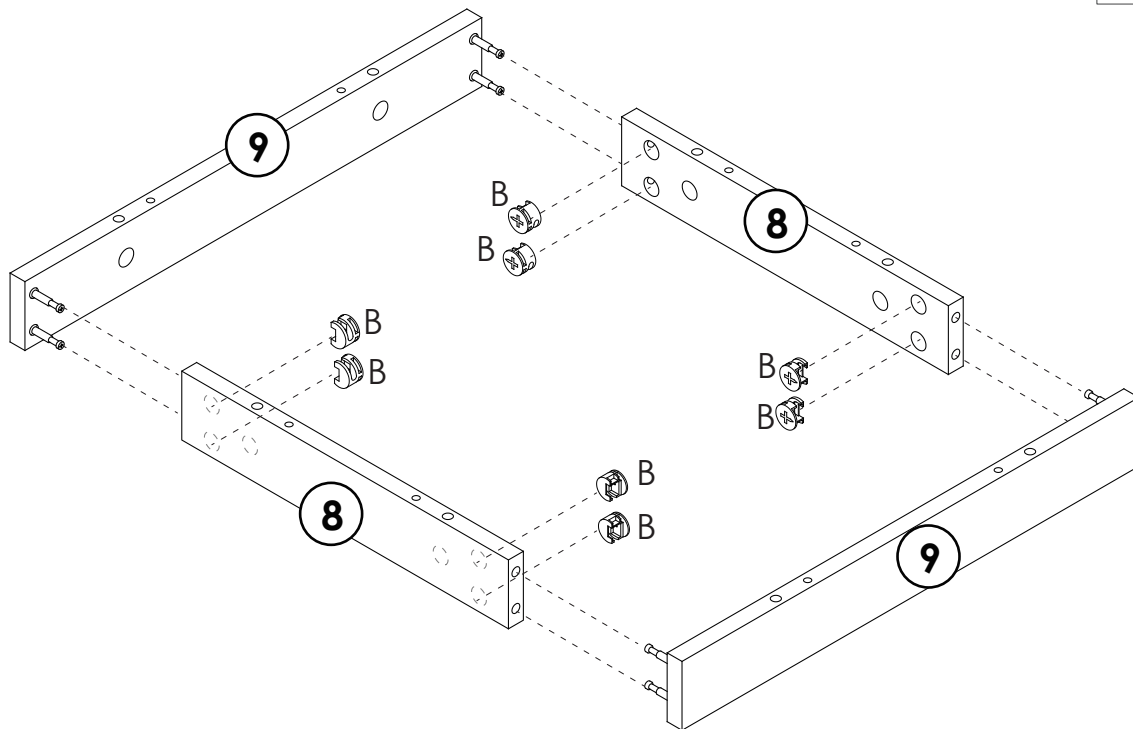


10

YOU WILL NEED

C x8

B x8

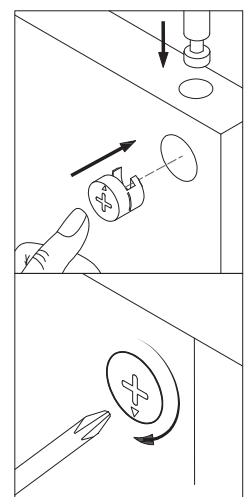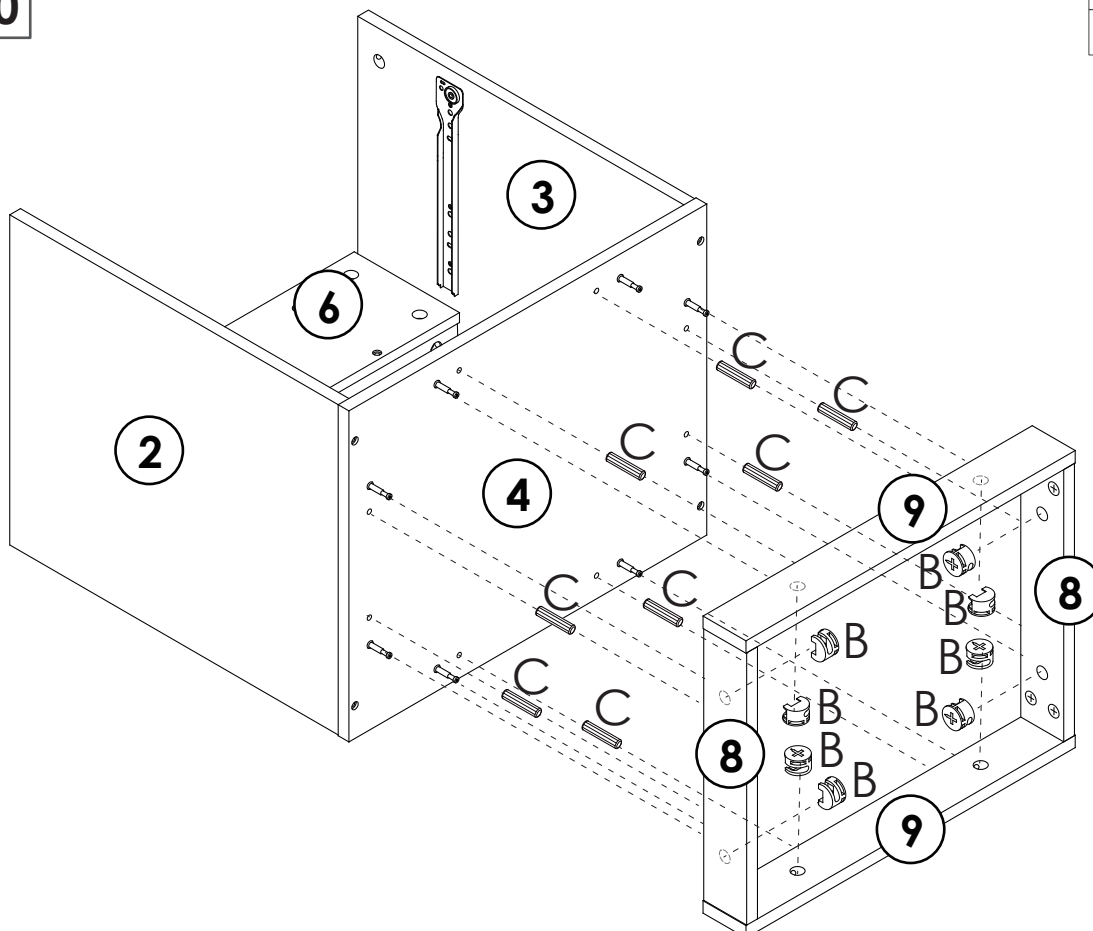


11

YOU WILL NEED

A x6

Fx1


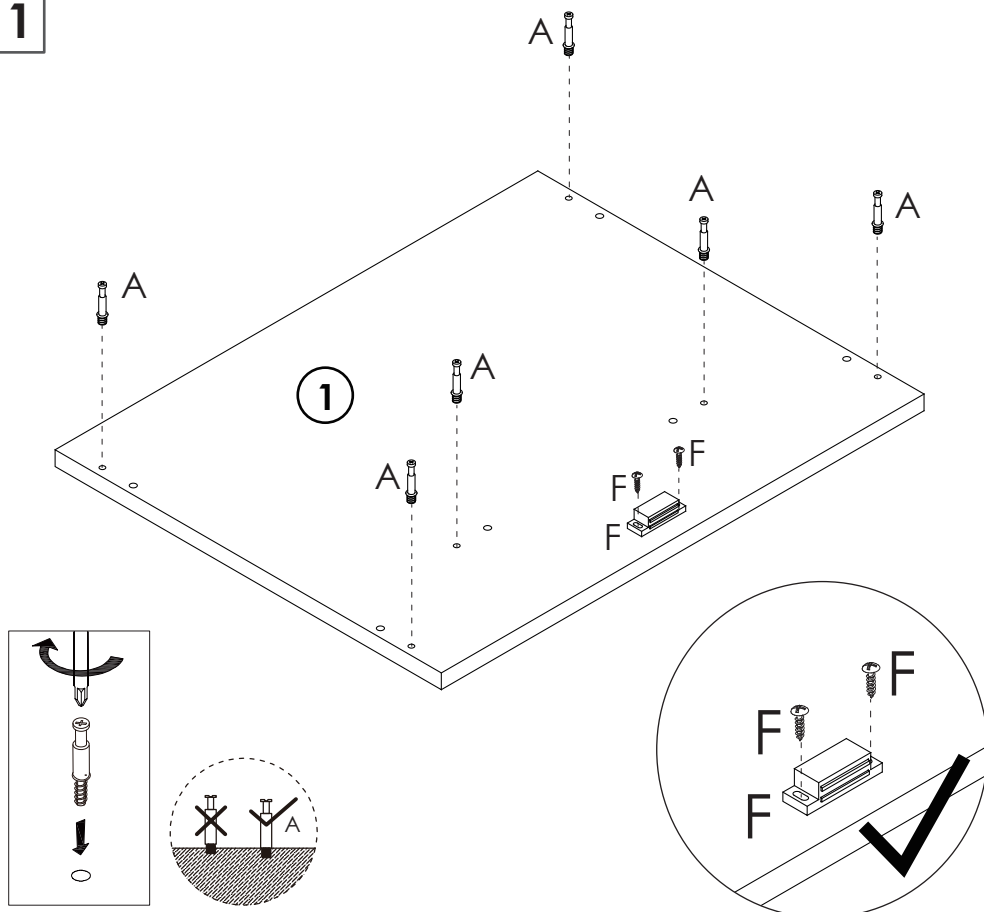


12

YOU WILL NEED

C x6


B x6

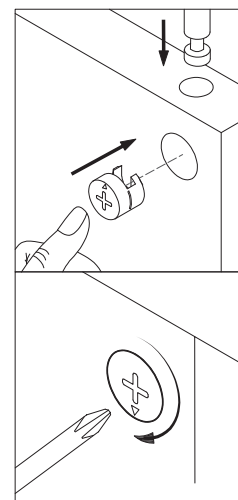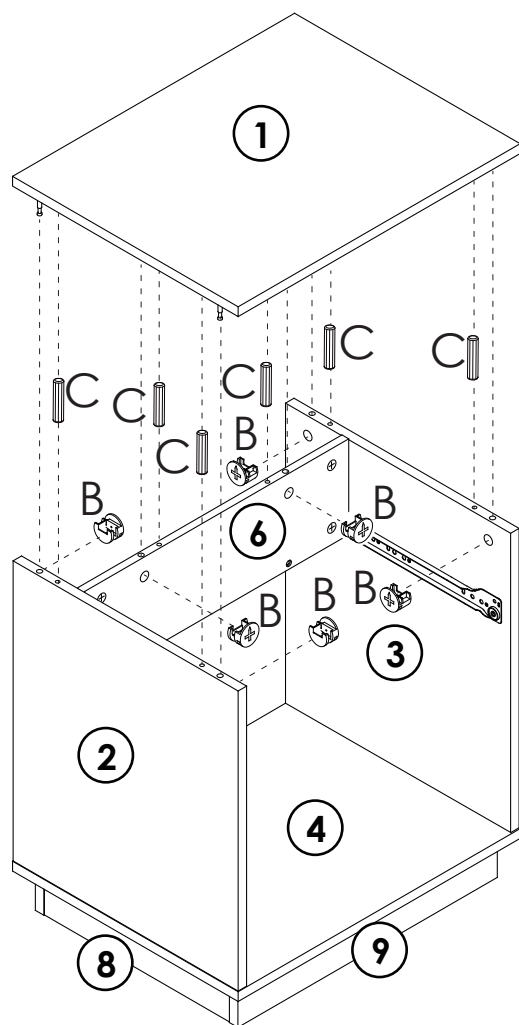


13

YOU WILL NEED

D x4

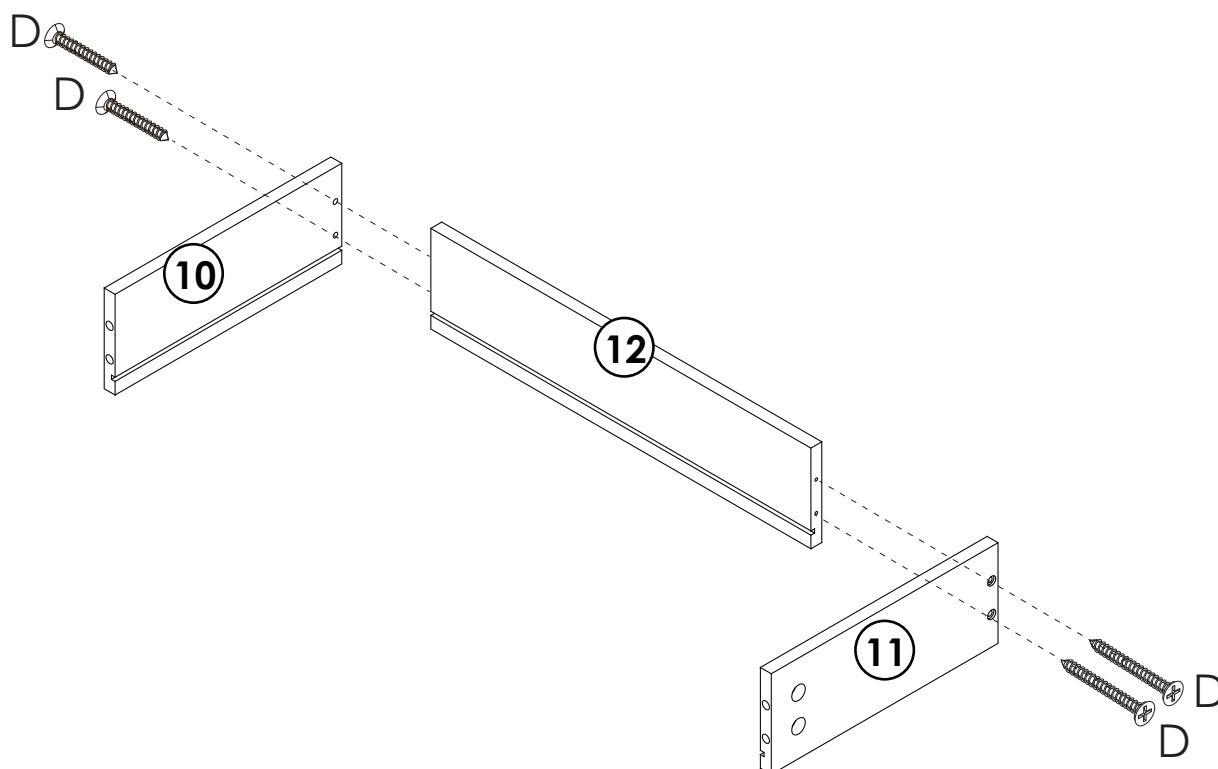


14

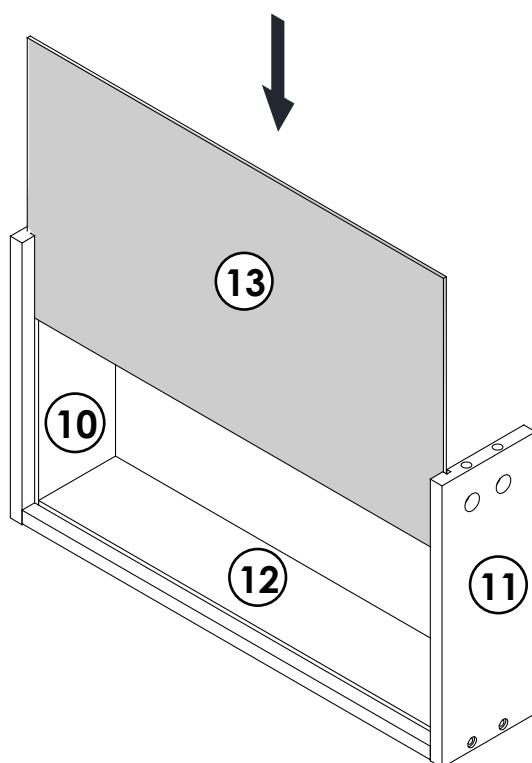

The thin backplate must be fully installed into the slot or it will prevent proper installation.



The 13th board needs to be fully inserted into the 12th board



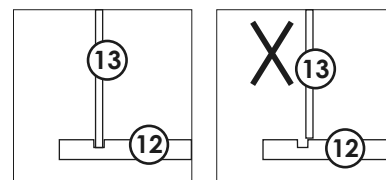


15

YOU WILL NEED

A x4



H x1

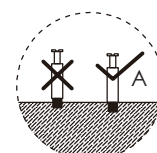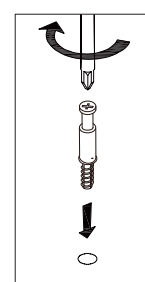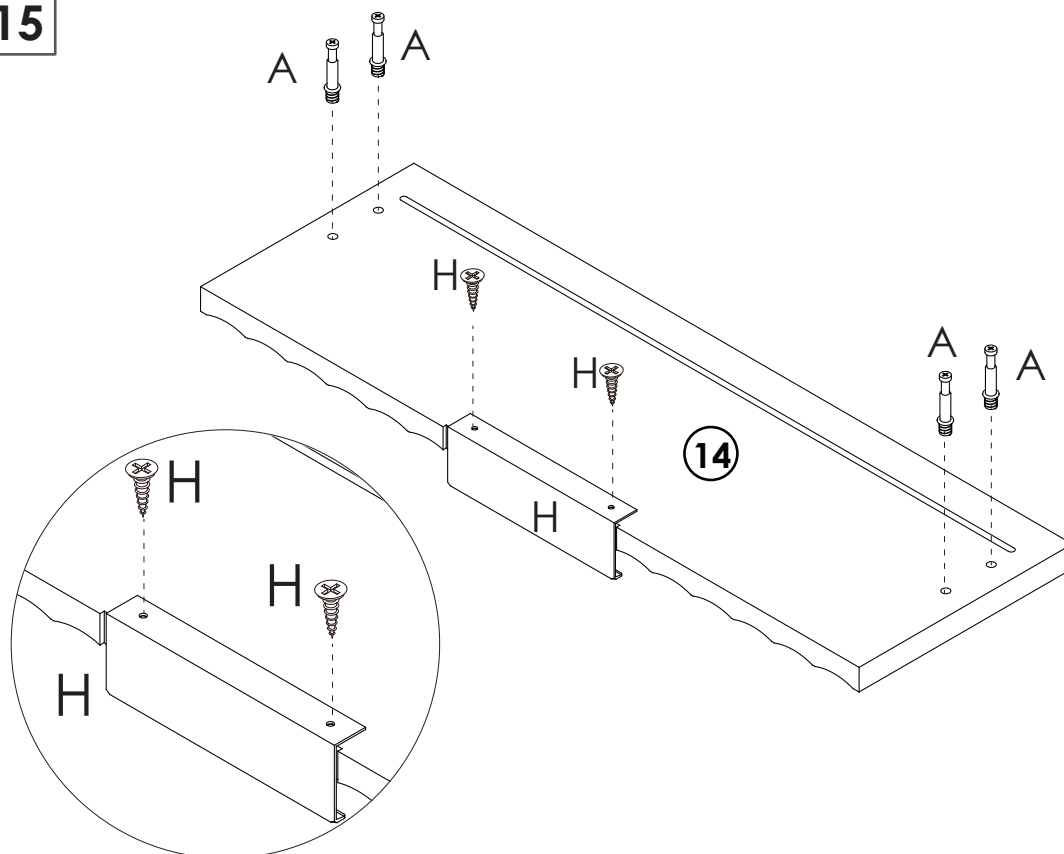

16

YOU WILL NEED

B x4

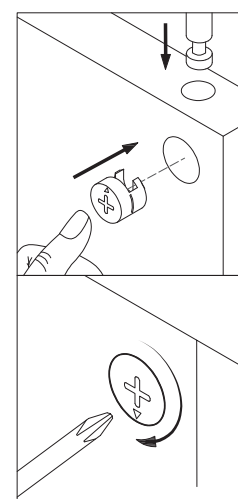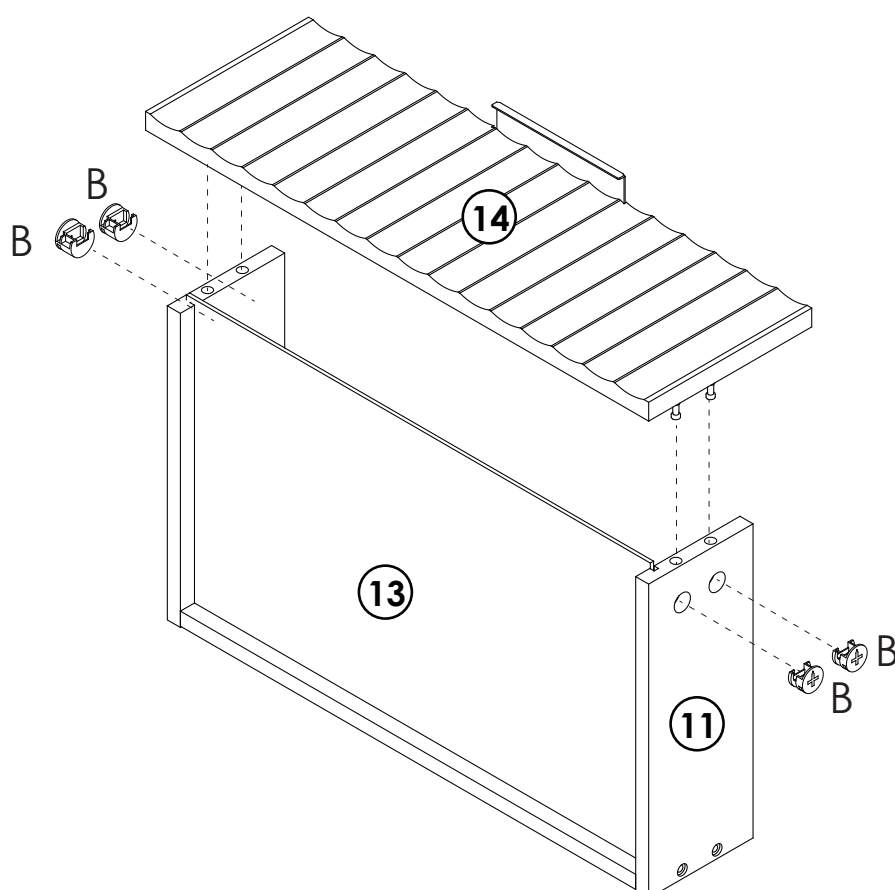

17




Lock the slides onto the plate according to the holes shown in the illustration.

YOU WILL NEED

DL x1




DR x1

E x6

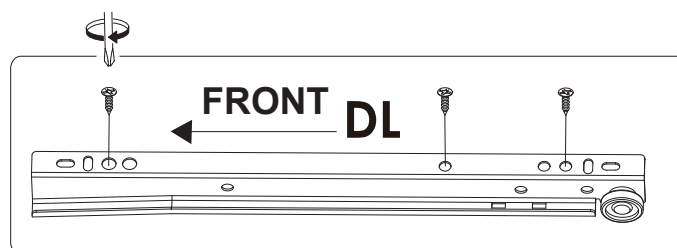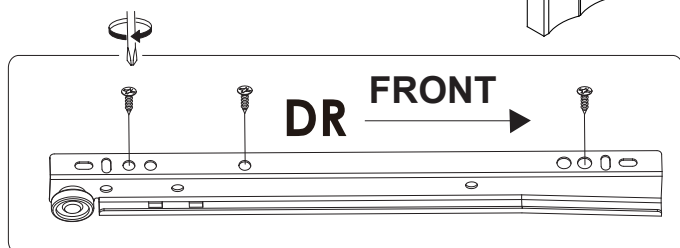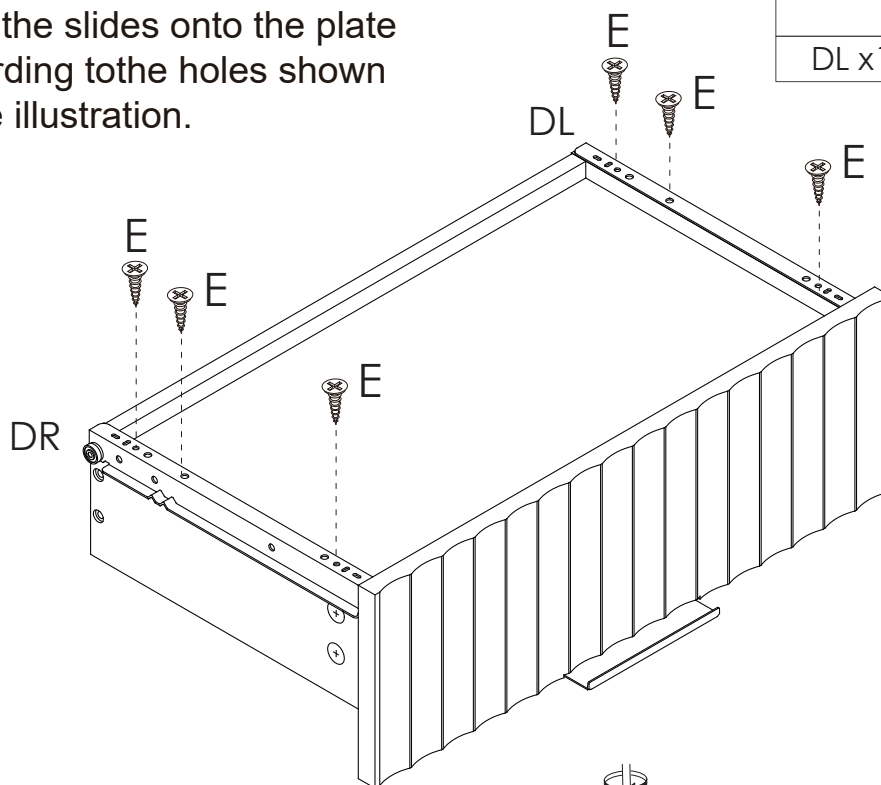

18

The rollers on both sides should be fully seated in the slides as shown.

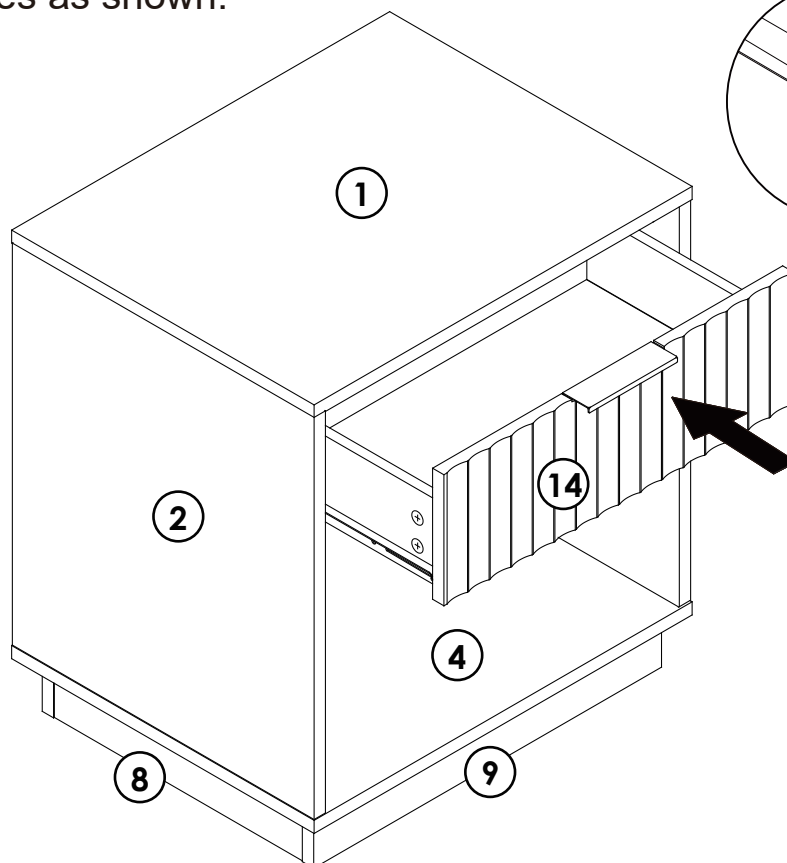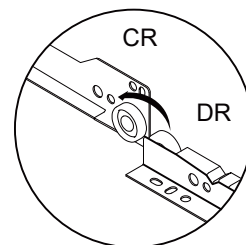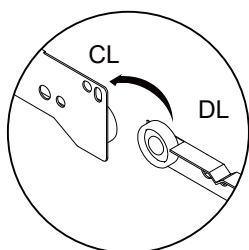

YOU WILL NEED

G x1


E x2

I x2






J x1

K x4

L x2

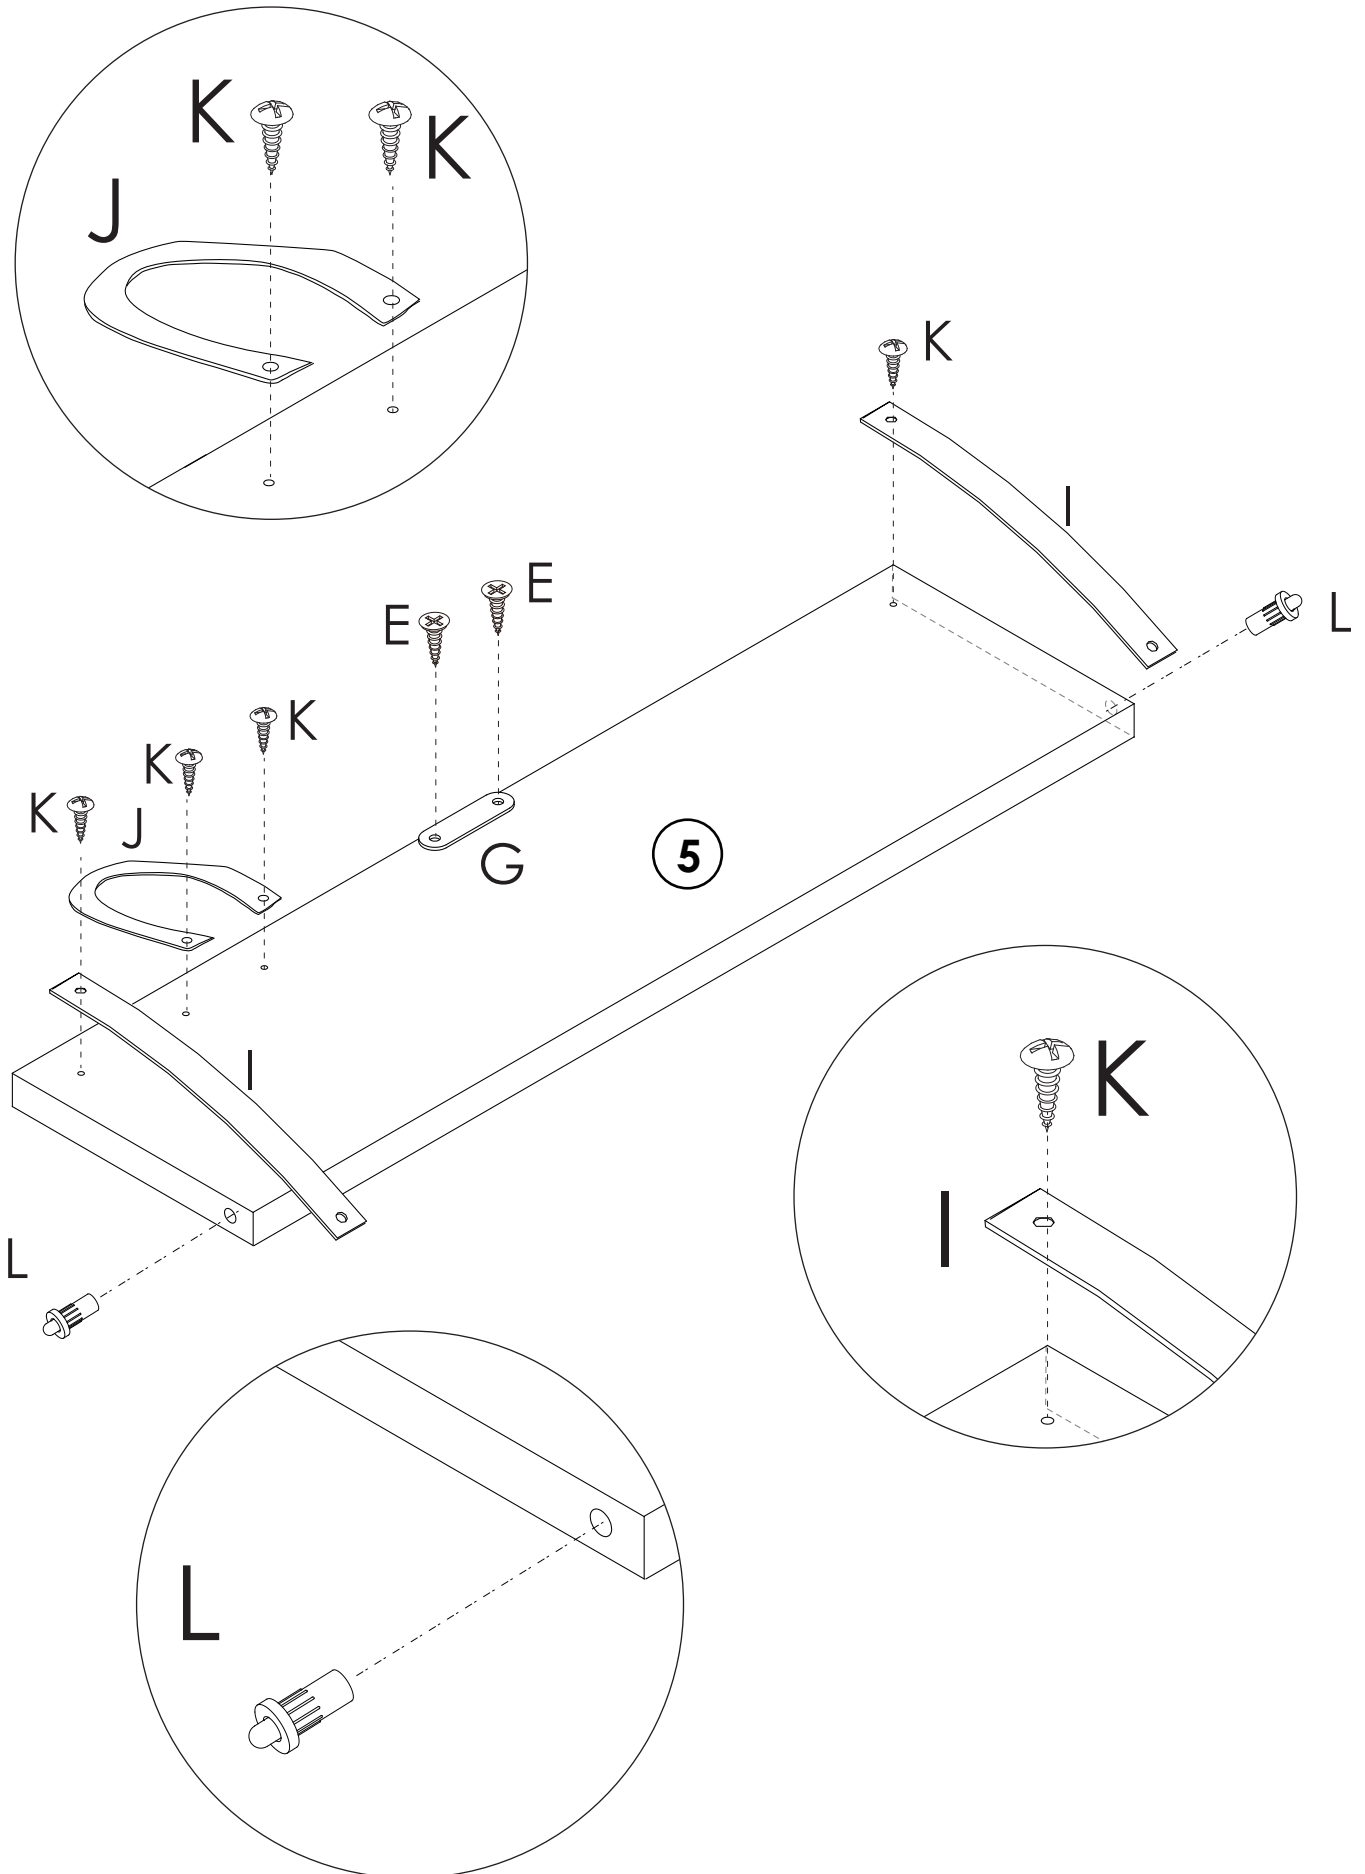




20

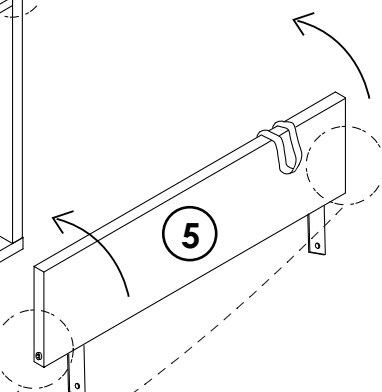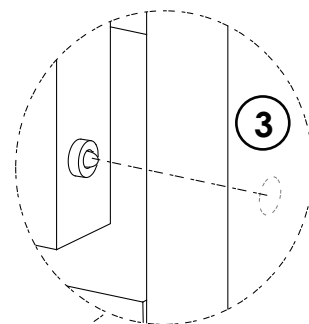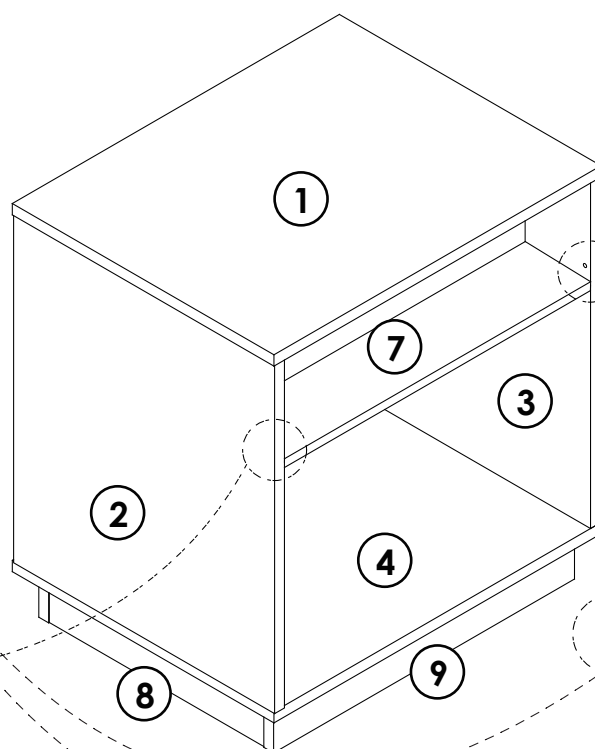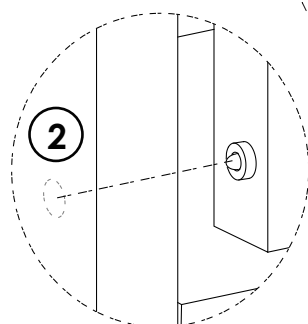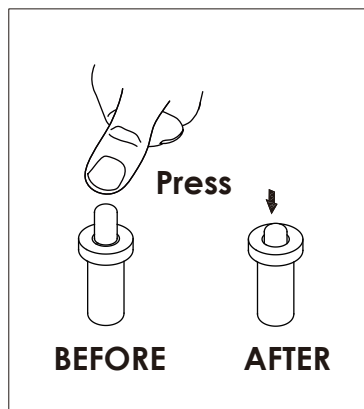


21

YOU WILL NEED


K x2

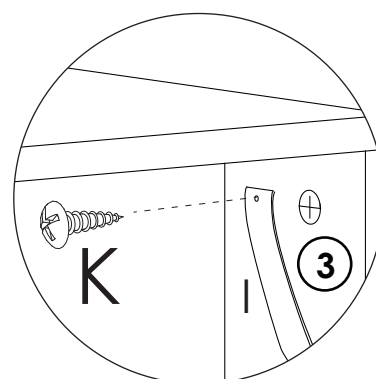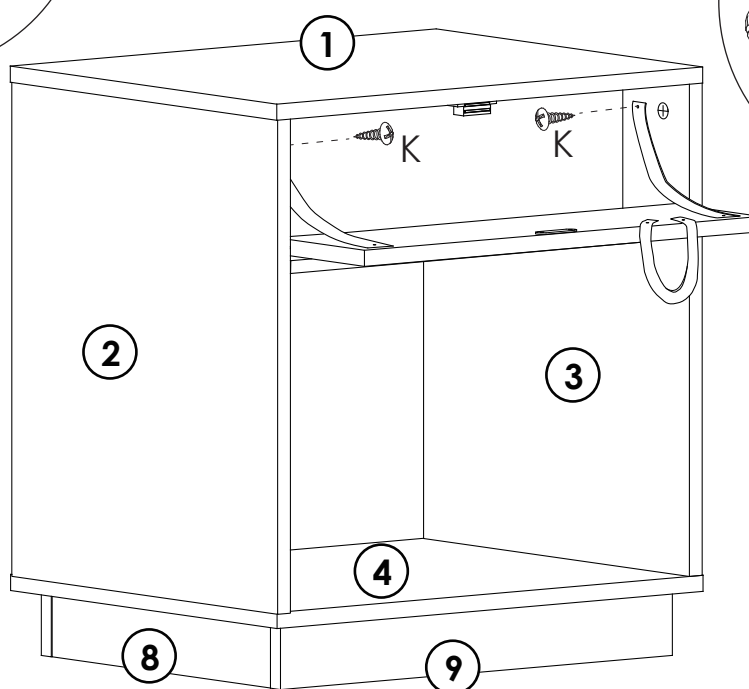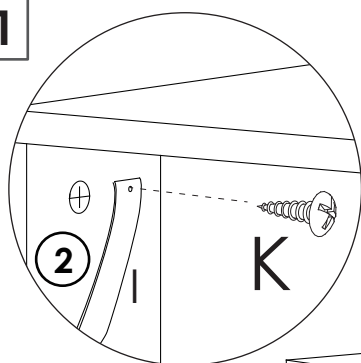


pull

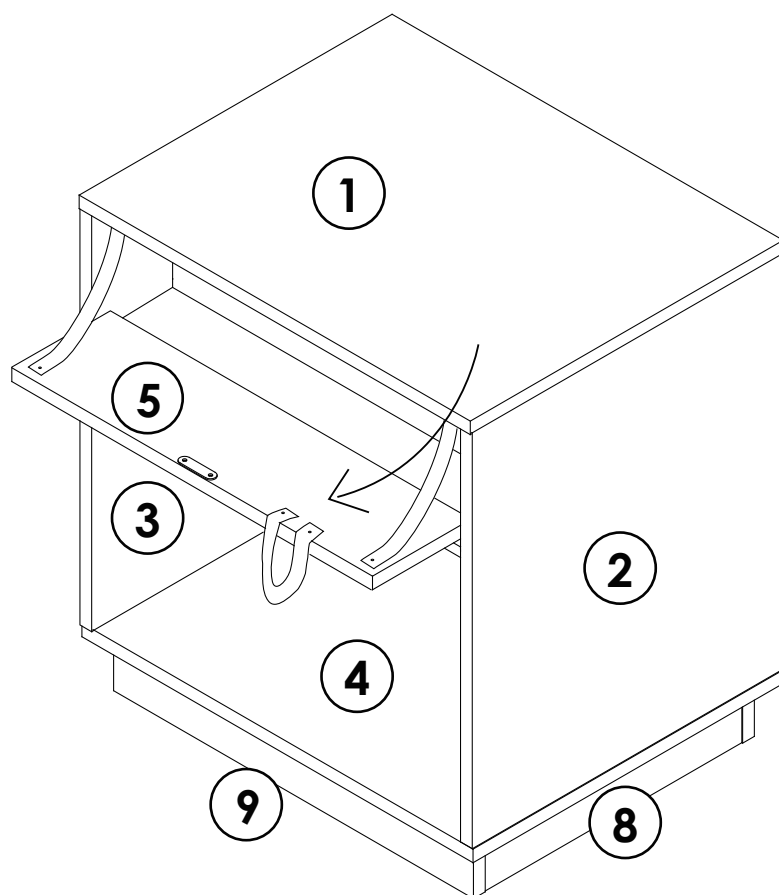

fold up

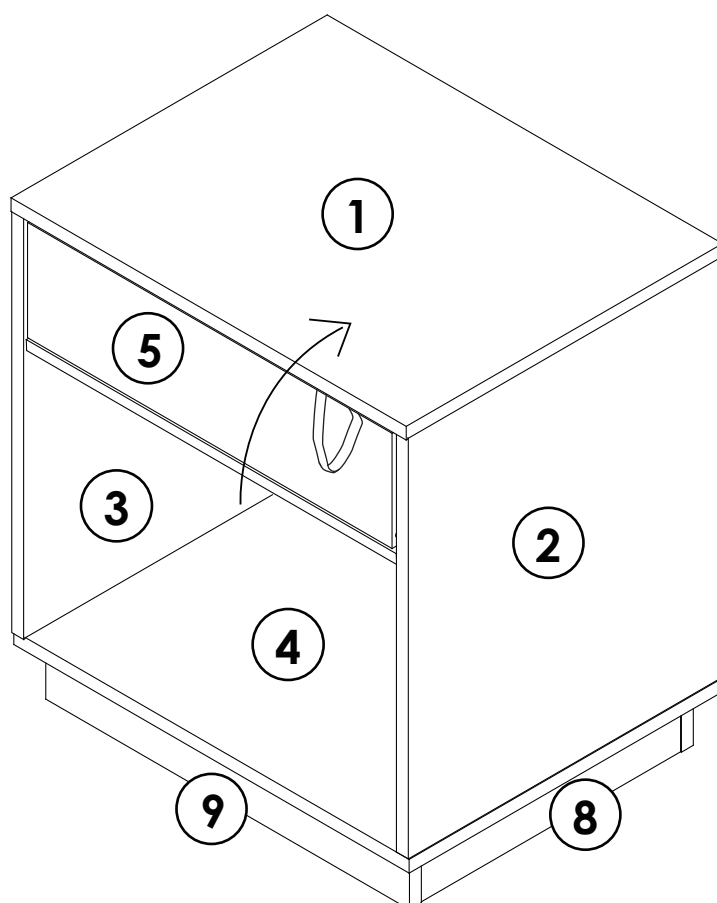

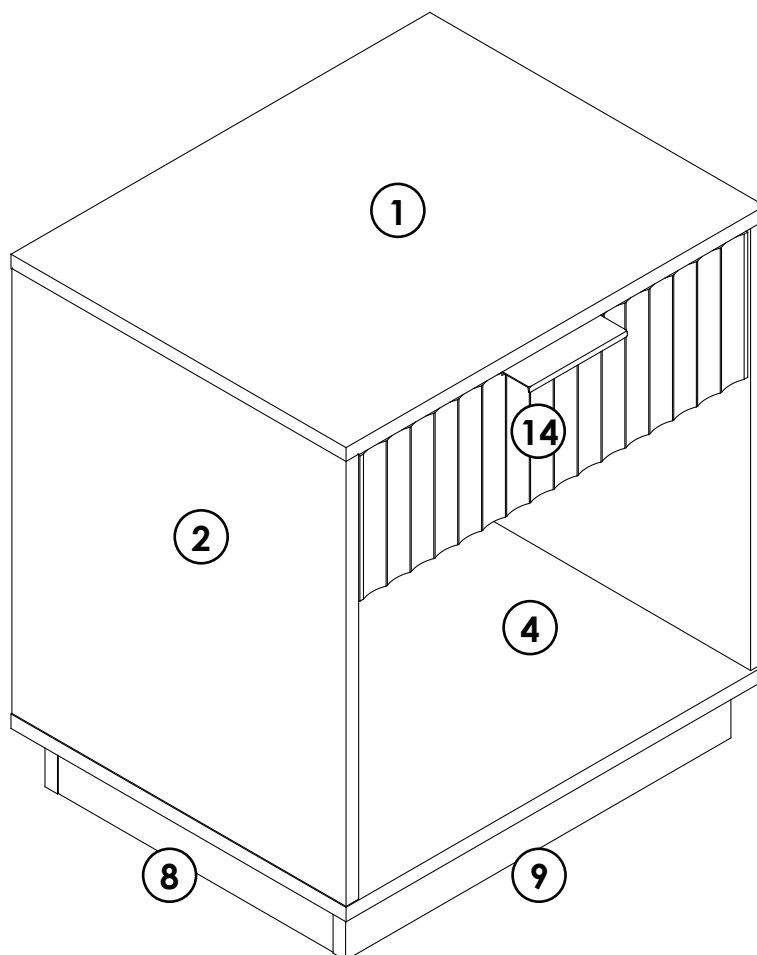

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Made in China

