


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

Our professional after-sales team will serve you online all day.

Before You Start

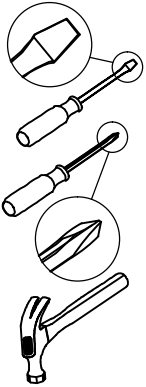

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

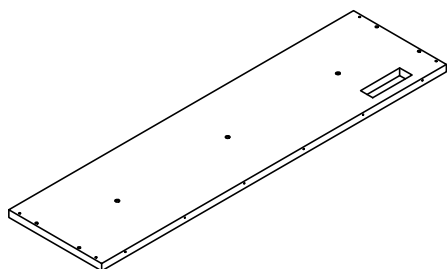


(A)
TOP PANEL

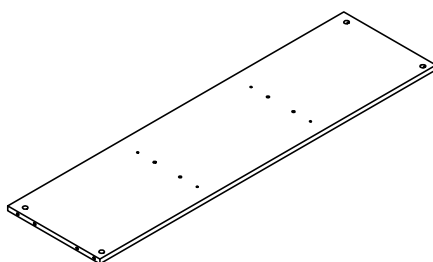


(B)
FIXED SHELF

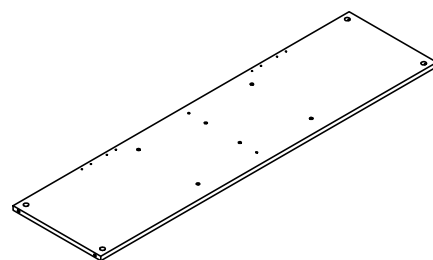


(C)
FIXED SHELF

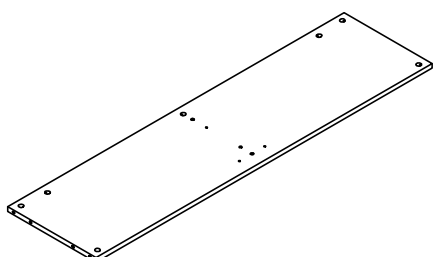


(D)
BOTTOM PANEL

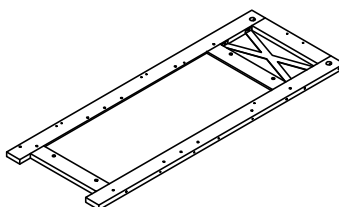


(E)
LEFT SIDE PANEL

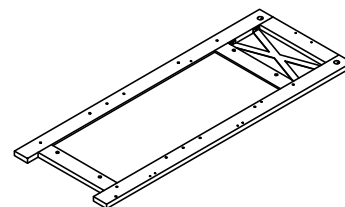


(F)
RIGHT SIDE PANEL



(G)
PARTITION PANEL
Qty:2

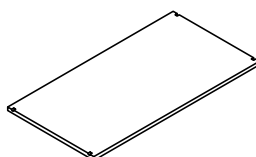


(H)
SHELF PANEL
Qty:2

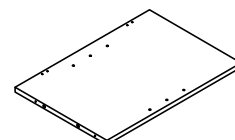

(I)
MIDDLE SHELF


Board Identification

Not actual size

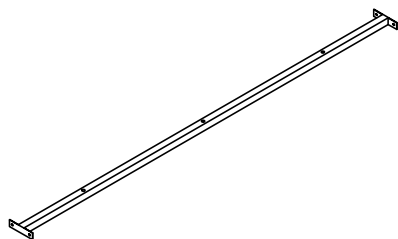


ⓐ

UPPER RAIL

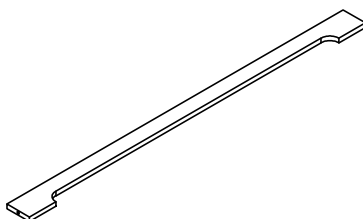


ⓑ

BOTTOM FRONT RAIL

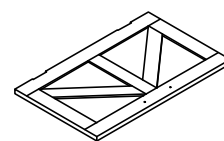

ⓒ

LEFT DOOR
Qty:2

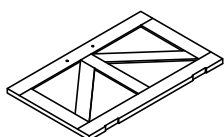


ⓓ

RIGHT DOOR
Qty:2




ⓔ

LEG




ⓕ

LEG




ⓖ

DRAWER FRONT PANEL



ⓗ

DRAWER FRONT PANEL




ⓓ

DRAWER FRONT PANEL


Board Identification

Not actual size




Ⓢ

DRAWER LEFT SIDE PANEL
Qty:3




Ⓣ

DRAWER RIGHT SIDE PANEL
Qty:3




Ⓤ

DRAWER BACK PANEL
Qty:3




Ⓥ

DRAWER BOTTOM PANEL
Qty:3

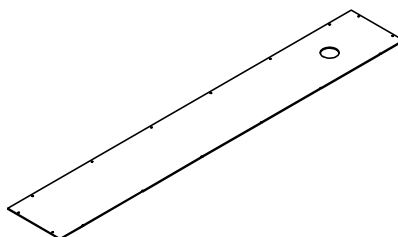

Ⓦ

UPPER BACK PANEL

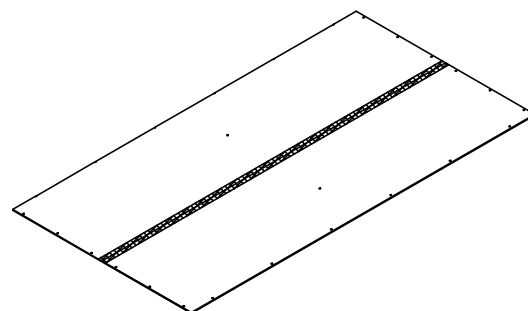


Ⓧ


LOWER BACK PANEL

Board Identification

Not actual size

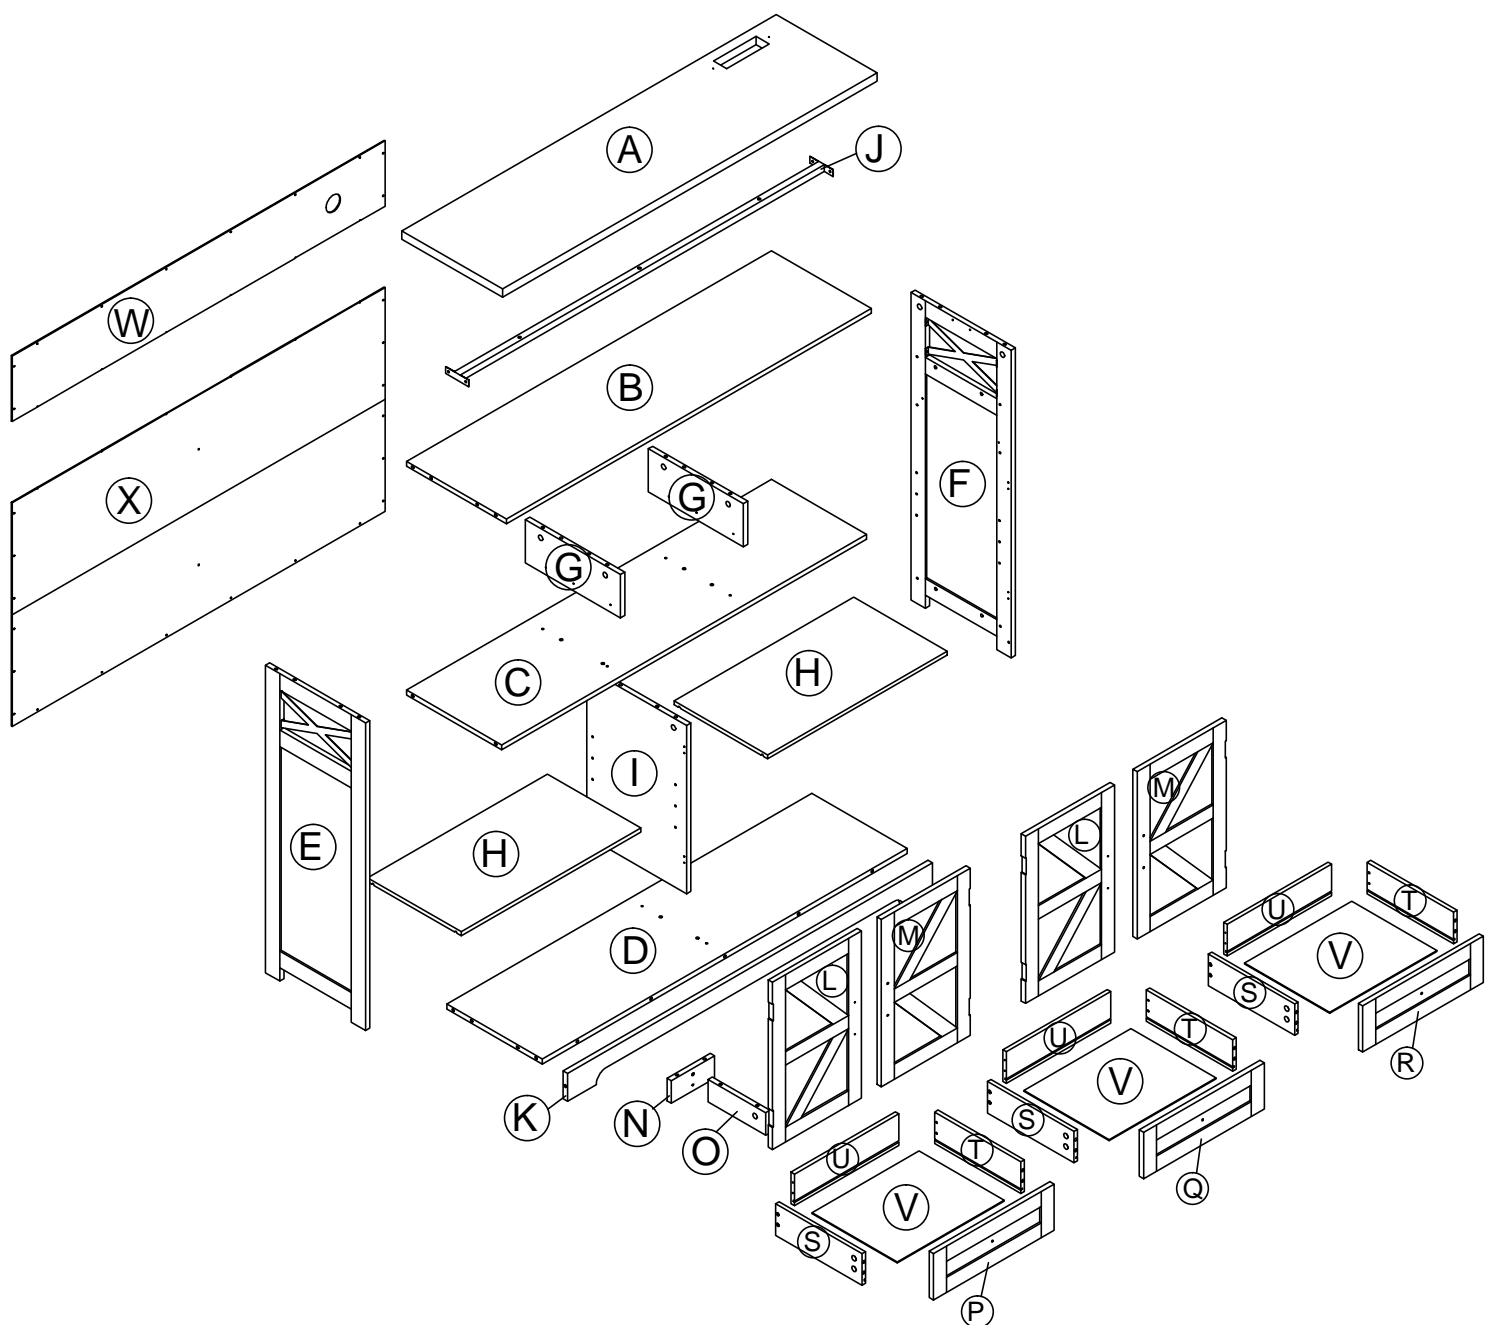


Part List

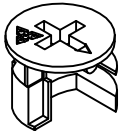

Ø15X9mm

① X42

CAM LOCK
spare: 2



ø6.5X35mm

② X42


CAM BOLT
spare: 2



ø8X30mm

③ X28


WOOD DOWEL
spare: 2



ø4X35mm

④ X19


SCREW
spare: 1



Ø3.5X14mm

⑤ X76


SCREW
spare: 3



M6X30mm


⑥ X3

SCREW
spare: 1

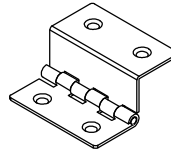


⑦ X8

HARDWARE HINGE

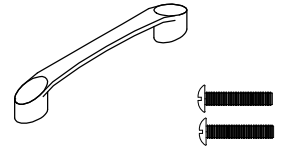

⑧ X4

HANDLE



⑨ X3


HANDLE



Ø3X16mm


⑩ X8

SCREW
spare: 1

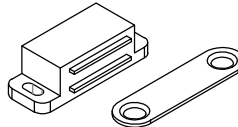


⑪ X4

MAGNETIC CATCH

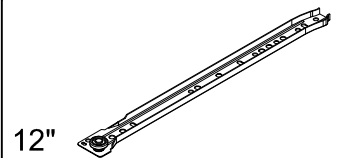


12" 12CL X3

LEFT CABINET MEMBER

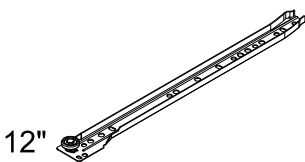


12" 12CR X3

RIGHT CABINET MEMBER

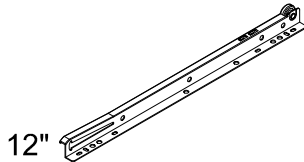


12" 12DL X3

LEFT DRAWER RUNNER

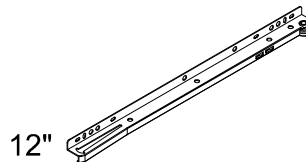

12" 12DR X3

RIGHT DRAWER RUNNER




Ø3 x 12mm


⑬ X34

SCREW
spare: 2


Part List

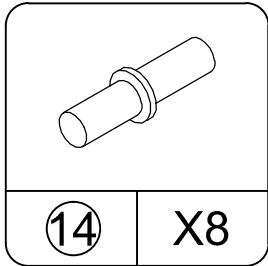


SHEIF SUPPORT

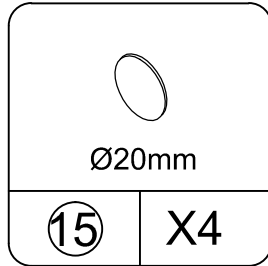



SCAM LOCK COVER
spare: 1

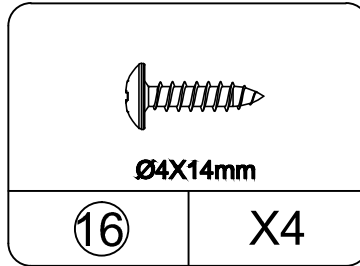

SCREW
spare: 1

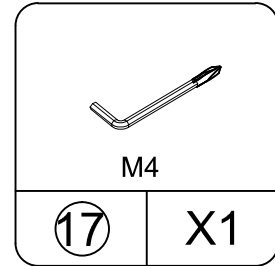


HEX KEY

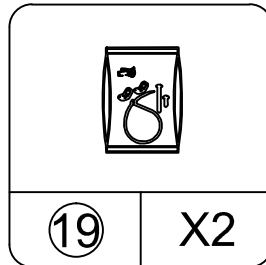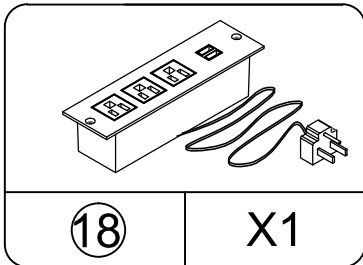








TIPPING RESTRAINT
HARDWARE KIT

Cam Lock Fastening System












Insert the cam bolt into the hole first, then insert the cam lock and lock it.

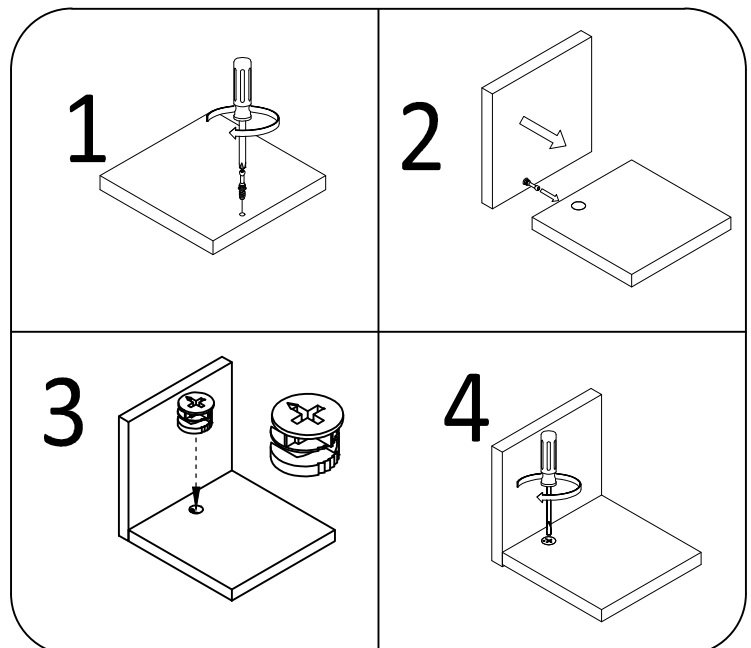

STEP1

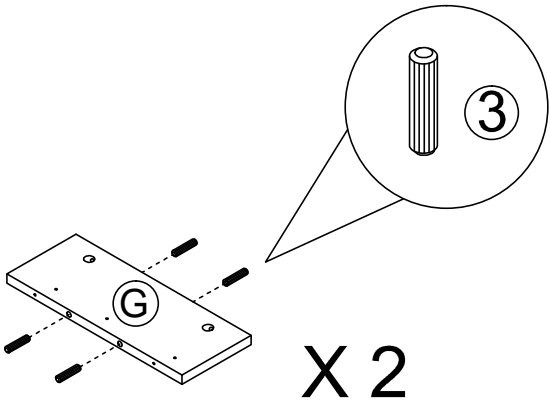
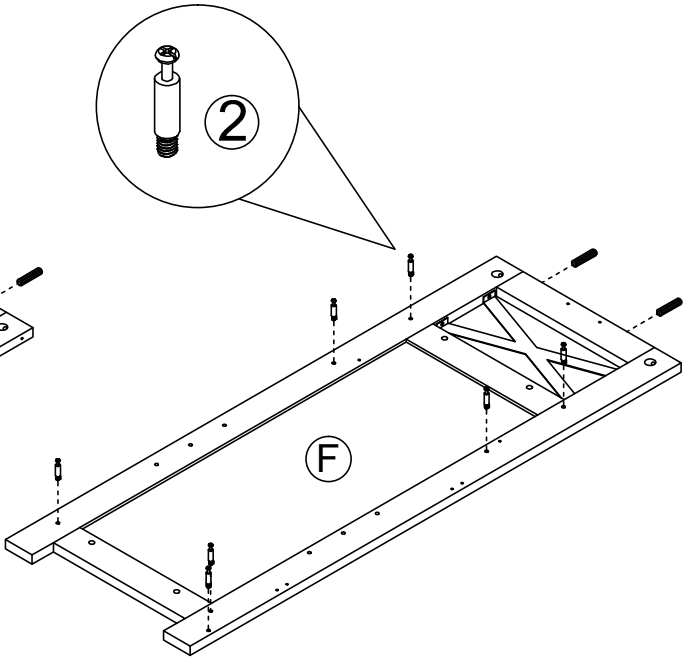
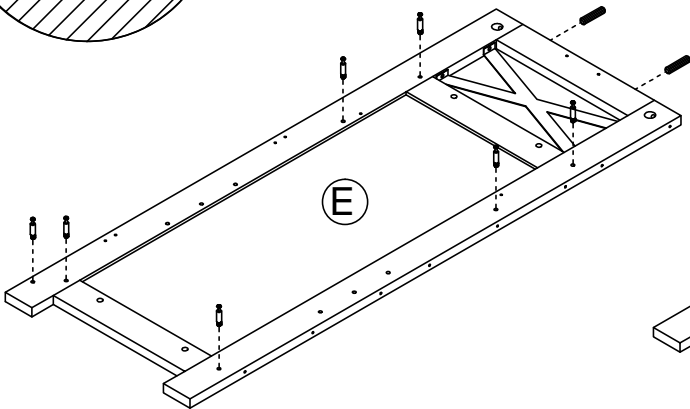
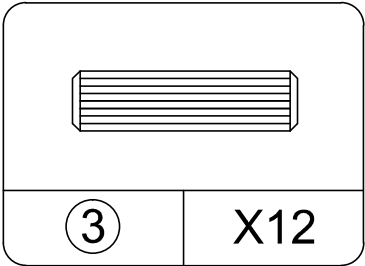
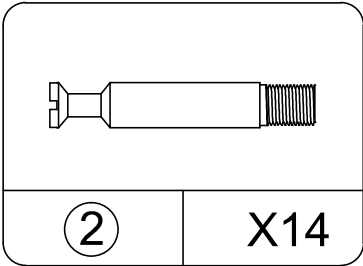
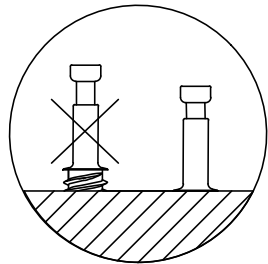
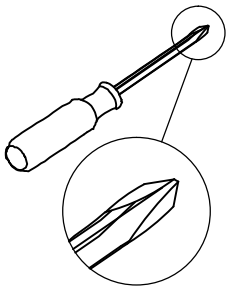


STEP2

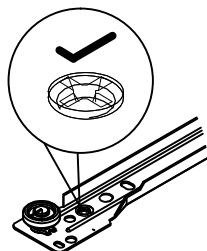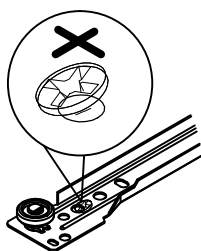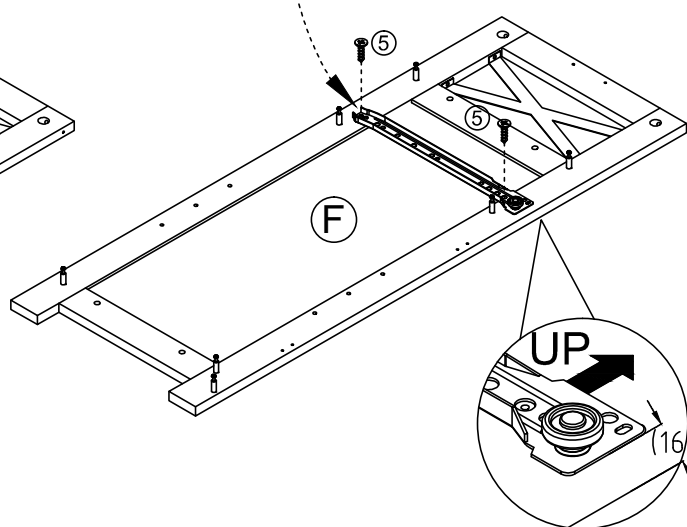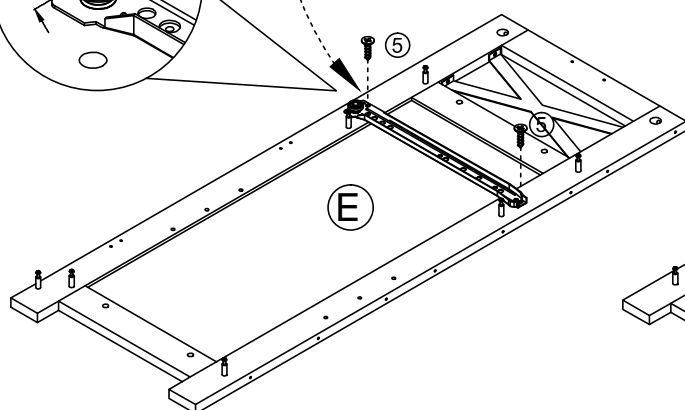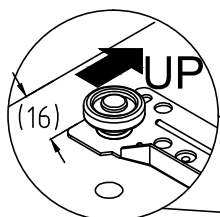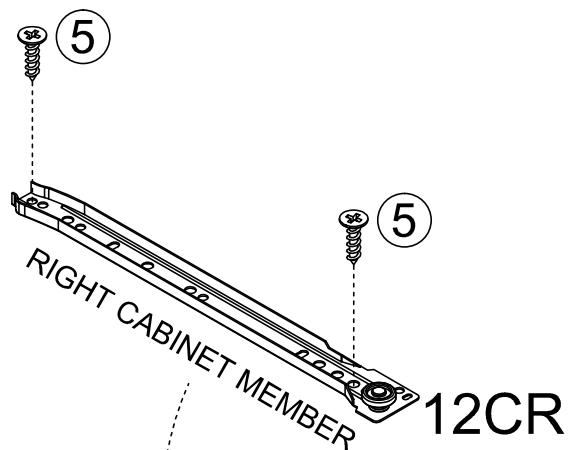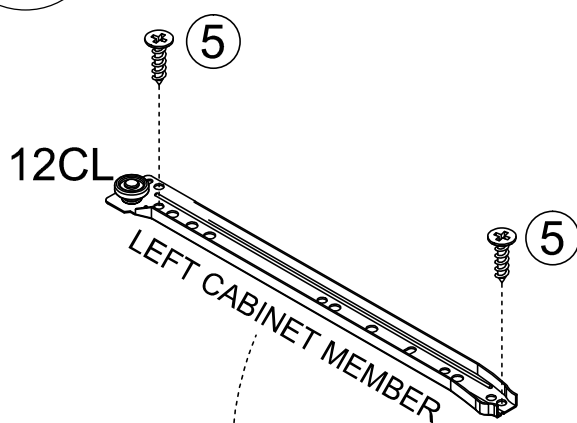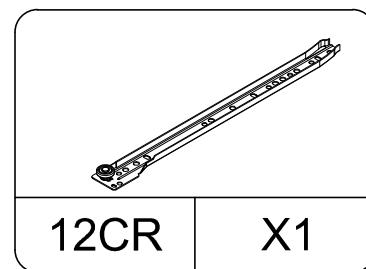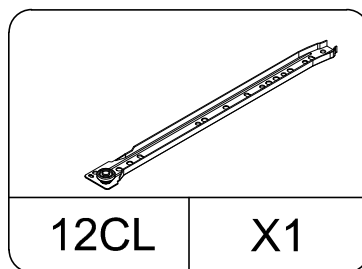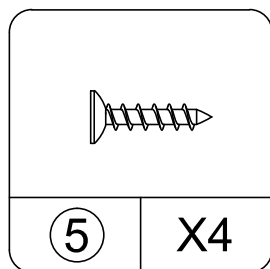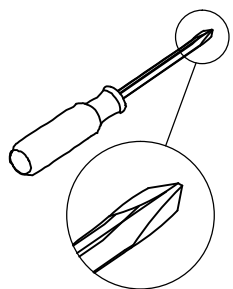

Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.












STEP3

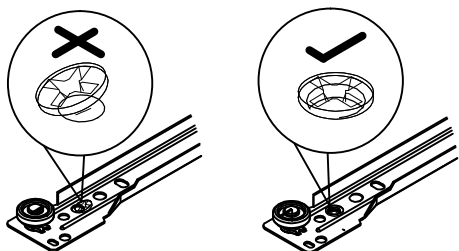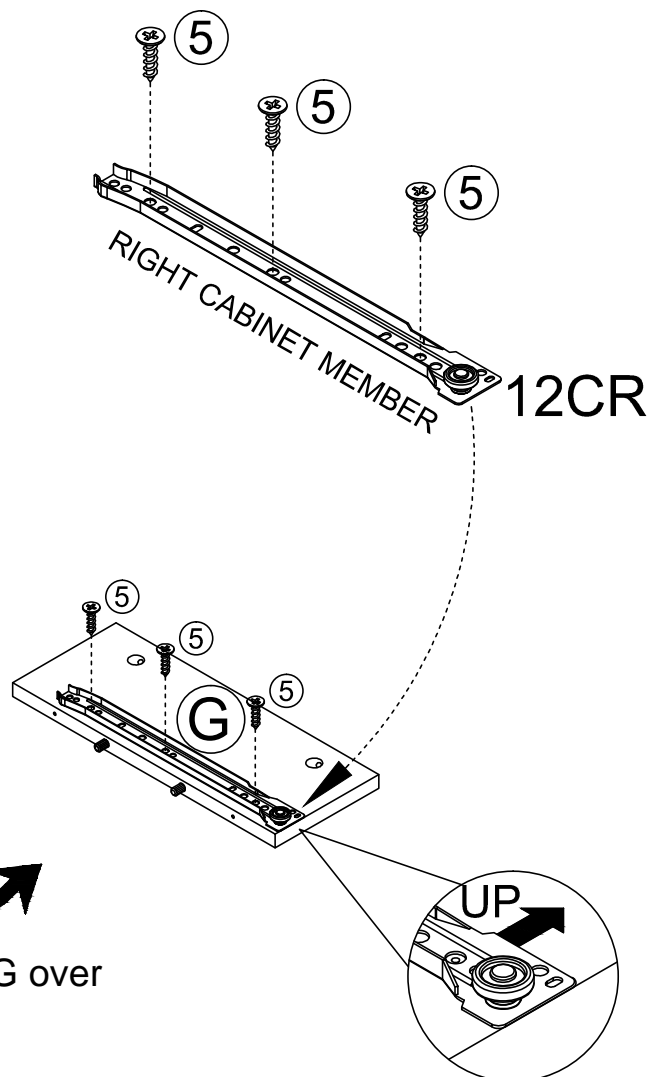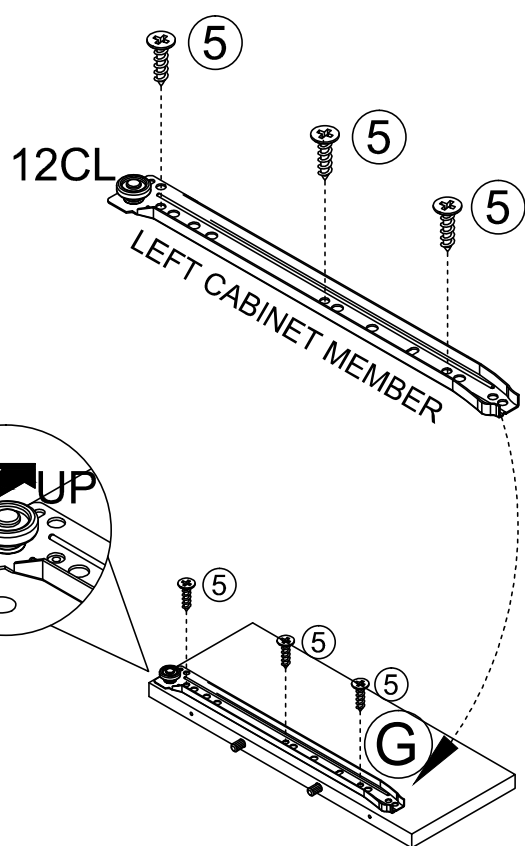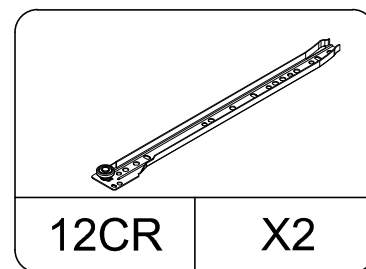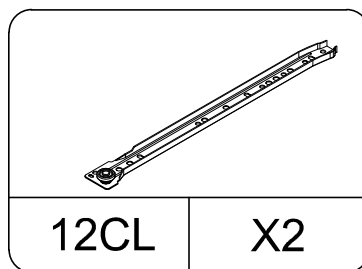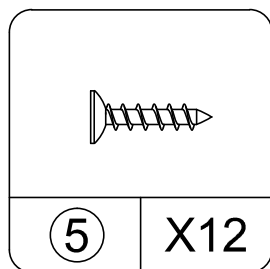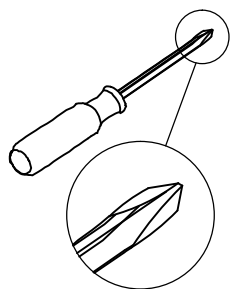







X 2

Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP4

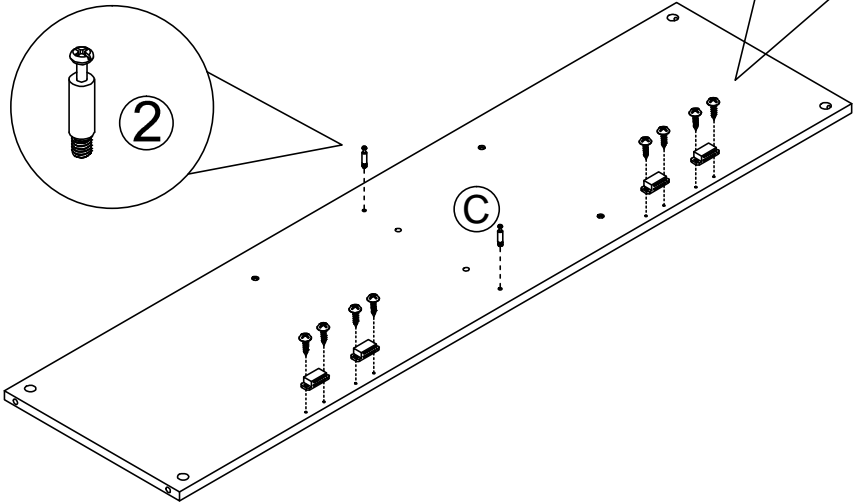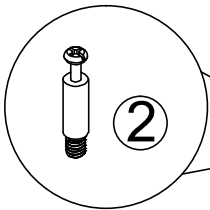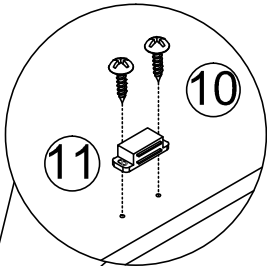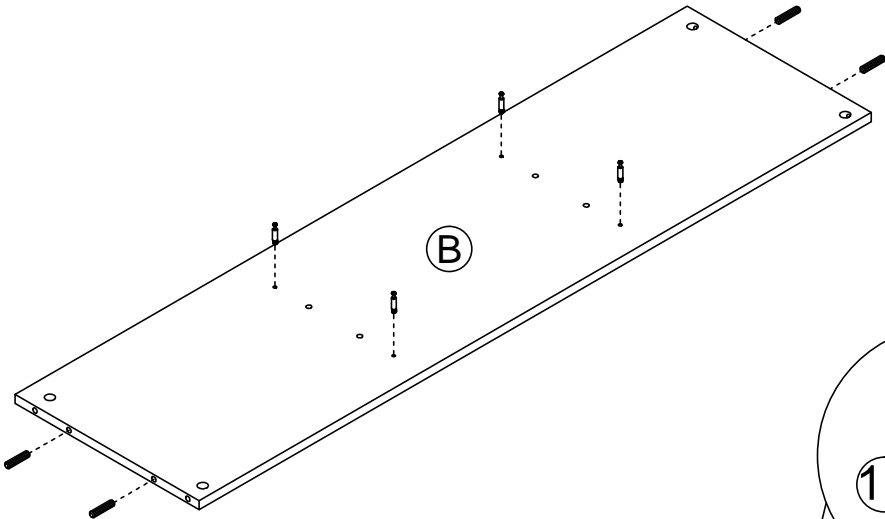
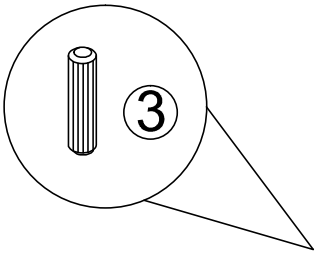
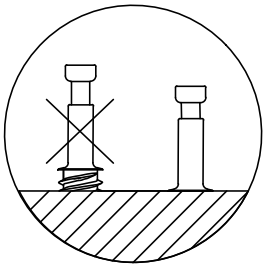
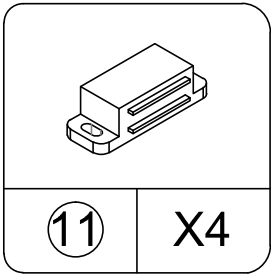
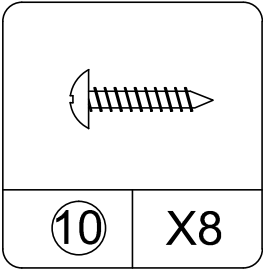
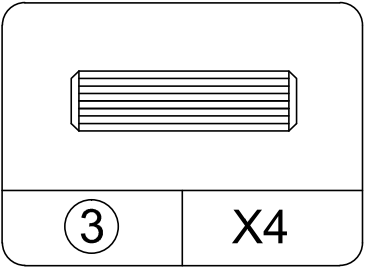
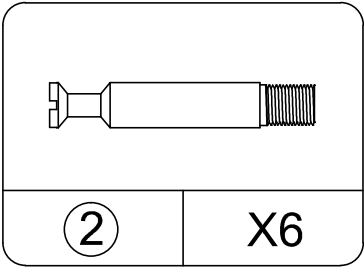
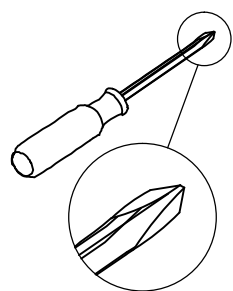


STEP5

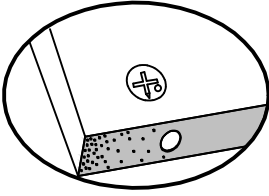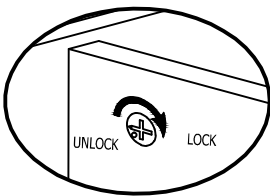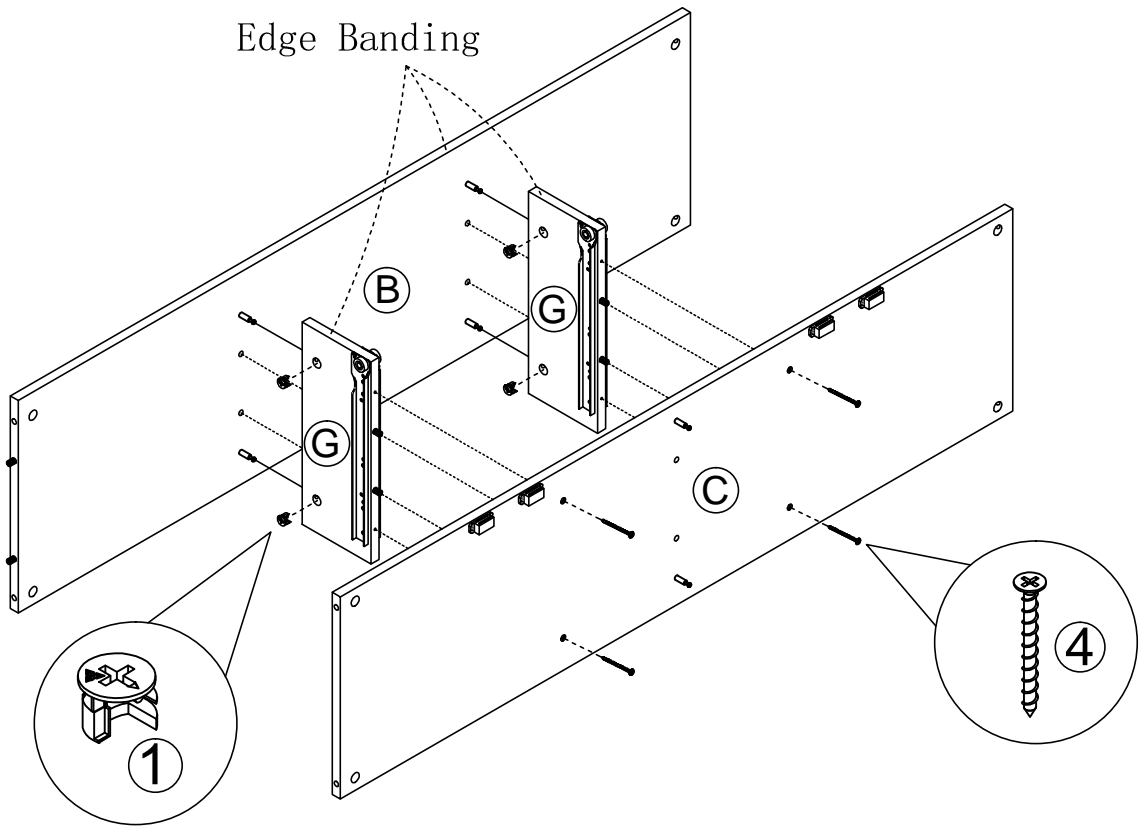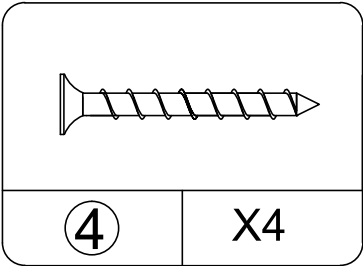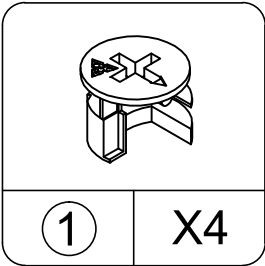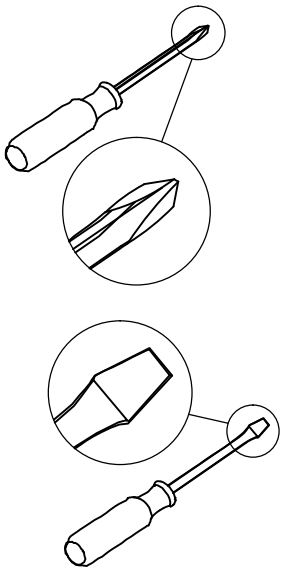


Proper orientation of CAM LOCK


STEP6

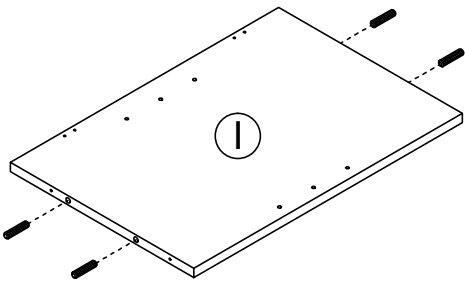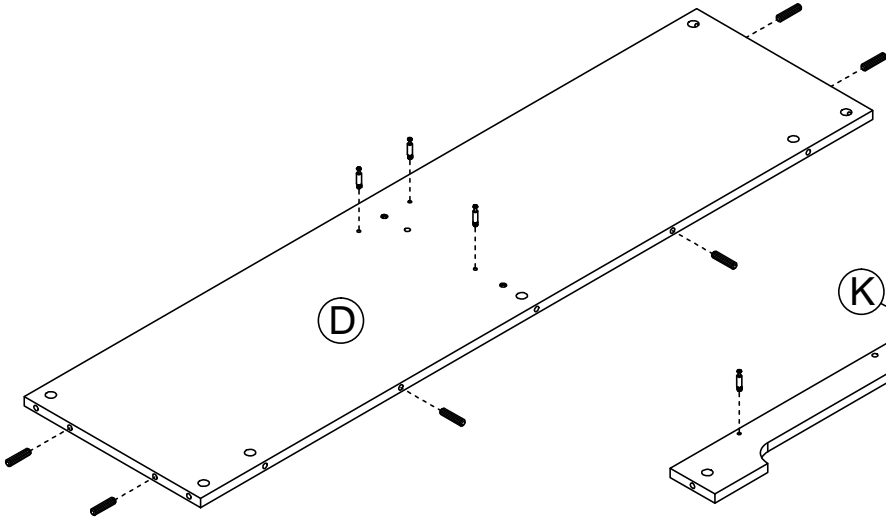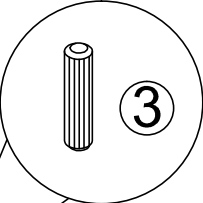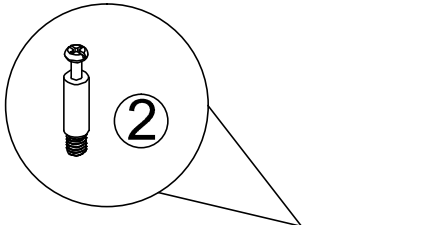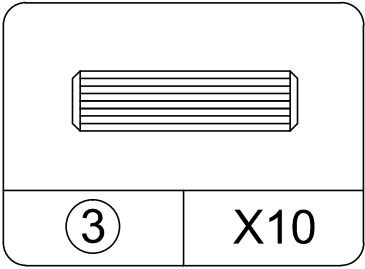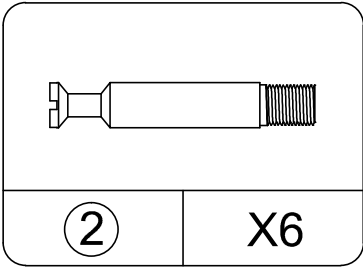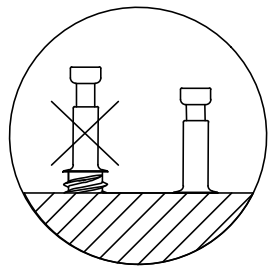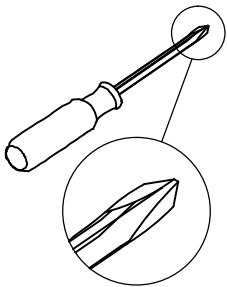





STEP7

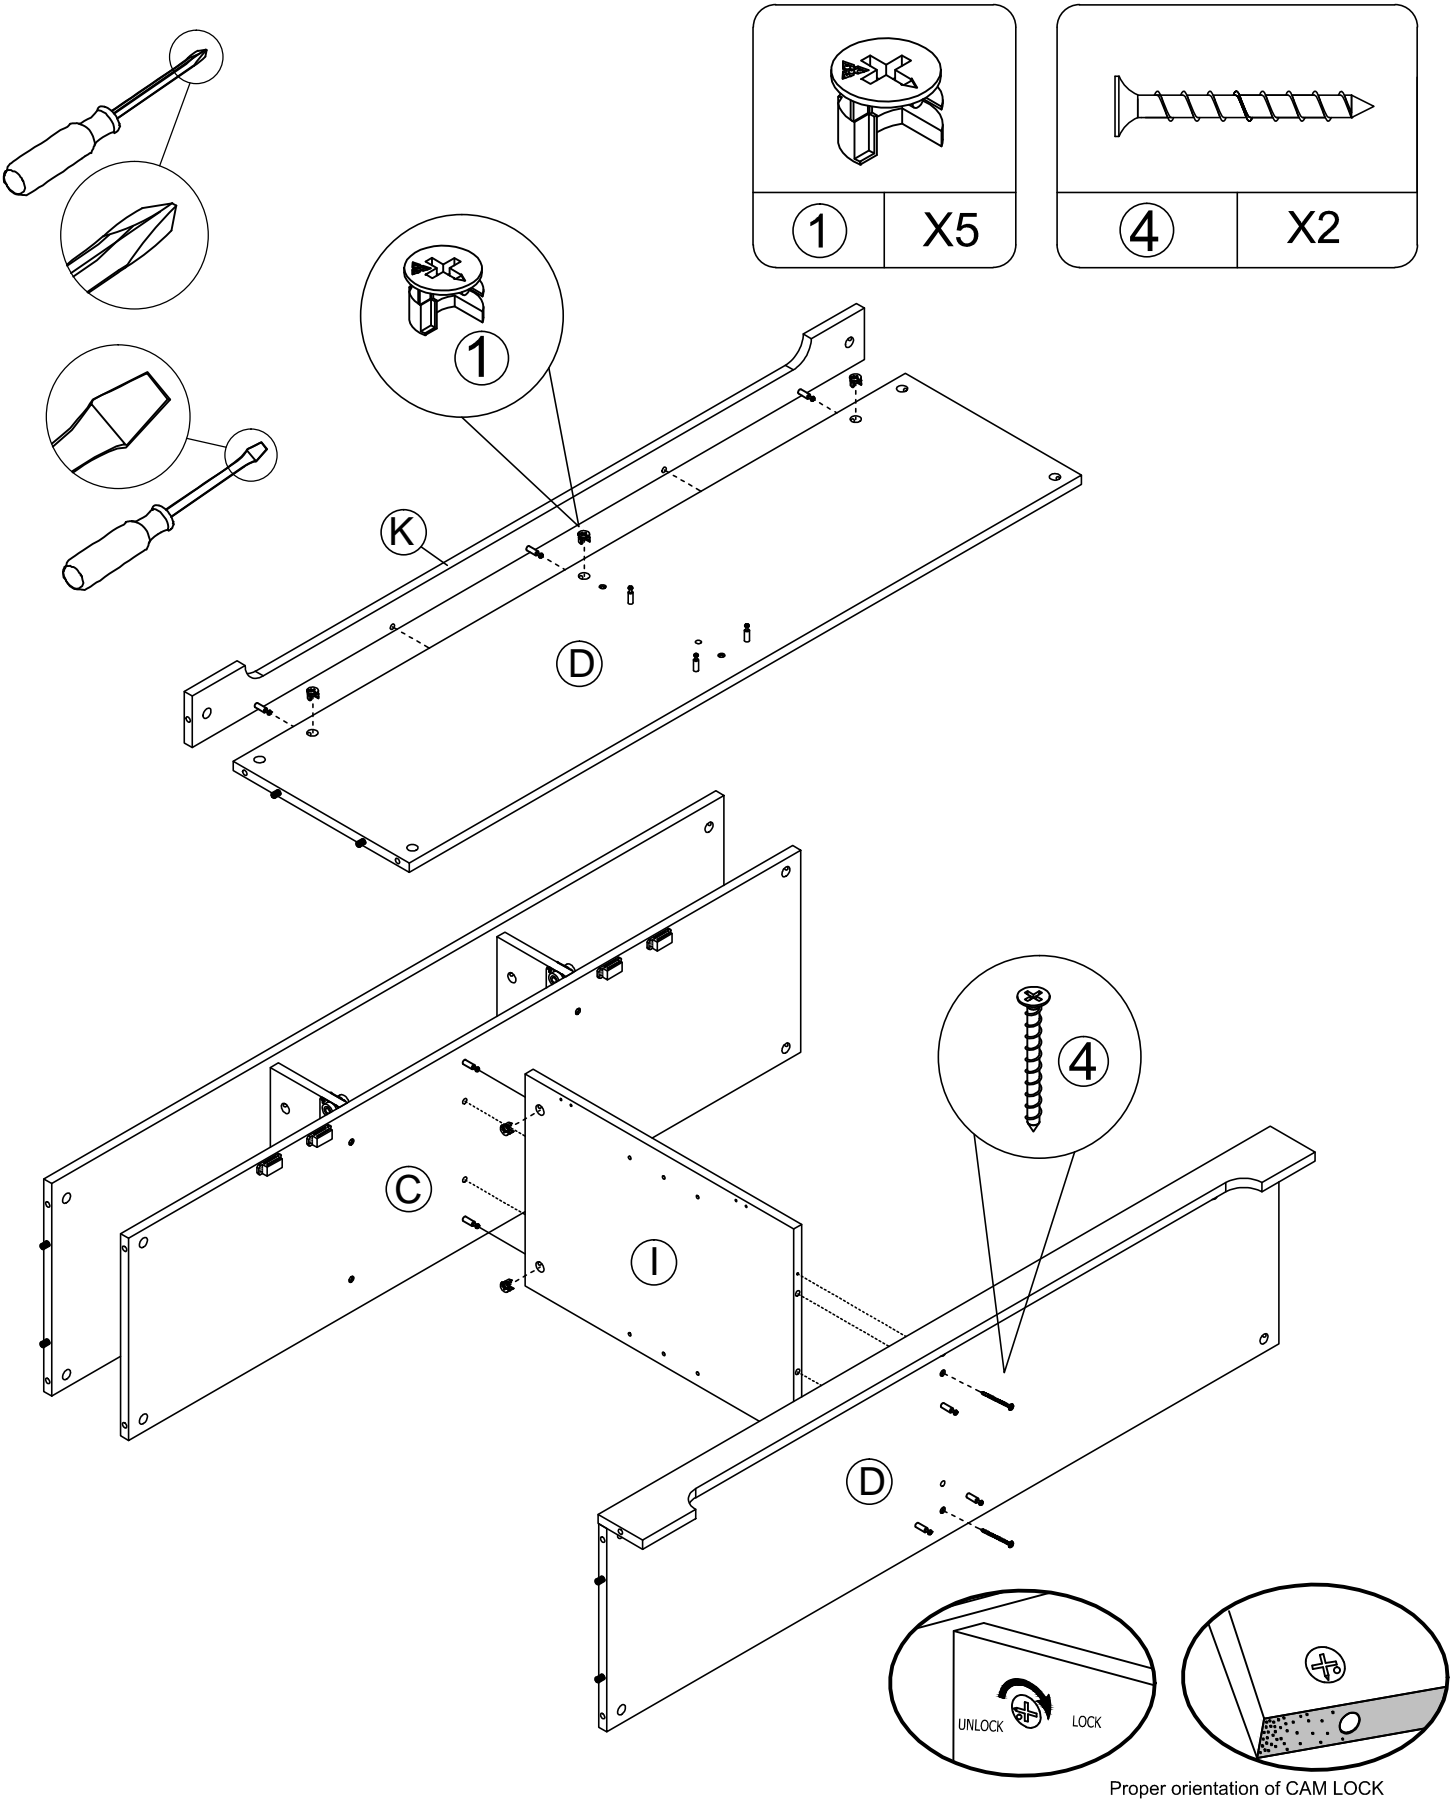





STEP8

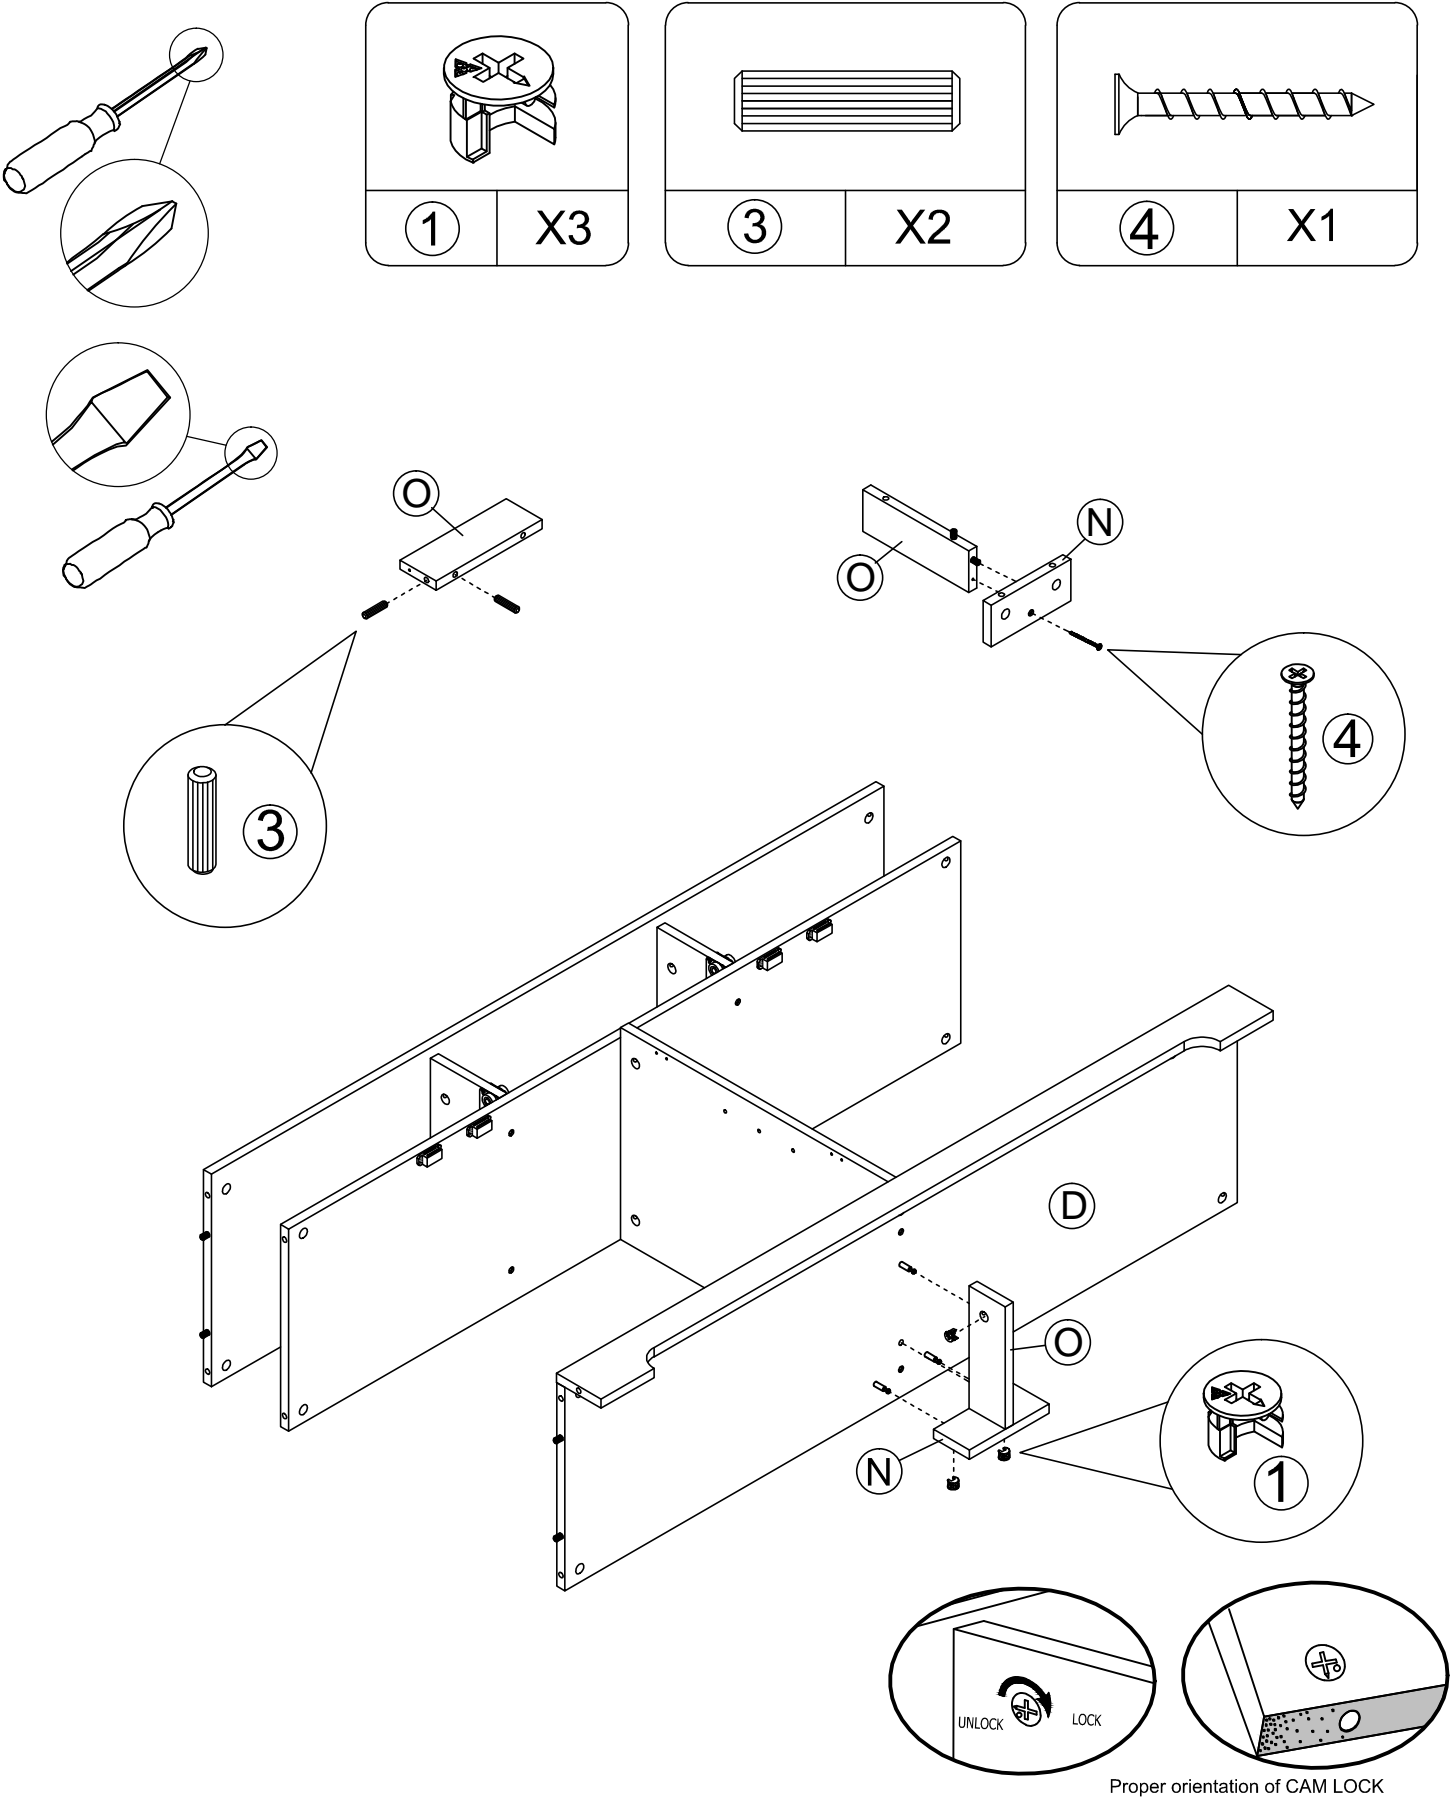

STEP9

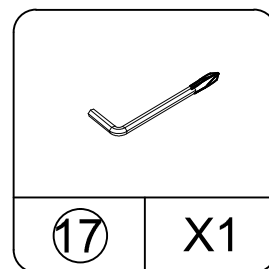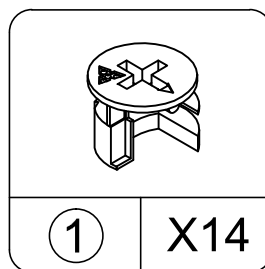
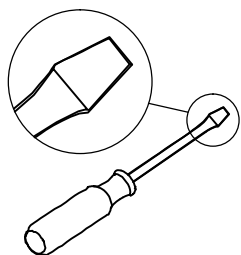
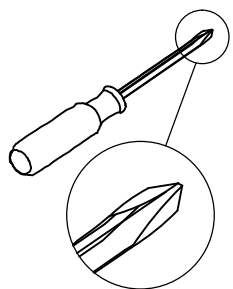


The space is small, please use the ⑰ wrench to tighten the ① CAM LOCK.

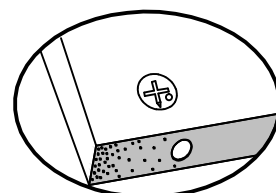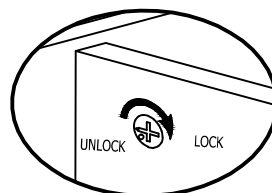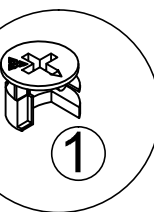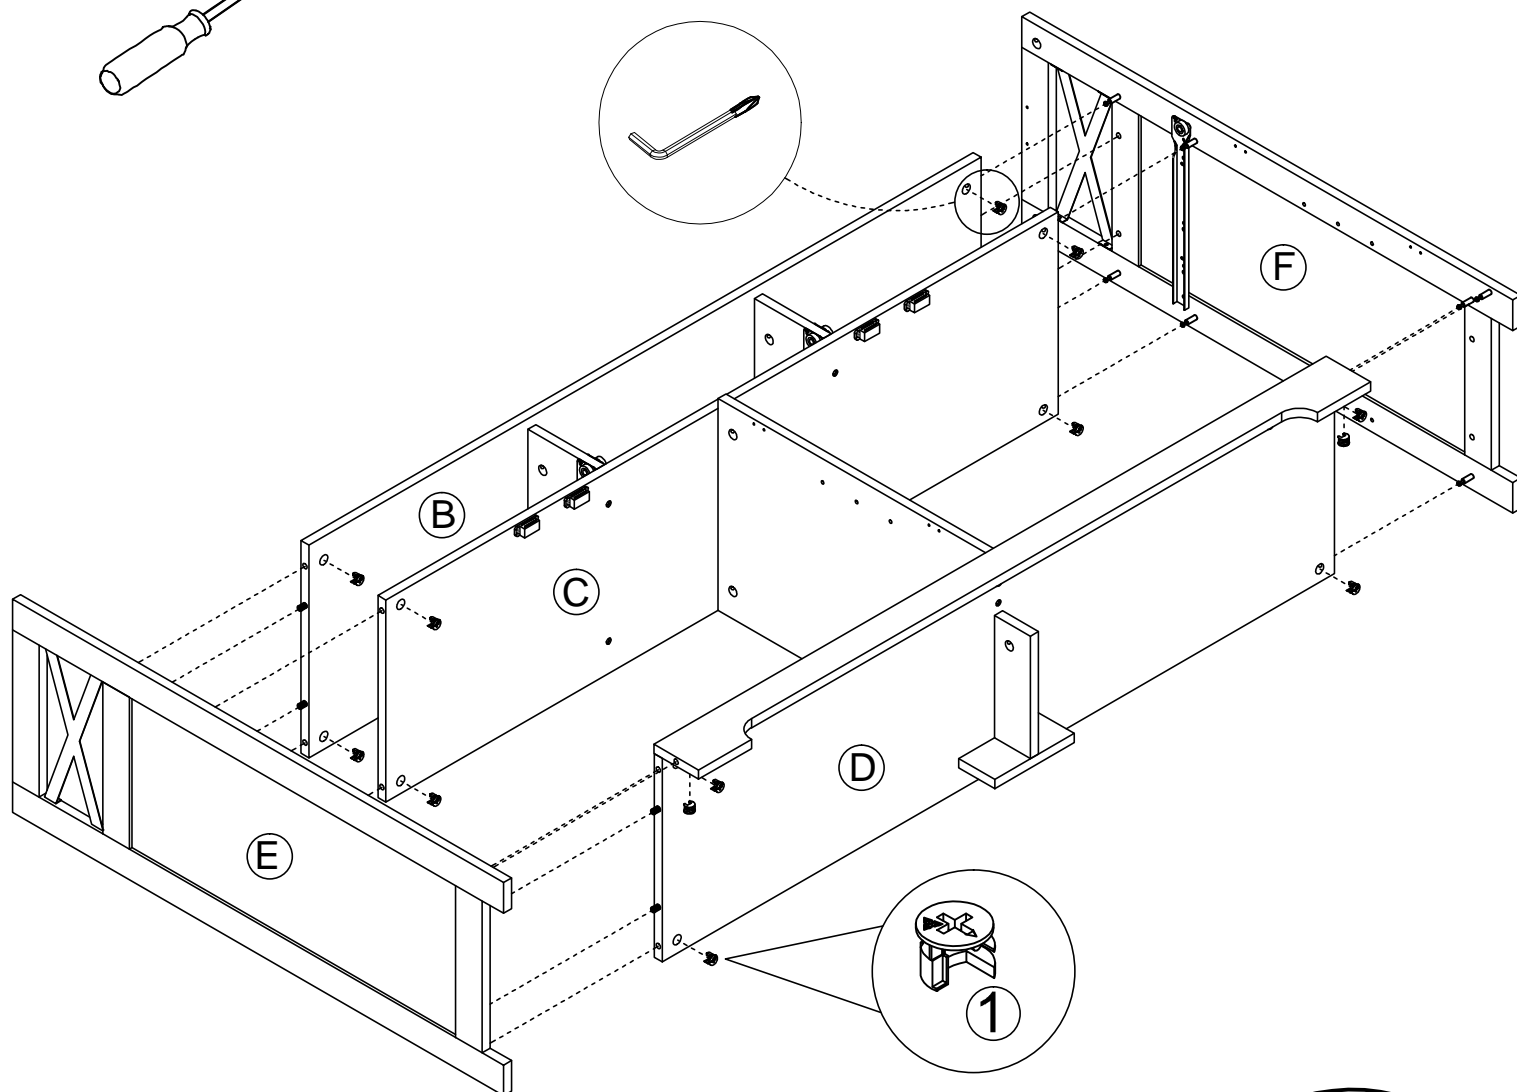


Proper orientation of CAM LOCK



STEP10

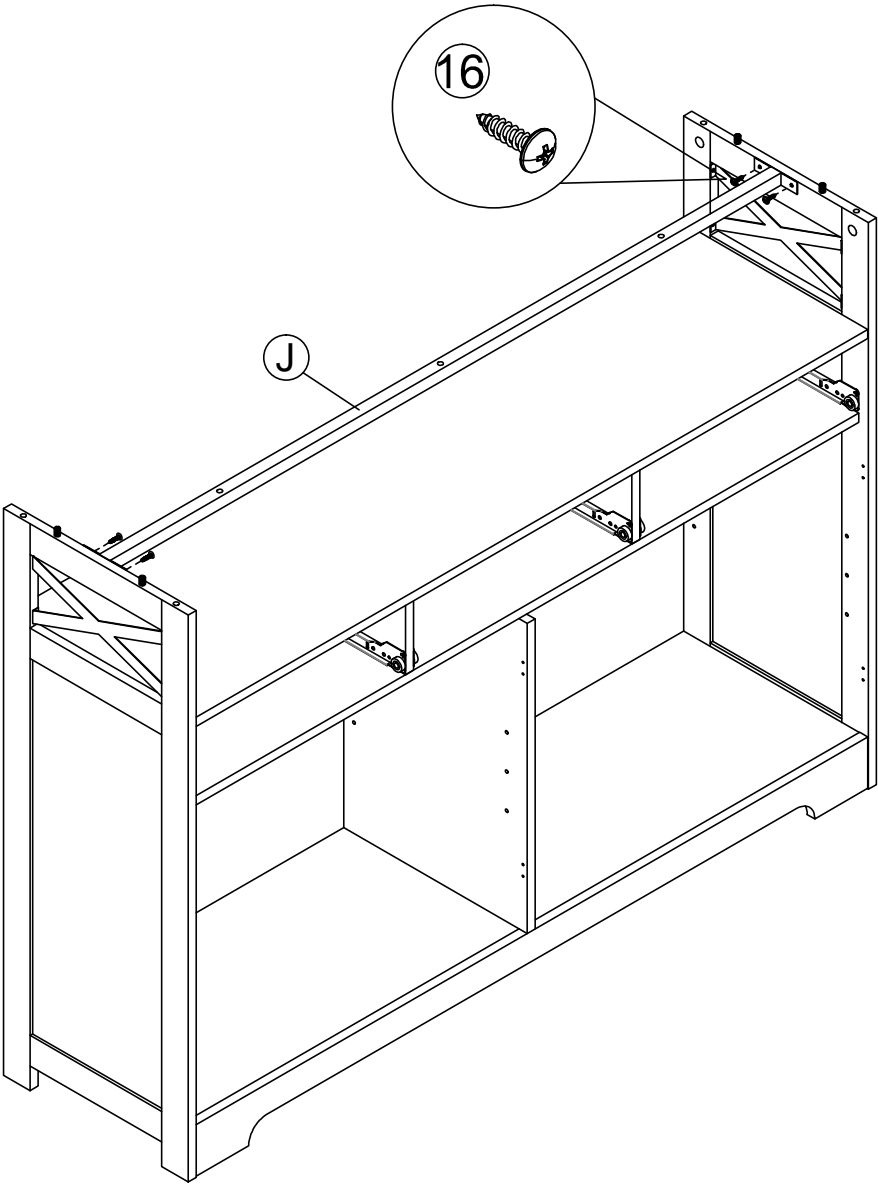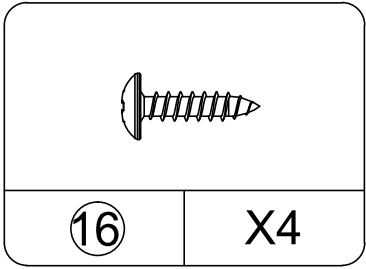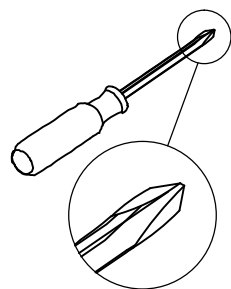


STEP11

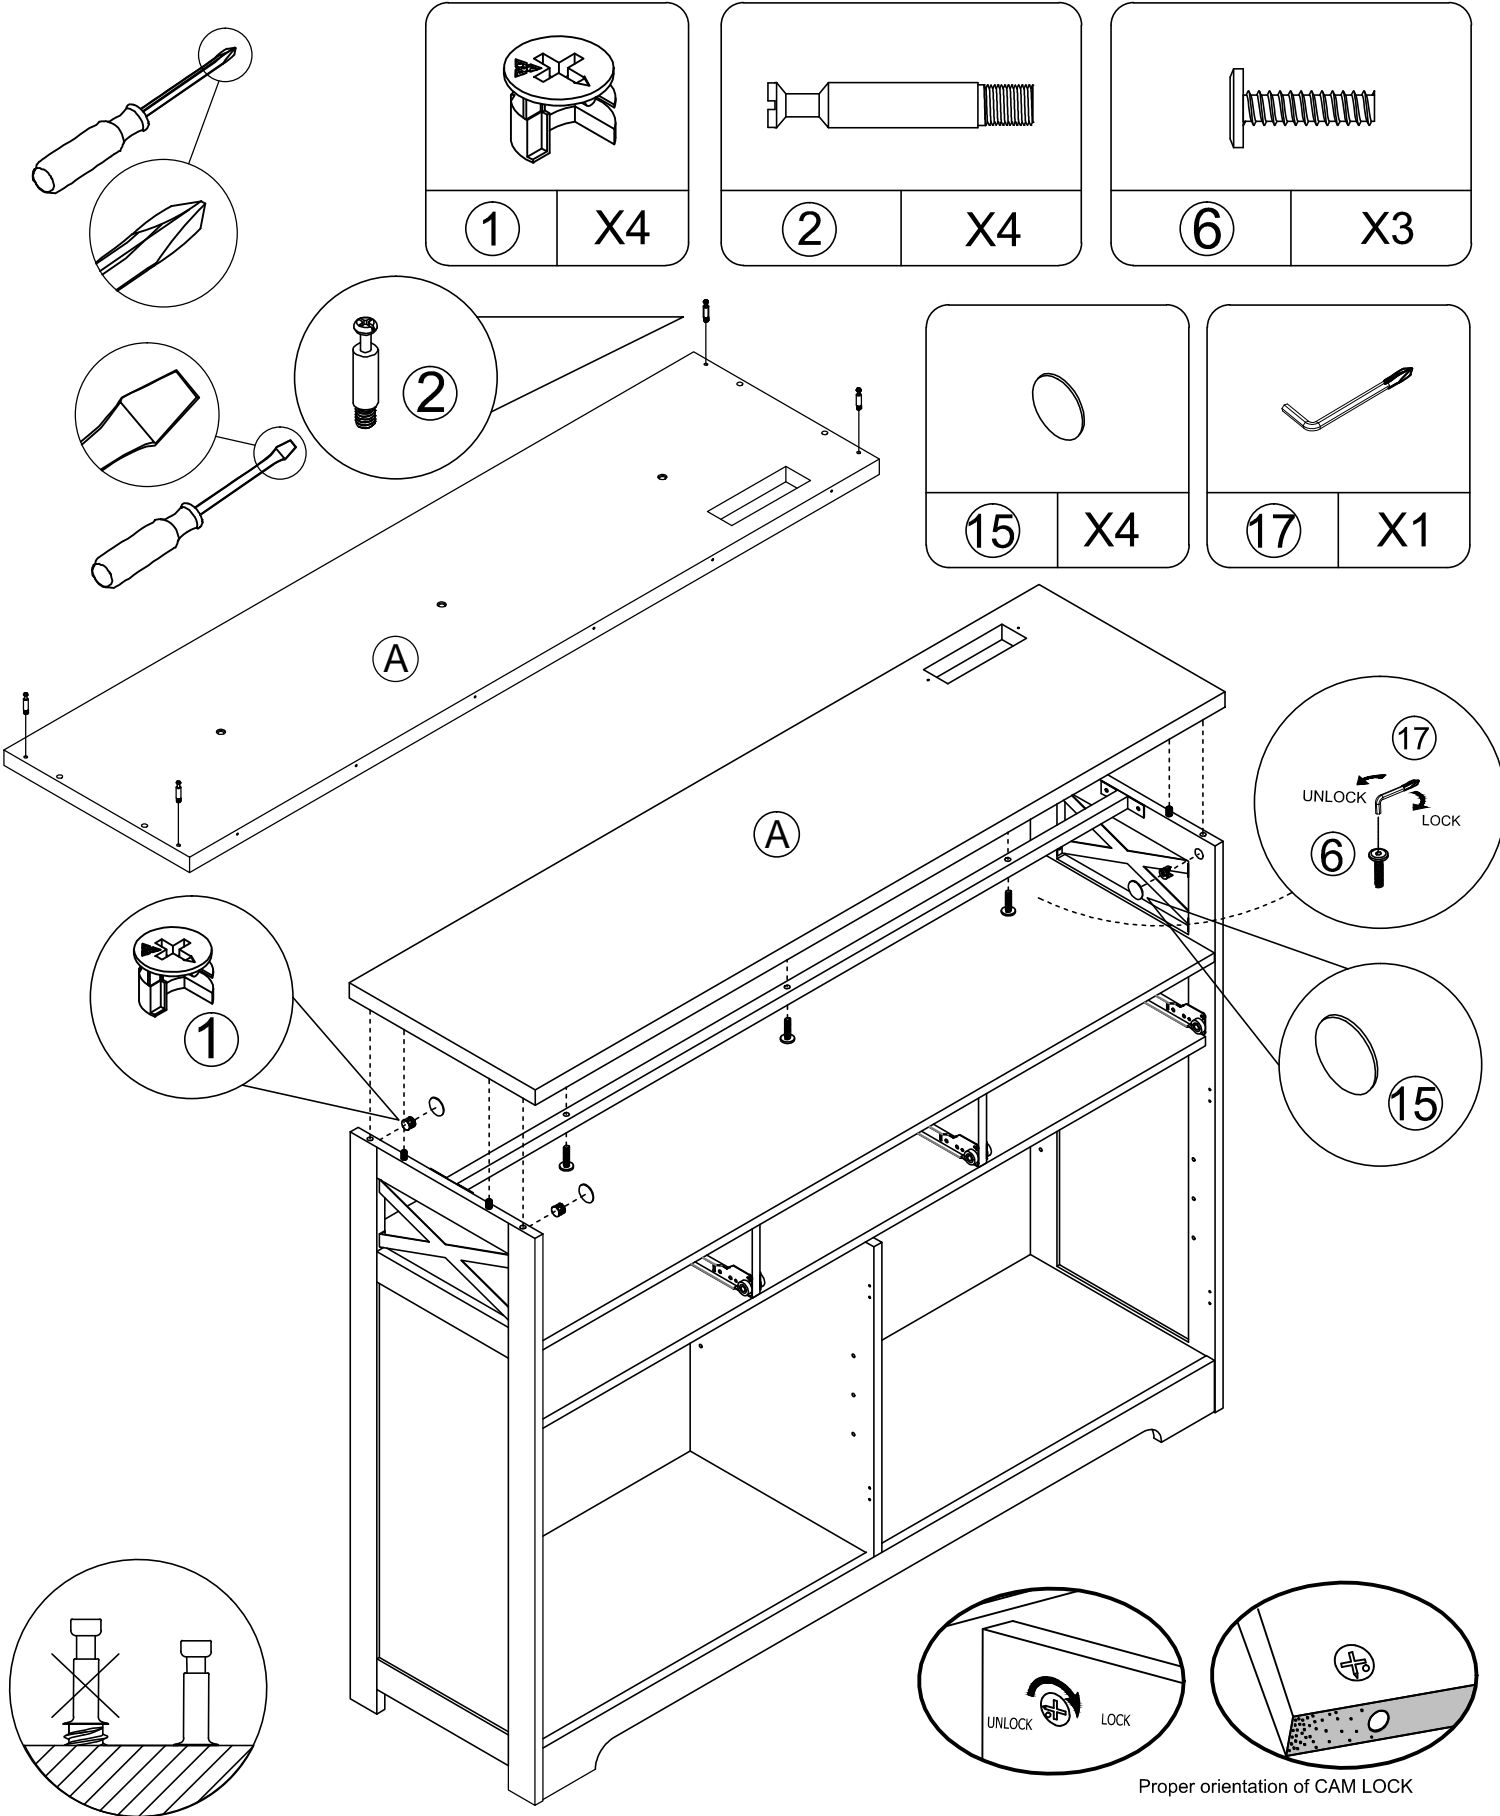

STEP12

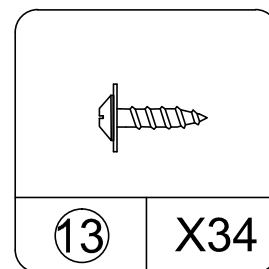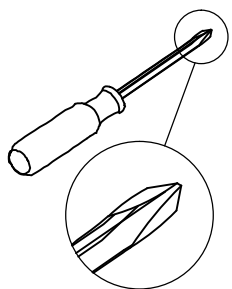


This hole for installation the part 19.




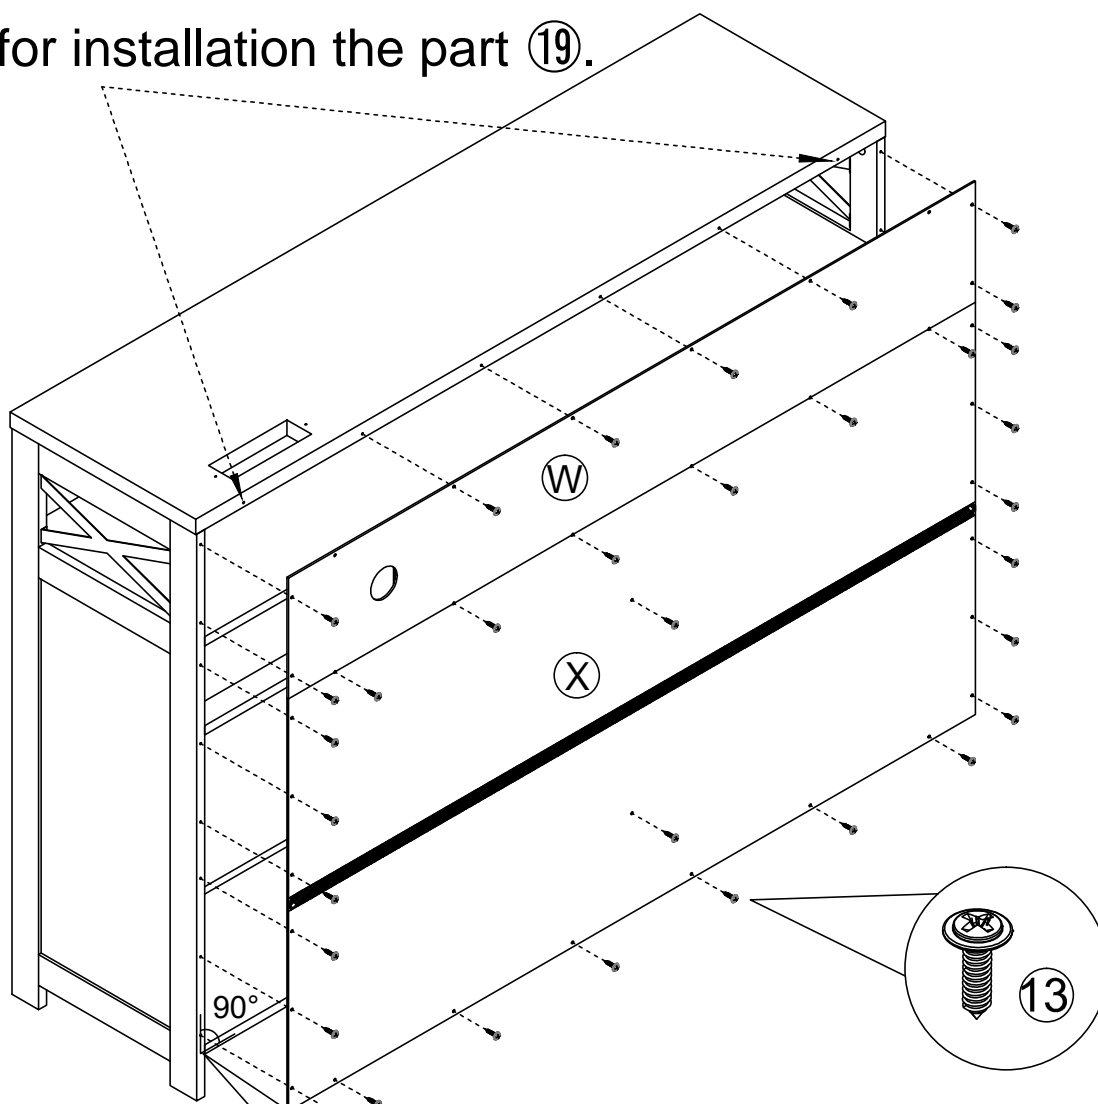


Before attaching the back panel, be sure that the unit is at 90°
Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°
Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

STEP13


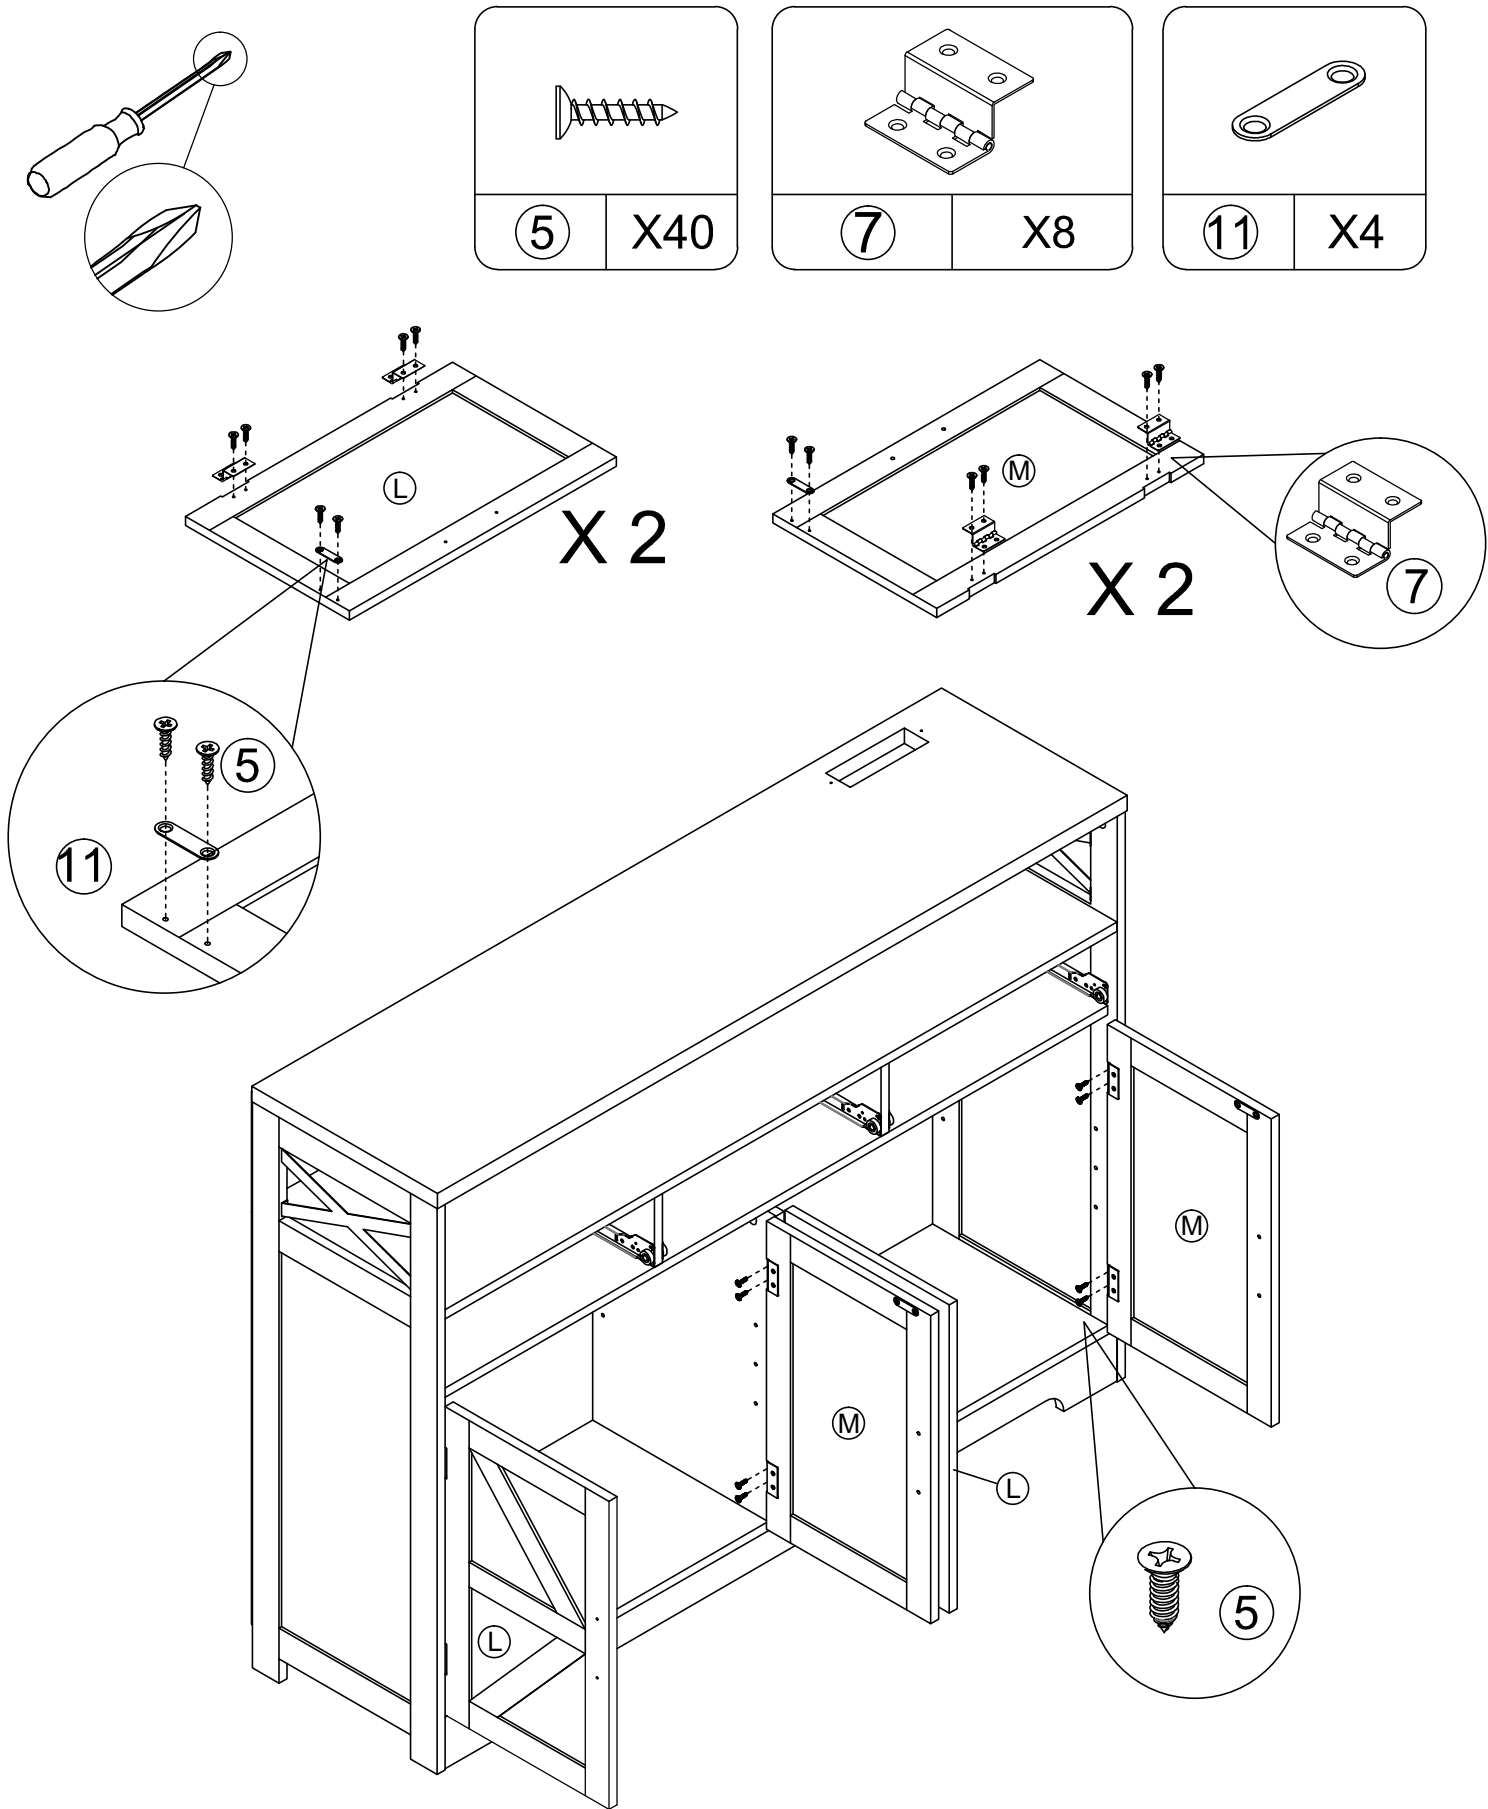


STEP14

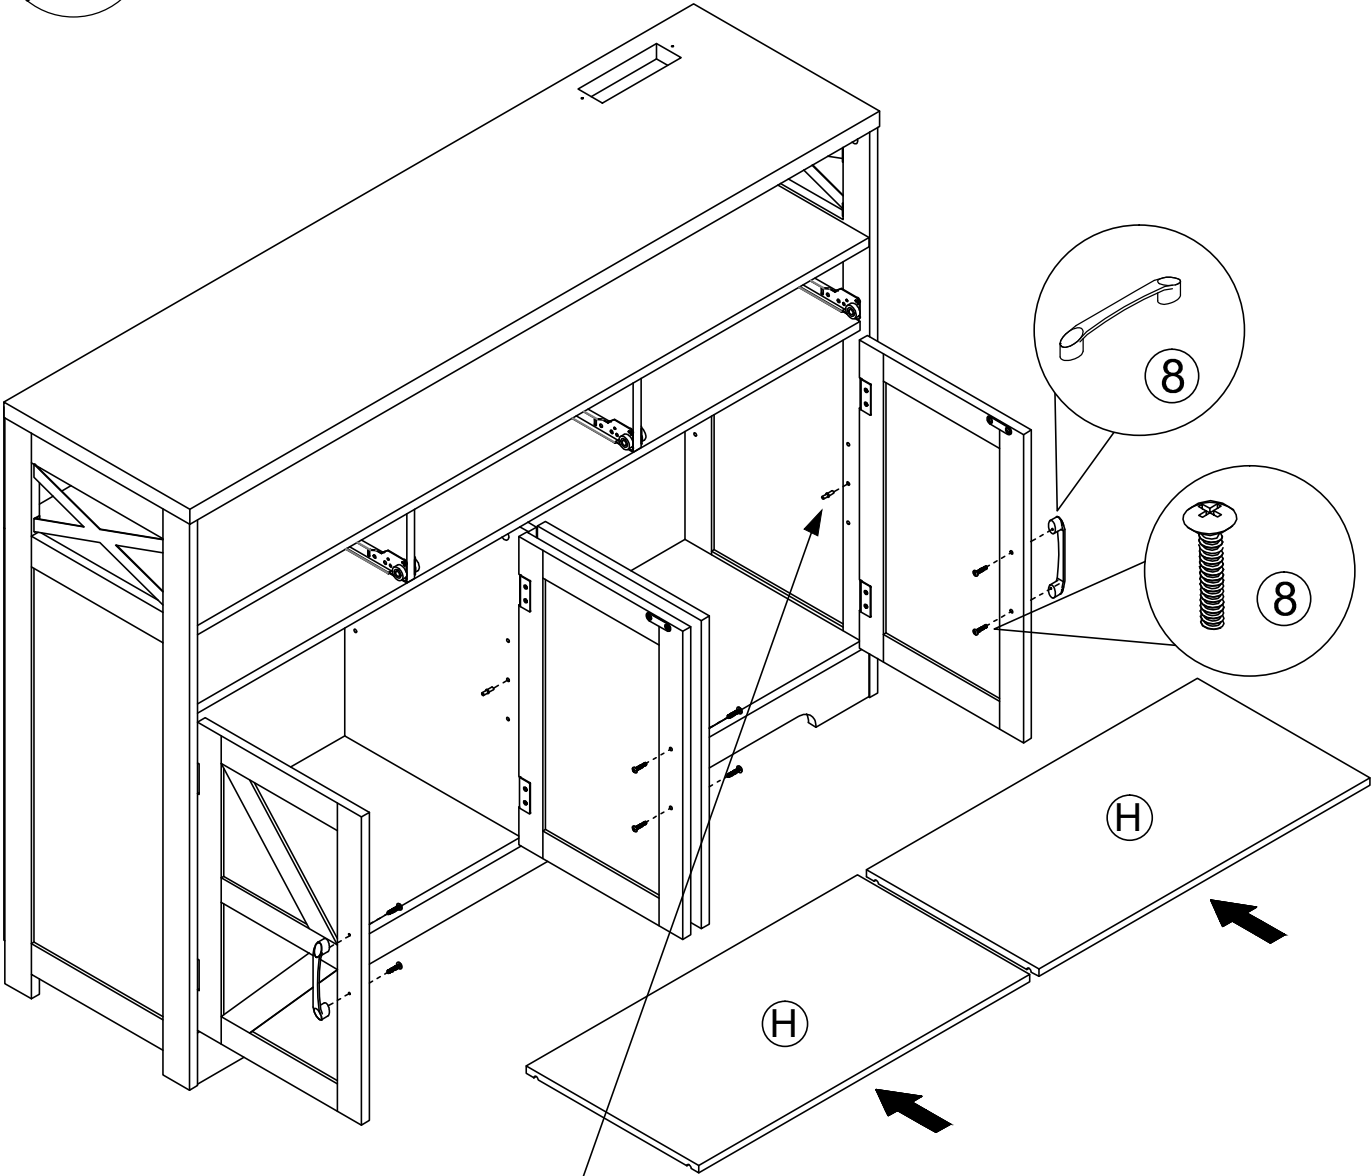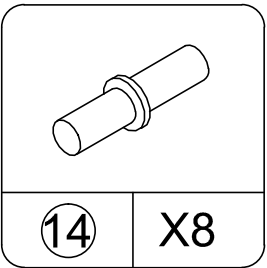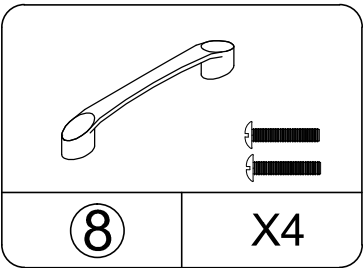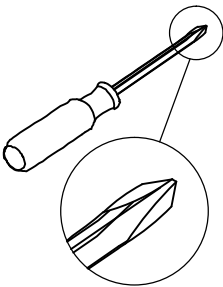


Step 1
Select the desired height
and put it in








Step 2
Aim the board gaps down

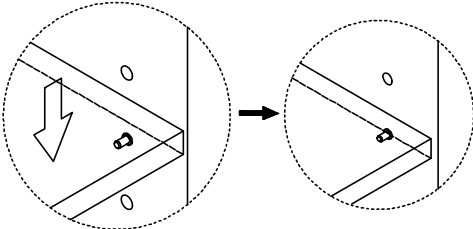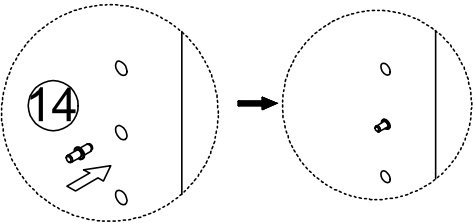




STEP15

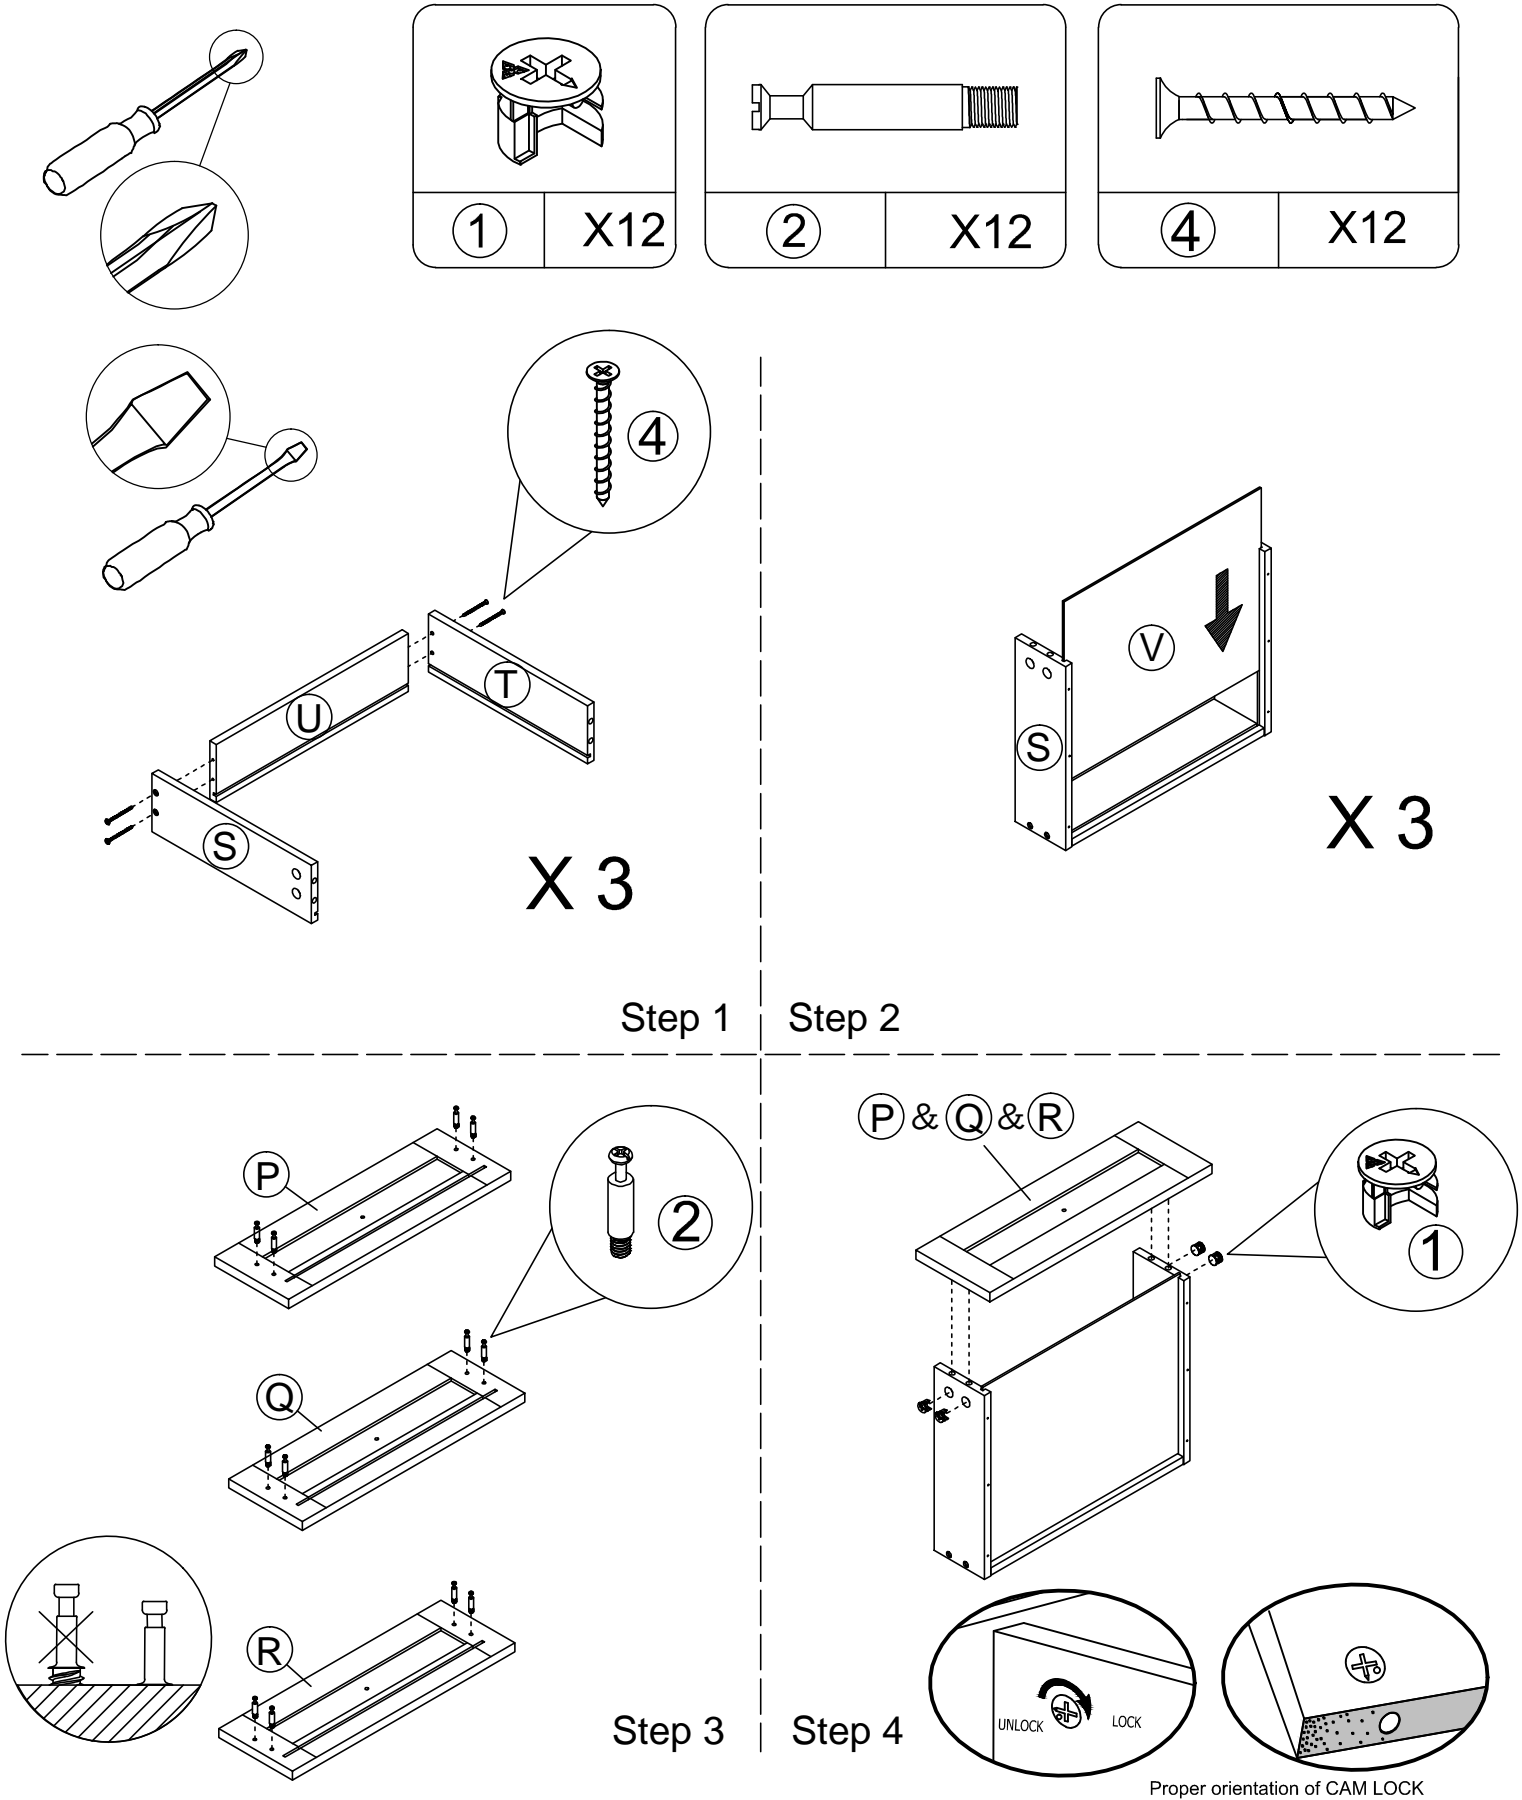





STEP16

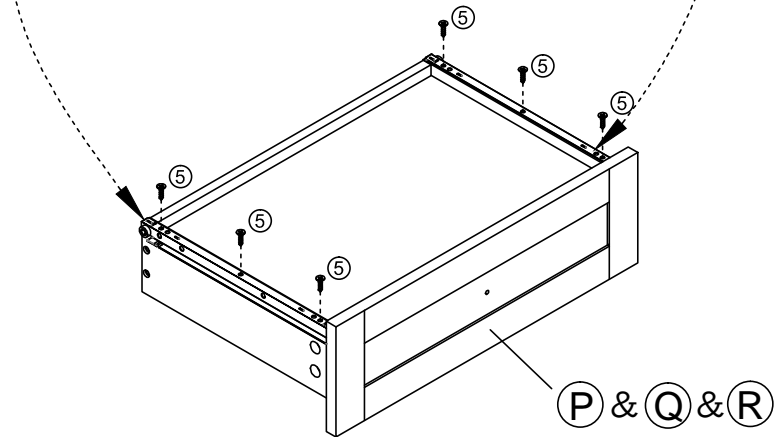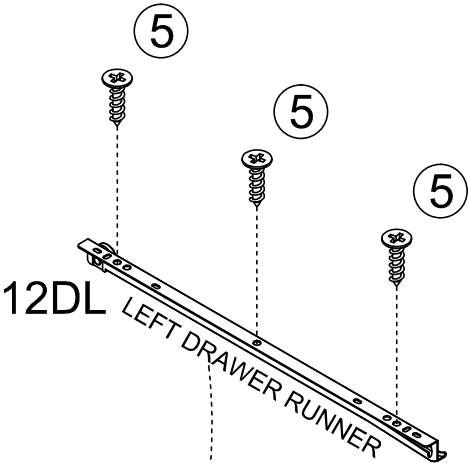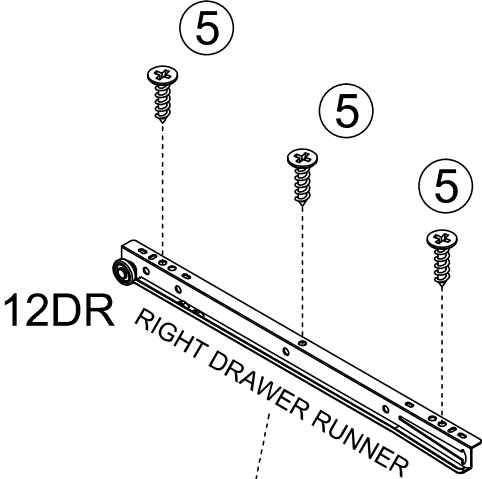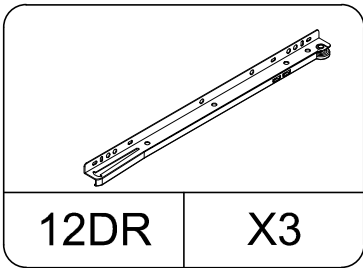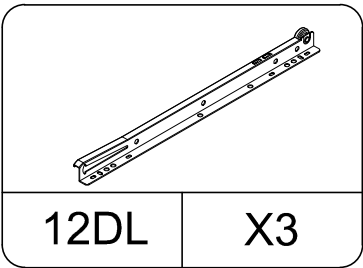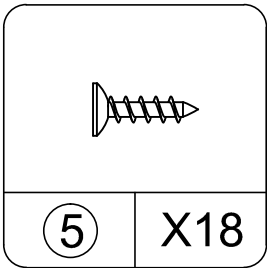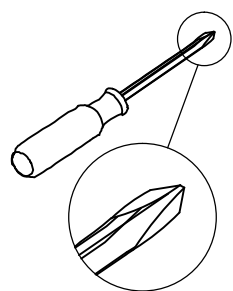


STEP17

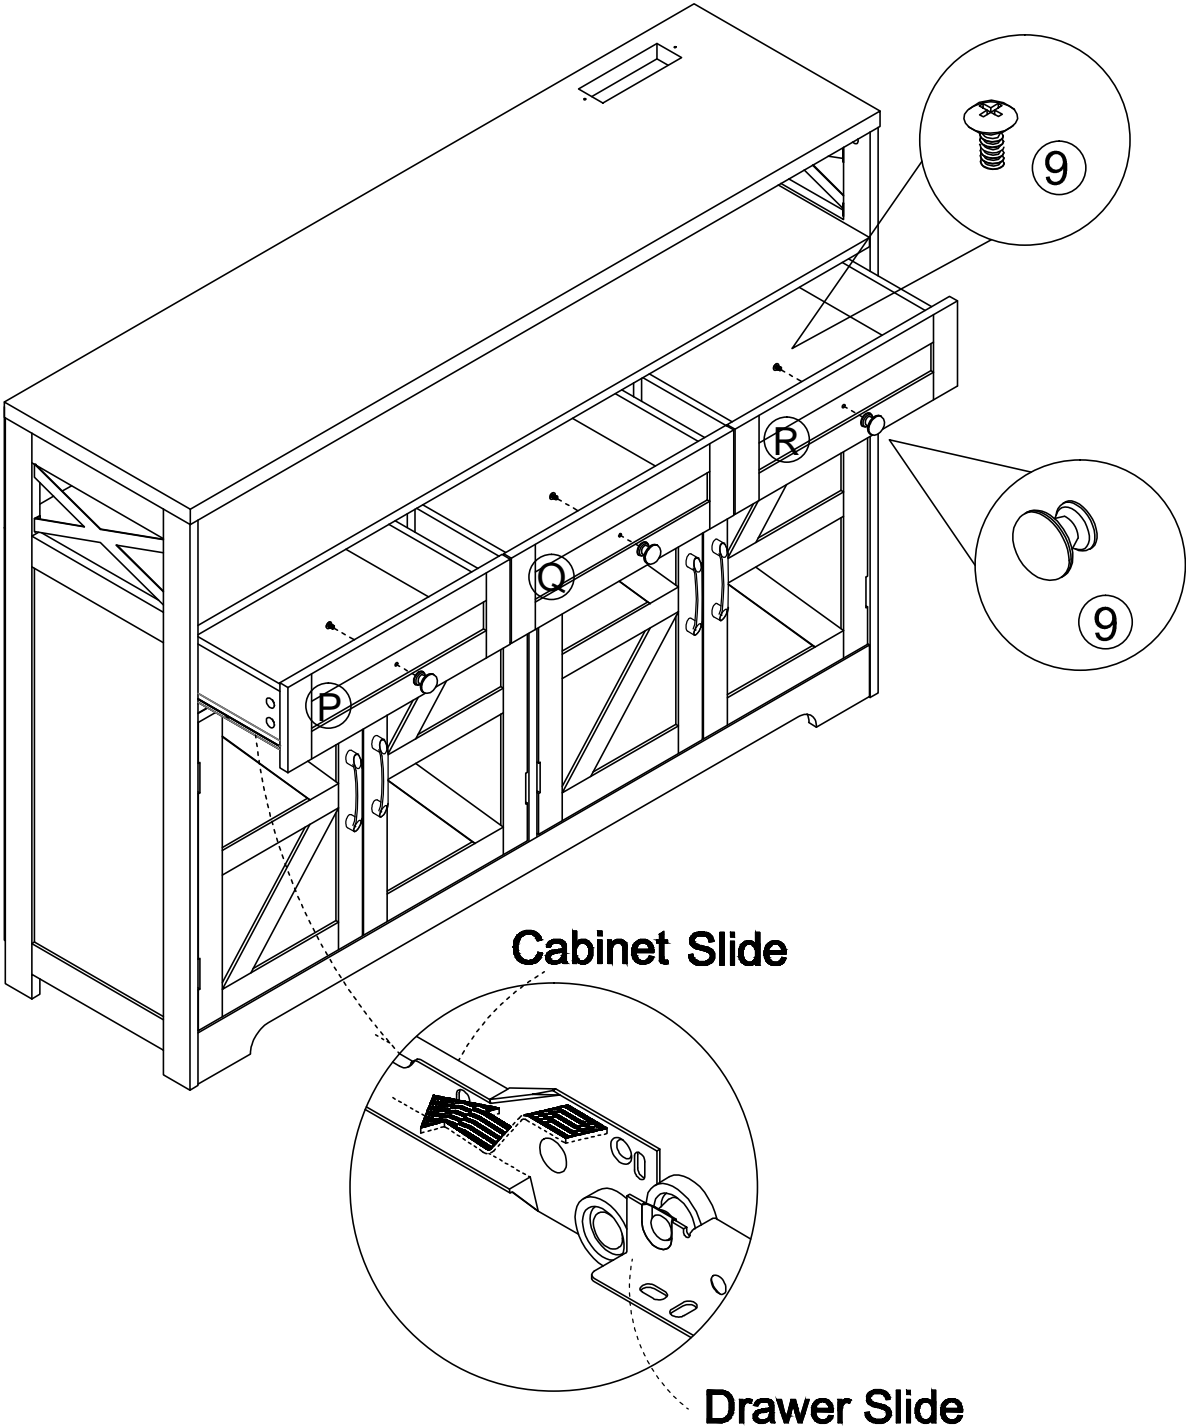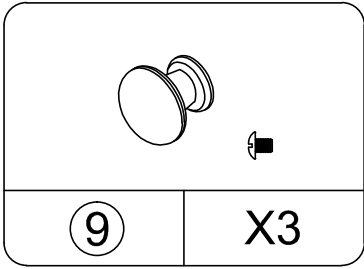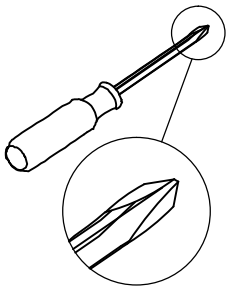



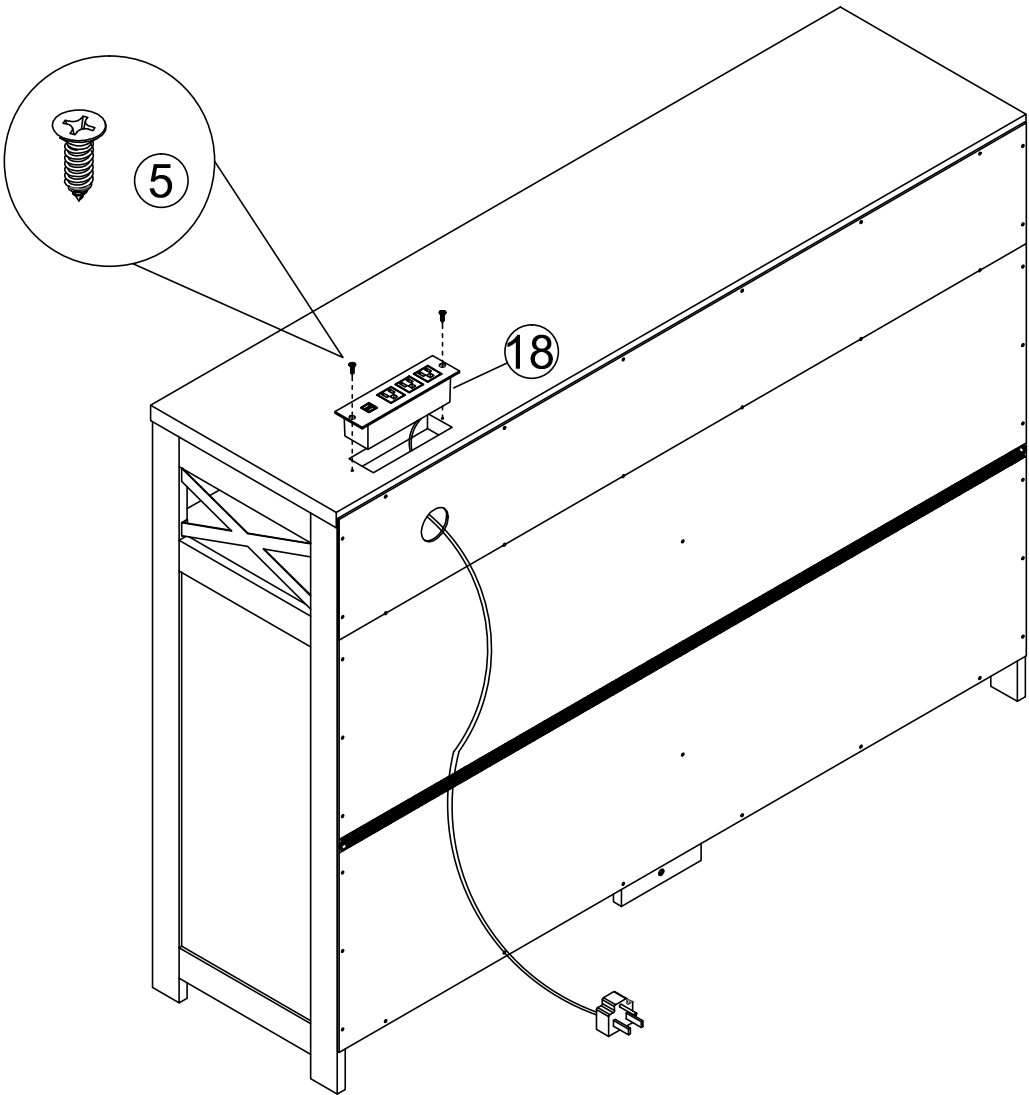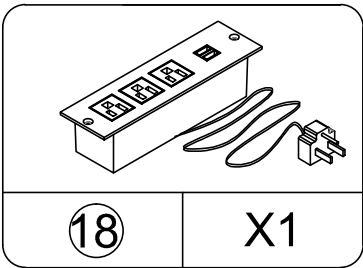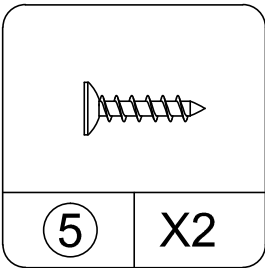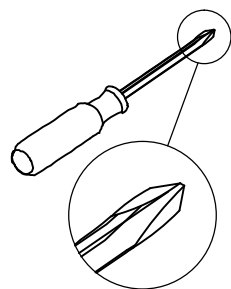


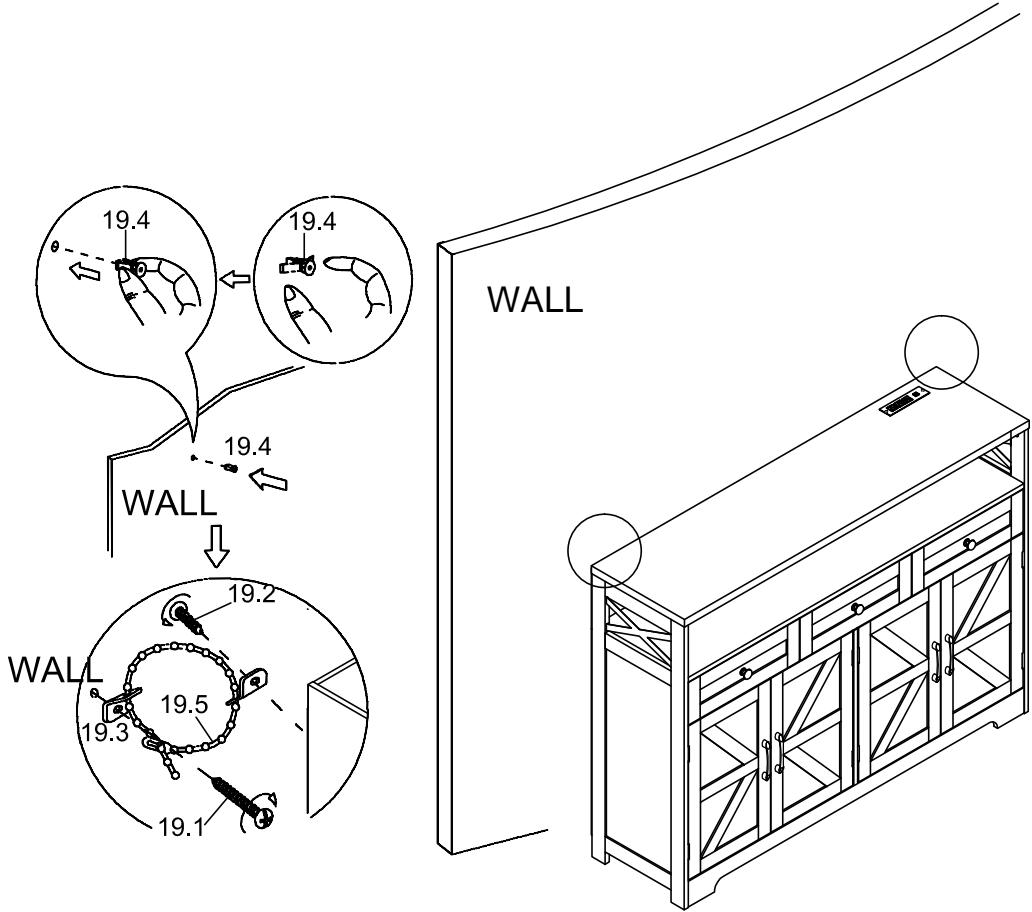
STEP18

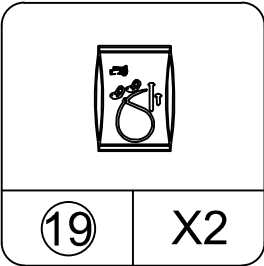

STEP19



PART LIST	FIGURE	QUANTITY	DESCRIPTION
19.1		2PC	LONG SCREW (Dia.4mmX38mmL)
19.2		2PC	SHORT SCREW (Dia.4mmX19mmL)
19.3		4PC	METAL "L"BRACKET
19.4		2PC	PLASTIC ANCHOR
19.5		2PC	CABLE



Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance.