


ASSEMBLY INSTRUCTIONS

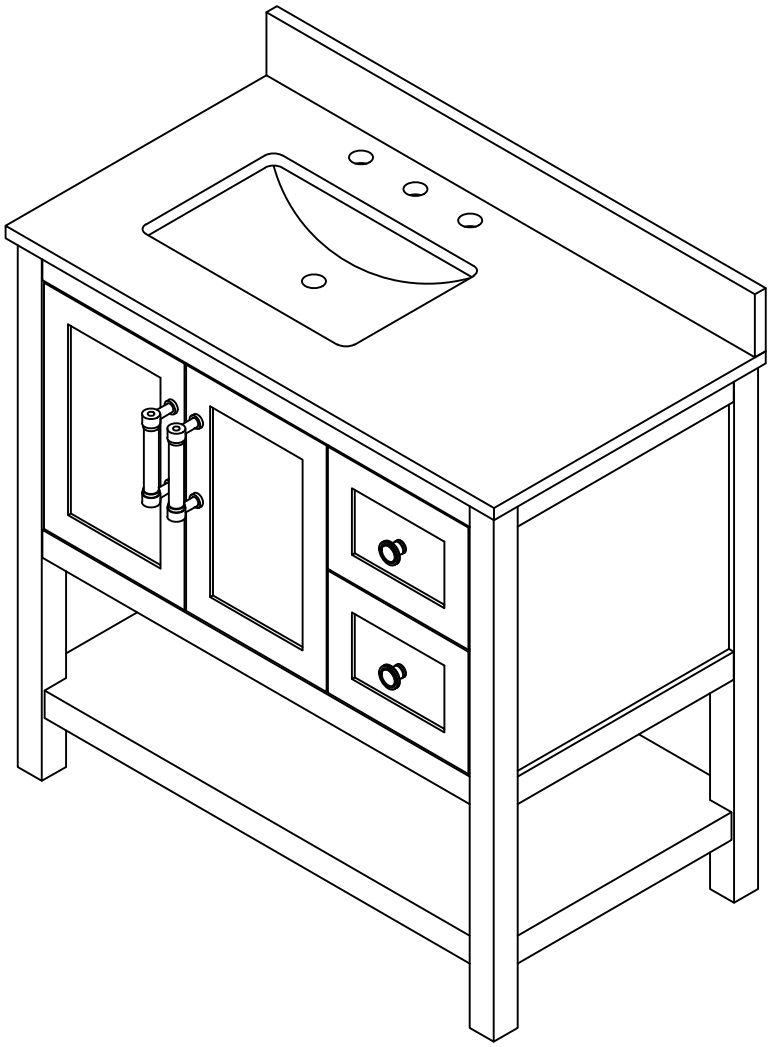


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

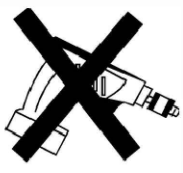


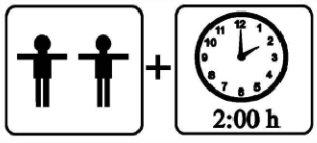

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.

Cam Lock Assembly Instructions





Diagram A

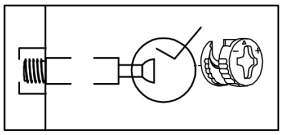

Insert Cam Bolt into hole as shown in diagram A.





Diagram B

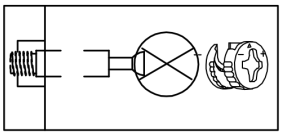

Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.







Diagram C

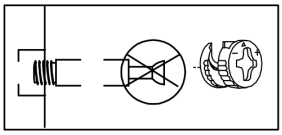


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.

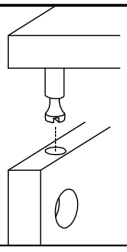

Connect the panels together.

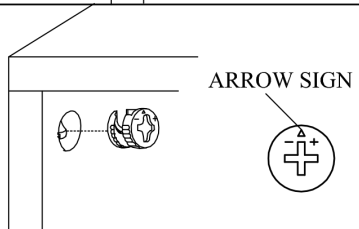


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

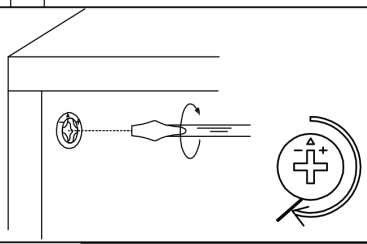


To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Part List


1. Left side panel (x1)

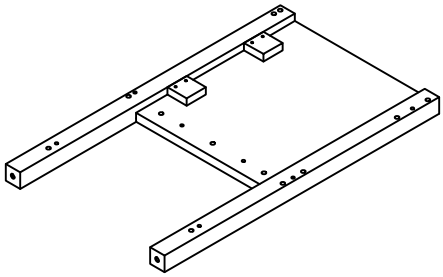


2. Right side panel (x1)

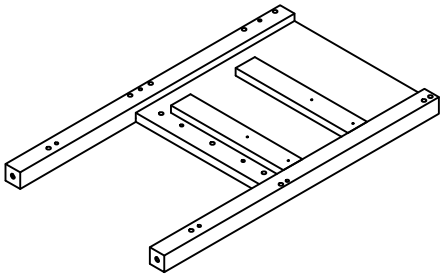


3. Bottom panel (x1)

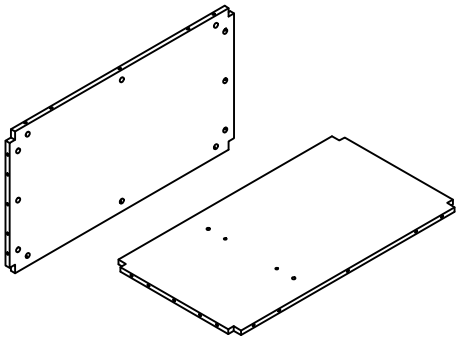


4. Shelf panel (x1)

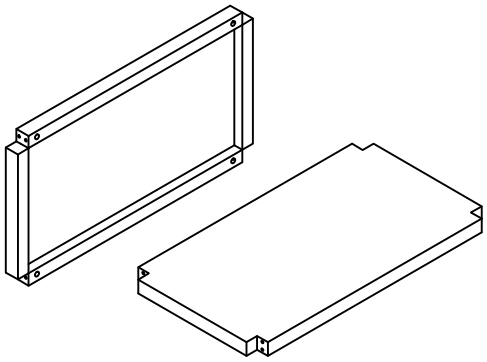


5. Front stretcher - upper (x1)

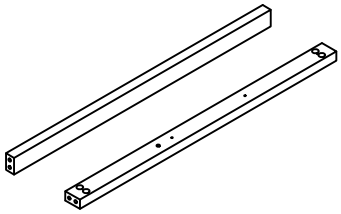


6. Front stretcher - lower (x1)

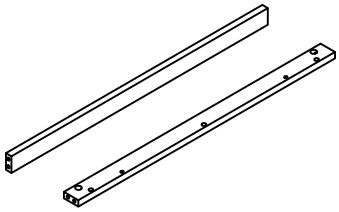


7. Door stop rail (x1)

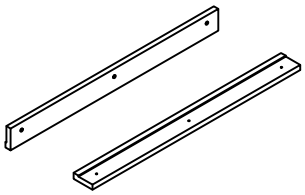


8. Back stretcher - upper (x1)

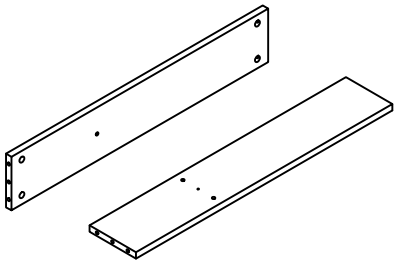


9. Back stretcher - lower (x1)

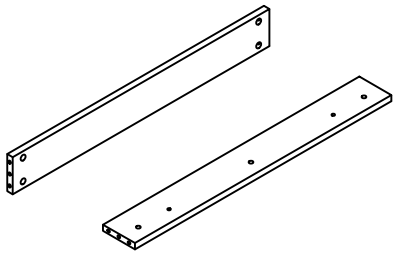


10. Left cabinet door (x1)



11. Right cabinet door (x1)




12. Center vertical divider (x1)

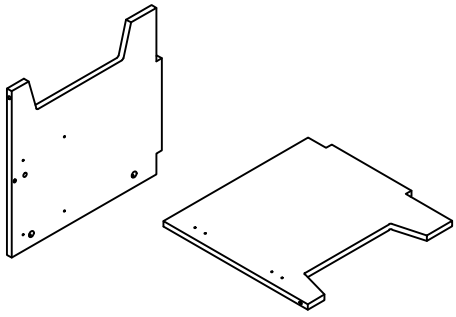


Part List


13 Drawer divider rail (x1)

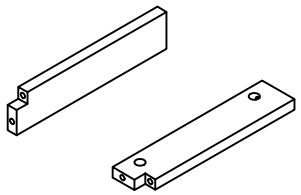


14 Drawer front (x2)

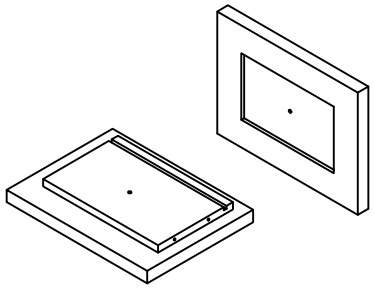


15 Left drawer side (x2)

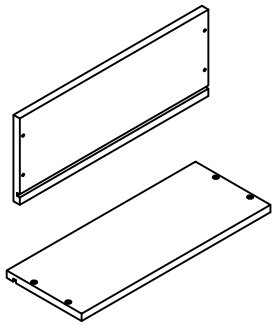


16 Right drawer side (x2)

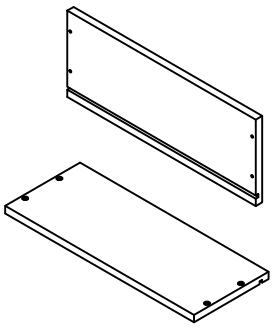


17 Drawer back panel (x2)

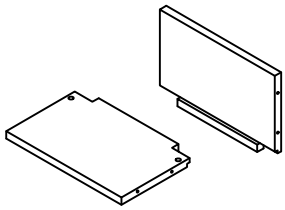

18 Drawer bottom panel (x2)

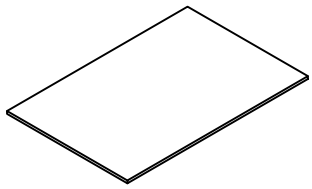


19 Vanity top assembly (x1)

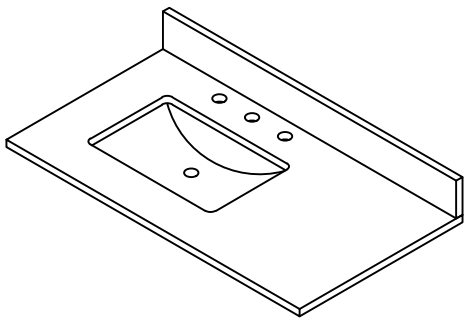


Hardware List


A Cam bol (x34)

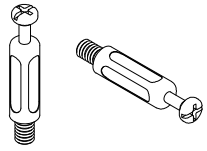


B Camlock (x34)




C Cam cover cap (x34)

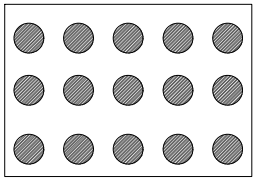


D Wood dowel (x25)



E Inset hinge (x2)

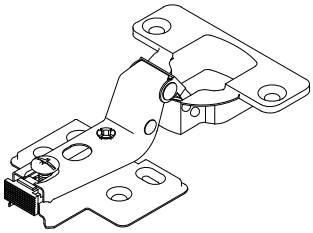


F Handle with screws (x2)

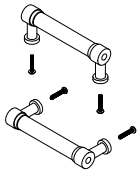


G Screw 14mm (x48)




H Screw 25mm (x3)




I Adjustable foot (x4)




J Bumper pad (x6)




K Drawer slide (x2)

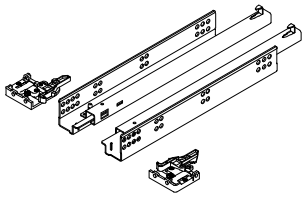


L Handle with screws (x2)

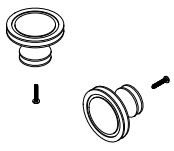

M Screw 30mm (x17)




N Half overlay hinge (x2)

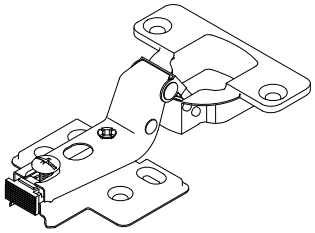


Step 1

A x 12

I x 2

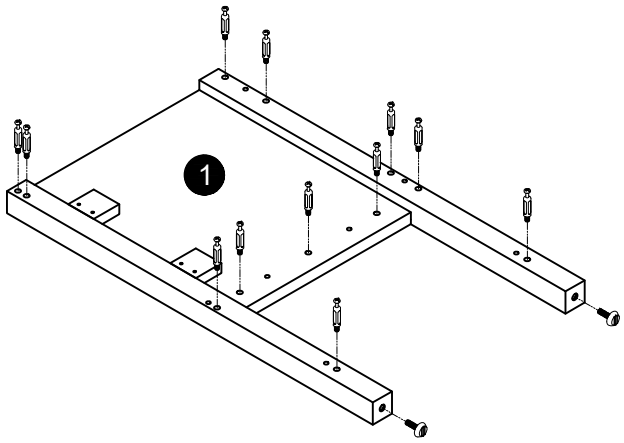


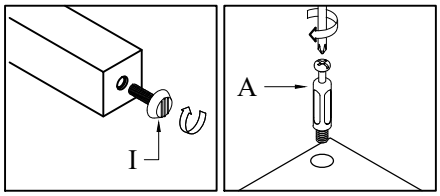


Step 2

A 13


I x2

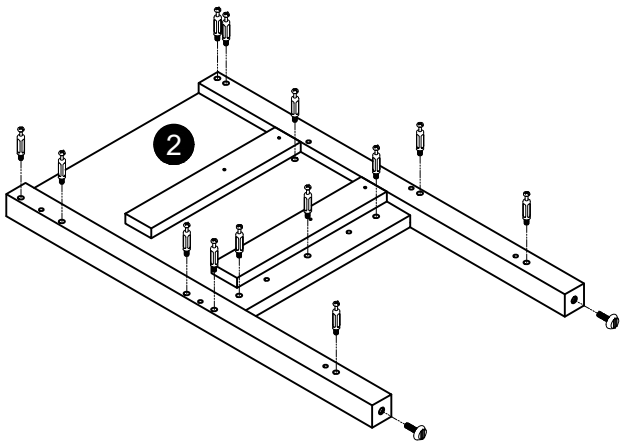


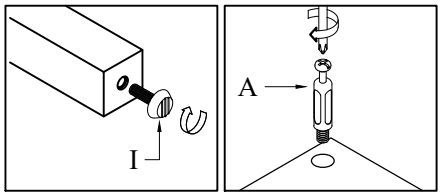

Step 3


A x 6

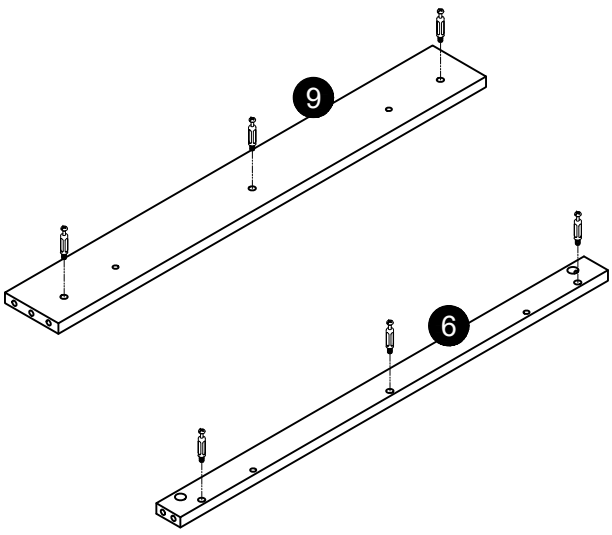


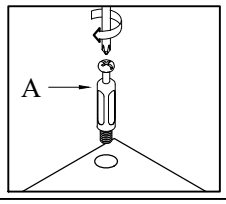


Step 4

A x 3

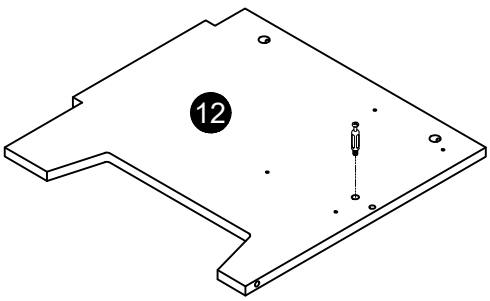


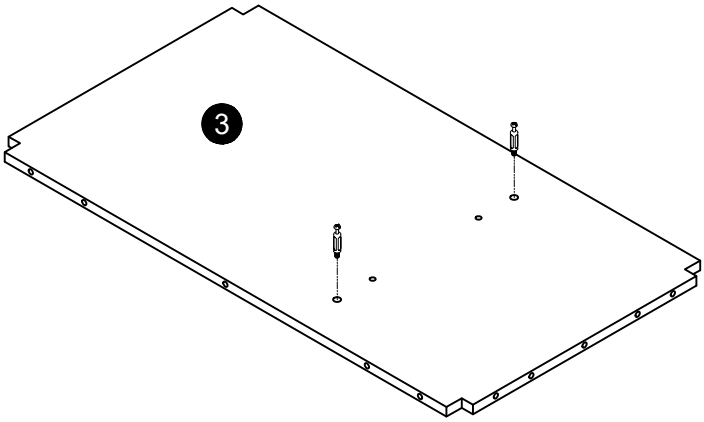


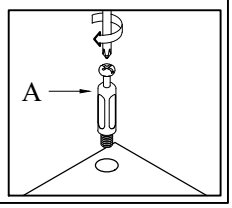


Step 5

B x 6
C x 6
D x 4

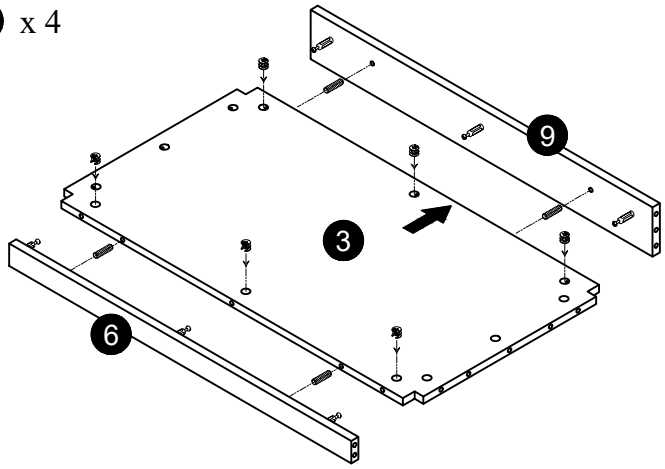


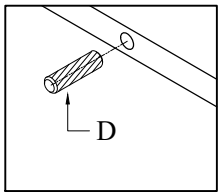


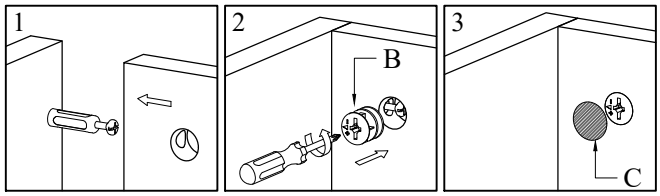


Step 6

B x 2
C x 2
D x 2

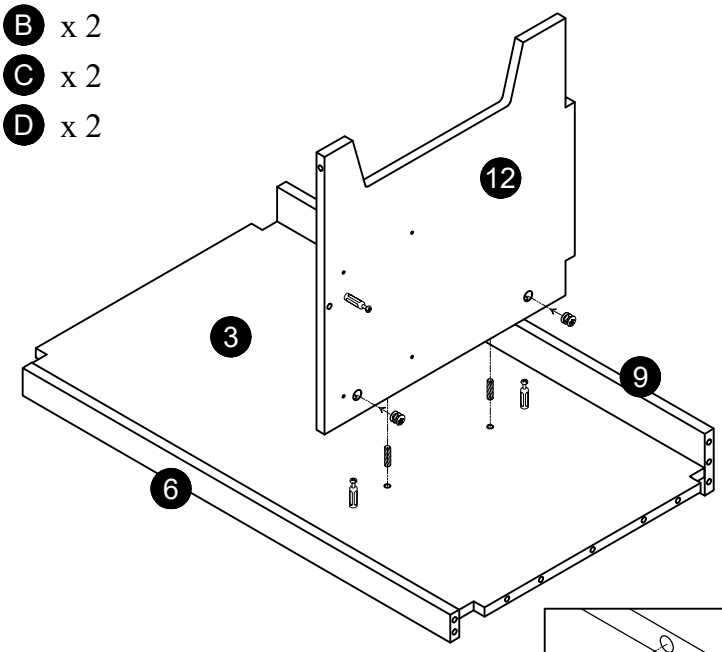


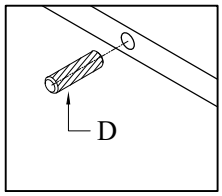


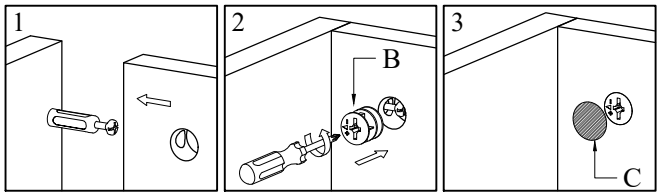


Step 7

B x 1
C x 1
D x 1

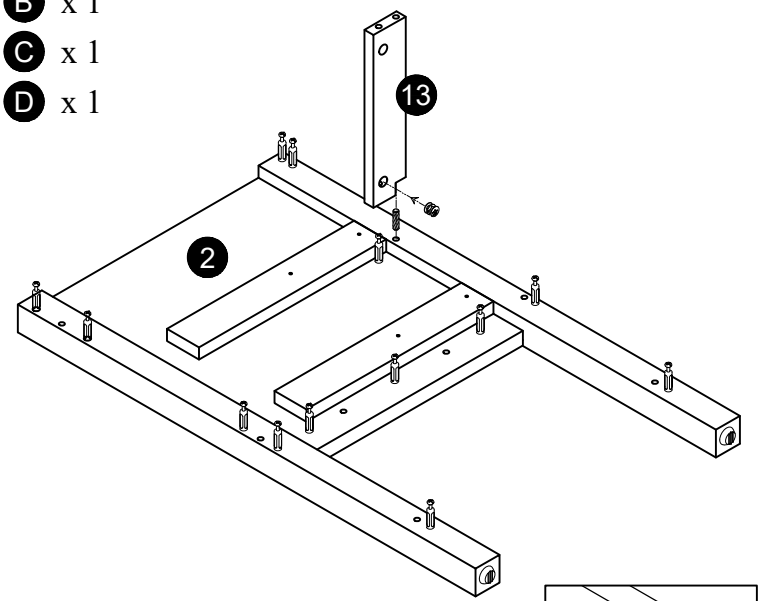


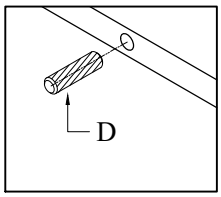


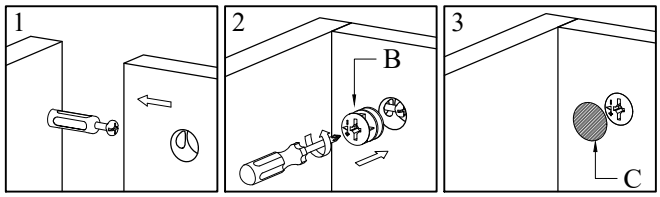


Step 8

B x 1
C x 1
D x 8

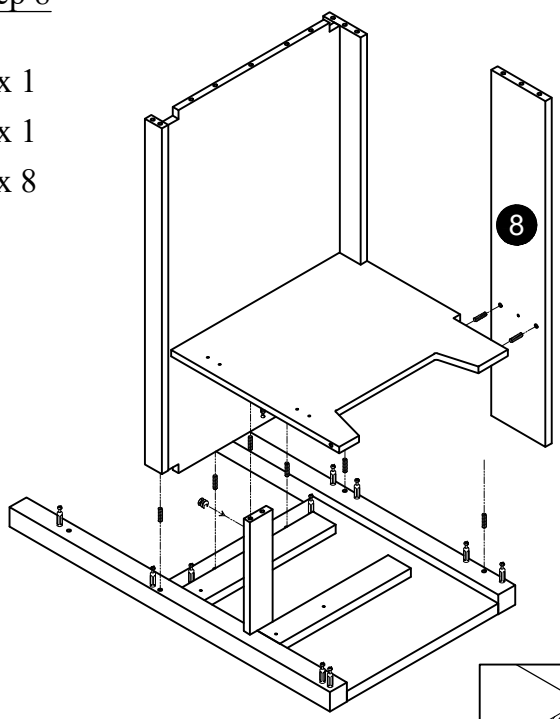


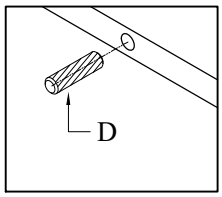


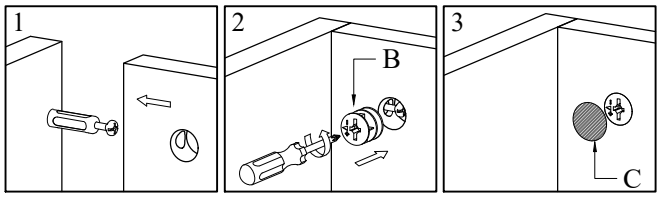

Step 9


- B x 6
- C x 6
- D x 1

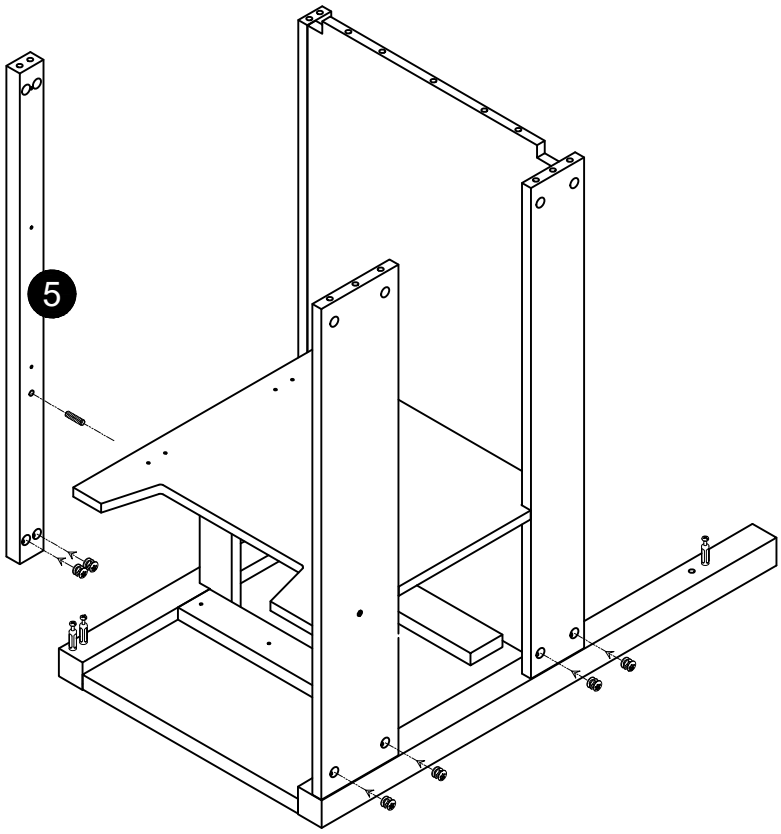


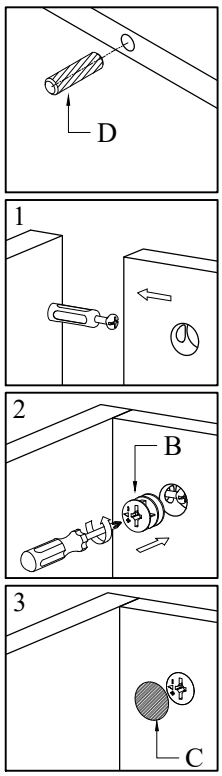

Step 10


- B x 6
- C x 6
- D x 2

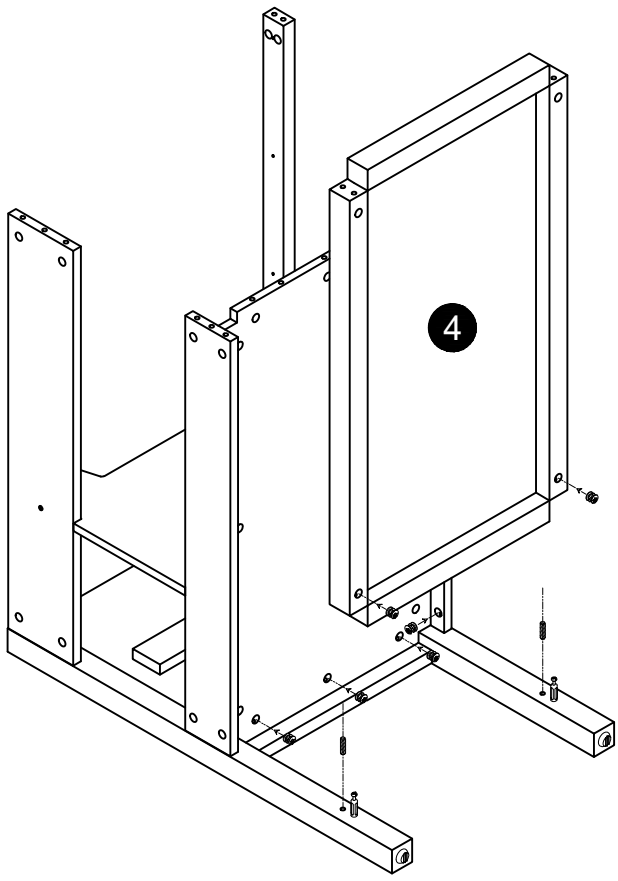


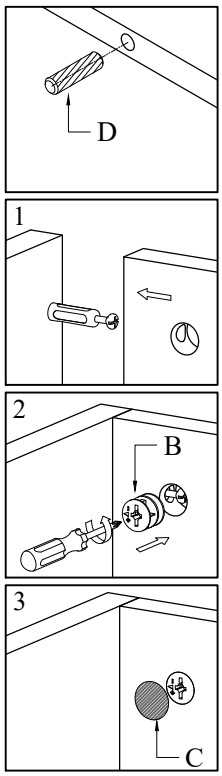



Step 11


B x 12
C x 12
D x 7

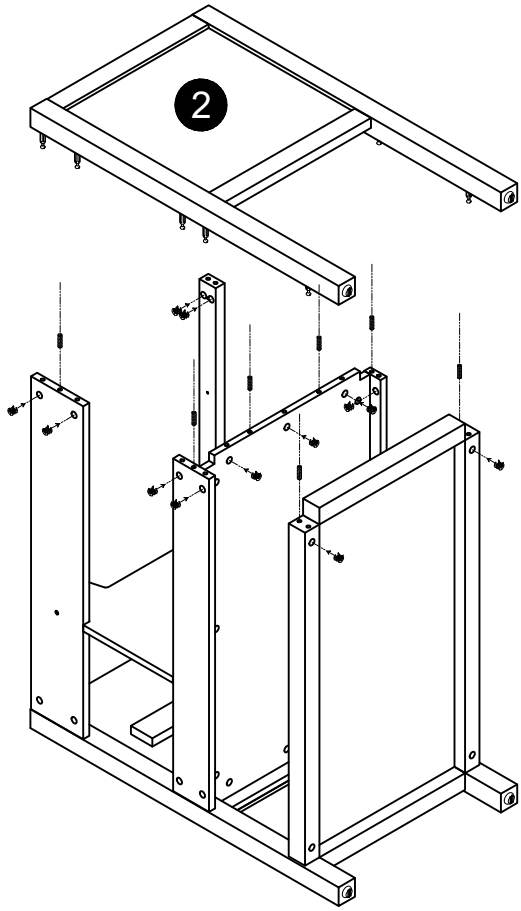

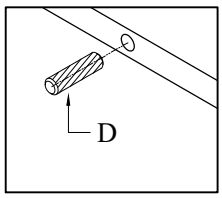

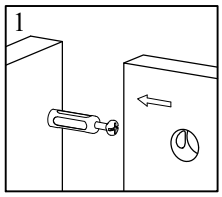


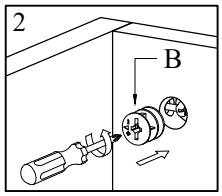


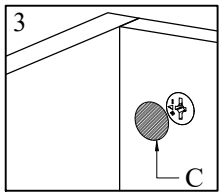

Step 12


H x 3
M x 1

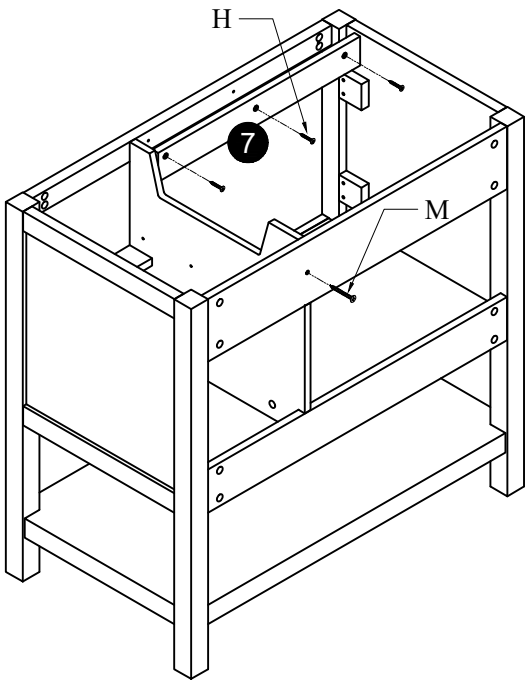


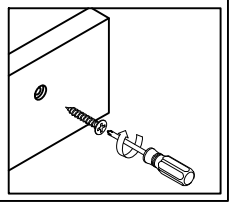

Step 13

K x 2
G x 12

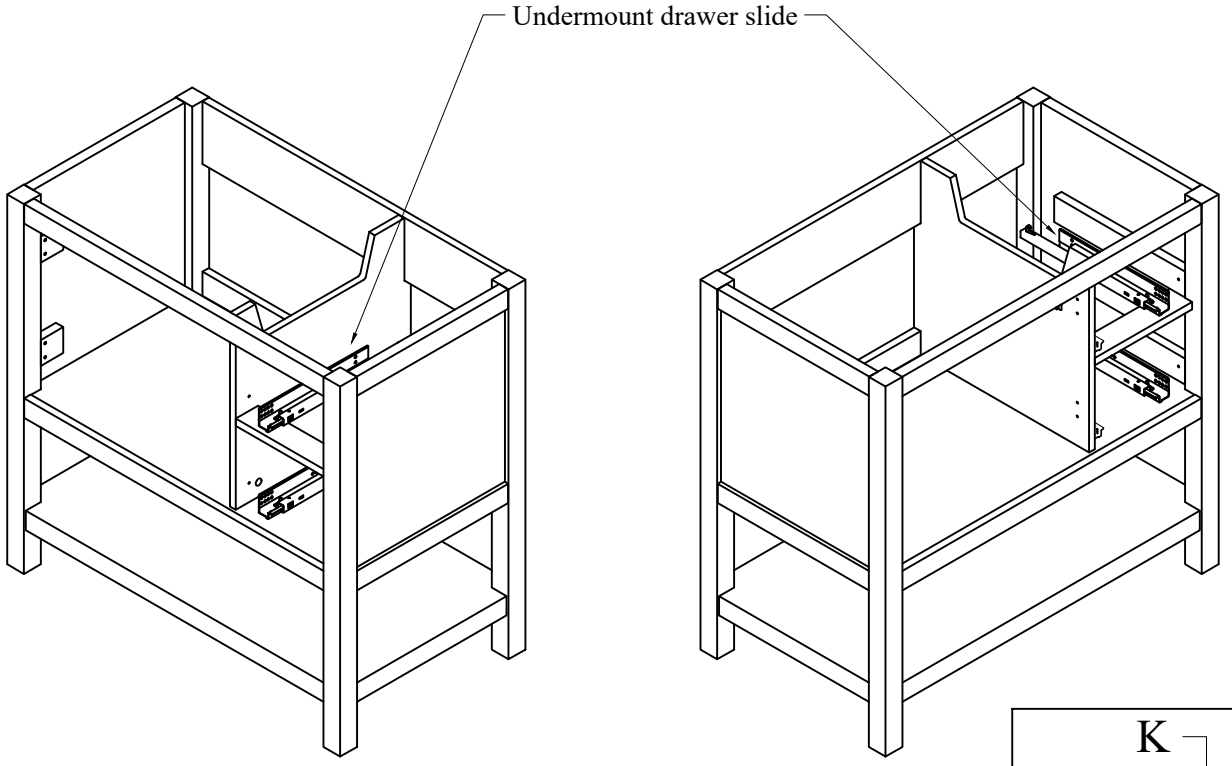


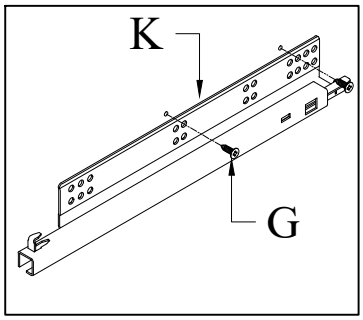



Step 14


Hinge installation instructions
1.Attach the hinge using the two pre-drilled round holes and align the door.
2.Tighten the two screws to secure.
Two holes are pre-drilled by design.
The door works properly with these two screws.
Additional screws are optional after alignment.


E x 2
F x 2
G x 24
N x 2

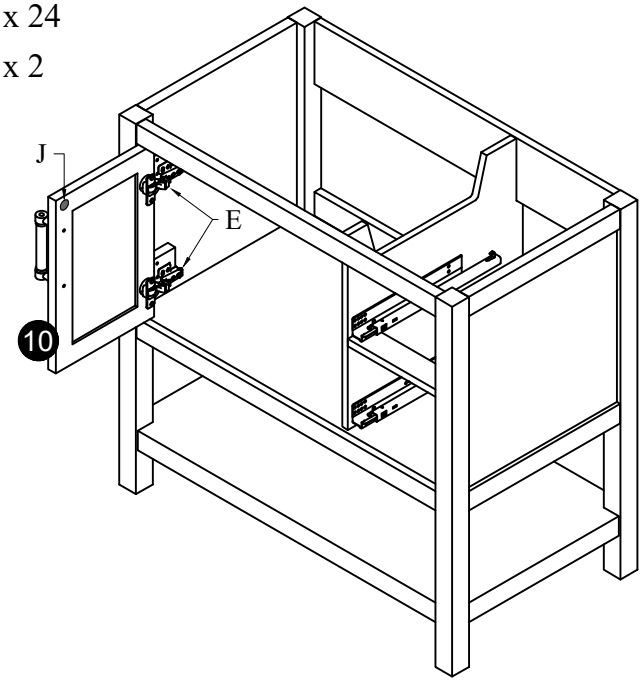


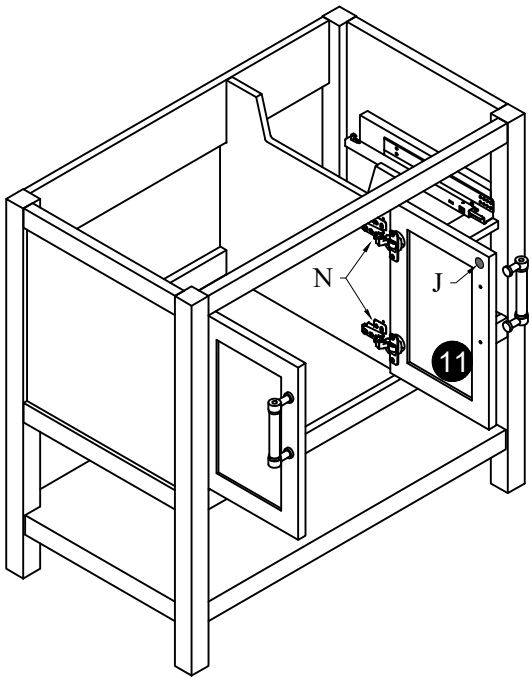


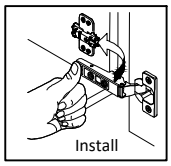


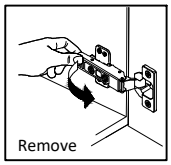


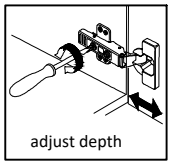


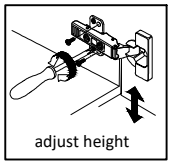

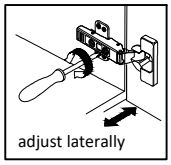

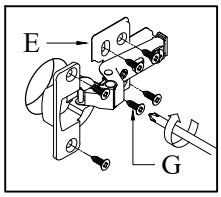


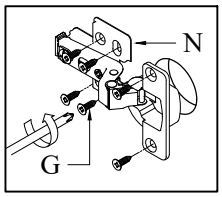


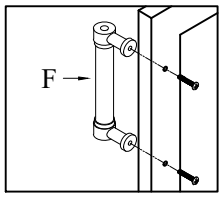



Step 15


M x 16

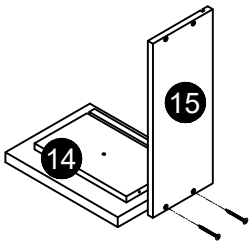

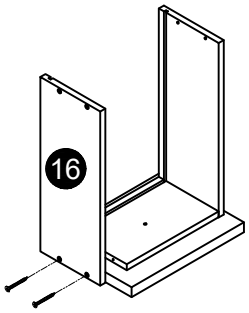

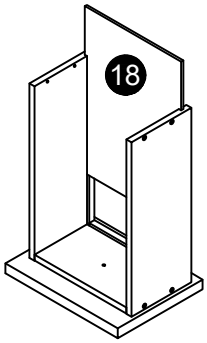

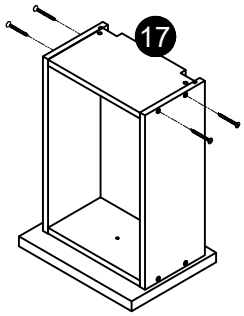


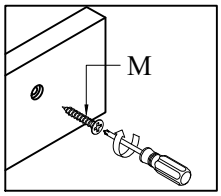



Step 16


G x 12

L x 2

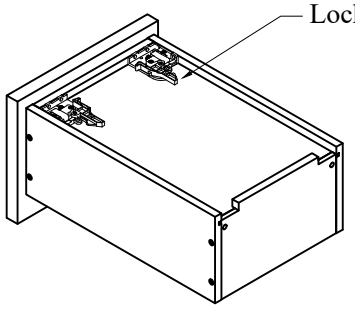


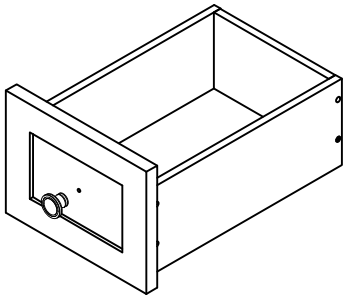

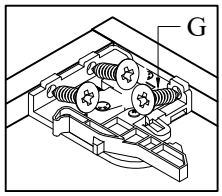


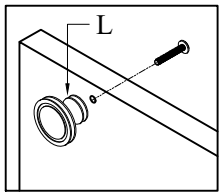

Step 17

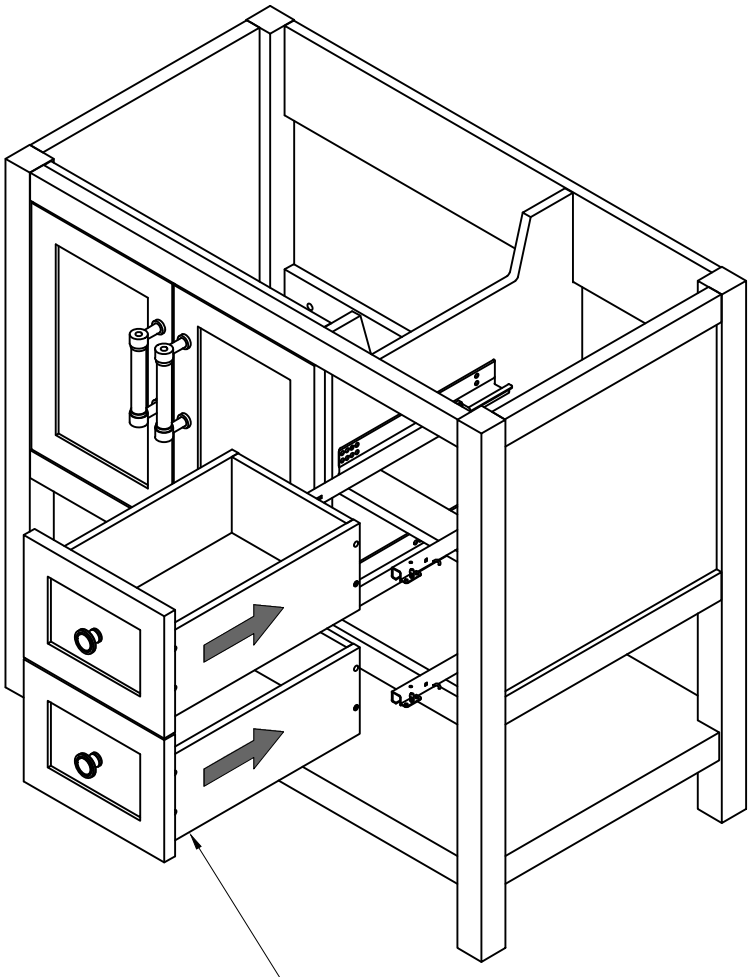


Step 18

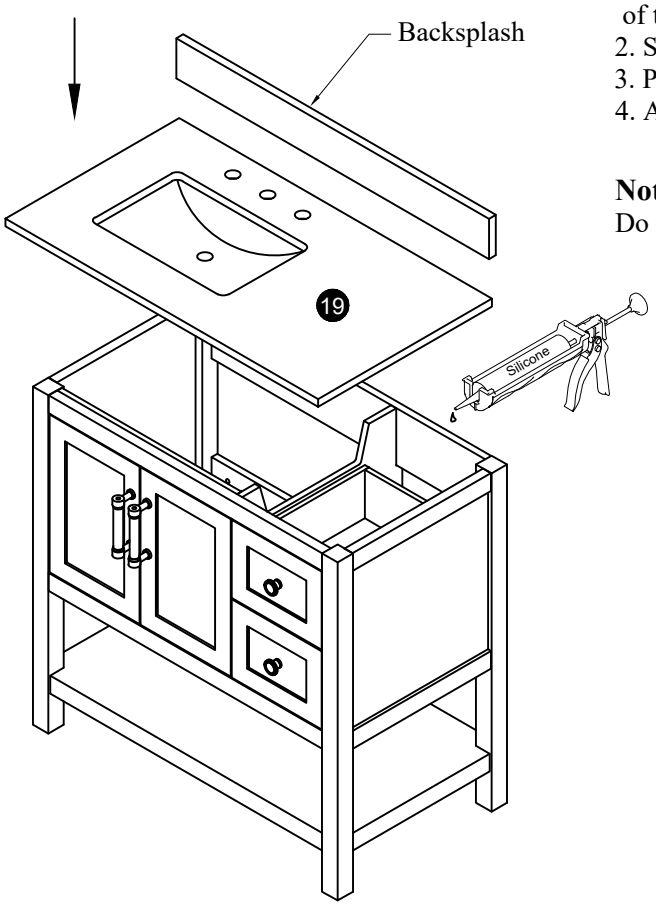


Secure the Countertop(Silicone Required)
1. Apply a thin, continuous bead of silicone to the top edges of the vanity cabinet.
2. Set the countertop in place and align it evenly on all sides.
3. Press firmly. Remove any excess silicone immediately.
4. Allow silicone to cure for 24 hours before using the vanity.

Note: Silicone sealant is not included.
Do not expose to water until silicone is fully cured

Complete

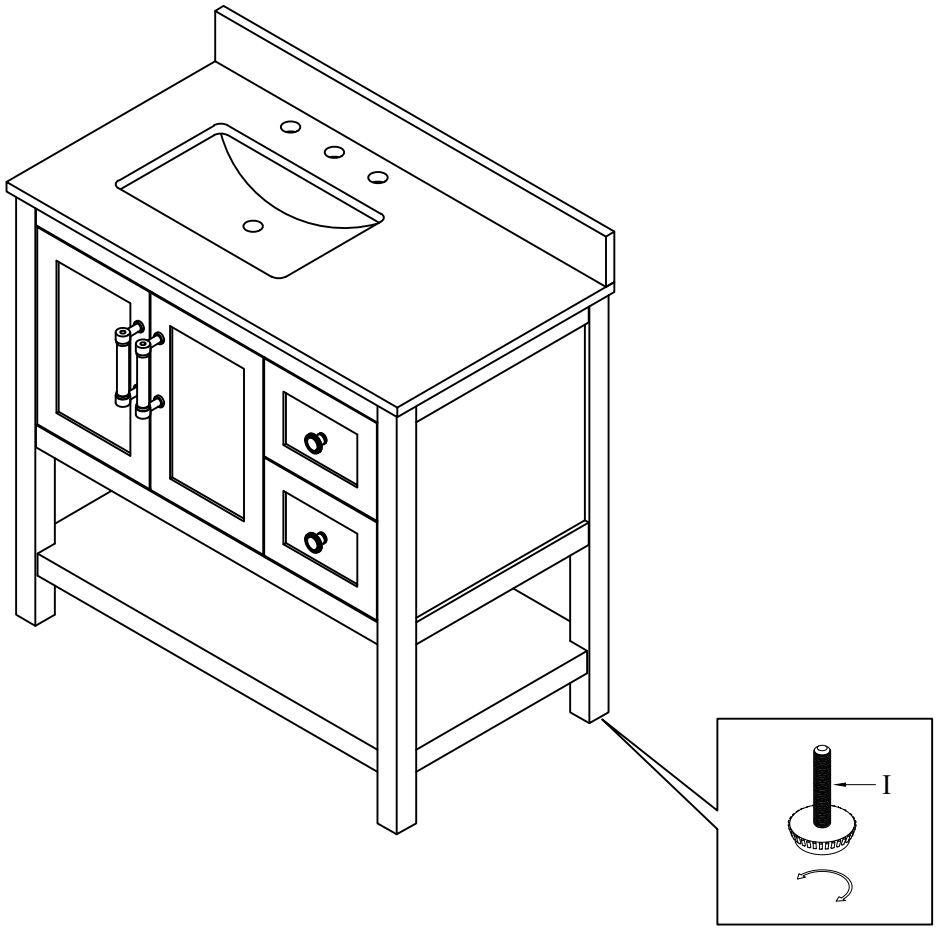


HINGE ADJUSTMENTS

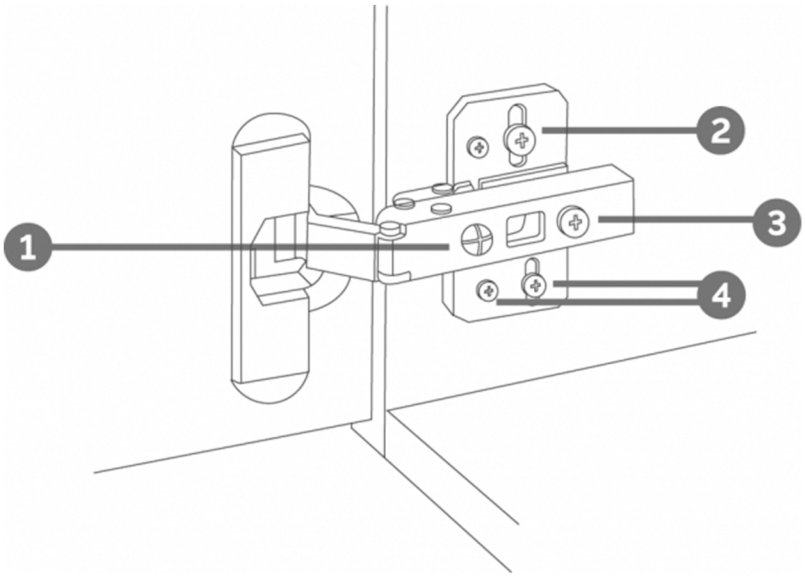


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

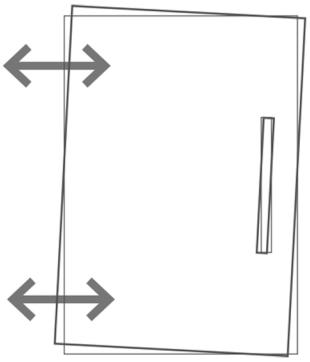

2 4 Height adjustment

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

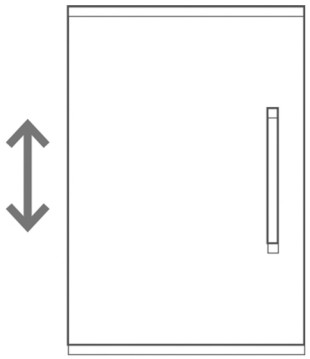

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw
clockwise to decrease the gap between the door and the cabinet
anticlockwise to increase the gap between the door and the cabinet

