


Coffee Table


Installation Instruction

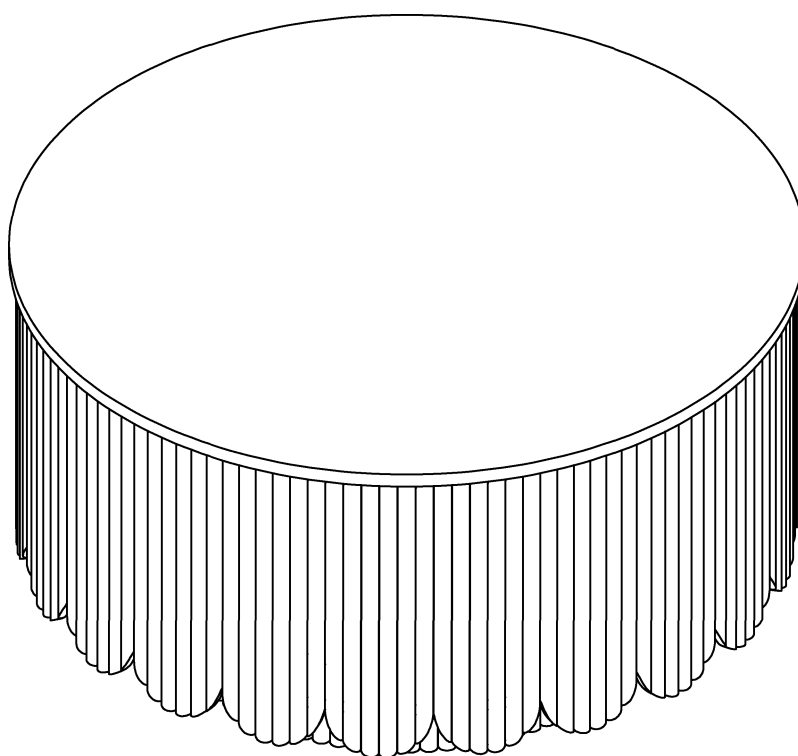


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

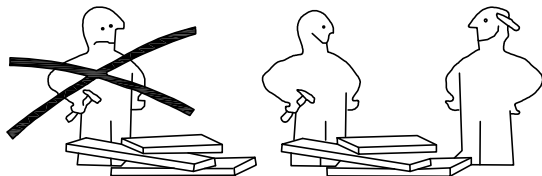


What' included


Code	Description	Qty
A	Cam Bolt M6X35MM	6
B	Cam Lock15X10MM	6
C	Wooden Dowel M8X30MM	16
D	Screw M4X40MM	10
E	Adjustable Foot	6
F	Lift mechanism	1
G	Lift mechanism	1
H	Screw M7X40MM	4
I	Hole position sticker	6
J	Screw M6X25MM	6
K	Screw M3.5X12MM	16
L	Screw M6X10MM	32
M	Metal handshandle	1
N	Screwdriver	1
O	Screw M3.5X14MM	8

The Hardwares


A




B



C




D




E




F

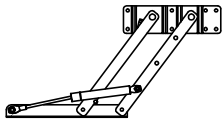

G



H



I



J



K




L



M



N



O




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)

Included Accessories


Code	Description	Qty
1	Cabinet Top	1
2	Bottom panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Reinforcement plate	2
6	Small panel	2
7	Coaming panel	2
8	Coaming panel	2
9	Coaming panel	2
10	Upper metal frame	1
11	The middle iron frame	1
12	The lower metal frame	1
13	Connection pipe	1
14	Long support pole	4
15	Short supporting rod	4

The Accessoriess

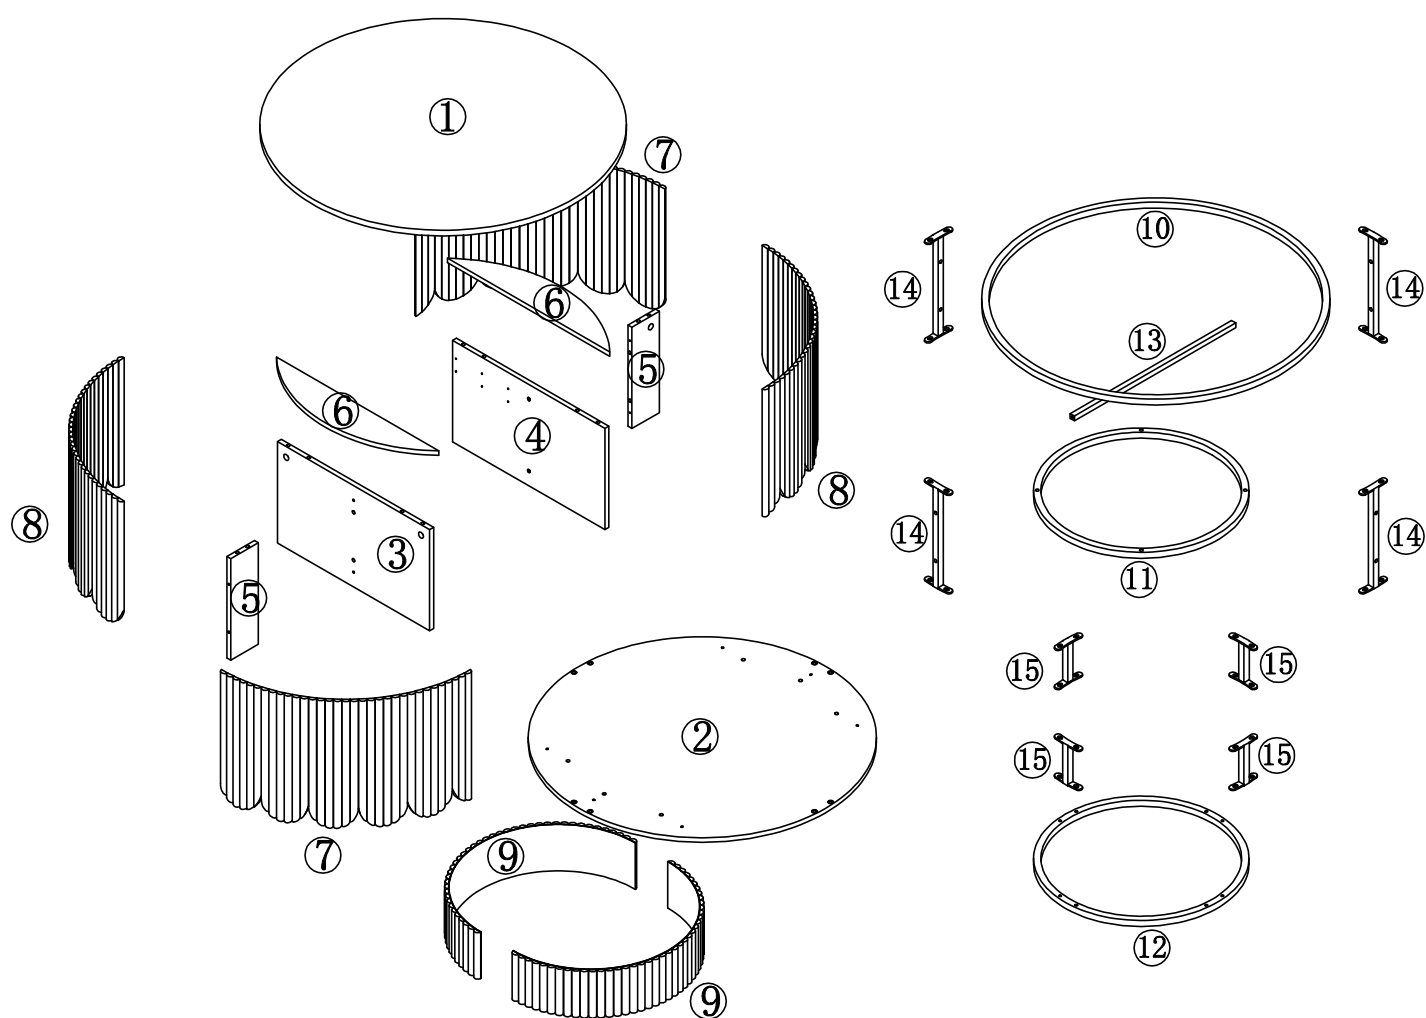


HARDWARE USAGE GUIDE


Hidden Cam Bolt/Cam Lock Usage Instructions

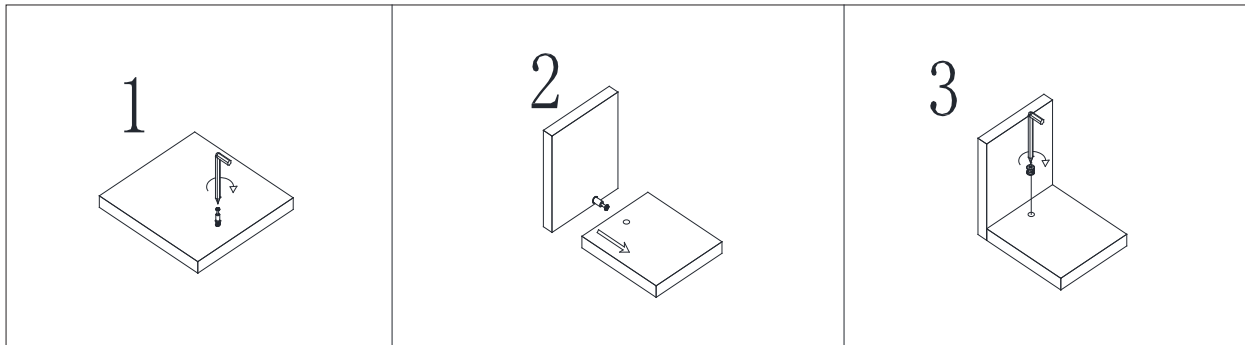

Step 1

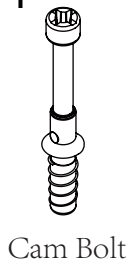


Turn the Cam Bolt until the shoulder is firmly against the part.


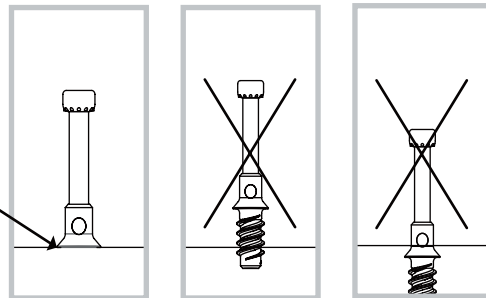


Step 2

Connect the two plates at 90 degrees.

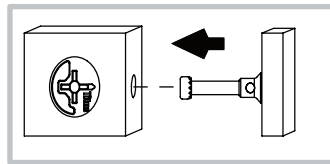


Step 3.1

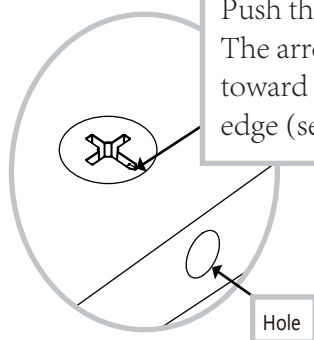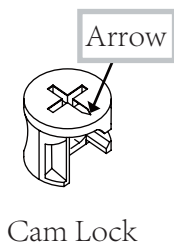






Push the cam lock into the part. The arrow must point directly toward the hole on the board's edge (see diagram).

Step 3.2



Install the cam lock nut and fix it by rotation.

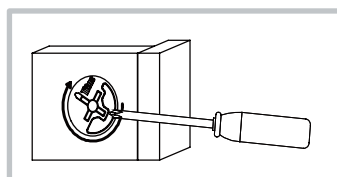


Step 1

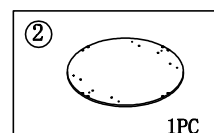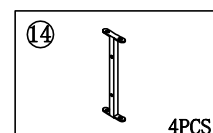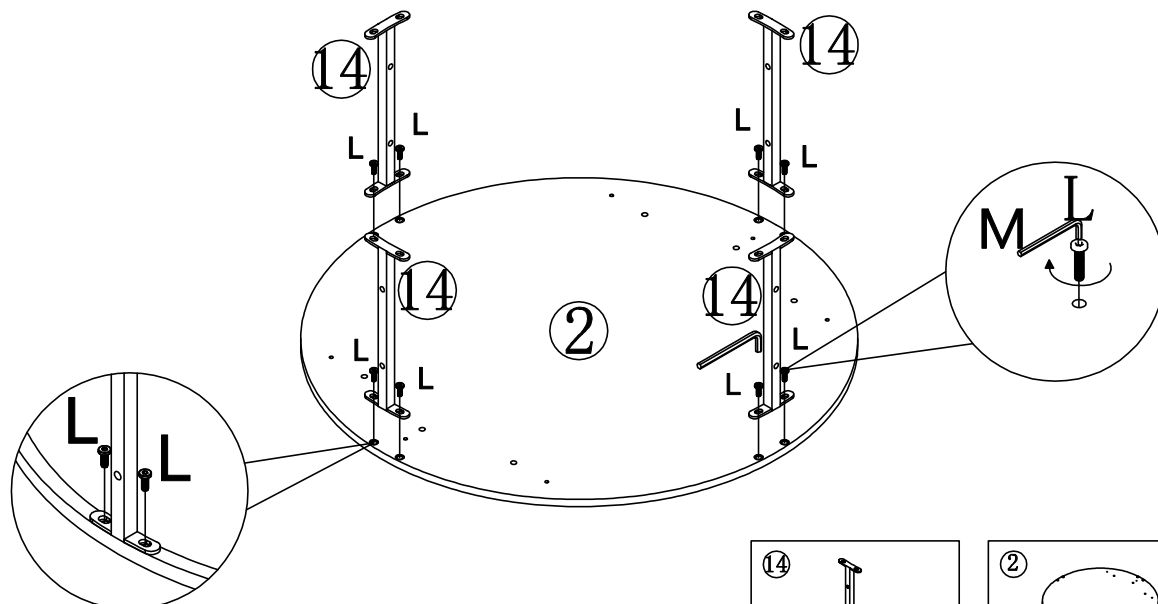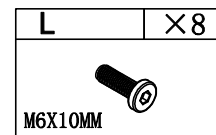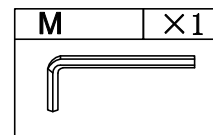

Step 2

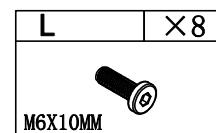
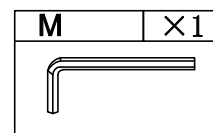







When installing components L, first tighten them to 80%. After confirming that all components have been correctly tightened, then continue to fully tighten them

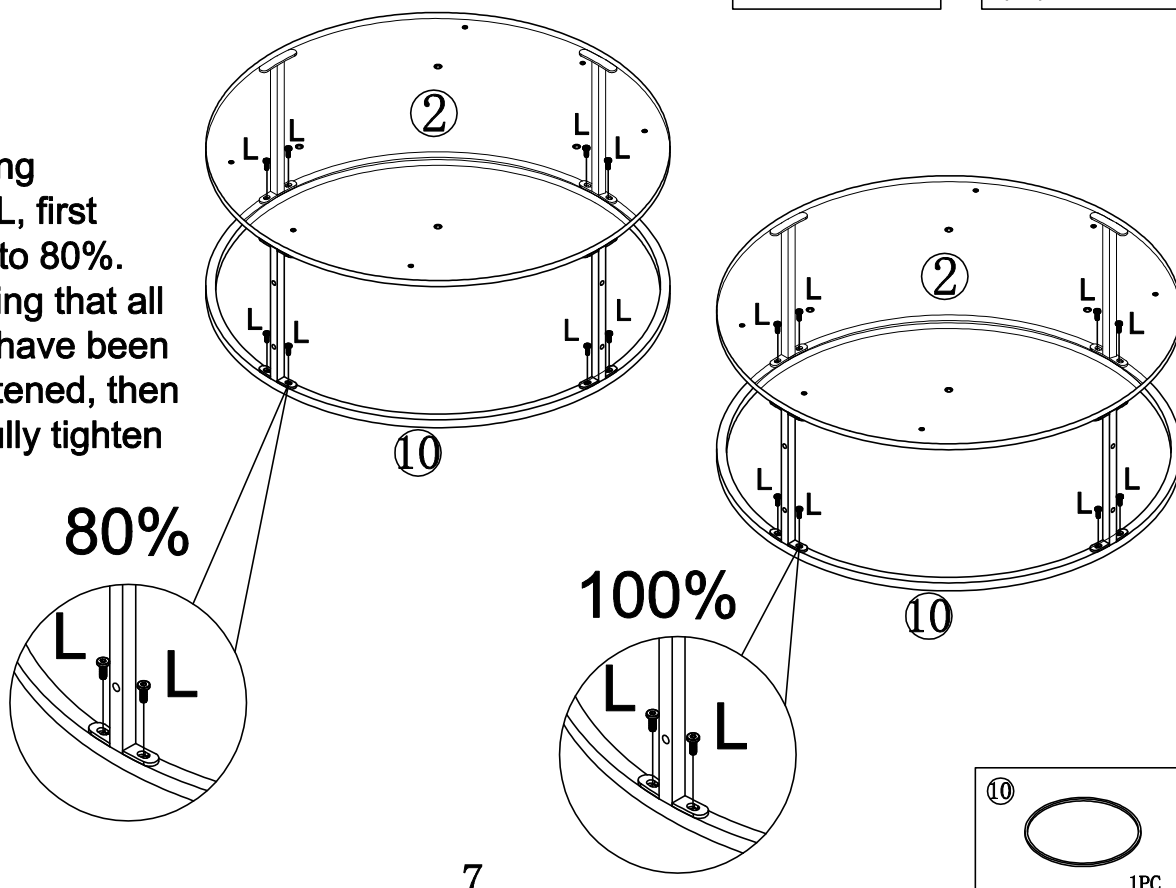


Step 3




When installing, please make sure that the three holes on the board are on one side.

C	×4	D	×4
			

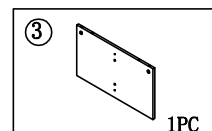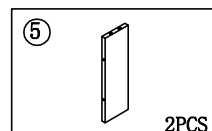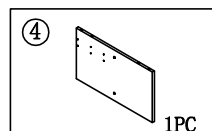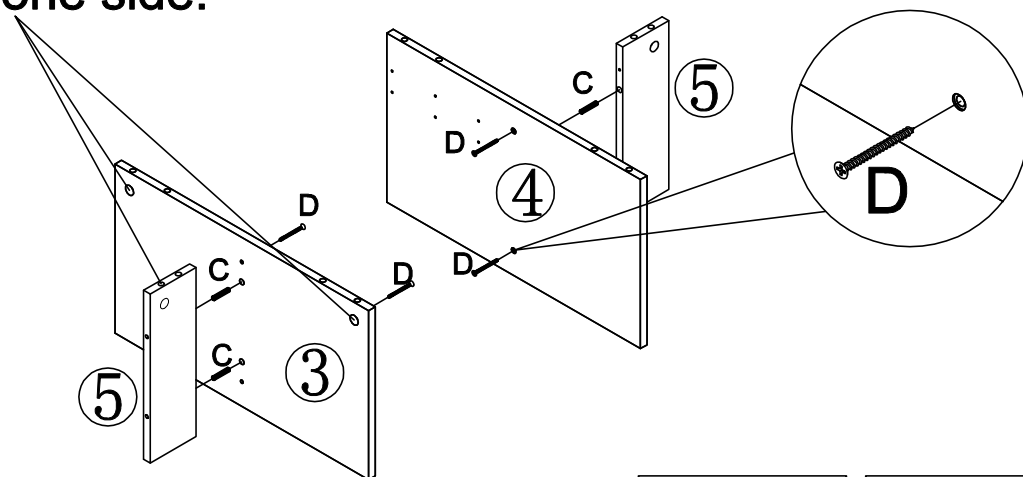




Step 4

C	×6	A	×6
			

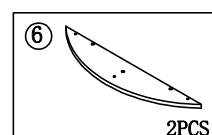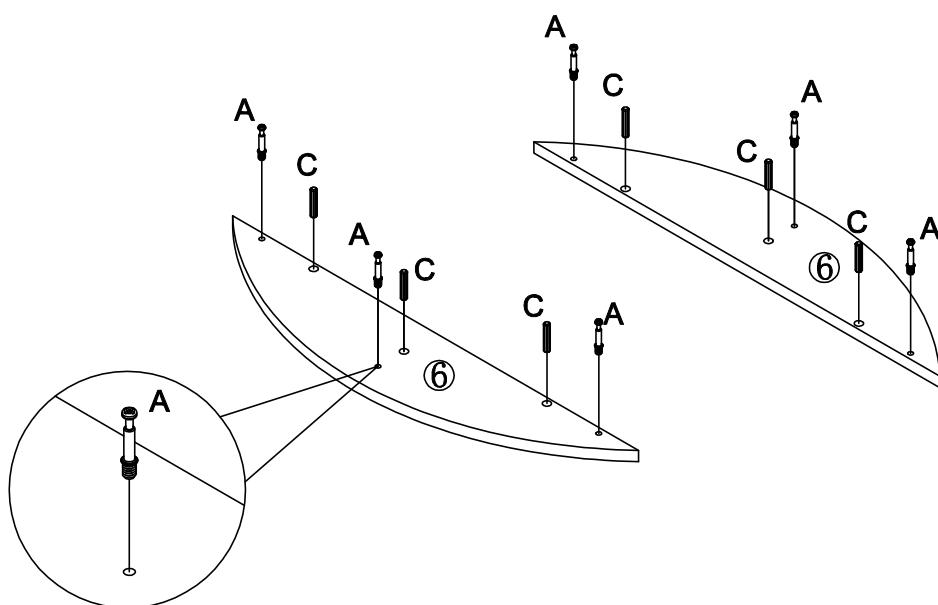



Step 5

I	×6	B	×6

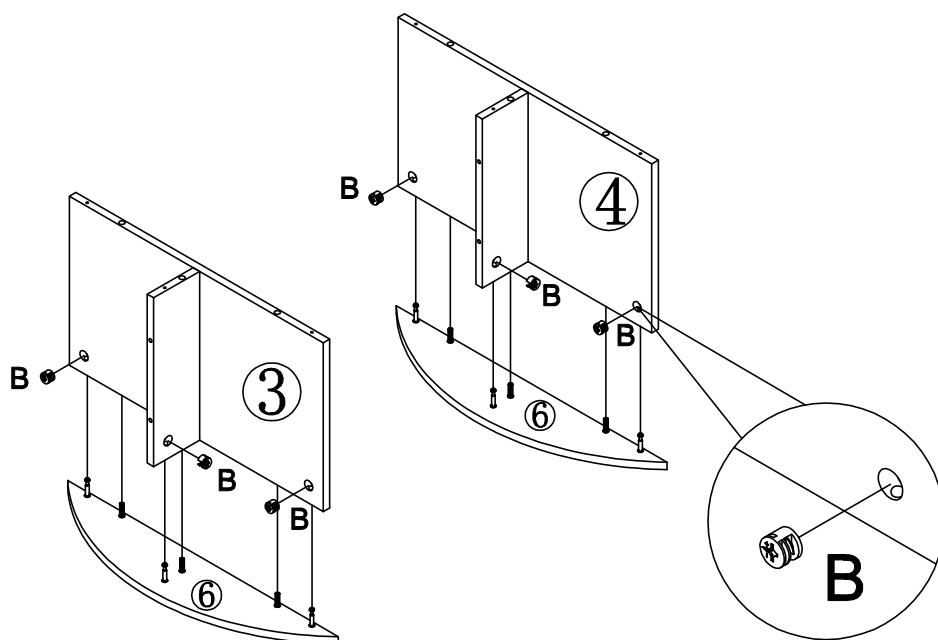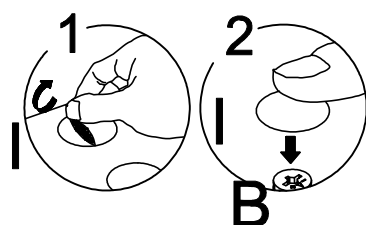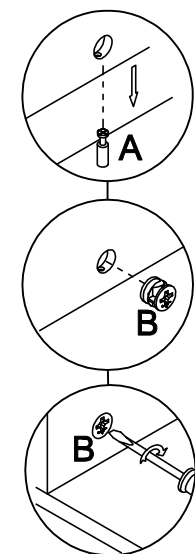




Step 6

C	×6	D	×6






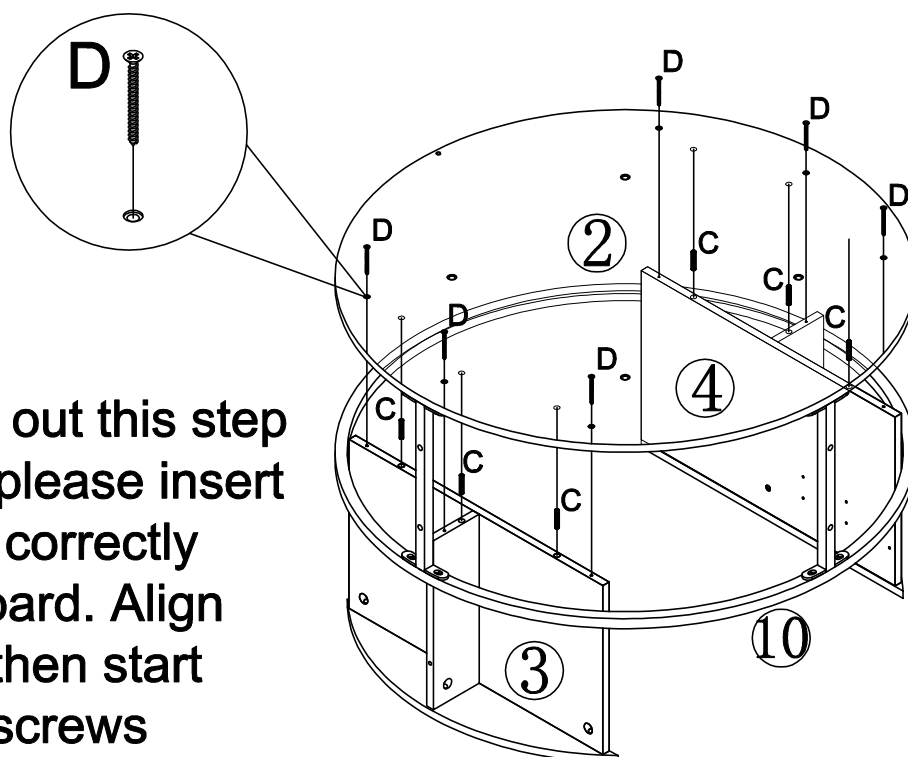


When carrying out this step of installation, please insert component 10 correctly onto the 3.4 board. Align the holes and then start tightening the screws

Step 7

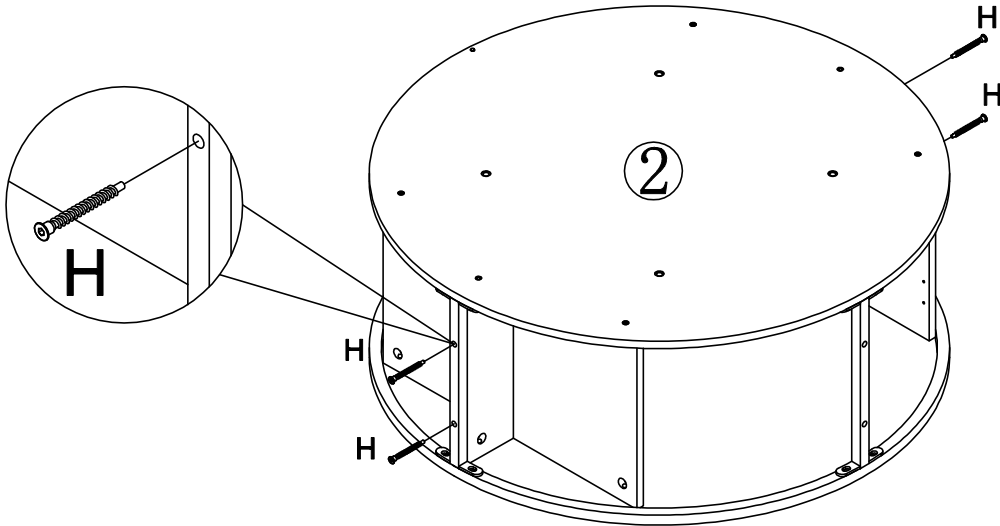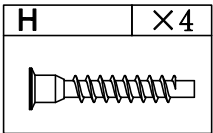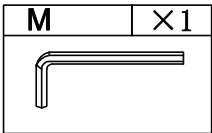


Step 8

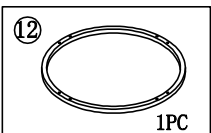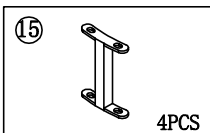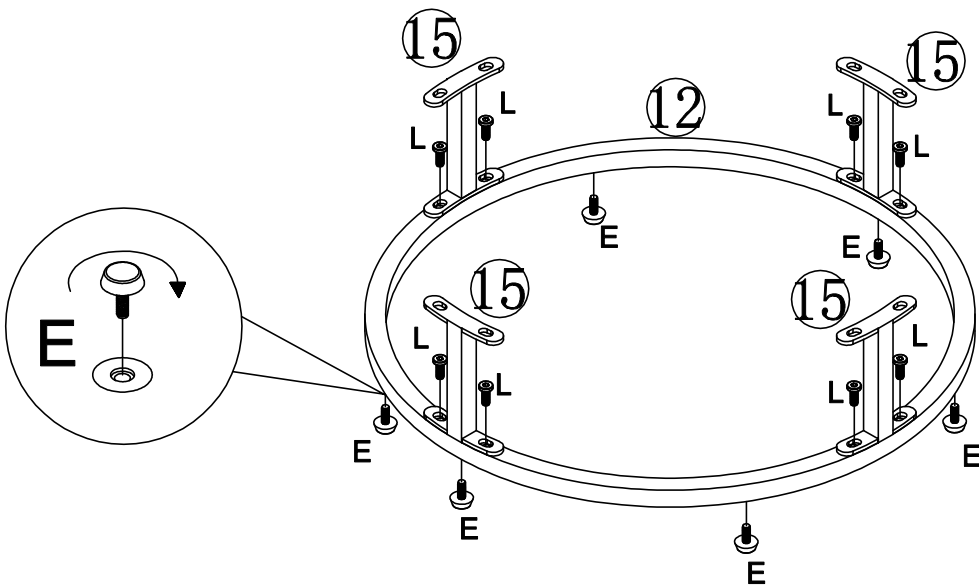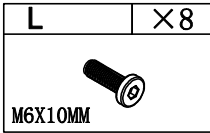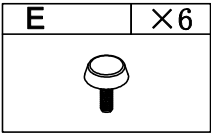
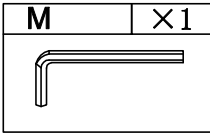


Step 9

M	×1	L	×8
			
		M6X10MM	

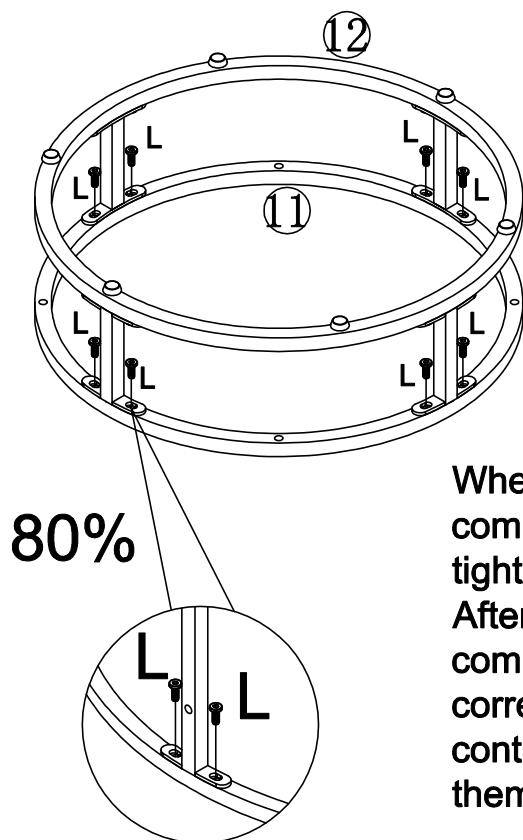


When installing components L, first tighten them to 80%. After confirming that all components have been correctly tightened, then continue to fully tighten them

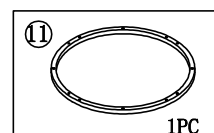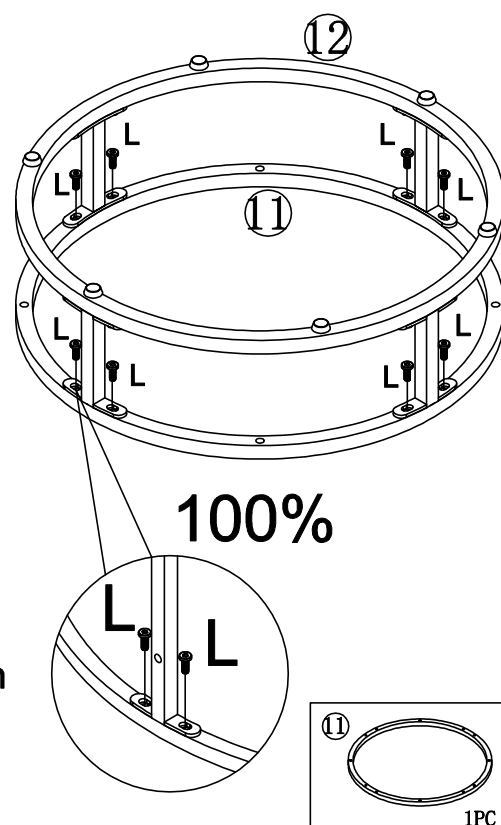



Step 10

M	×1	J	4
			
		M6X25MM	










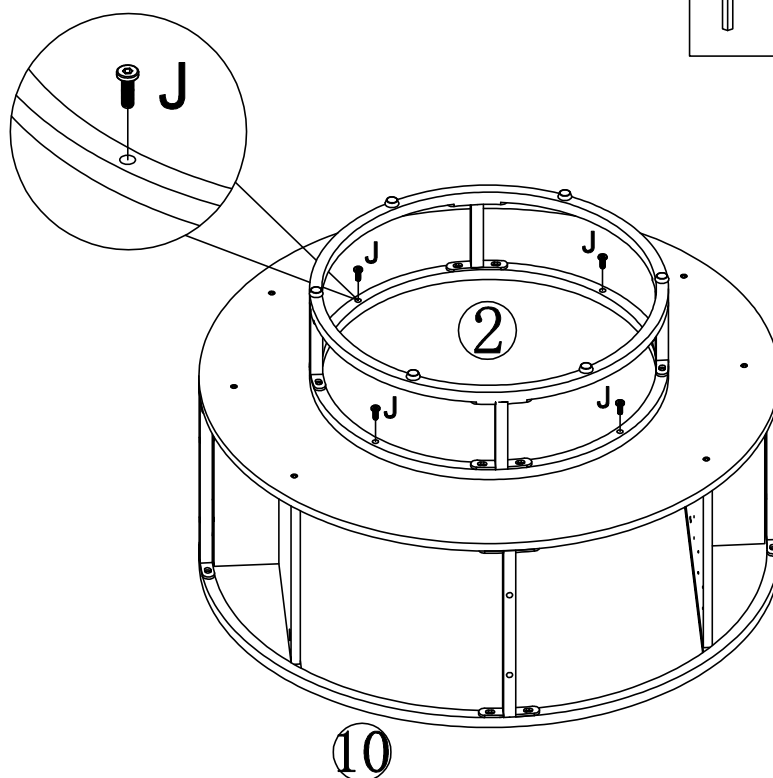


Step 11

Attach Board 9 neatly to the Velcro of iron 11 and 12(Attention: Please fully stretch part 4 and then stick it tightly along the Velcro to avoid gaps that affect the appearance. If there are obvious gaps, tear them off and stick them again.)

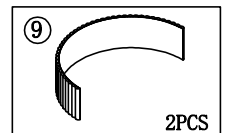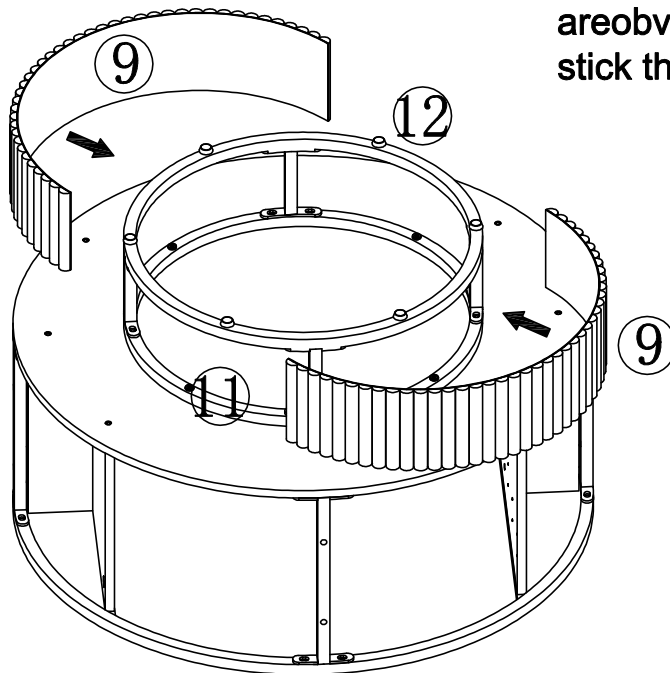

Step 12

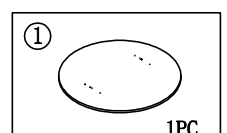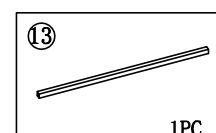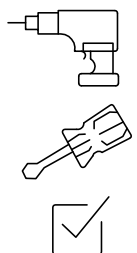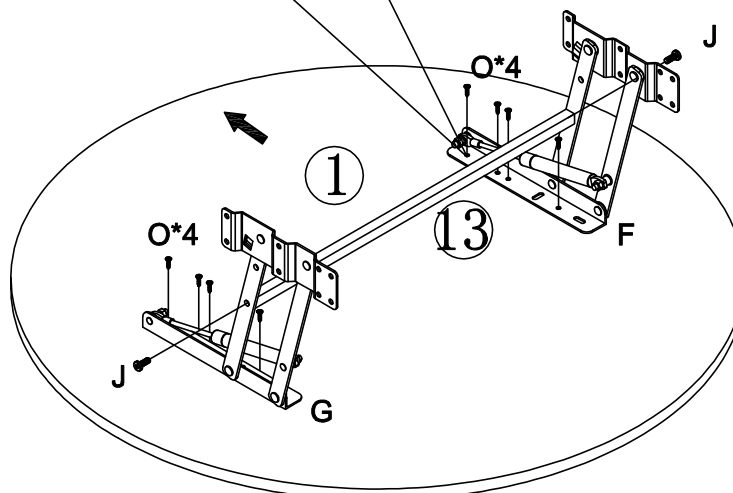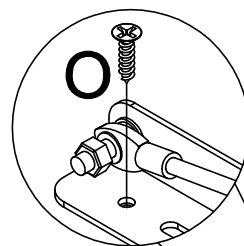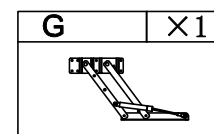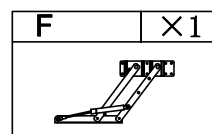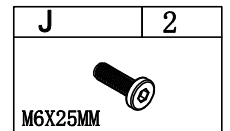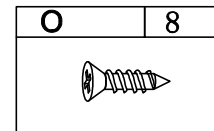
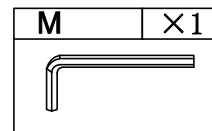


Step 13




If fittings F and G cannot fit into the cabinet when mounting, gently squeeze fittings F and G to fit into the cabinet

K	16
	

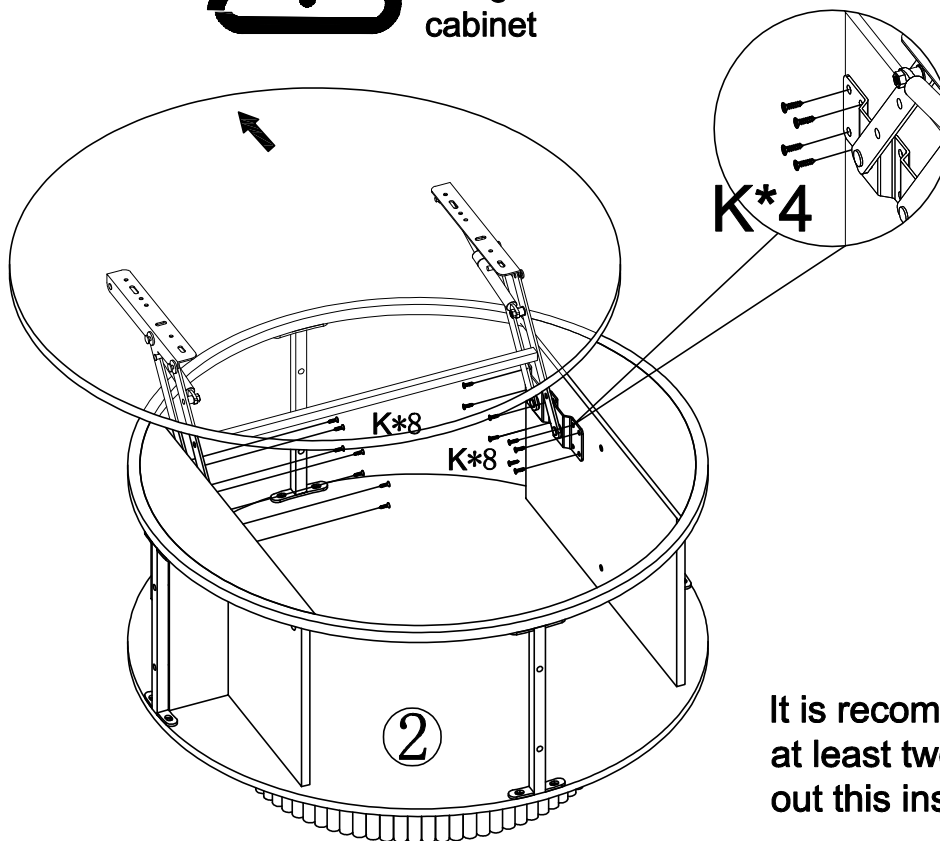

It is recommended that at least two people carry out this installation step.

Step 14

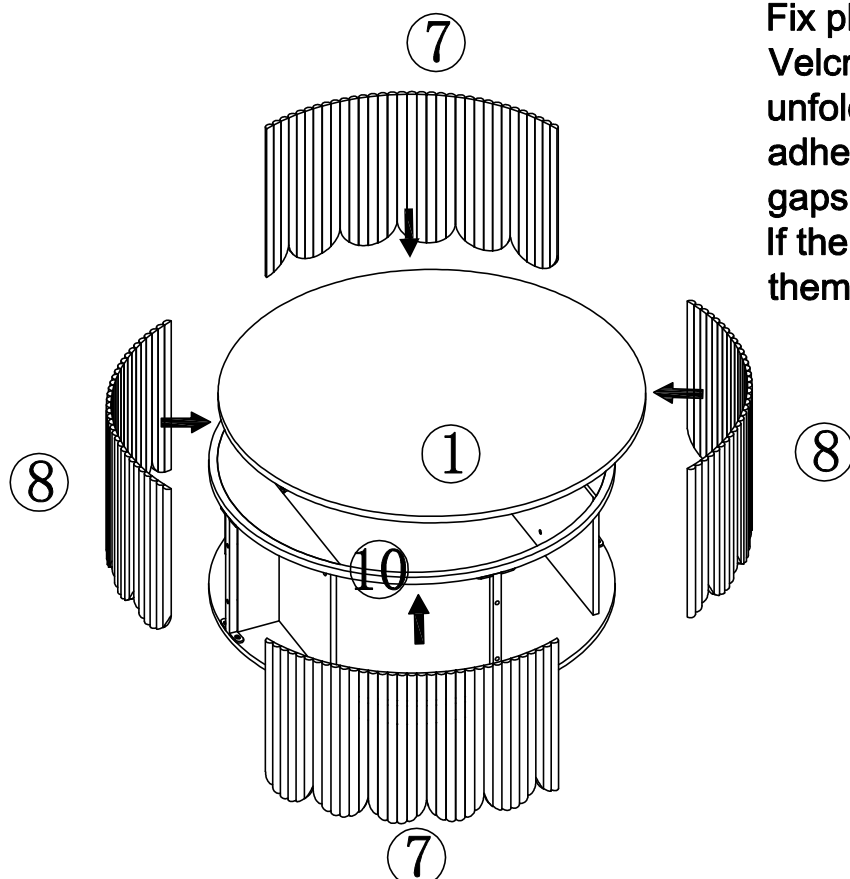

Fix plates 7 and 8 neatly onto the Velcro of iron 10 (note: Please fully unfold component 4 first, then closely adhere along the Velcro to avoid any gaps that may affect the appearance. If there are obvious gaps, remove them and reapply).

