

Installation Instructions




1. Take out the glass and 6mm small round tube and pass the double-pass column through the 6mm round tube and pass a single-pass column on two end of the round tube



2. From the underside of the glass, use a ten-head screwdriver to tighten the screws onto the column. Two layers of glass mounted two, three mounting three



3. Take out the stainless steel plate and two pairs of glass clips, clamp the nut with pliers, and tighten the small screws through the clip to the stainless steel plate. Note that the holes in the glass clip are in the same direction.

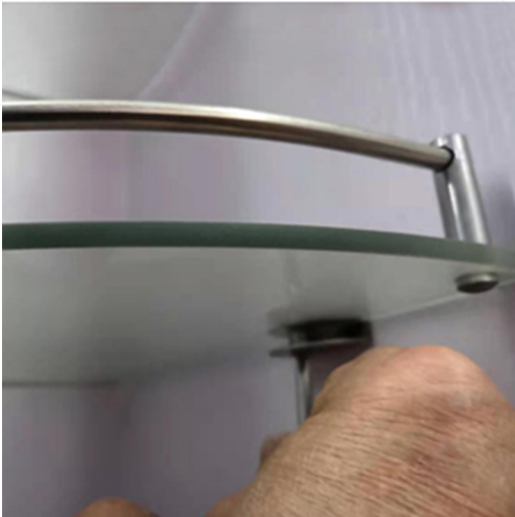

4. Pick up the stainless steel plate with the clips, select the position of the height on the wall, mark the position of the hole with a marker, pay attention to the height of the two sides, the glass clip hole facing down



5. Use a drill to make a 6mm hole at the marked position



6. Screw the expansion screw into the wall



7. Lock the stainless steel plate with the clips to the wall with screws, and making sure the small hole of the glass clip is facing down



8. Put the glass into the glass clip, put the top glass screw on the small pad, lock it from the bottom to the top and fix the glass tightly.



9. After installation, put on toiletries.