


PRE-ASSEMBLY VERIFICATION/Inspection de pré-assemblage

- 1.The position of the window can be adjusted as needed.
- 2.Check all Parts and sorting before Installation.





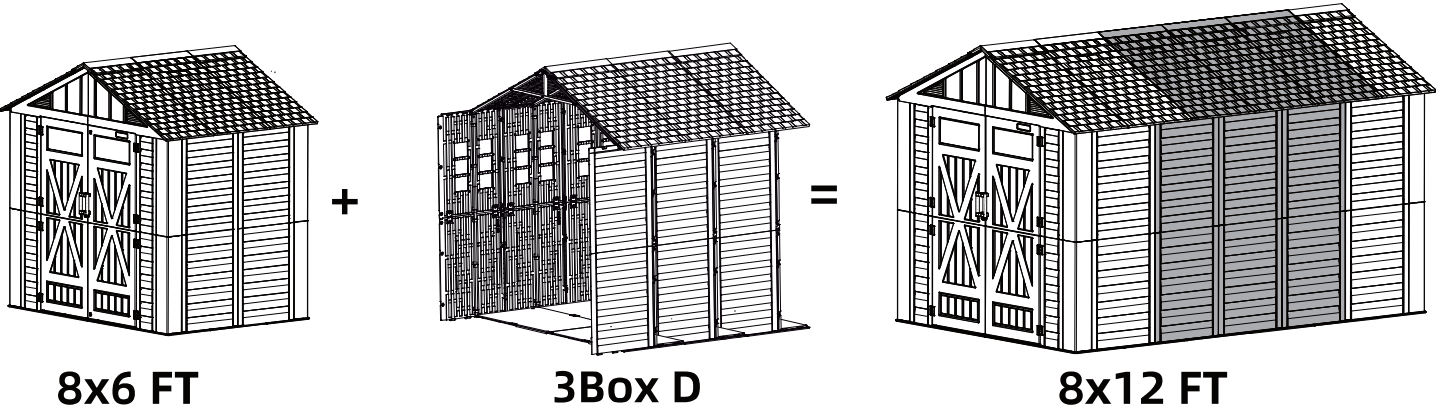


Please arrange the required accessories correctly according to the purchased size.

Floor assembly

8X6 FT CTNA+B+C	- A01 x 2 - A02 x 2 - A03 x 2 - H01 x 6 - H02 x 1 - H03 x 1	8X8 FT CTNA+B+C+D	- A01 x 2 - A02 x 2 - A03 x 4 - H01 x 9 - H02 x 1 - H03 x 1
8X10 FT CTNA+B+C+D(x2)	- A01 x 2 - A02 x 2 - A03 x 6 - H01 x 12 - H02 x 1 - H03 x 1	8X12 FT CTNA+B+C+D(x3)	- A01 x 2 - A02 x 2 - A03 x 8 - H01 x 15 - H02 x 1 - H03 x 1

01 Floor Assembly

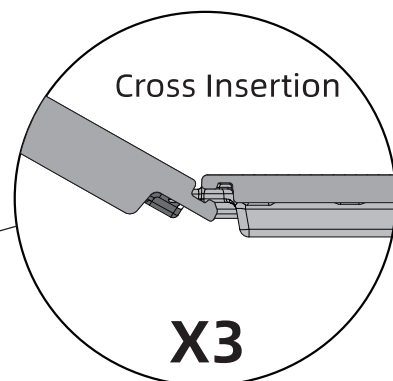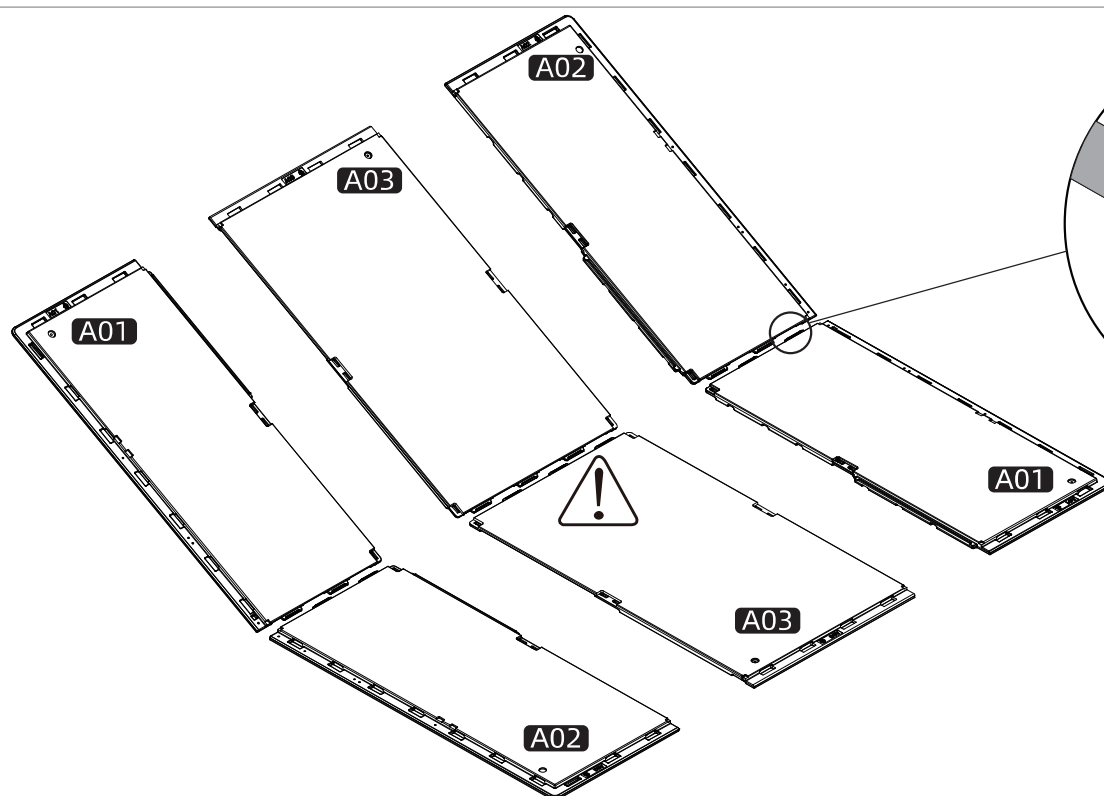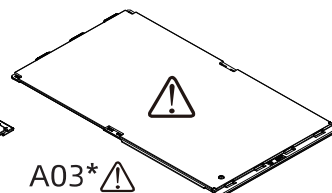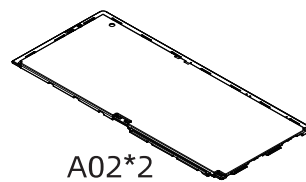
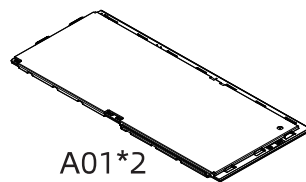


⚠ Warning: Please install the corresponding quantity of A03 parts based on the size you purchased.

- 8x6FT-A03*2
- 8x8FT-A03*4
- 8x10FT-A03*6
- 8x12FT-A03*8

13


02 Floor Assembly

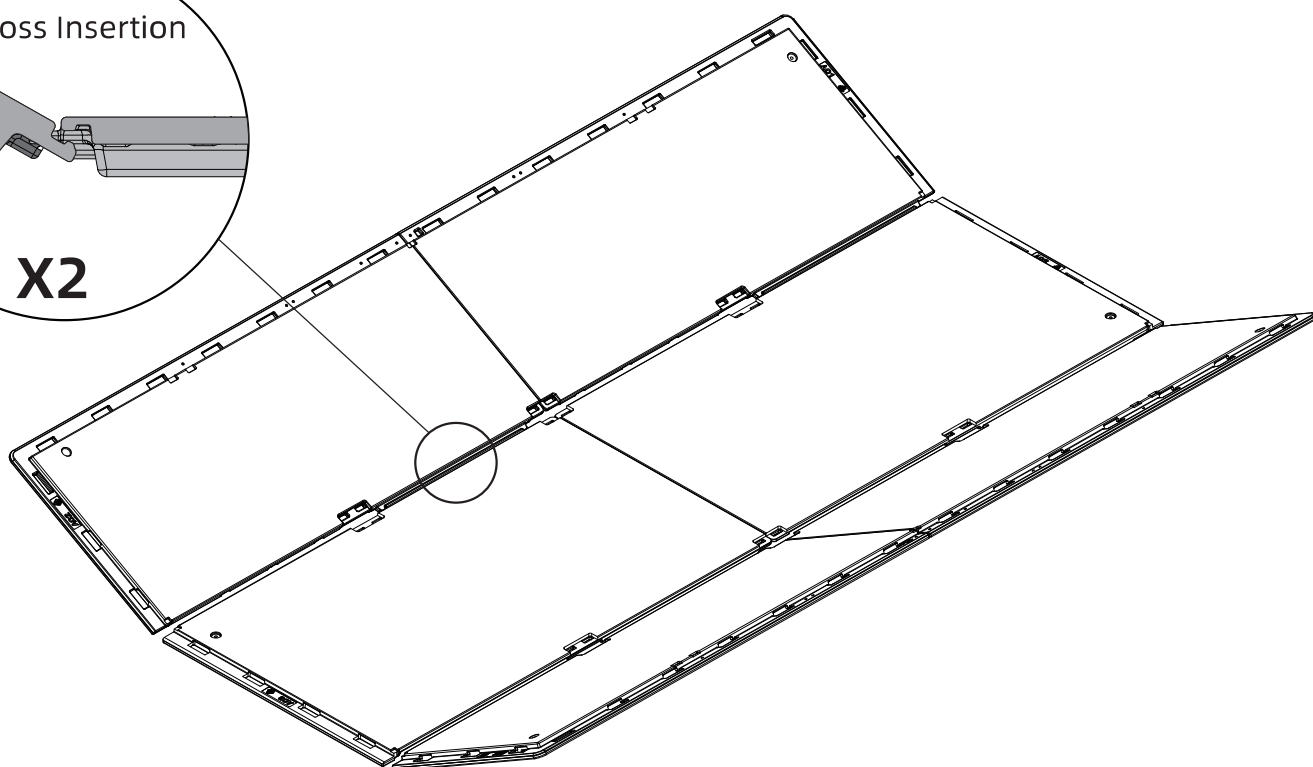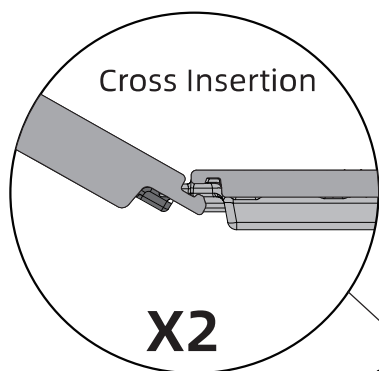

14


03

Secure the Floor Assembly




Quantities per size, separated by /

H01*6/9/12/15

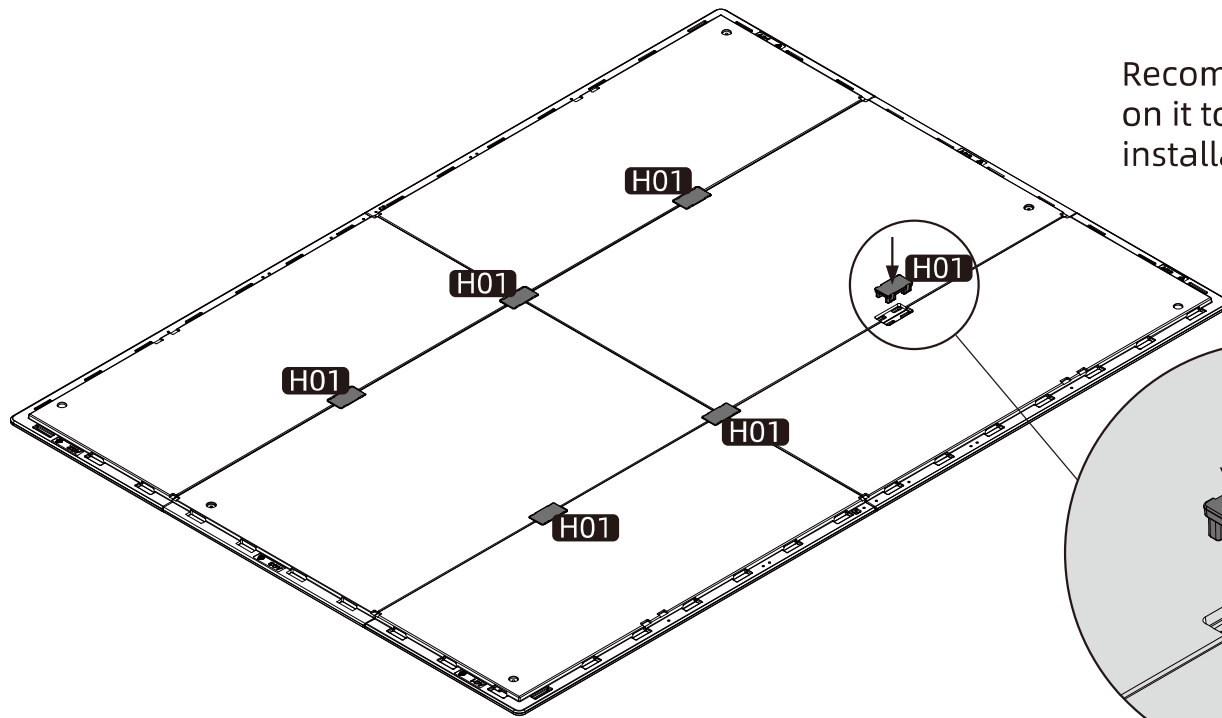





Recommended to step on it to assist with installation.

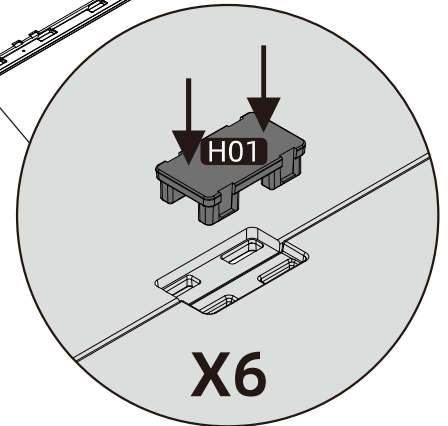



15

04

Install the Door Stop Strip

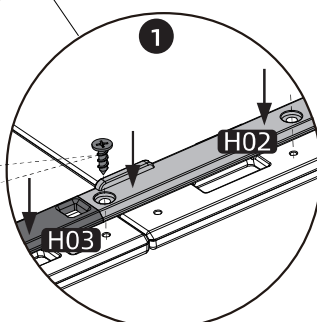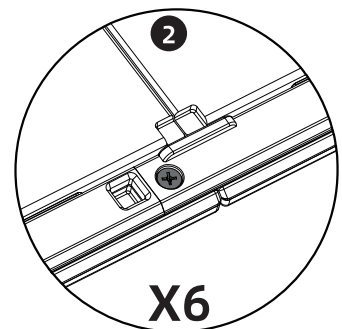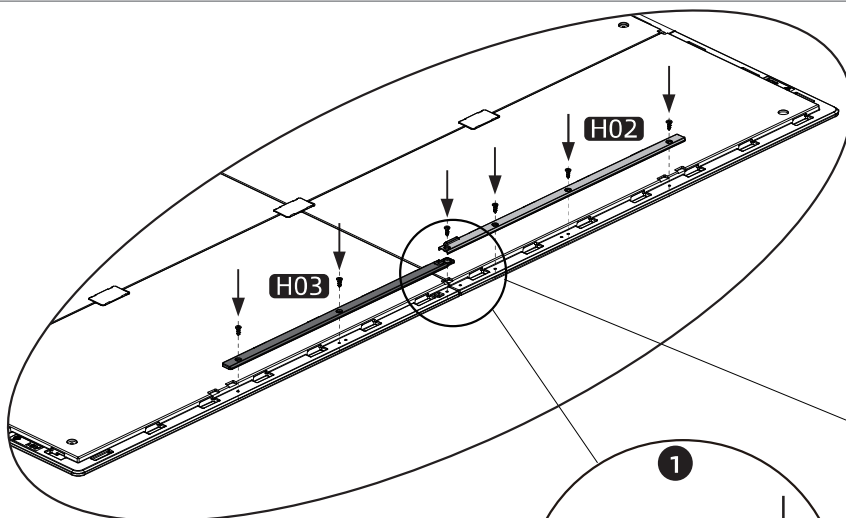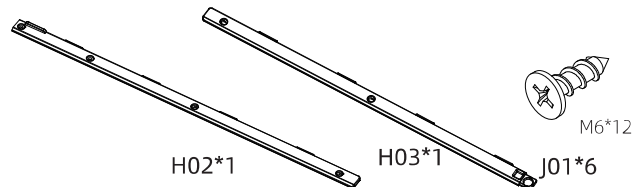

Angled Insertion

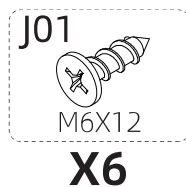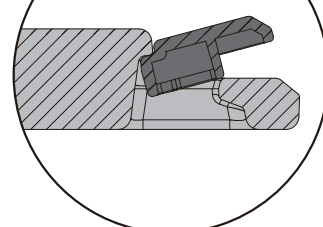


16

The position of the window can be adjusted as needed.

Please arrange the required accessories correctly according to the purchased size.

Wall assembly


8X6 FT

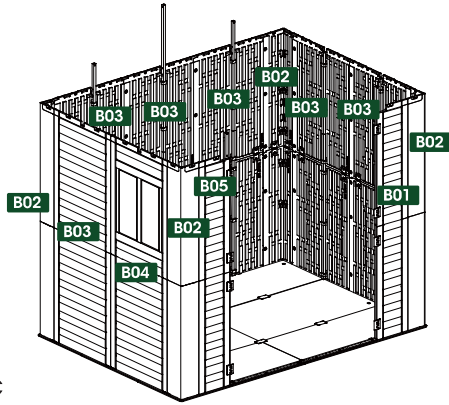

B01 X 1
B02 X 4
B03 X 6
B04 X 1
B05 X 1

CTNA+B+C


8X8 FT

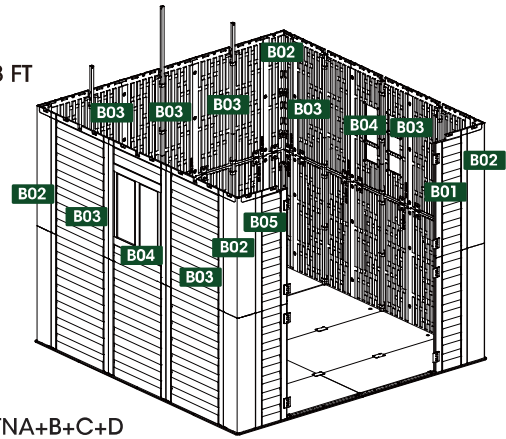

B01 X 1
B02 X 4
B03 X 7
B04 X 2
B05 X 1

CTNA+B+C+D


8X10 FT

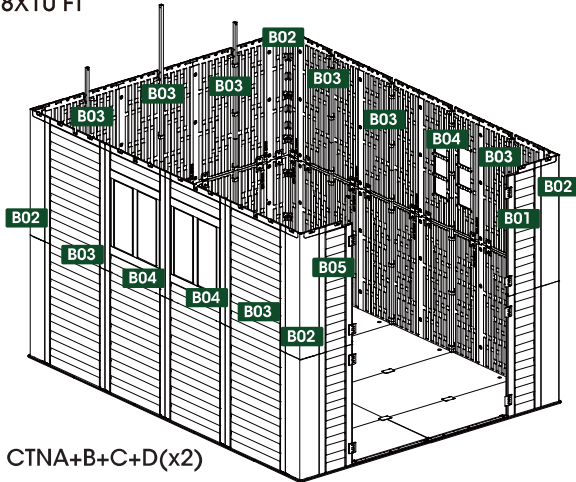

B01 X 1
B02 X 4
B03 X 8
B04 X 3
B05 X 1

CTNA+B+C+D(x2)

8X12 FT

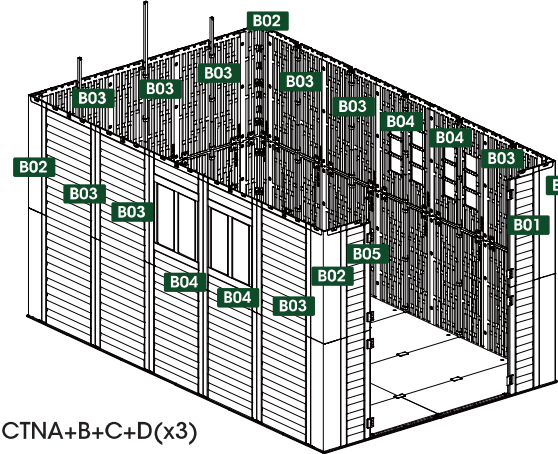


B01 X 1
B02 X 4
B03 X 9
B04 X 4
B05 X 1

CTNA+B+C+D(x3)


17

05

Pre-assemble
Panel B01

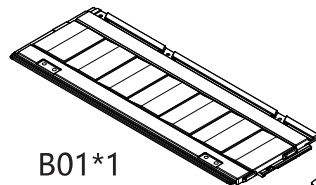


B01*1

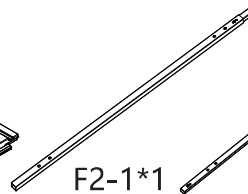

F2-1*1


F2-2*1



H08*4





J03*8


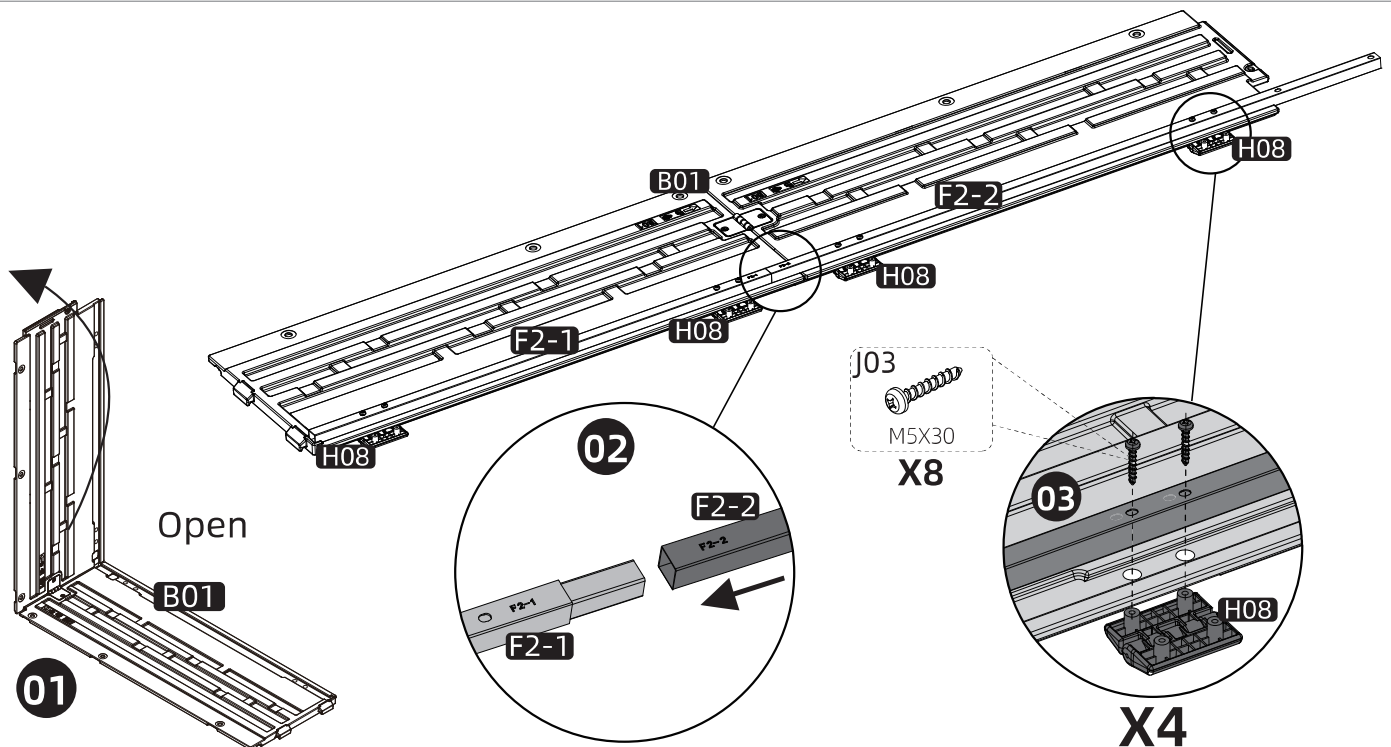


18

06 Pre-assemble Panel B05

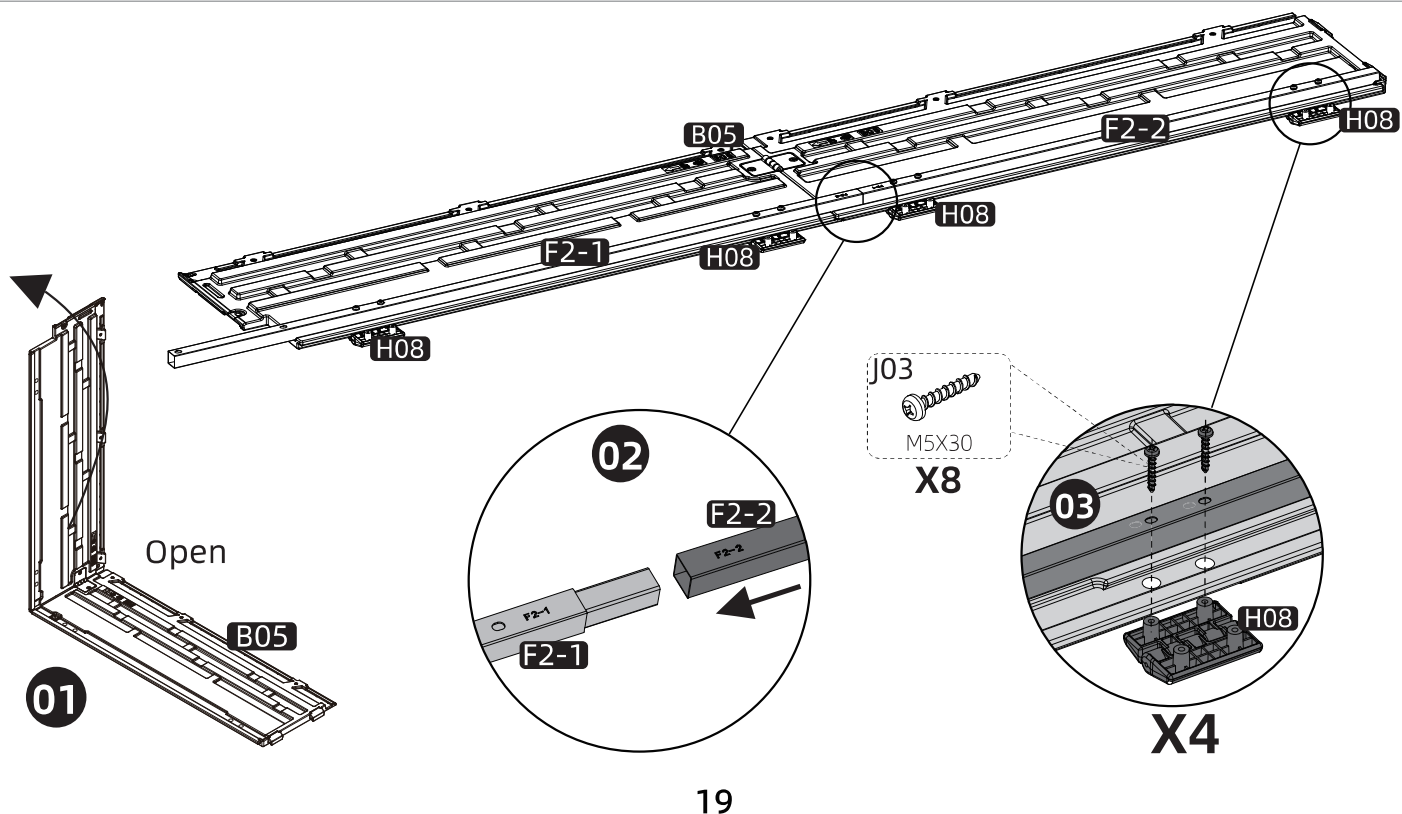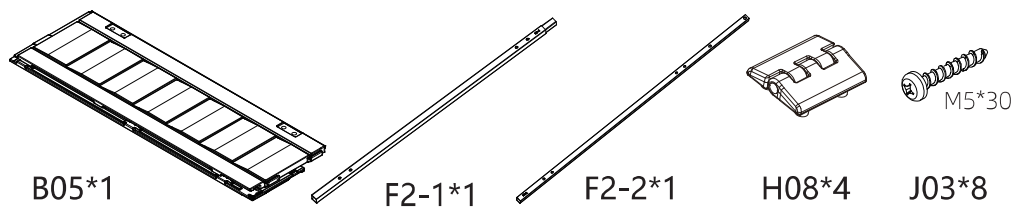


07 Pre-assemble Panel B02 x4

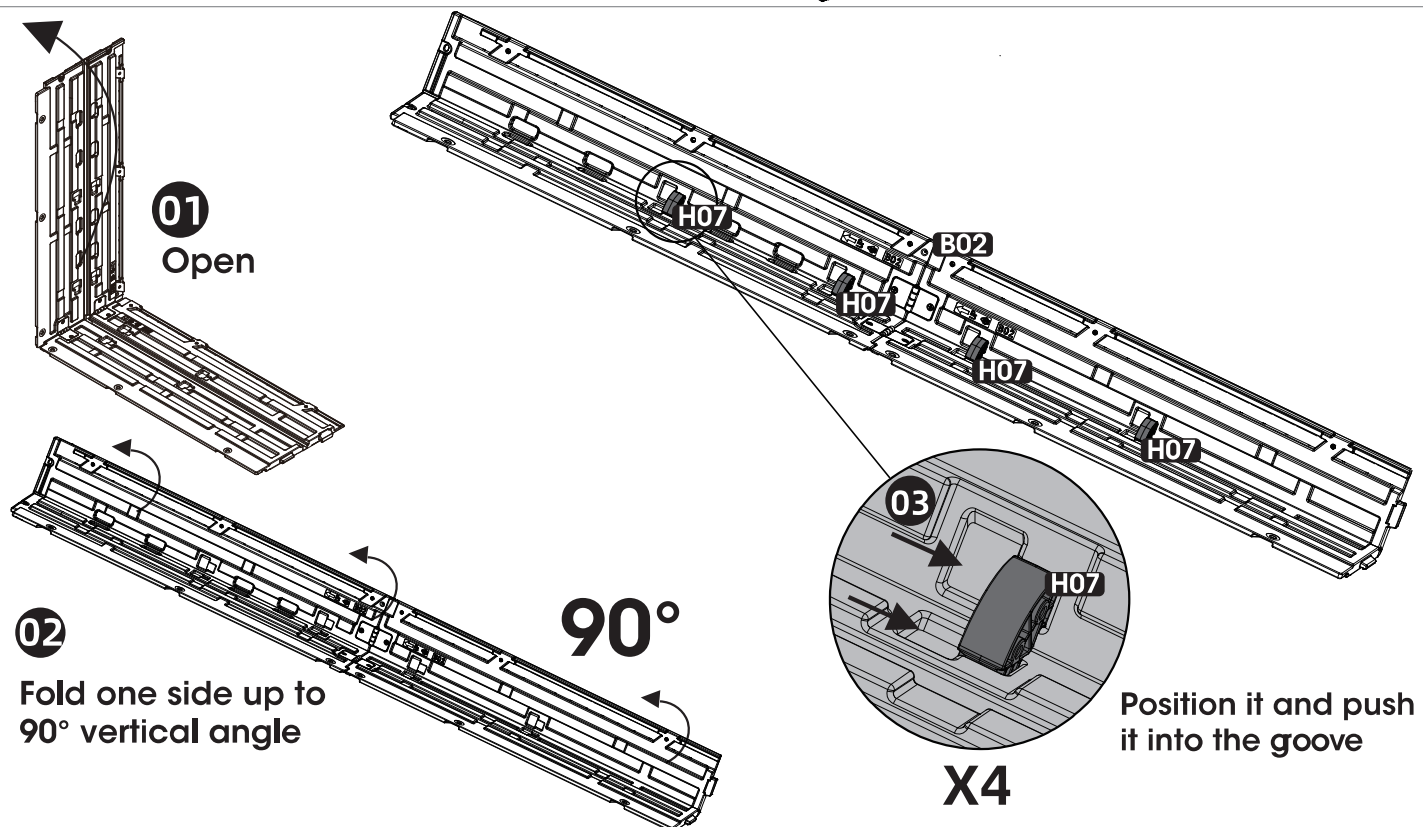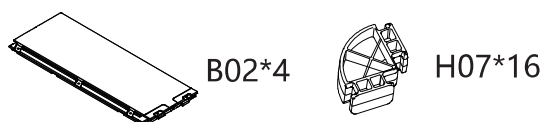




08 Pre-assemble Side Panel B03/B04 X4/6/8/10

F1-1*4/6/8/10
F1-2*4/6/8/10
H04*24/36/48/60

8x6FT-B03*3 B04*1
8x8FT-B03*4 B04*2
8x10FT-B03*5 B04*3
8x12FT-B03*6 B04*4

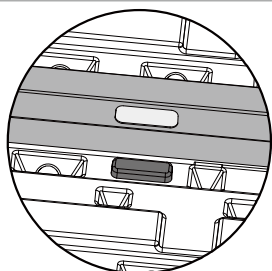

Note: Check the corresponding notch.

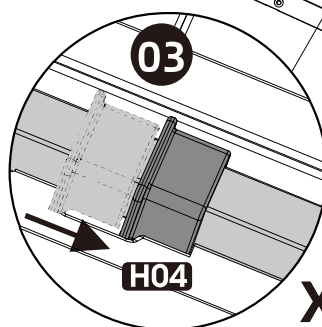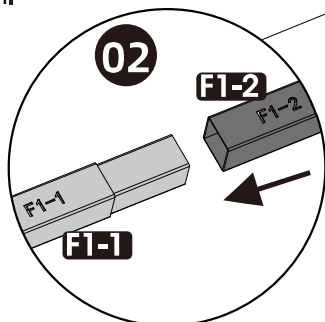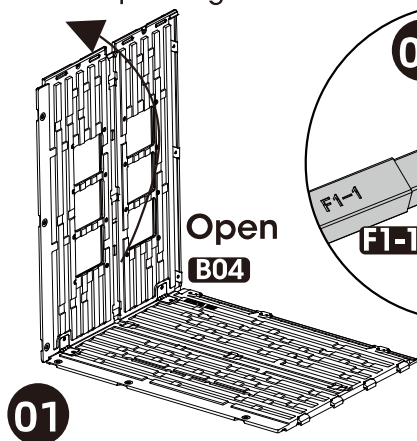


X6


⚠ Warning: Please install the corresponding quantity of B03 B04 parts based on the size you purchased.

21


09 Pre-assemble Side Rear Panel B03 x2

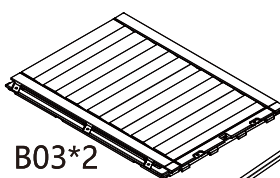


B03*2

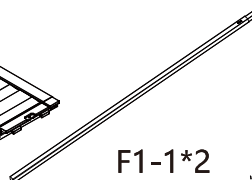


F1-1*2

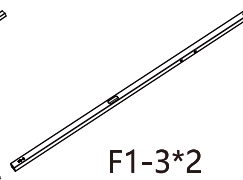




F1-3*2



H04*12

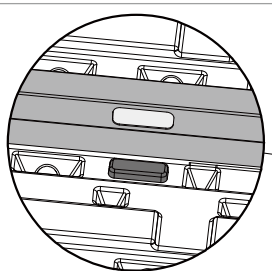



Note: Check the corresponding notch.

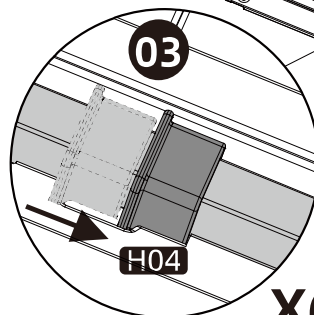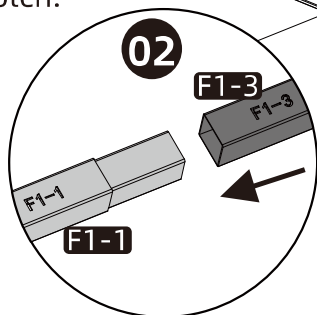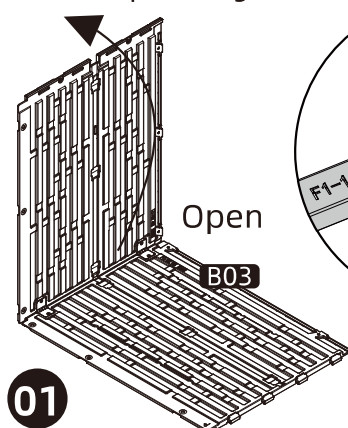

X6



22

10 Pre-assemble Middle Rear Panel B03

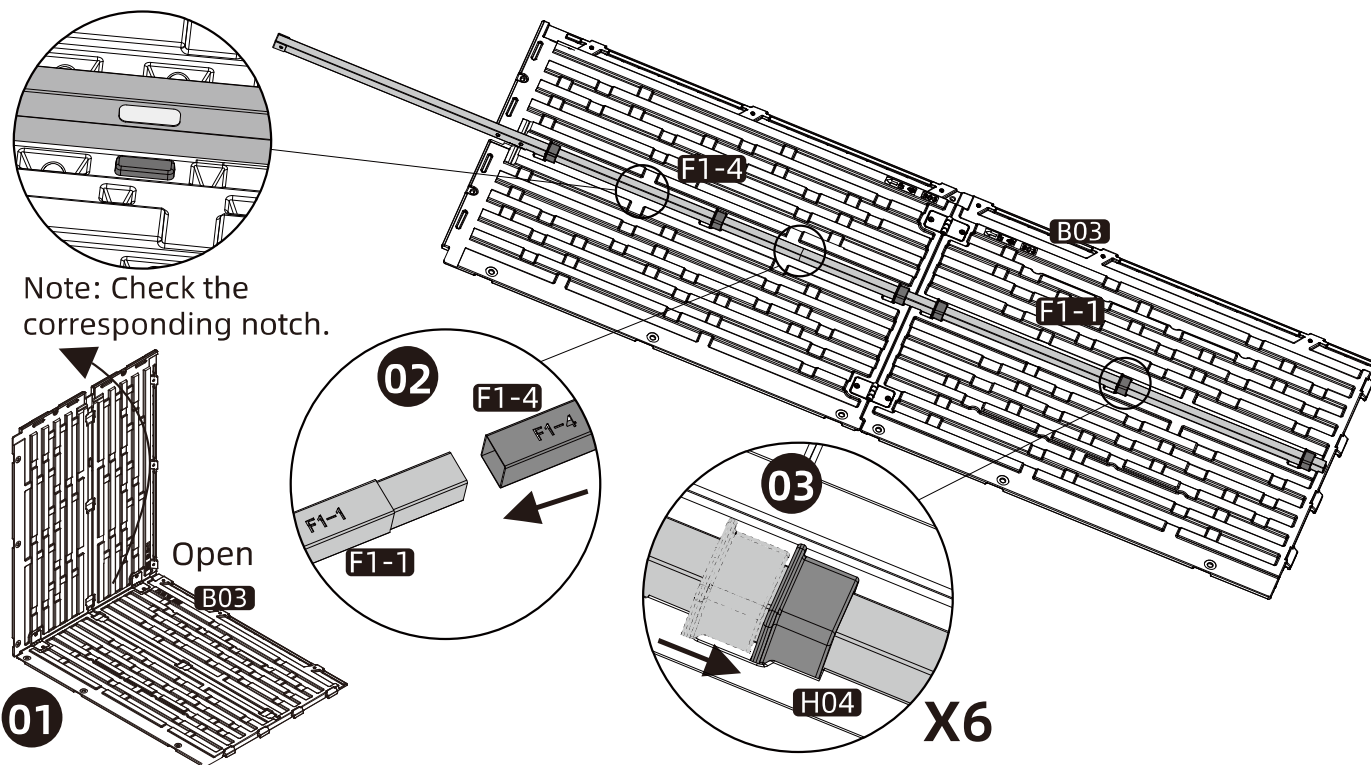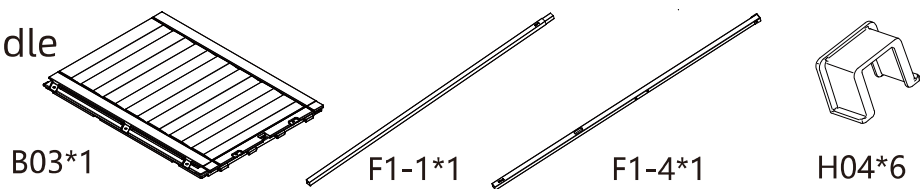

23

11 Pre-assemble Panels DL-DR

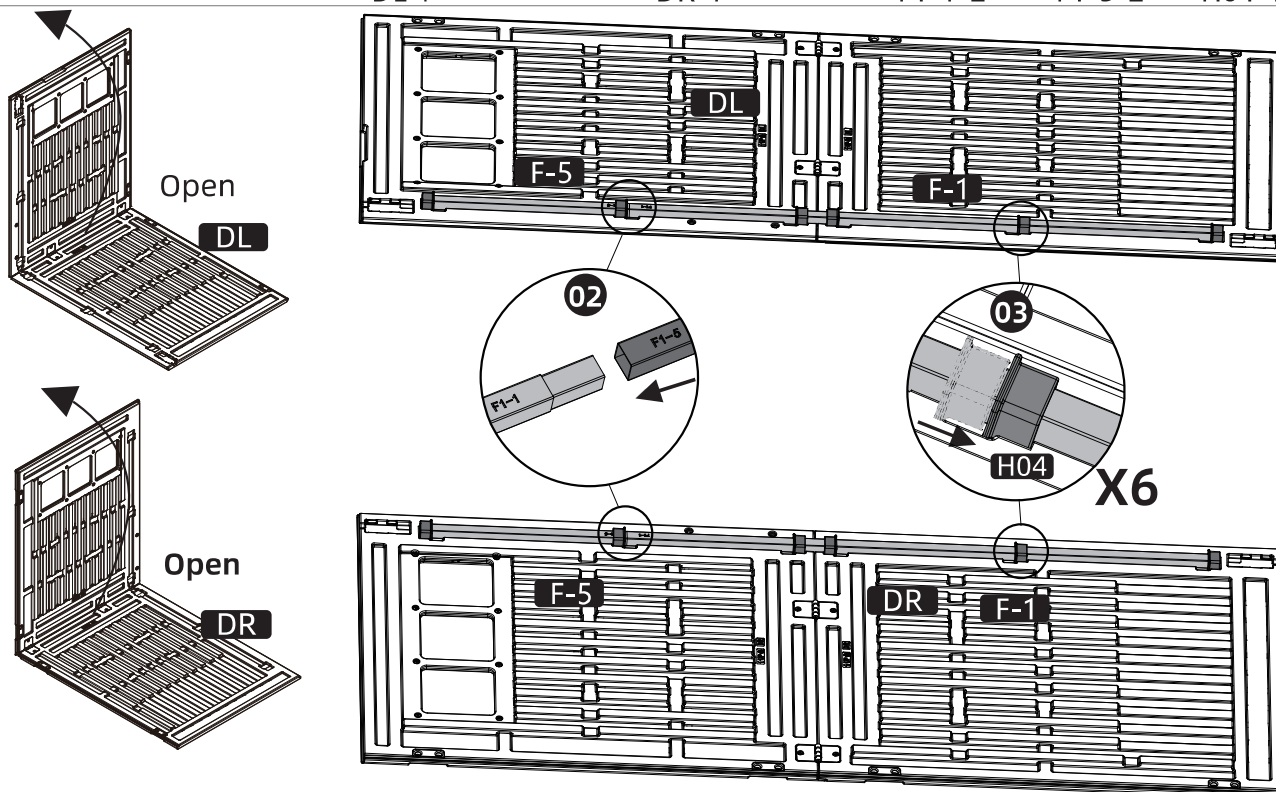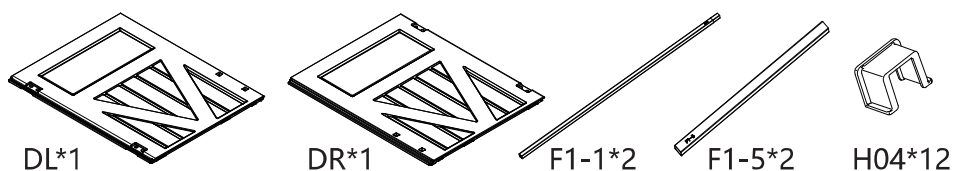

24