


Assembly Instructions

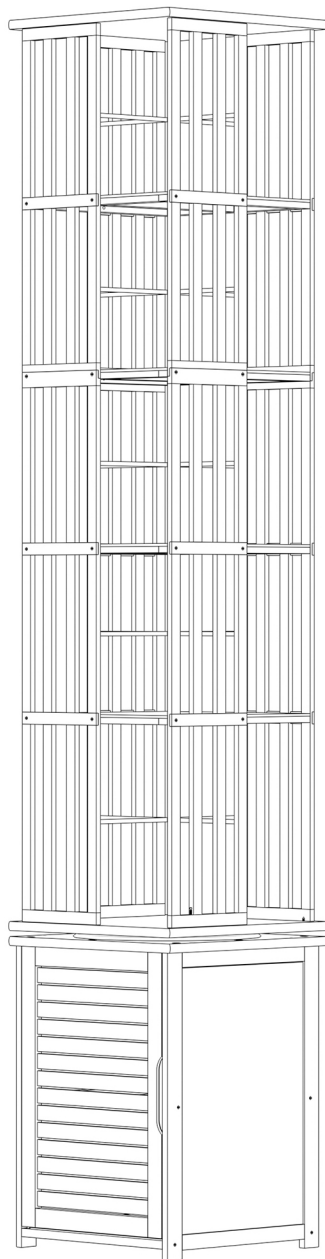

**DESIGN
TRANSFORMS
LIFE**

Meridian 360° Rotating Bookshelf Bamboo

Natural 6 Tiers Pro


Before You Begin

- ✓ Check that all parts and hardware are included before discarding any packaging.
- ✓ Assemble on a soft surface (e.g., rug or carpet) to protect the rotating bookshelf and your floor.
- ✓ The sample shown in the manual is in natural color, but all steps and details apply to other colors as well.




WARNING: The product should be assembled by an adult as hazardous sharp points on screws.


Hardware & Parts Checklist

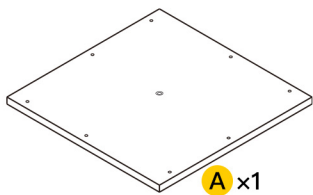


Top Panel

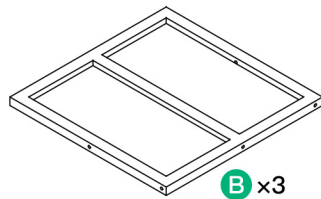


Shelf Panels

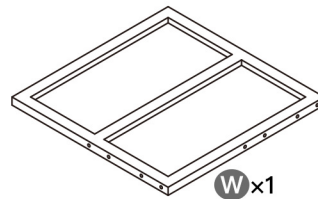


Middle Panel

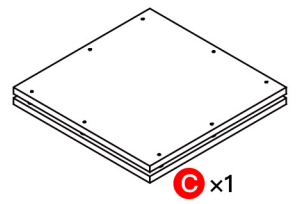

Rotating Base

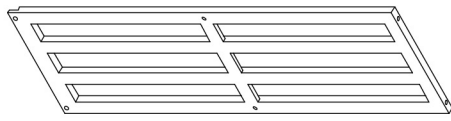


Upper Side Panels

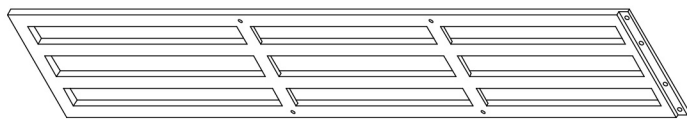


Lower Side Panels




Shelf Divider Rods

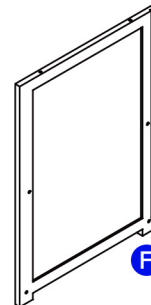


Left Side Panel (Cabinet)

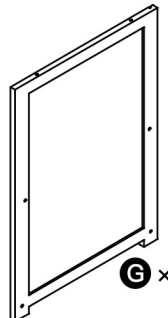

Right Side Panel (Cabinet)

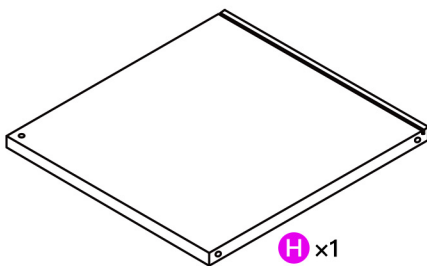


Grooved Bottom Panel (Cabinet)

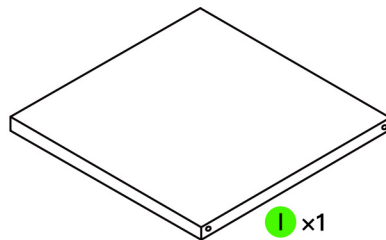

Shelf Panel (Cabinet)



Back Panel (Cabinet)

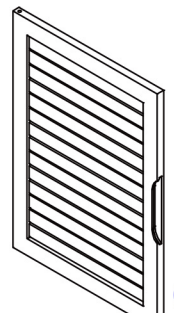

Door Panel (Cabinet)



L x2



M x1



N x1



O x4



P x42
(+2 Extra)



Q x30
(+2 Extra)




R x1




Y x1

How to identify the correct orientation of the B&W panels

Note: Identify the panels by the number of pre-drilled holes along the side edge. The W Panel has more holes, while the B Panel has fewer.

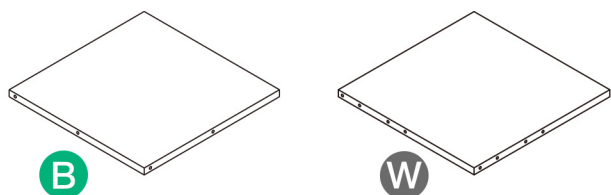

Front

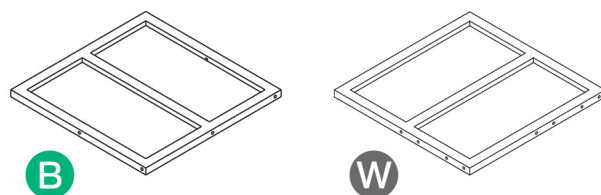


Back

How to Identify the Inner and Outer Faces of D1 & D2 Panels


Upper Side Panels D1x4

Top Edge
without Groove

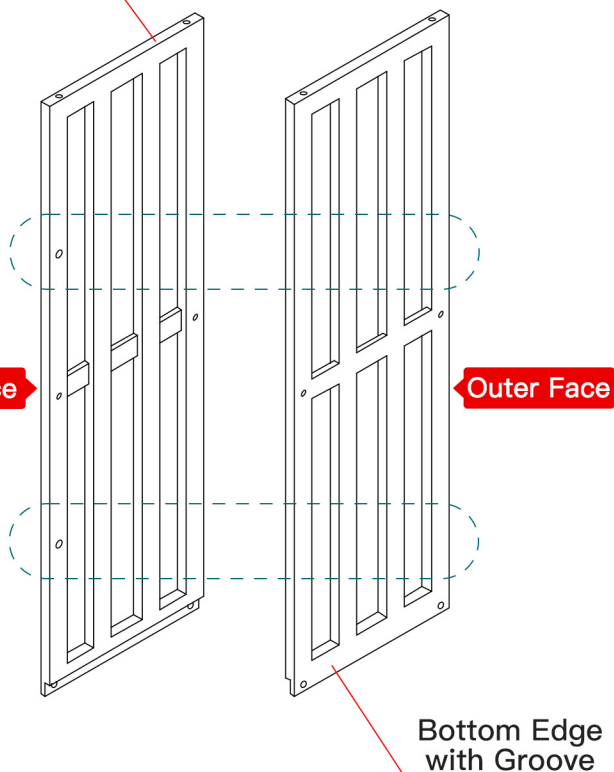

Lower Side Panels D2x4


Top Edge
with Groove

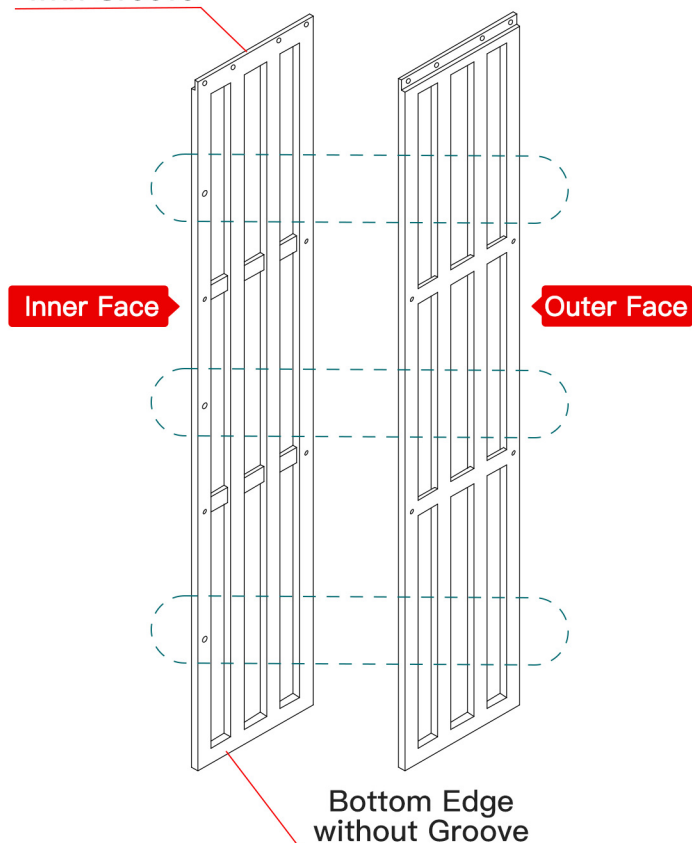


	Inner Face	Outer Face
Identification	The side with the additional holes marked by the dashed line	The side where the dashed-line area has no additional holes
During Assembly	Face inward toward the shelf interior	Face outward toward the exterior

Tip: Hold the panel with the dashed line facing you. If you see extra holes inside the dashed area, that side is the Inner Face. If you see no extra holes, that side is the Outer Face.

How to use Screwdriver Y and its accessories

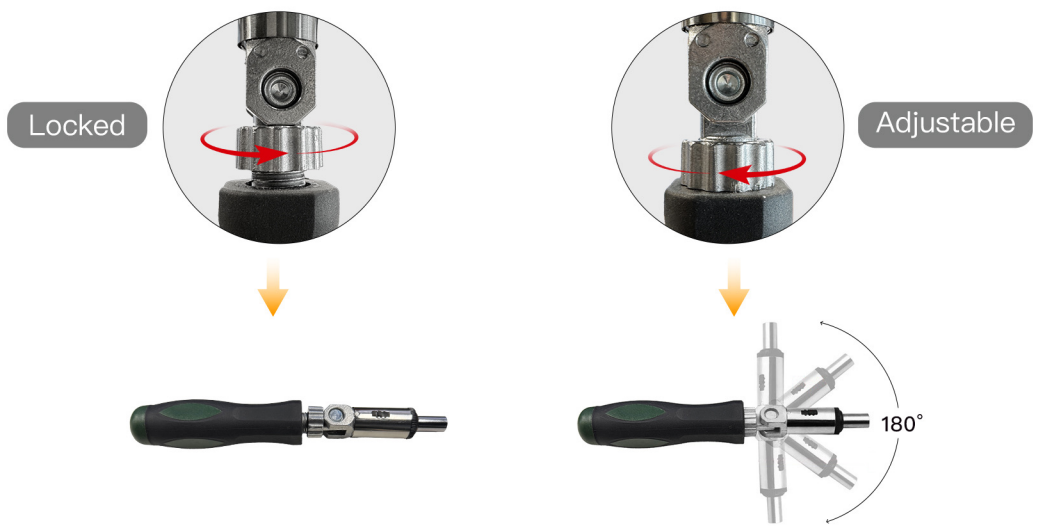



The hole is a magnetic socket. Insert the Phillips bit into the socket.

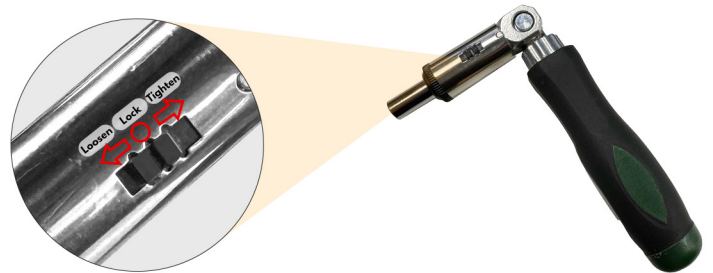

Assembly Steps


Step 1

Secure one B Panel to D1 using P Screws and Screwdriver Y. Make sure the side of D1 with holes for Shelf Divider Rods (E) faces inward. If needed, see the previous section for how to identify the inner and outer faces.

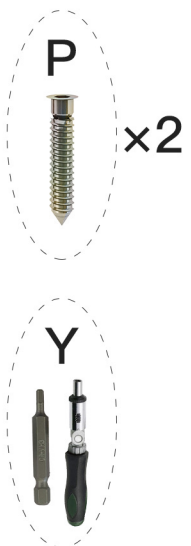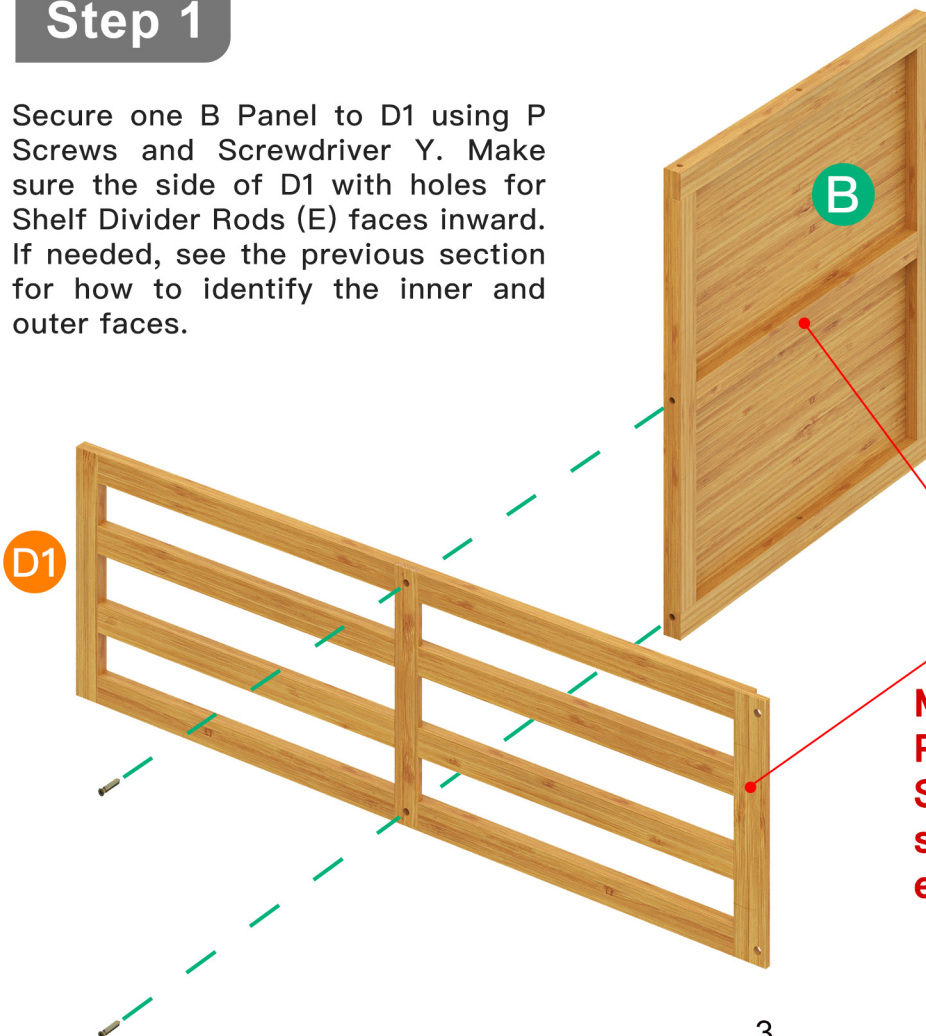


Make sure the side of B Panel with the Horizontal Support Rails (the back side) faces the grooved end of D1, as shown.

Step 2


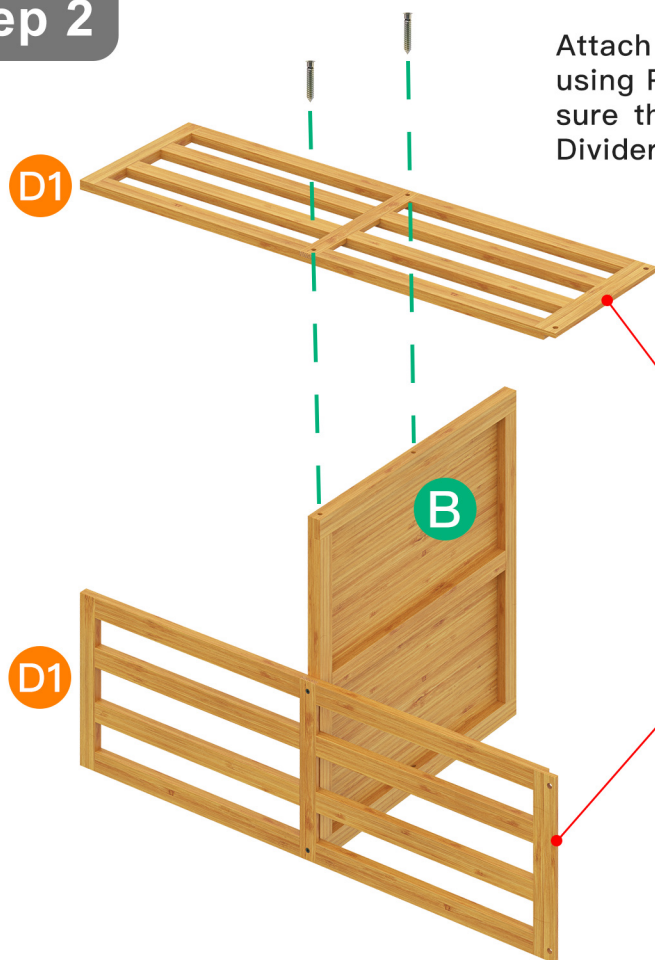


Attach the second D1 Panel to B Panel using P Screws and Screwdriver Y. Make sure the side of D1 with holes for Shelf Divider Rods (E) faces inward.

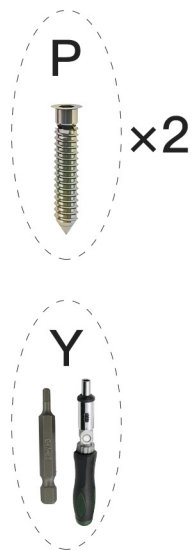



Make sure both D1 grooves face inward.

Step 3

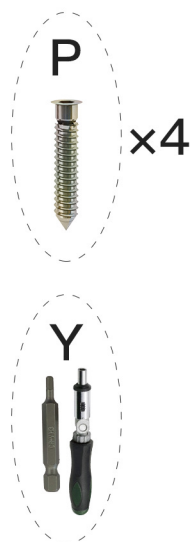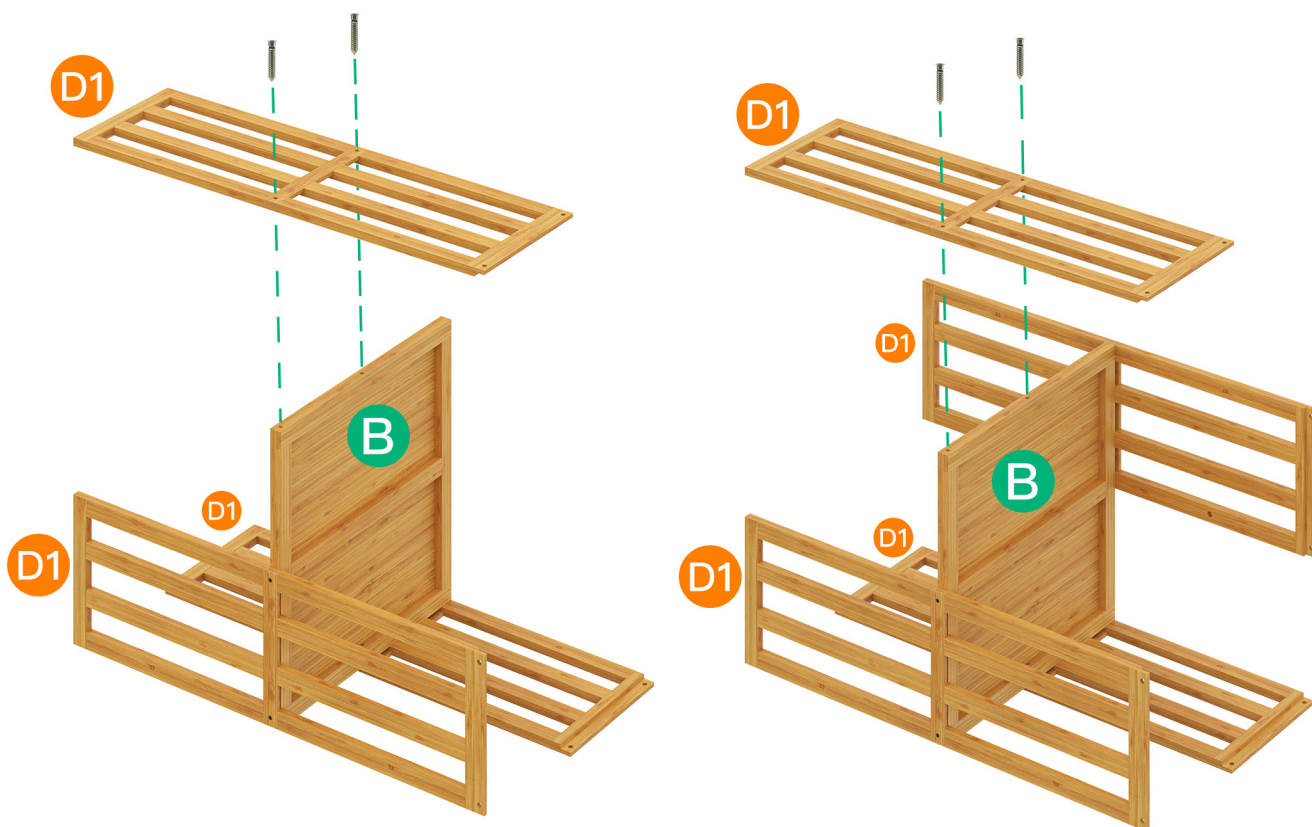



Attach the third and fourth D1 Panels to B Panel using P Screws and Screwdriver Y. Make sure the sides of D1 with holes for Shelf Divider Rods (E) face inward, and the grooved ends face the same direction, as shown.

Step 4

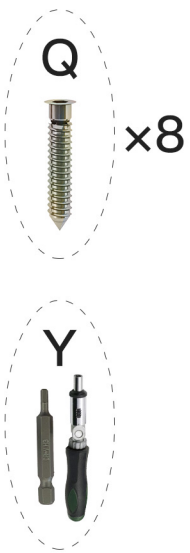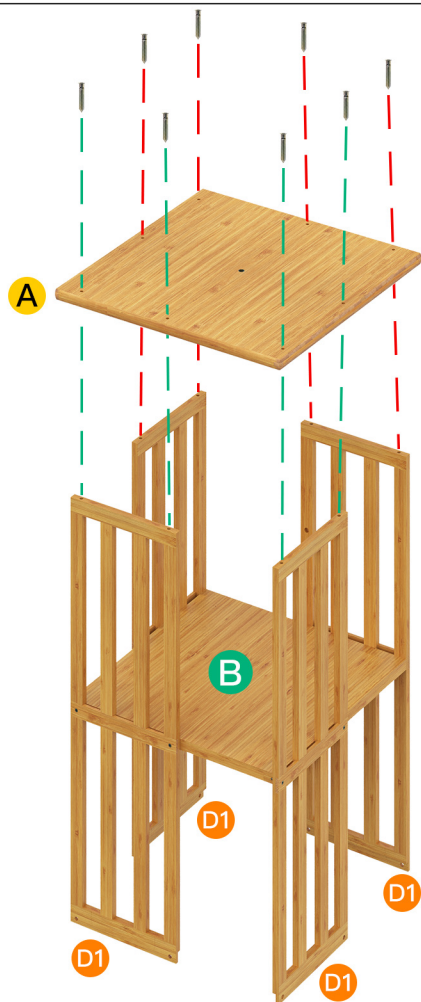

Secure the A Panel to the non-grooved ends of the D1 Panels using 8 Q Screws and Screwdriver Y. If the holes do not align, turn the A Panel over and try the other side.


Step 5

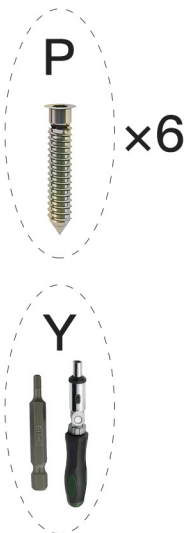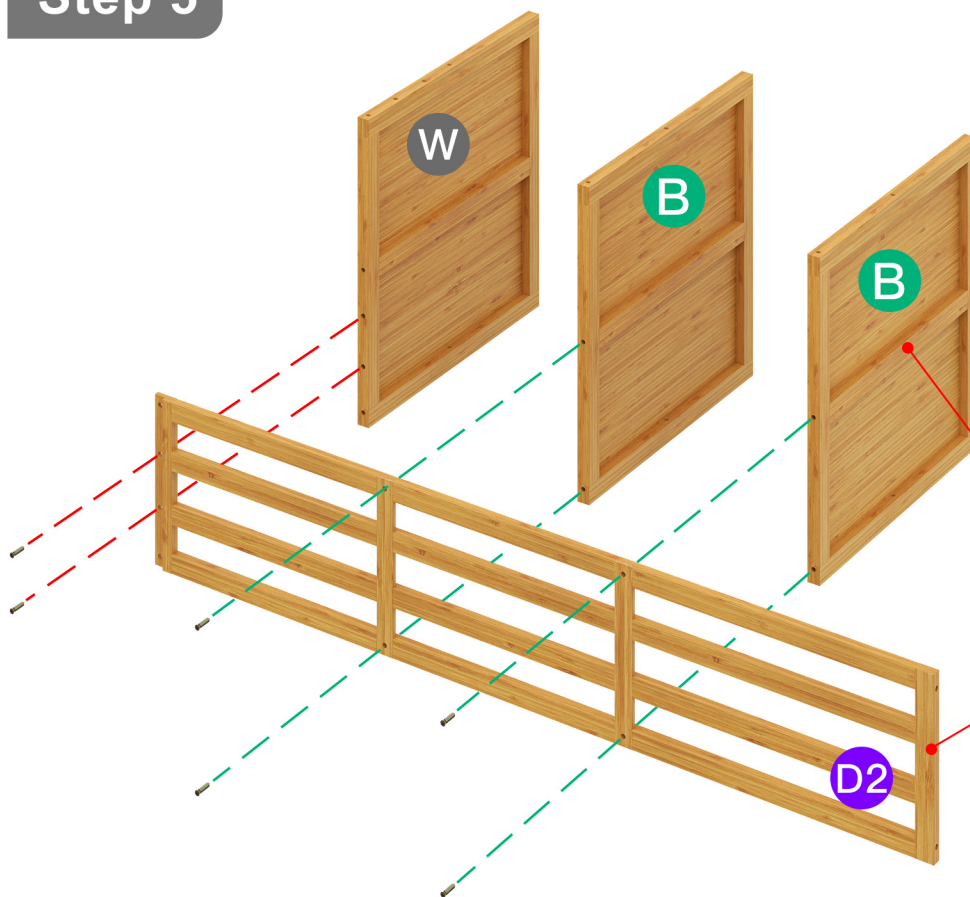

Make sure the back of B & W Panels with the Horizontal Support Rails faces the non-grooved end of D2, as shown.

Position D2 with the grooved end facing up and the side with holes for Shelf Divider Rods (E) facing inward. Install W Panel and two B Panels as shown. Secure W Panel to D2 using only the two center holes in the groove, with P Screws and Screwdriver Y.


Step 6

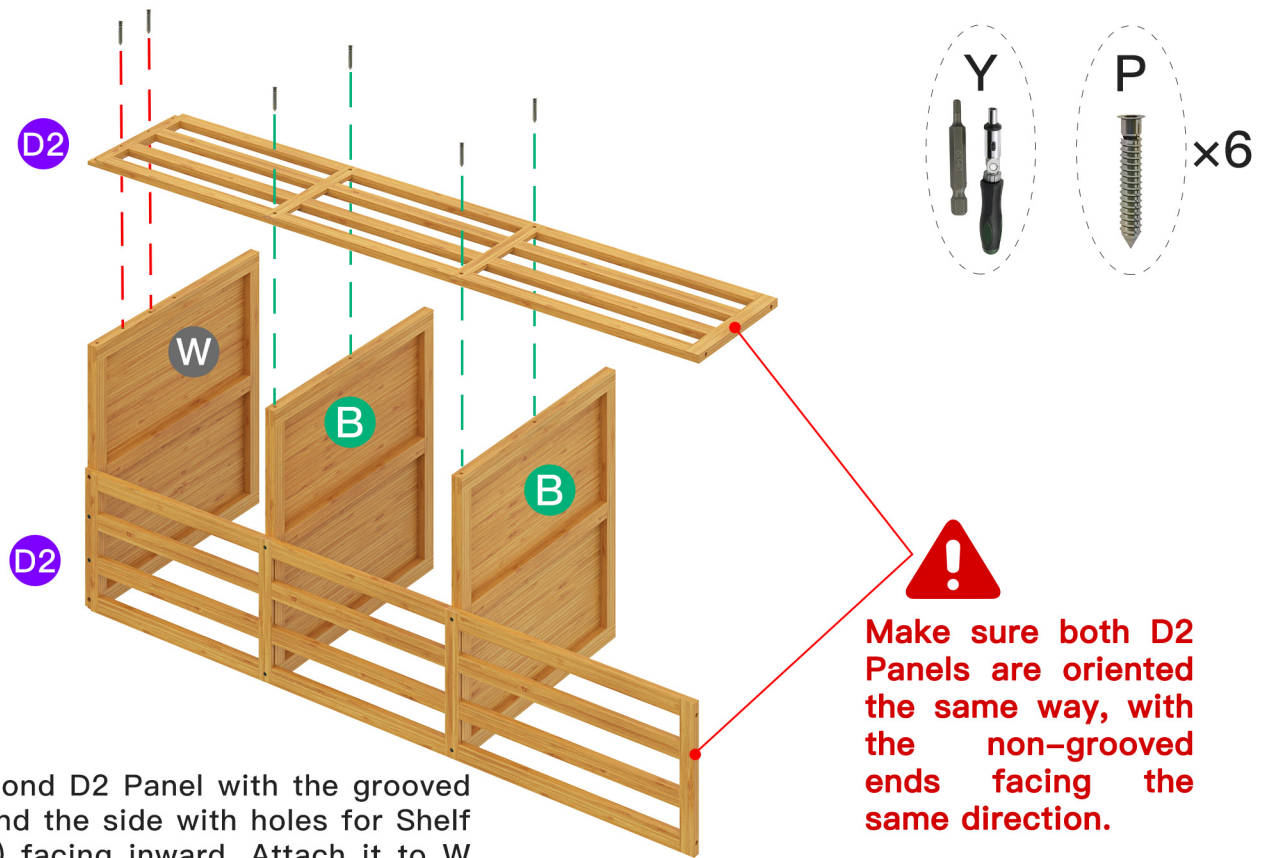



Position the second D2 Panel with the grooved end facing up and the side with holes for Shelf Divider Rods (E) facing inward. Attach it to W Panel and two B Panels using P Screws and Screwdriver Y. Secure W Panel using only the two center holes.

Step 7

Attach the third and fourth D2 Panels to W Panel and two B Panels using P Screws and Screwdriver Y, following the same method as Step 6.


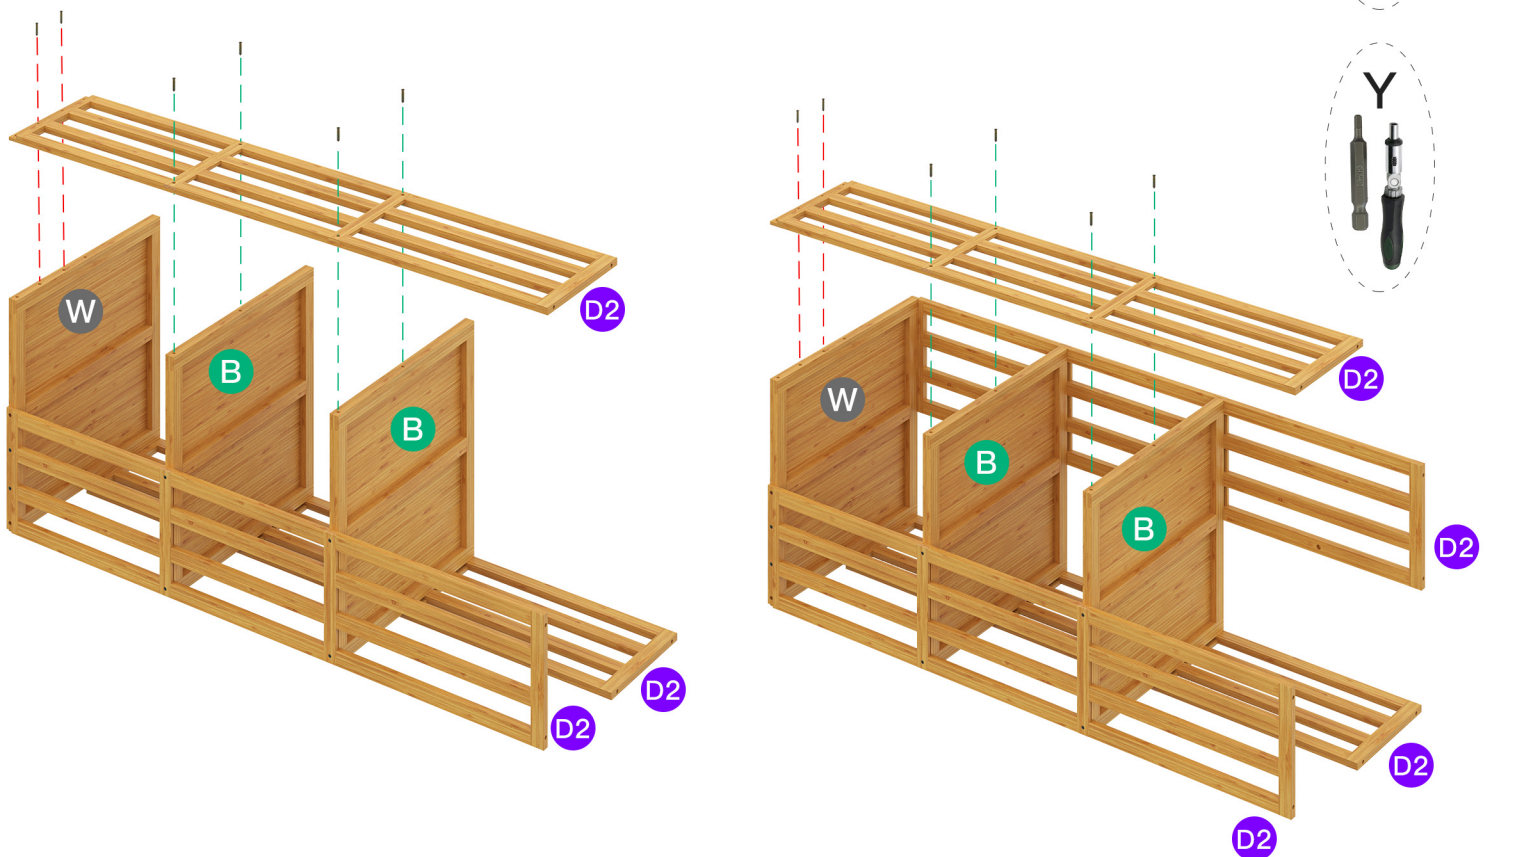


Step 8

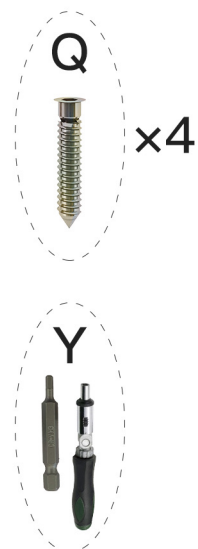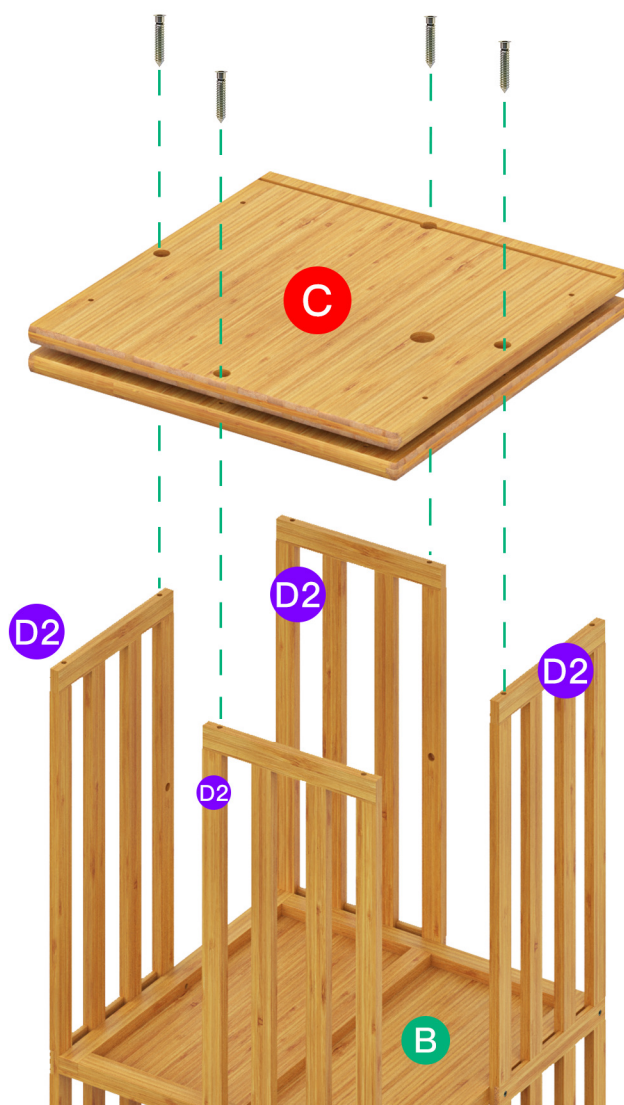

Place the C Panel with the shown side facing up, on the non-grooved ends of the D2 Panels. Insert Q Screws through the holes in C Panel to secure the D2 Panels. Start with the four holes shown.





Step 9

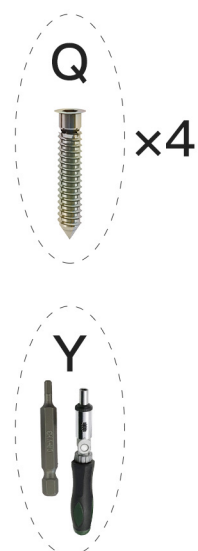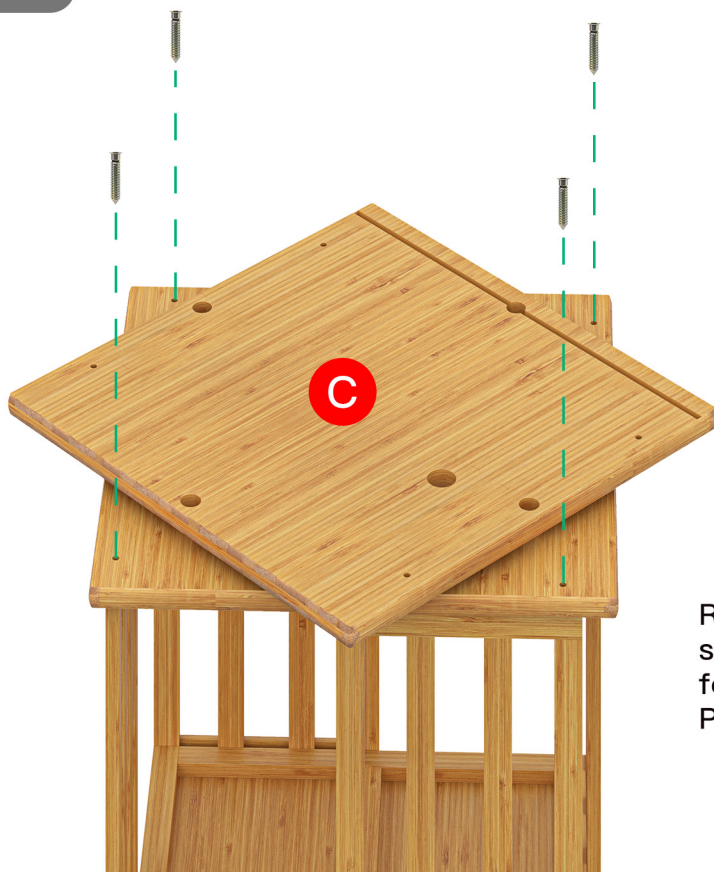


Rotate the C Panel 45° as shown, then use the remaining four Q Screws to secure the C Panel to the D2 Panels.

Step 10


Attach Hardware N to the matching holes on G Panel using O Screws. Then secure the F and G Panels to H Panel using Q Screws, as shown.

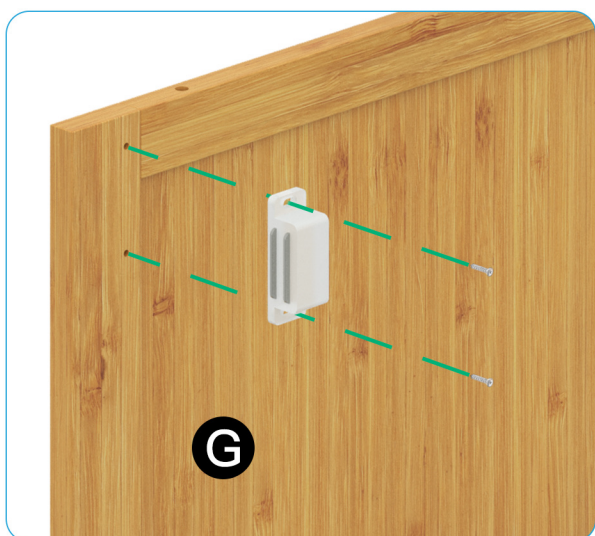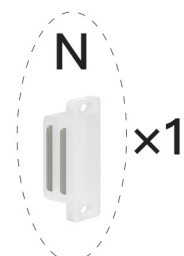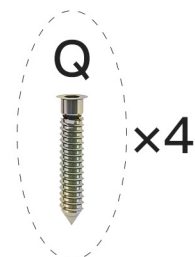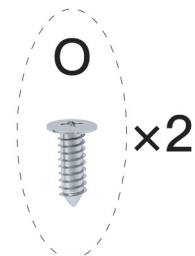

Make sure the groove on H Panel faces up, while the grooves on F and G Panels face the back of the cabinet, as shown.

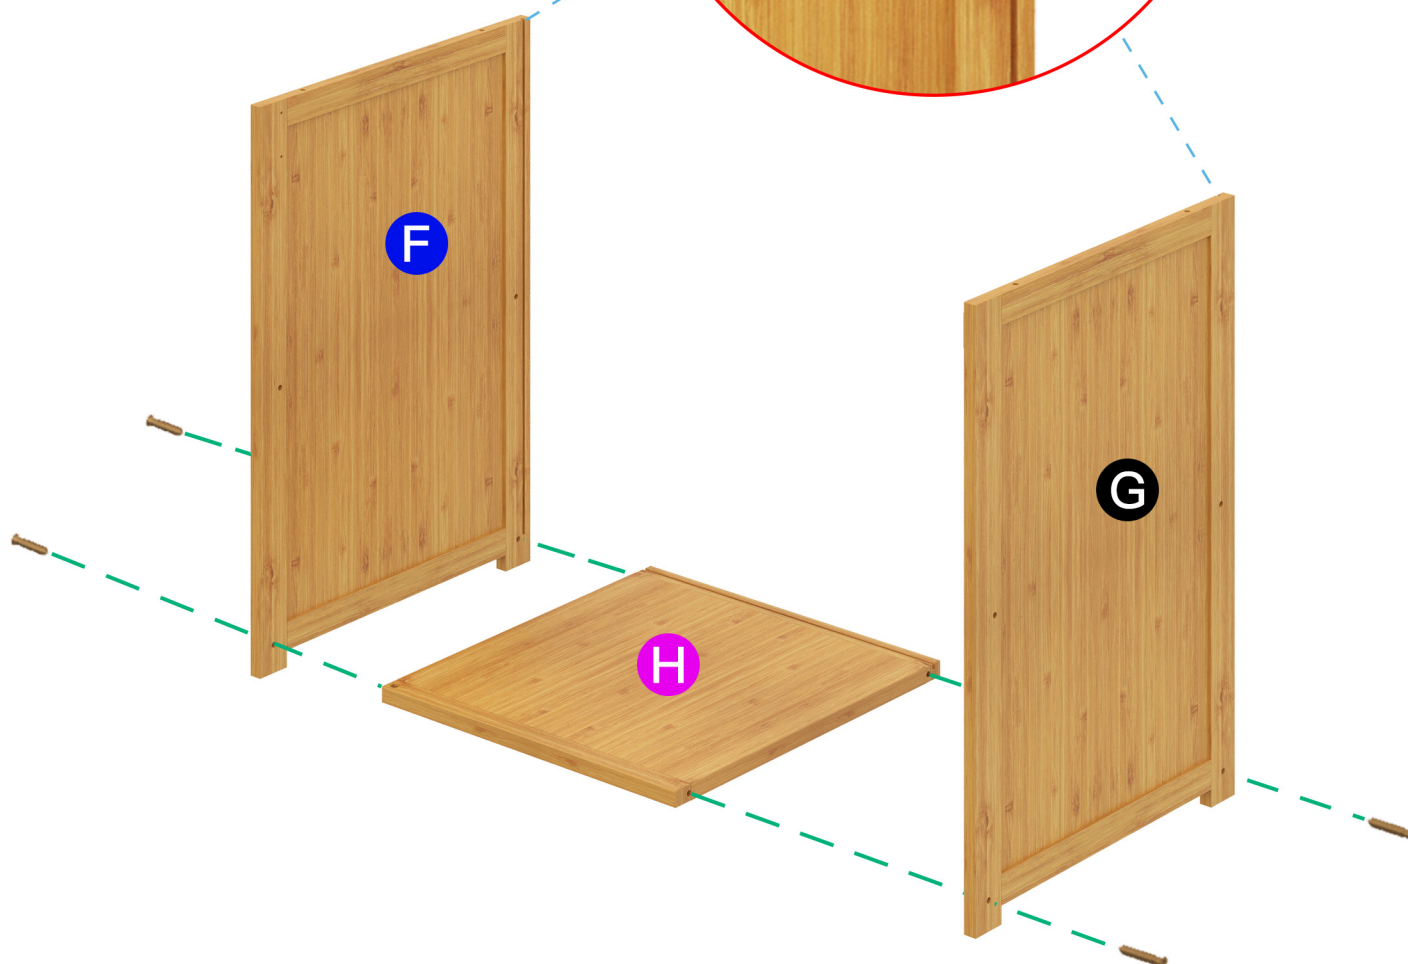


Step 11

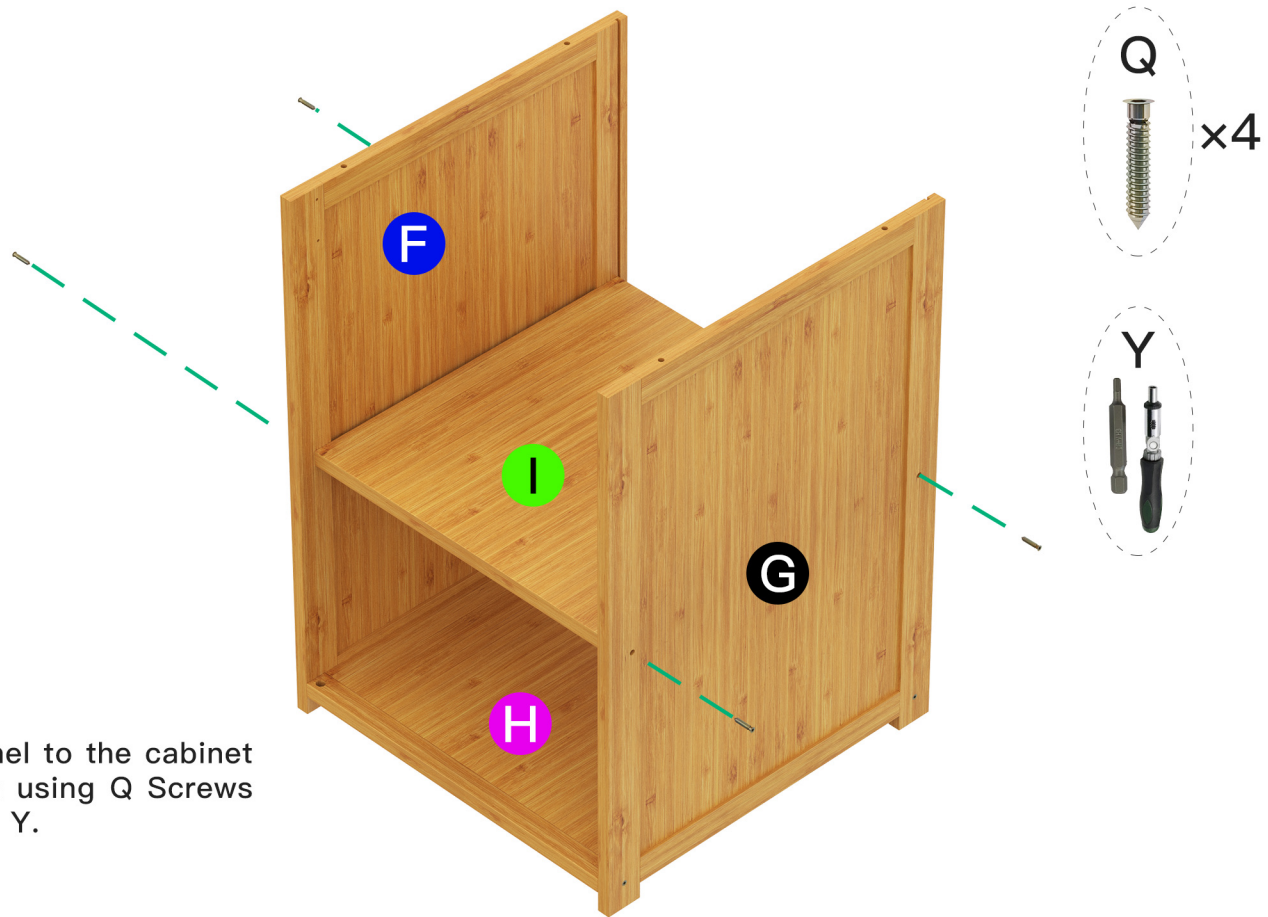

Attach the I Panel to the cabinet frame as shown using Q Screws and Screwdriver Y.





Step 12

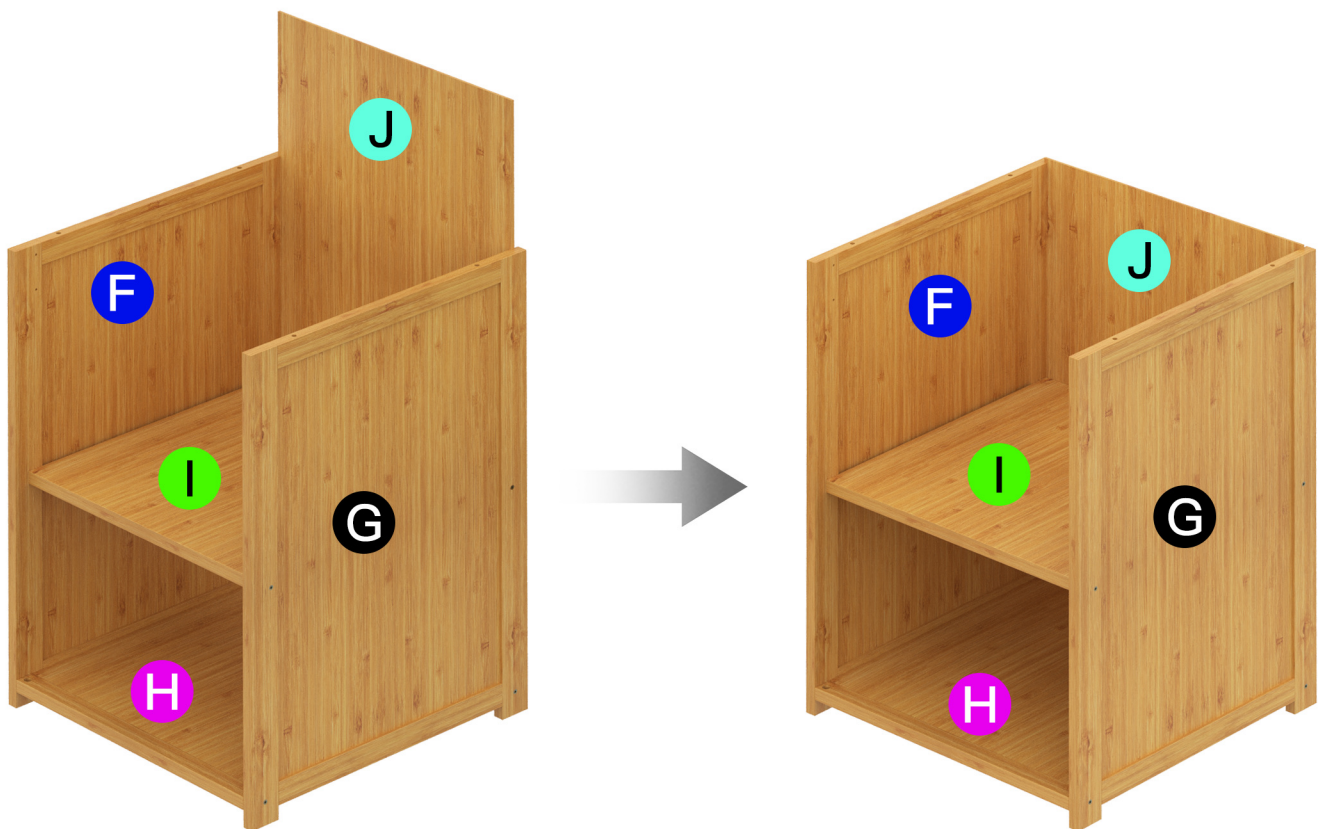

Slide the J Back Panel into the grooves along the F and G Panels until fully inserted, as shown.





Step 13

Place the D2 Panel assembly with Rotating Base (C) on the cabinet. Rotate C 45° until the four corner holes are visible, then secure the assembly to the cabinet using Q Screws.

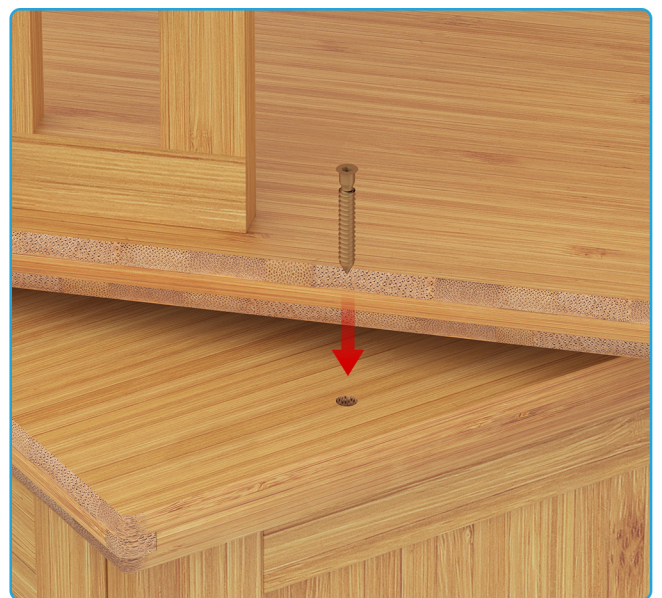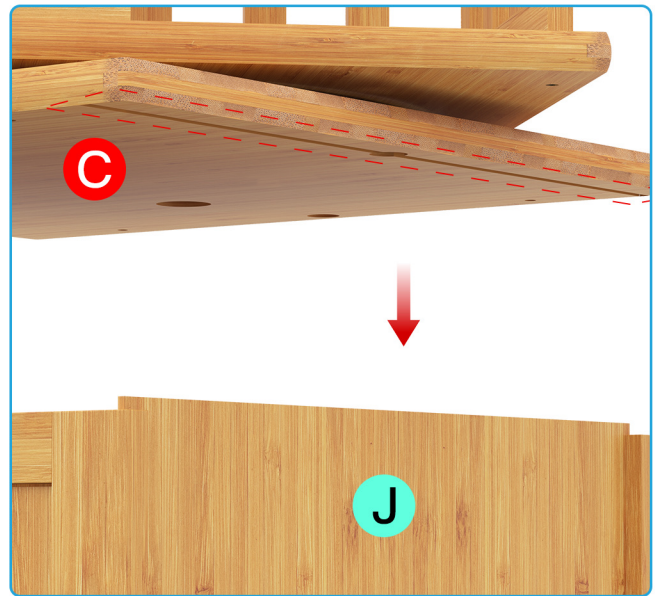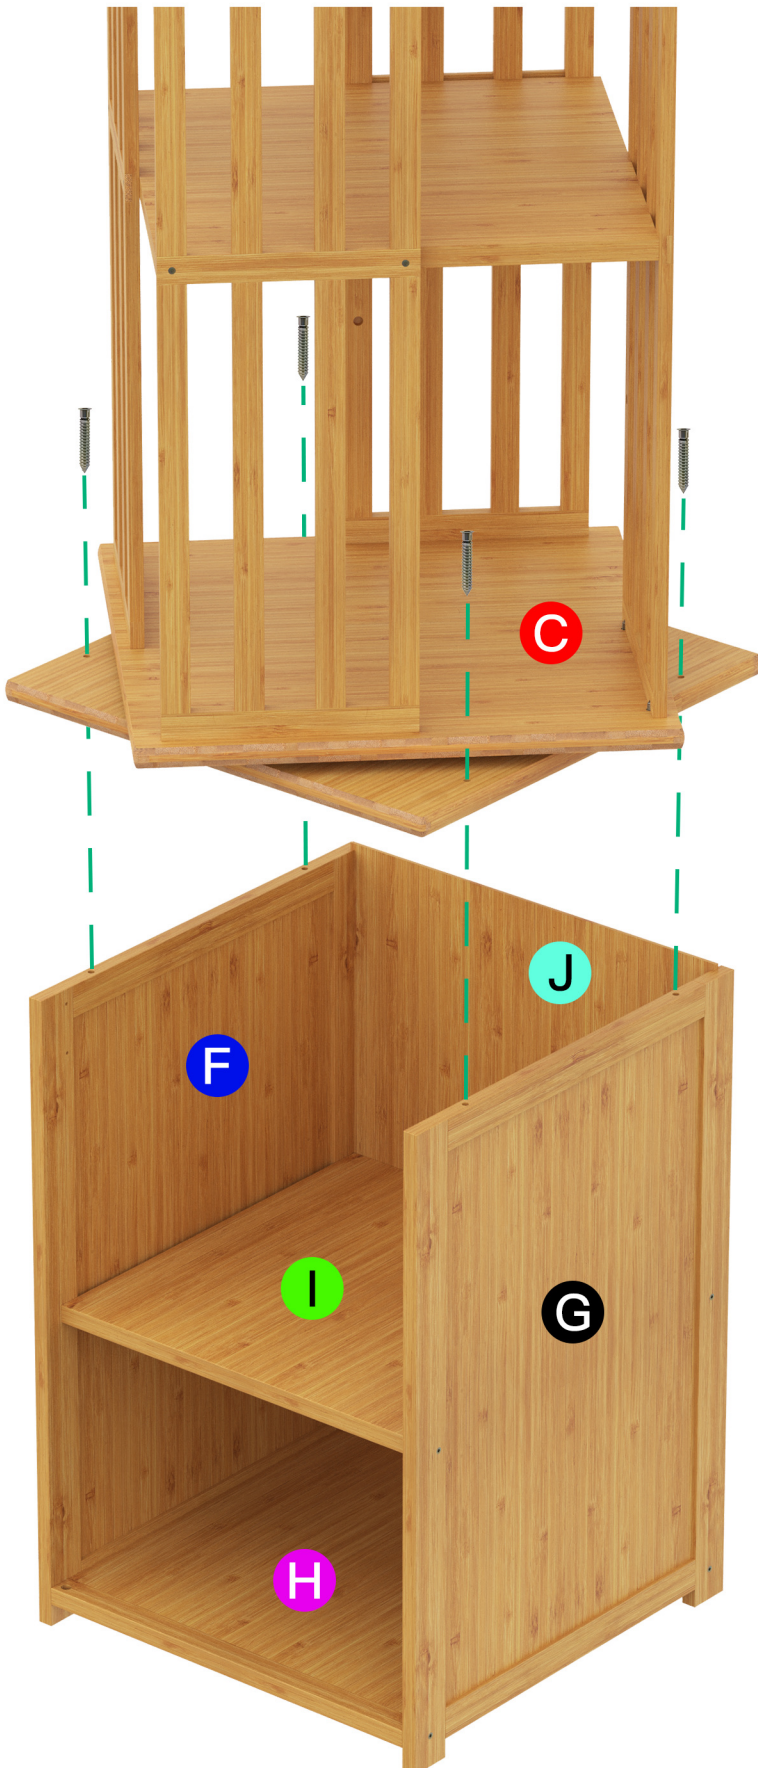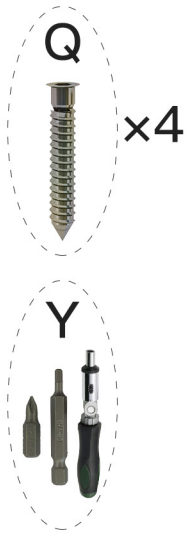


Step 14

Attach Hardware M to the corresponding holes on the inner side of Door Panel (K) using O Screws. Attach Hardware L to the top and bottom positions of K, as shown. Make sure the metal ends of L face outward. Then slide K into the cabinet frame, with the metal ends of L fitting into the corresponding holes.

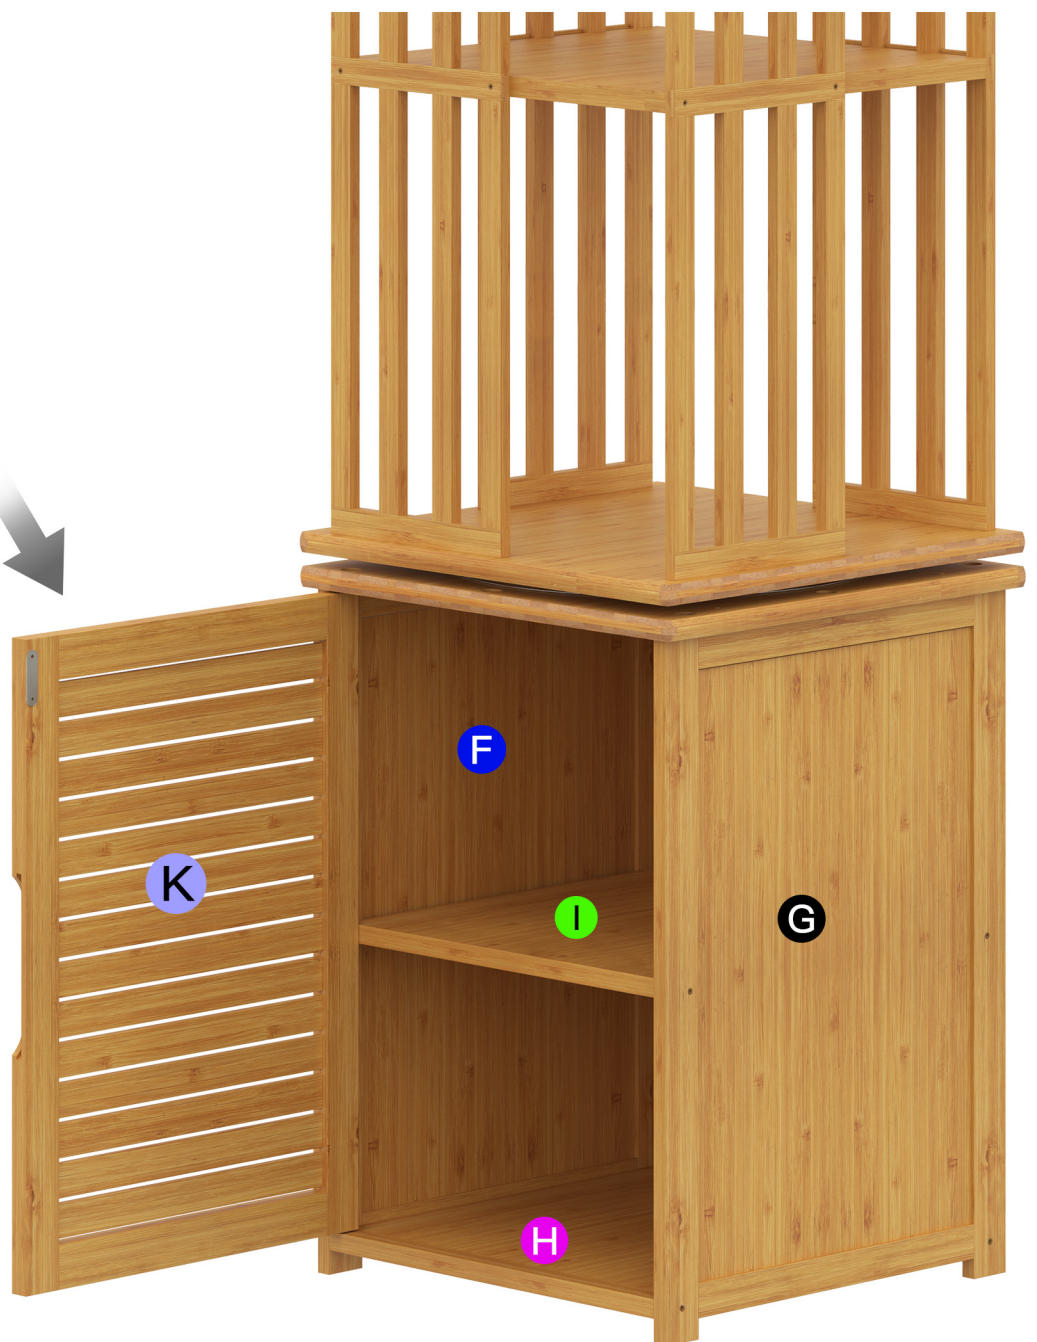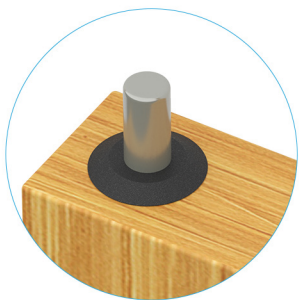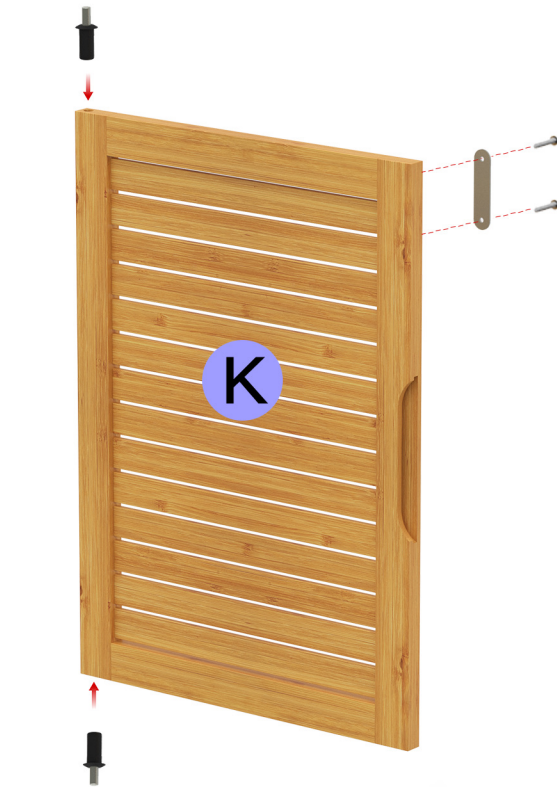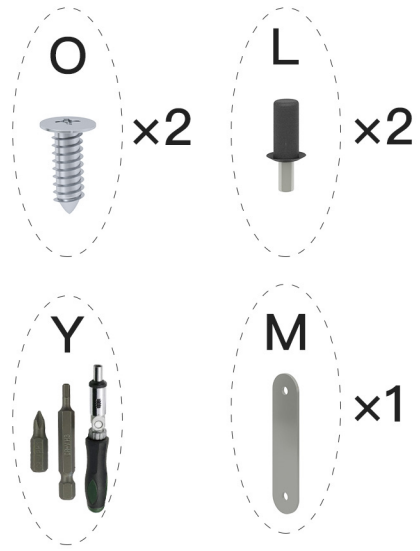

Step 15

Place the assembled upper section with D1 Panels onto the frame. Align the grooves and secure the two sections together using 8 P Screws.

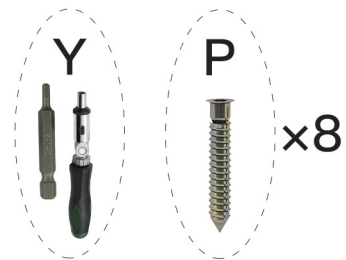

D1




D2





D1

D2

W

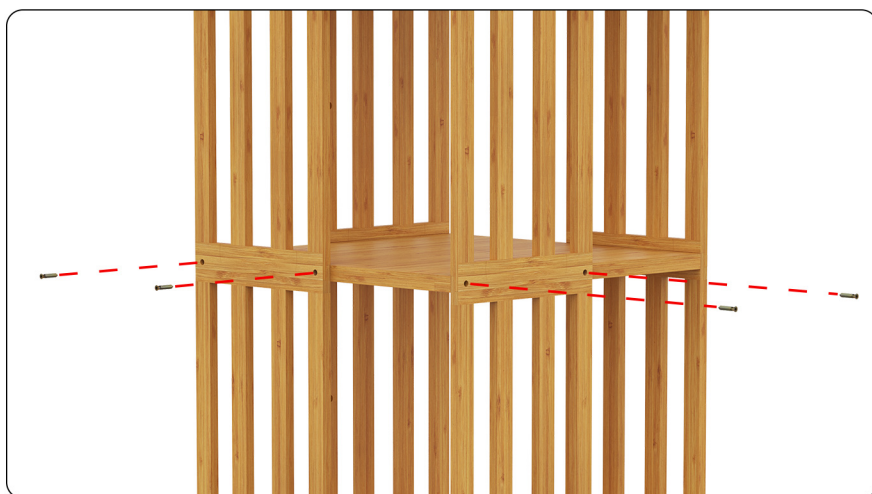

Step 16

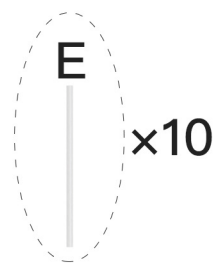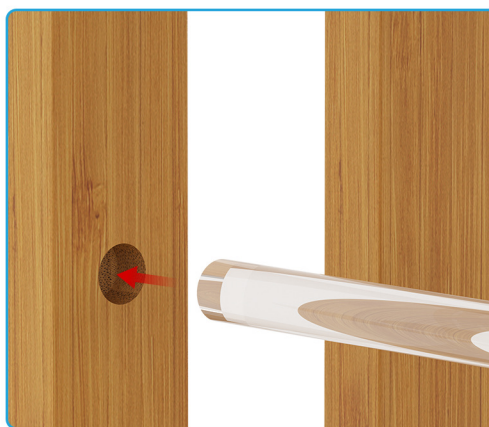


Install the Shelf Divider Rods (E). Insert one end of each rod into a pre-drilled hole, then gently bend the rod to insert the other end into the opposite hole. Install two rods on each shelf level to form an X shape. No tools required.

Step 17



Assembly complete!

Step 18

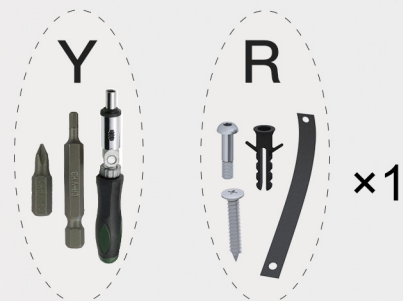

If needed, install the Anti-Tip Kit (R). Use the Flat-Head Screw to attach the strap to Panel A. Use the Pointed Screw and Wall Anchor to secure the strap to the wall.

