

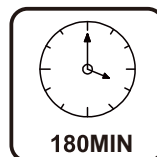
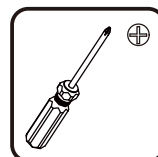
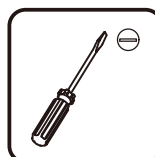



Installation & Assembly

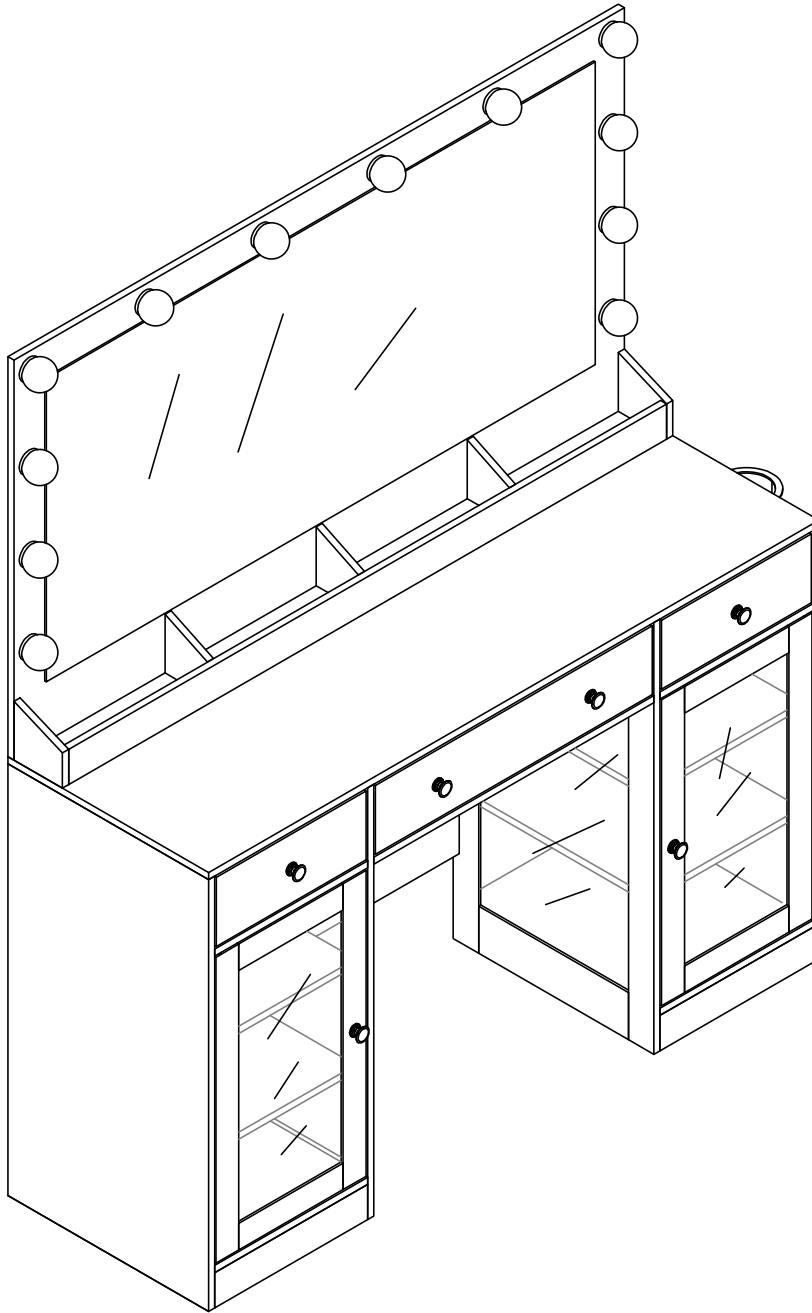


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

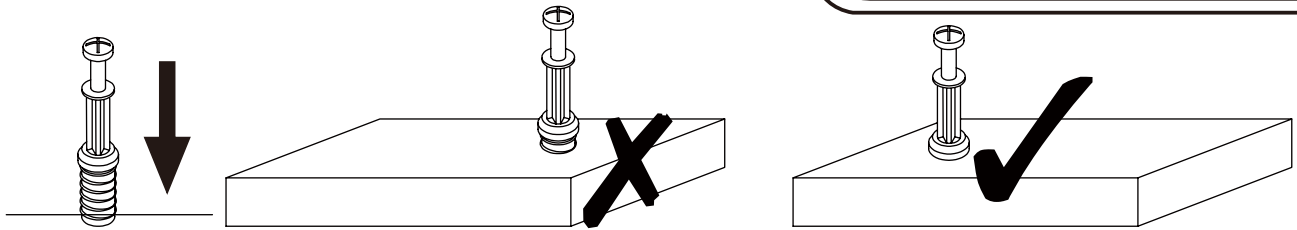


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

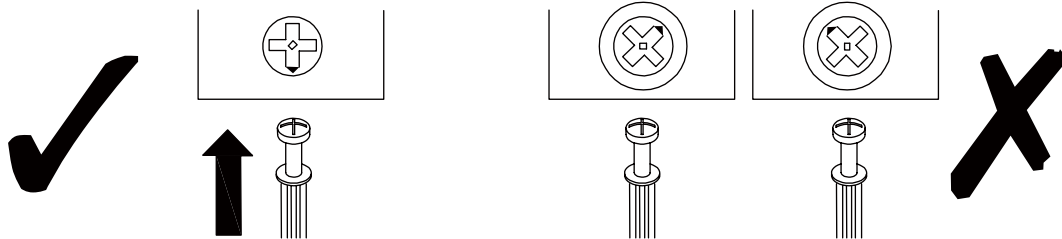










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











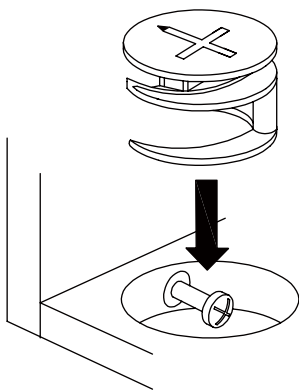


EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.










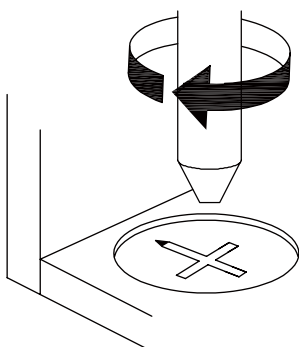


EN_Turn cam lock clockwise to tighten.

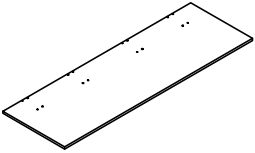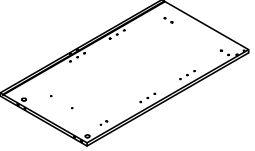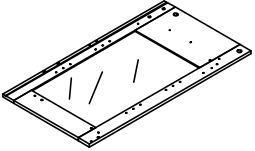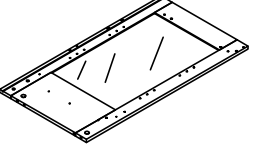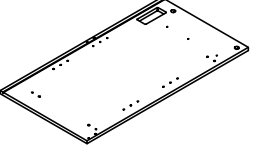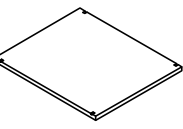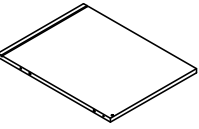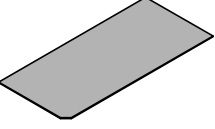
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x1	
⑨		x2	
⑩		x1	
⑪		x2	

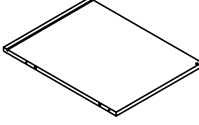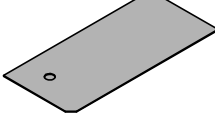
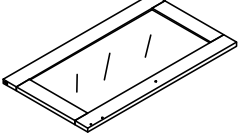
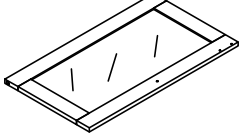


NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x2	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x1	
⑲		x1	
⑳		x1	
㉑		x1	
㉒		x3	

PACKING DELALS

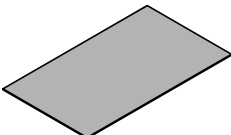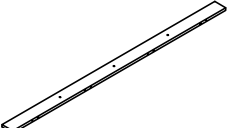
NO.	PARTS	QTY	SPARE
23		x3	
24		x1	
25		x1	
26		x1	
27		x2	
28		x2	
29		x2	
30		x1	
31		x1	
32		x3	
33		x1	

[illegible]

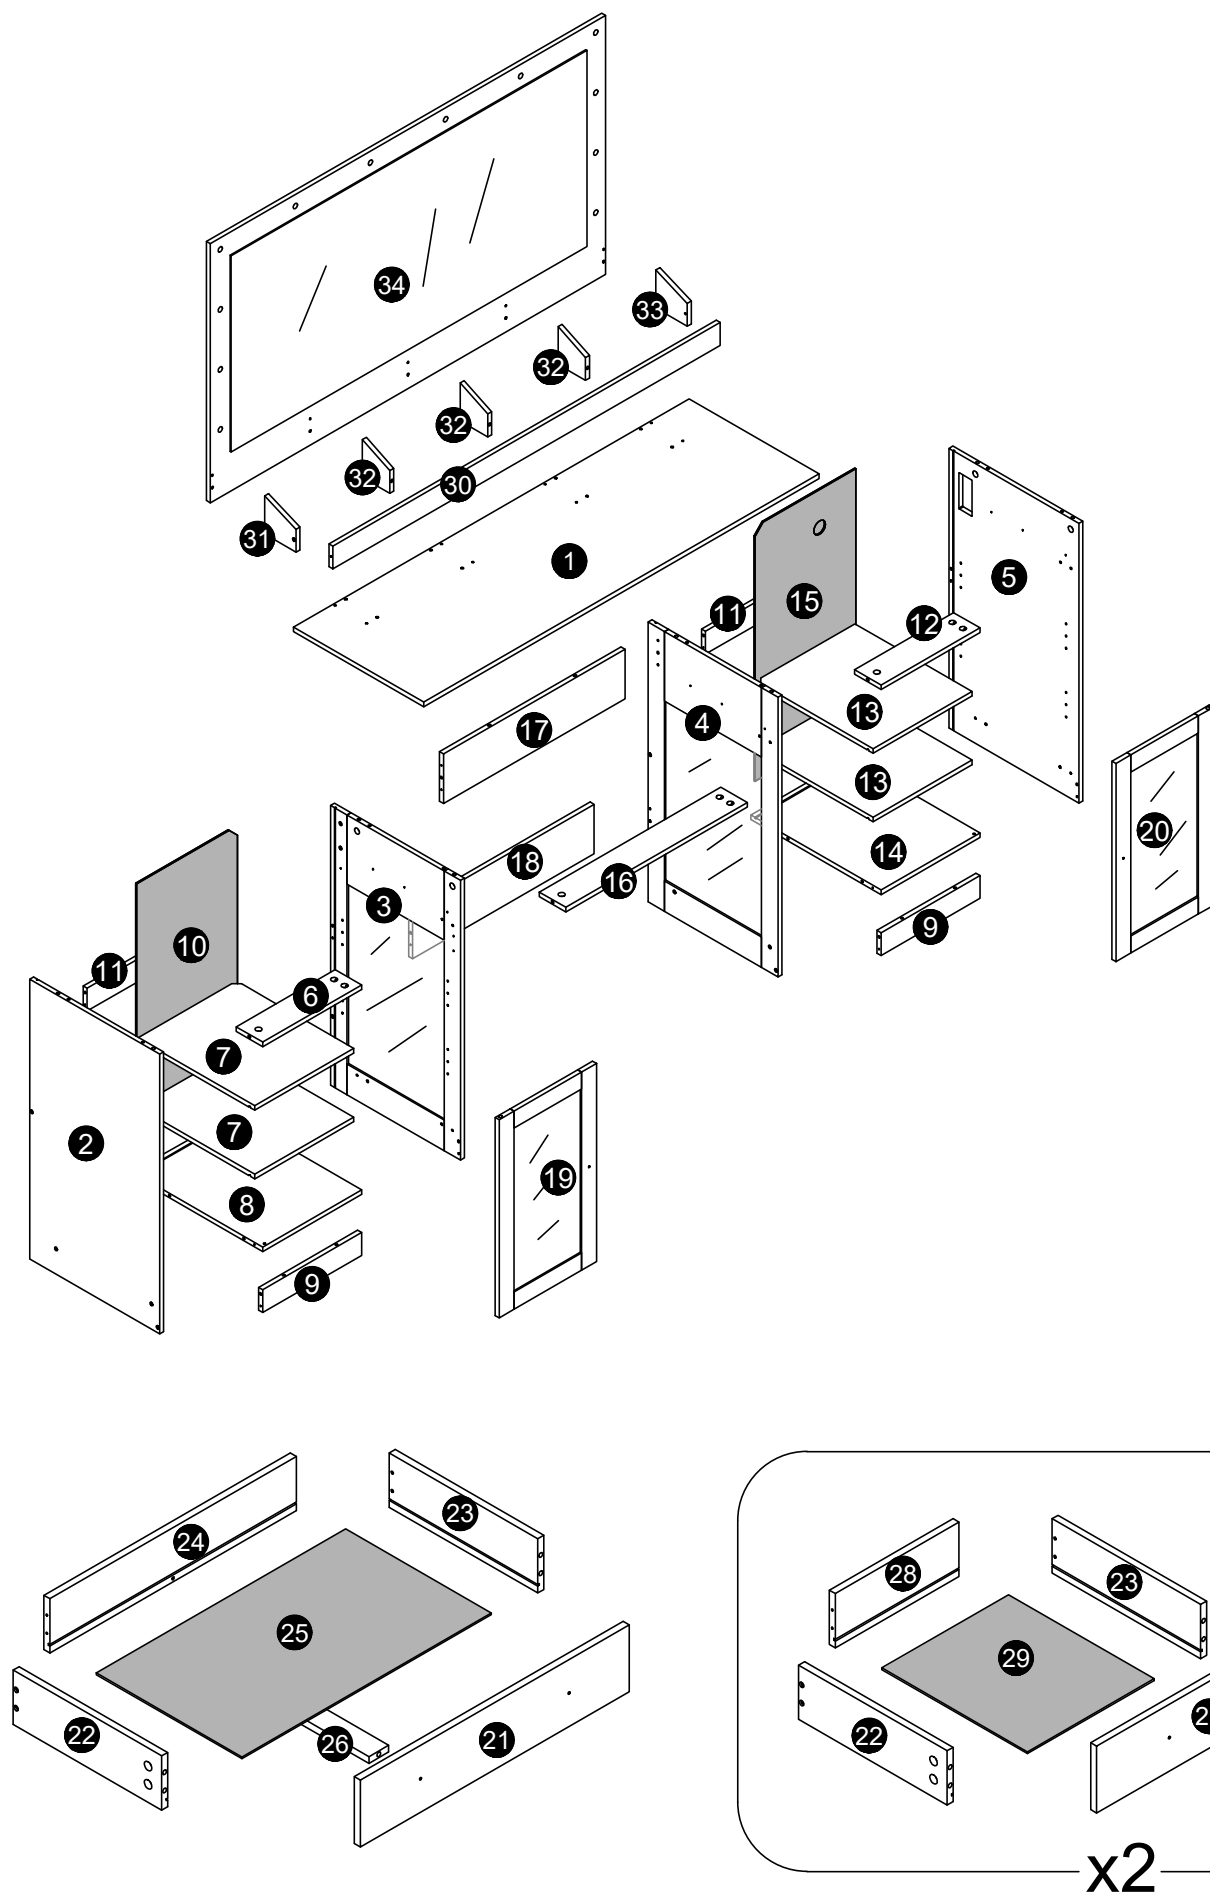

 A x35 Ø6x35mm +3(spare)	 B x35 Ø15x10mm +3(spare)	 C x45 Ø6x30mm +4(spare)	 D x54 Ø4x35mm +5(spare)	 E x40 Ø3.5x12mm +4(spare)	 F x6 F-1	 F x6 F-2			
 G x2 Ø3x14mm G-1	 G x2 Ø3x14mm G-2	 H x16	 I x2	 J x4	 K x1 K-1		 K x1 K-2	 K x12 K-3	 K x12 K-4
 L x1	 M x2 Ø3.5x14mm	 N x1	 O x7 Ø4x12mm +1(spare)	 P x5 +1(spare)	 Q x1 Q-1		 Q x1 Q-2		
 R x2 Ø6x30mm	 S x2 Ø4x14mm S-1	 S x2 Ø4x14mm S-2	 T x16 Ø3x16mm +1(spare)	 T x16 Ø3x16mm +1(spare)	 U x21 +4(spare)				
 CL x3 L300mm	 CR x3 L300mm	 DL x3 L300mm	 DR x3 L300mm						


A x8



B x8



D x8




F x2



F-1

F-2

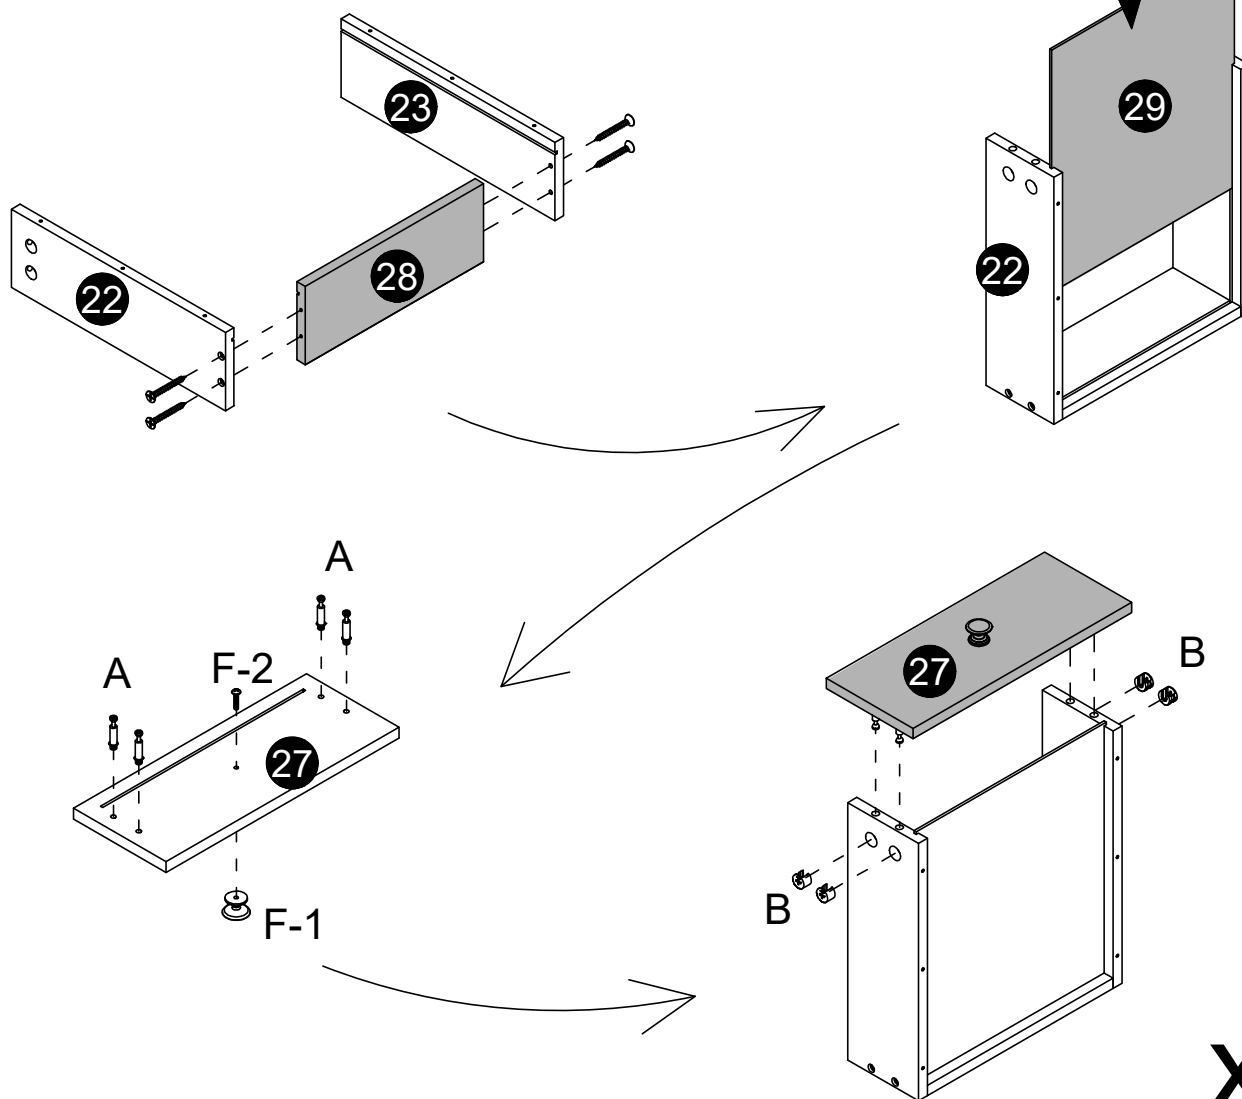


x2



E x12




DL x2




DR x2

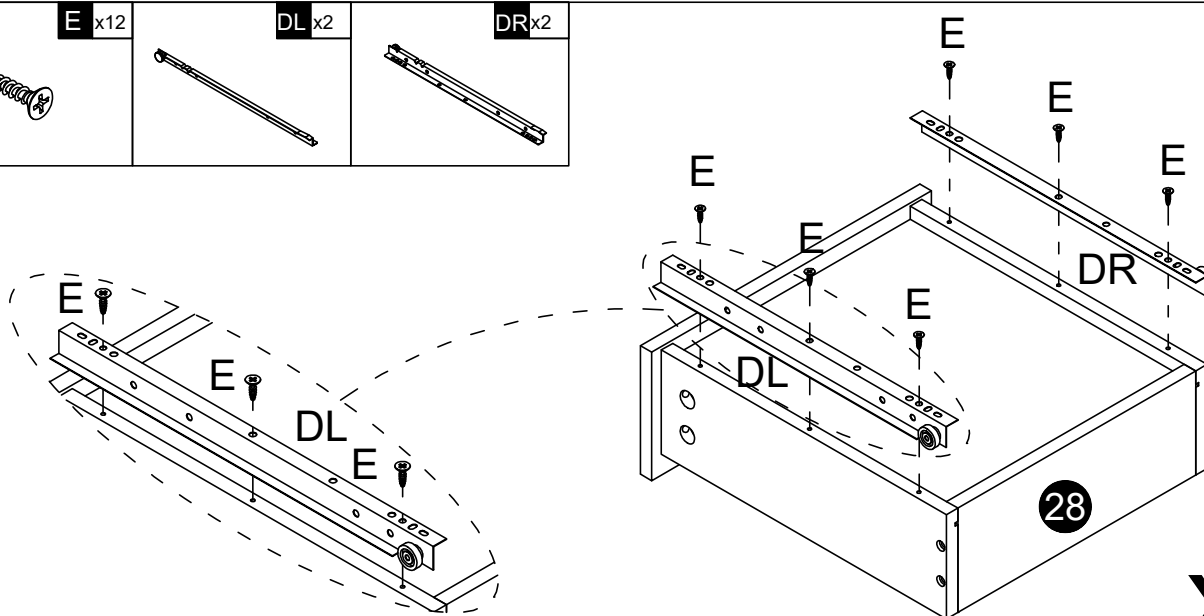

x2

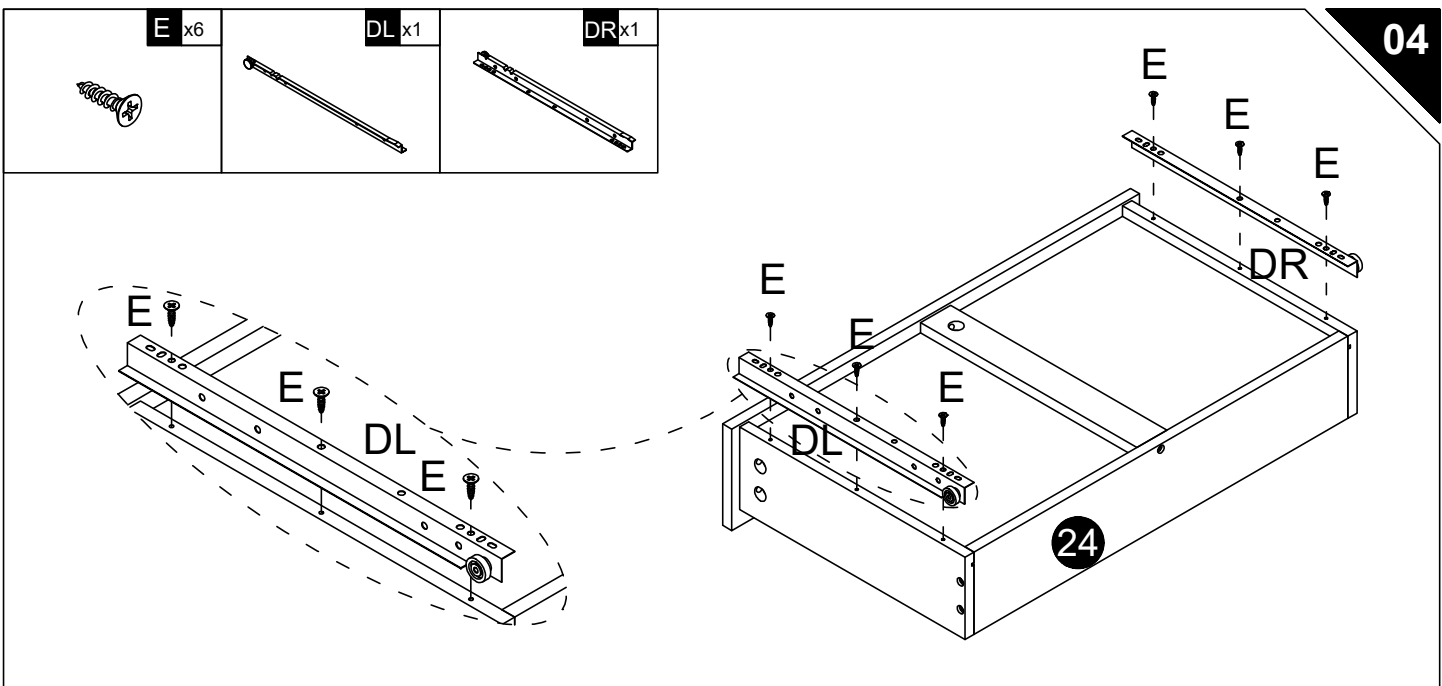


A x3





E x6




CL x1



CR x1

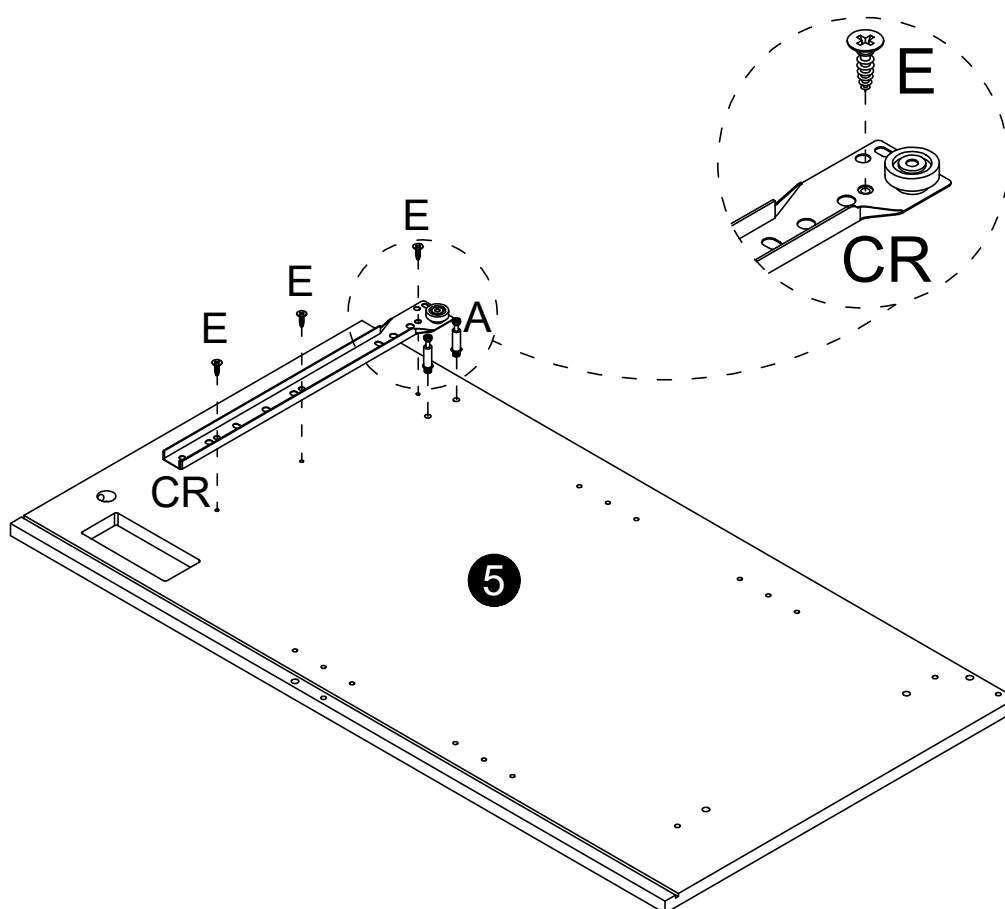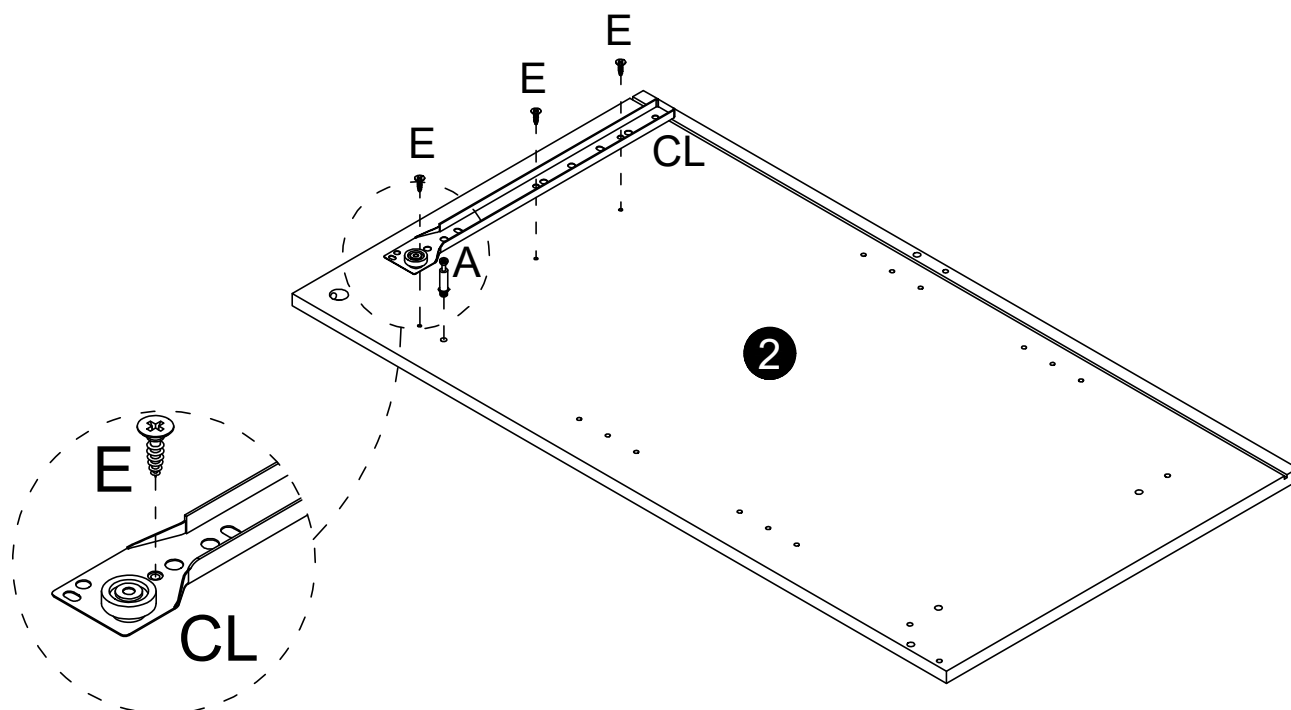

A x3



E x6



G x1



G-1









G-2

CL x1



CR x1

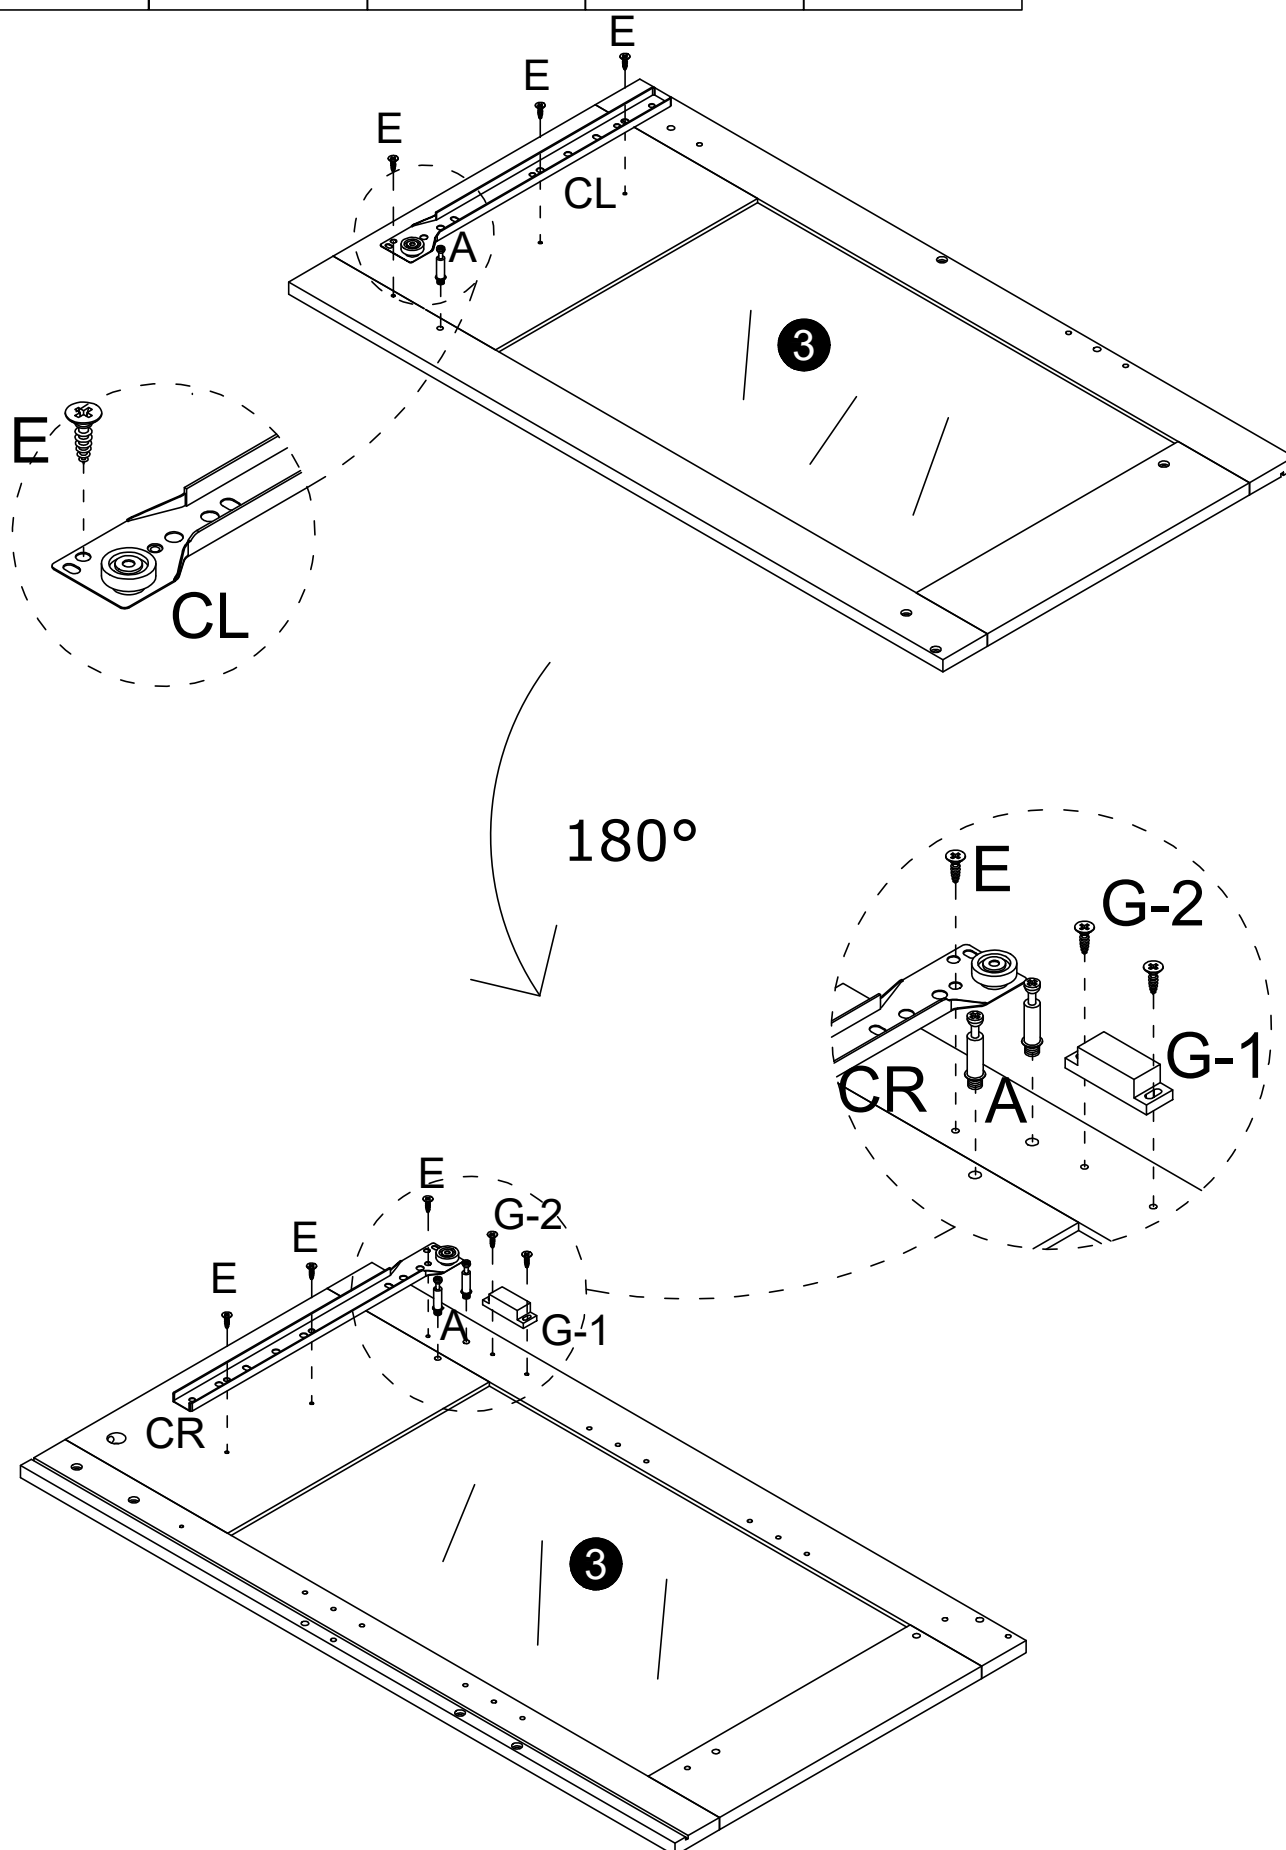



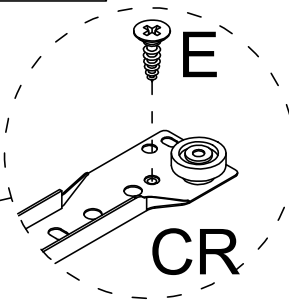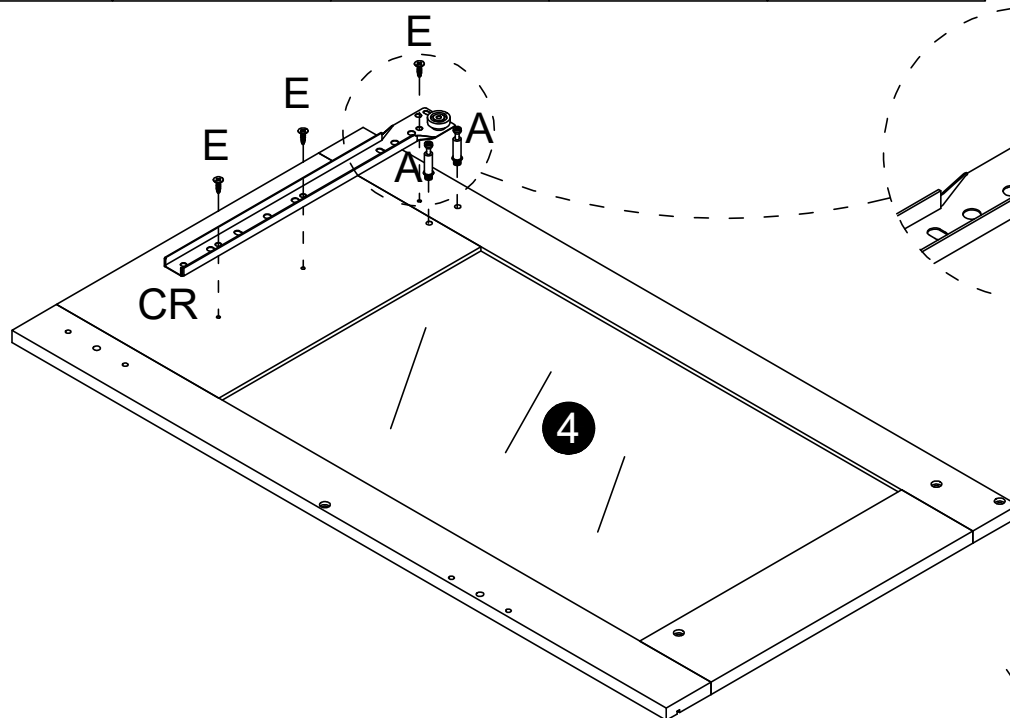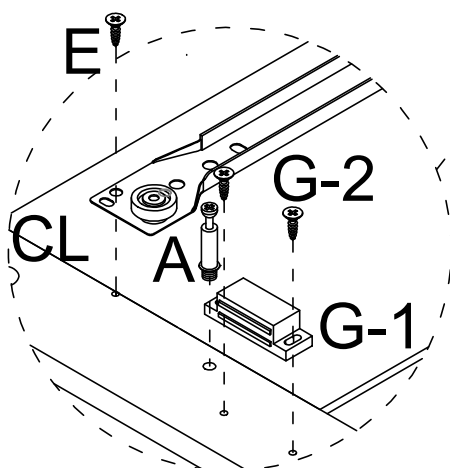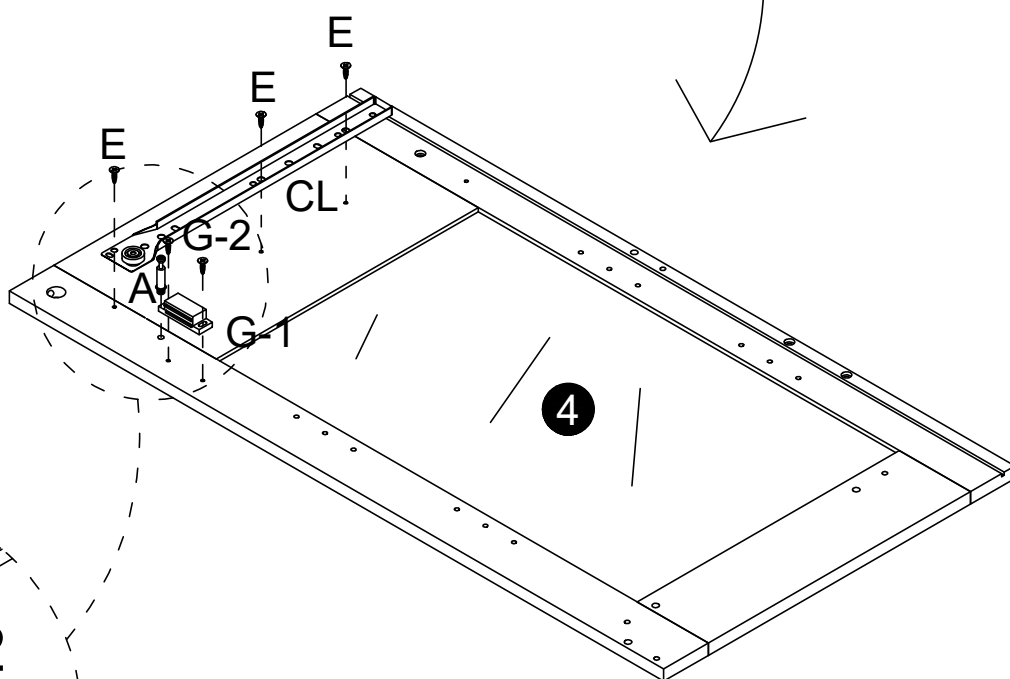 180° 

B x1

C x6



D x4

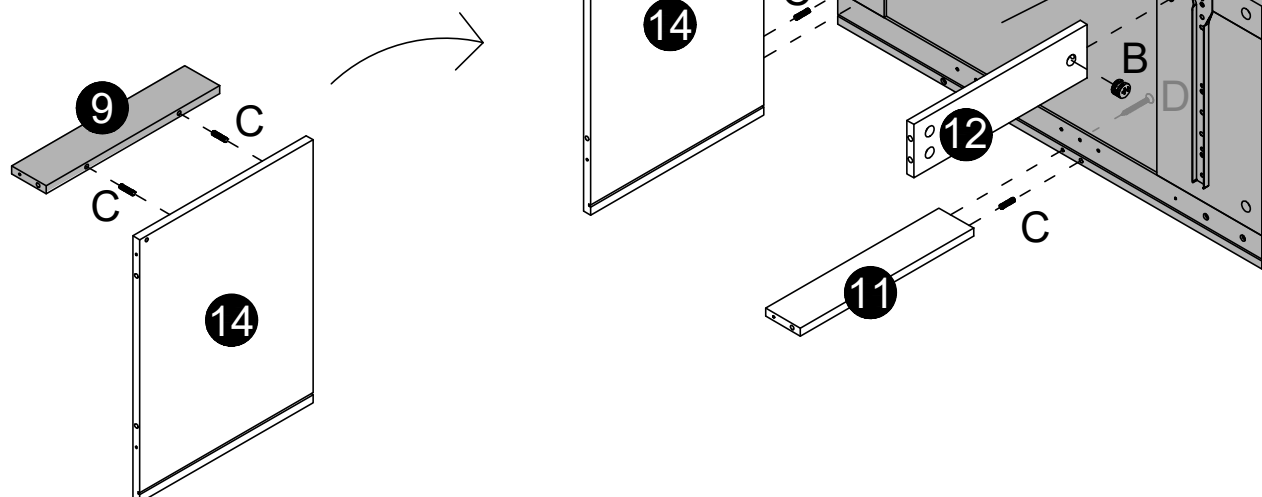



B x2

C x4

D x4

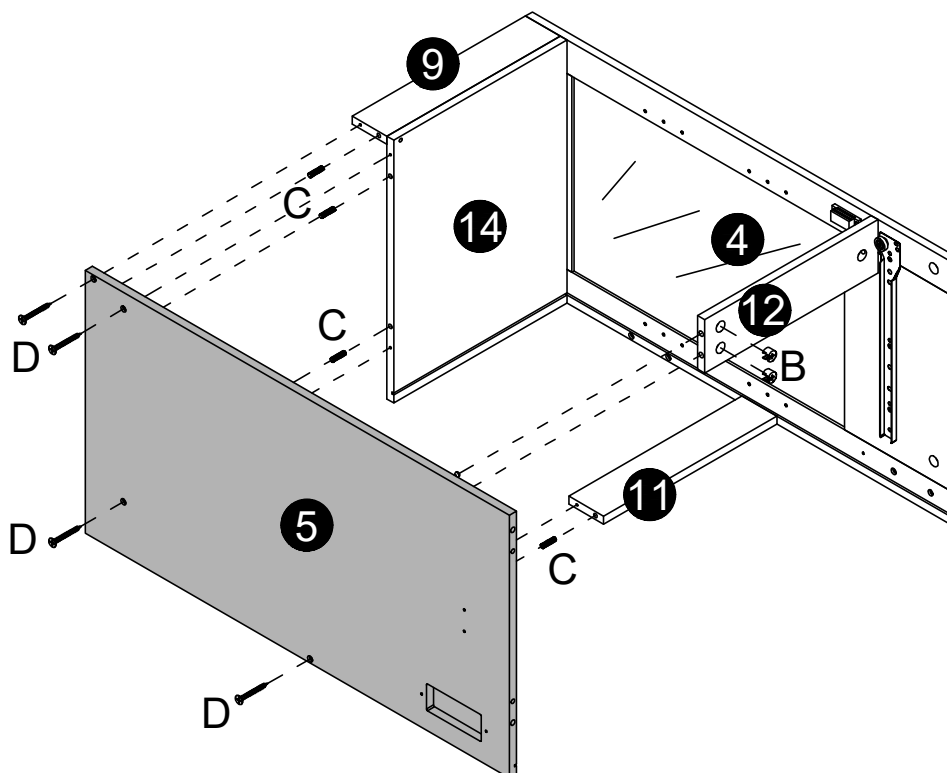

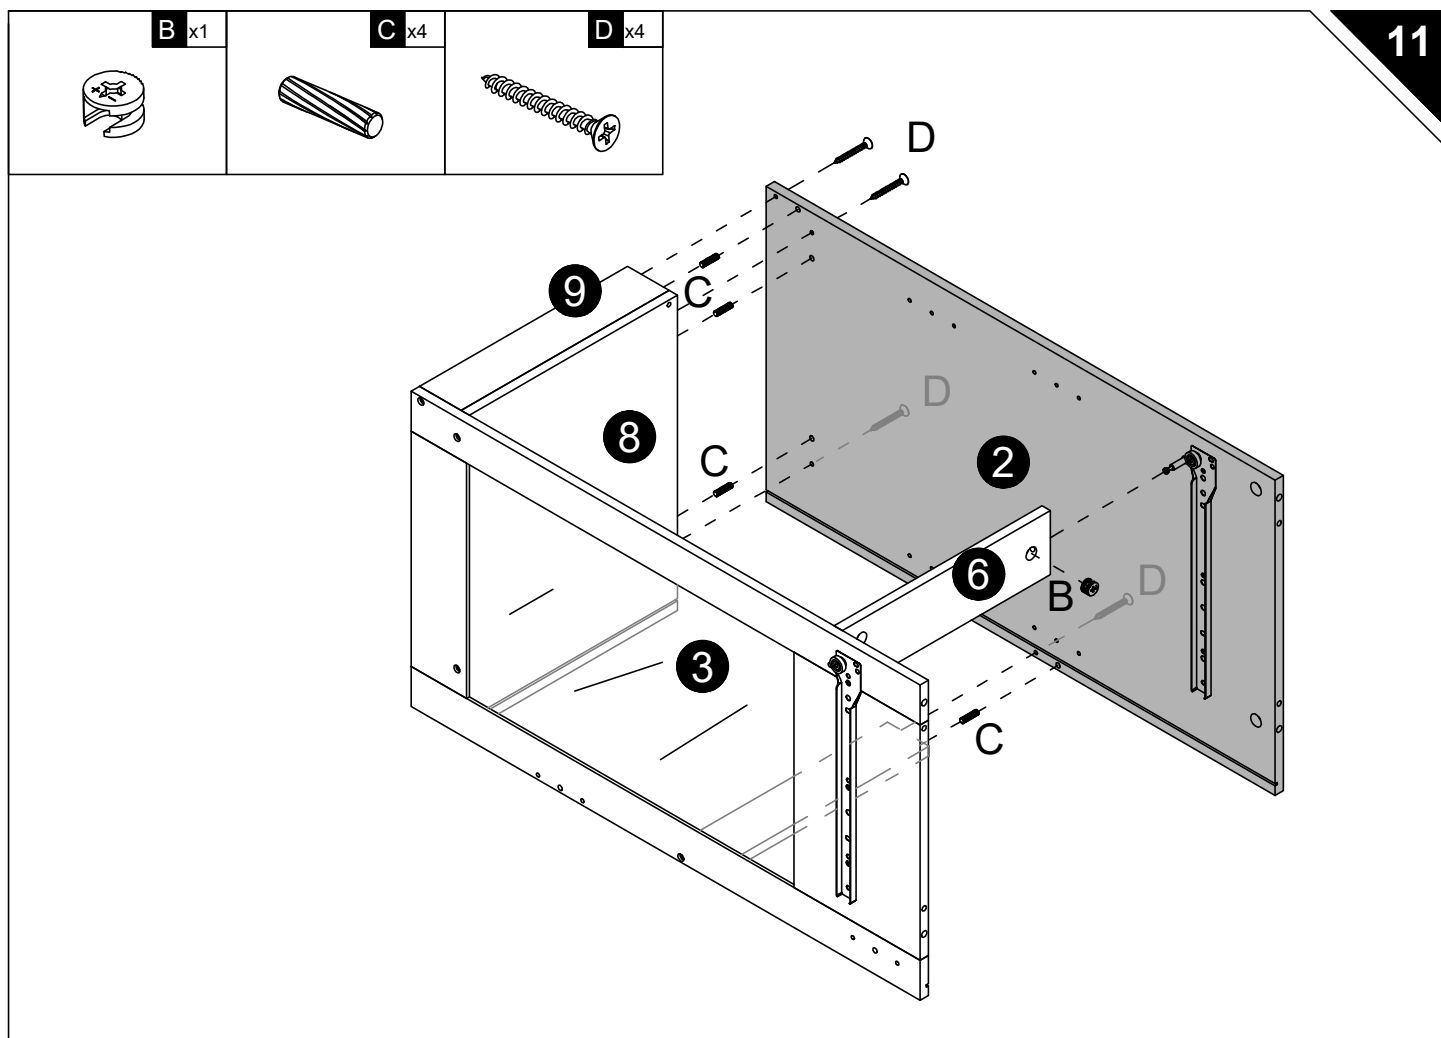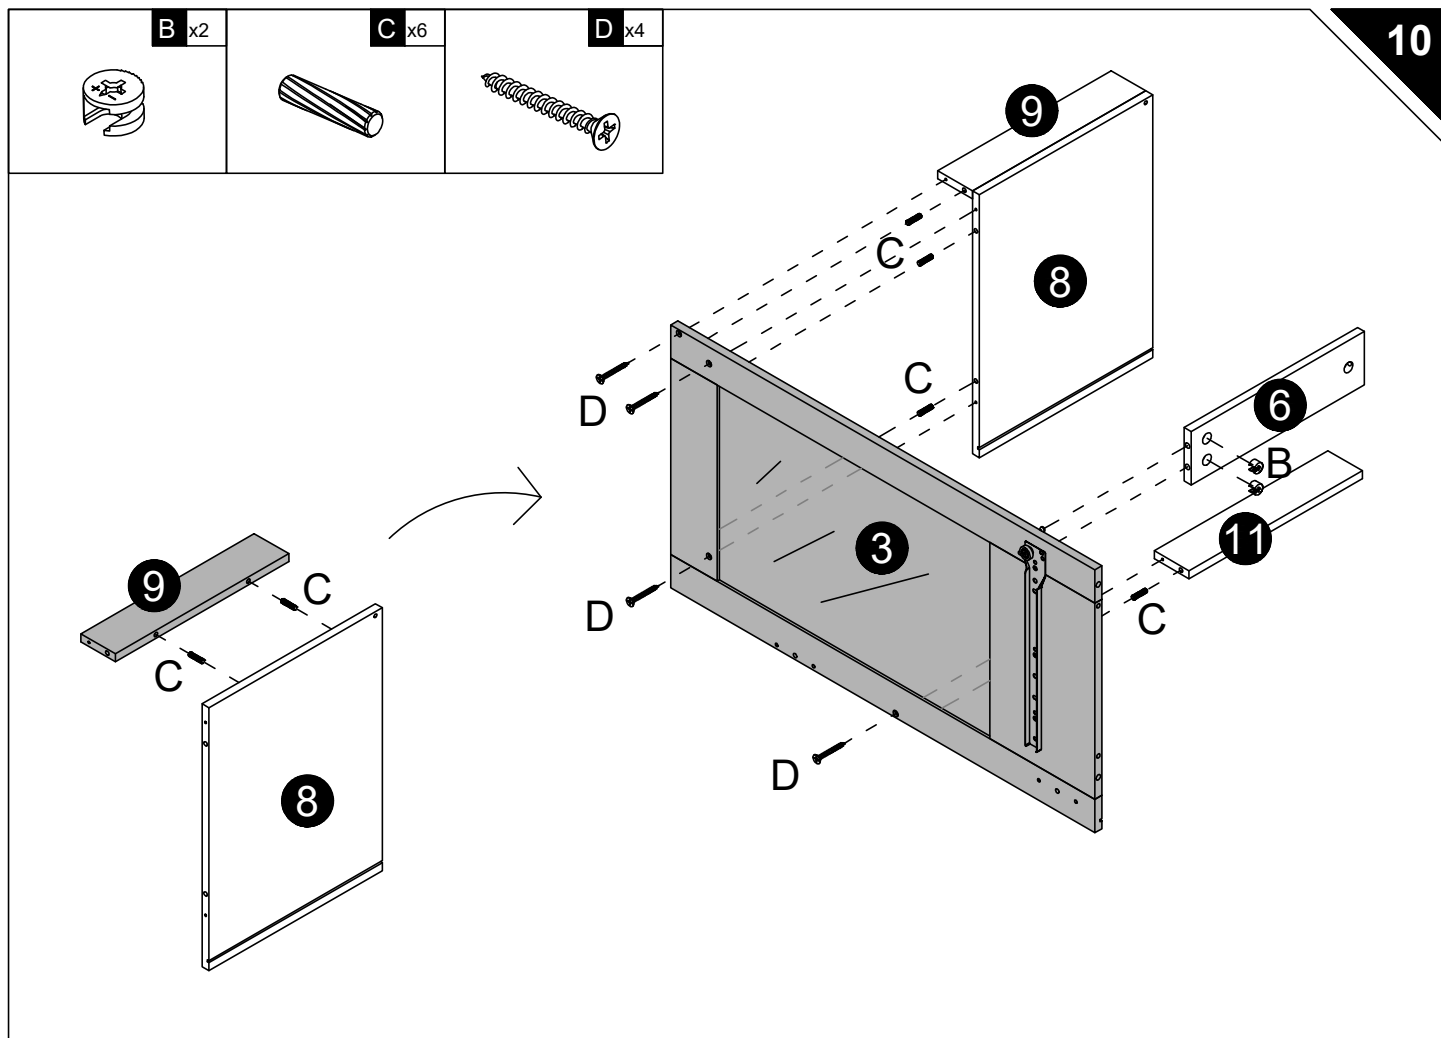



B x3



C x4



D x8

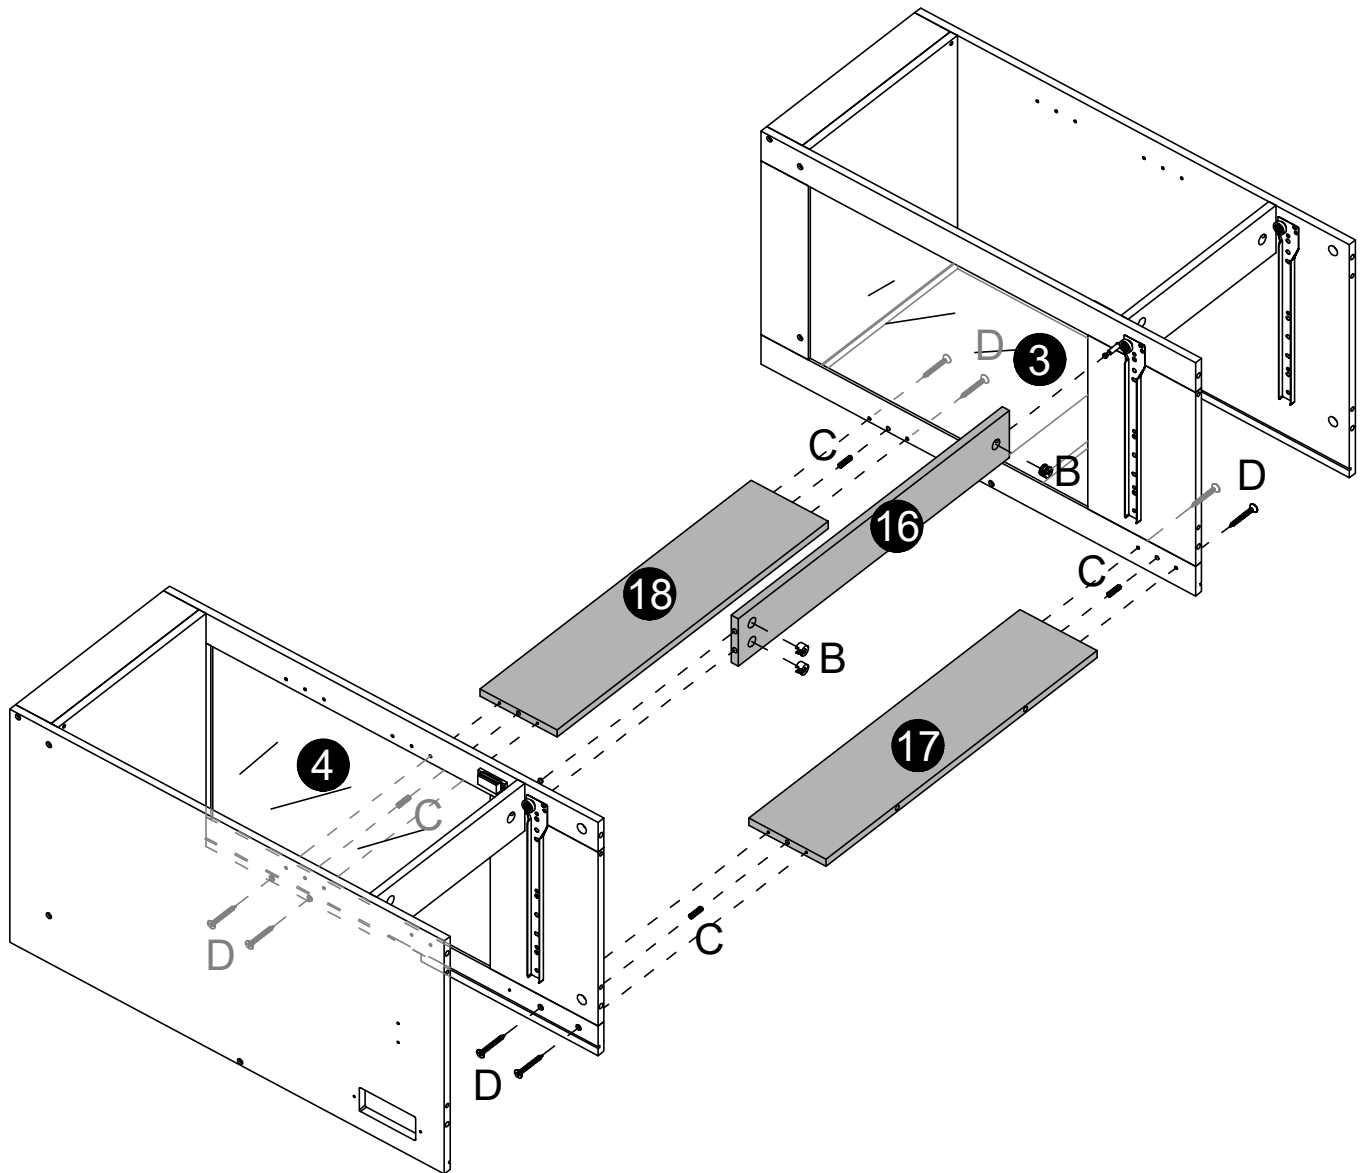

N x1




O x2




P x2




The final effect is that it is perpendicular to the ground and through the triangular cut.

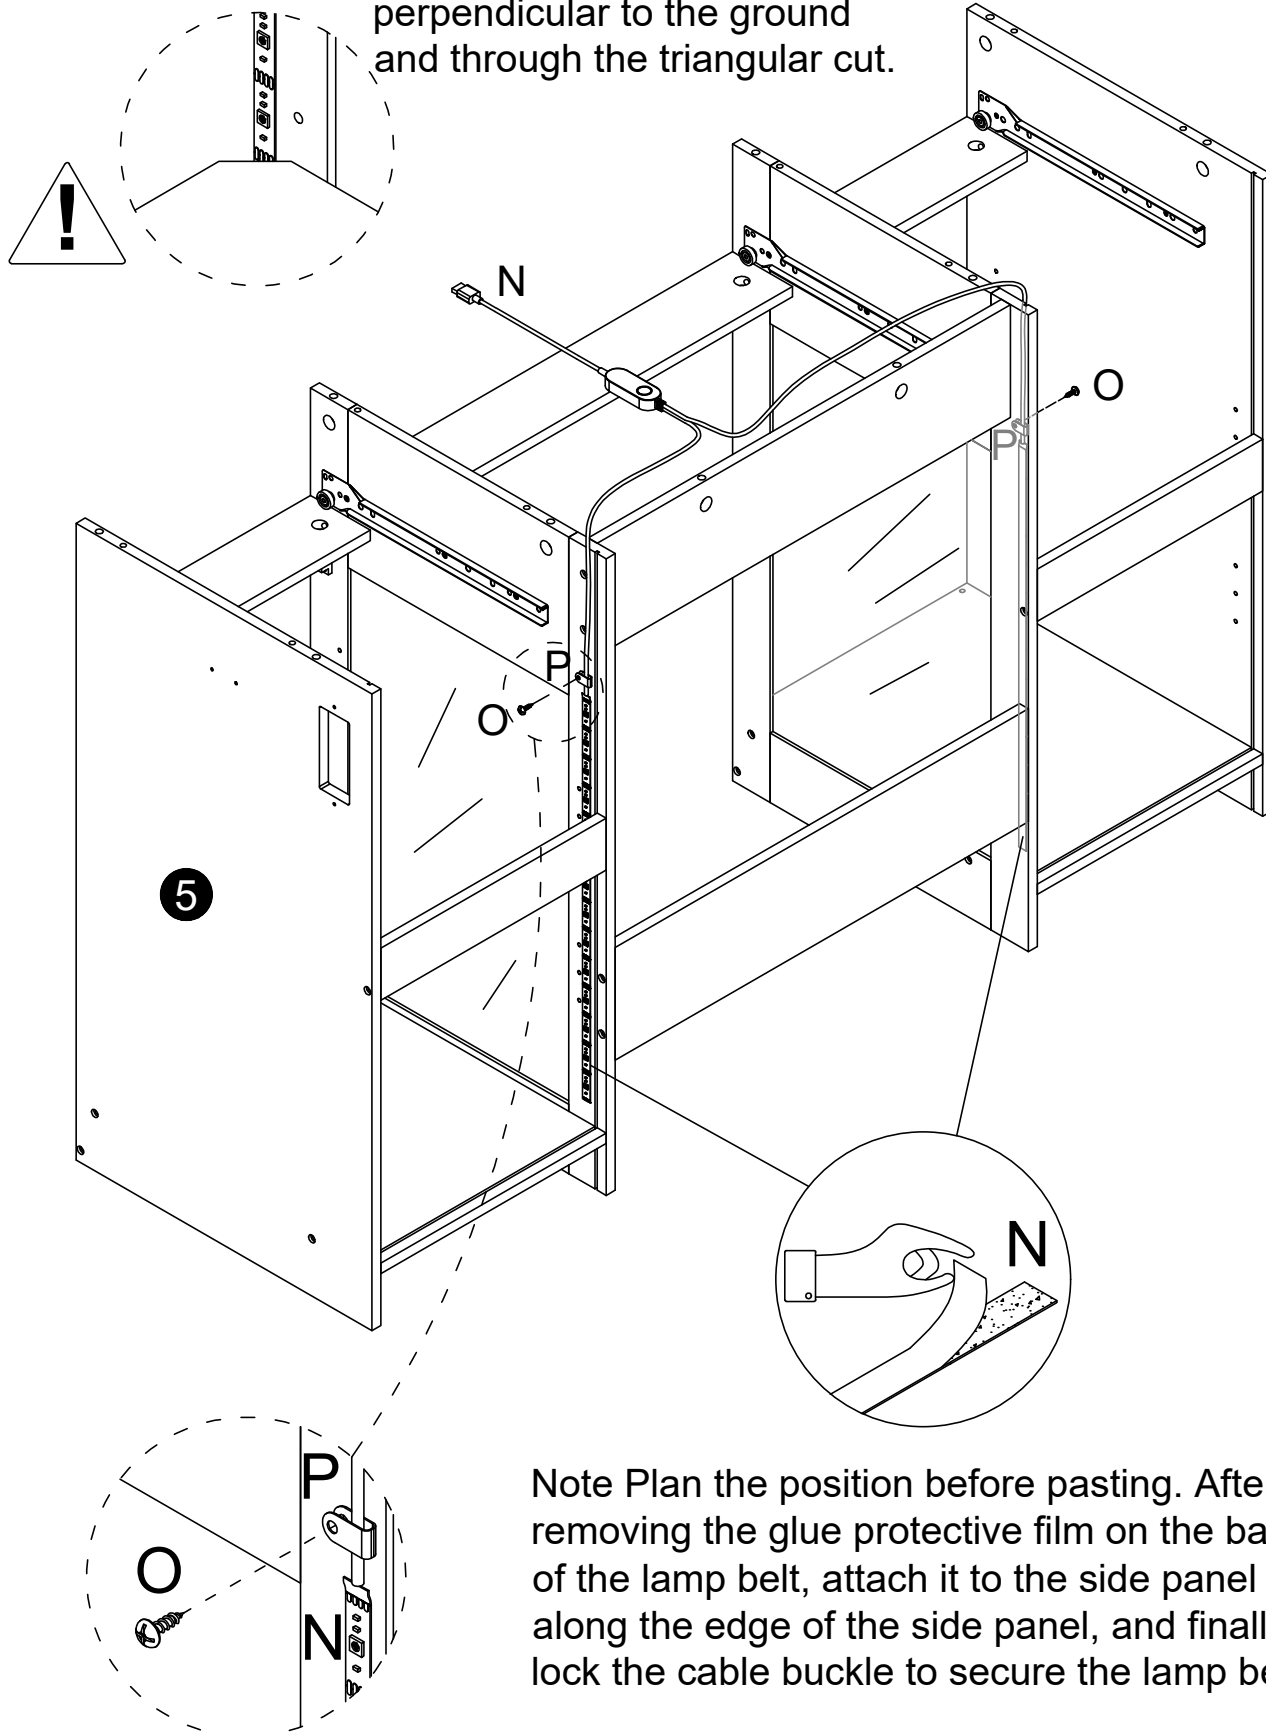

Note Plan the position before pasting. After removing the glue protective film on the back of the lamp belt, attach it to the side panel along the edge of the side panel, and finally lock the cable buckle to secure the lamp belt.

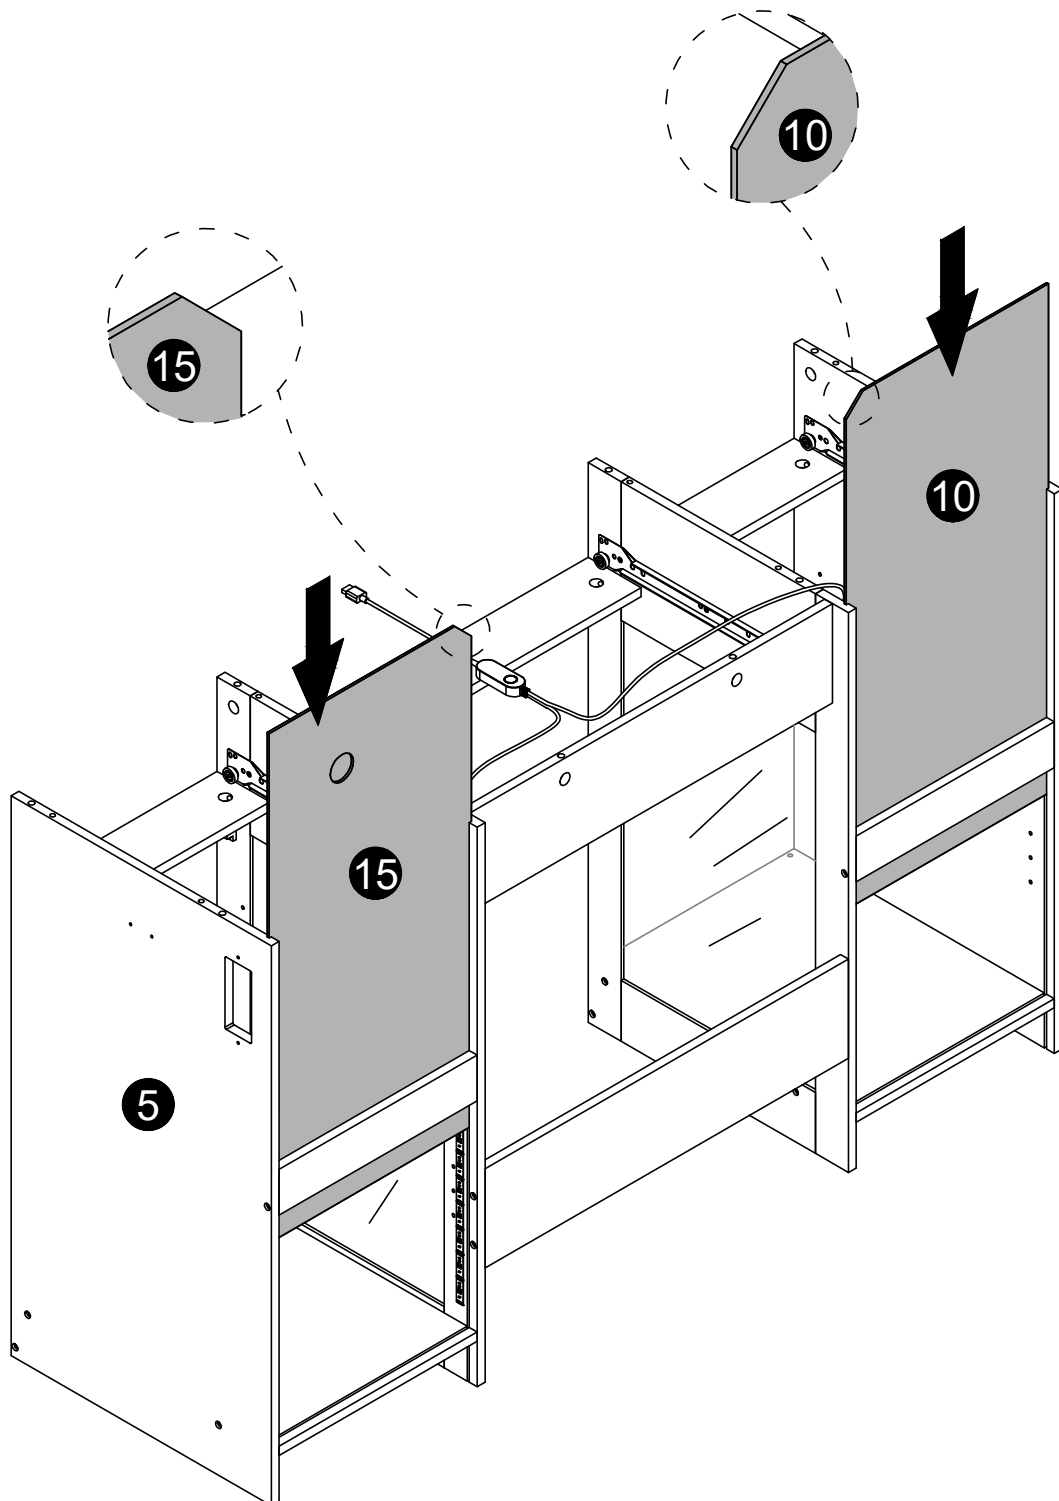



A x3



B x3





D x2

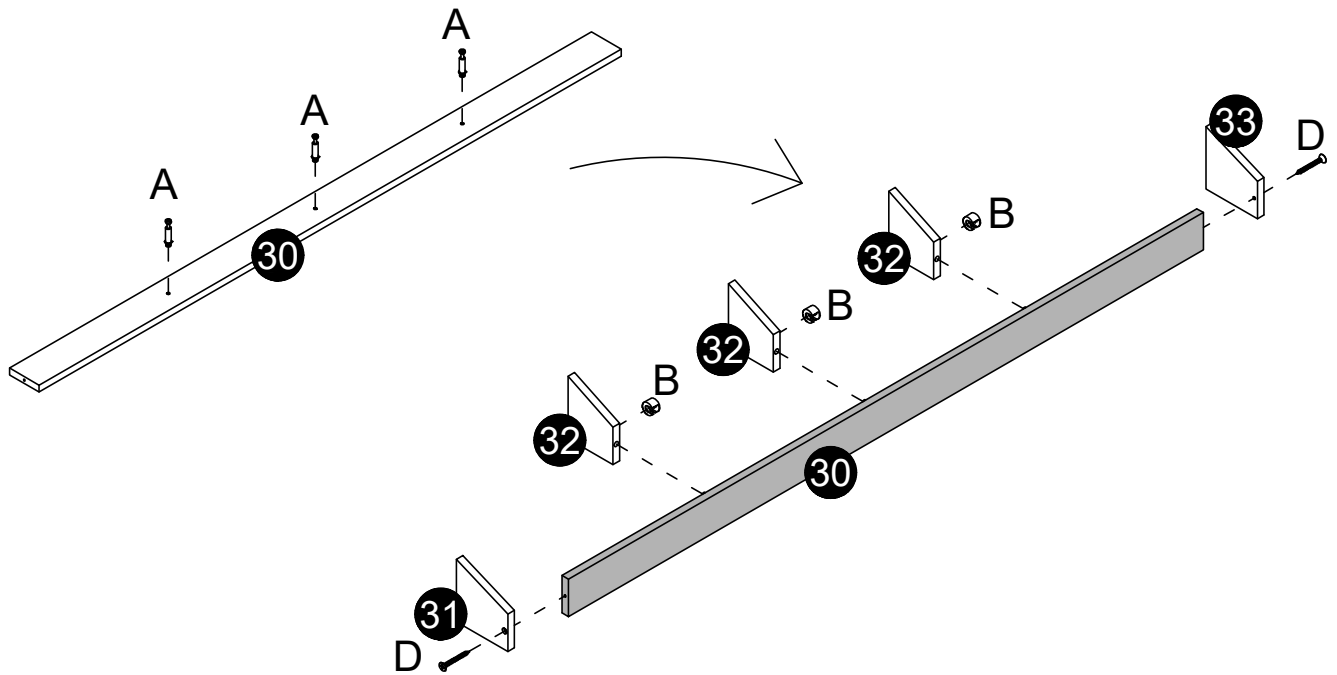


C x5




D x5

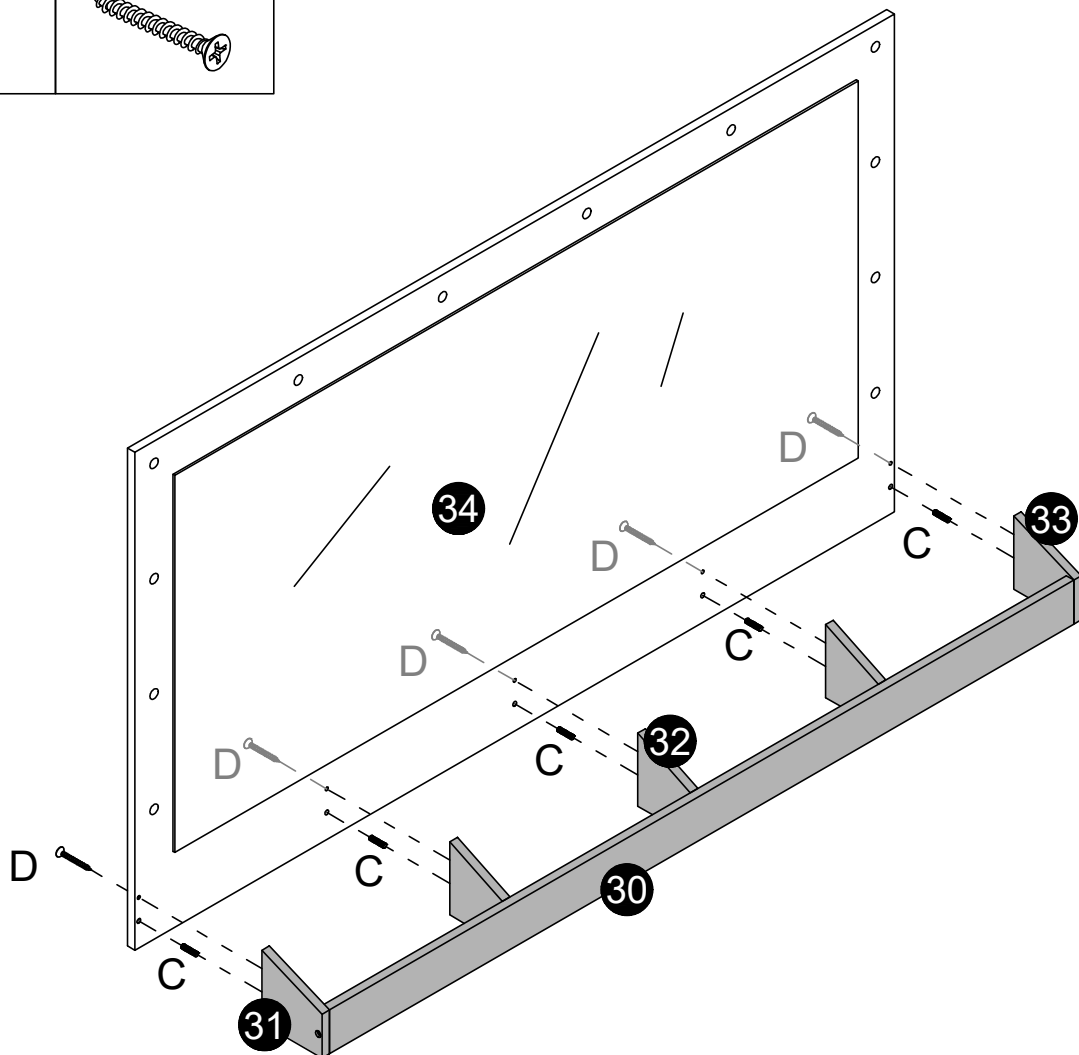

A x10




17

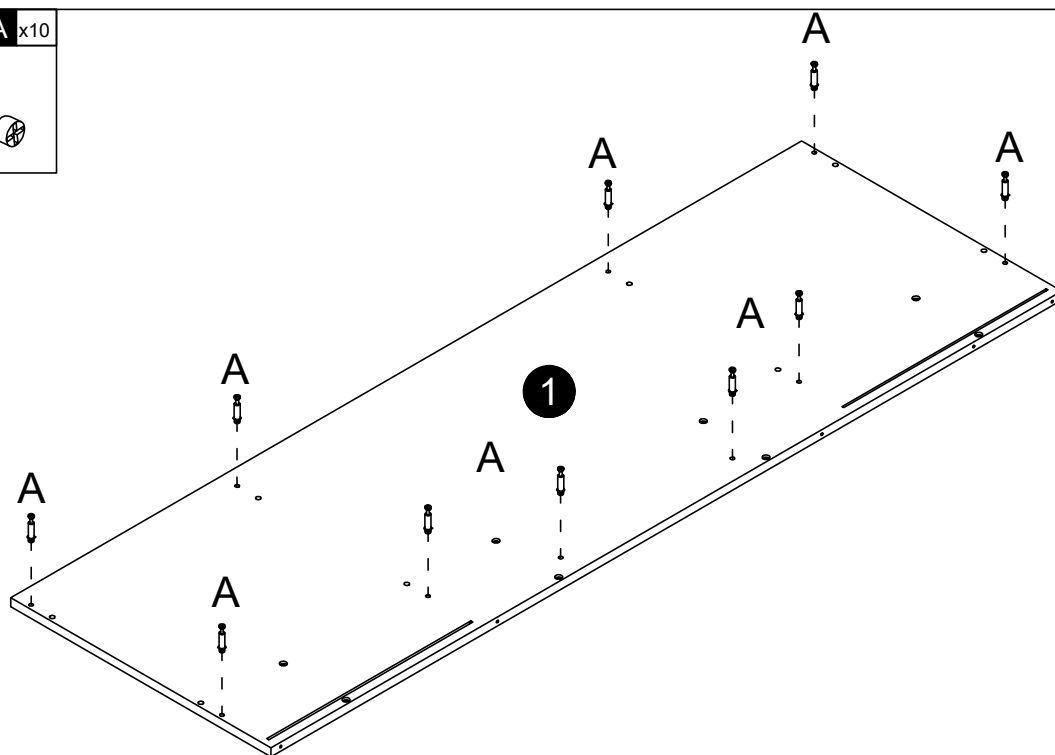


C x8



D x8




18

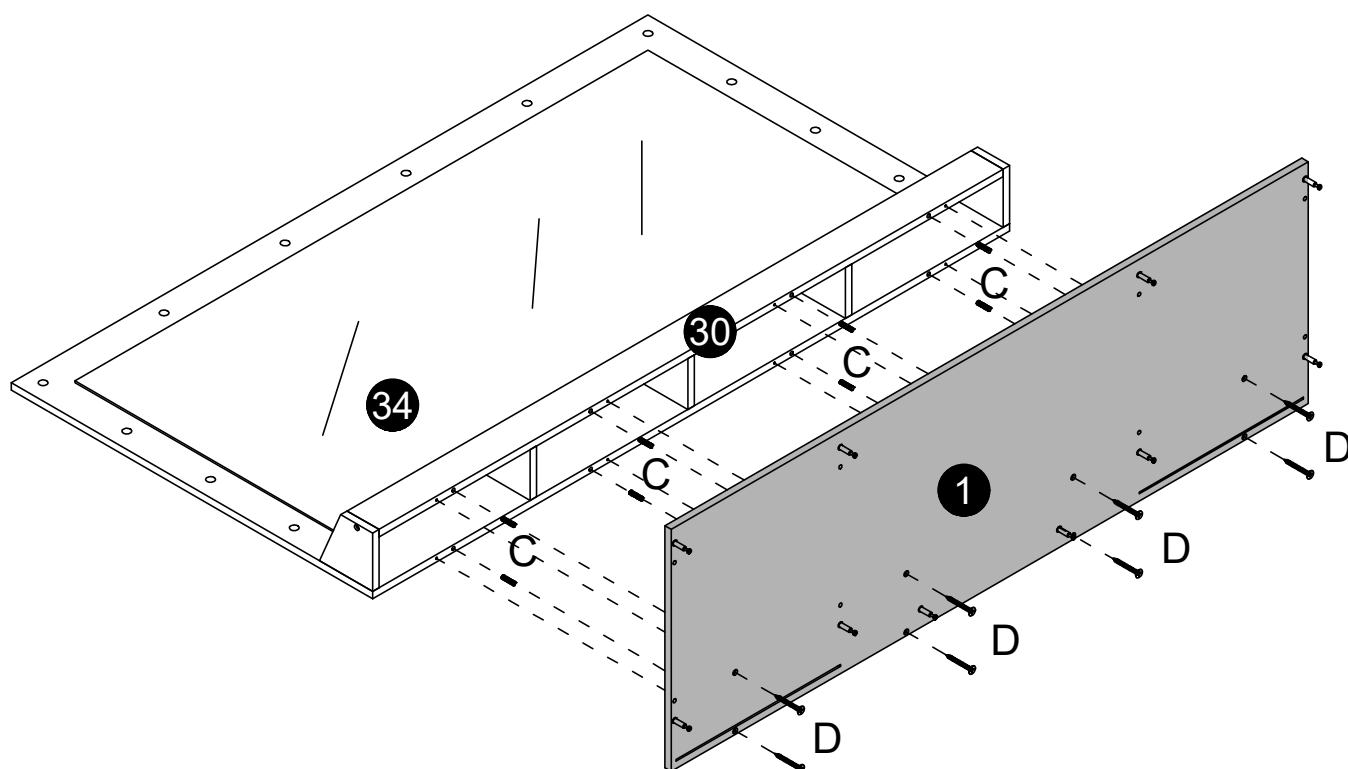


B x10




C x8

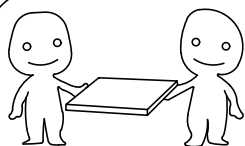

**Need Two or More
People To Complete**

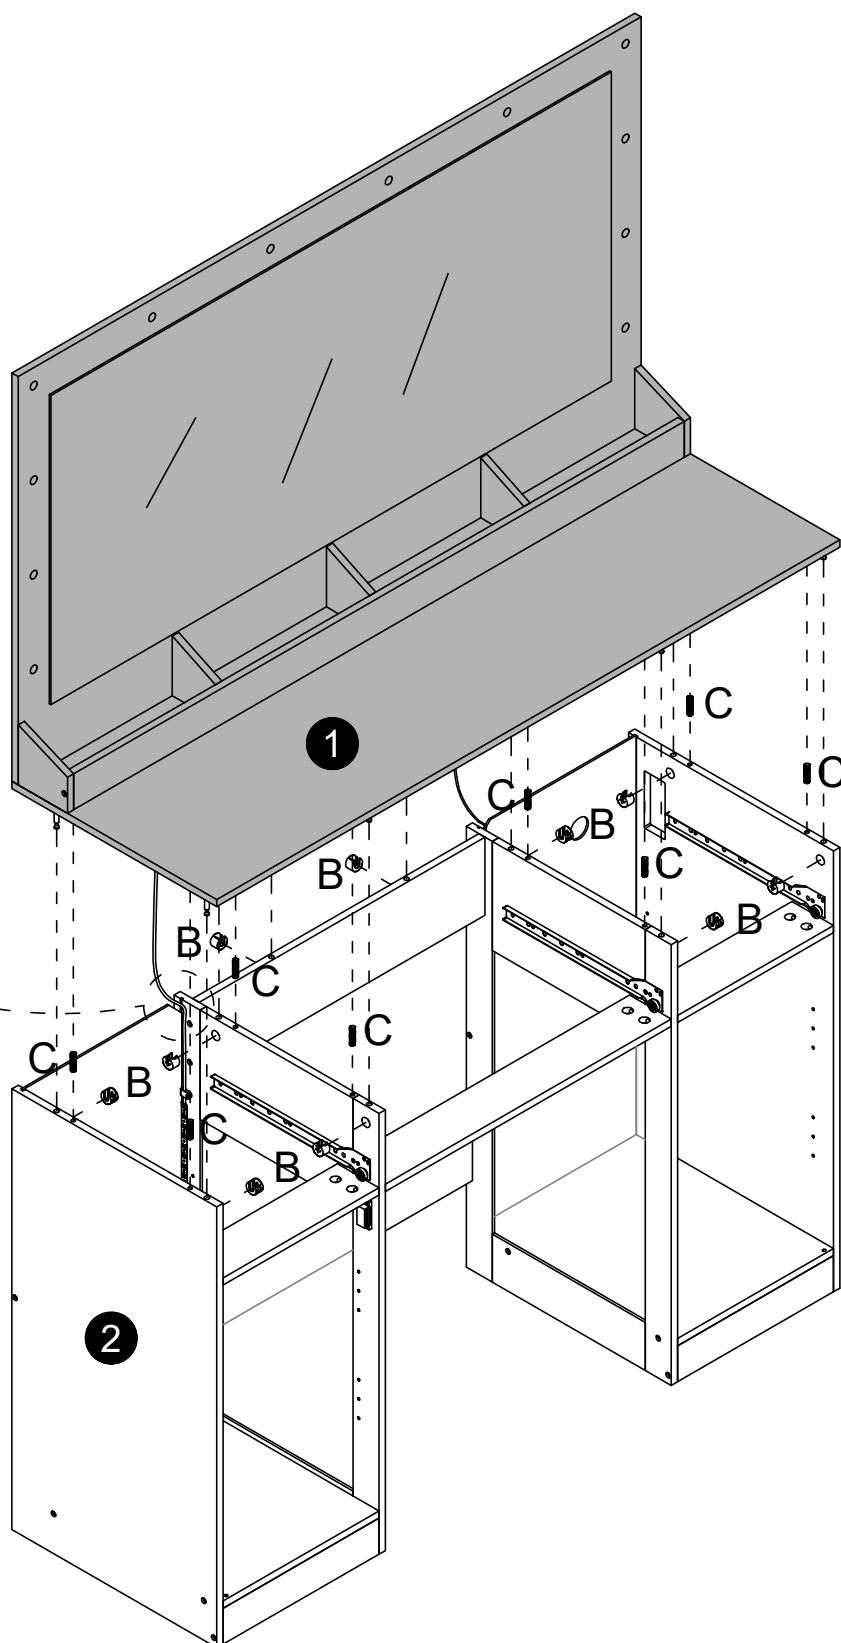

L x1



M x2



Q x1



Q-1




Q-2

Q-1
Q-2

M

M

5



M

L







x12
K-3



x12
K-4

K x1

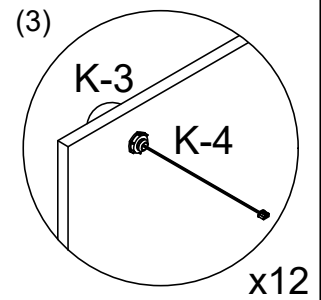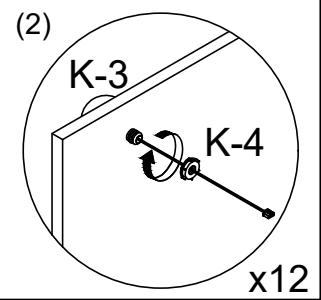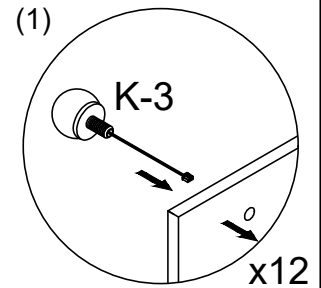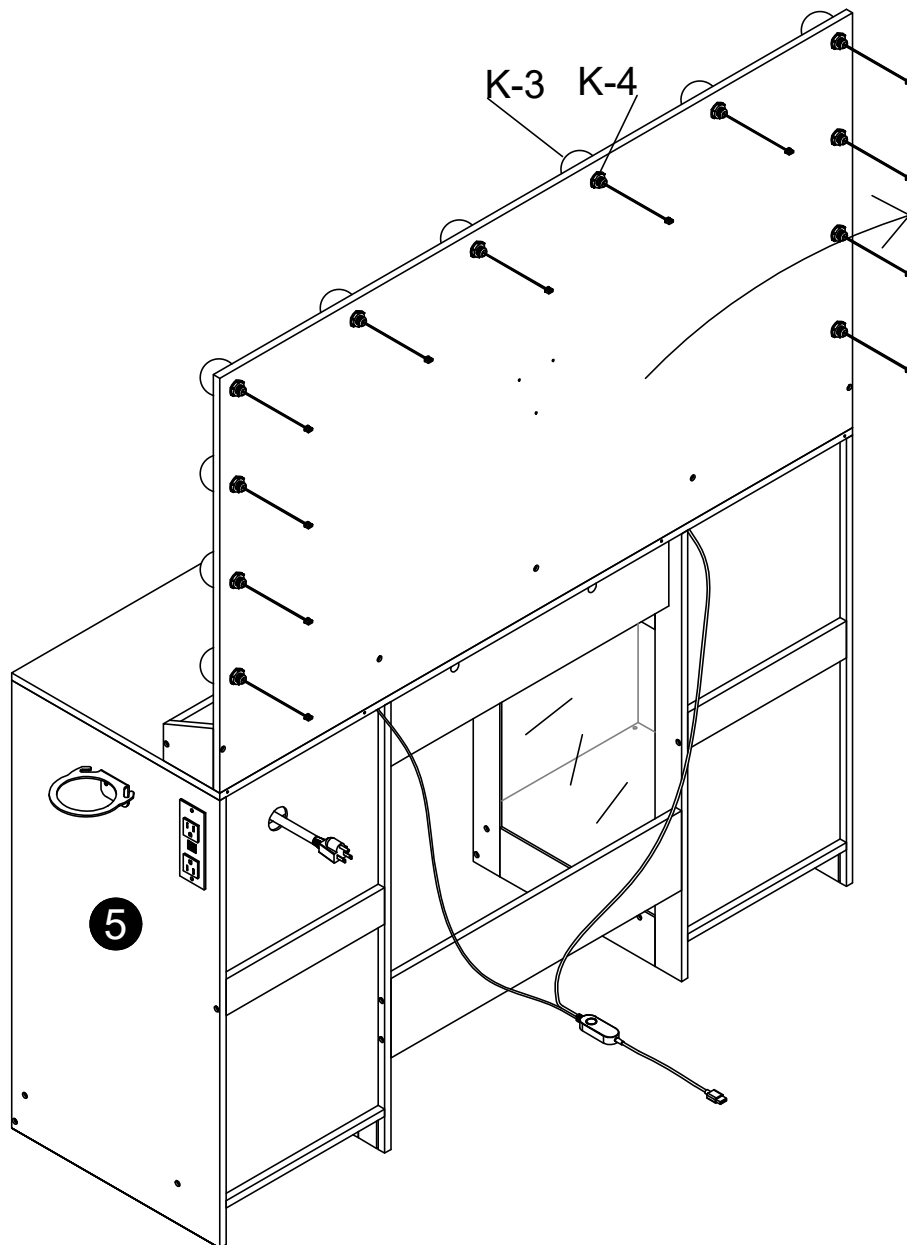



x1
K-1



x1
K-2






K x1



O x3





P x1

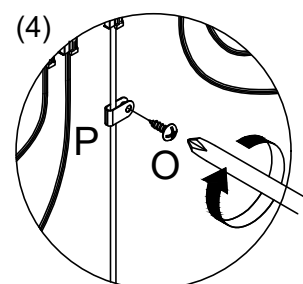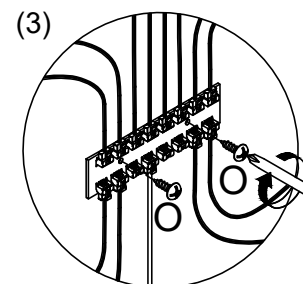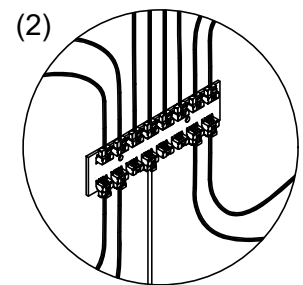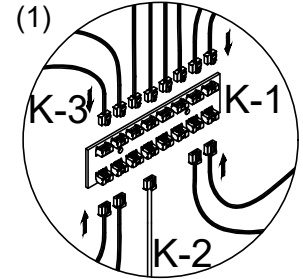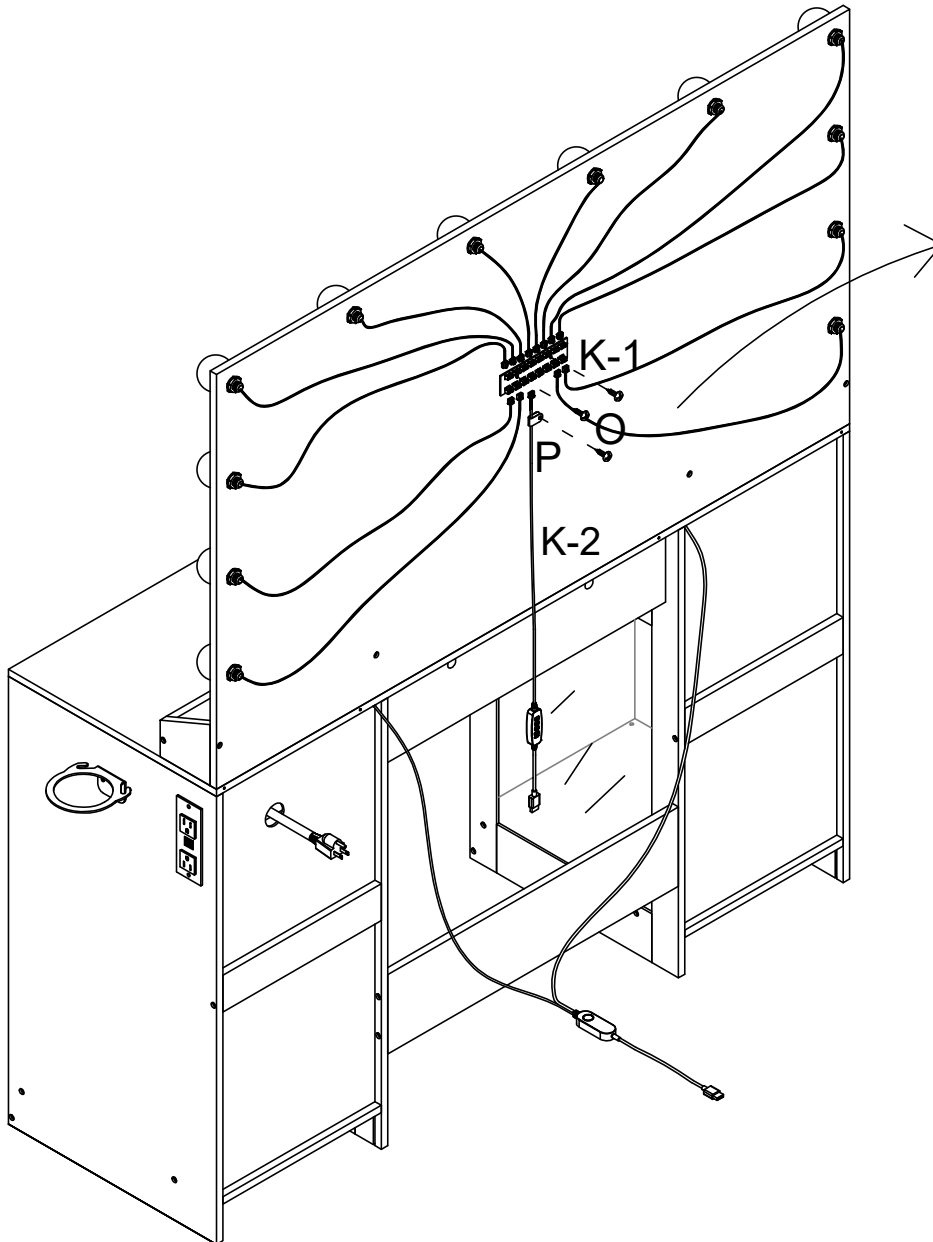

O x2




P x2



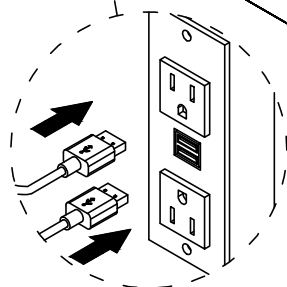
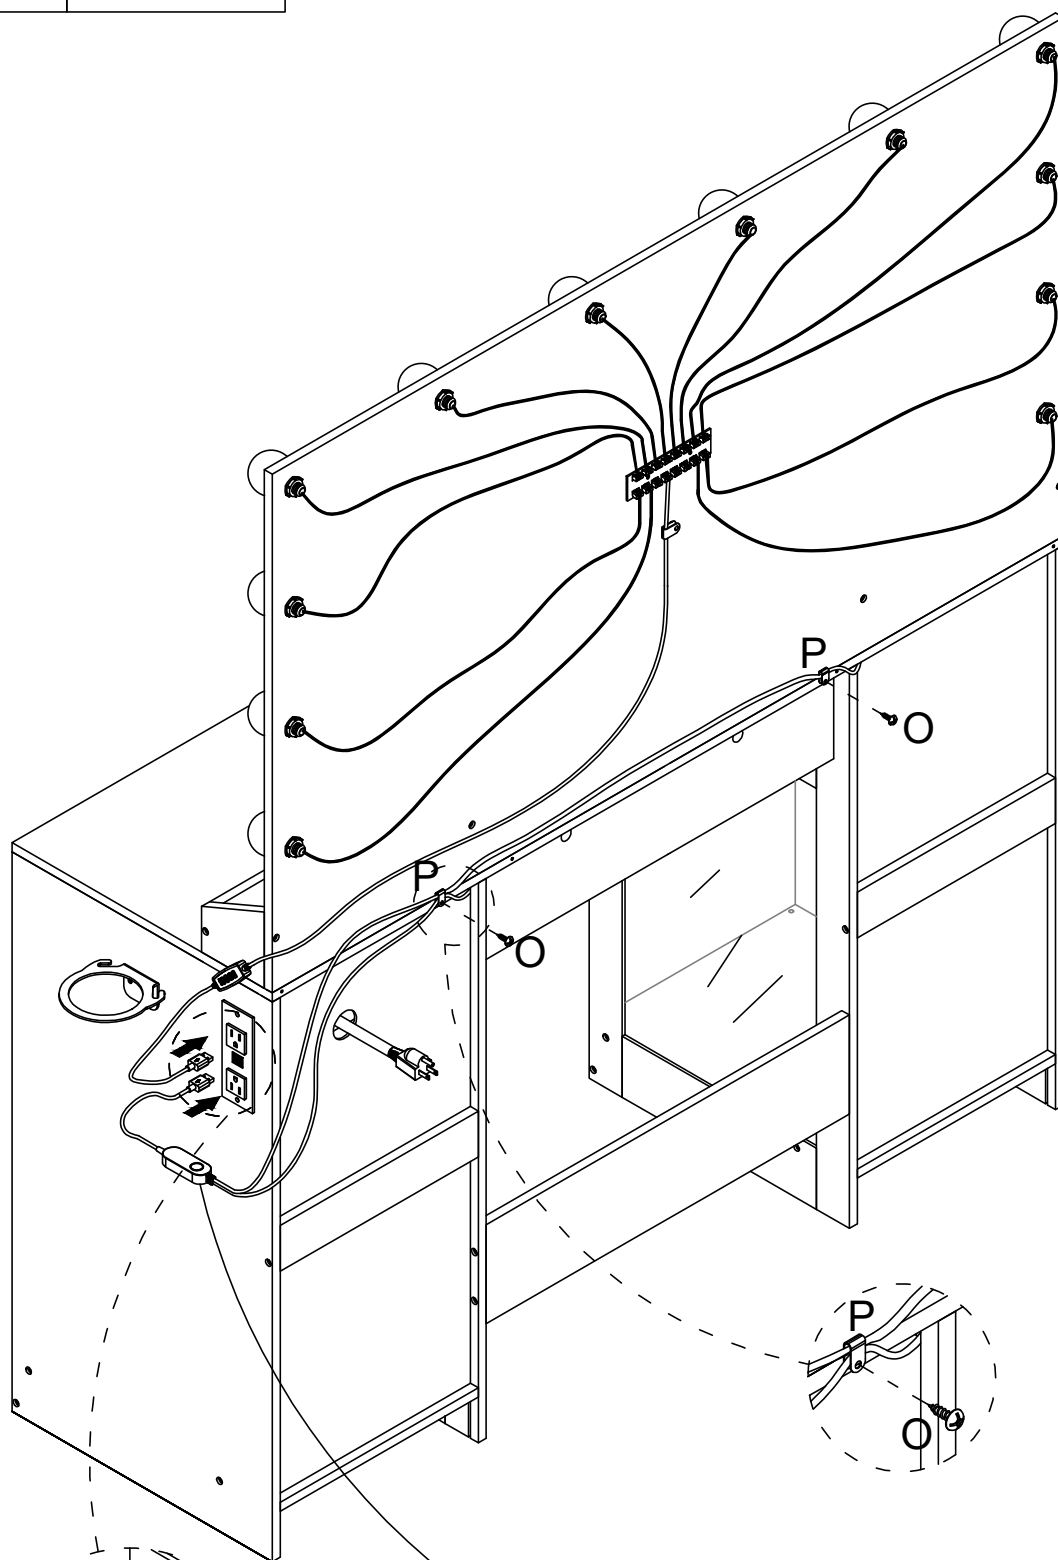



Scan qr code to download APP
Bluetooth control


OR

Flip to the other side for
key control

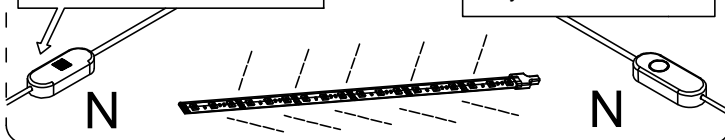

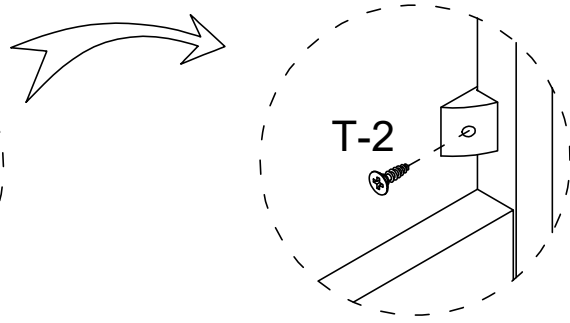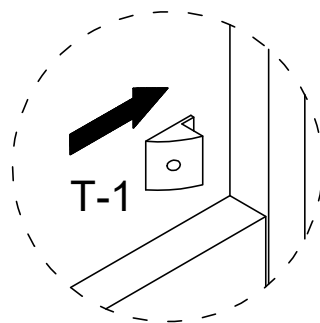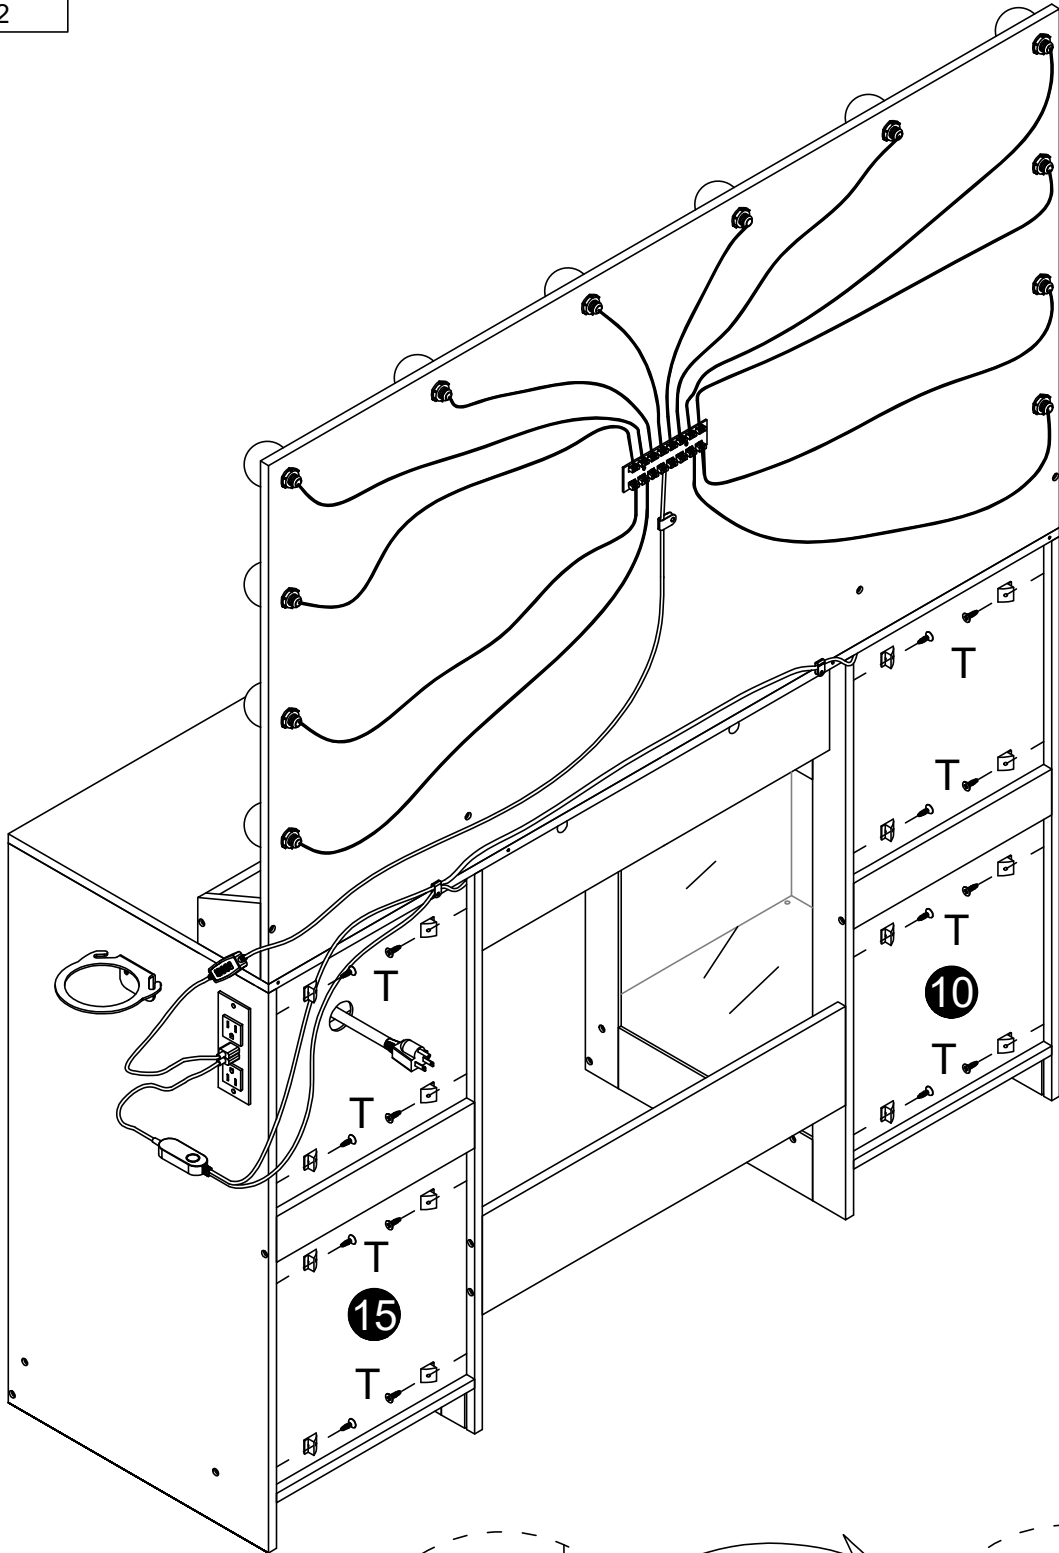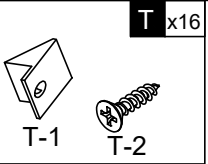

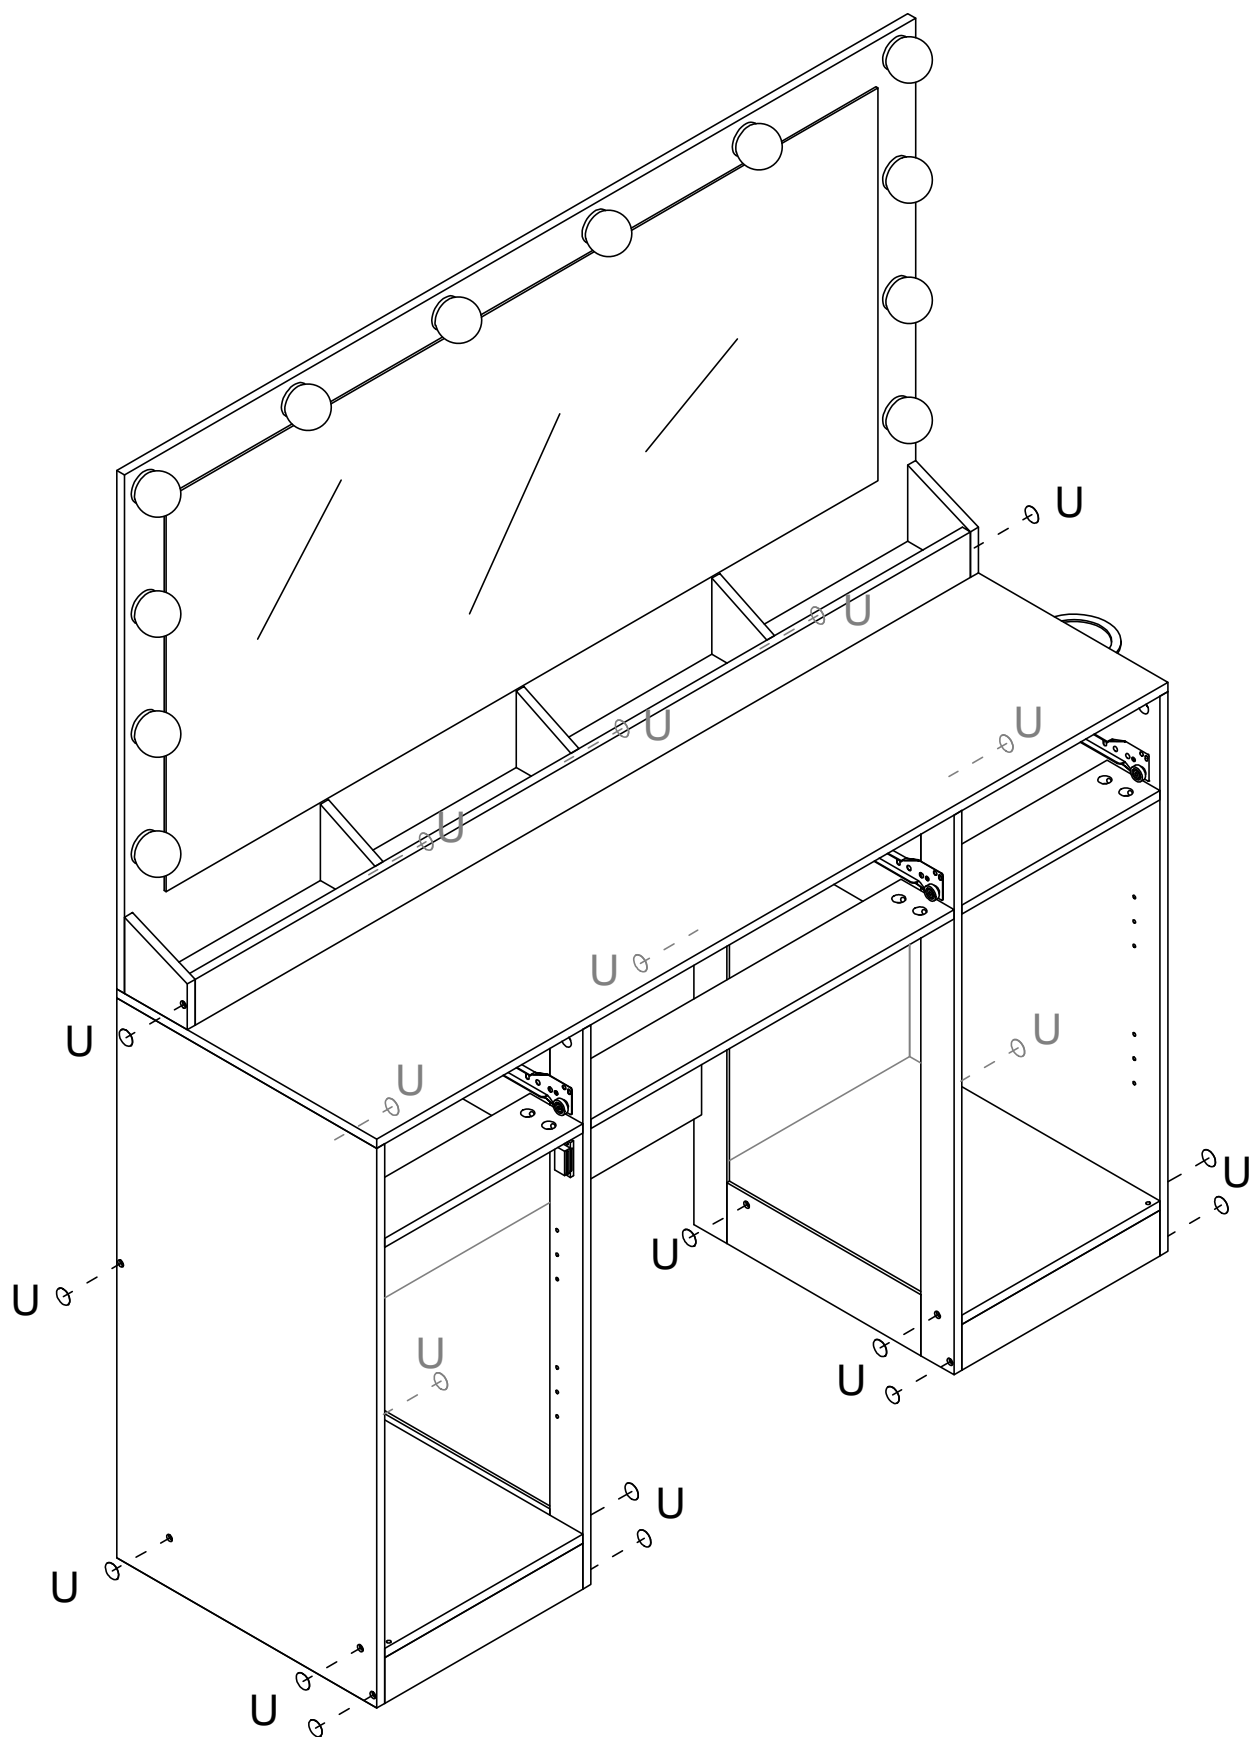

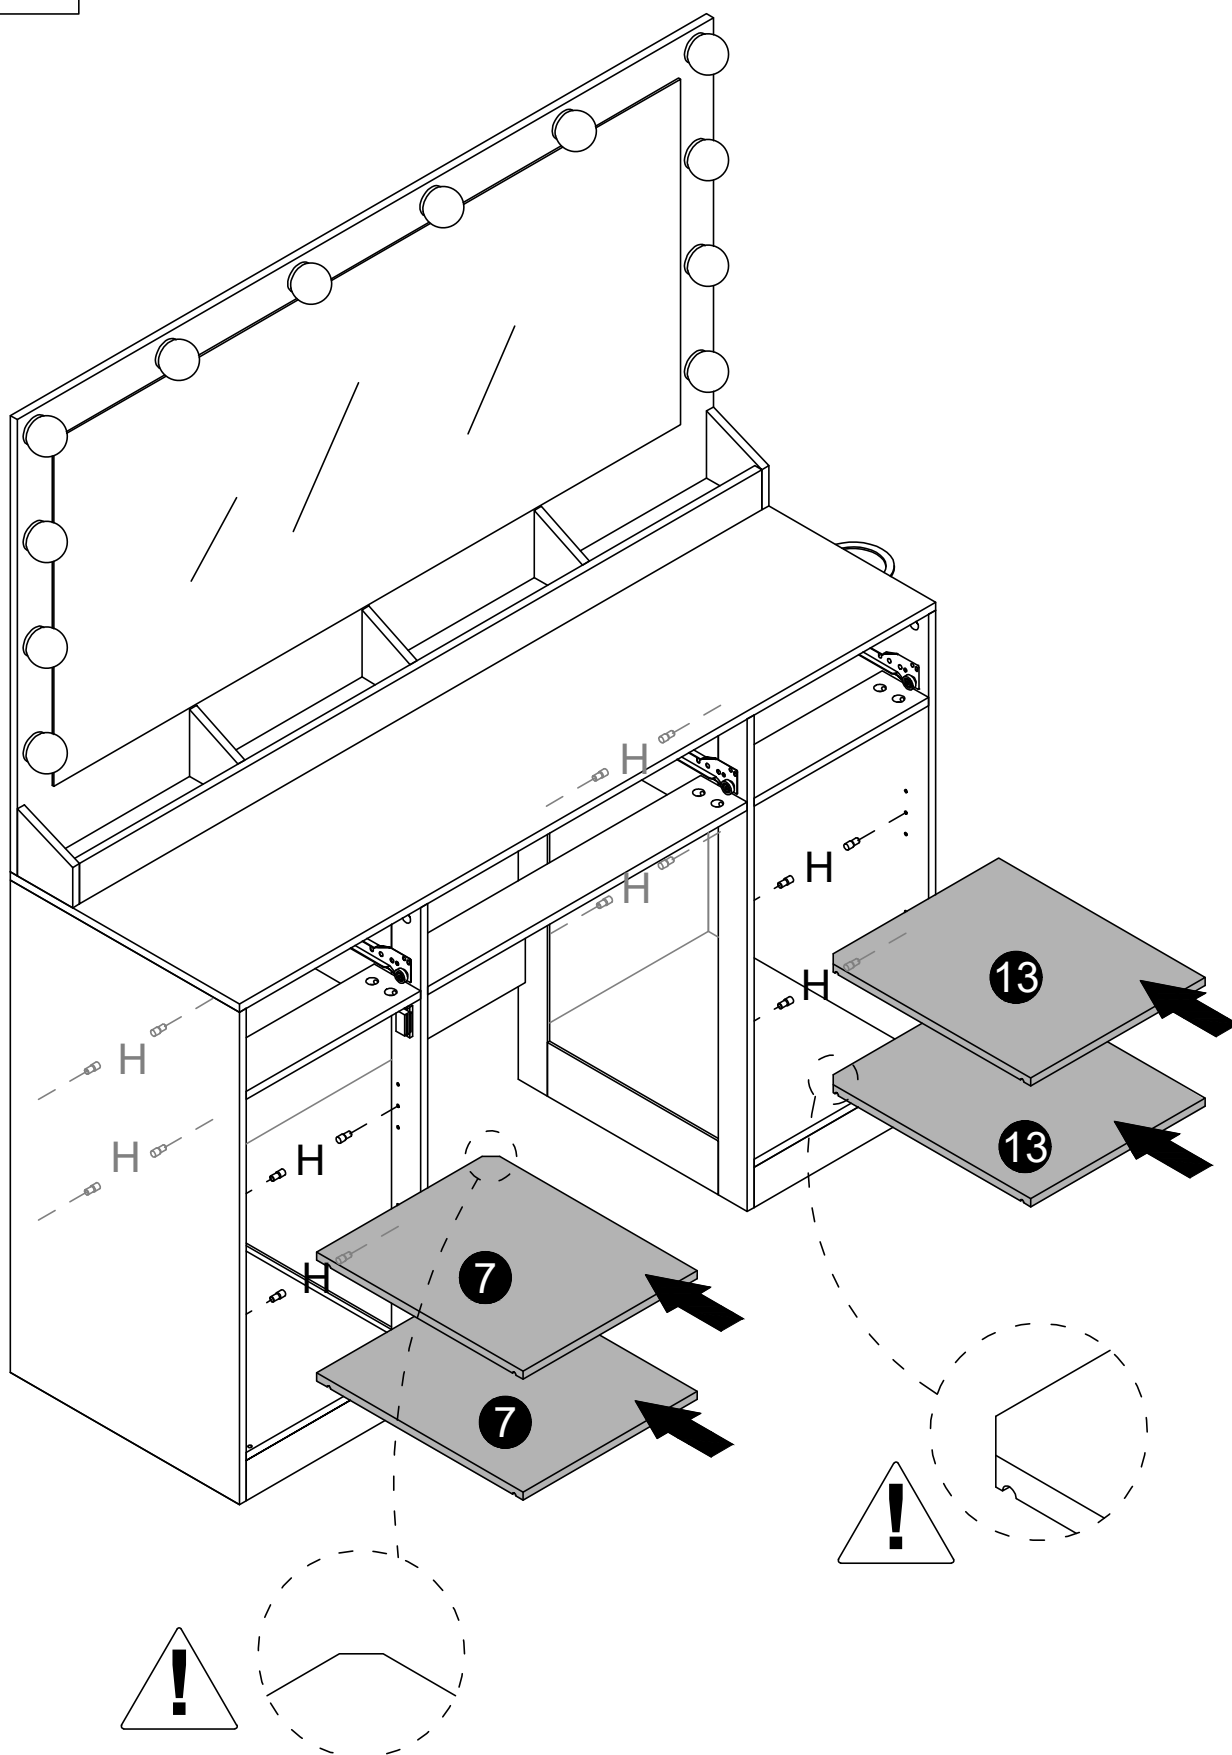

E x4



F x2




F-1






F-2


I x2





J x4

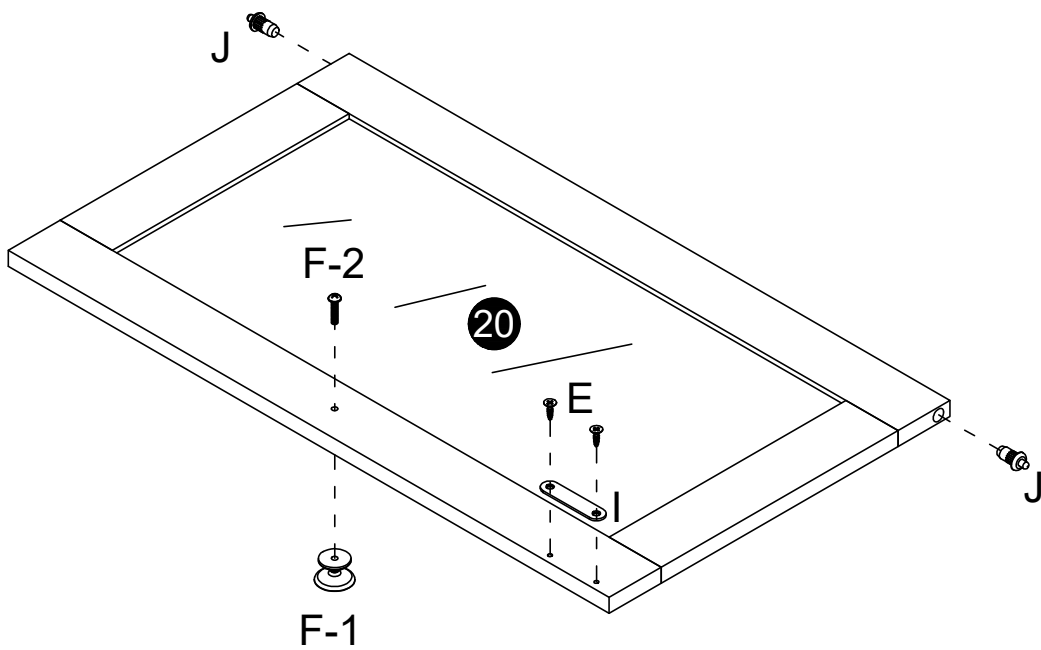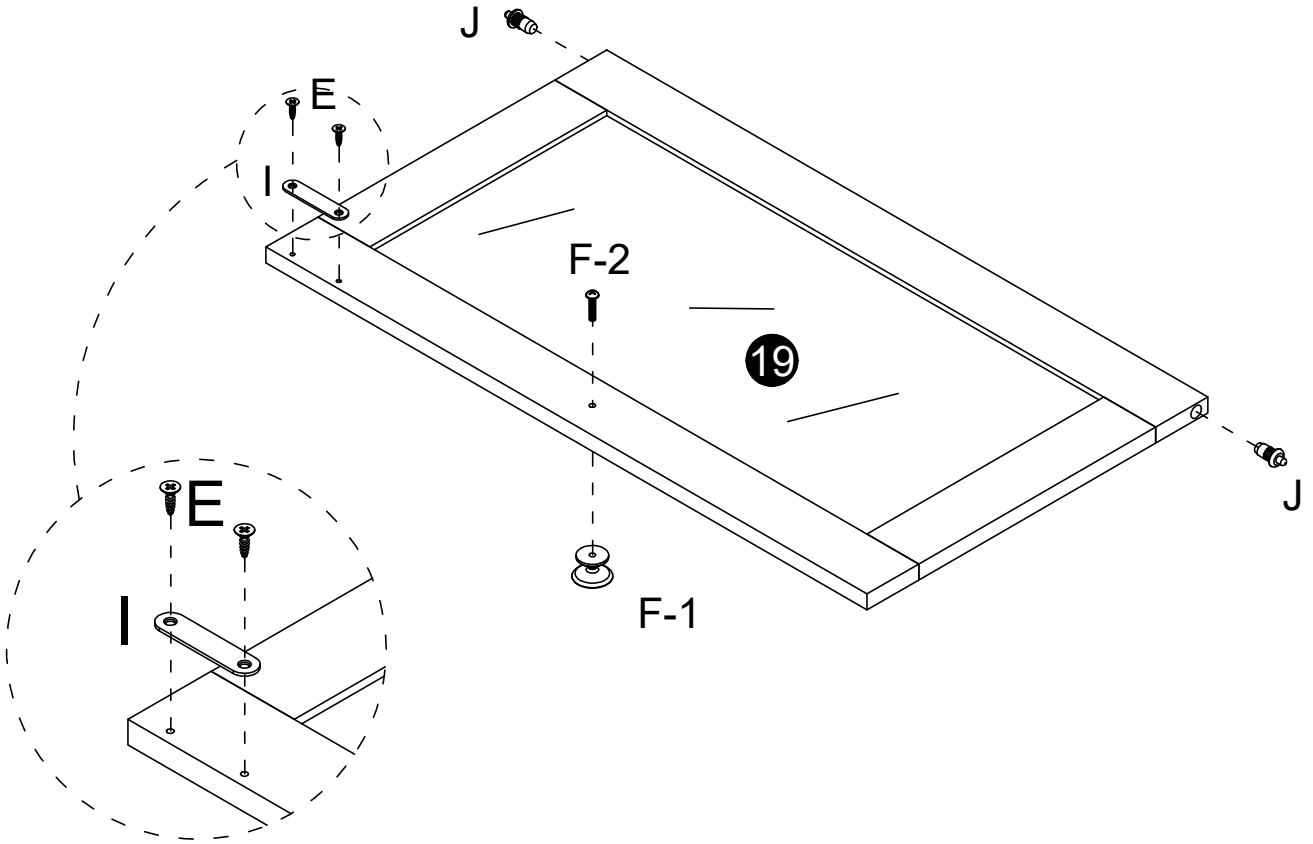

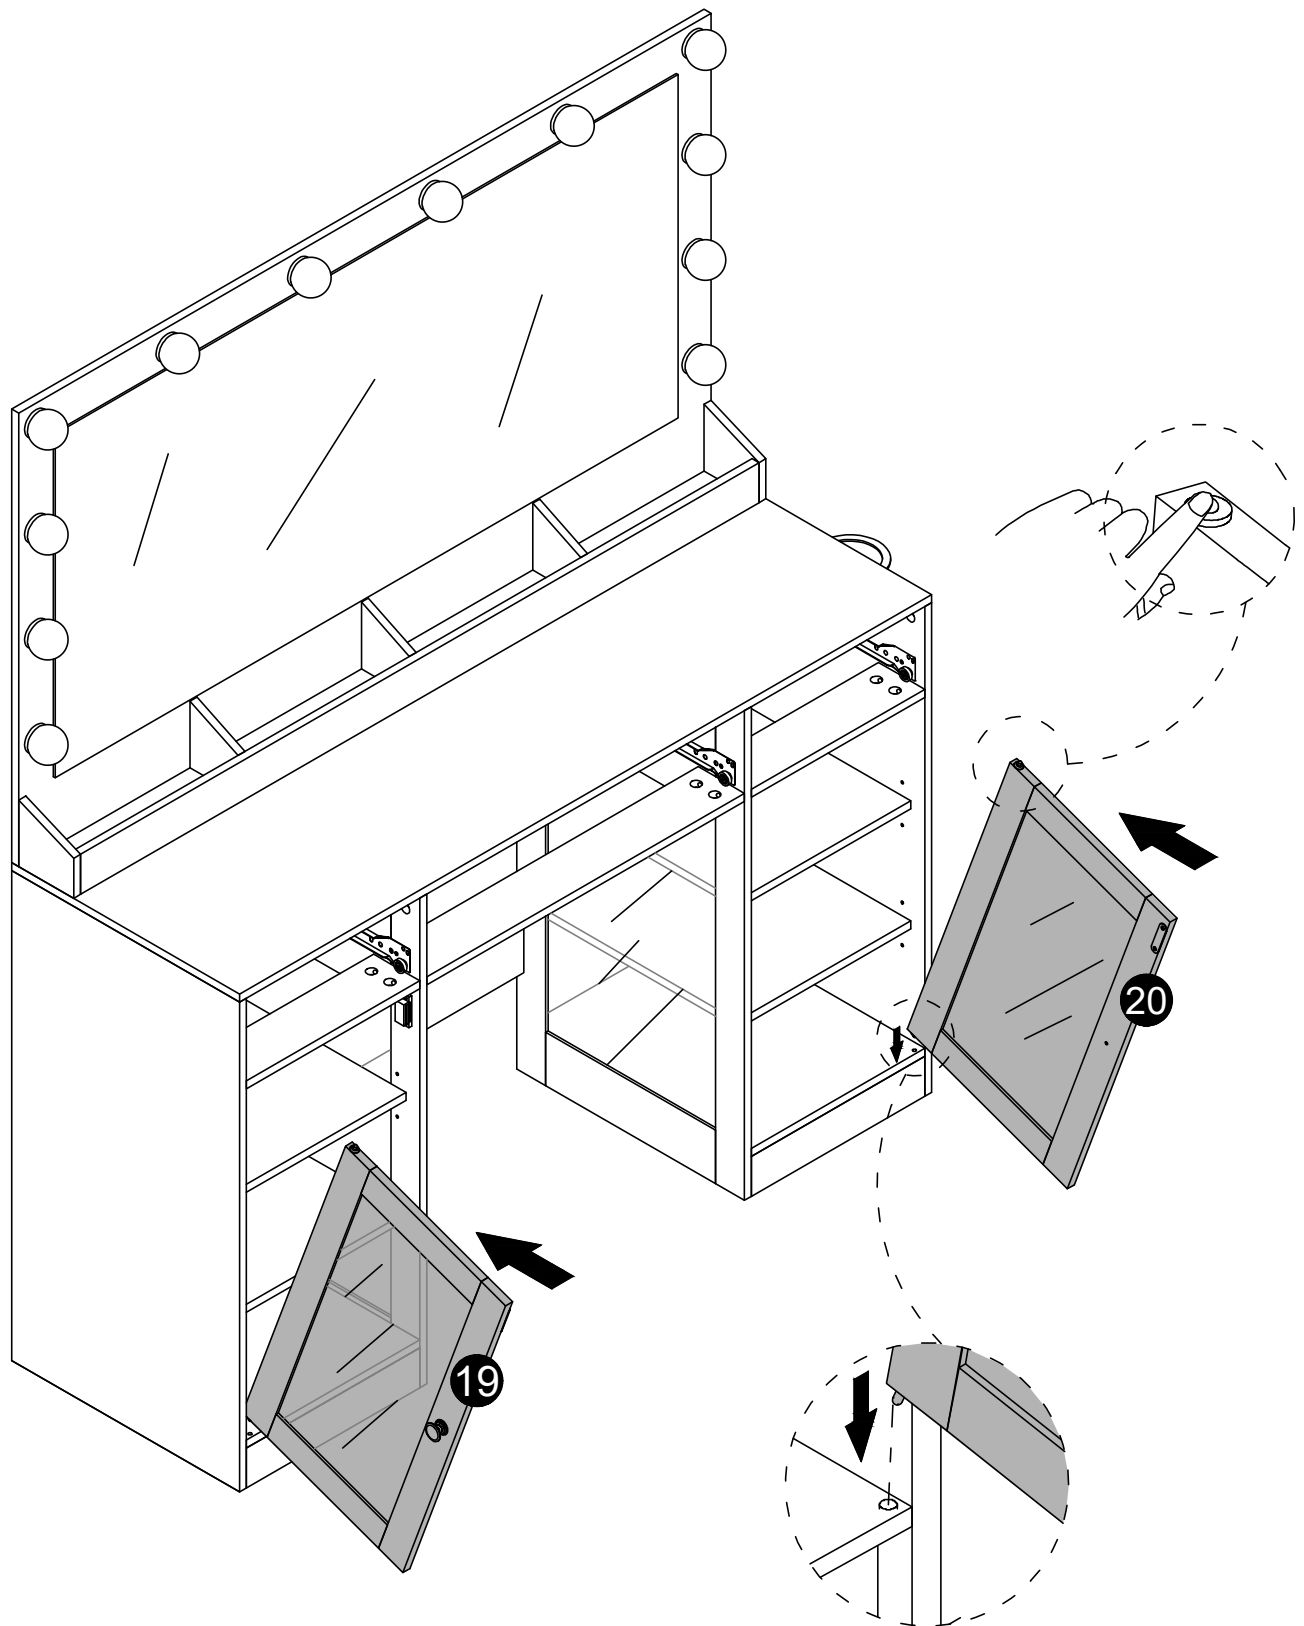


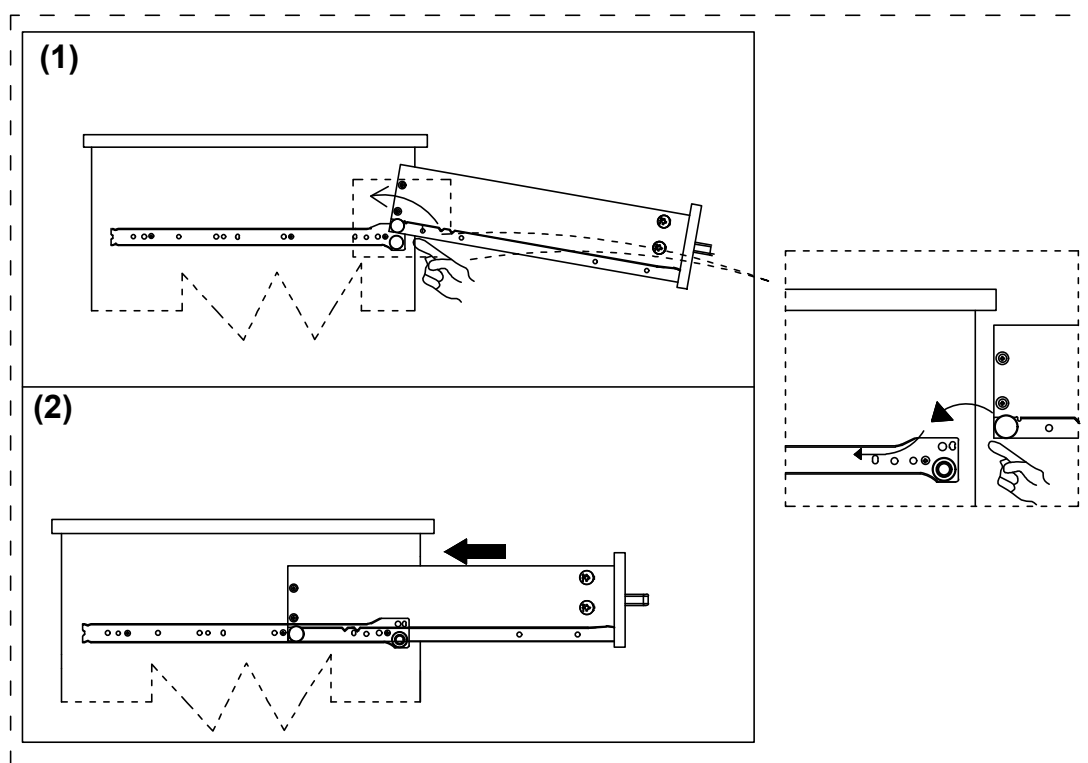


Please tear off the film on the outside of the mirror.

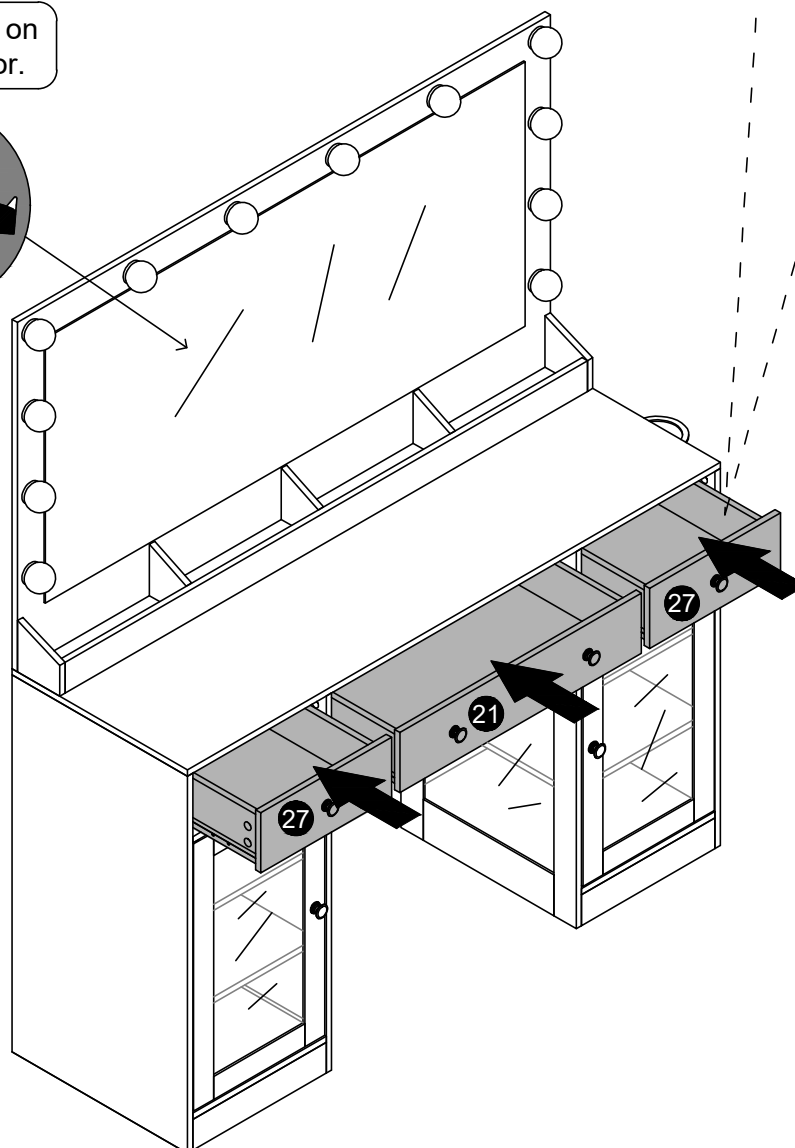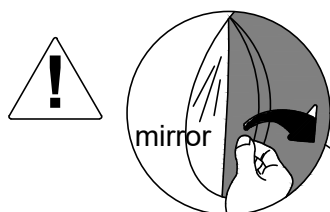


D x2



R x2




S x2



S-1




S-2

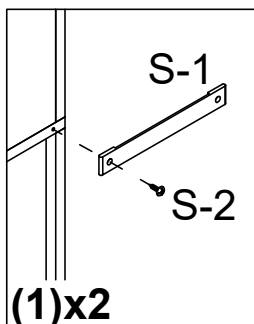


(1)x2

First fix the anti-rewind screw in the reserved hole of the product.

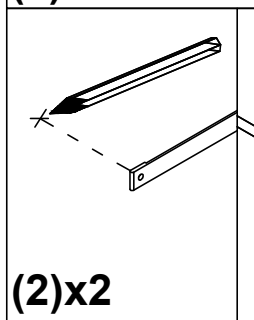


(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

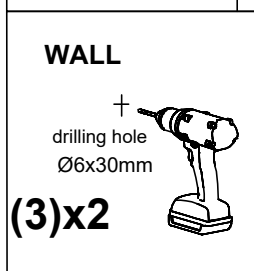


(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

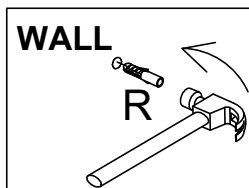

(4)x2

Then, put the expansion bolt into the hole

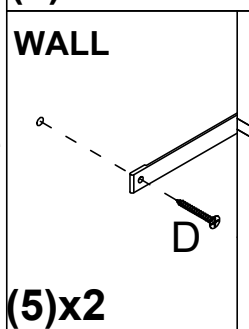

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

