


## Installation Guide

**TOOLS REQUIRED:**  
Wrench or Pliers

**1**

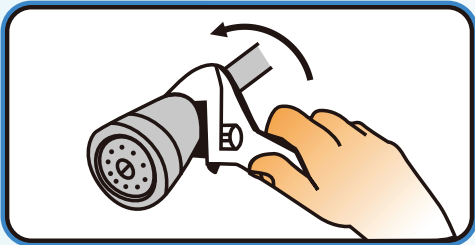


Remove the old shower head from shower arm using a wrench or pliers.

**2**




Apply thread seal tape (provided) onto the threads of the shower arm.

**3**

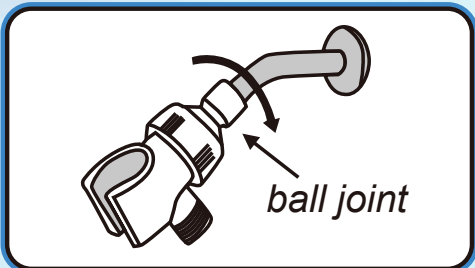


Clockwise screw and tighten the ball joint with wrench or pliers. Use cloth over tool to avoid scratching bracket surface.

**4**

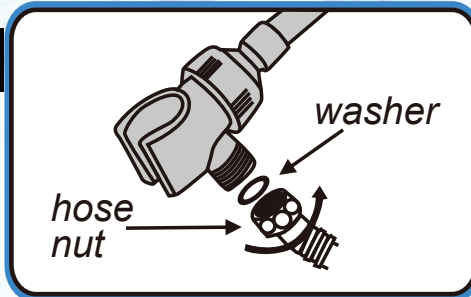


Place the washer (provided) into the hose nut and screw onto the end, do not over-tighten the nut with wrench.

**5**

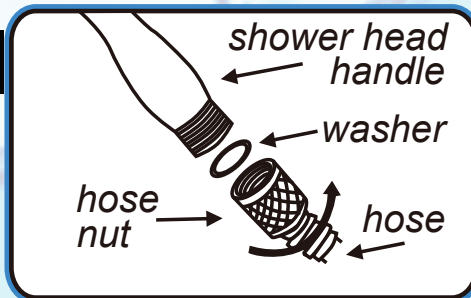

Assemble shower unit as shown above by placing the second washer (provided) into the nut at the other end of the hose and screw in the shower head.

**6**

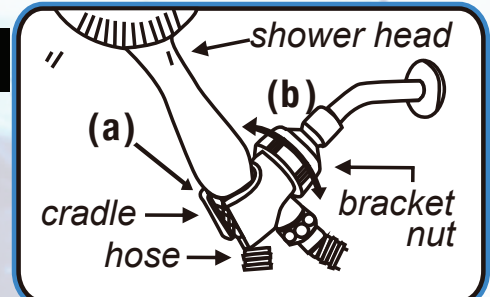

To use the hand shower as conventional shower head, place it into the cradle:  
a) Insert the hose through the opening in the cradle.  
b) Adjust shower position by slightly loosening the bracket nut.  
Tighten the bracket nut once the desired angle is reached.