

# ASSEMBLY INSTRUCTIONS

MODEL : WM2114-DC

**IMPORTANT NOTE :** \*

- PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.


HARDWARE LIST			PART LIST		
A	JCBC M6 x 50mm + S/W M6 + F/W M6 x 13mm	4PCS	1	ARM REST (L/R)	2PCS
B	JCBC M6 x 30mm + S/W M6 + F/W M6 x 13mm	8PCS	2	TOP REST	1PC
C	ALLEN KEY M4 (BALL SHAPE)	1PC	3	FRONT & BACK STRETCHER	2PCS
D	WOOD BUTTON Ø14.5mm	4PCS	4	CUSHION SEAT	1PC
E	PROTECTIVE DISC 22MM	4PCS			

## CAUTIONS :


- ( 1 ) DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.  
( TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS. )
- ( 2 ) KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.

## STEP 2


### STEP 1

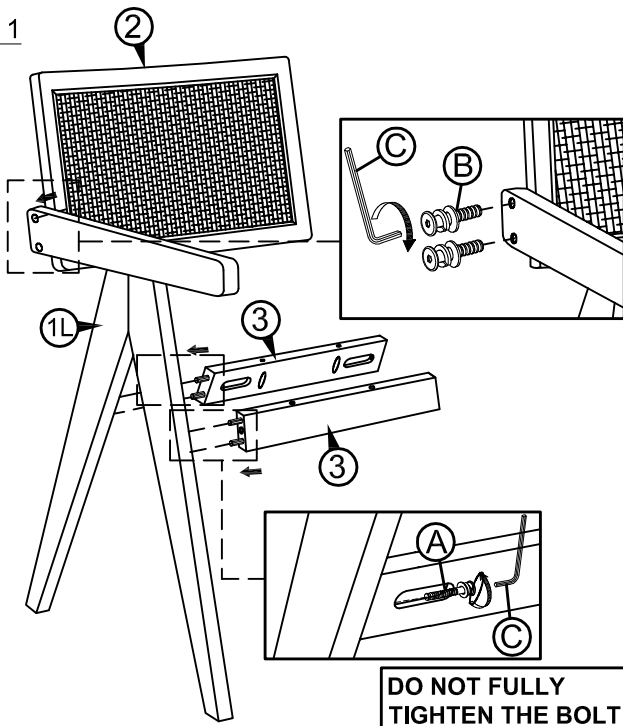


## STEP 2

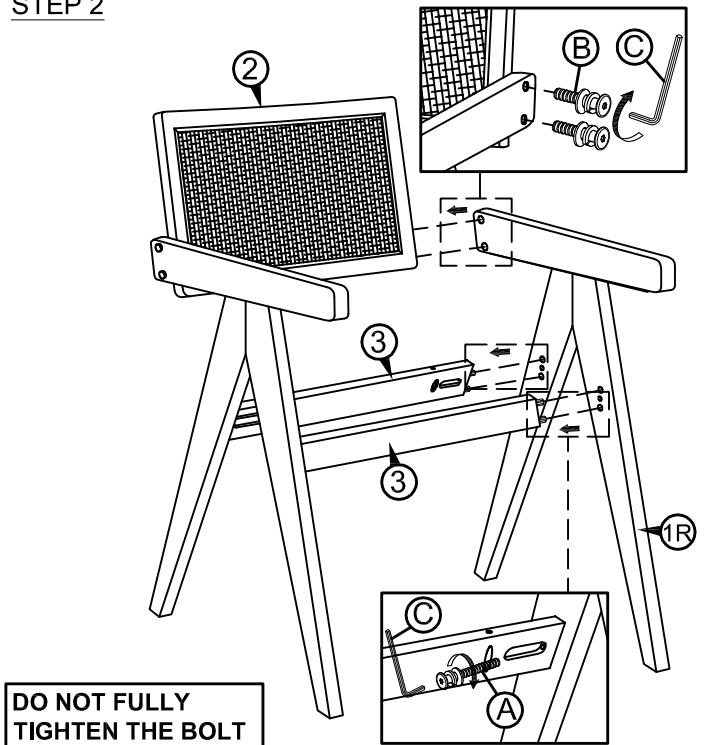

### STEP 3

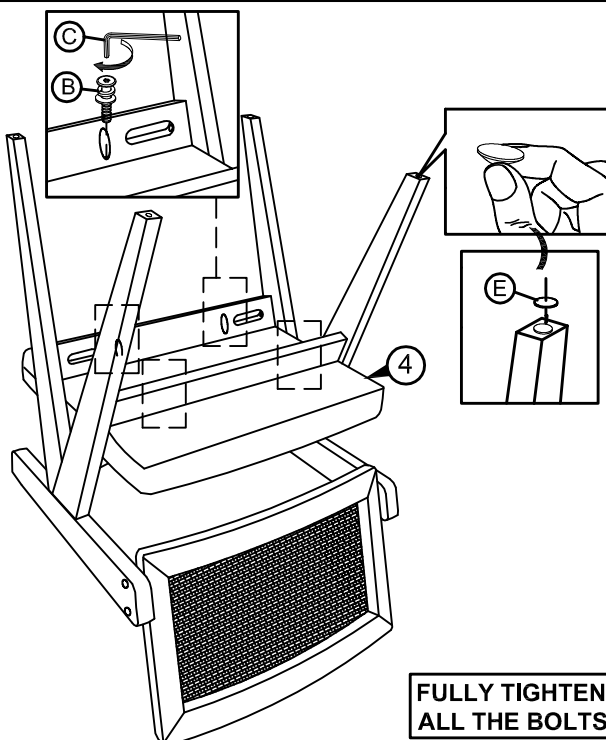

### STEP 4

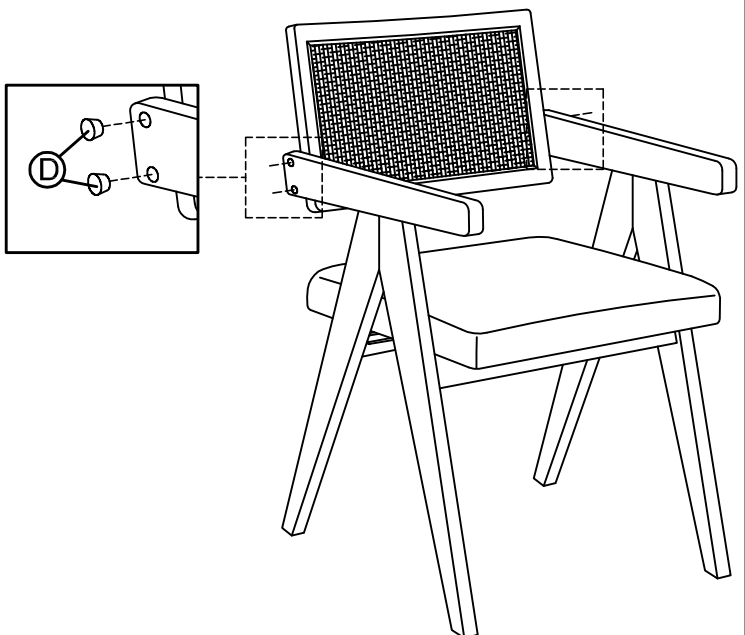

COMPLETED CHAIR ASSEMBLY.