

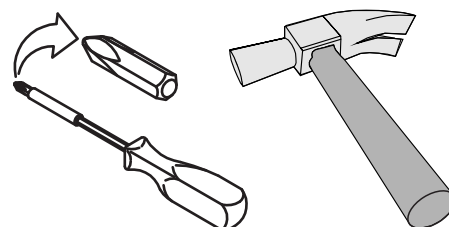
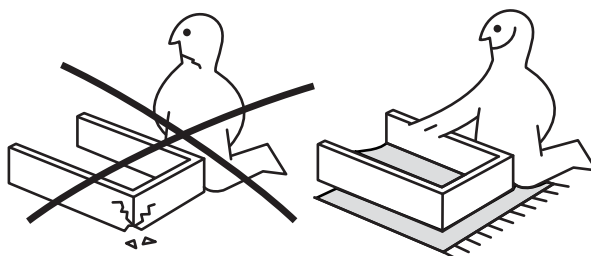


# ASSEMBLY INSTRUCTIONS

## 6-DRAWER DOUBLE DRESSER

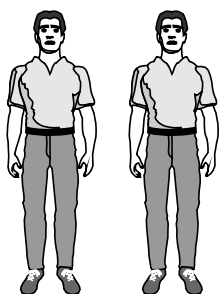


Thank you for choosing a product. Your total satisfaction is our #1 priority.

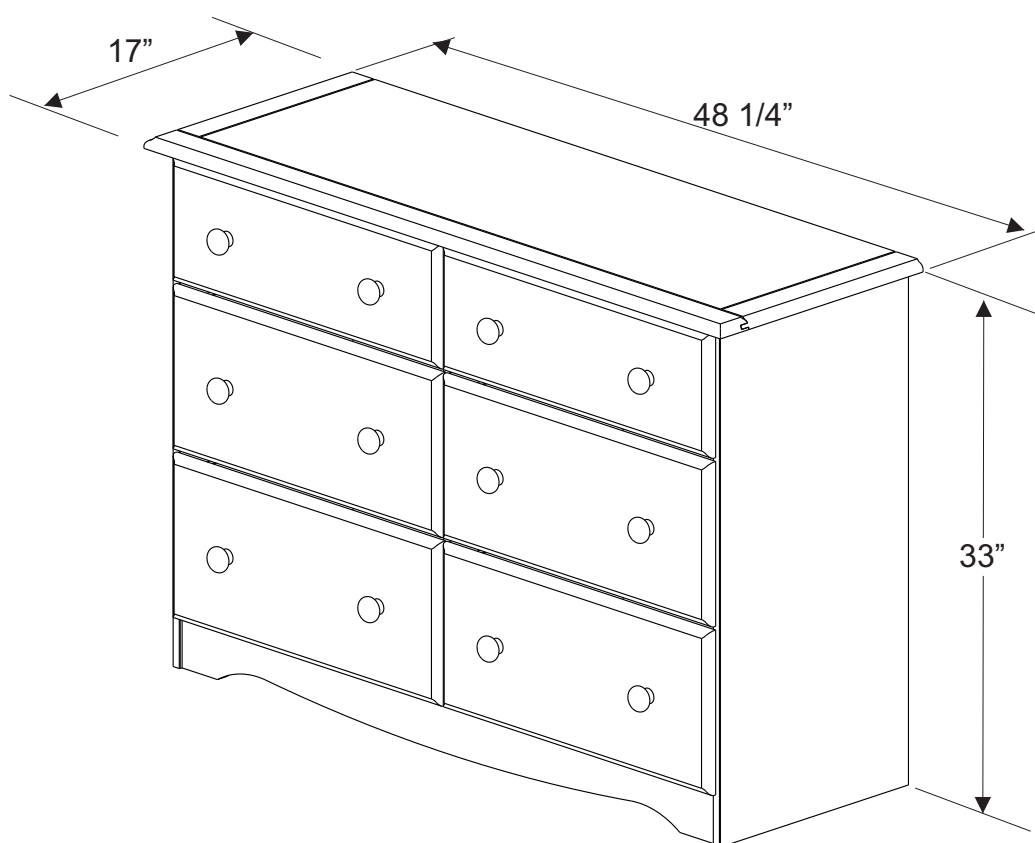









#### Customer Service and warranty information

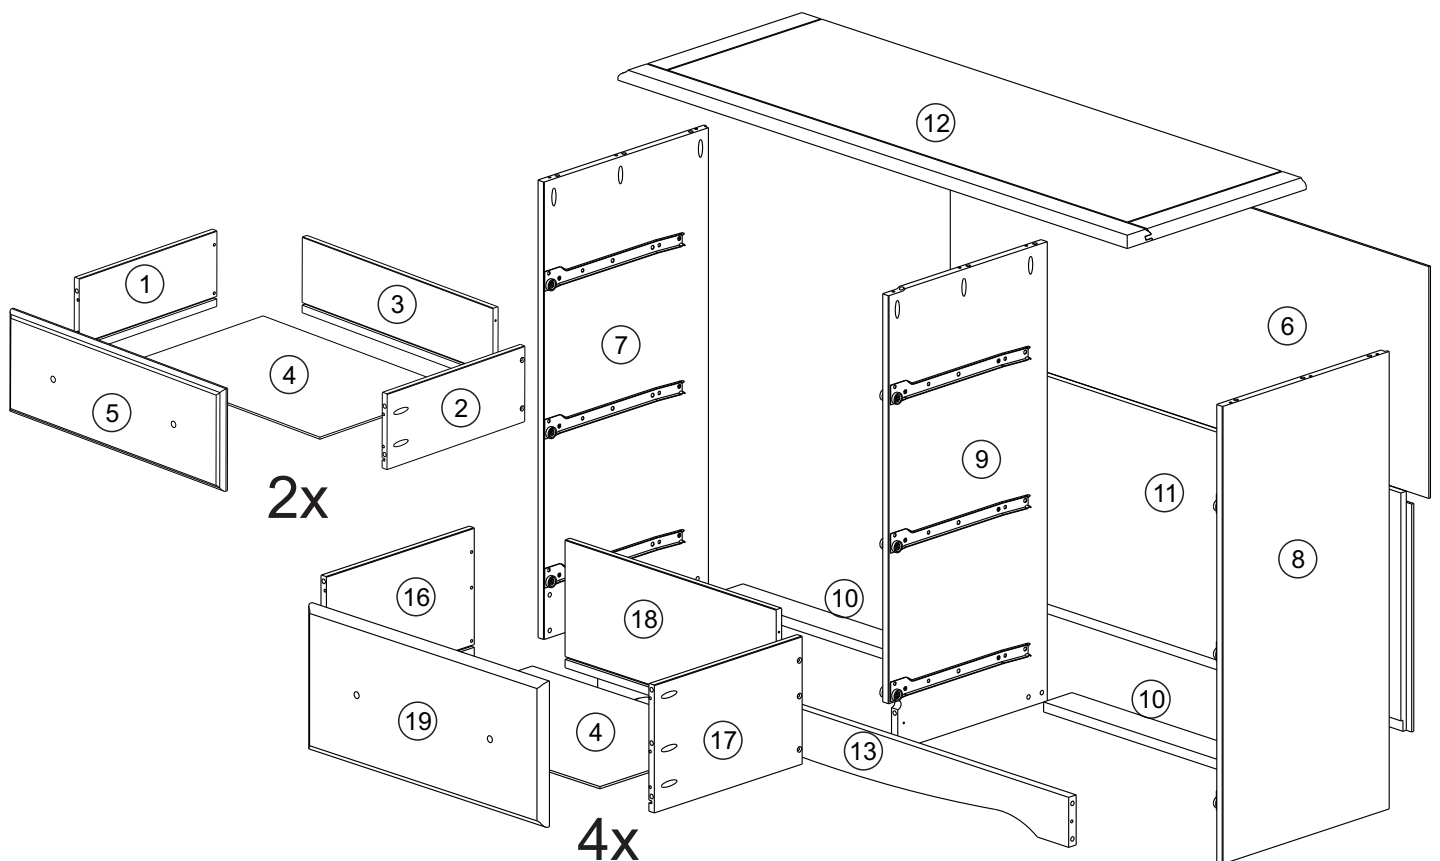- Products are warranted to the original purchaser against defects in material or workmanship in the furniture. Defects as mentioned in this warranty refer to any imperfections which may impair the use of the product. Our warranty is expressly limited to the replacement of furniture parts and components for one year following the date of purchase.
- We will replace any part that is defective. This warranty applies under conditions of normal use. Our furniture products are not intended for outdoor use. The warranty does not cover defects caused by improper assembly or disassembly, defects occurring after purchase due to product modifications, intentional damage, accident, misuse, exposure to the elements and labor or assembly costs.
- We reserves the right to request proof of purchase to document a warranty claim. In no event shall be liable for incidental or consequent damages resulting from the misuse of the product.

## PARTS LIST AND LAYOUT



SCREWS ARE SHOWN IN ACTUAL SIZE




A1	 4,0x30	82+4
A9	 3,5x16	31+2
A41	 4,0x30	12+1
A42	 4,0x14	24+1
C2	 8,0x25	54+3
D16		01
E1	 330mm - 13"	06
E2	 330mm - 13"	06
G1	 10x10	34
H1		12




**WARNING:**  
**CHOKING HAZARD**

Small parts.  
Adult Supervision Required.


FURNITURE ANTI-TIP KIT

A8	 3,0x20	02 + 1
F8		02
F9		01

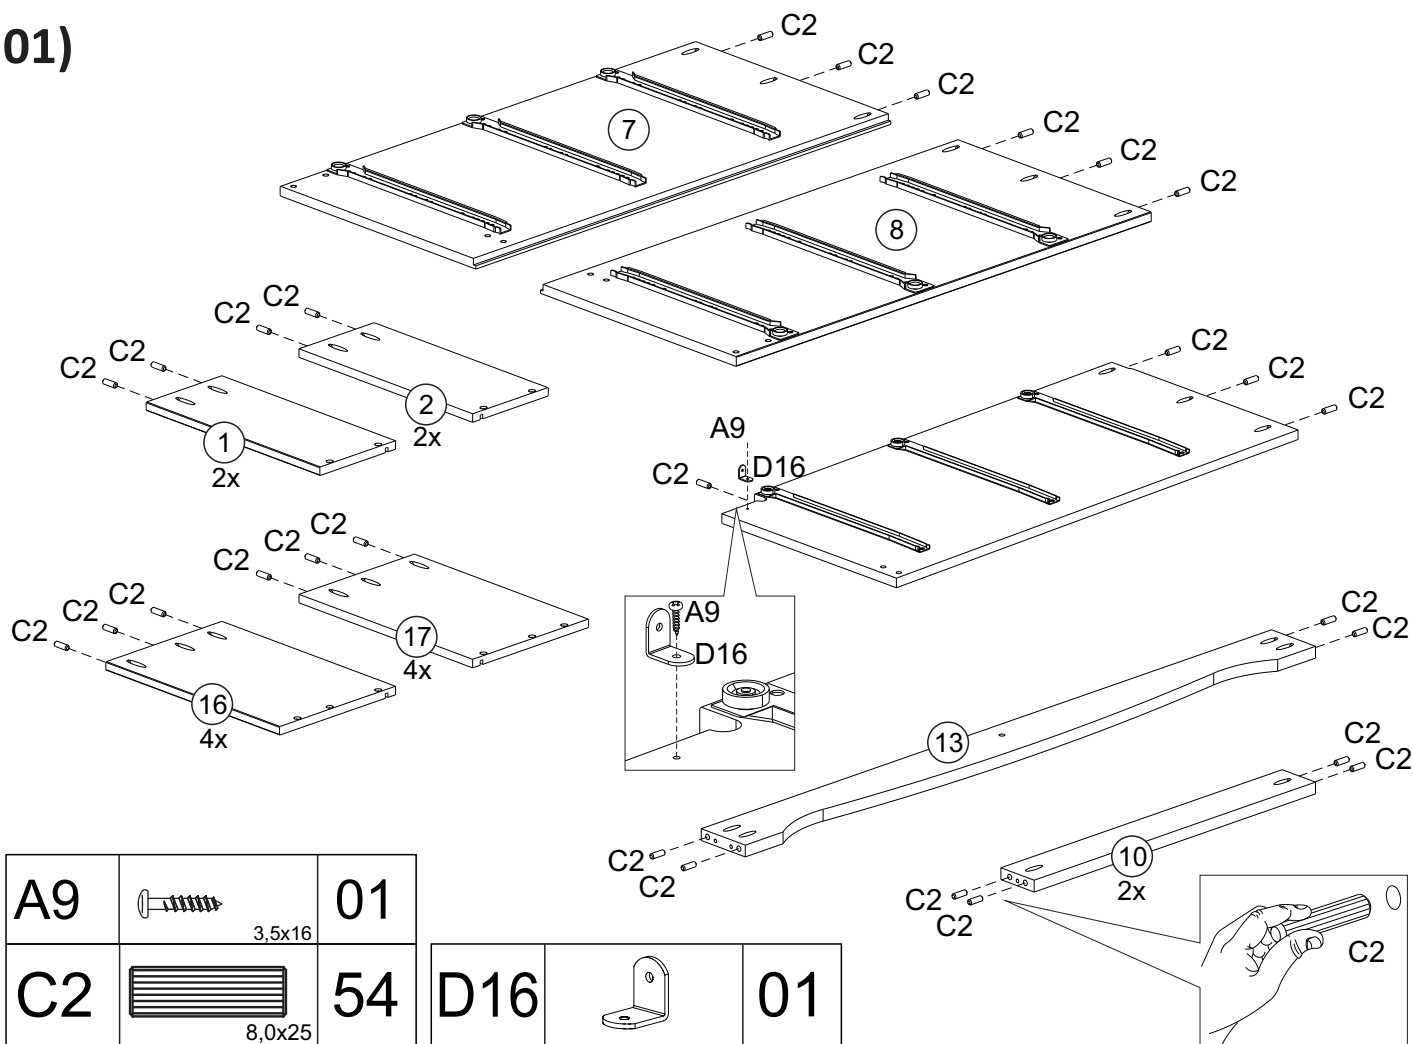

# 01)

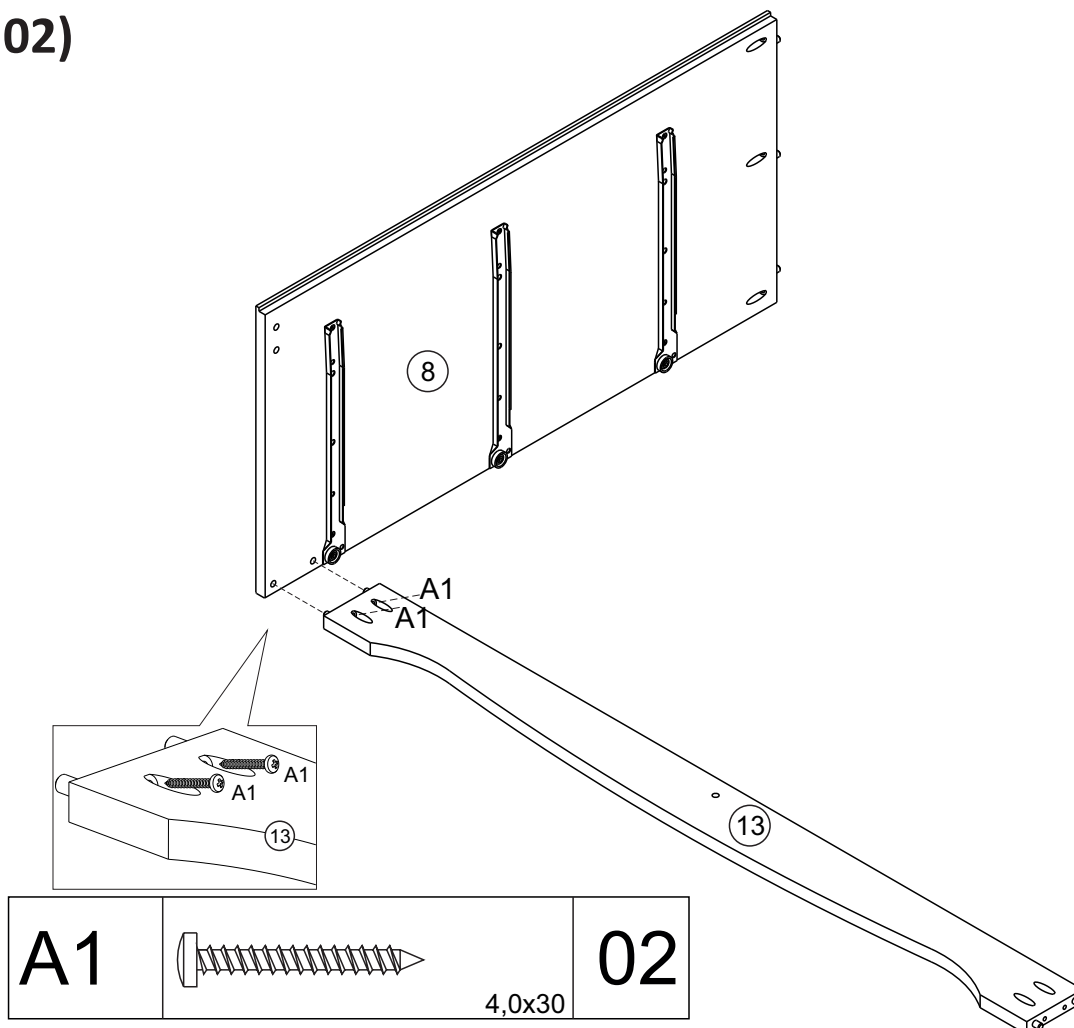


# 02)





03)

A1	 4,0x30	02
A9	 3,5x16	01

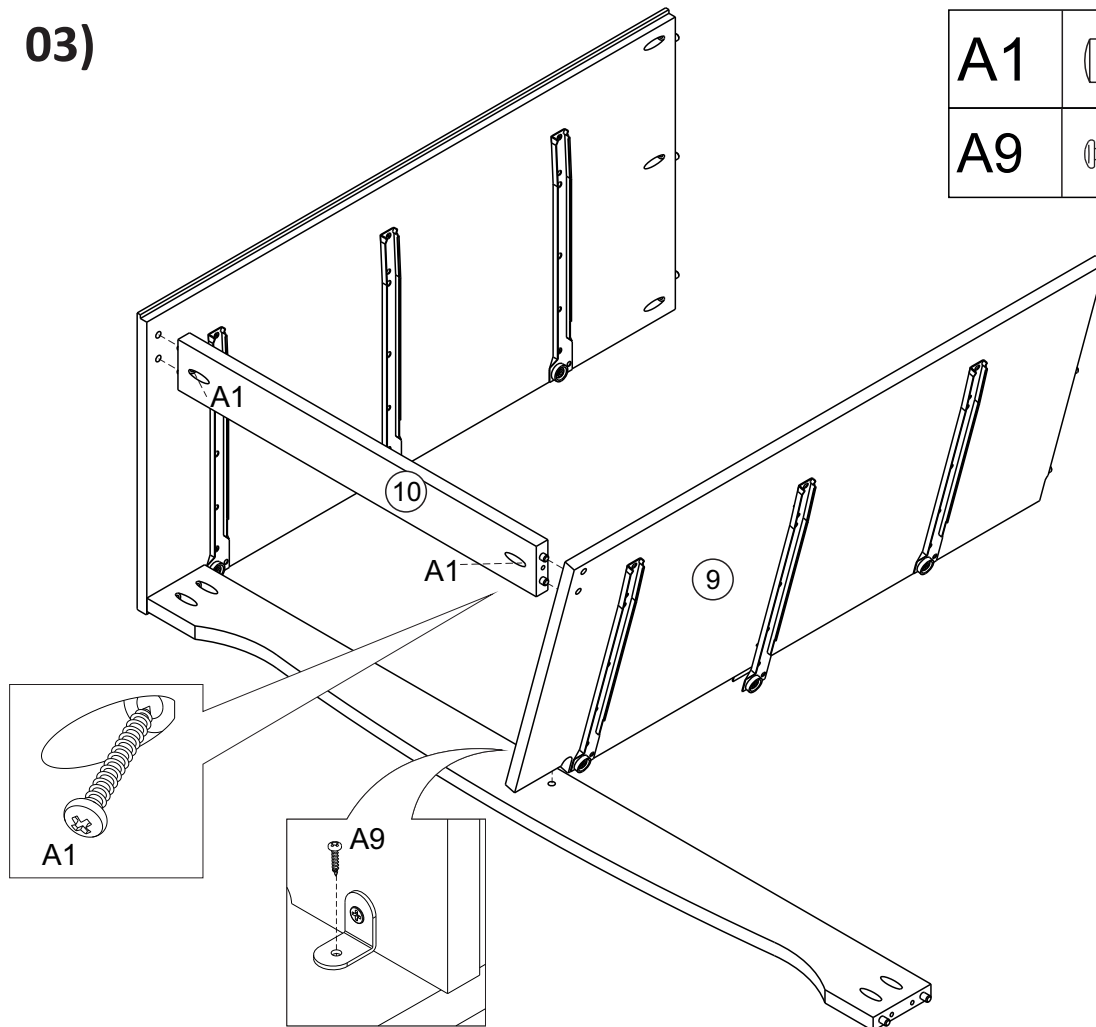


04)

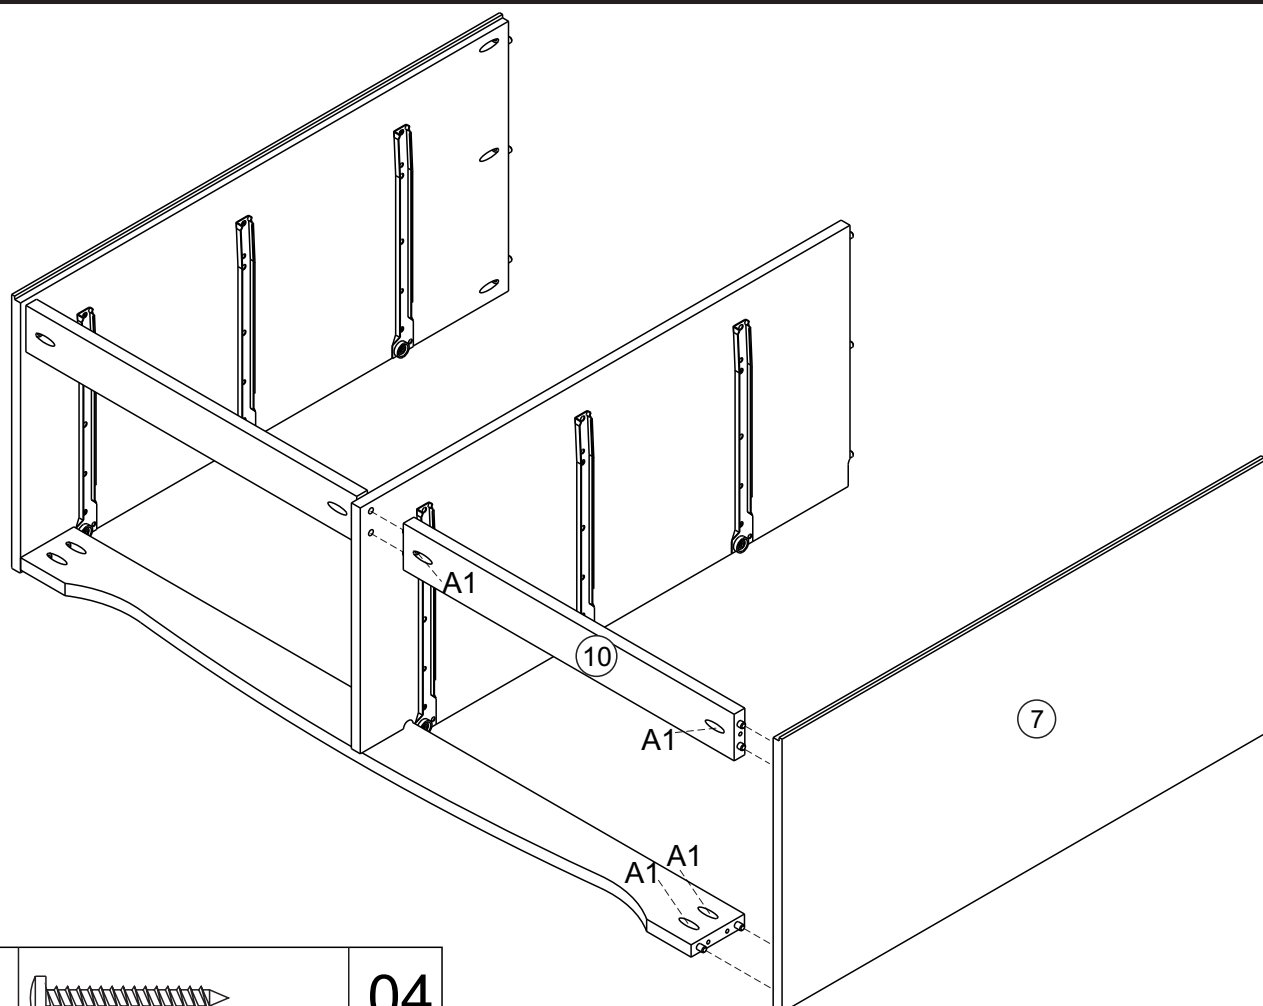


A1	 4,0x30	04
----	---	----

05)

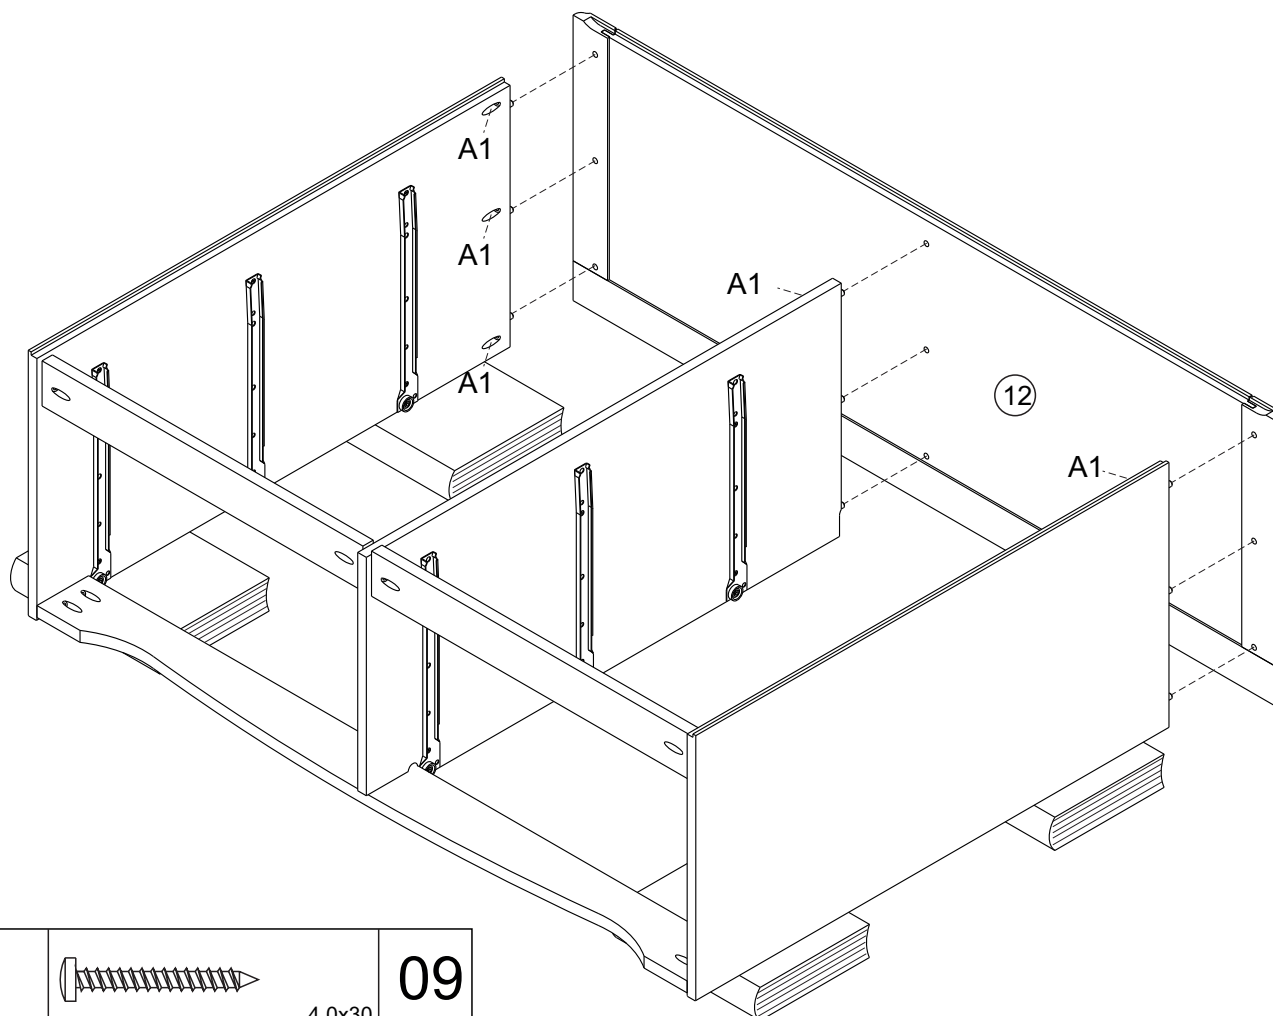


A1



4,0x30

09

06)

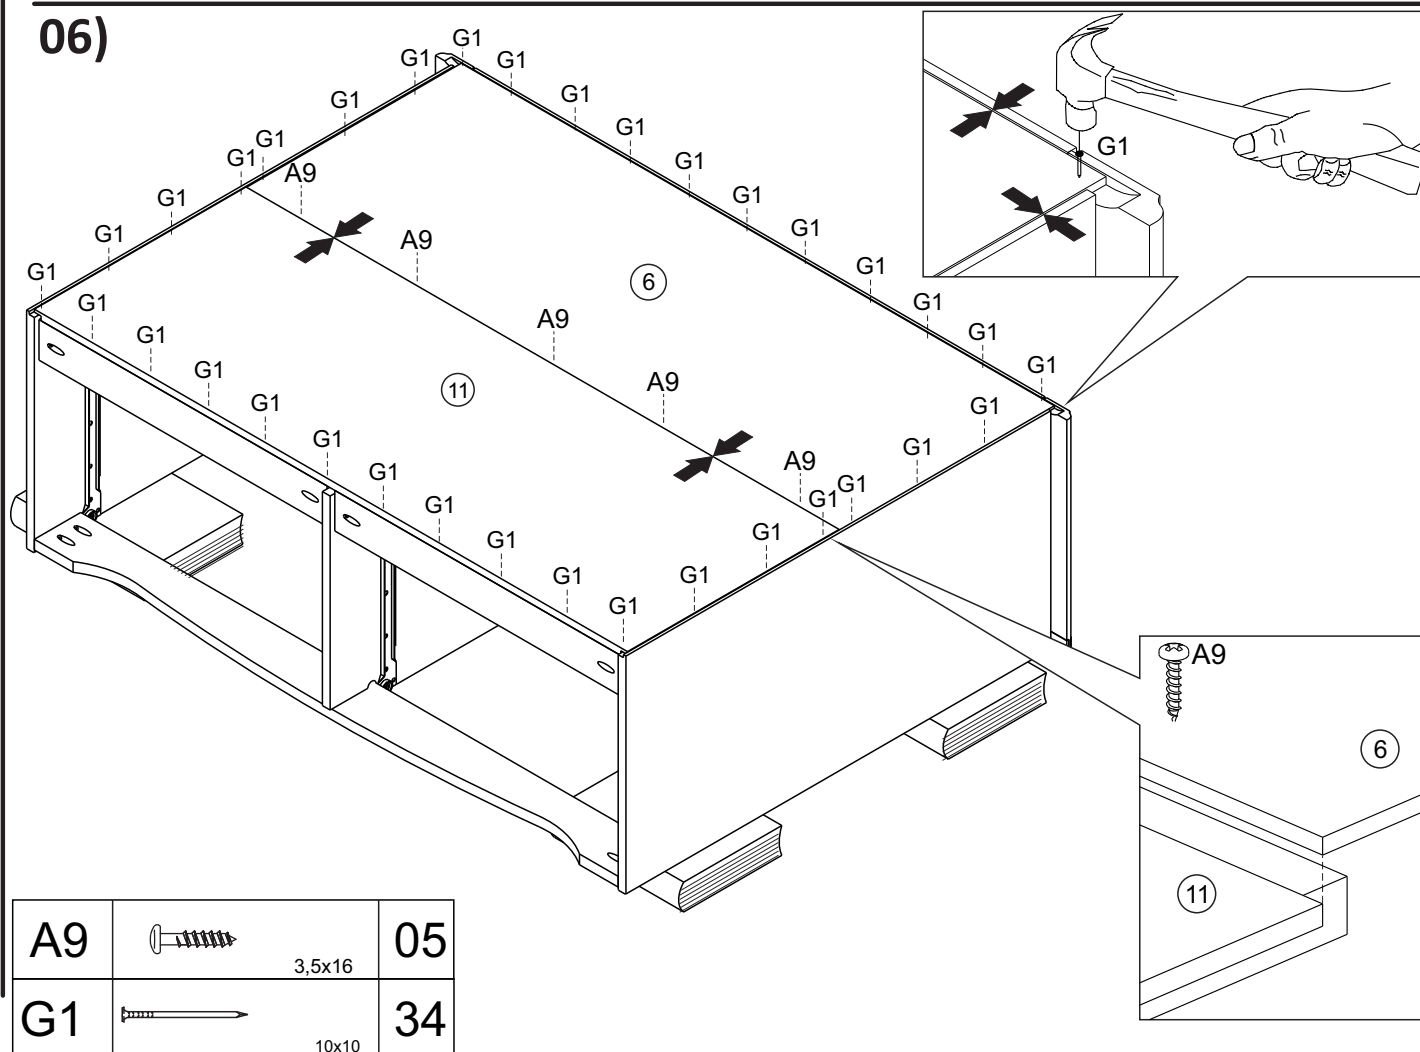

A9



3,5x16

05

G1












10x10



34

07)

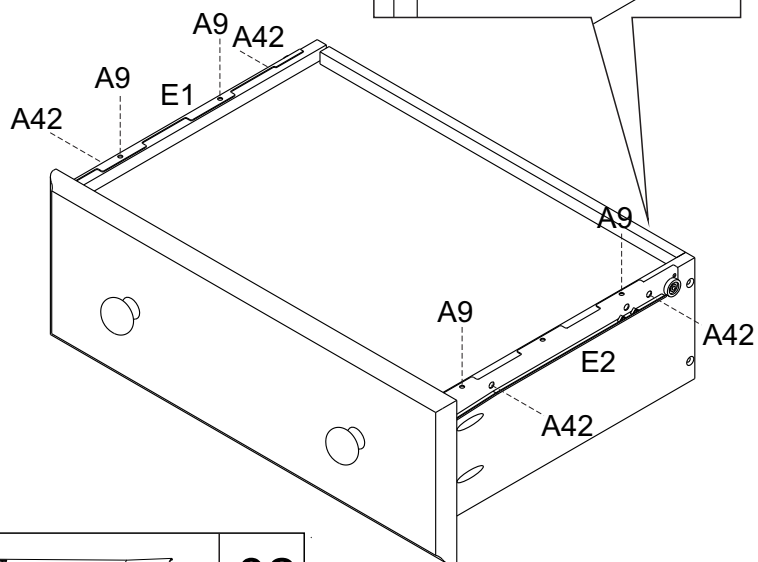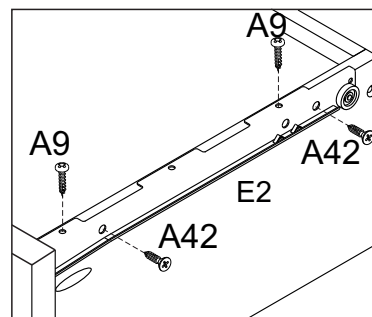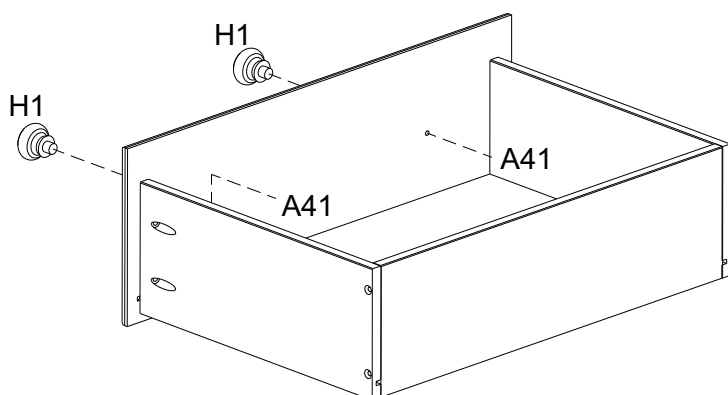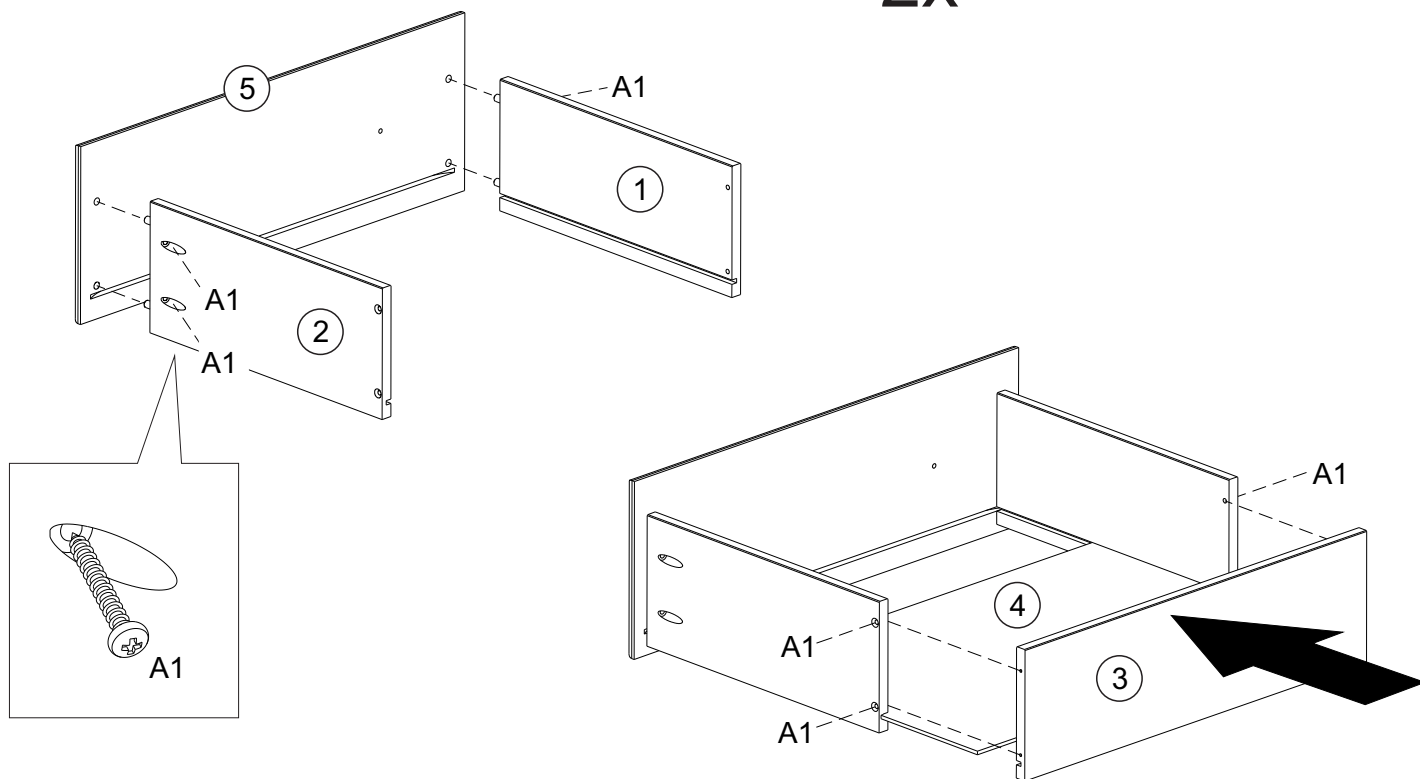2x







A1	 4,0x30	16
A9	 3,5x16	08
A41	 4,0x30	04
A42	 4,0x14	08
H1		04

E1	 350mm - 13	02
E2	 350mm - 13	02


08)






4x

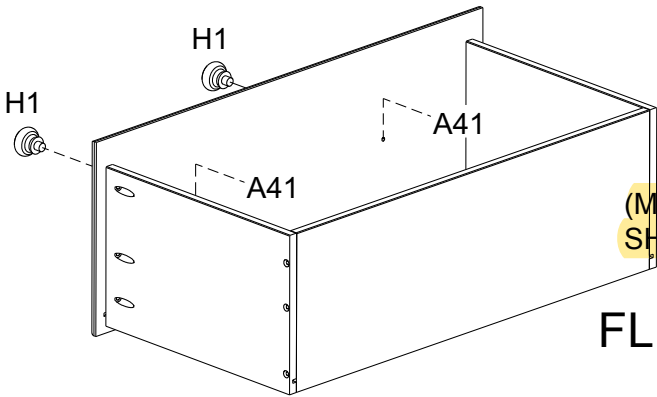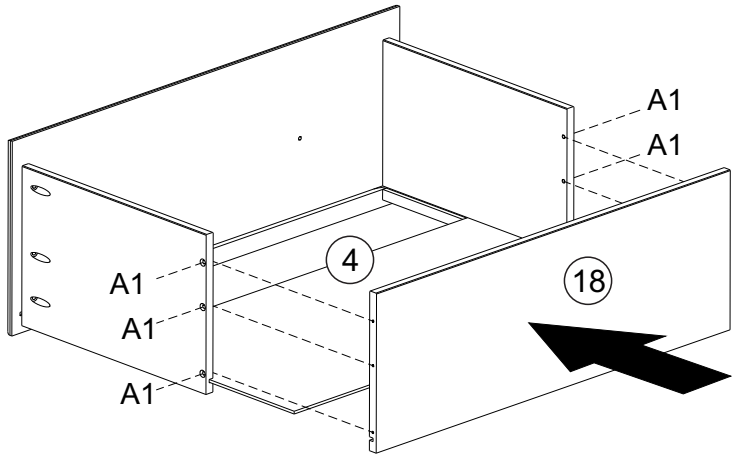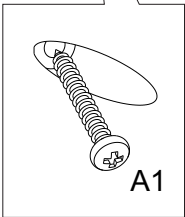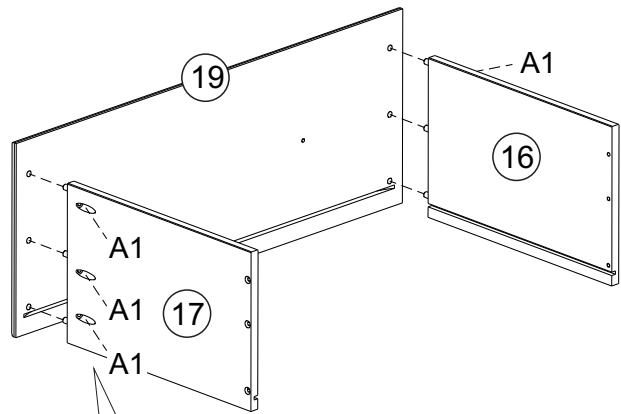



(MAKE AN ARROW  
SHOWING FLIP OVER)

FLIP OVER

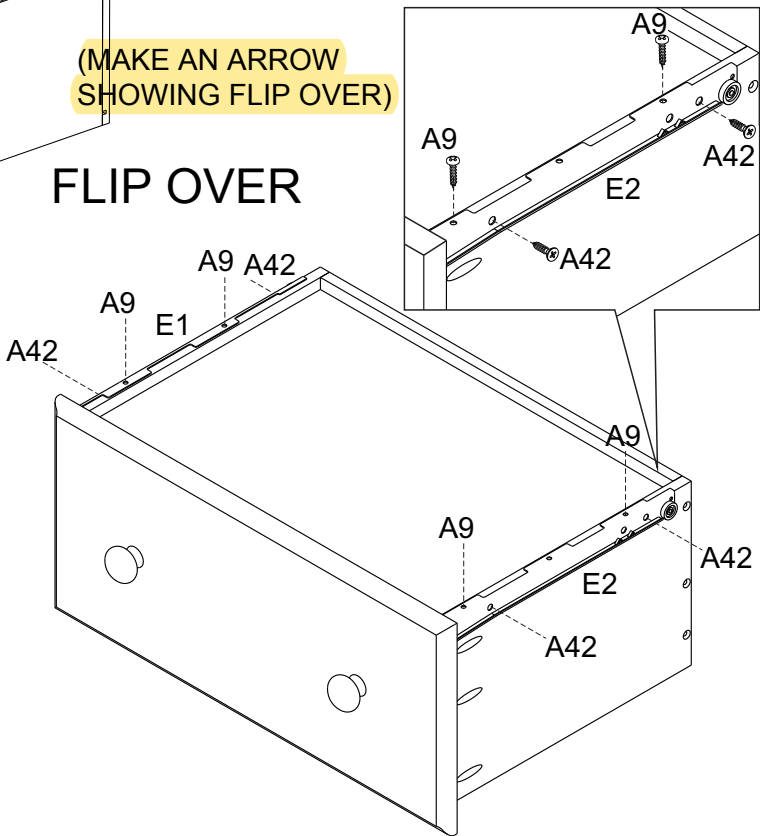


A1	 4,0x30	48
A9	 3,5x16	16
A41	 4,0x30	08
A42	 4,0x14	16
H1		08

E1	 350mm - 13	04
E2	 350mm - 13	04




09)

**By law attach label to the top drawer**

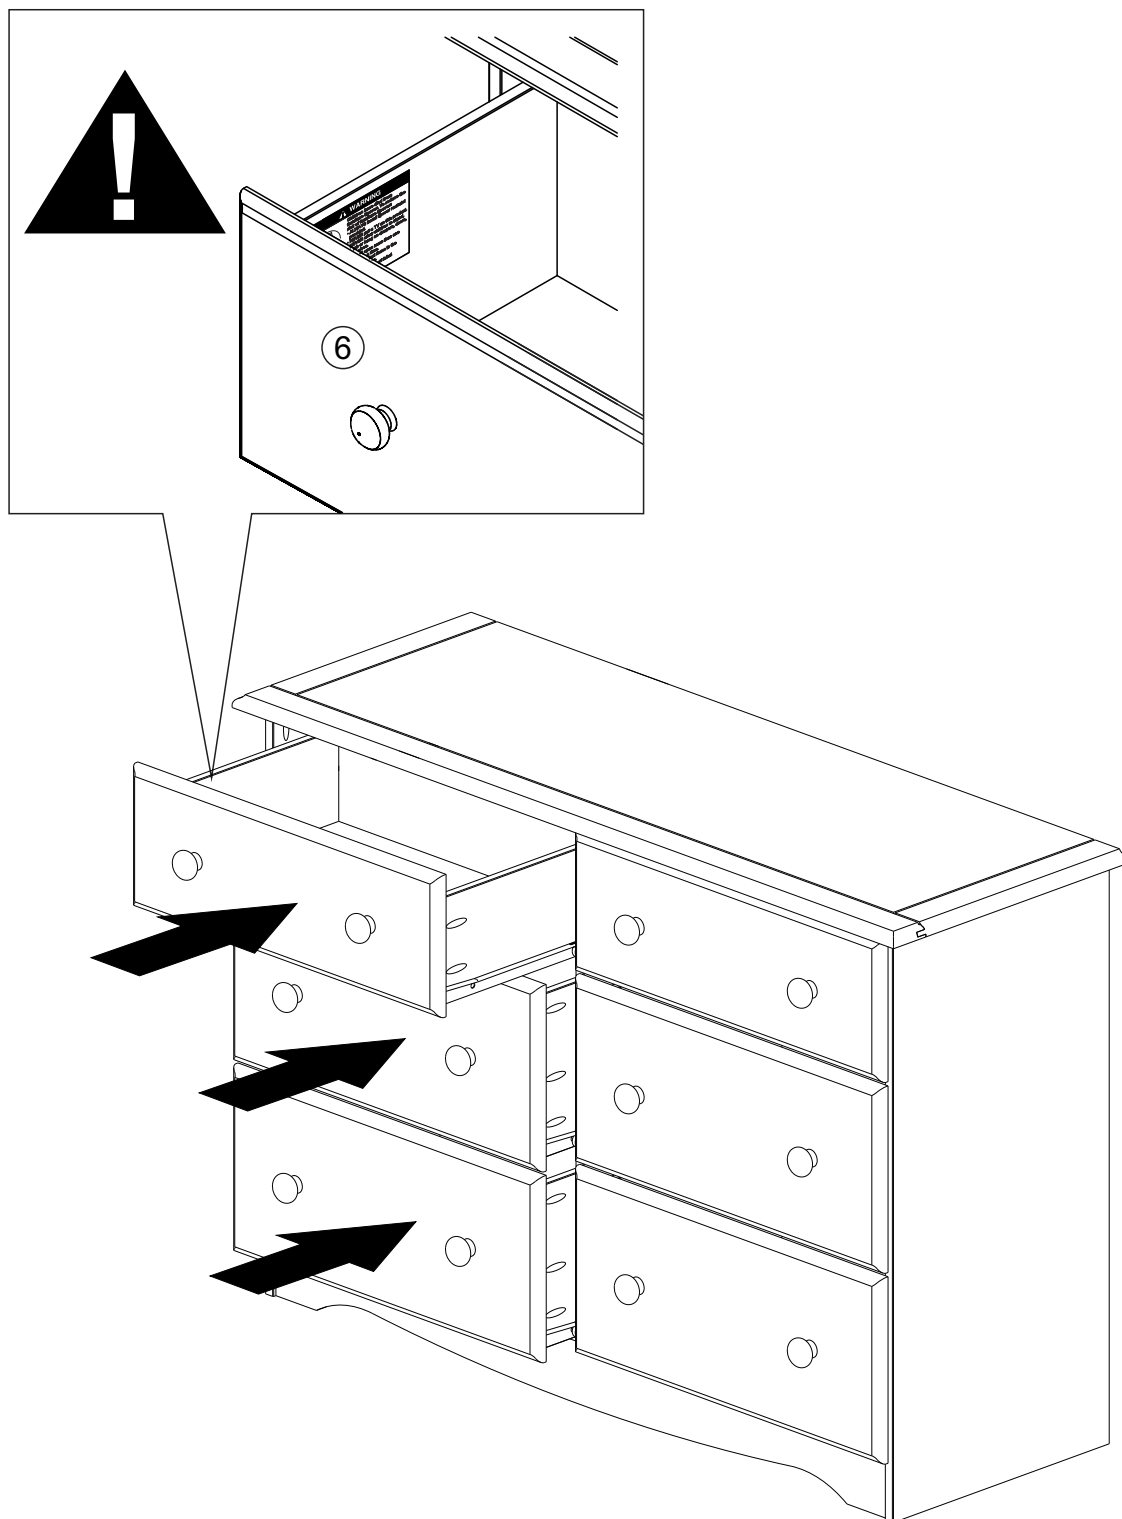

10) FURNITURE ANTI-TIP KIT

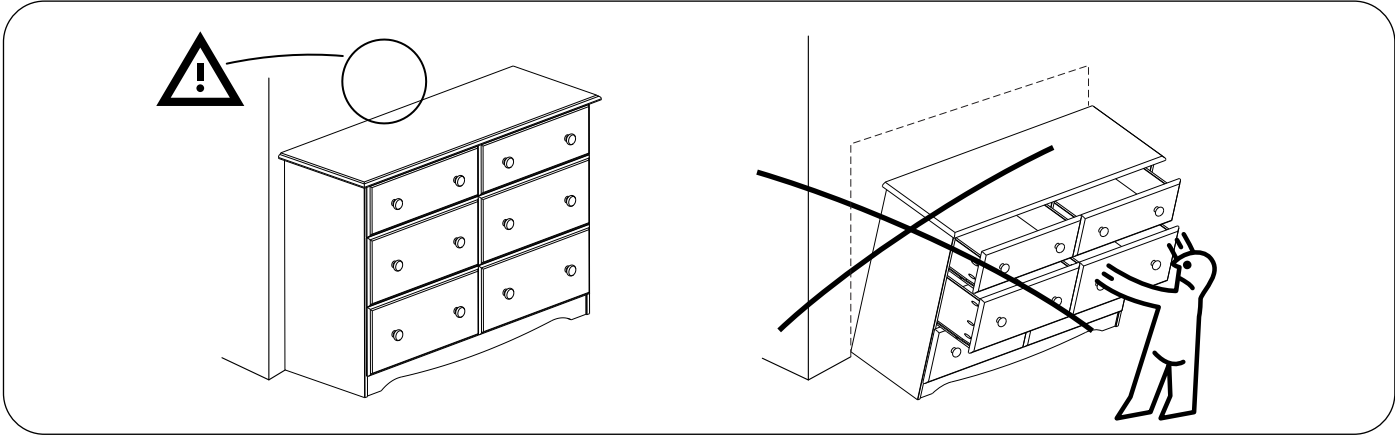

A large line drawing of a dresser with the anti-tip kit installed. A bracket labeled F8 is attached to the back of the dresser, and a tether labeled F9 is attached to the bracket and extends towards the wall.

Attach to dresser




Screw into drywall

Anchors and screws not included

An inset diagram showing the F8 bracket being attached to the dresser with screws A8. Another F8 bracket is shown being attached to a wall with screws A8 and wall anchors. The text 'Anchors and screws not included' is at the bottom.

An inset diagram showing the F8 bracket being inserted into a hole in the drywall. The text 'Install both parts F8' is at the bottom.

An inset diagram showing the tether F9 being tightened against the F8 bracket. The text 'Tether and tighten' is at the bottom.

A8	 3.0x20	02
F8		02
F9		01