

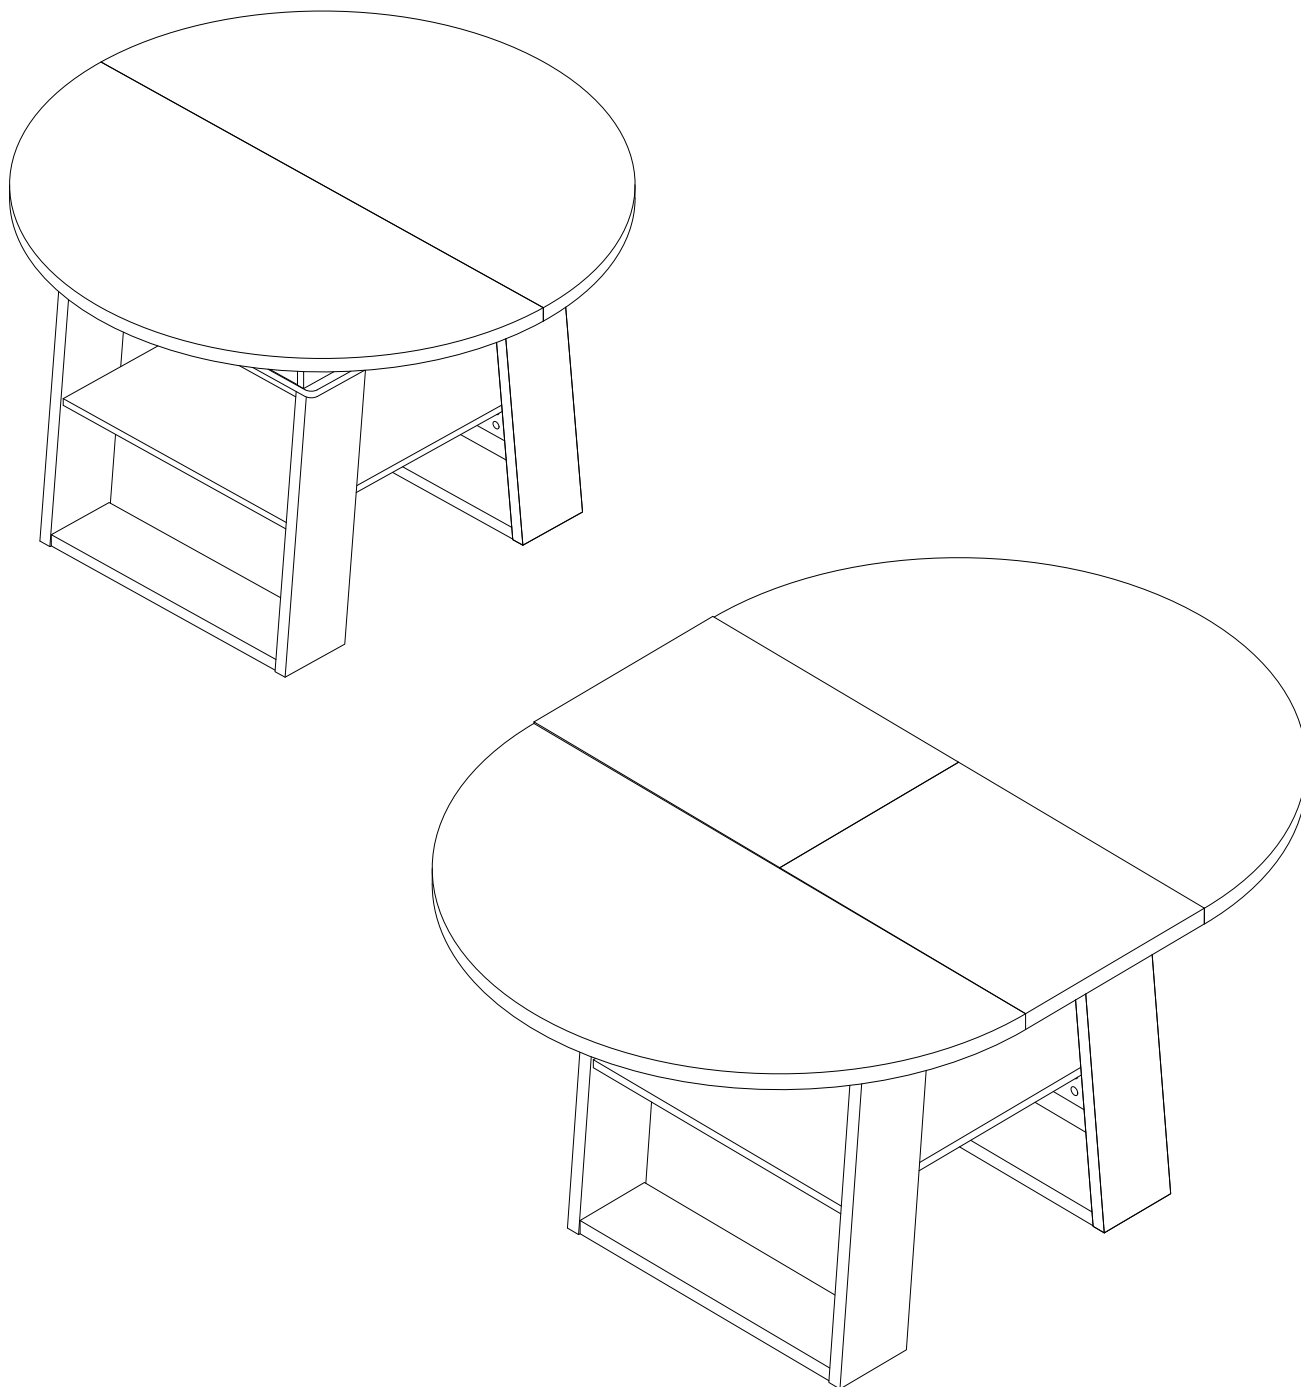
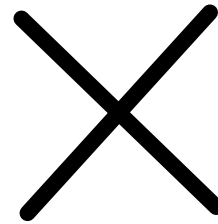


W3867P515241&W3867P515233 &W3867P515238

Assembly Instructions - Please keep for future reference

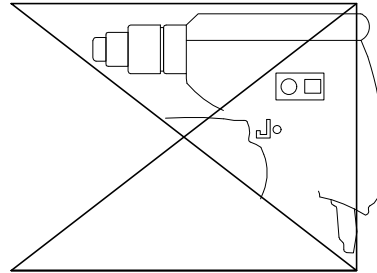

Important – Please read these instructions fully before starting assembly

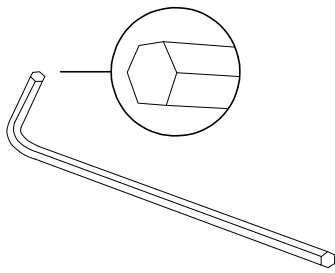

(DE): Verwenden Sie beim Anbringen der Tischplatte keinen Bohrer! Bitte verwenden Sie die im Paket enthaltenen Werkzeuge.

(UK): Do not use an electric drill when installing the desktop! Please use the tools provided in the package.

(FR): Ne pas utiliser de perceuse électrique lors de l'installation du plateau de table ! Veuillez utiliser les outils fournis dans l'emballage.

(IT): Non utilizzare un trapano elettrico durante l'installazione del piano del tavolo! Si prega di utilizzare gli strumenti forniti nella confezione.

(ES): ¡No utilice un taladro eléctrico al instalar el escritorio! Por favor, use las herramientas incluidas en el paquete.

(NL): Gebruik geen elektrische boormachine bij het monteren van het tafelblad! Gebruik de meegeleverde gereedschappen uit de verpakking.

(SE): Använd inte en elektrisk bormaskin vid montering av bordsskivan! Använd de verktyg som medföljer i förpackningen.

(PL): Nie używaj wiertarki elektrycznej podczas montażu blatu! Użyj narzędzi dołączonych do opakowania.



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

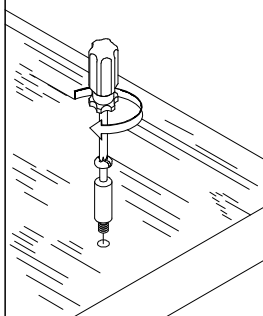

Step 2

Push the male camlock into the entry hole.

2

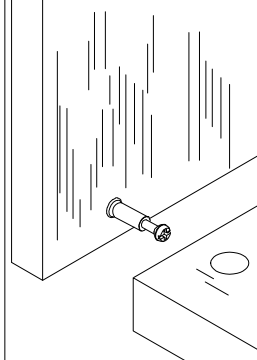


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

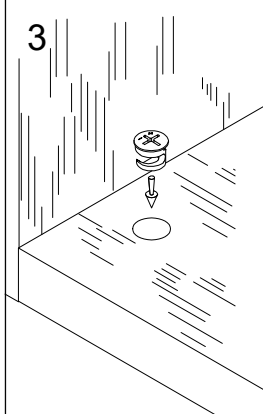



Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

4











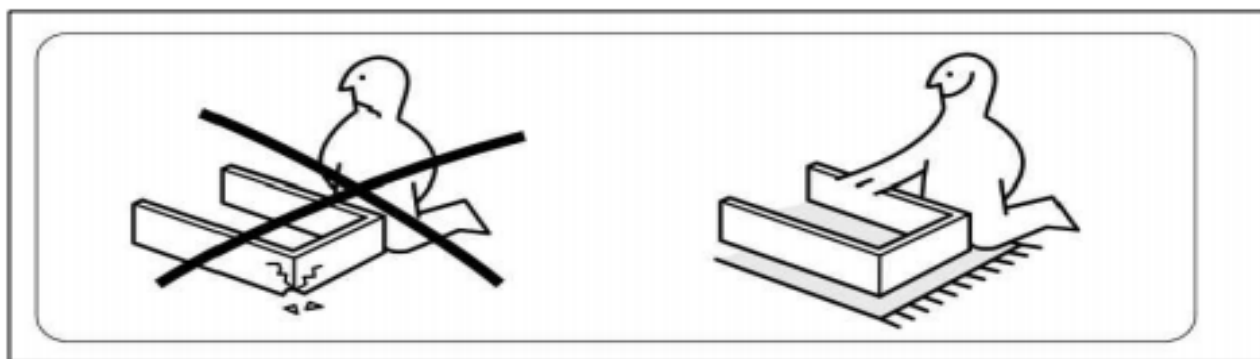
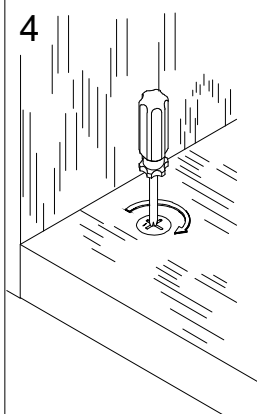


Make sure to put one carpet or some thicker film under the cabinet body during the installation in order to avoid scratch or damage to the parts.





Assembly Instructions

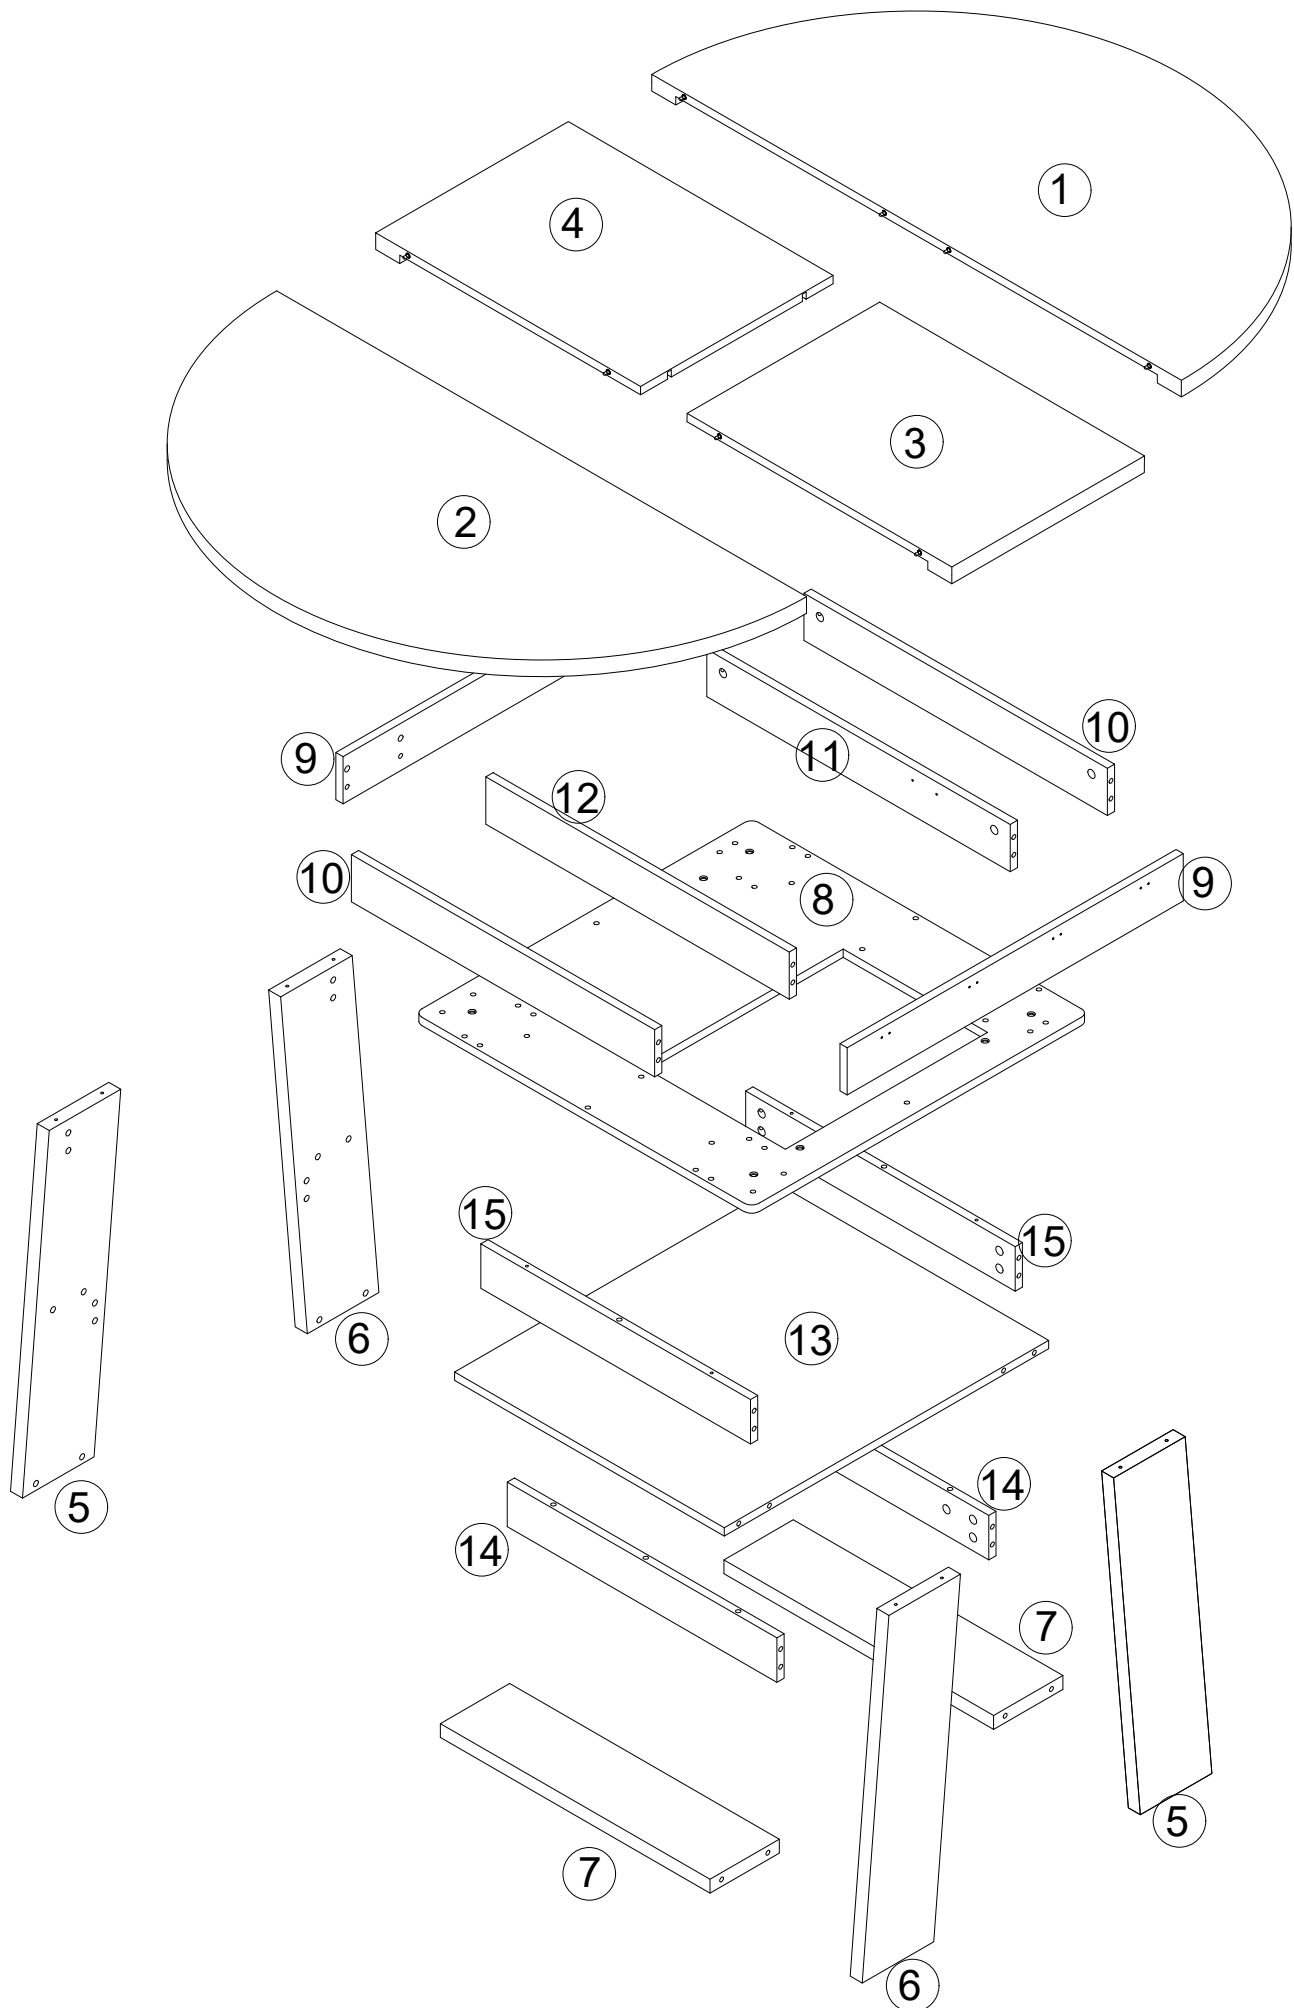

Assembly Instructions

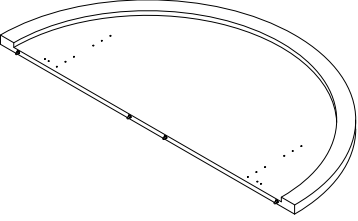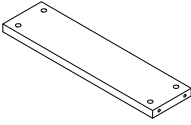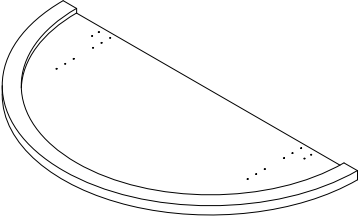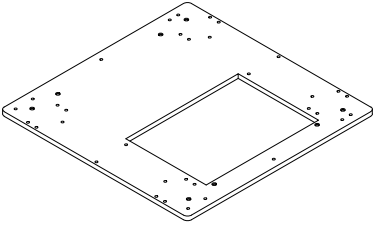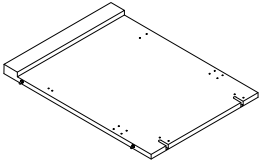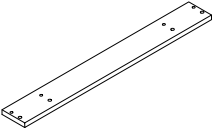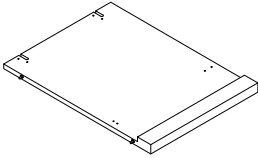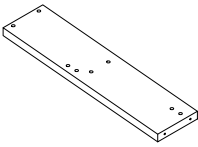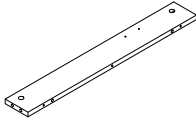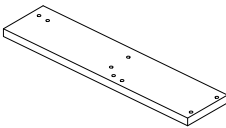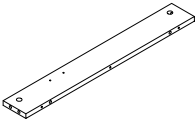①  1	⑦  2
②  1	⑧  1
③  1	⑨  2
④  1	⑩  2
⑤  2	⑪  1
⑥  2	⑫  1






Assembly Instructions

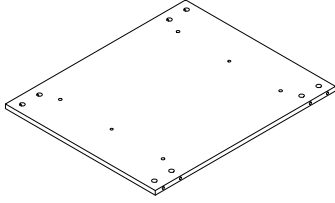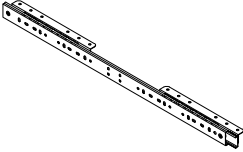13  1	15  2
14  2	16  2


Components - Fittings

Please check you have all the parts listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.





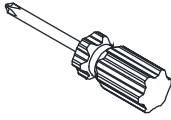
(A)  x44	(B)  φ15 x44	(C)  M3.5*14mm x76	(D)  M6*40mm x30
(E)  φ8 x24	(F)  x2	(G)  G1 G2 x4	(H)  x8
(I)  x2			

Ruler - Use this ruler to help correctly identify the screws

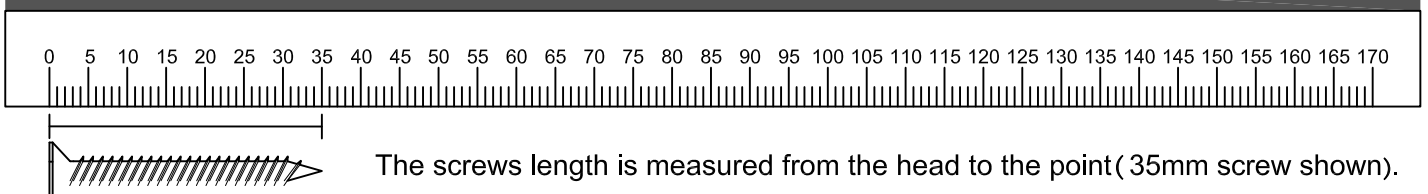



Assembly Instructions

Step 1

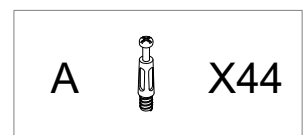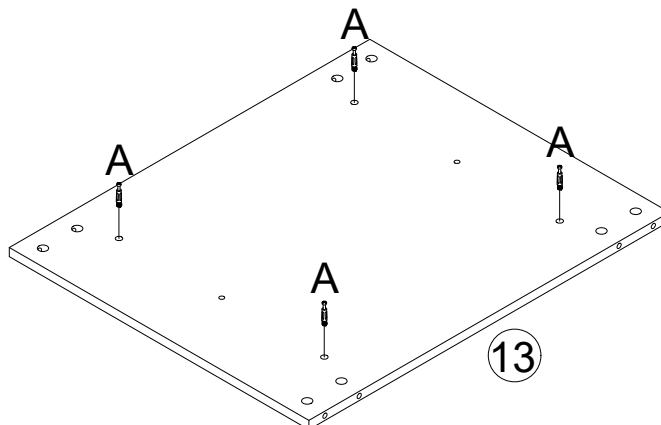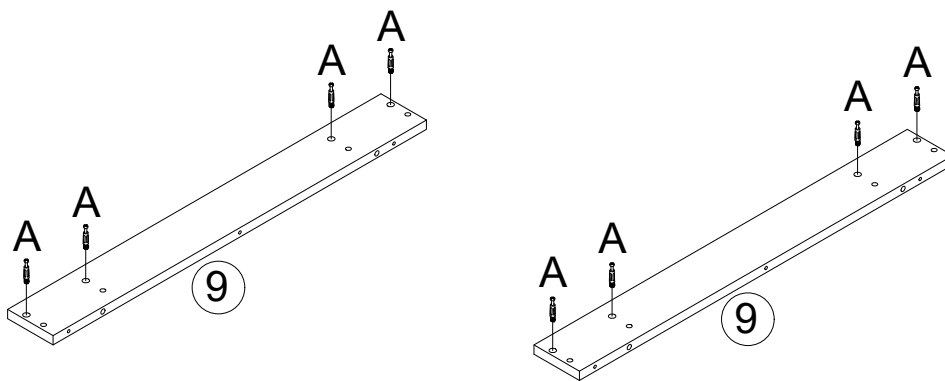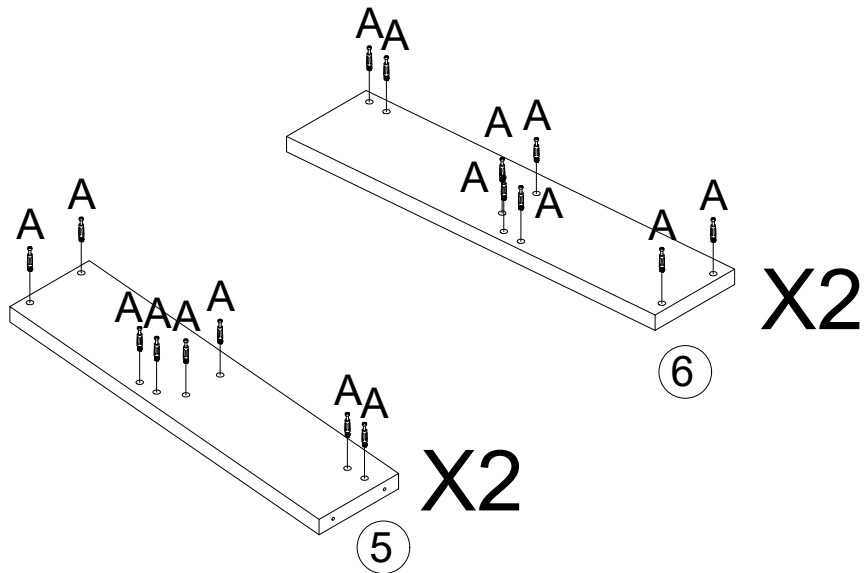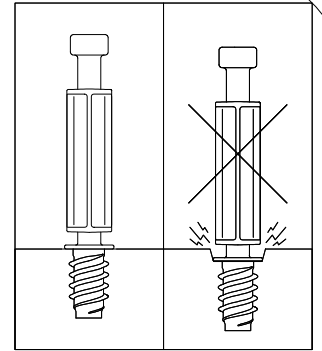


Assembly Instructions

Step 2

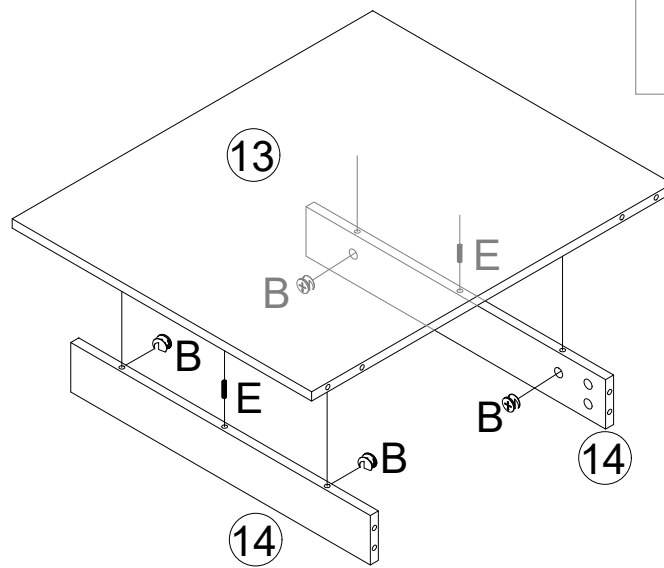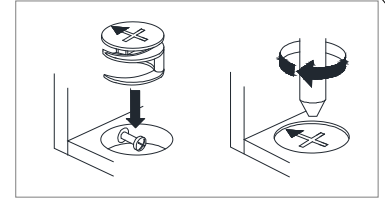


Do not tighten accessory B too tightly, otherwise it may cause damage to the board.

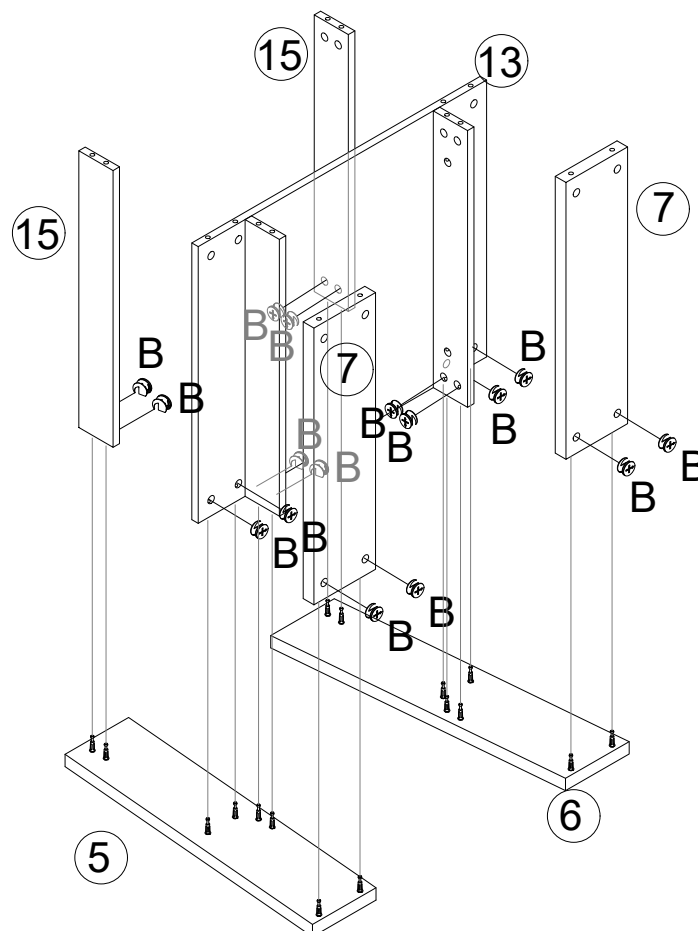


B		X20
E		X2

Assembly Instructions

Step 3

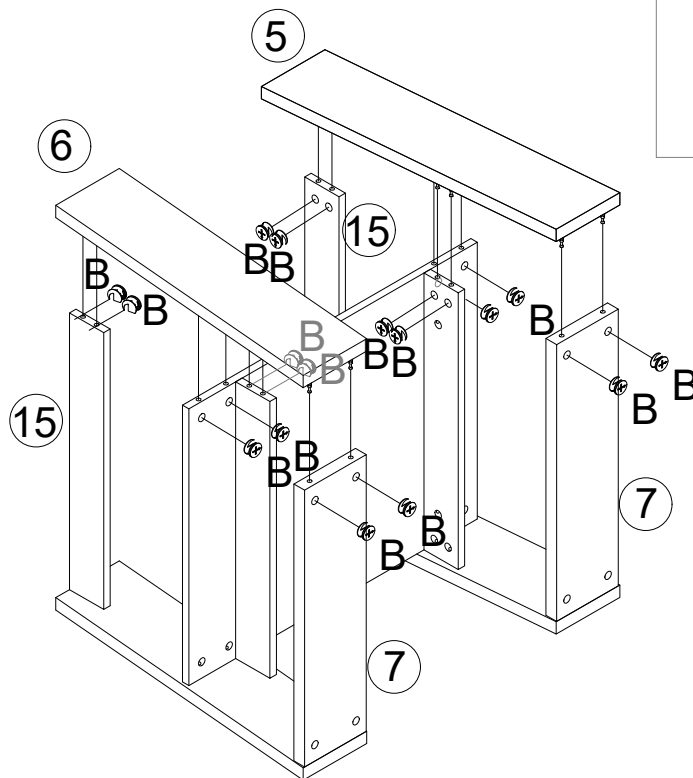


Do not tighten accessory B too tightly, otherwise it may cause damage to the board.

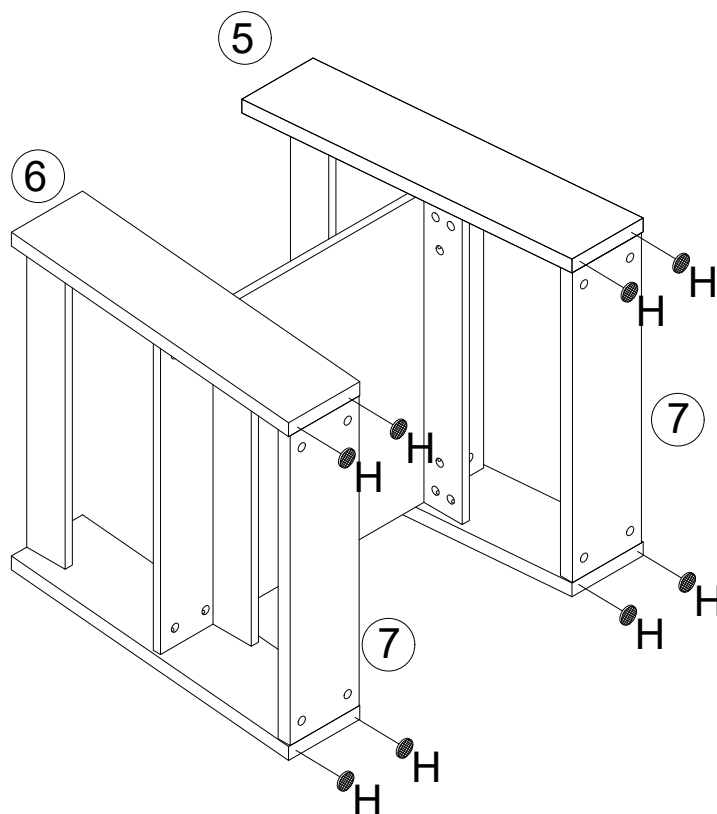

B		X16
H		X8

Assembly Instructions


Step 4

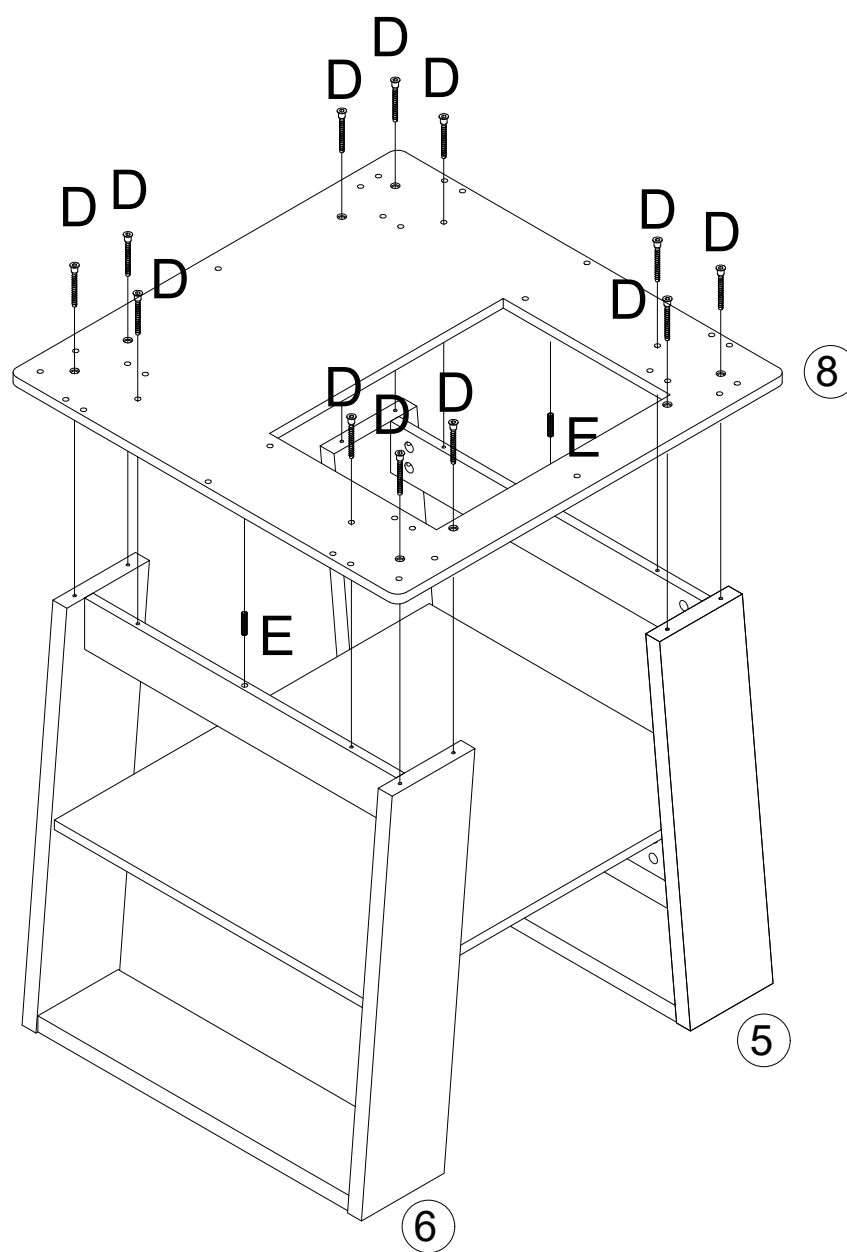


D		X12
E		X2

Assembly Instructions


Step 5

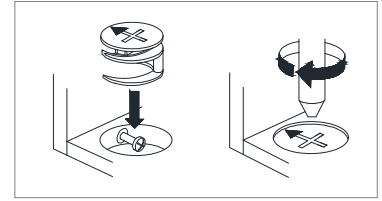

Pay attention to the installation direction of boards 11 and 12

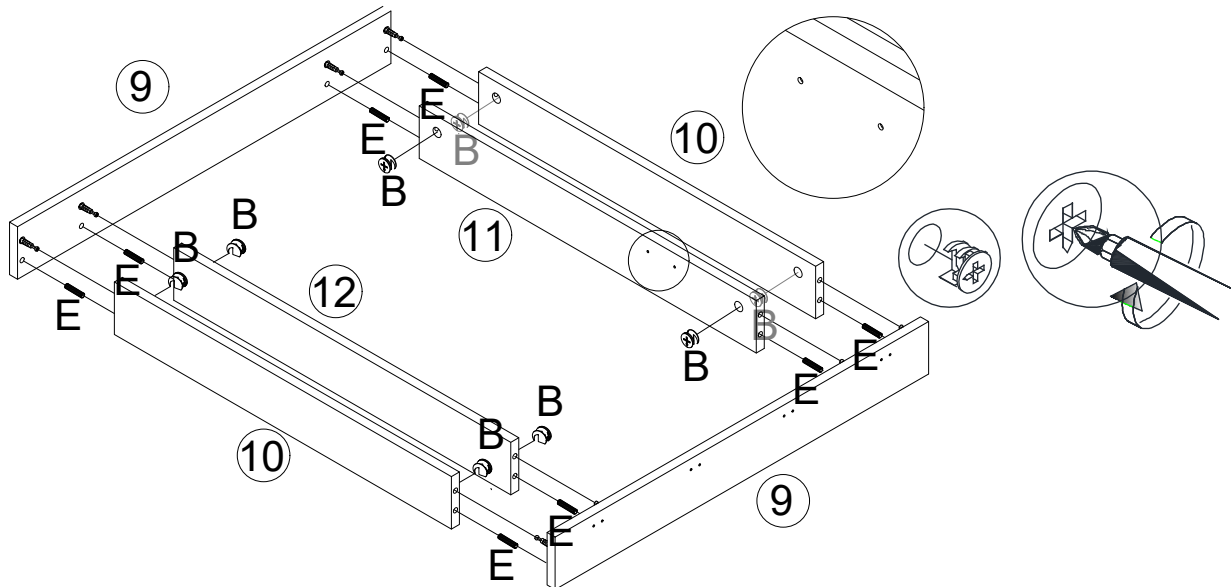



When installing B here, please put B in now and tighten it again, and do not tighten it too tightly, otherwise it will damage the board.

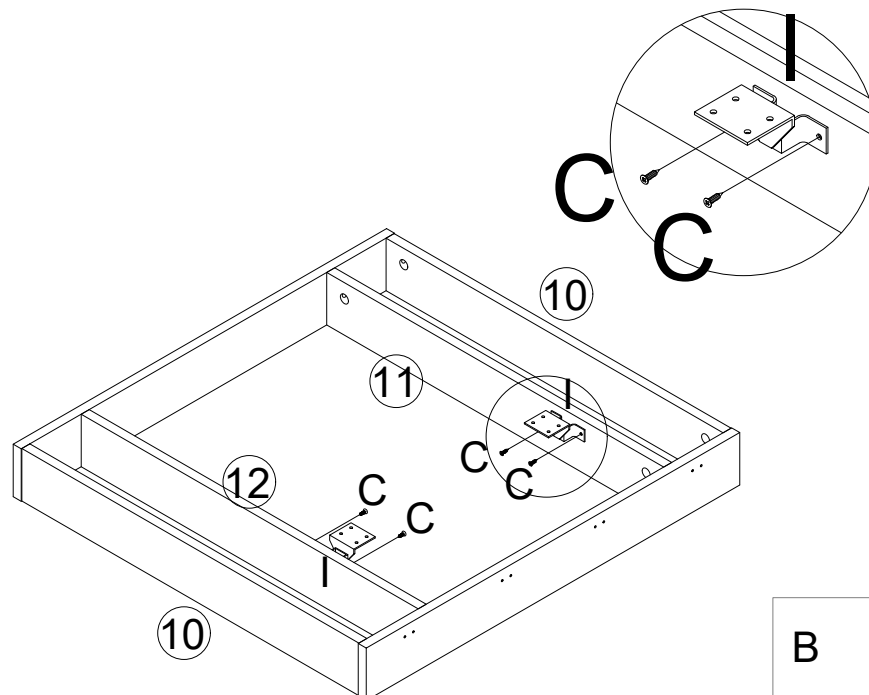

B		X8
C		X4
E		X8
I		X2

Assembly Instructions


Step 6

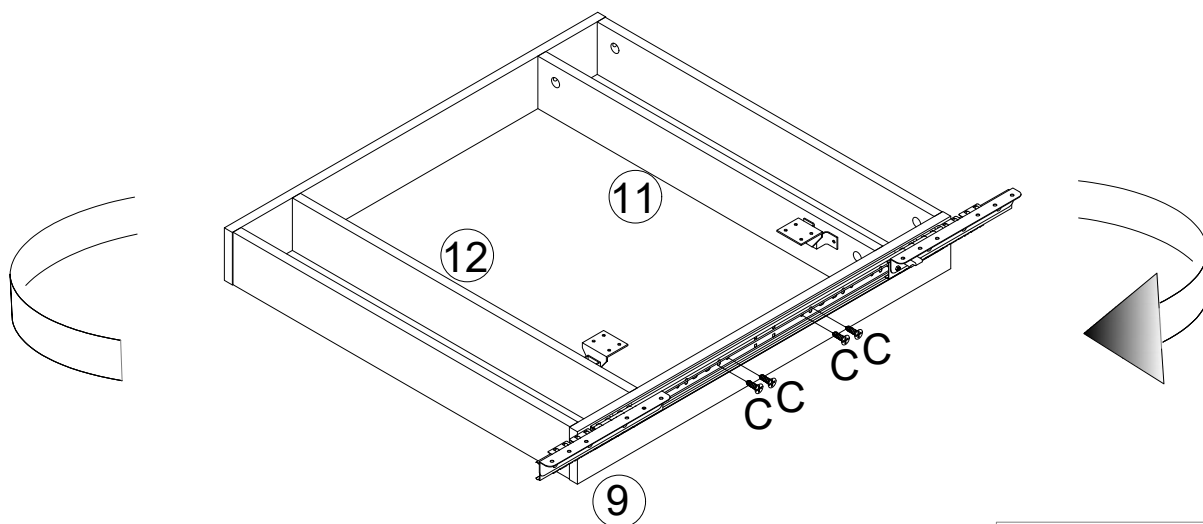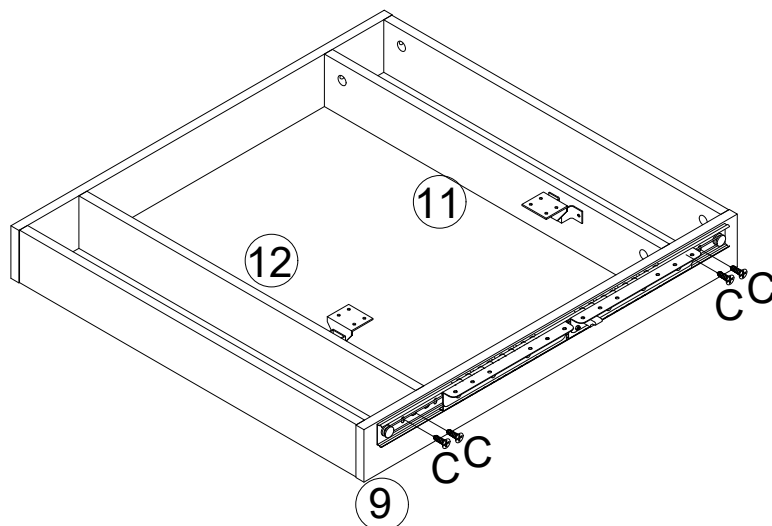


C  X8

Assembly Instructions


Step 7

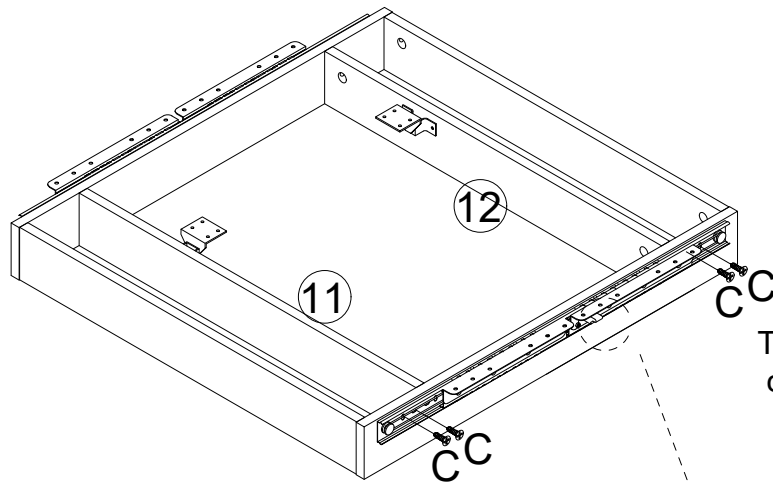

The guide rail is locked ,
cannot be extended.

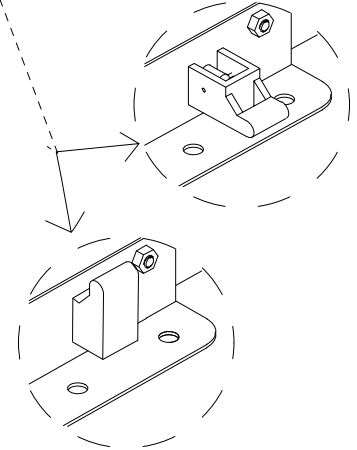


The guide rail is not locked ,
can be stretched.

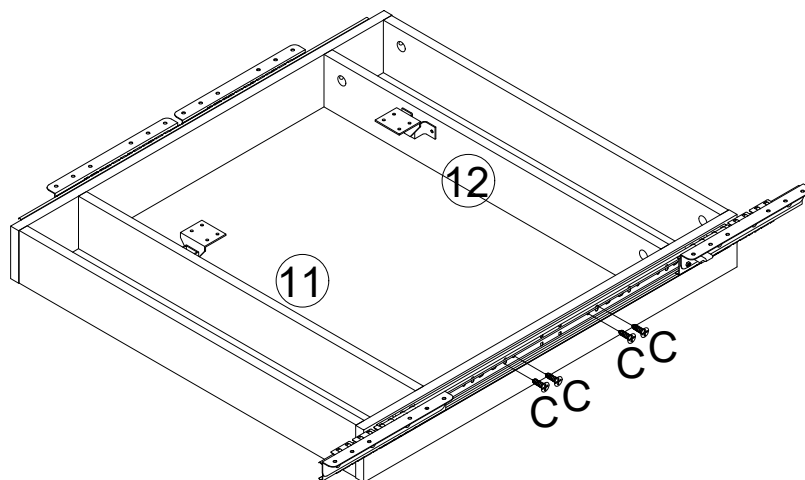


C  X8

Assembly Instructions

Step 8

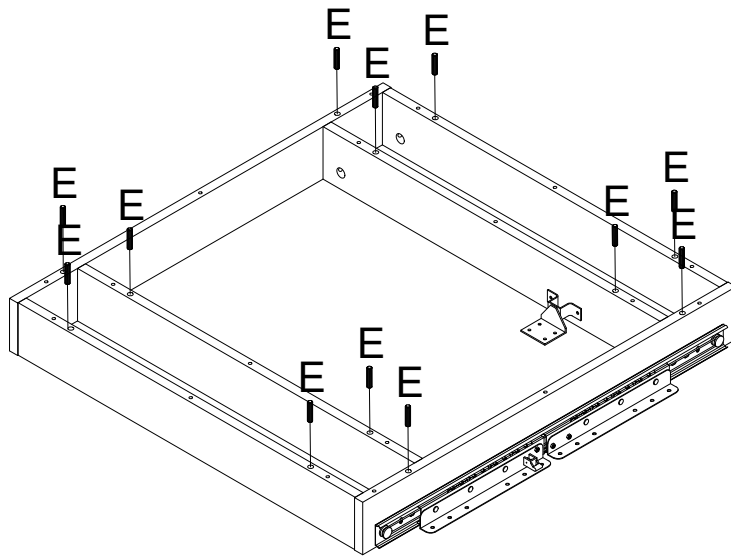


Please note that the gap on board 8 should be on the same side as the accessories on boards 11 and 12 when installing here

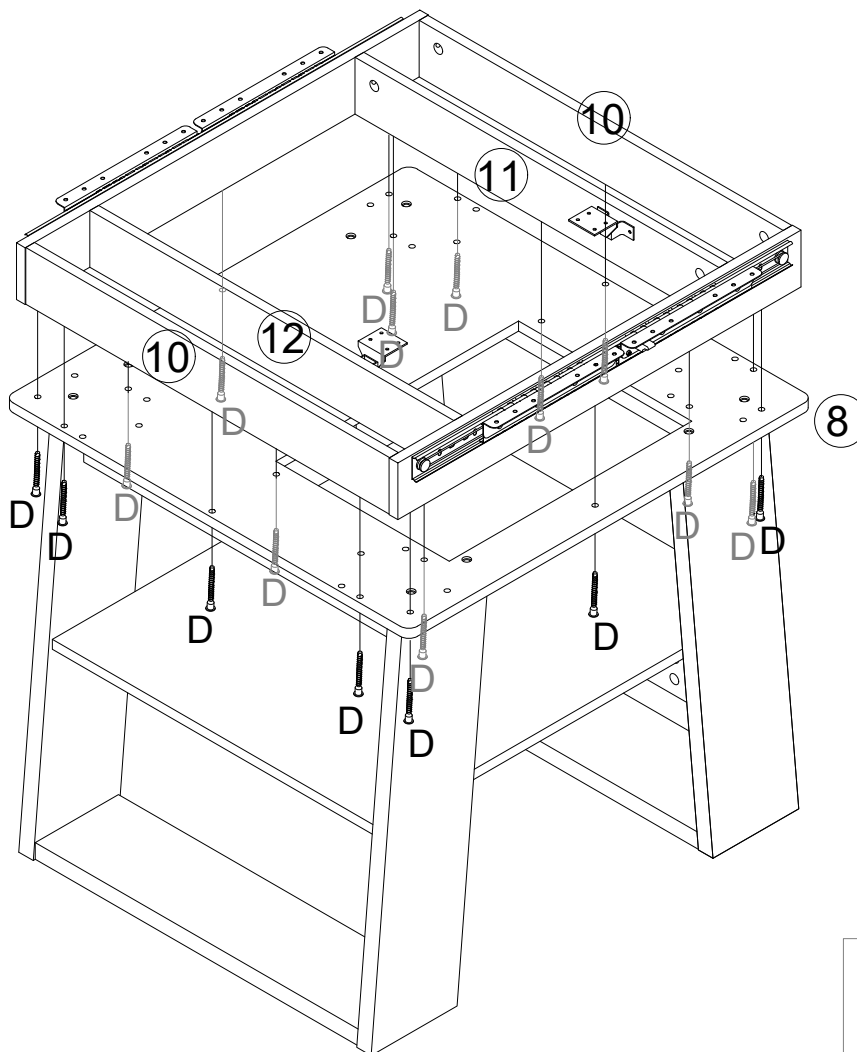

D		X18
E		X12

Assembly Instructions

Step 9



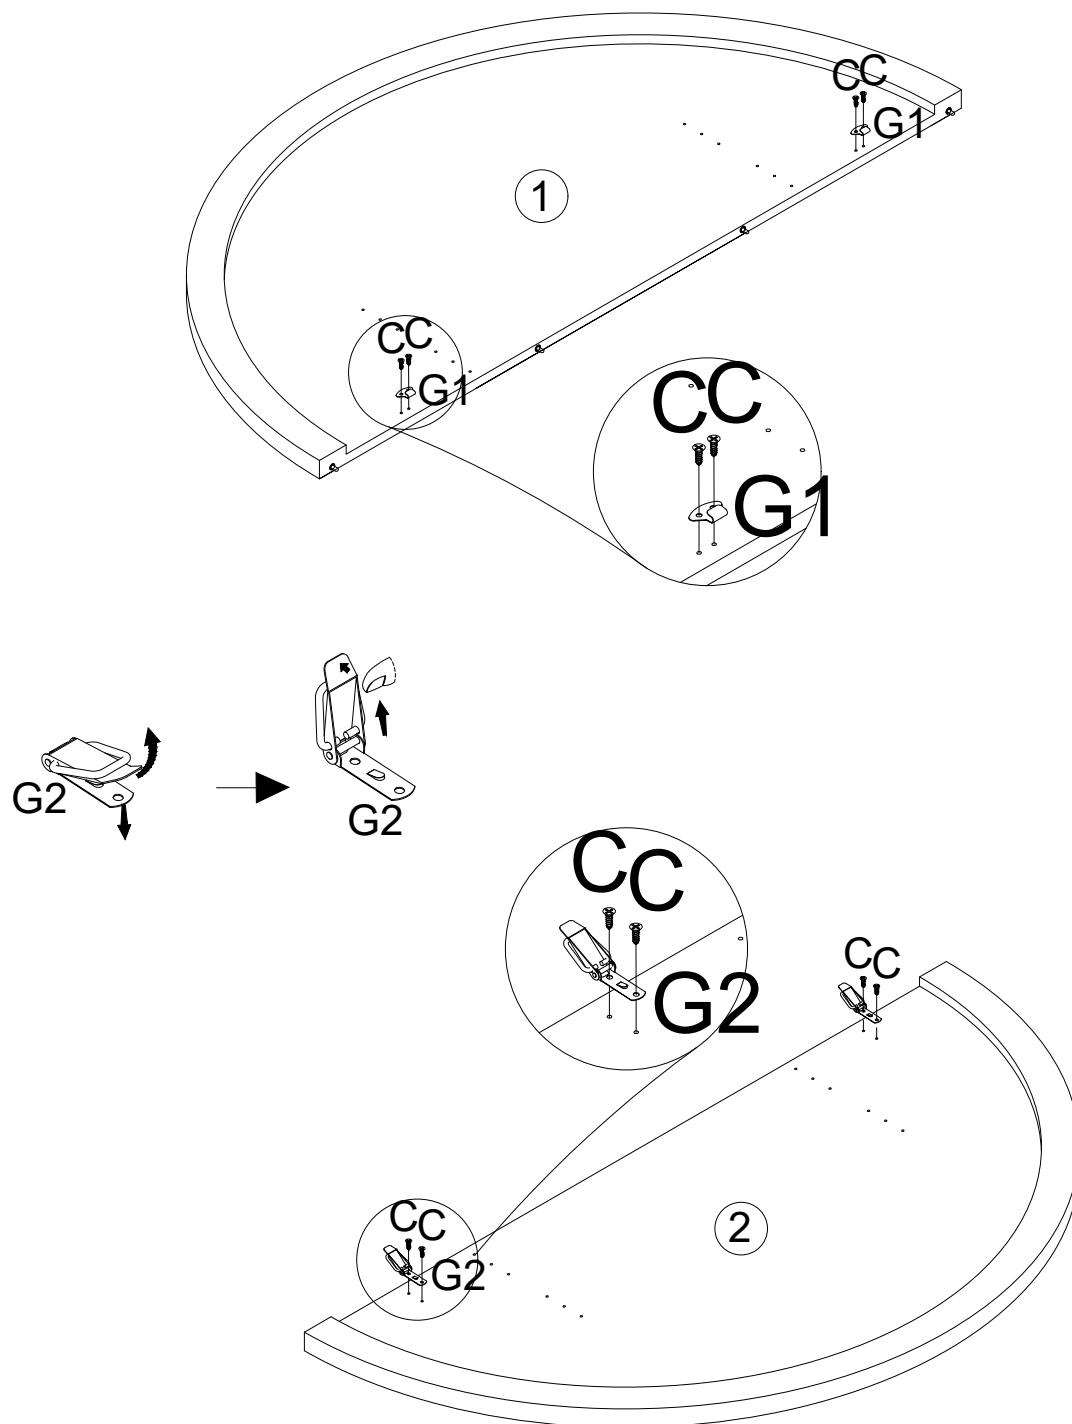


C		X8
G1		X2
G2		X2

Assembly Instructions


Step 10

Attention: Please open this accessory before pulling apart the desktop

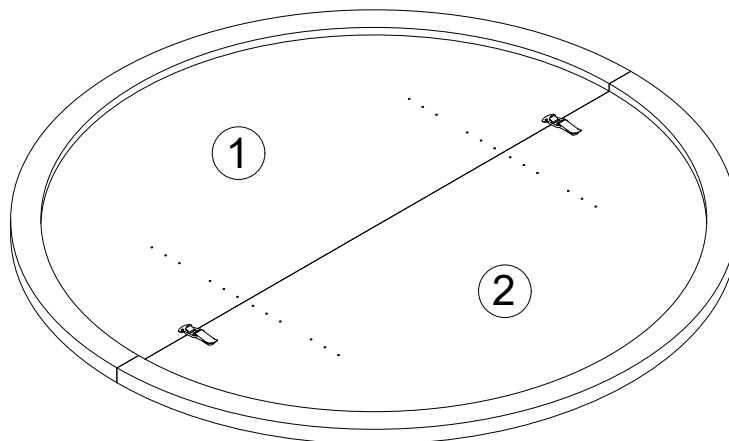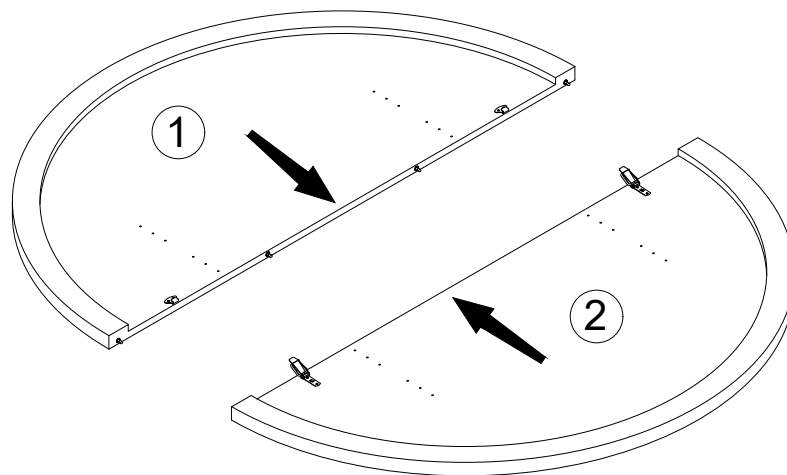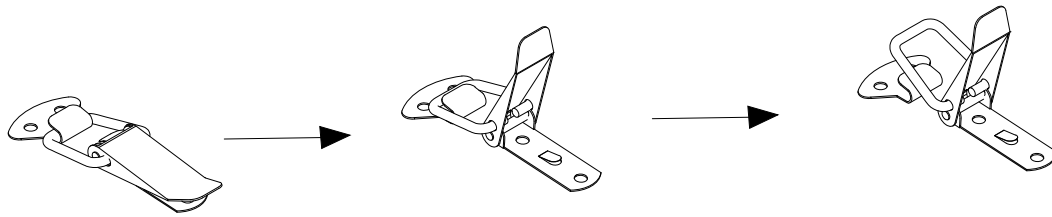

Assembly Instructions

Step 11

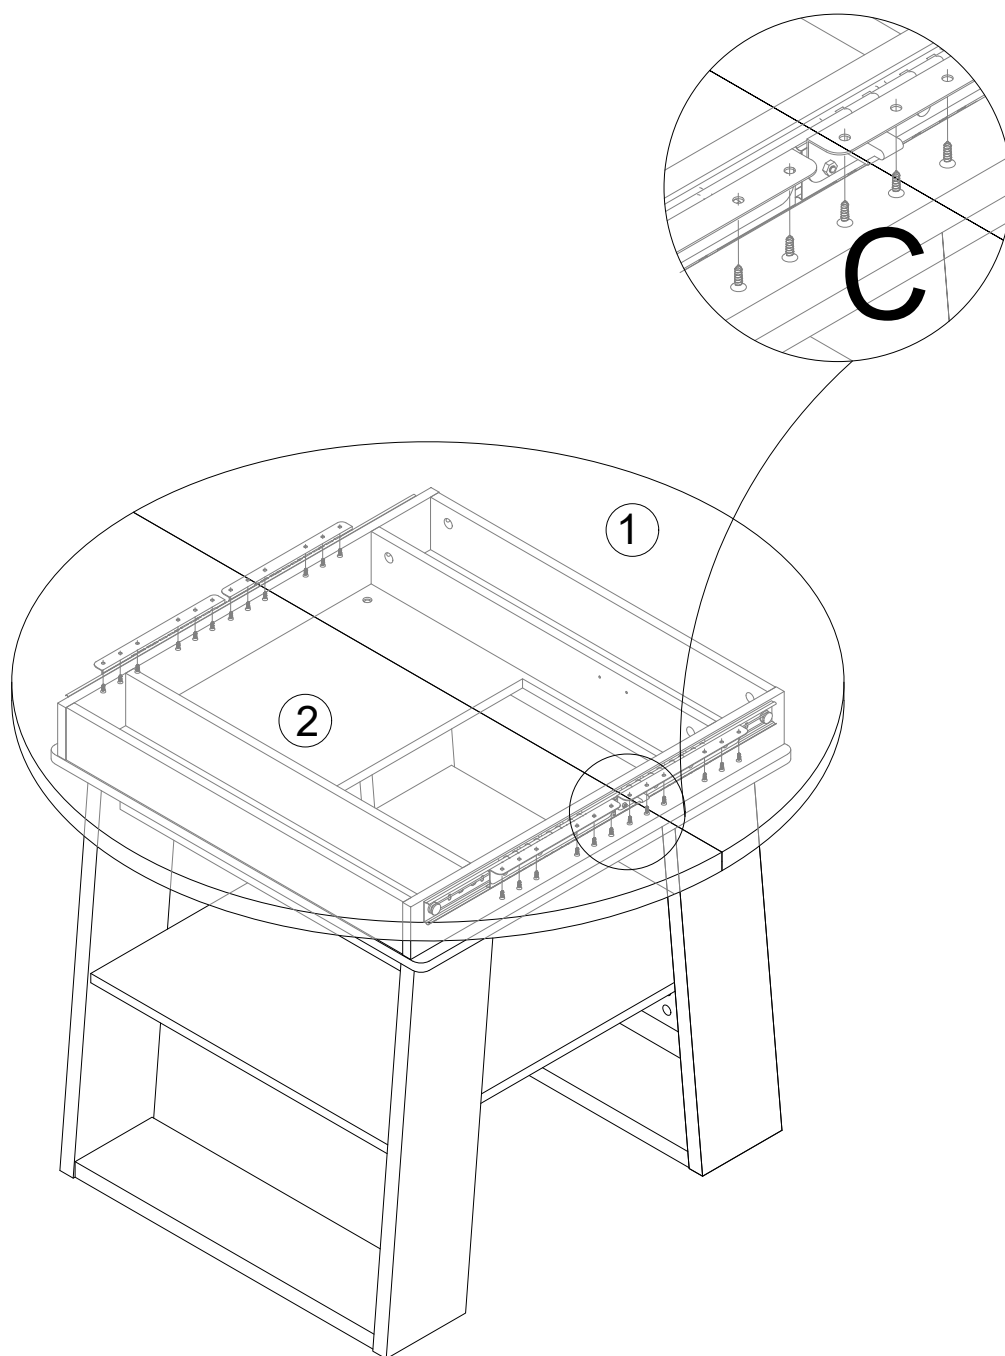



C



X24

Assembly Instructions


Step 12

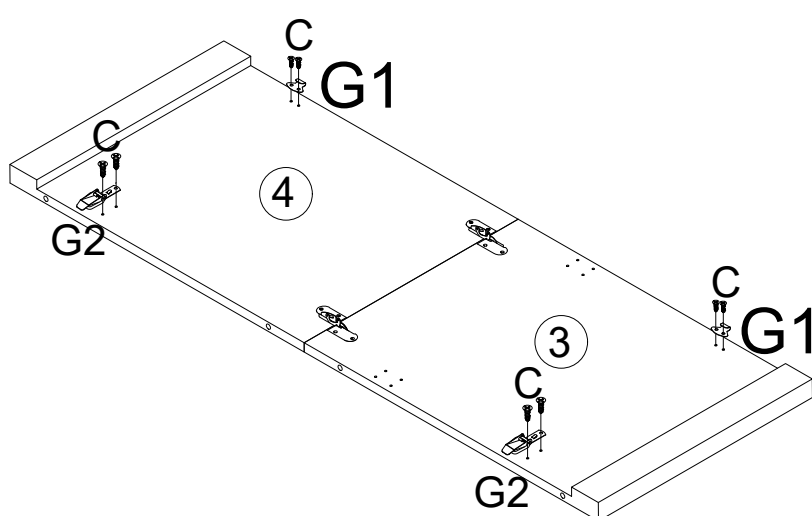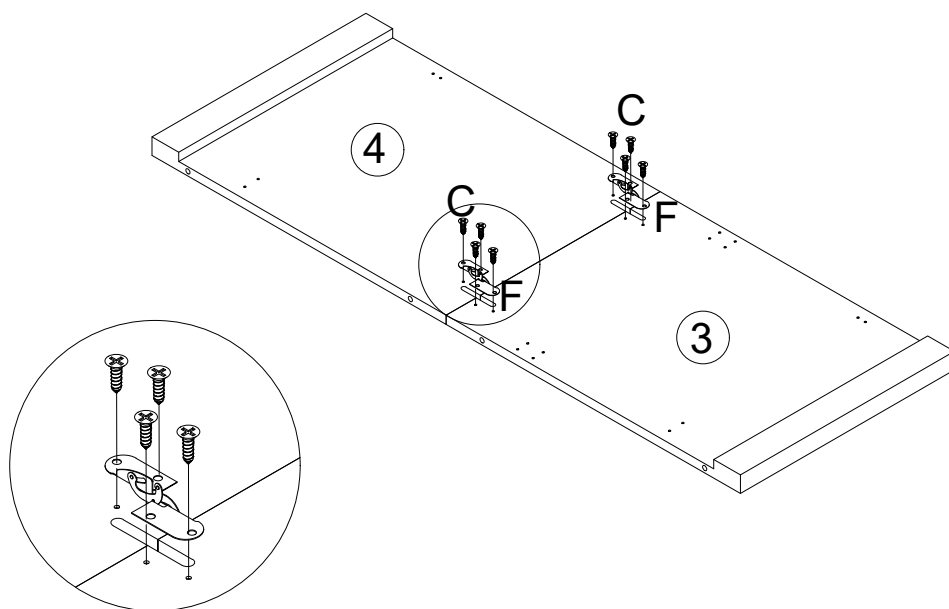

C		X16
G1		X2
G2		X2
F		X2



Assembly Instructions

Step 13

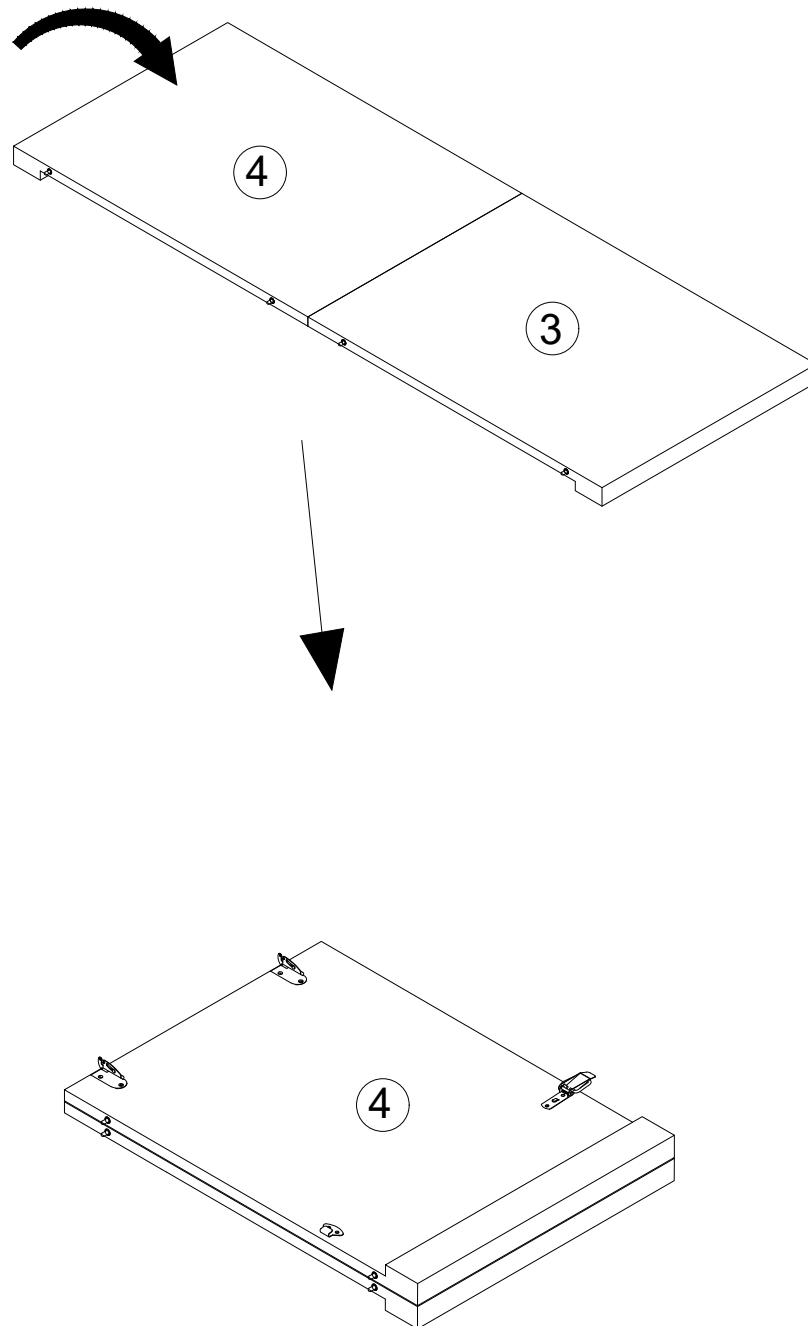

Assembly Instructions

Step 14

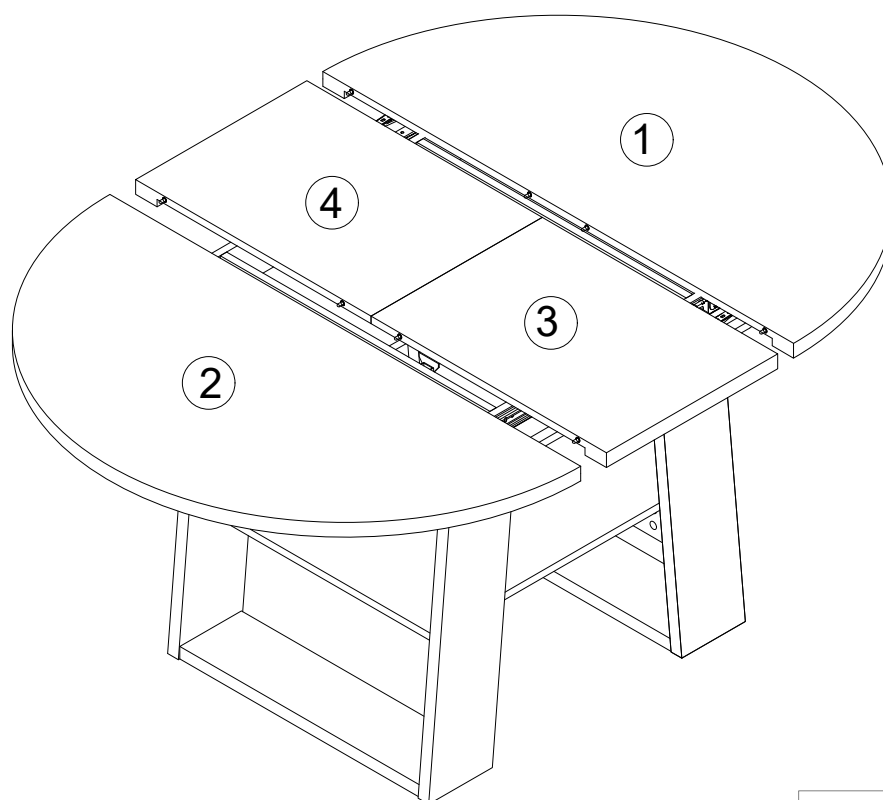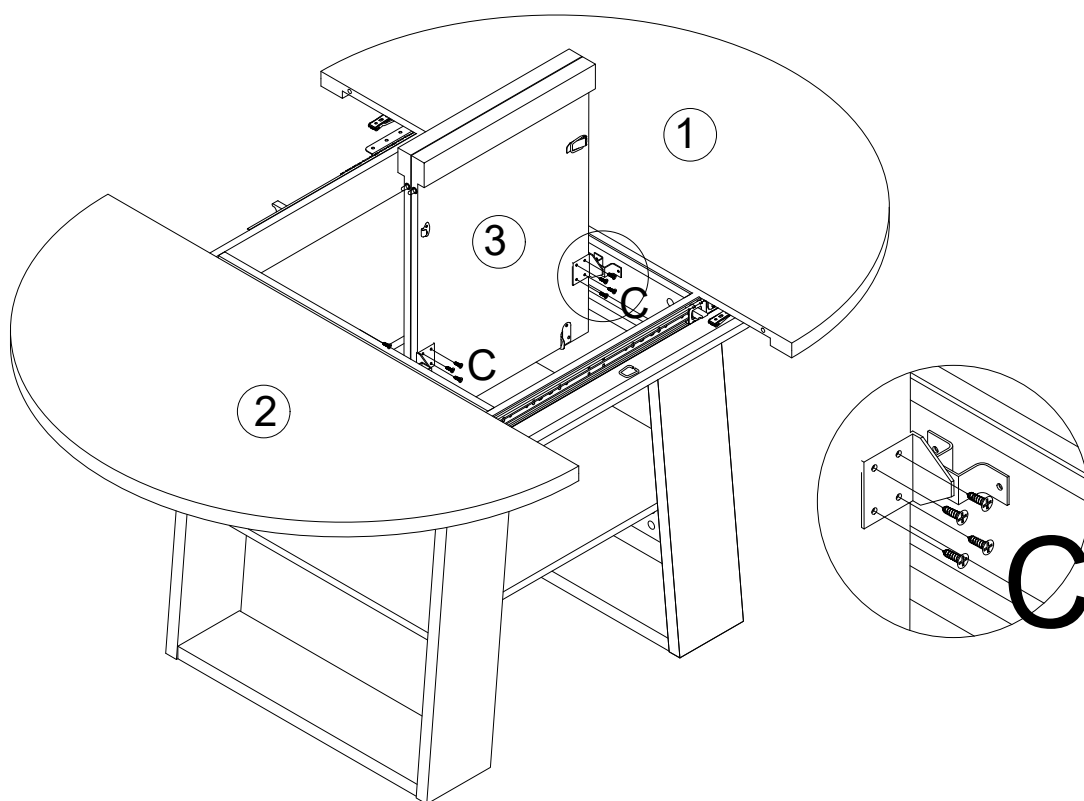



C  X8

Assembly Instructions

Step 15

Method 1



Attention: Please lock this accessory after installation is complete

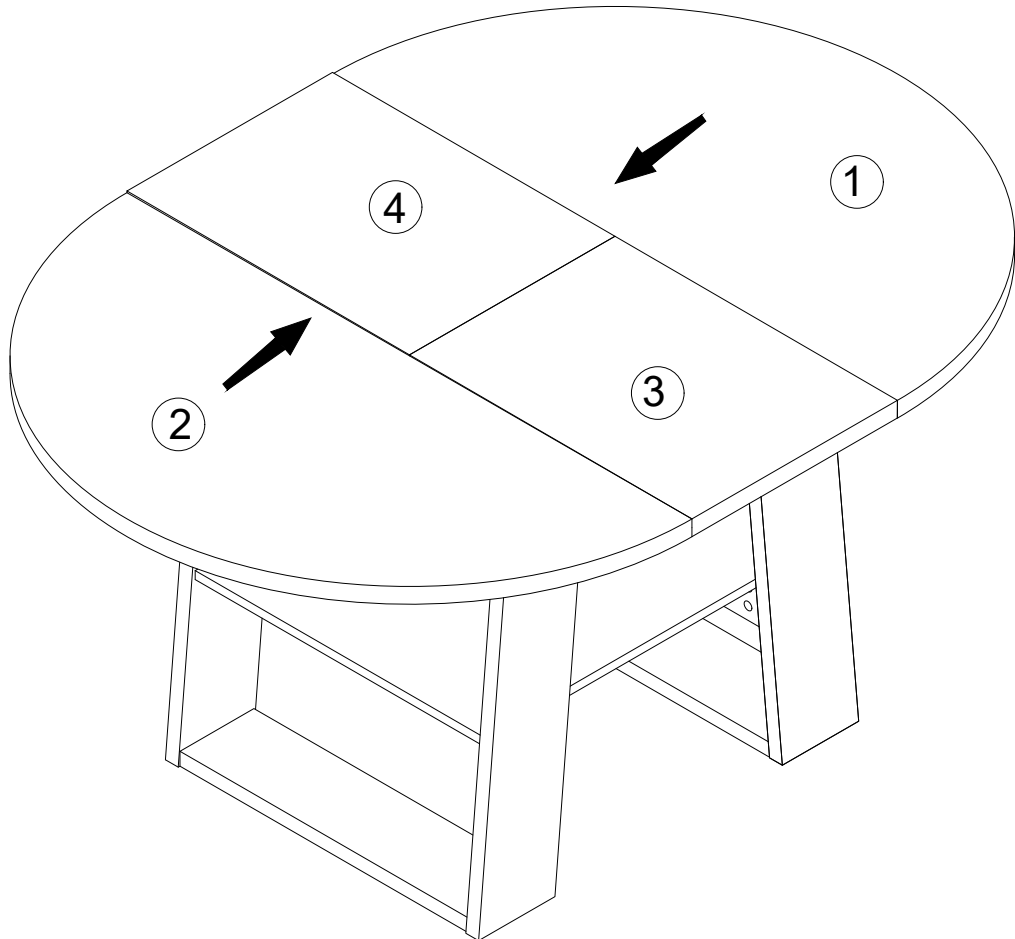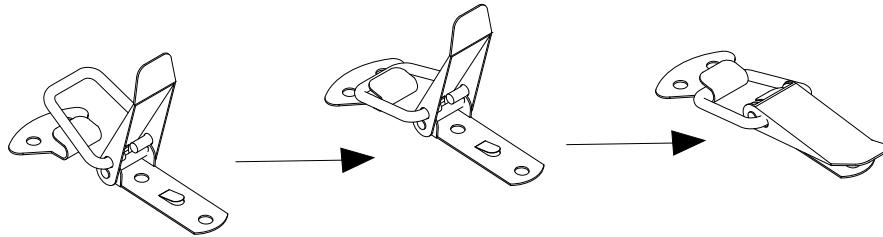


Assembly Instructions

Step 16

Attention: Please open this accessory before pulling apart the desktop

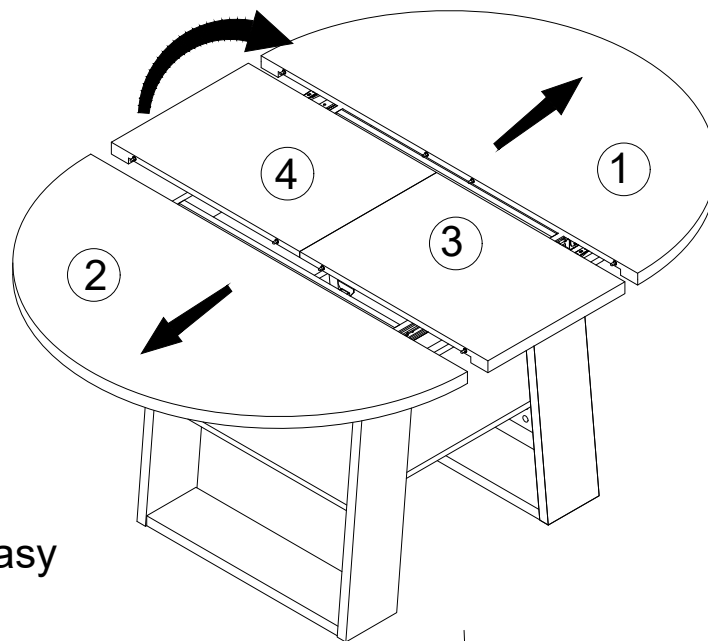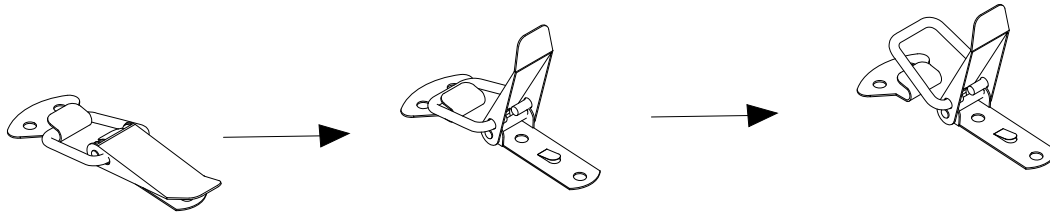


Please install according to the diagram here, otherwise it is easy to damage the board.

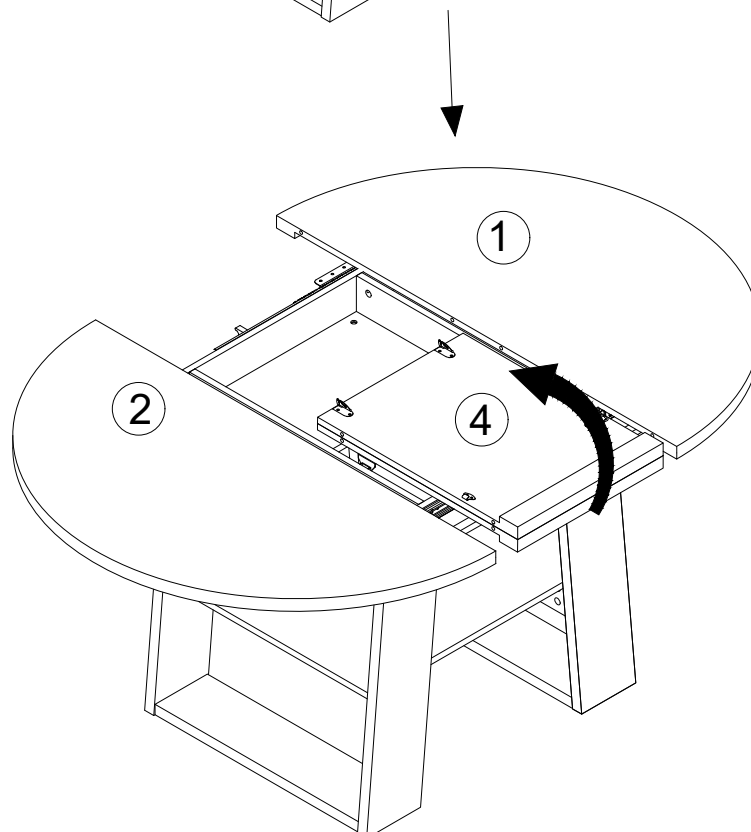


Assembly Instructions

Step 17

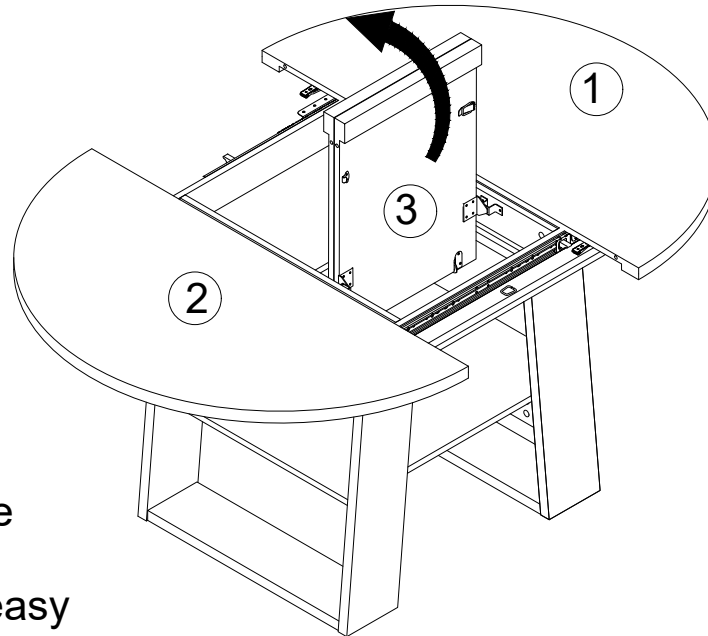

Please install according to the diagram here, otherwise it is easy to damage the board.

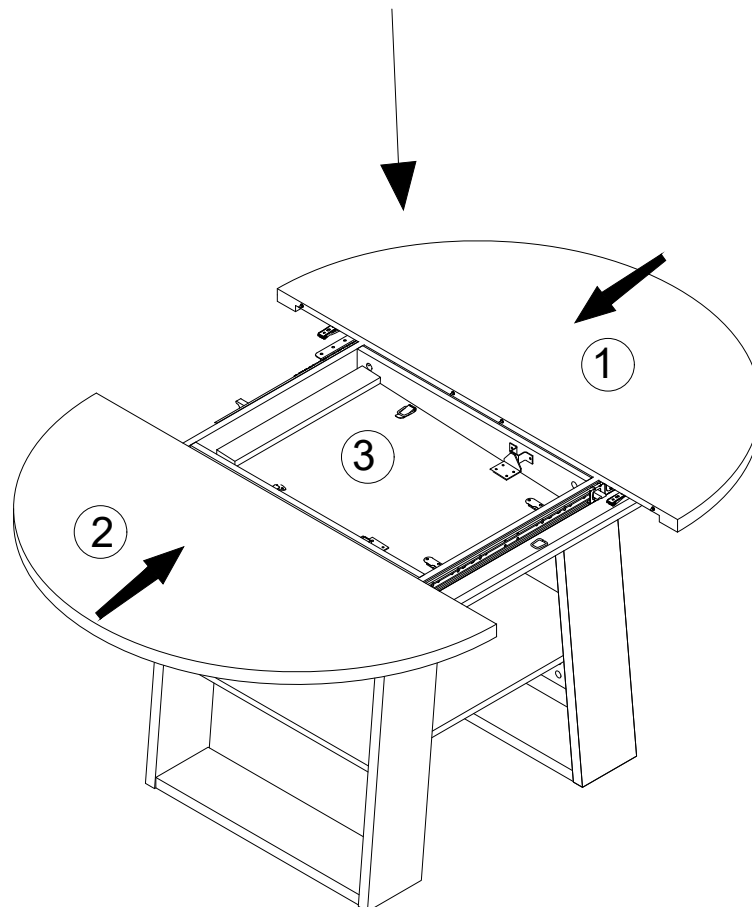

Assembly Instructions

Step 18

Method 2

Attention: Please lock this accessory after installation is complete

