





₽ A×8

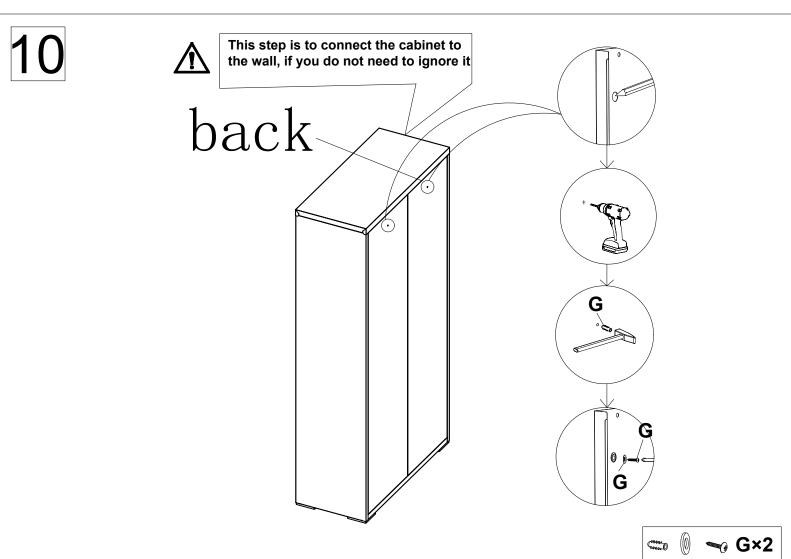

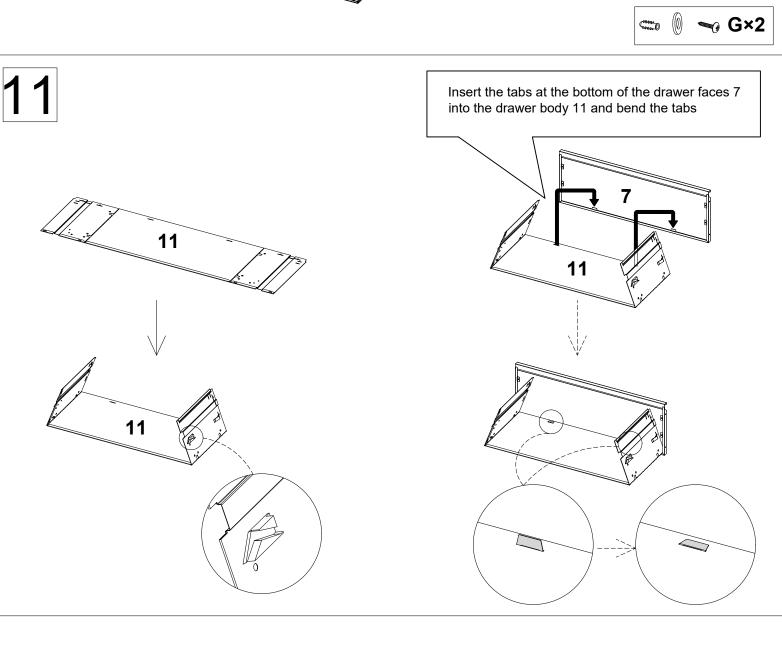

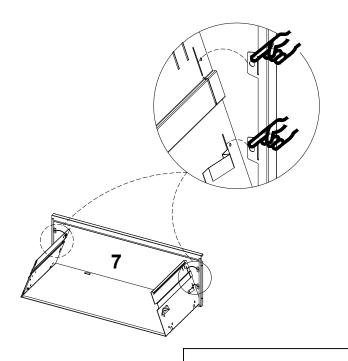


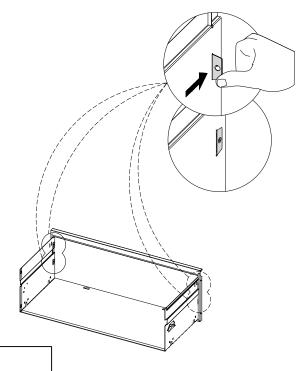

Bend the tabs on the drawer faces.

13

Put four screws to hold them in place

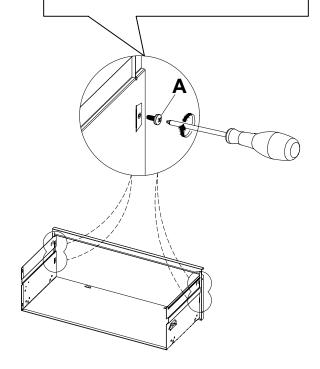

Make sure that the little bits protruding from part 8 are all inserted.

Note that the slots on the back wall of the drawer should face up.

