





ASSEMBLY INSTRUCTIONS

High gloss twin bed with 2 drawers

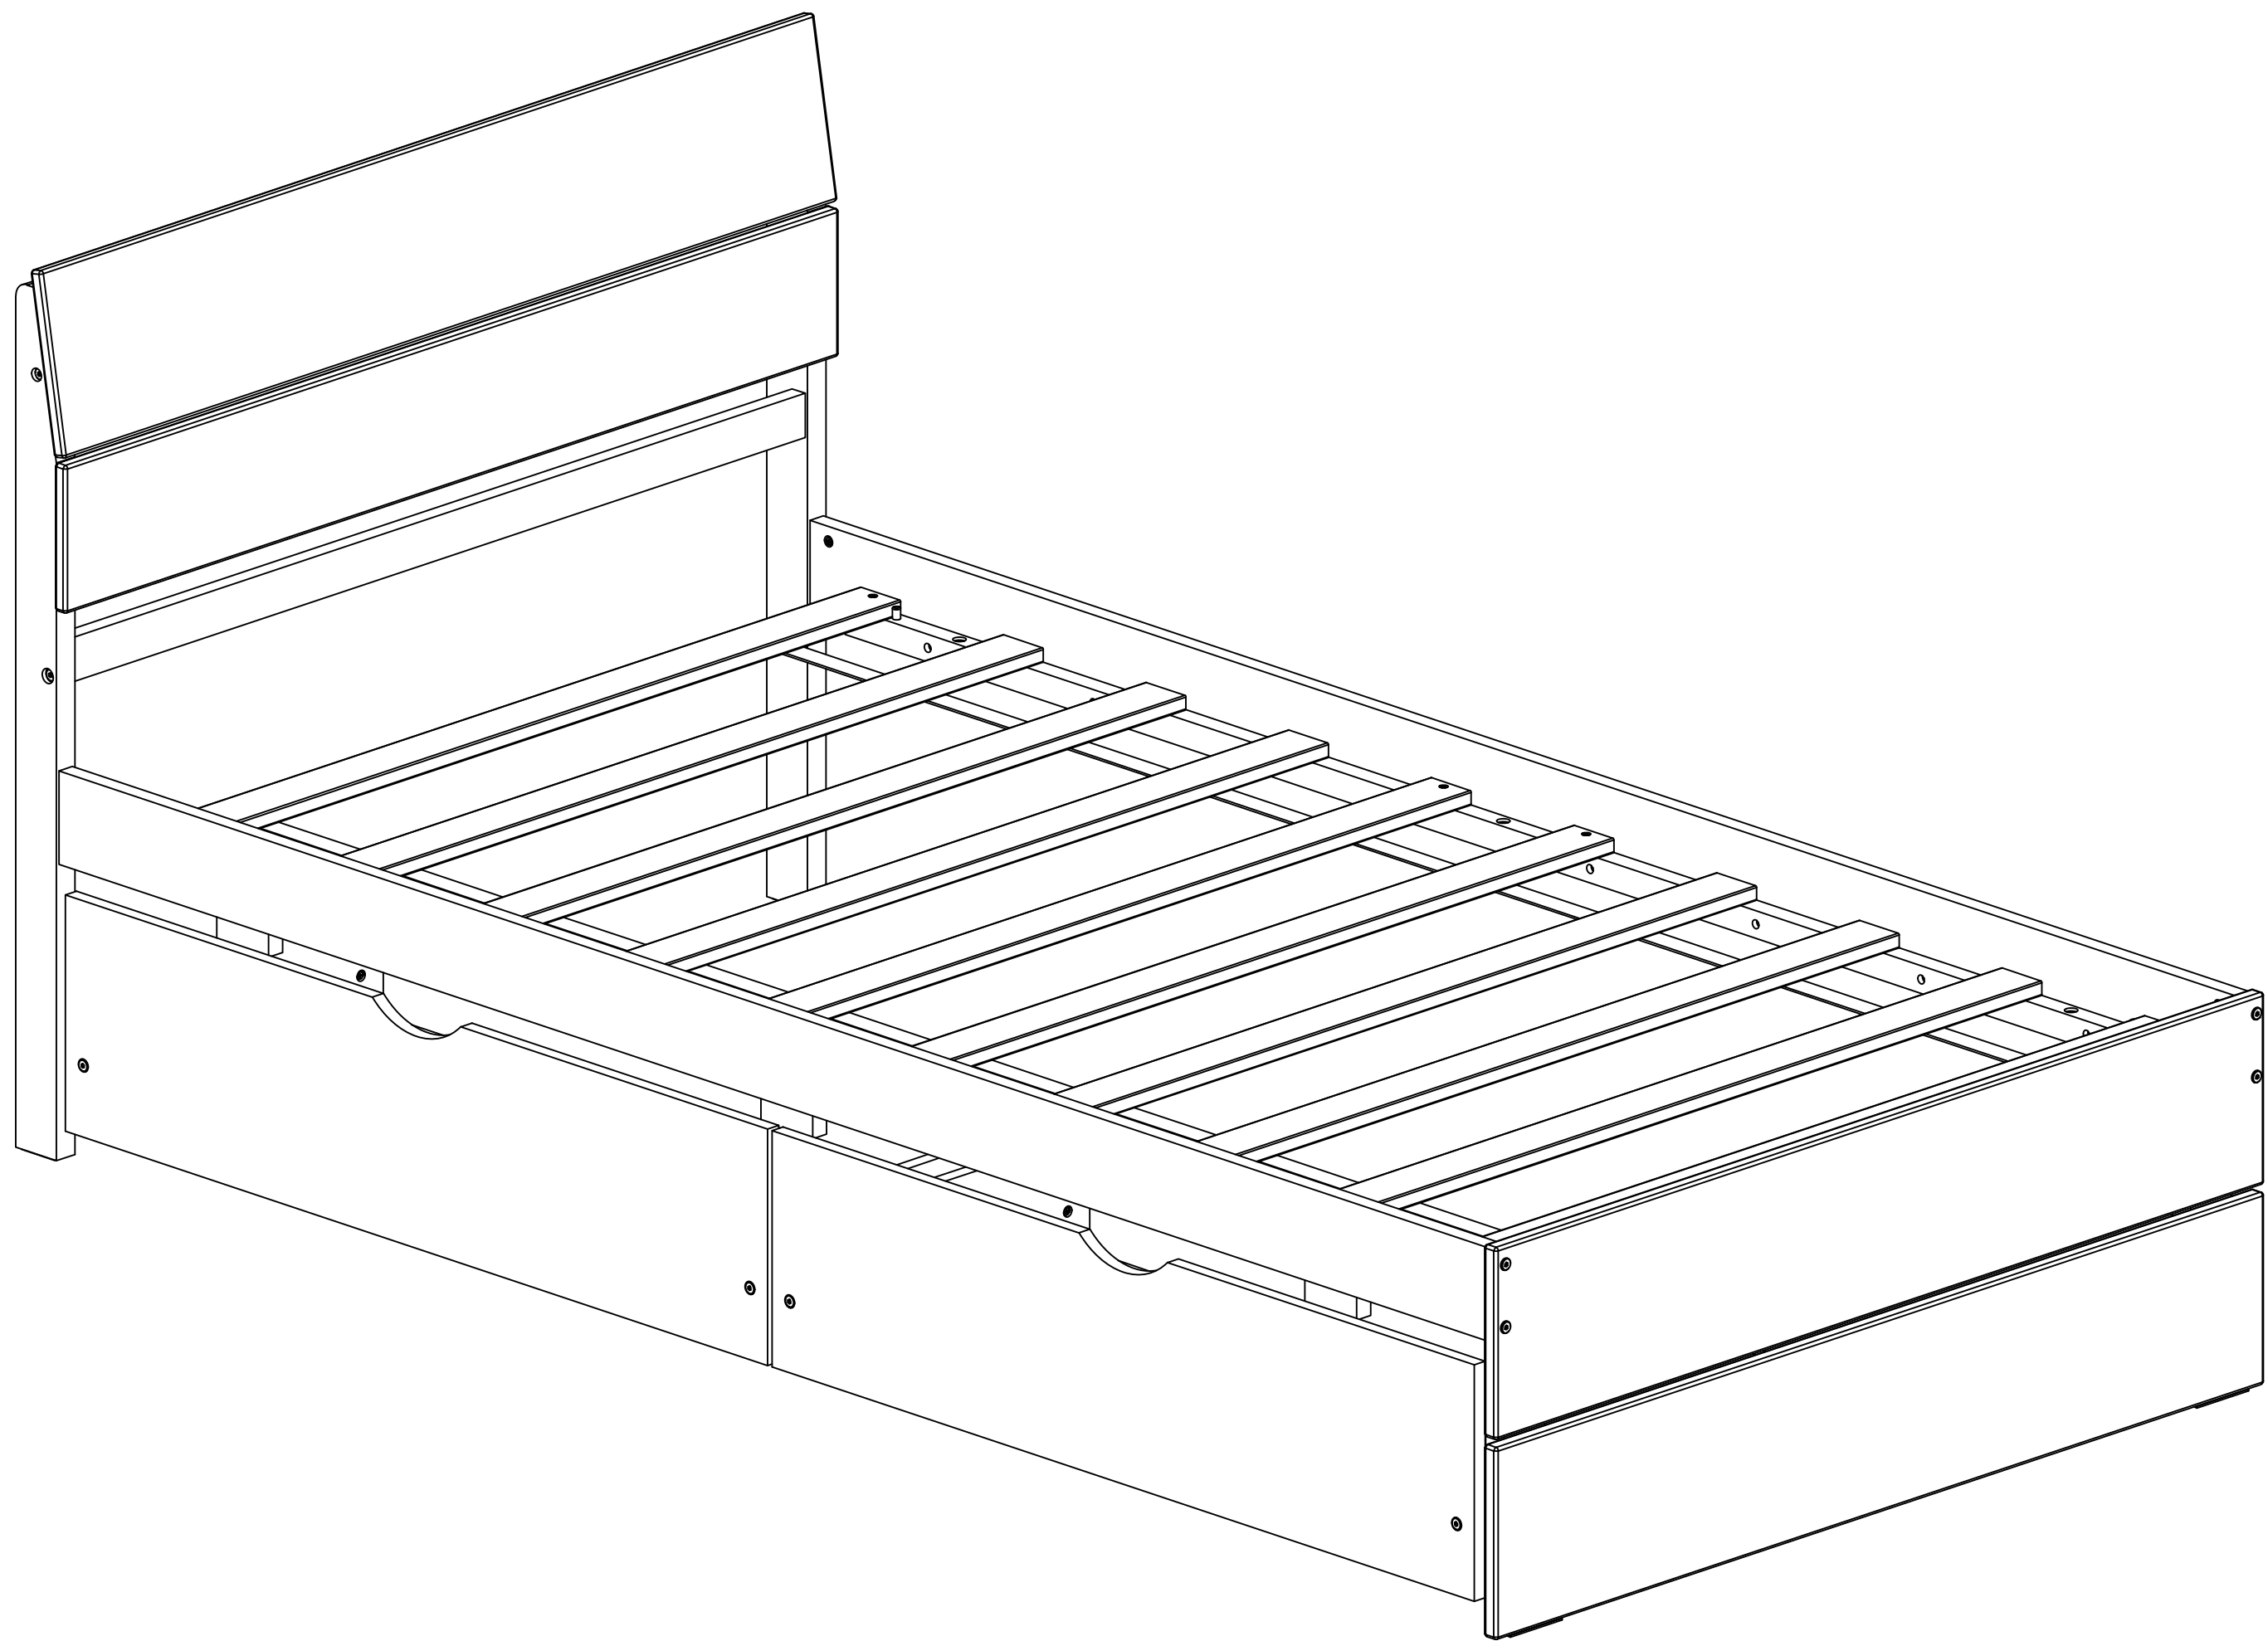









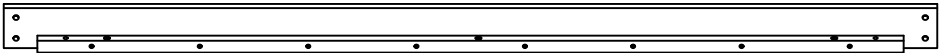
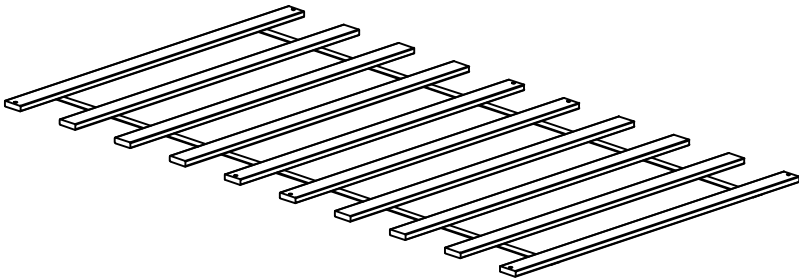
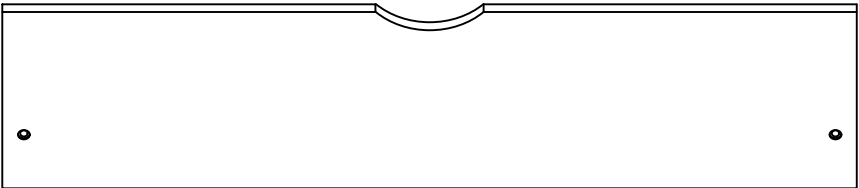
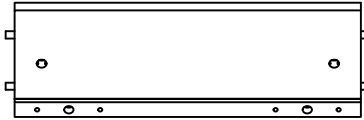
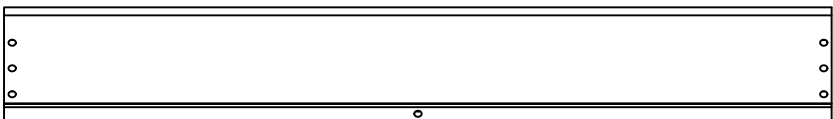

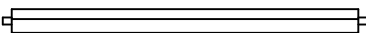
YX7110

Detail View





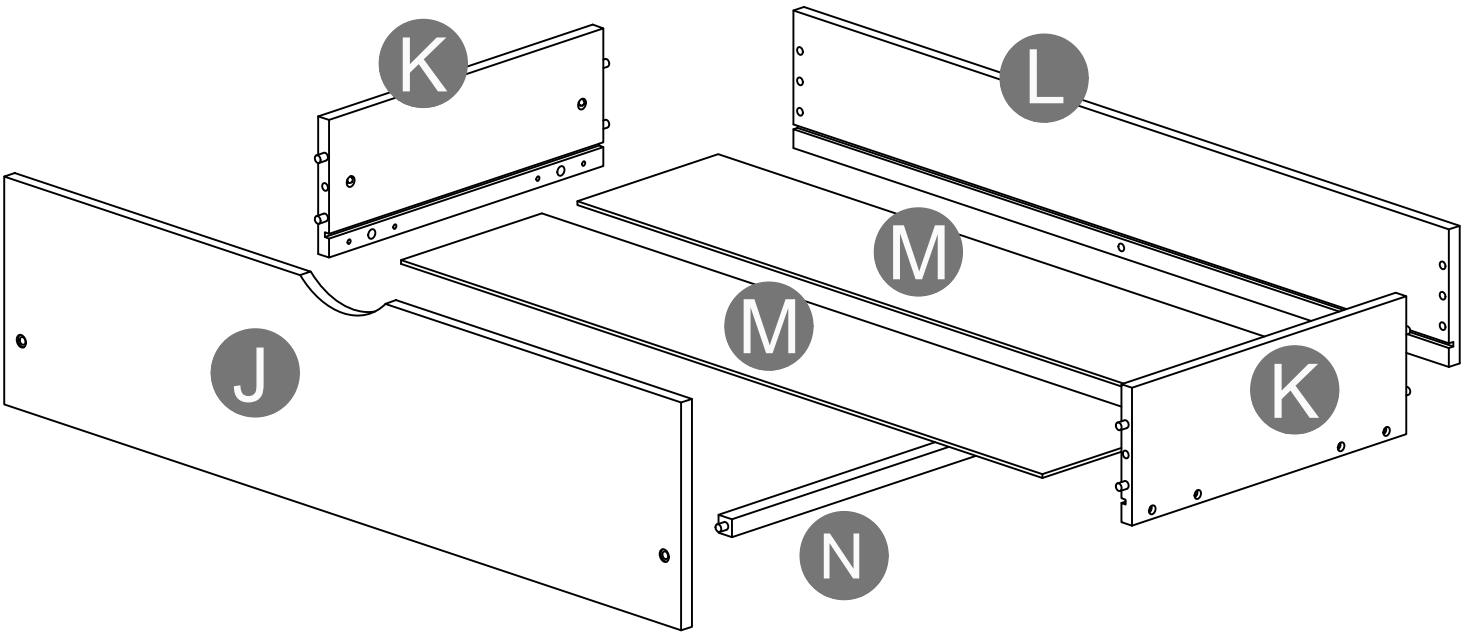
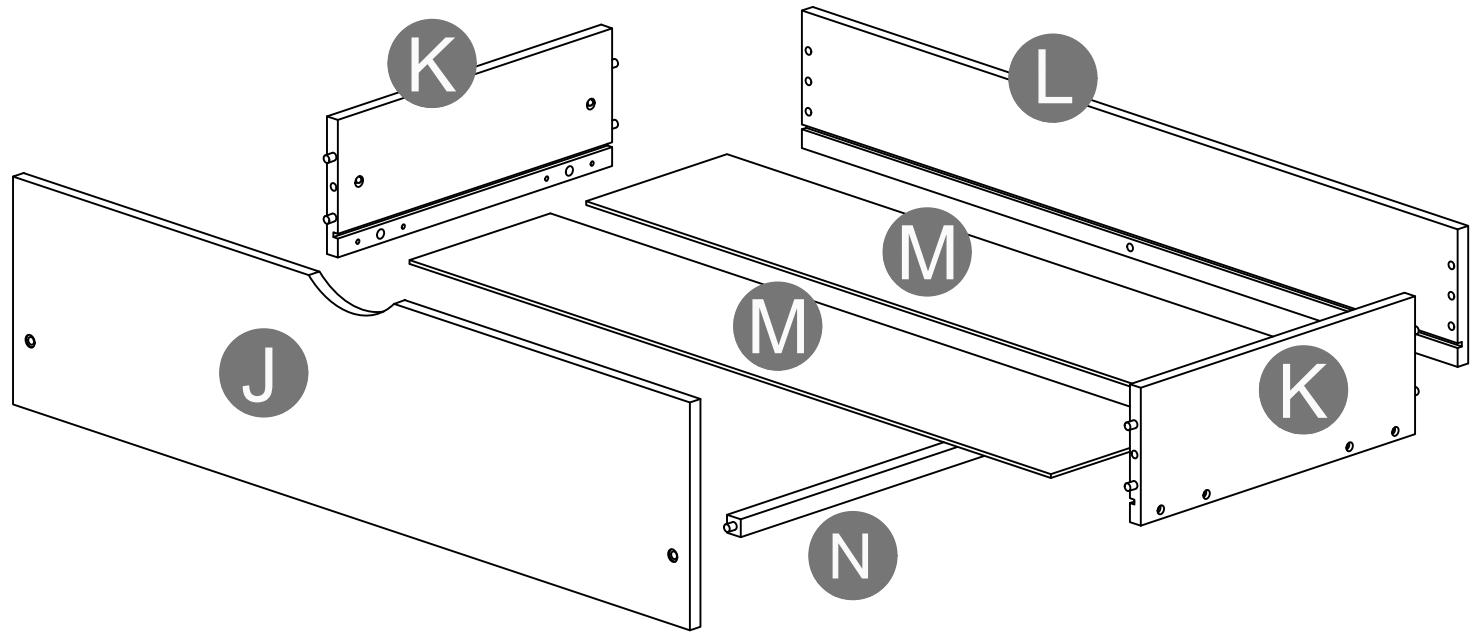
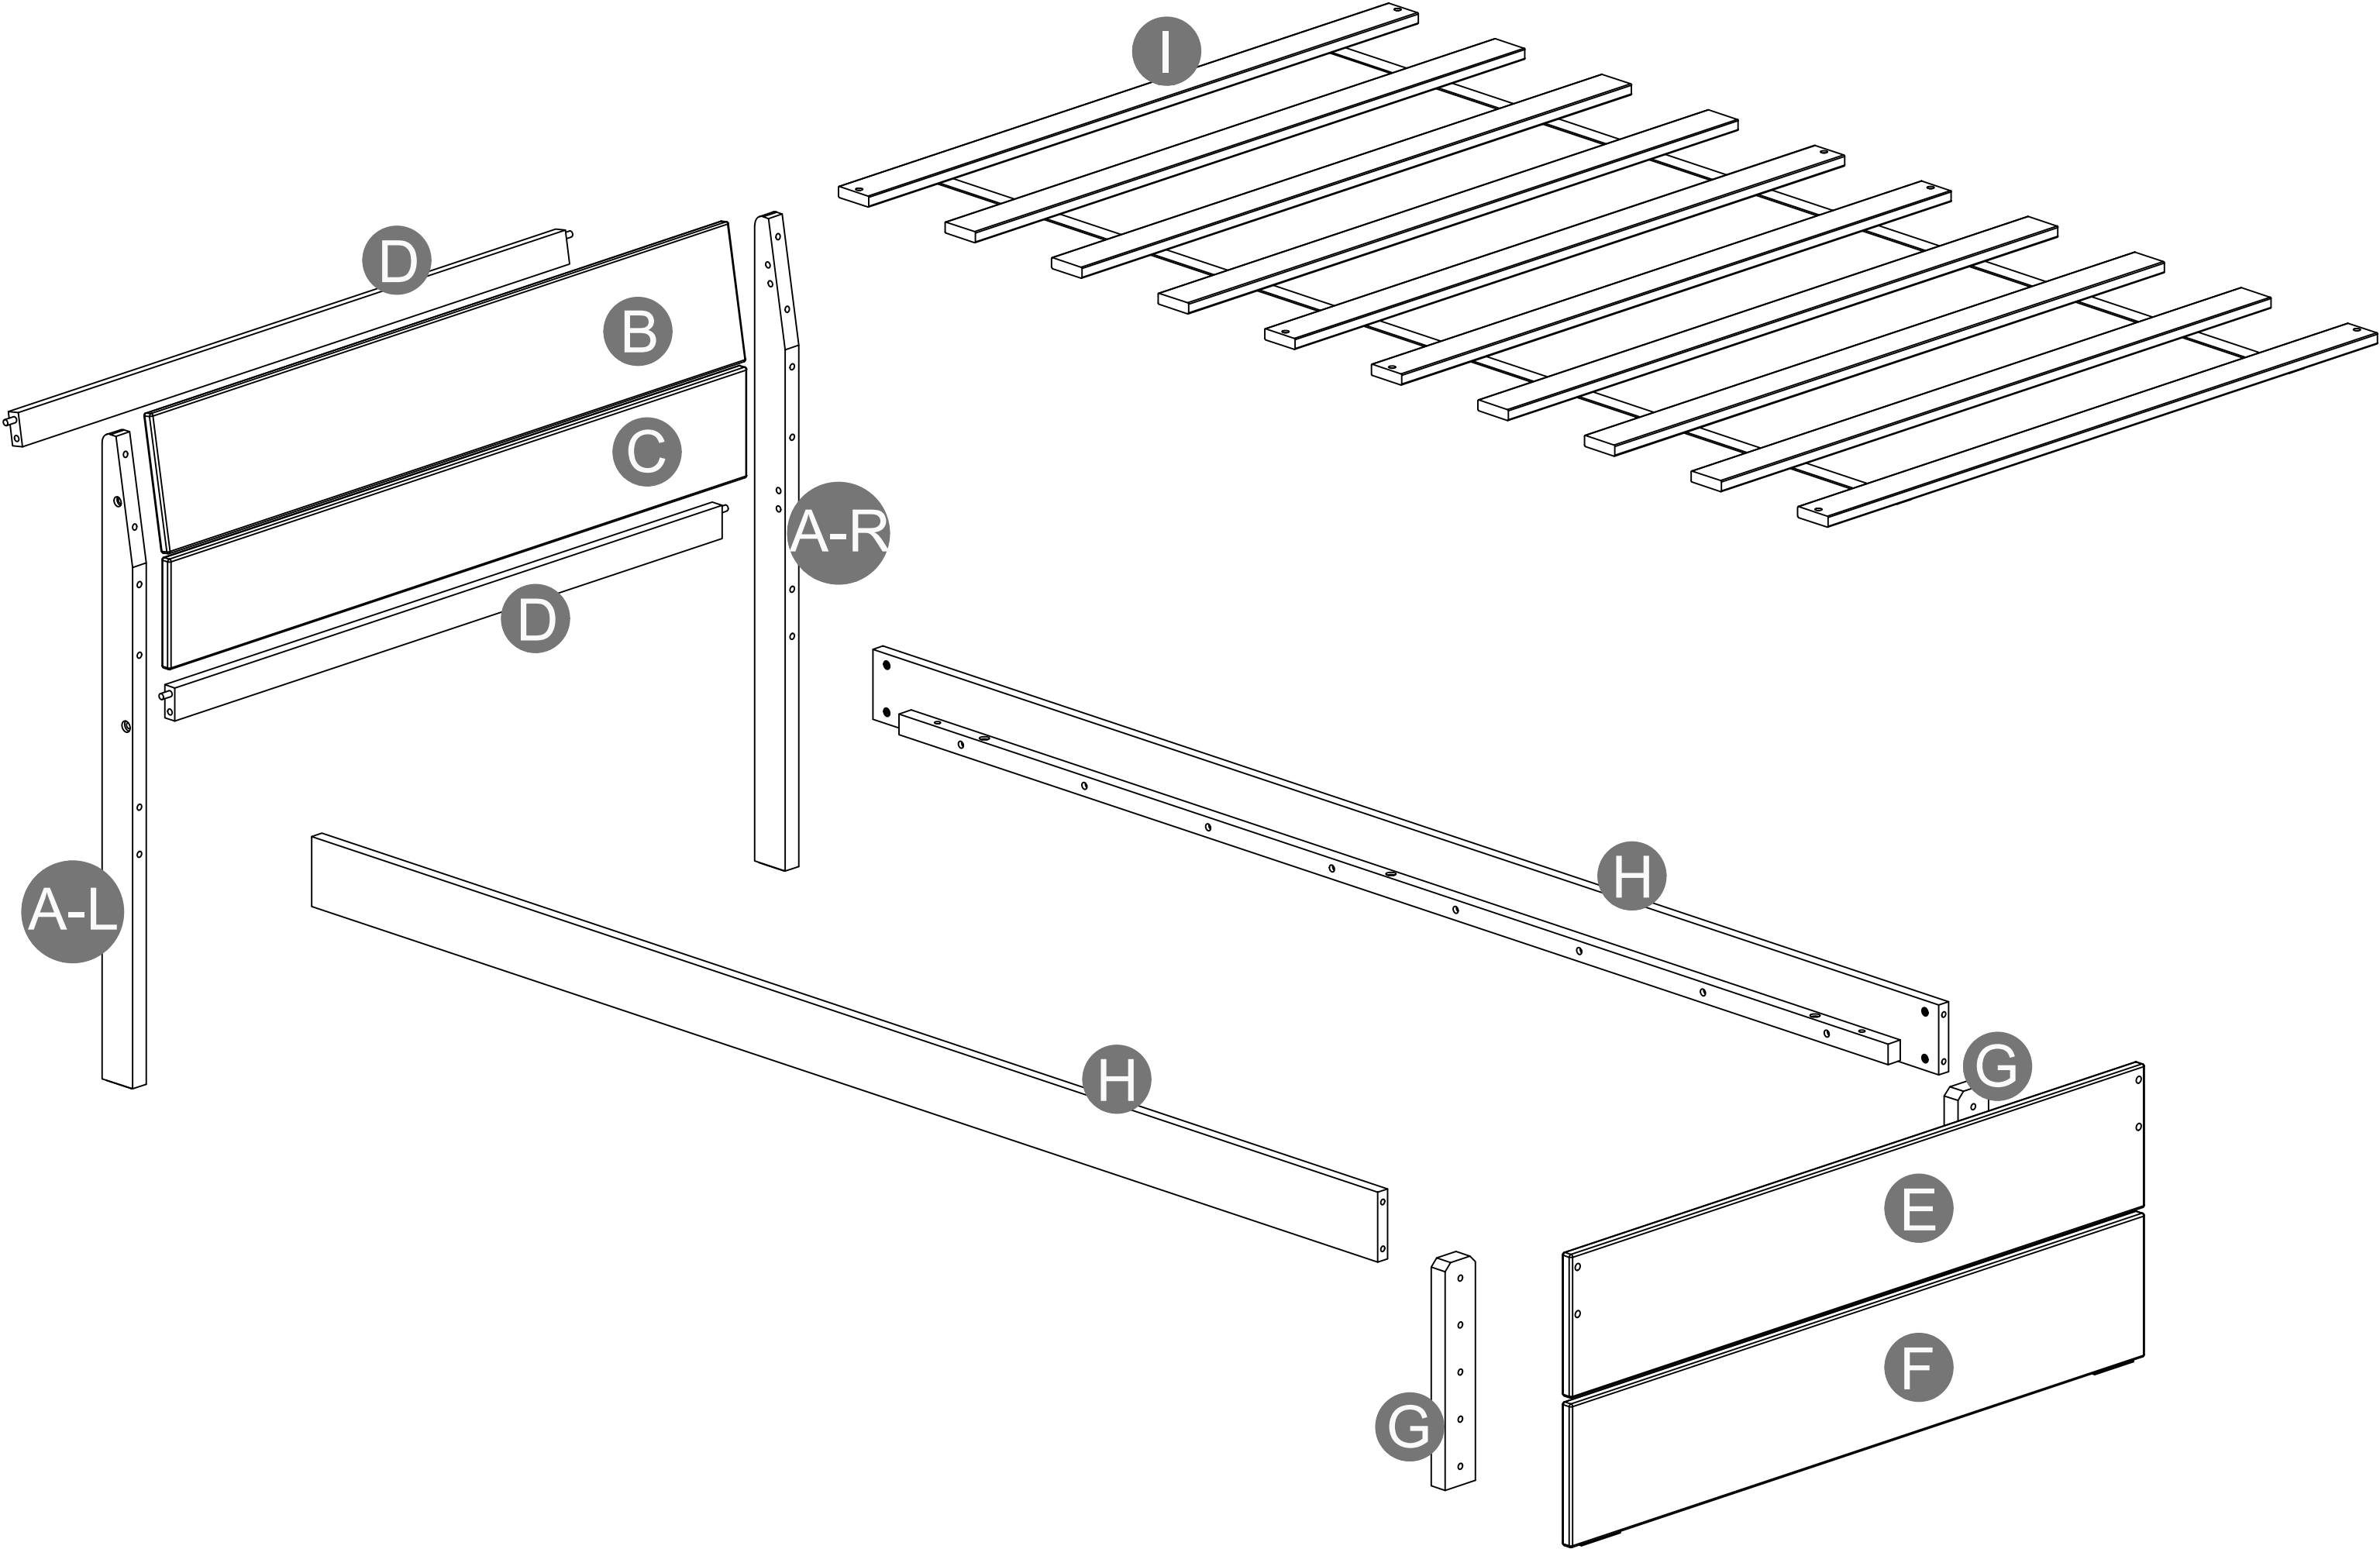


YX7110







Part List

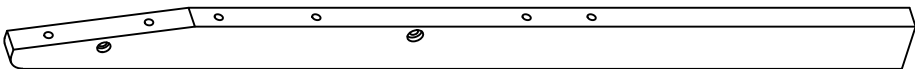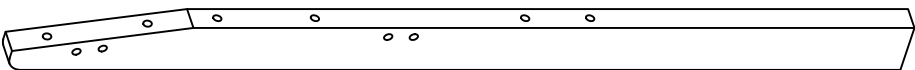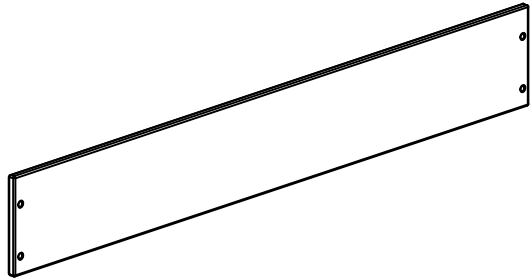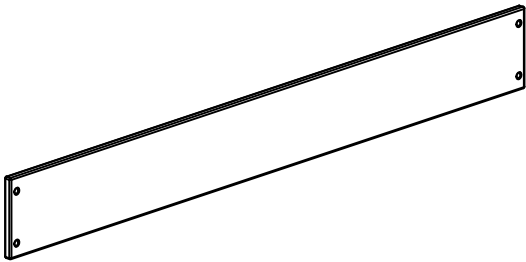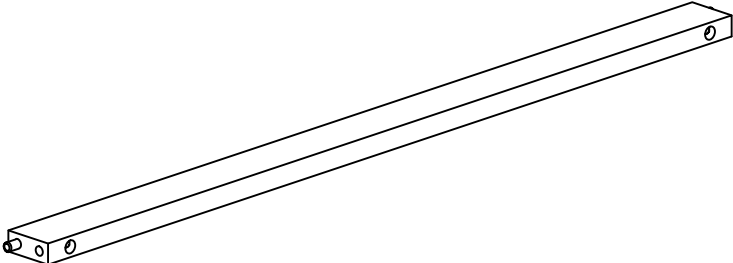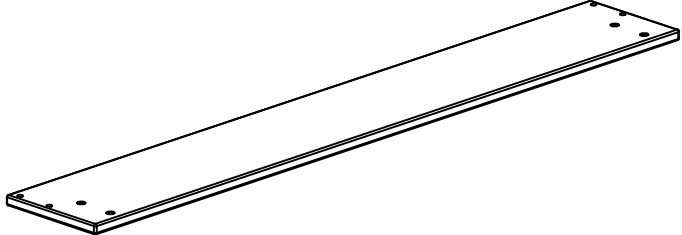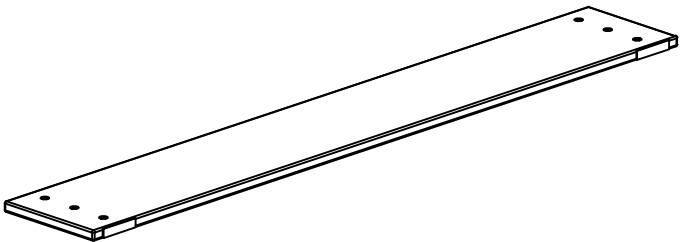A-L  Headboard leg (Left)-1pc	A-R  Headboard leg (Right)-1pc	B  Horizontal upper Panel HB-1pc
C  Horizontal bottom Panel HB-1pc	D  Horizontal bar HB-2pcs	E  Horizontal upper Panel FB-1pc
F  Horizontal bottom Panel FB-1pc	G  Vertical support bar FB-2pcs	H  Side rail-2pcs
I  Slat-10pcs	J  Front panel of drawer - 2pcs	K  Side panel of drawer - 4pcs
L  Back panel of drawer - 2pcs	M  Bottom panel of drawer-4pcs	N  Crossprece-2pcs



Hardware List (1/3)

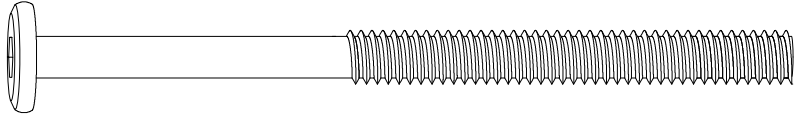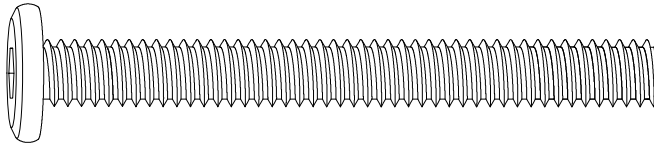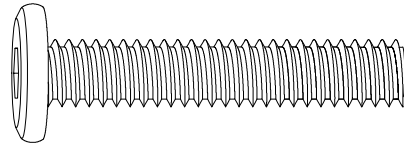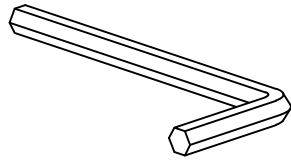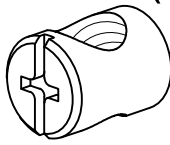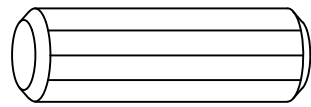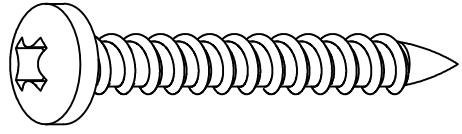1	 (Ø12)1/4"*85mm Hex-Head bolts (4pcs)	2	(Spare Hardware-1pc)  (Ø12)1/4"*55mm Hex-Head bolts (9pcs)	3	(Spare Hardware-2pcs)  (Ø12)1/4"*32mm Hex-Head bolts (20pcs)
4	 (1/4")4*60mm Allen key (1pc)	5	(Spare Hardware-1pc)  1/4"*15mm Horizontal-Hole bolts(13pcs)	6	 Ø8*25mm Wood dowel (4pcs)
7	(Spare Hardware-1pc)  Ø4*25mm Wood screws (9 pcs)				



Hardware List (2/3)

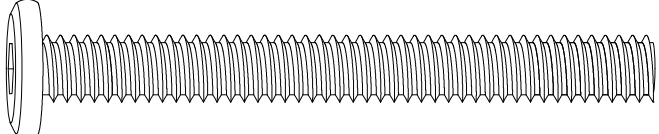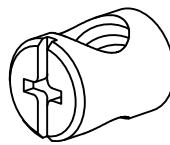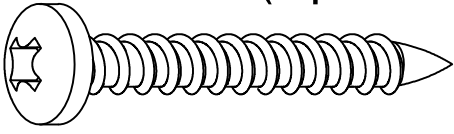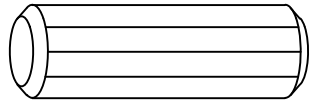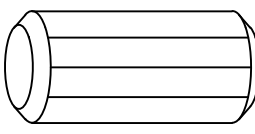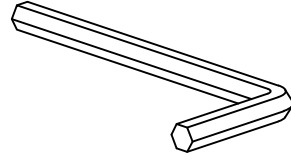8	(Spare Hardware-1pc)  (Ø12)1/4"*55mm Hex-Head bolts (12pcs)	9	(Spare Hardware-1pc)  1/4"*12mm Horizontal-Hole bolts(9pcs)	10	(Spare Hardware-2pcs)  Ø4*25mm Wood screws (18 pcs)
11	 Ø8*25mm Wood dowel (3pcs)	12	(Spare Hardware-1pc)  Ø10*20mm Wood dowel (9pcs)	13	 (1/4")4*60mm Allen key (1pc)

Hardware List (3/3)

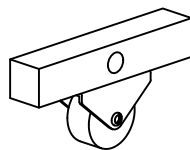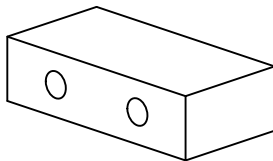14	 100*53*19mm Wheels (8pcs)	15	 70*38*19mm Stopper (3pcs)
----	---	----	--

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

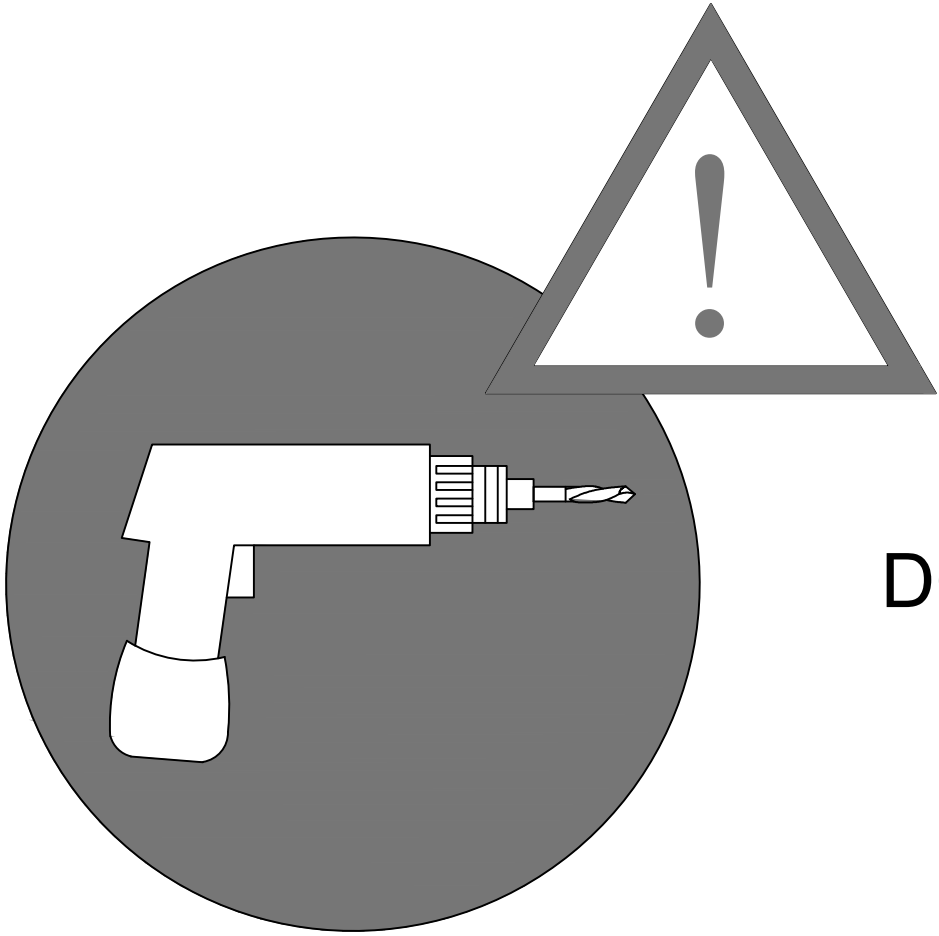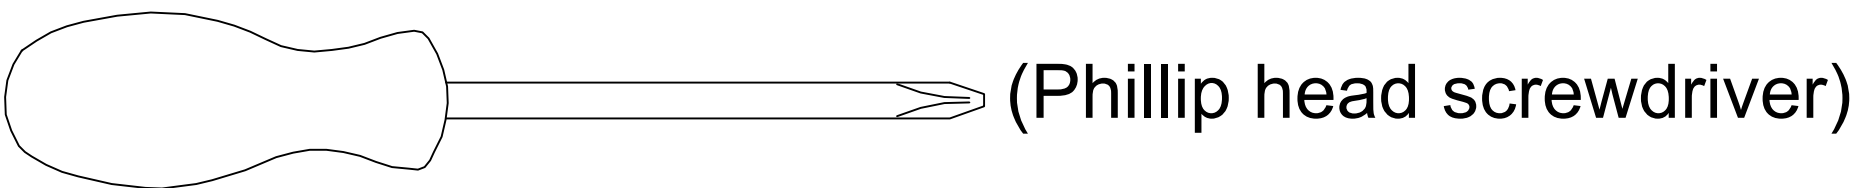


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.


STEP 1:

2

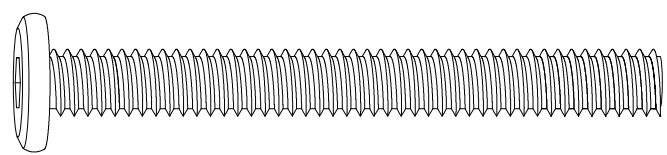


4pcs

5

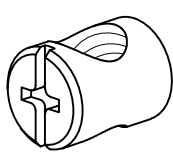


4pcs

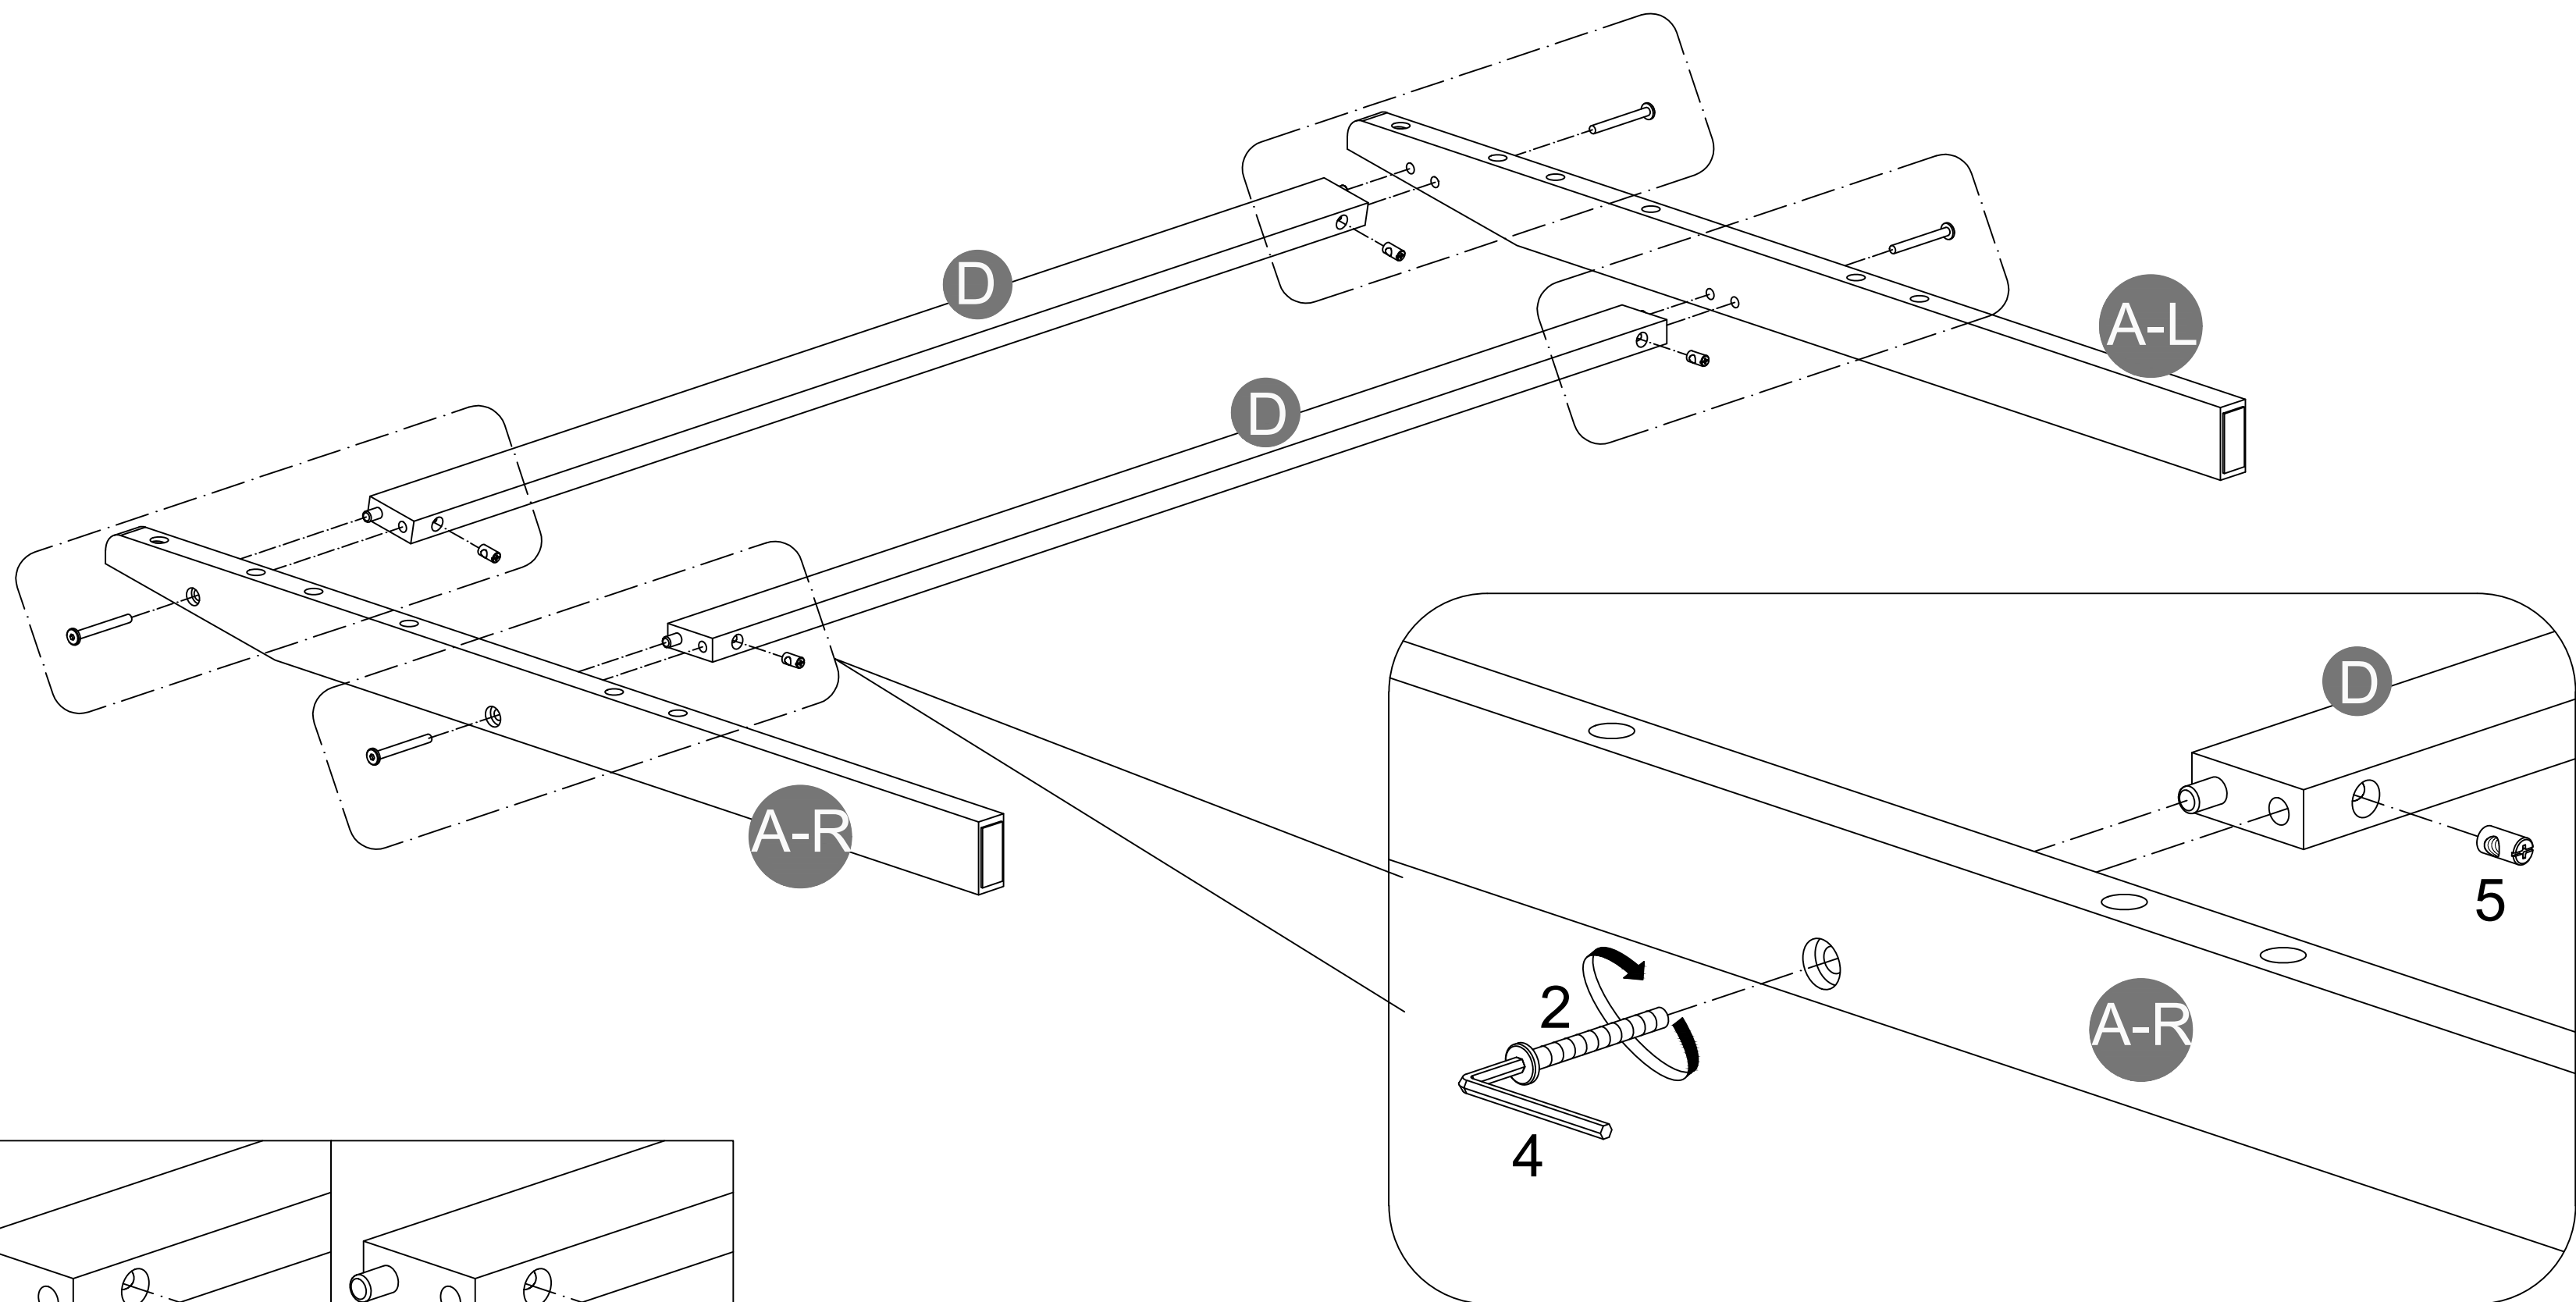


Note:Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:


3

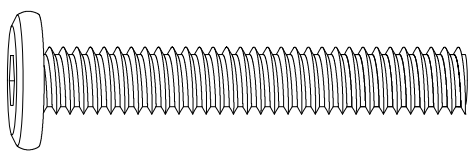


8pcs

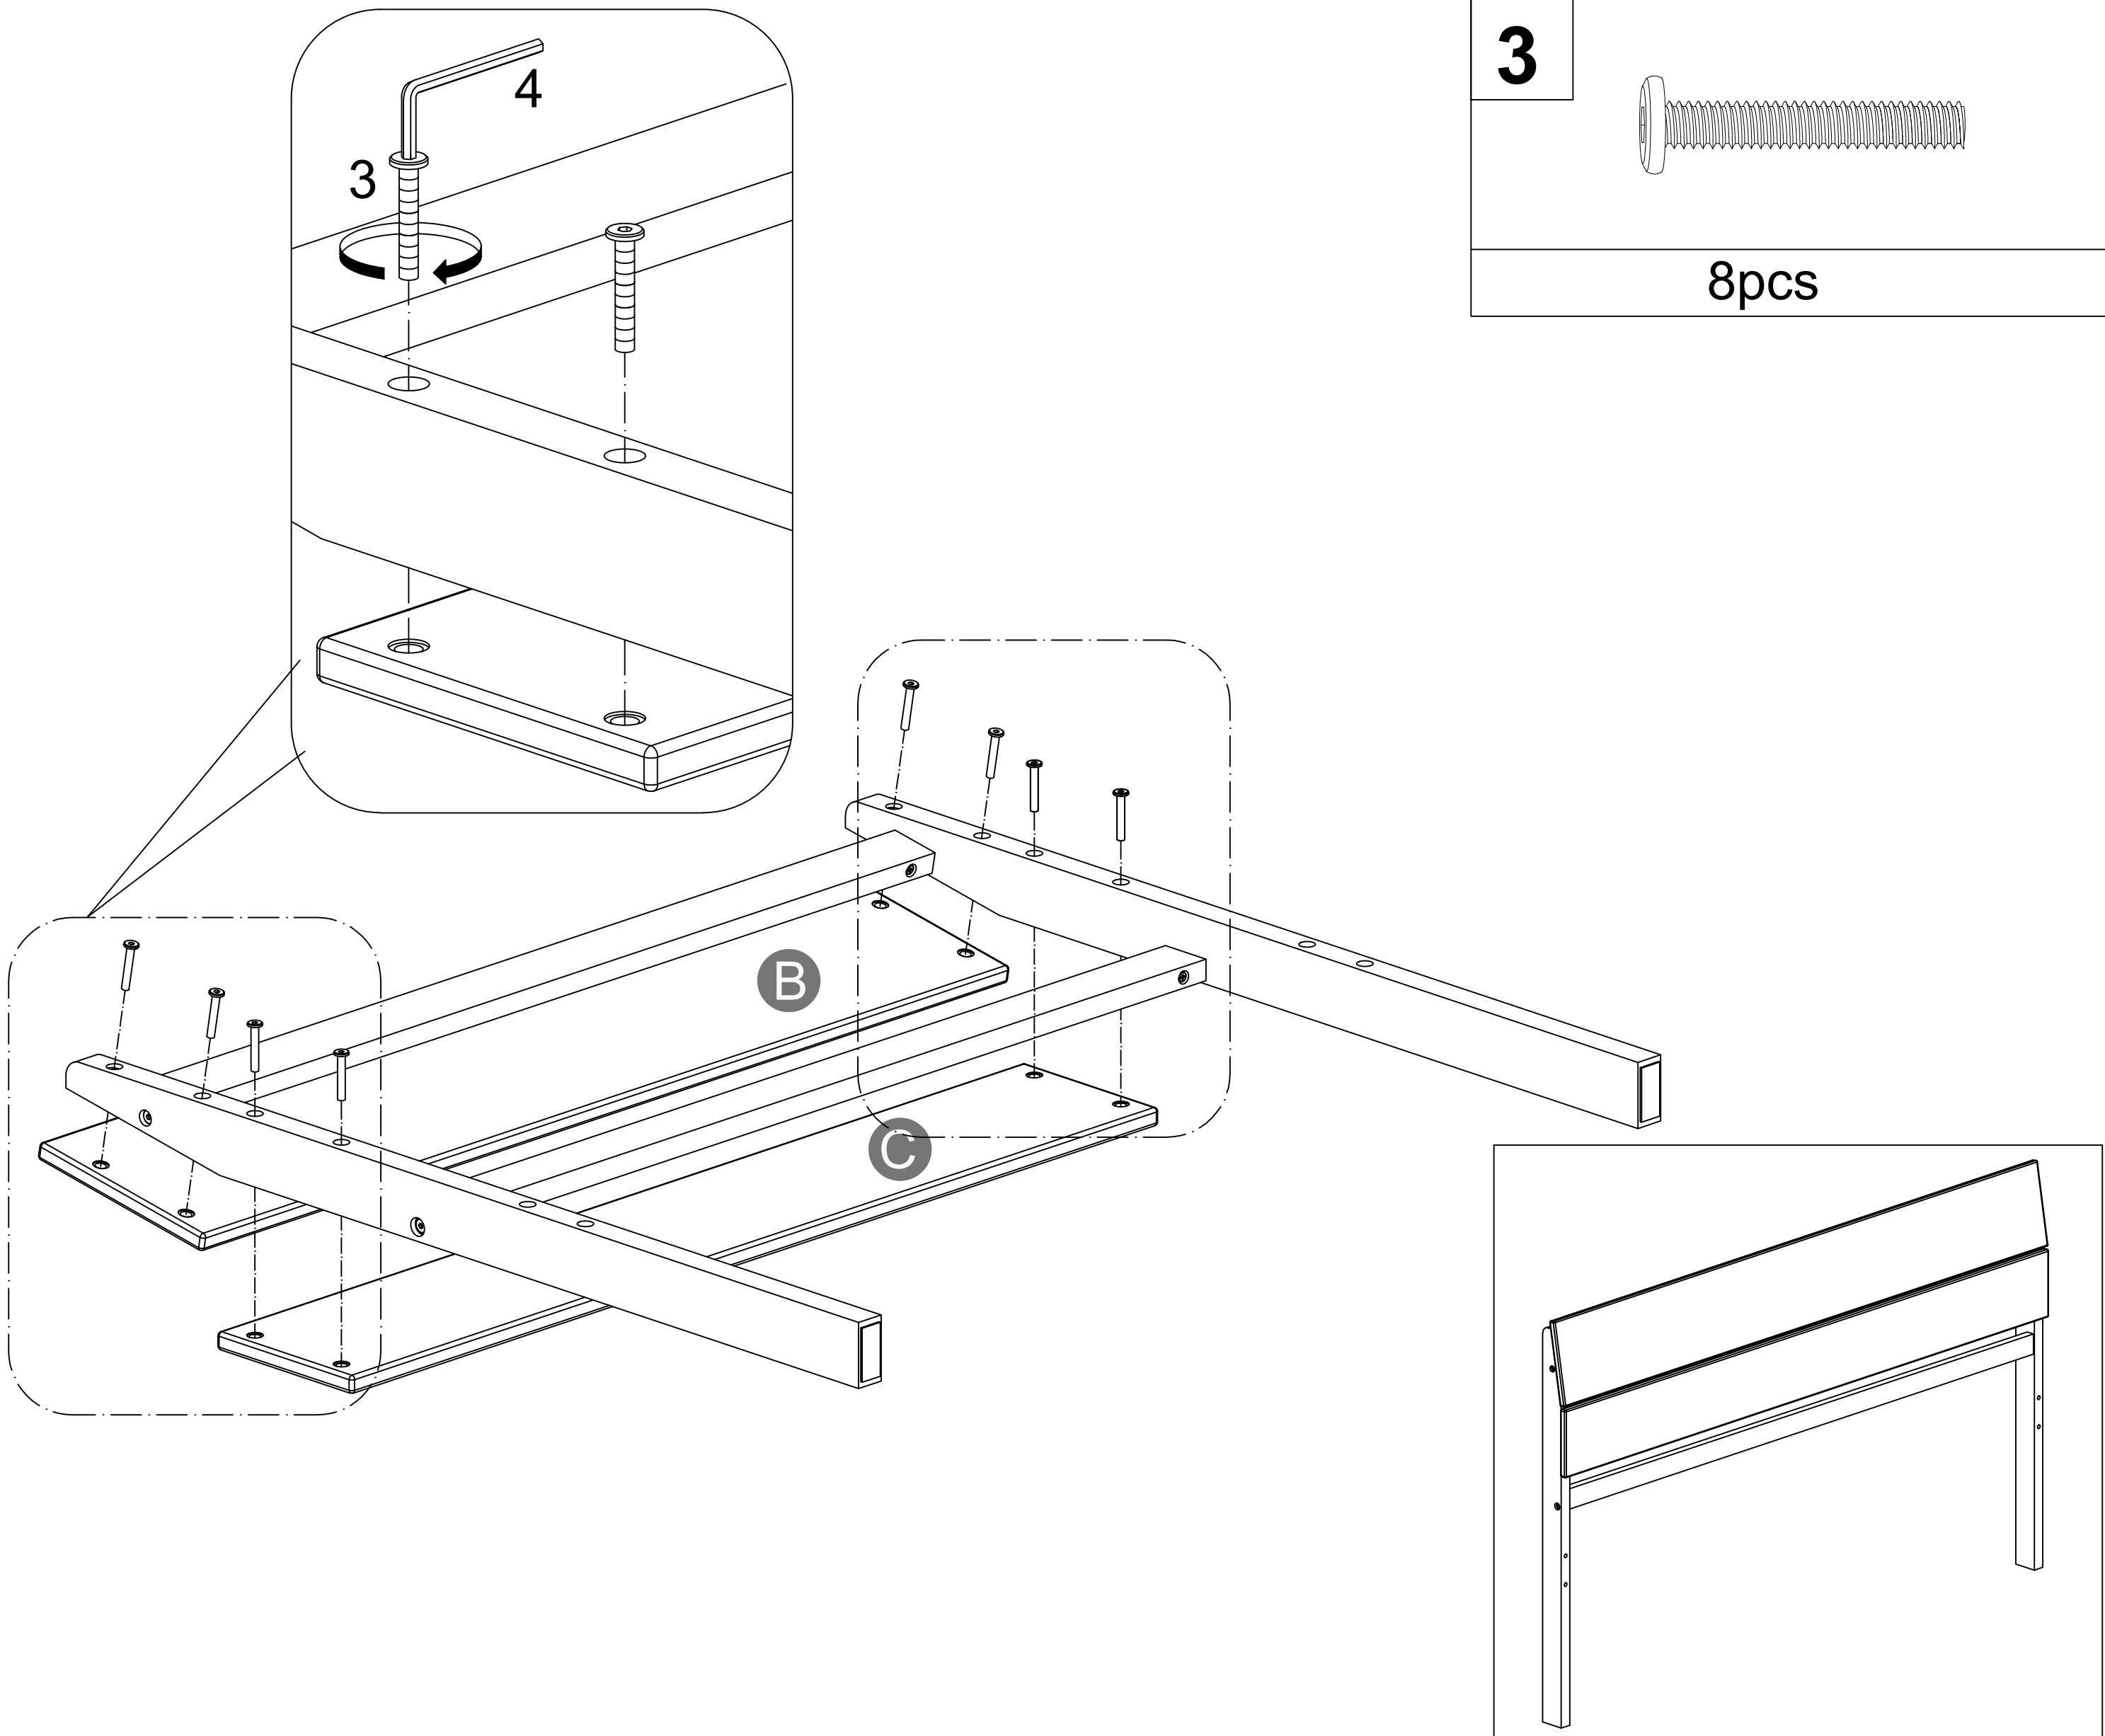



STEP 3:



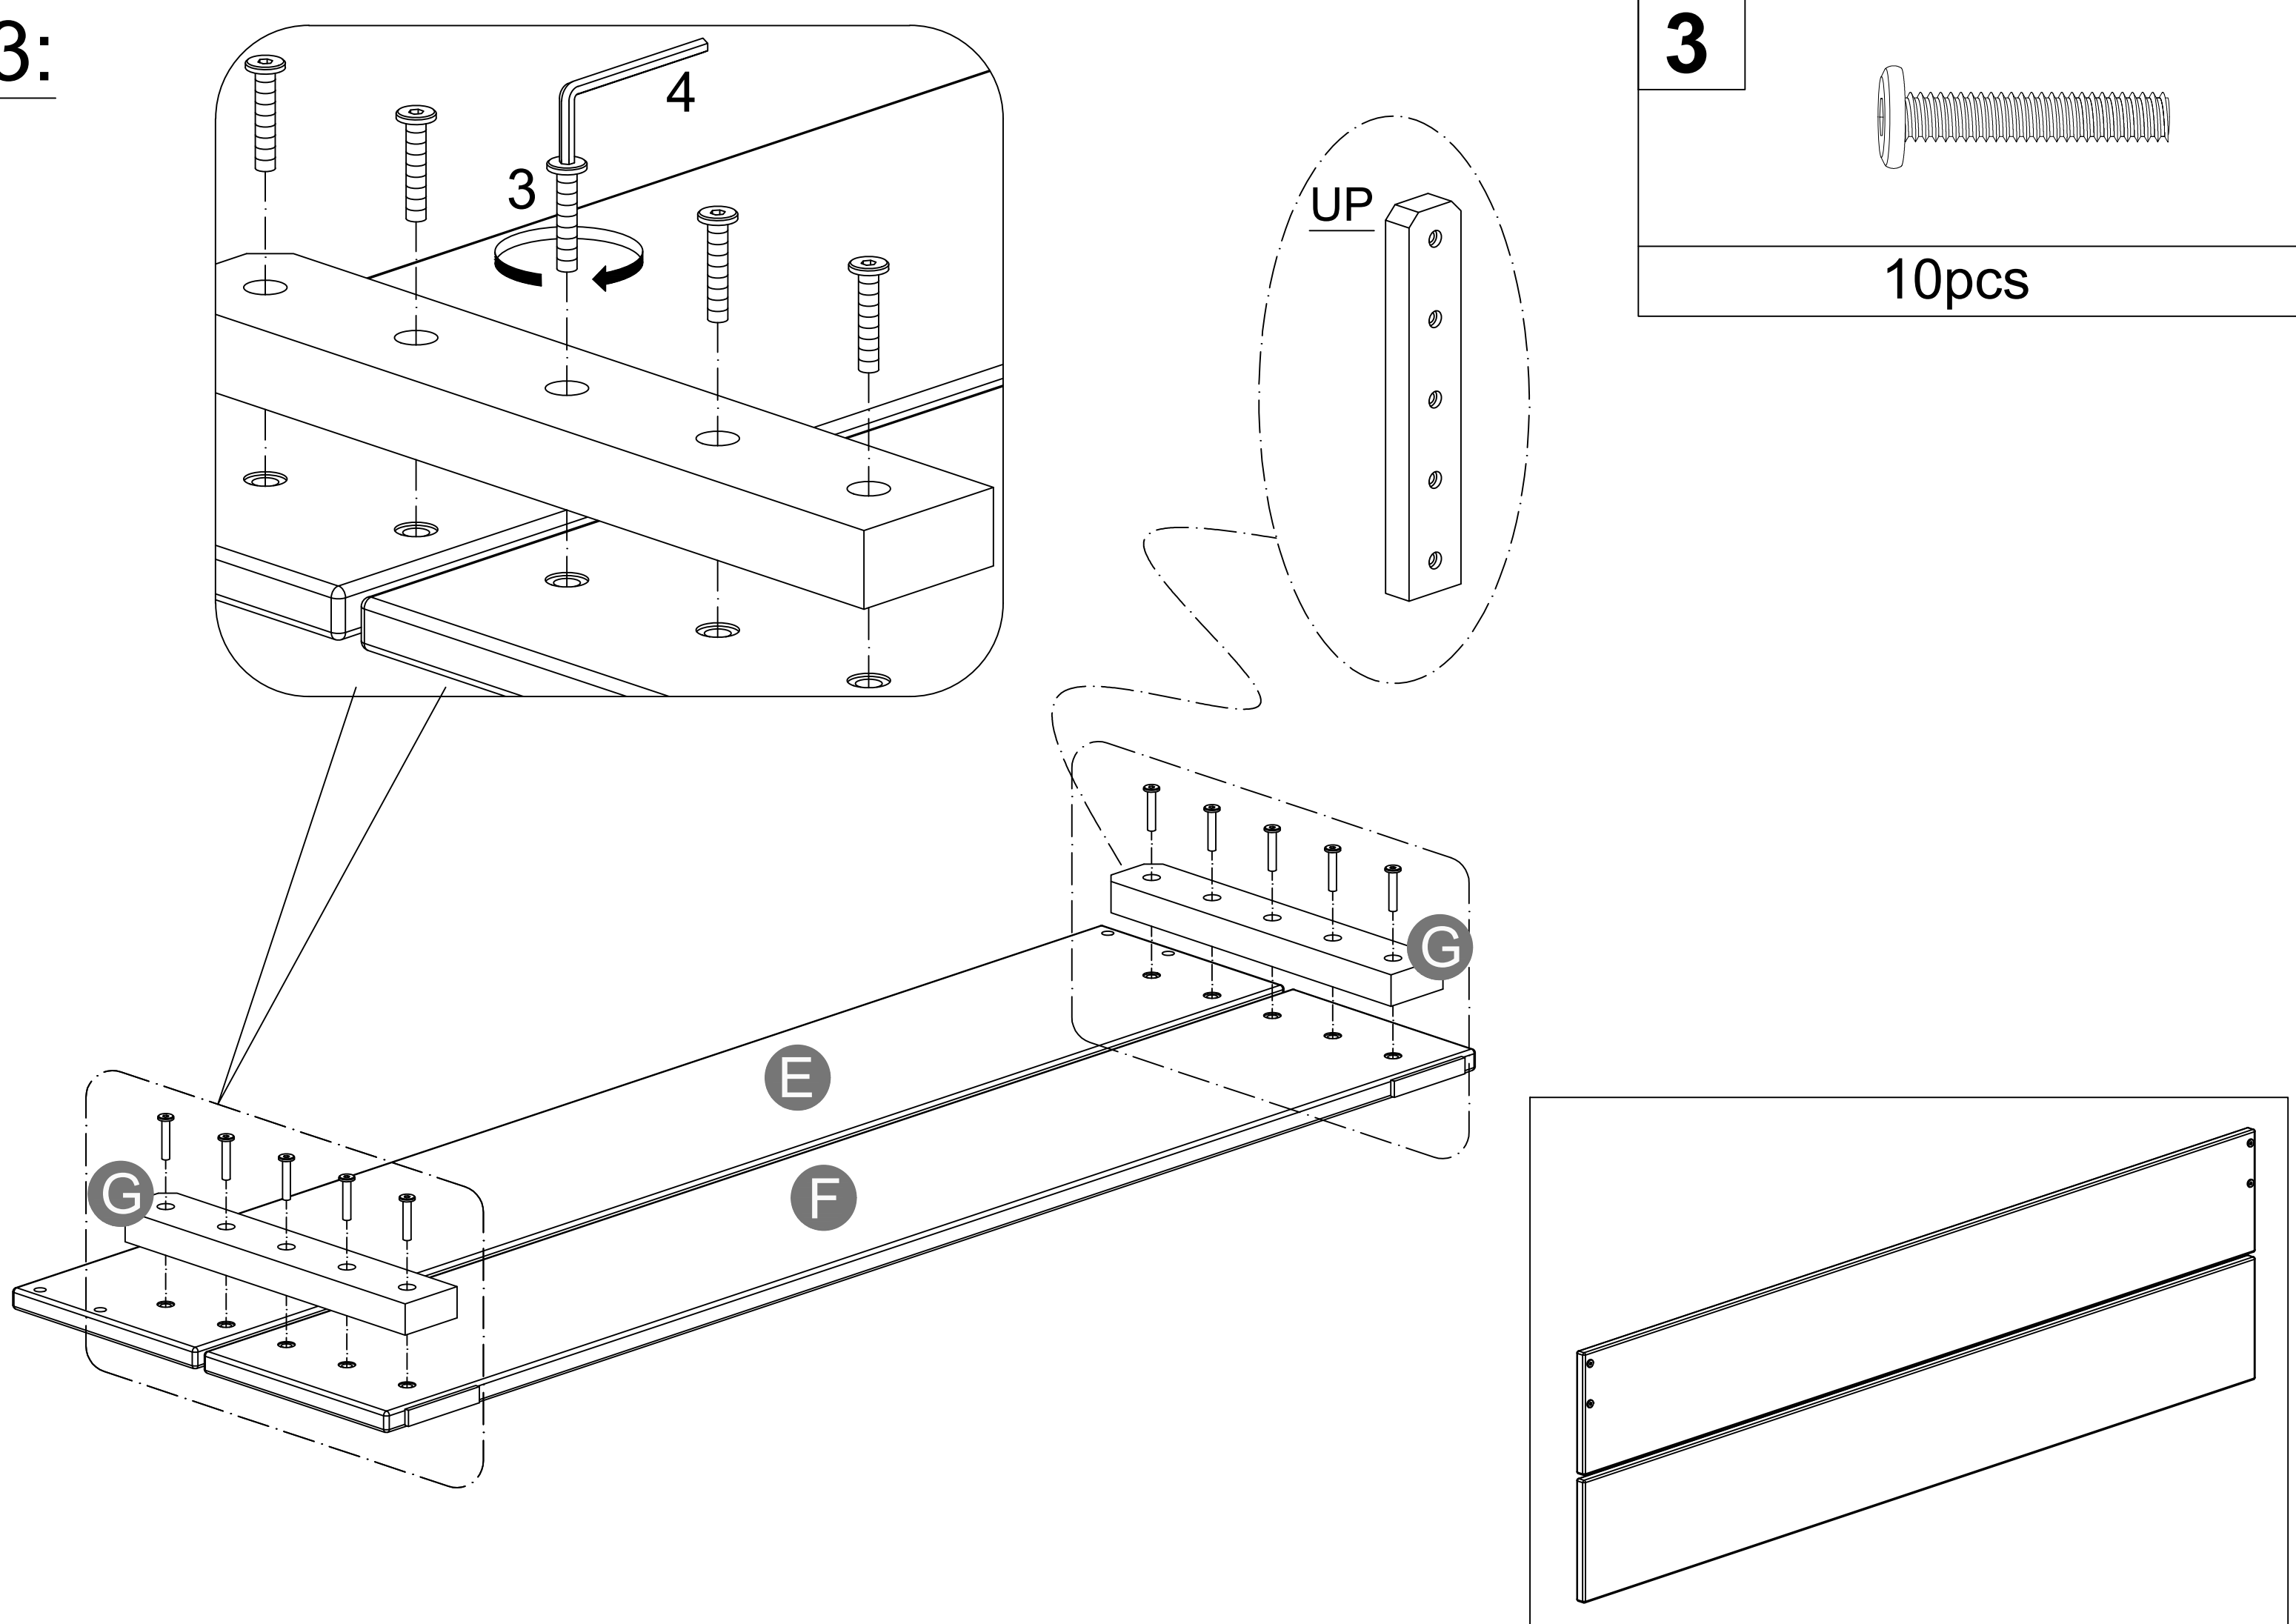


STEP 4:

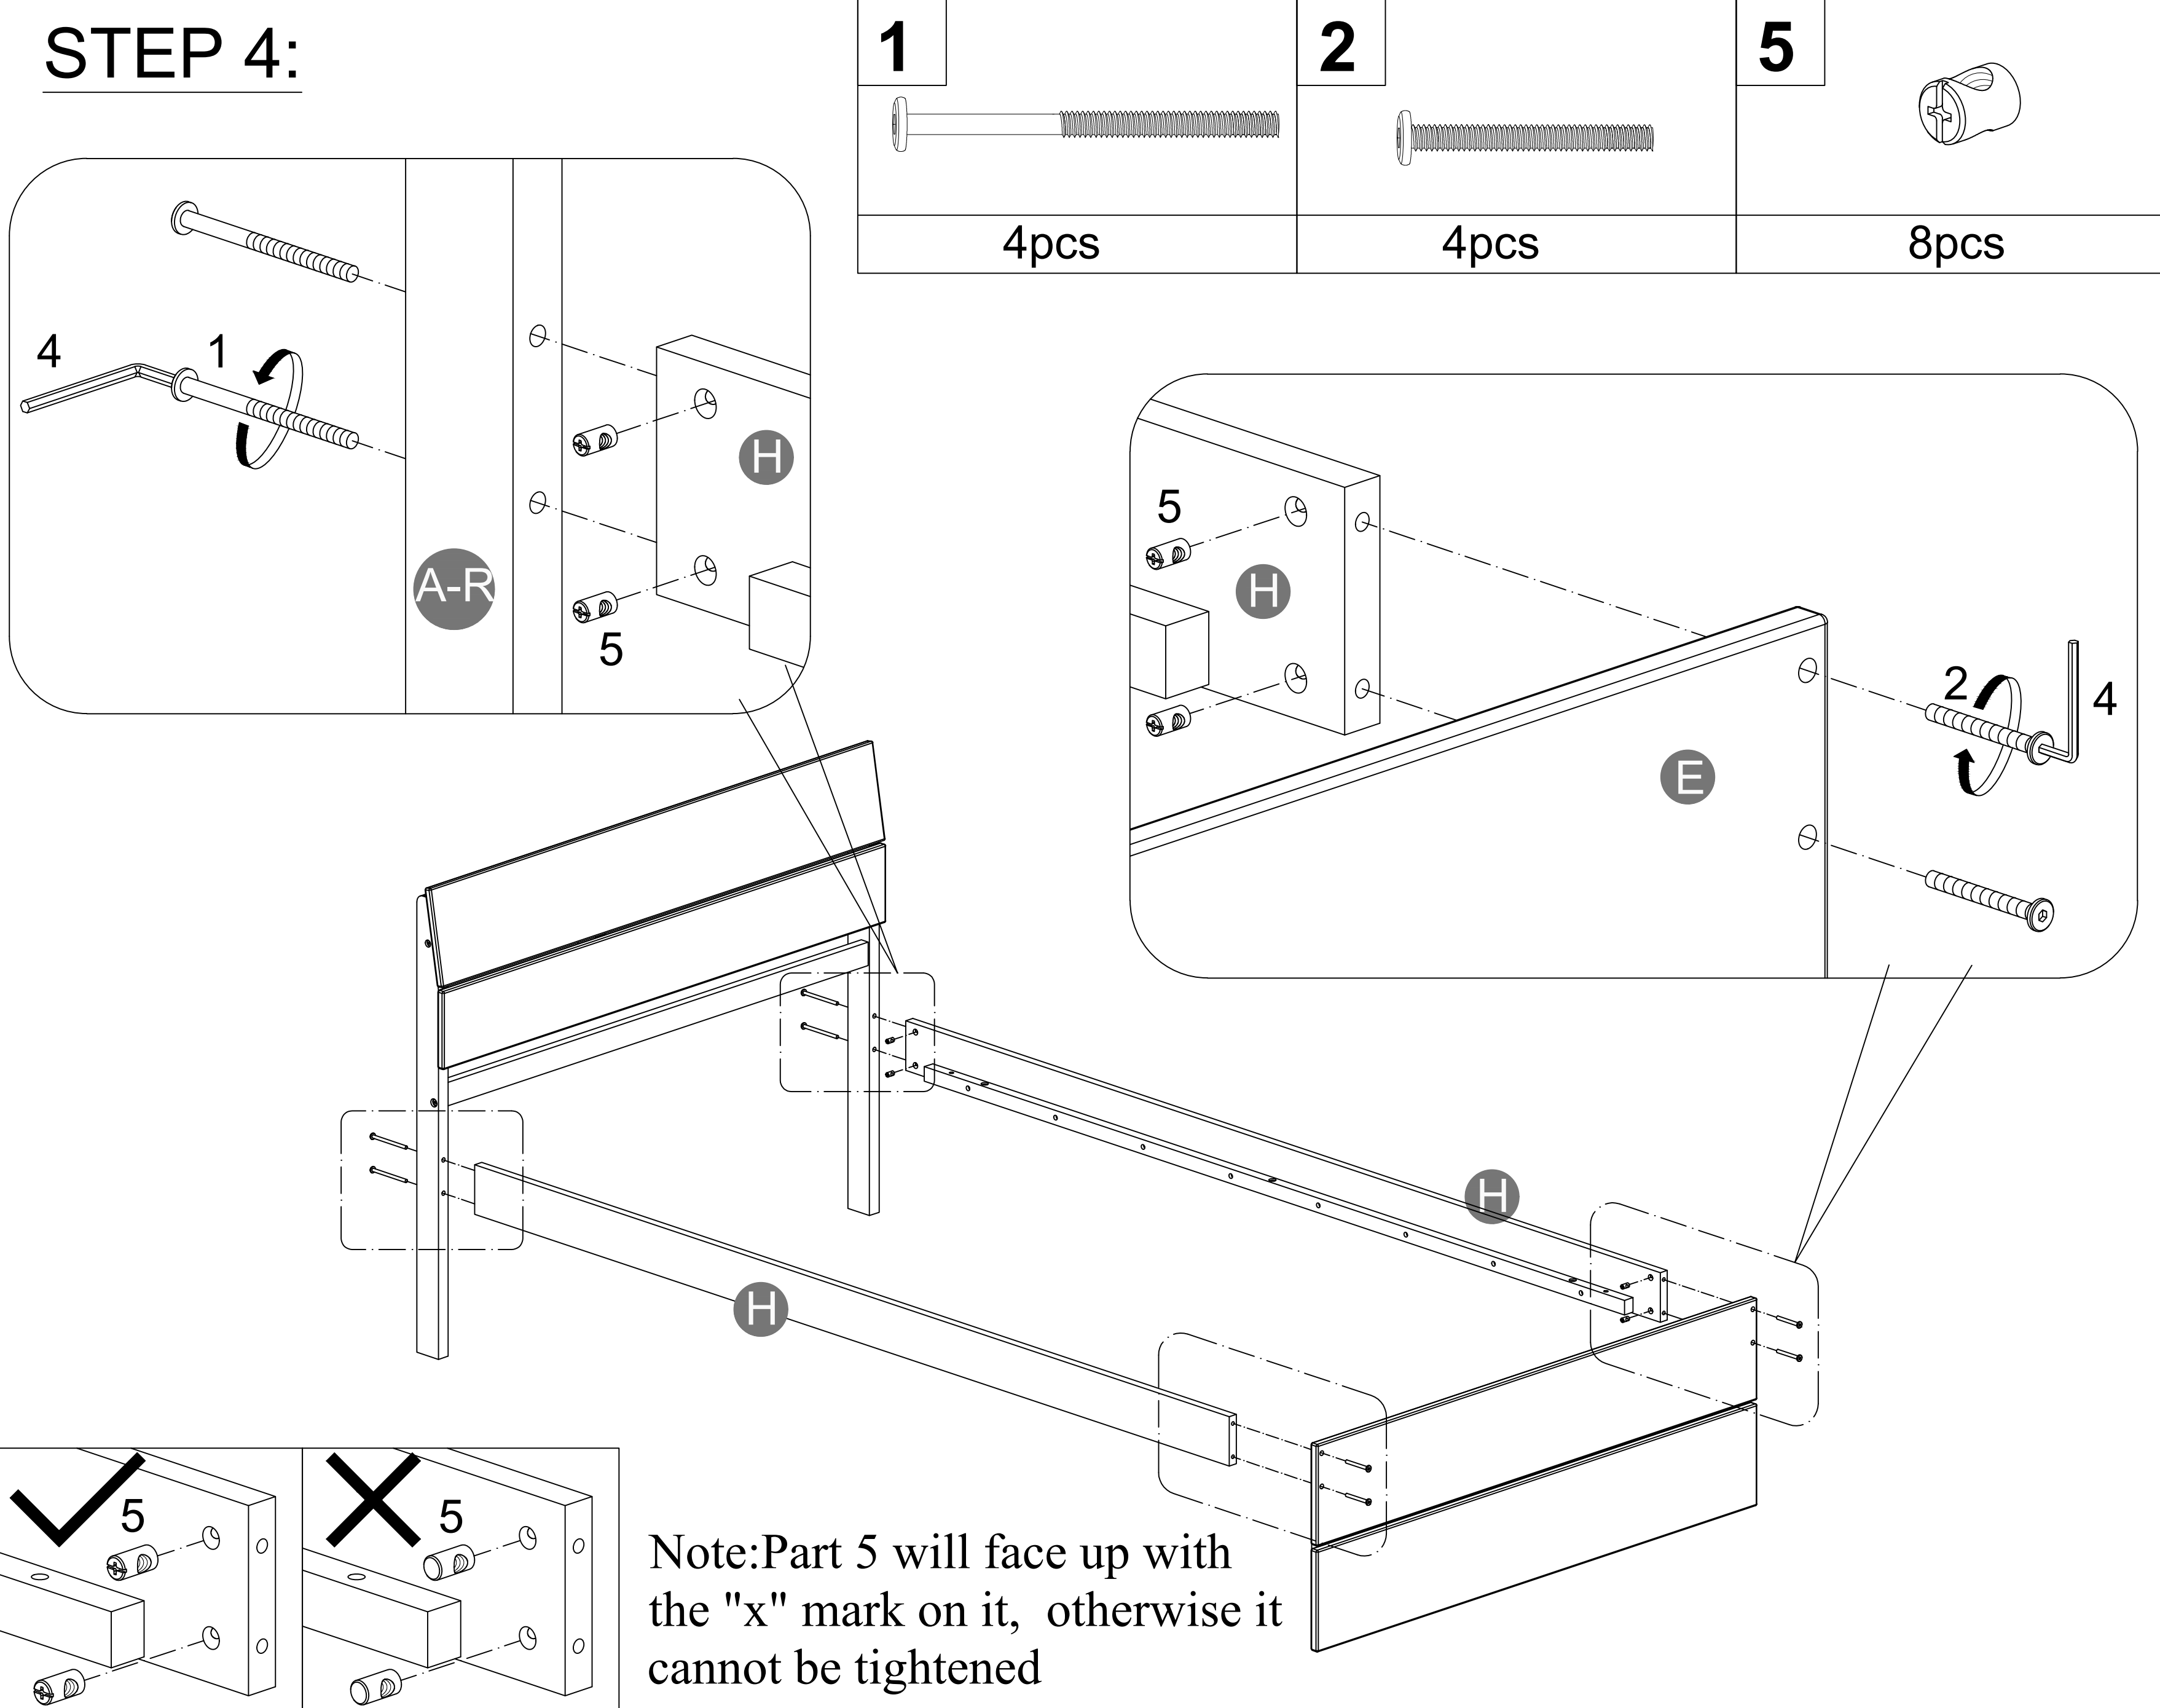


STEP 5:

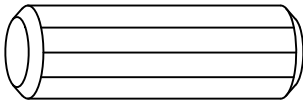
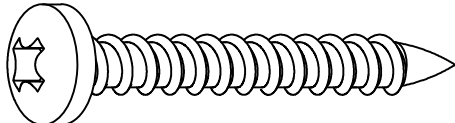
6		7	
4pcs		8 pcs	

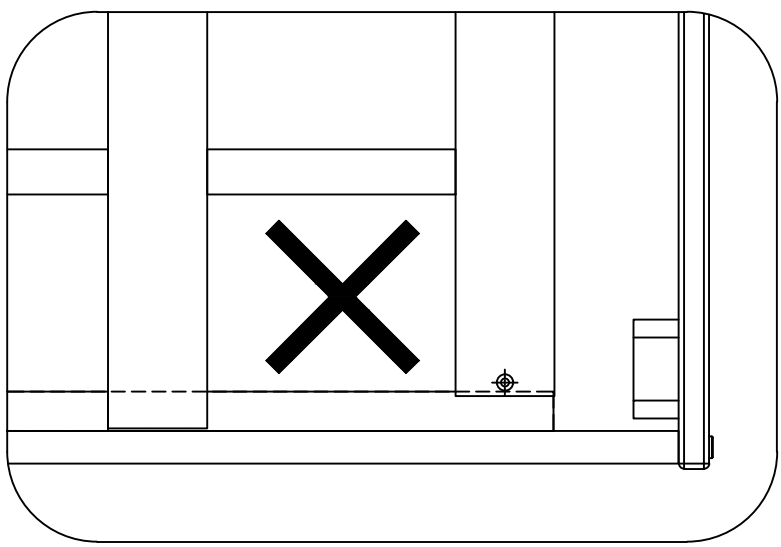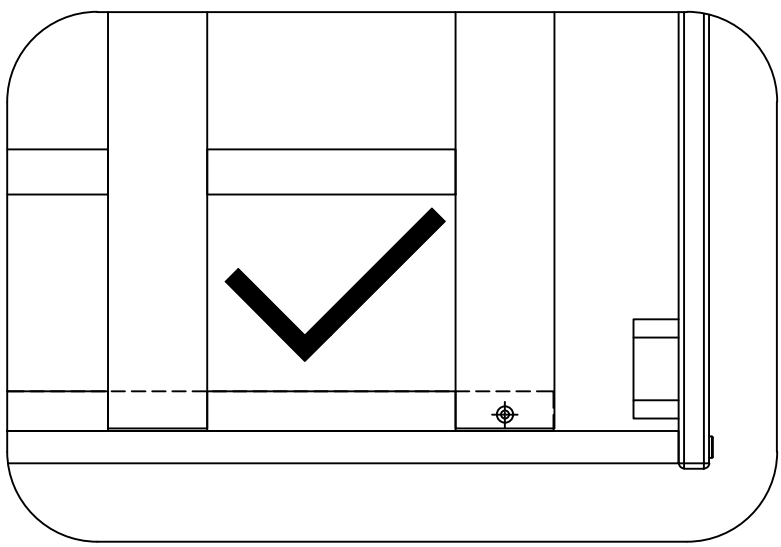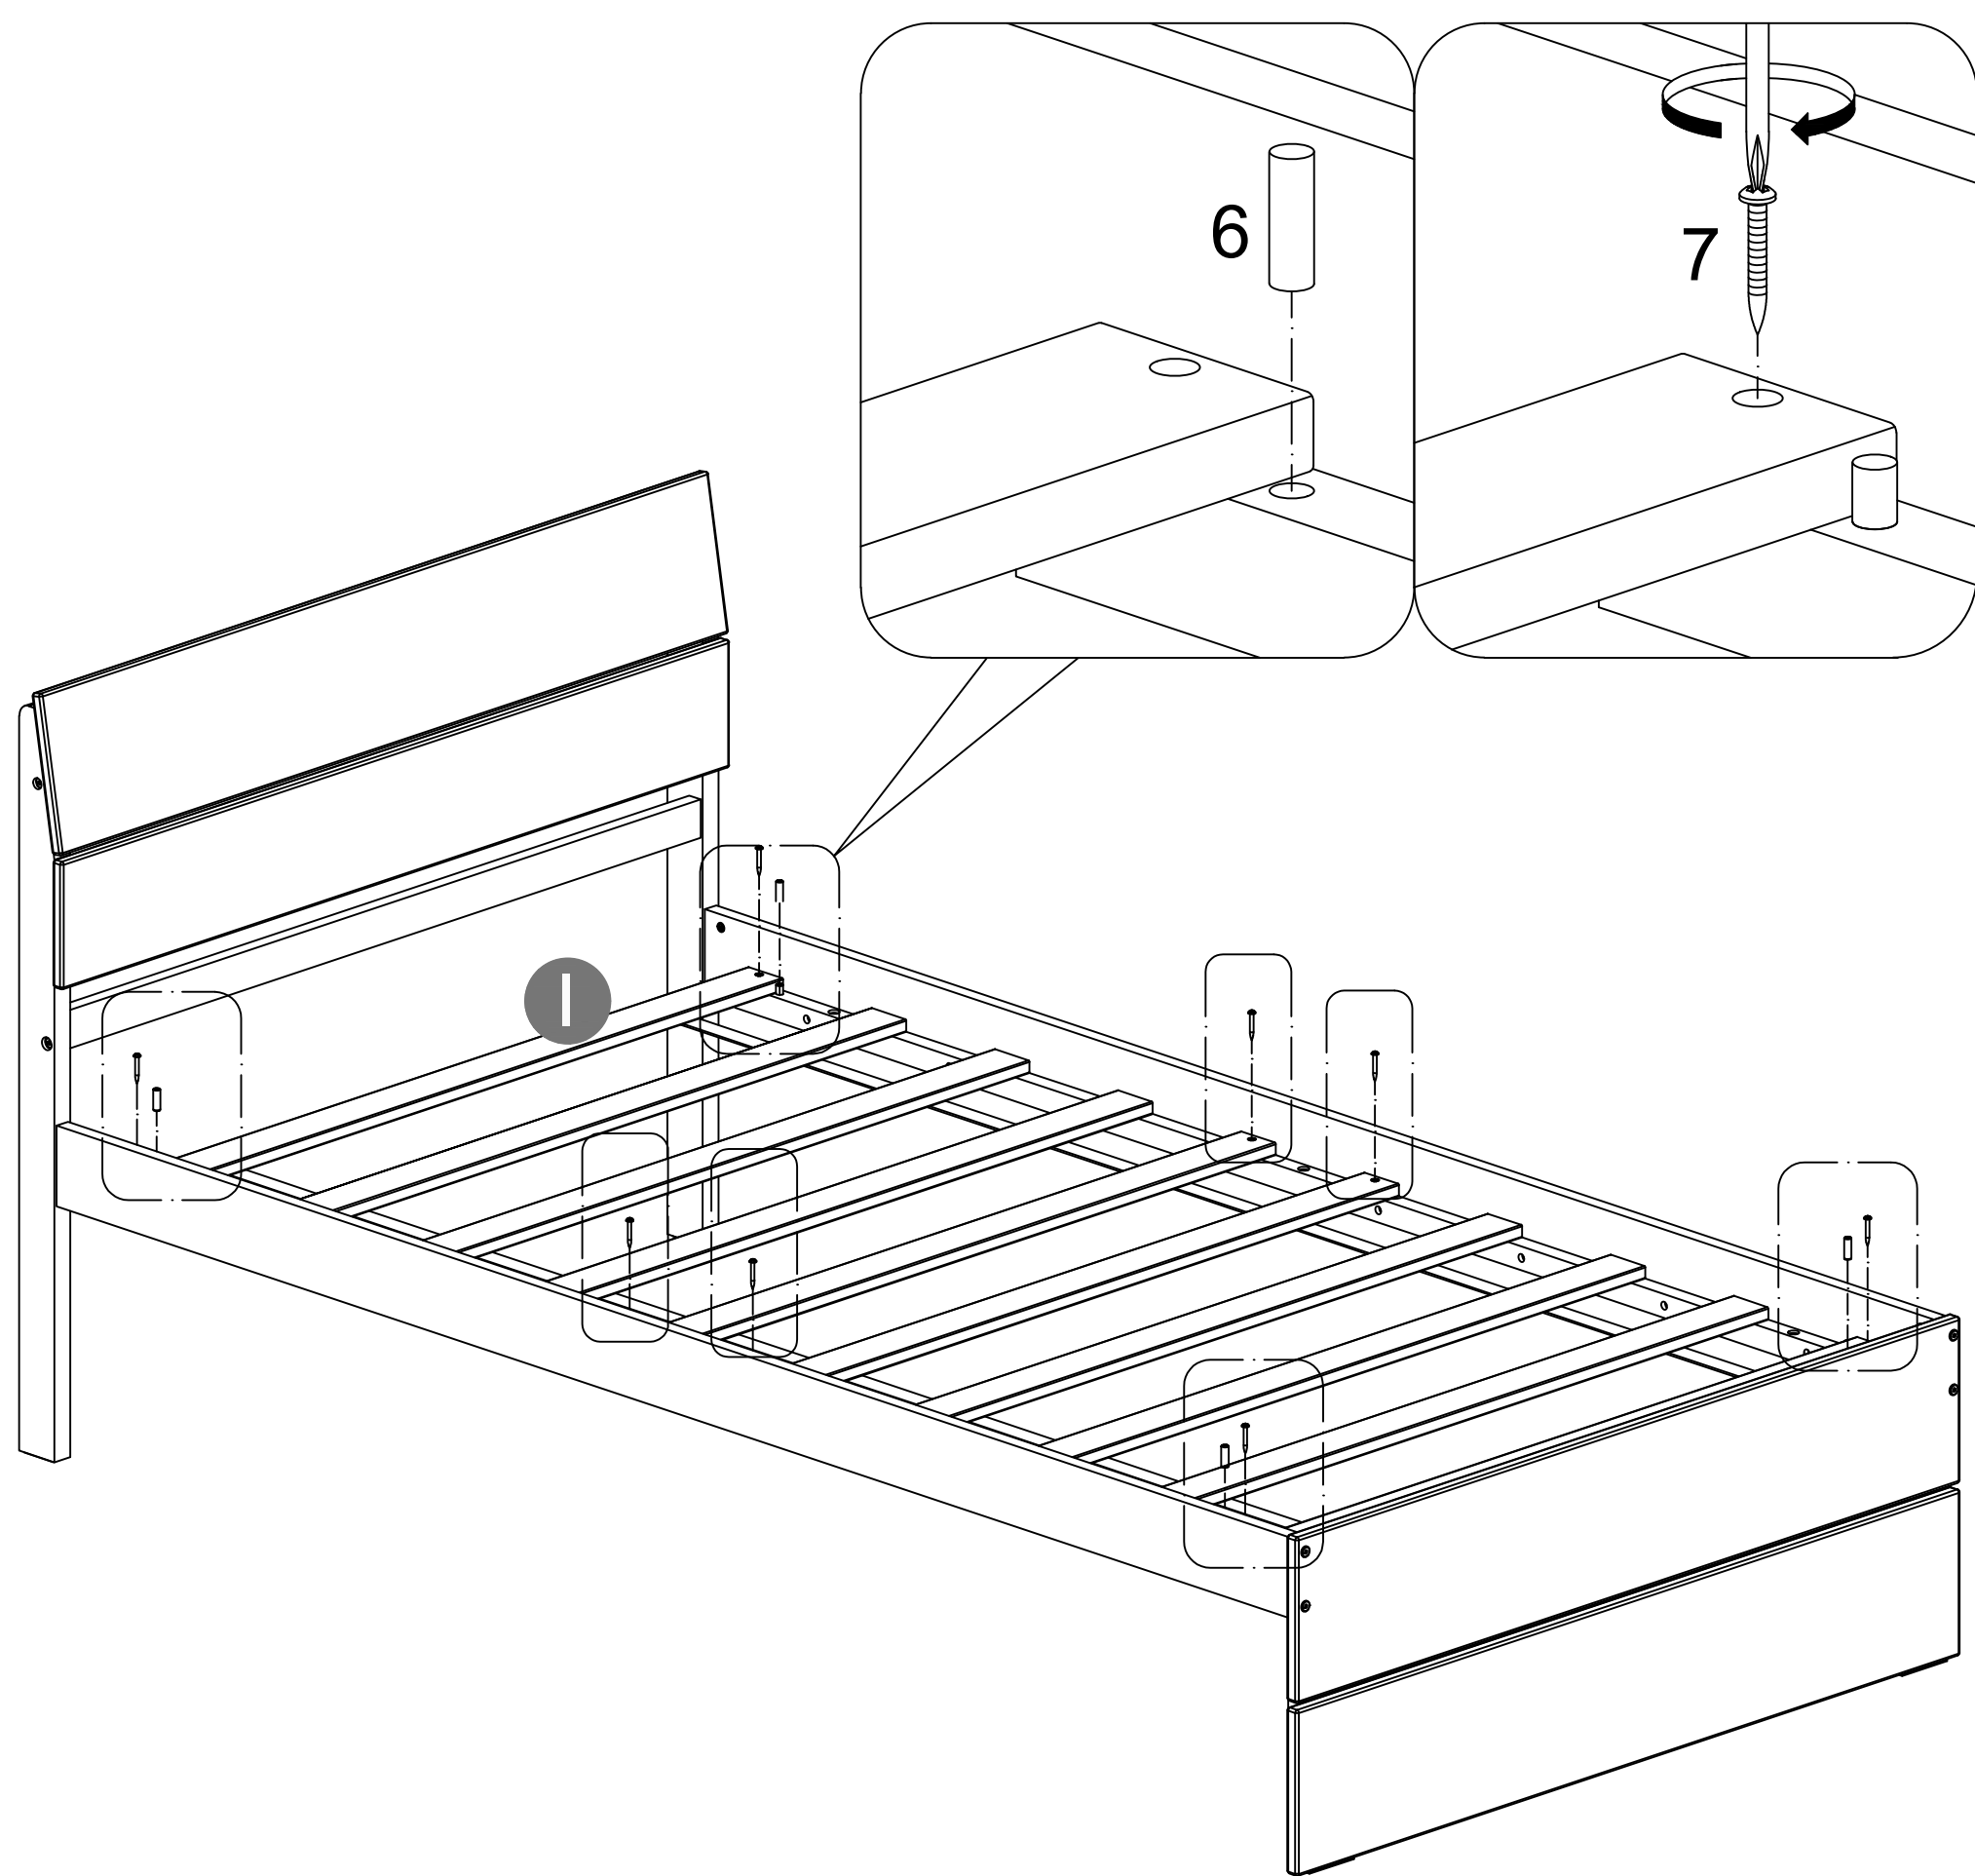


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 6:

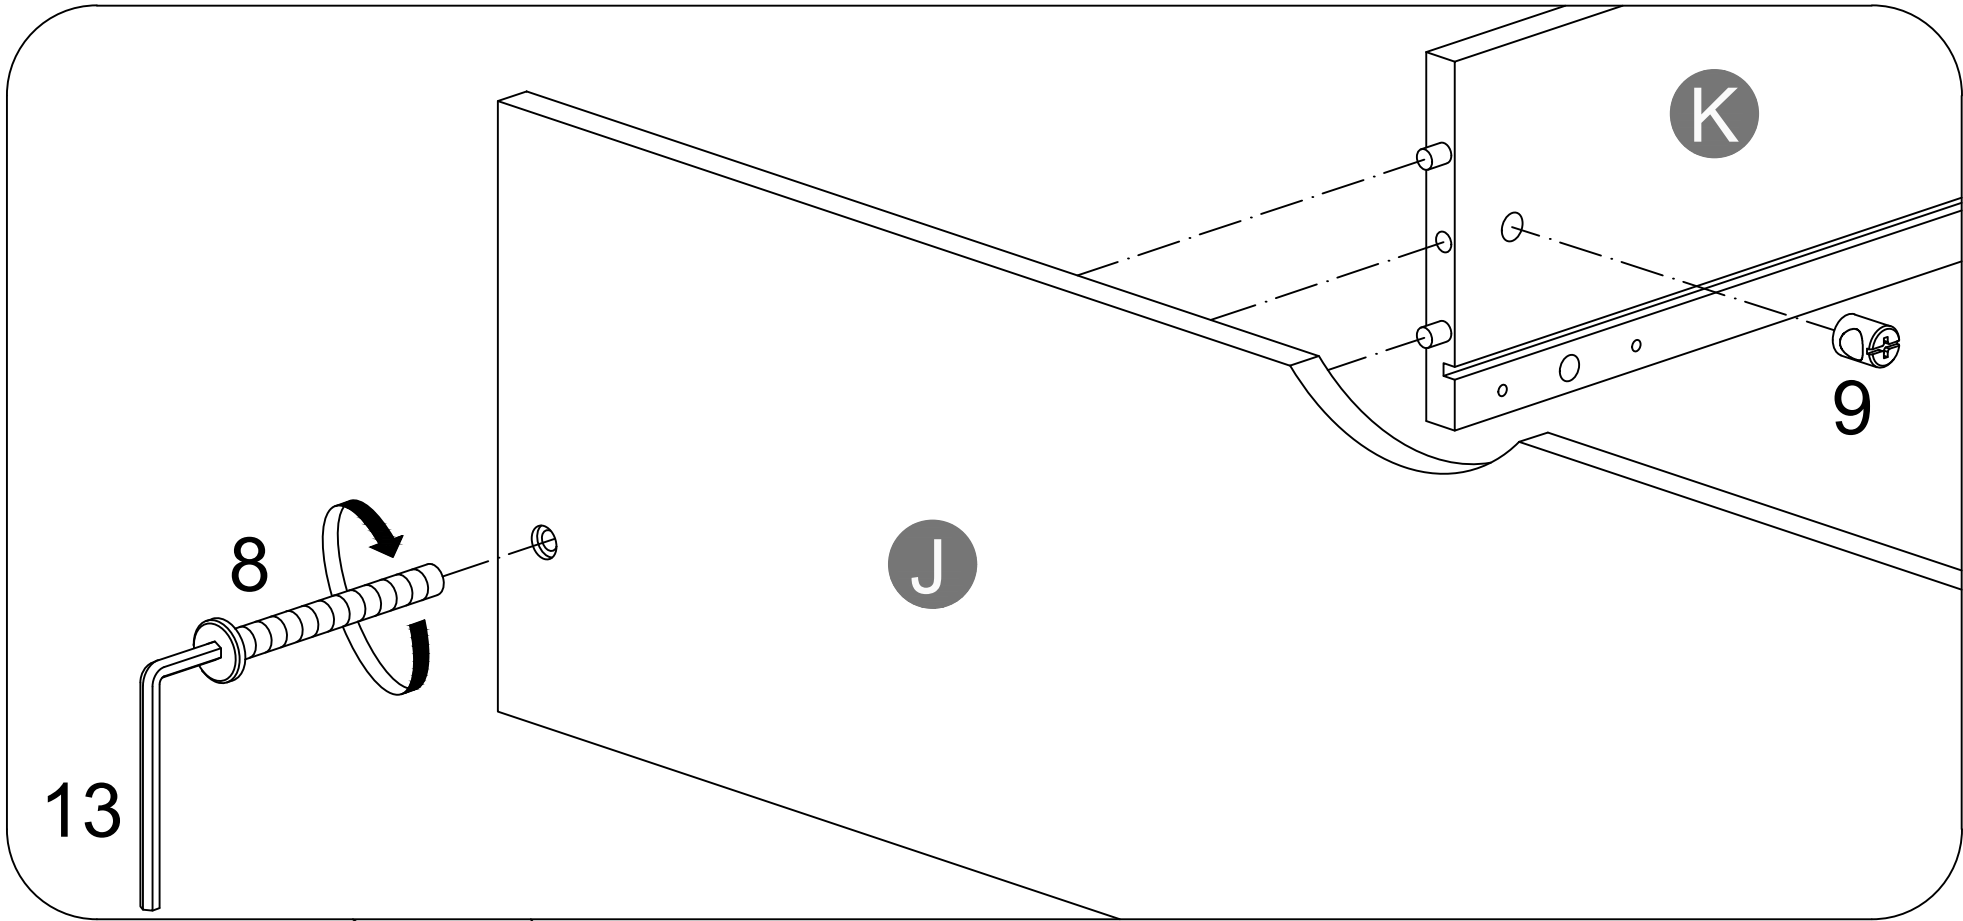


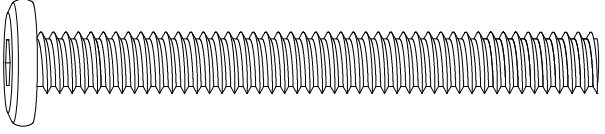
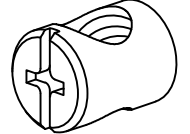
8		9	
4pcs		4pcs	

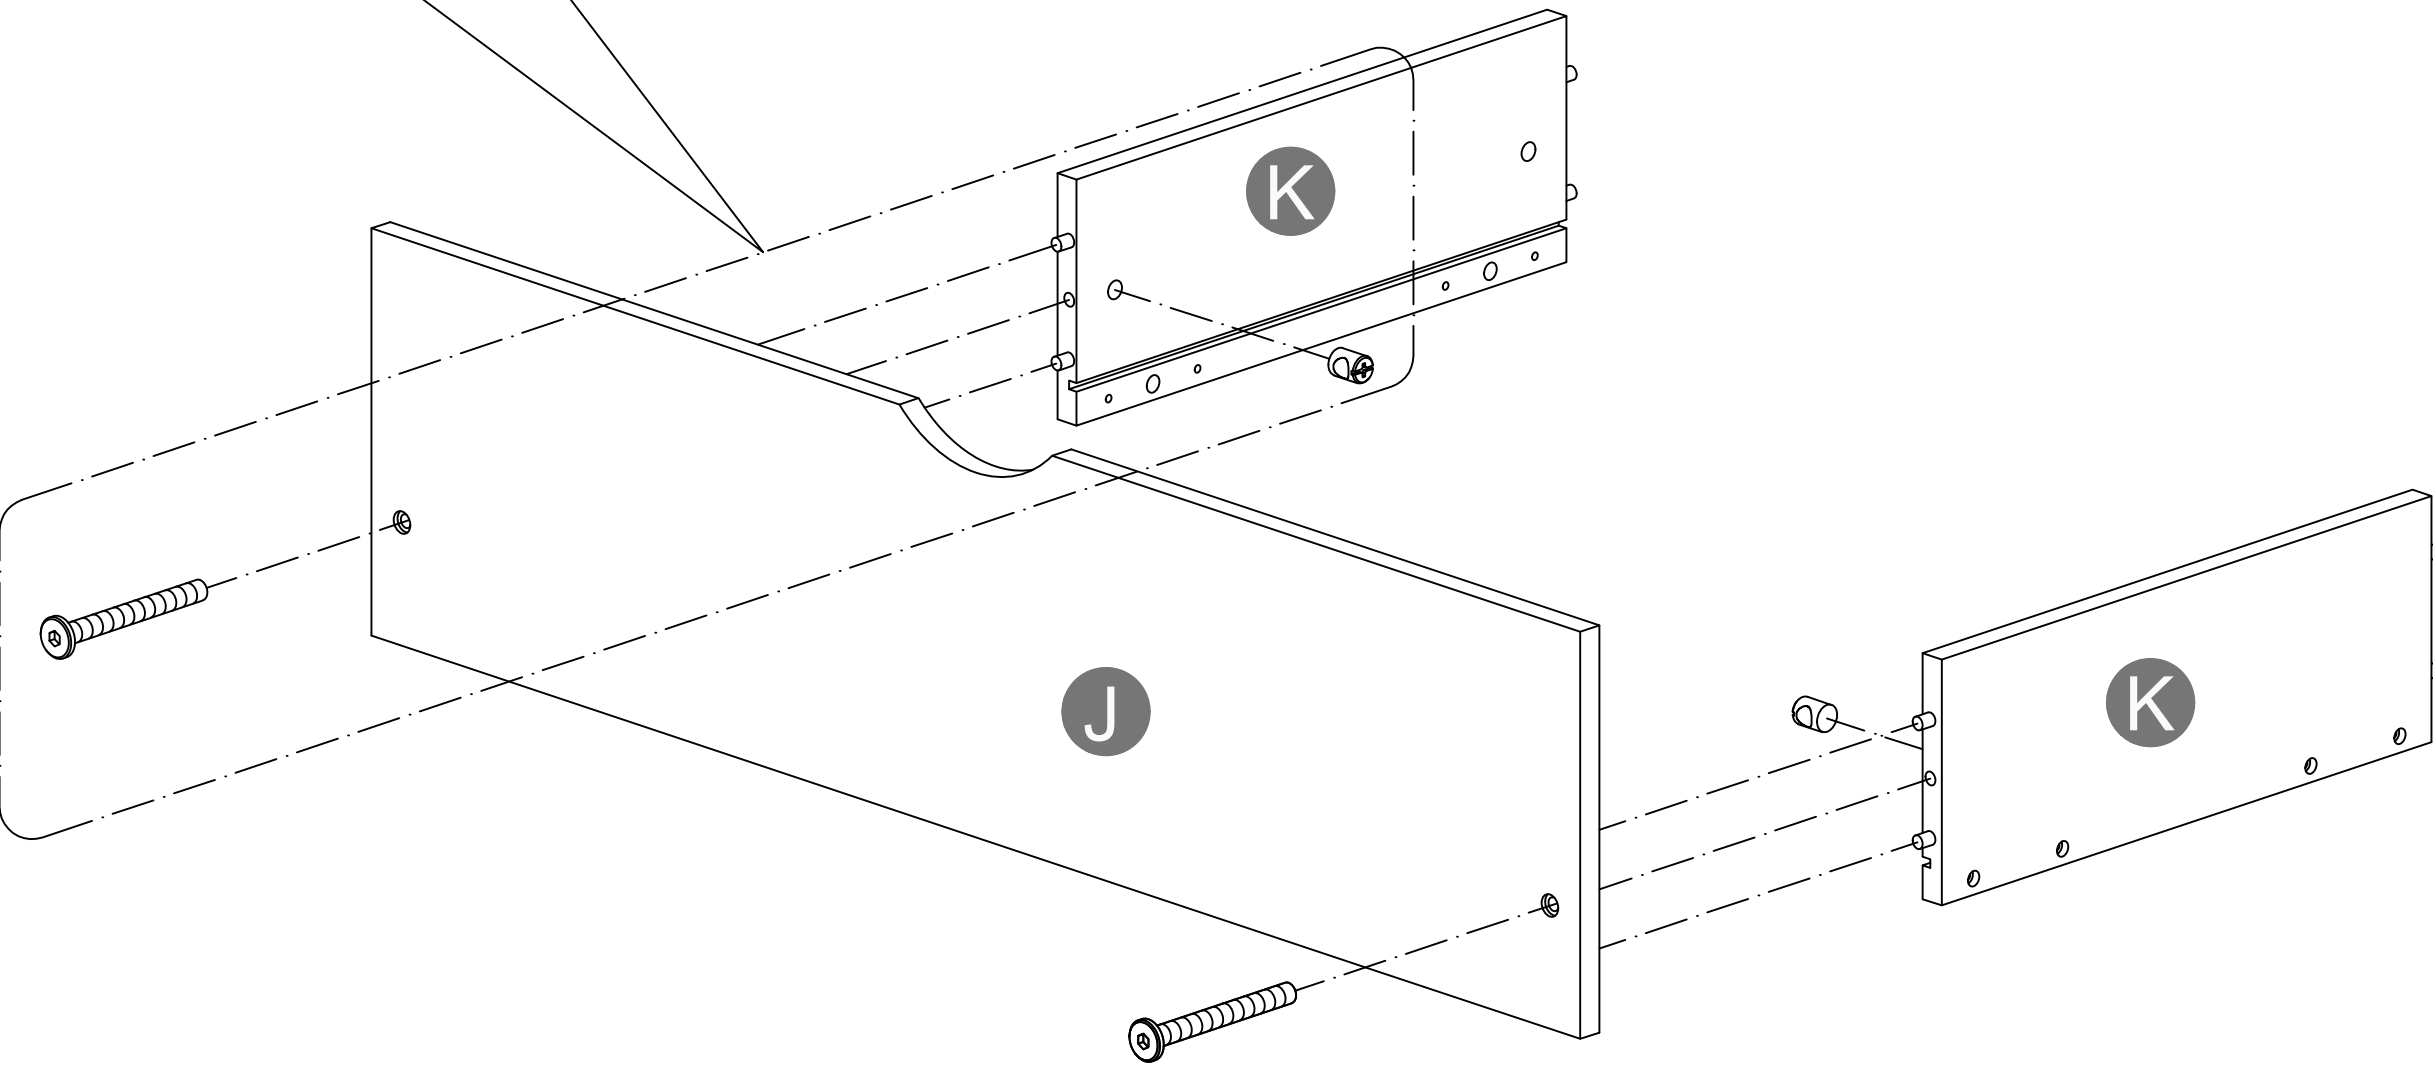



Note:Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

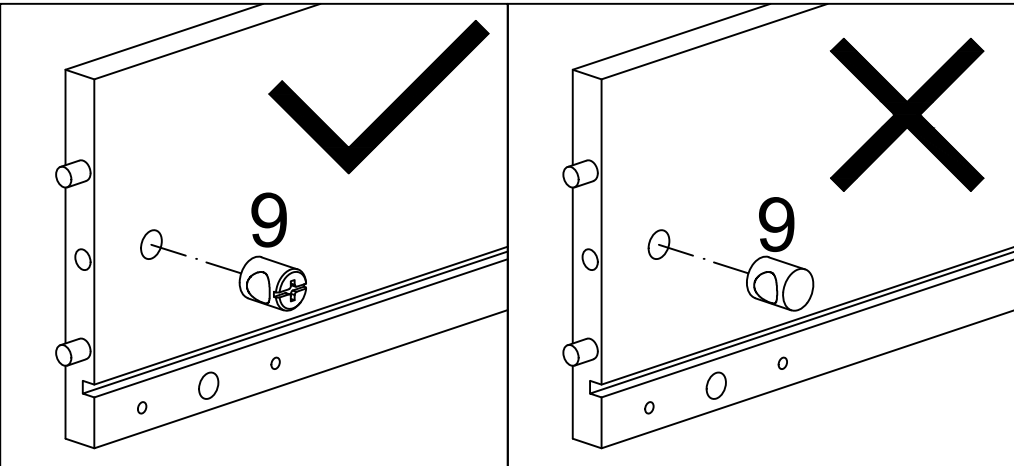


STEP 7:

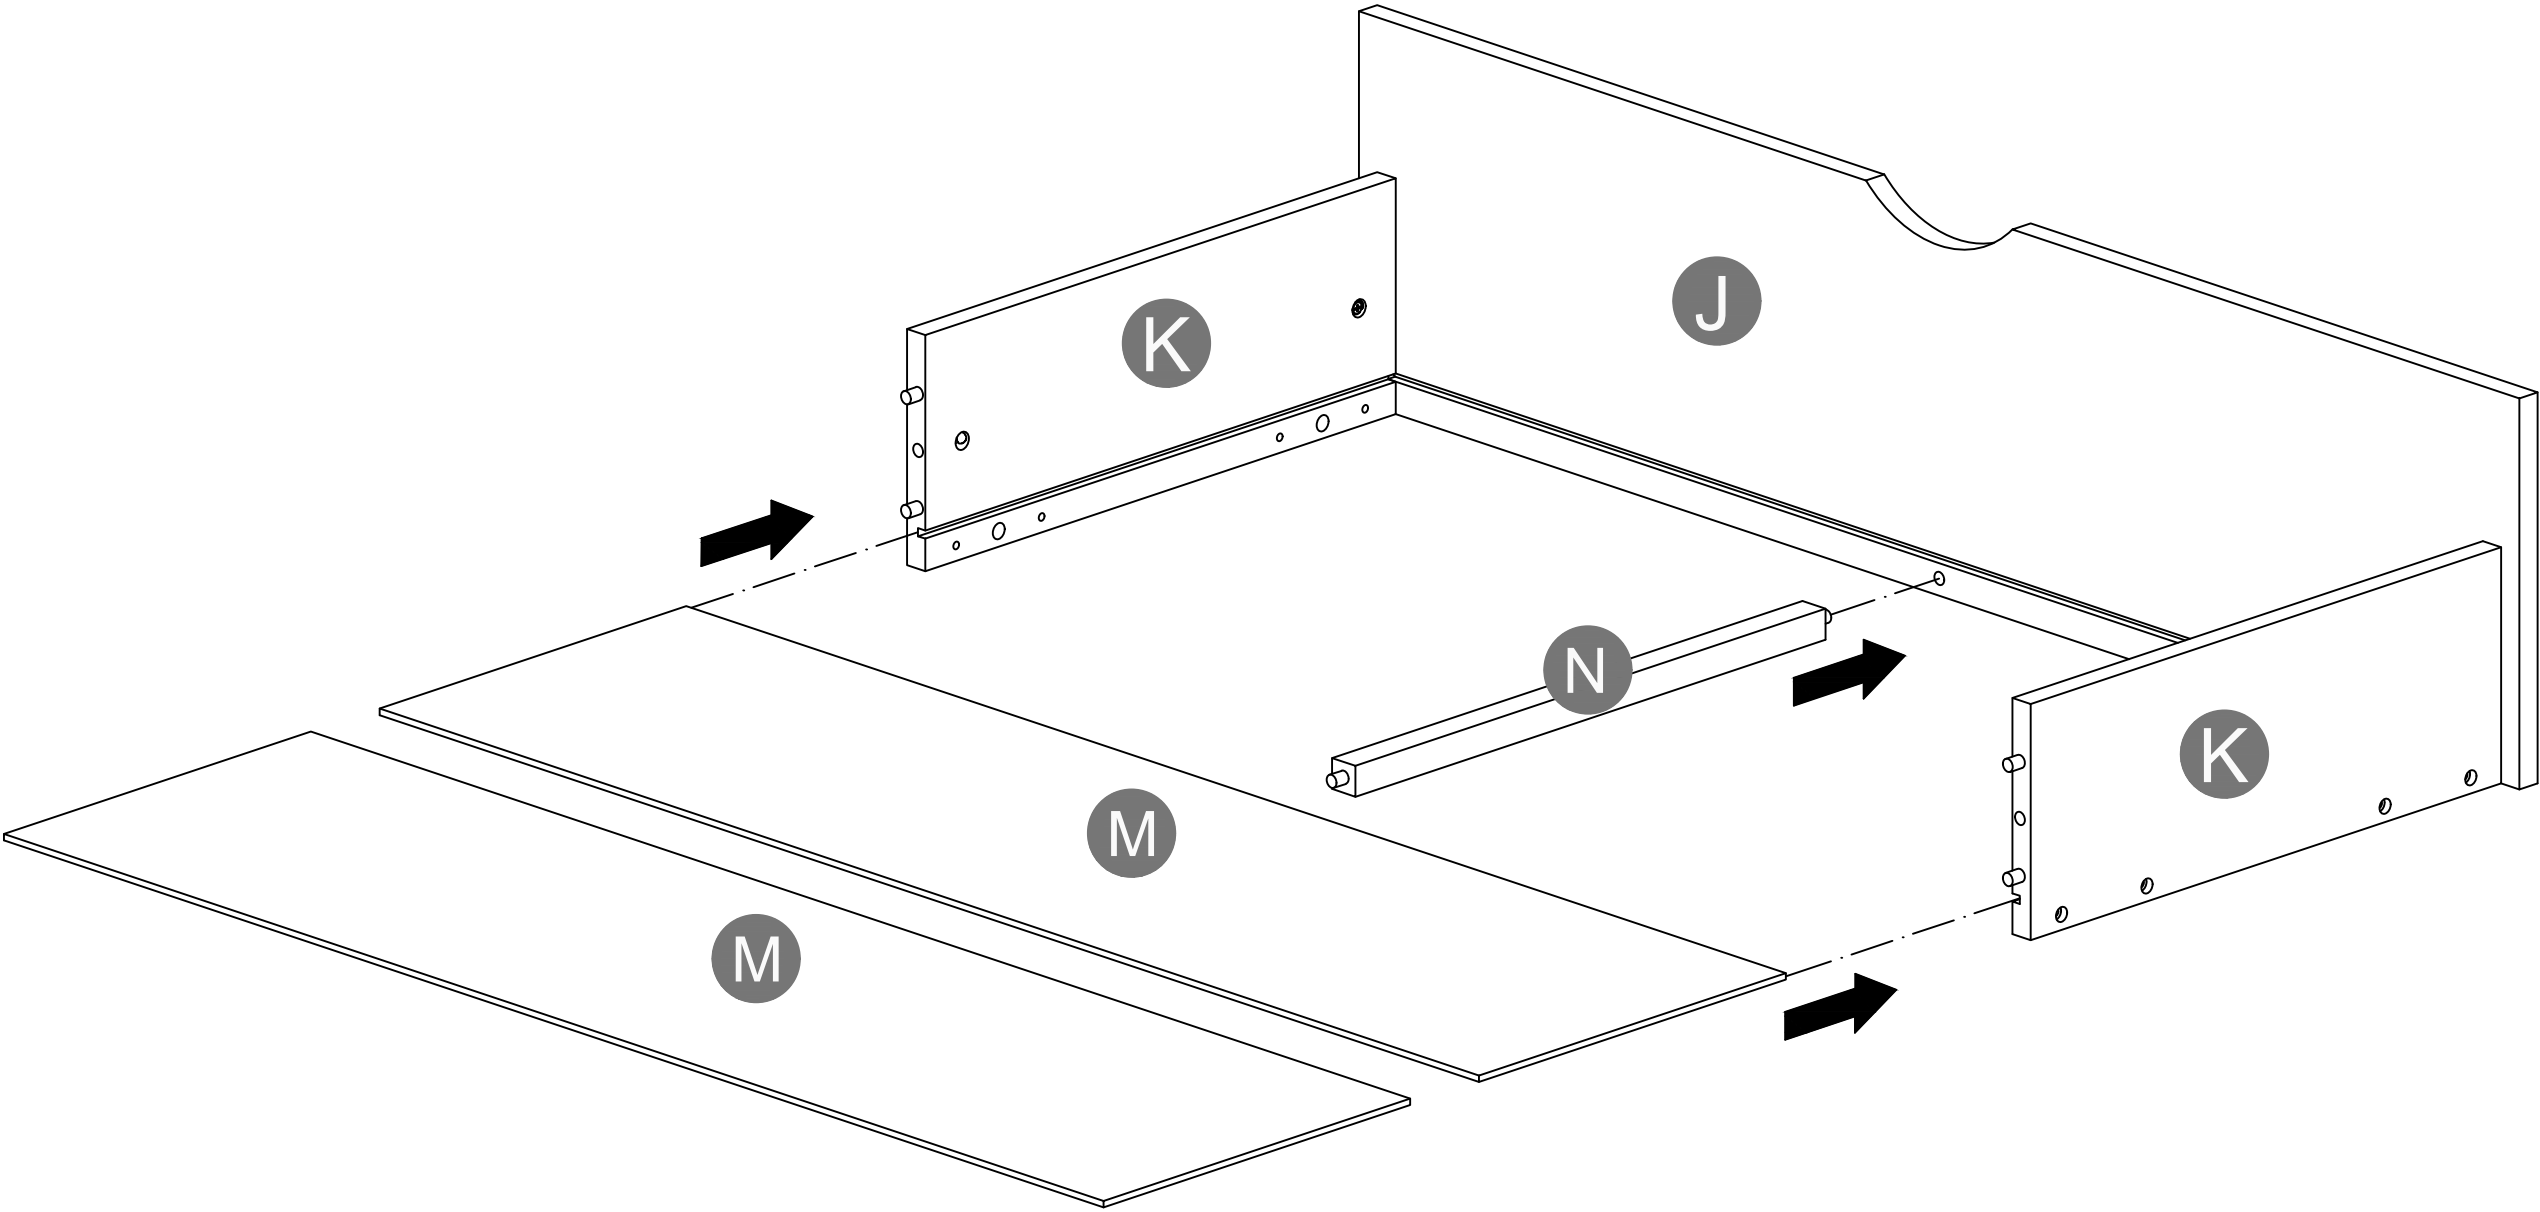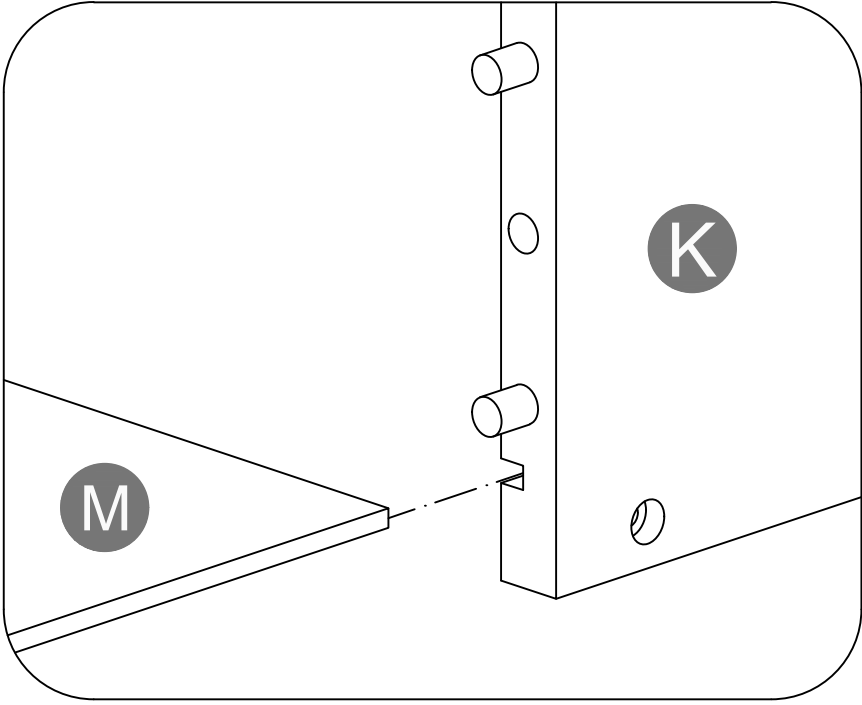
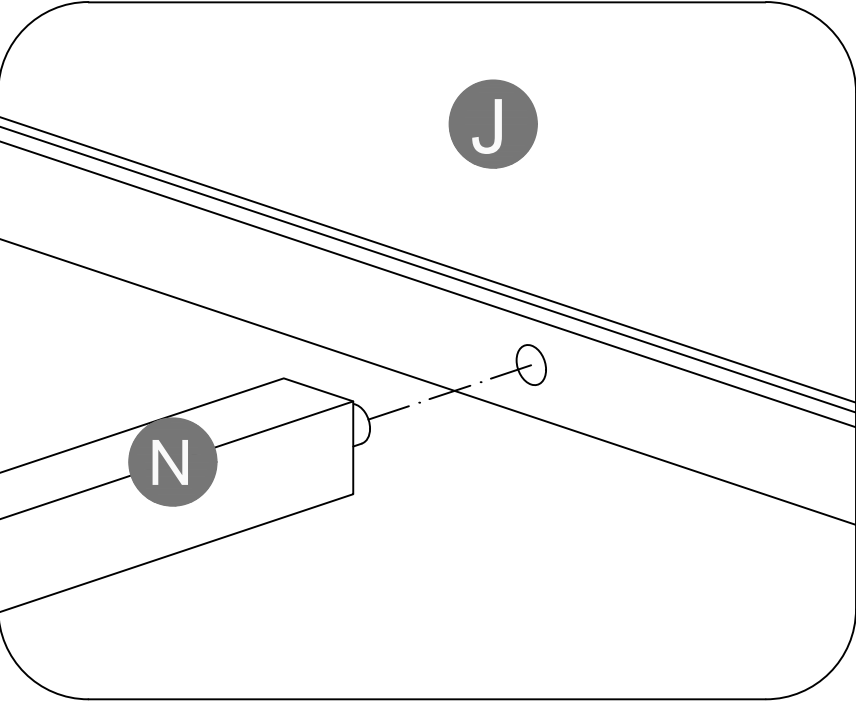


STEP 8:

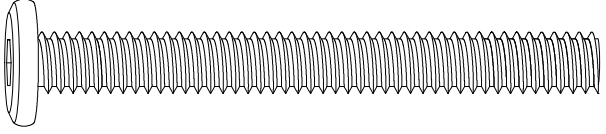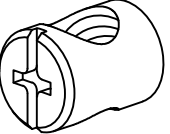
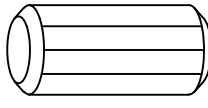
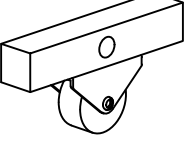
8		9	
4pcs		4pcs	


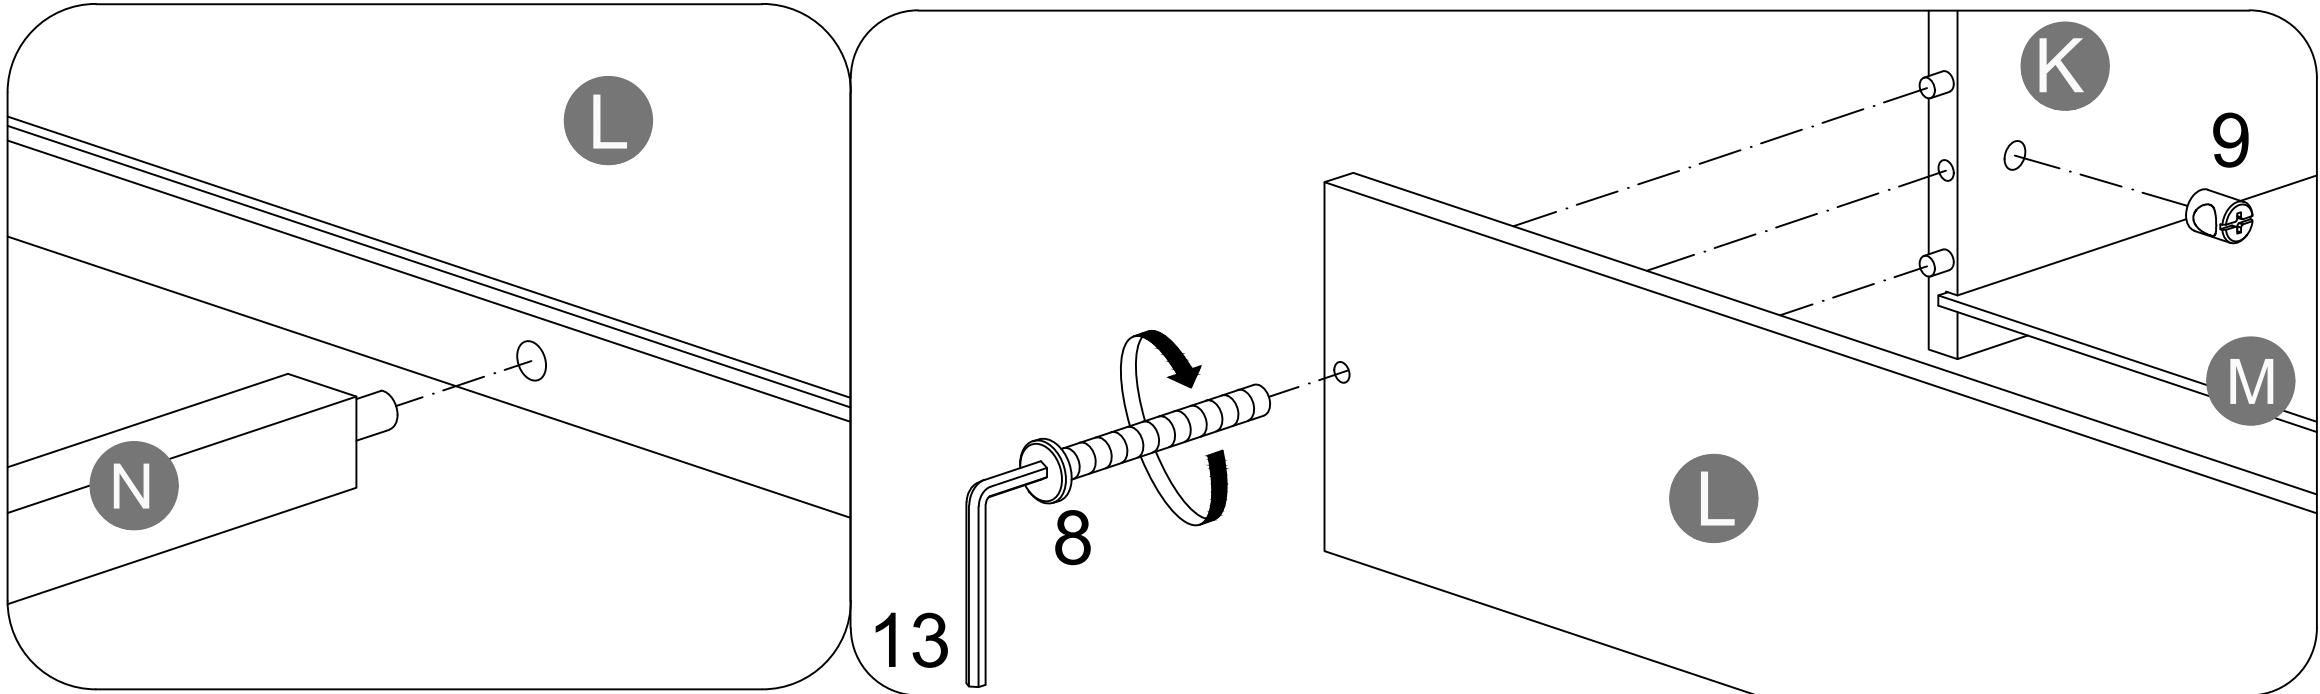


Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

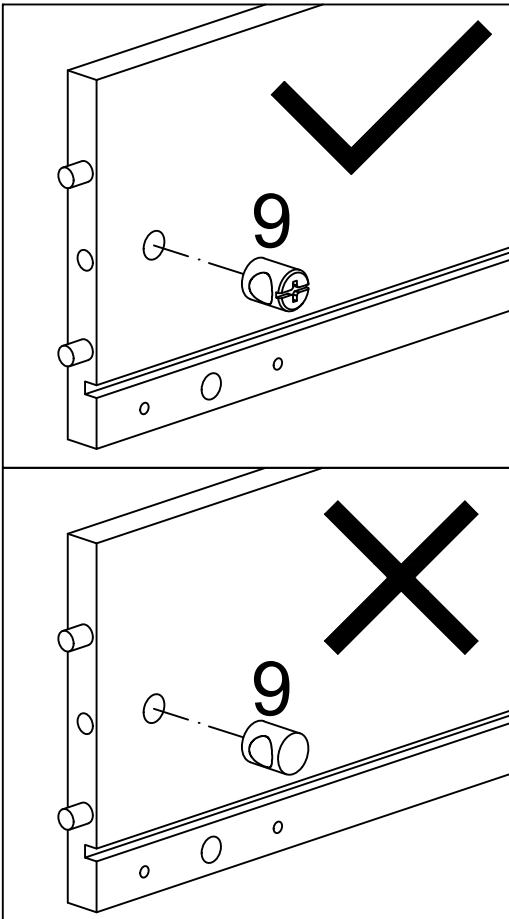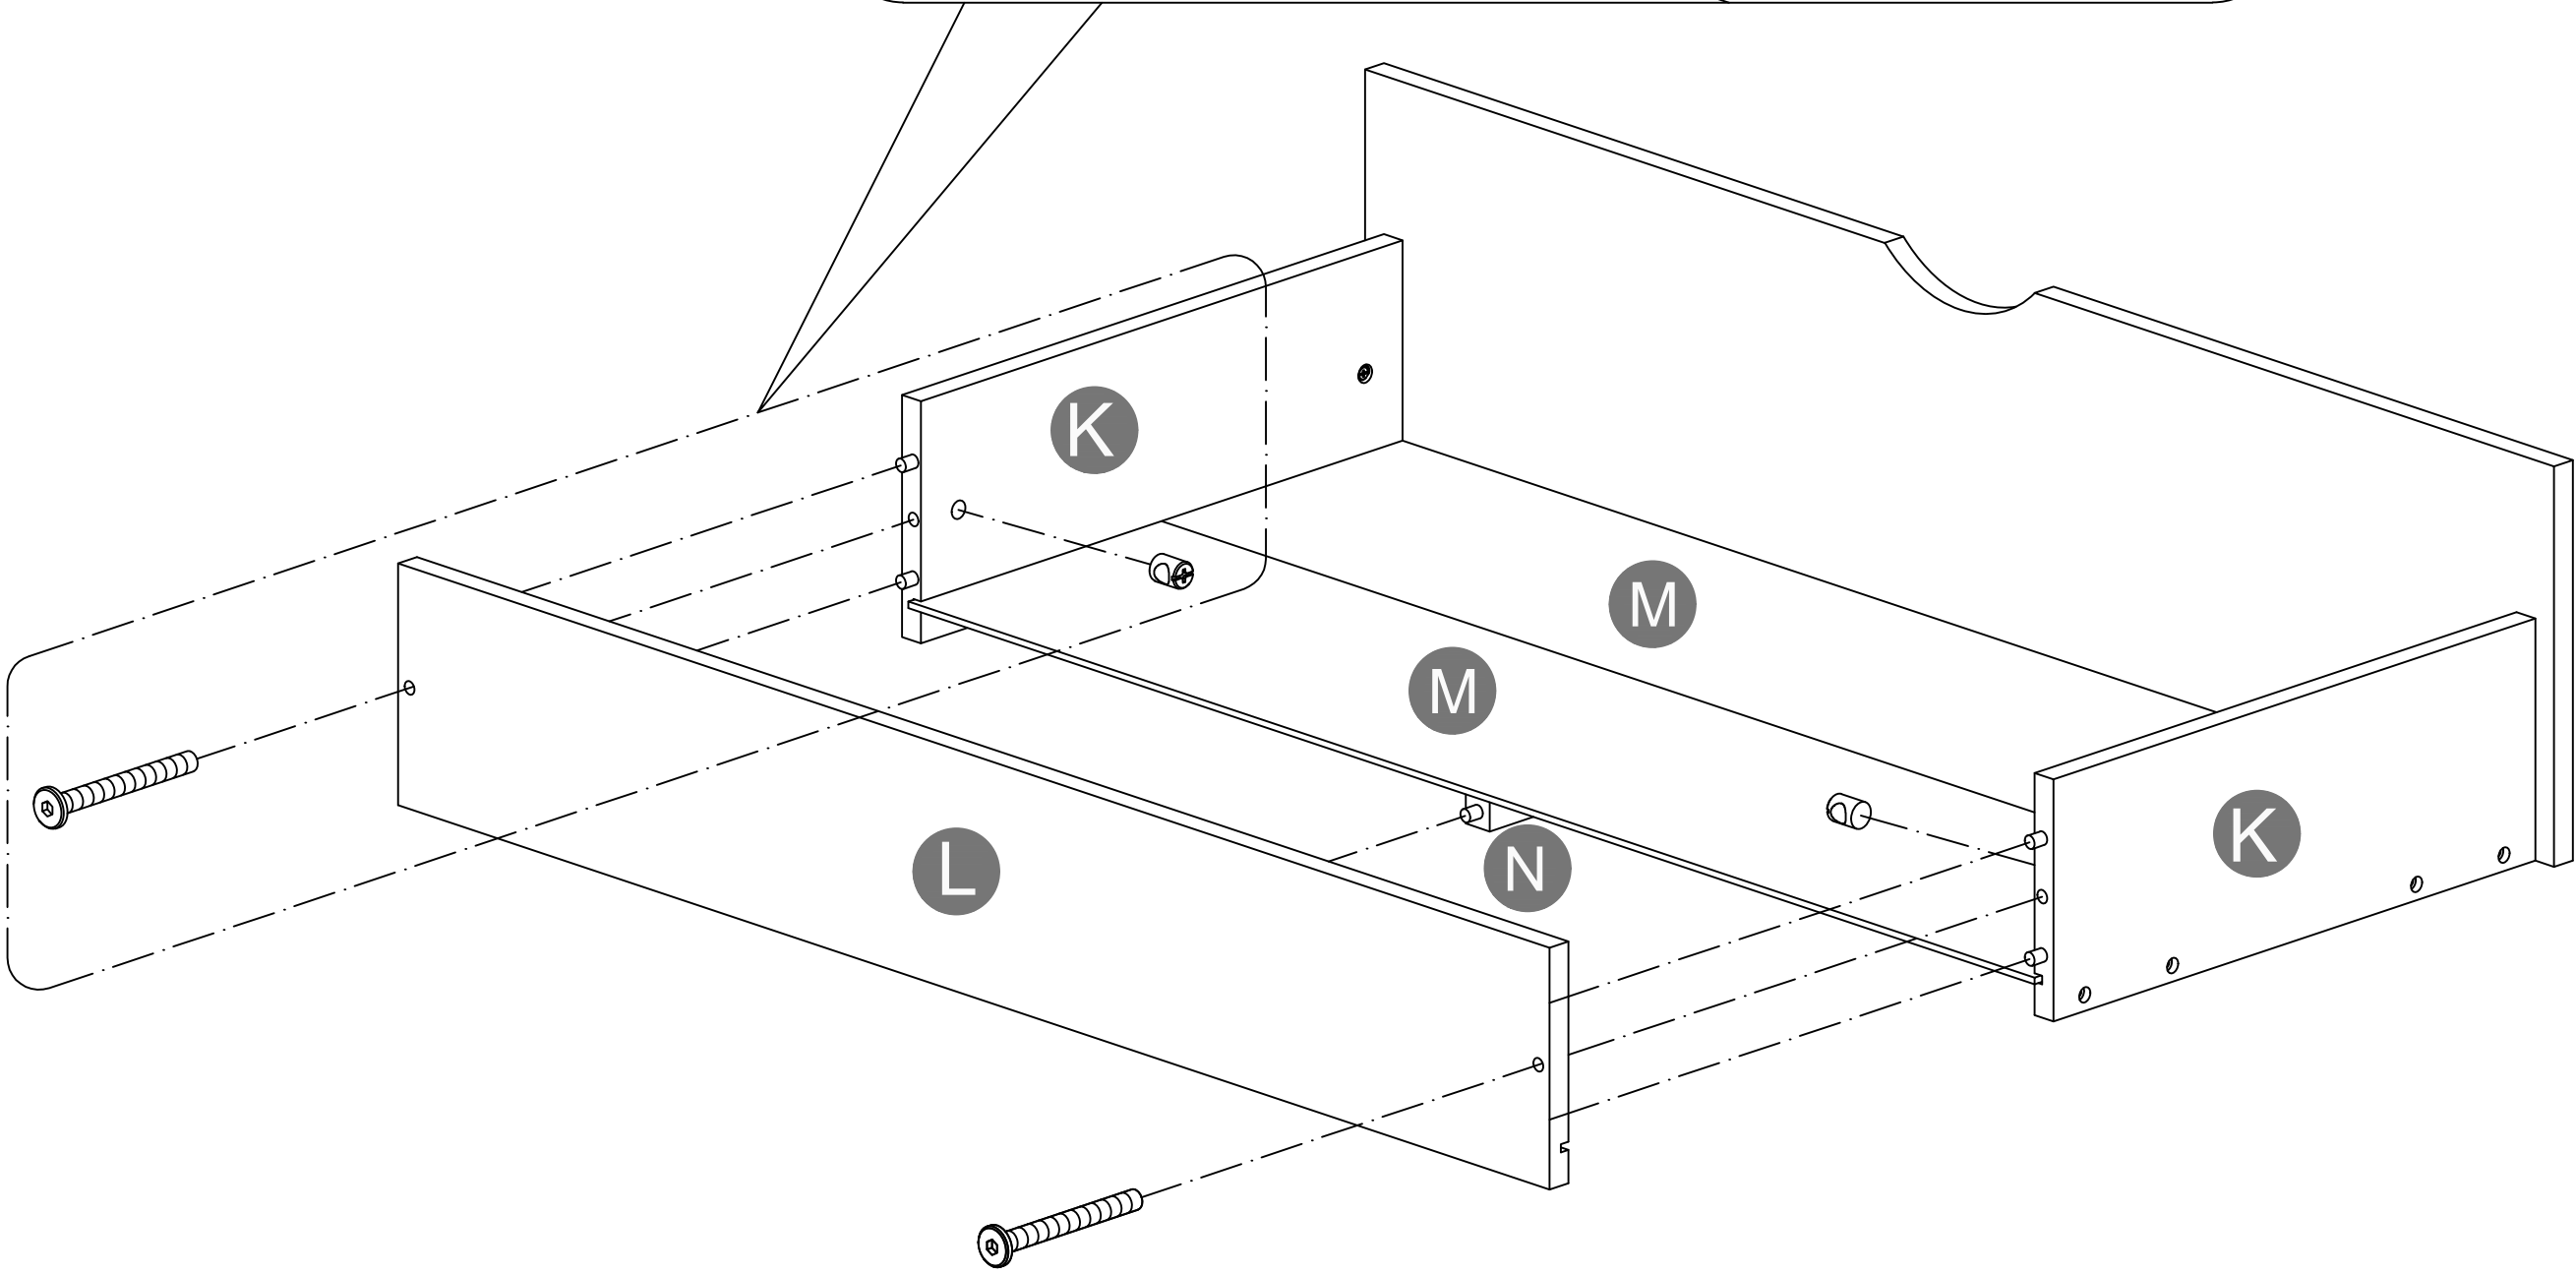





STEP 9:

10	
16 pcs	
12	
8pcs	
14	
8pcs	


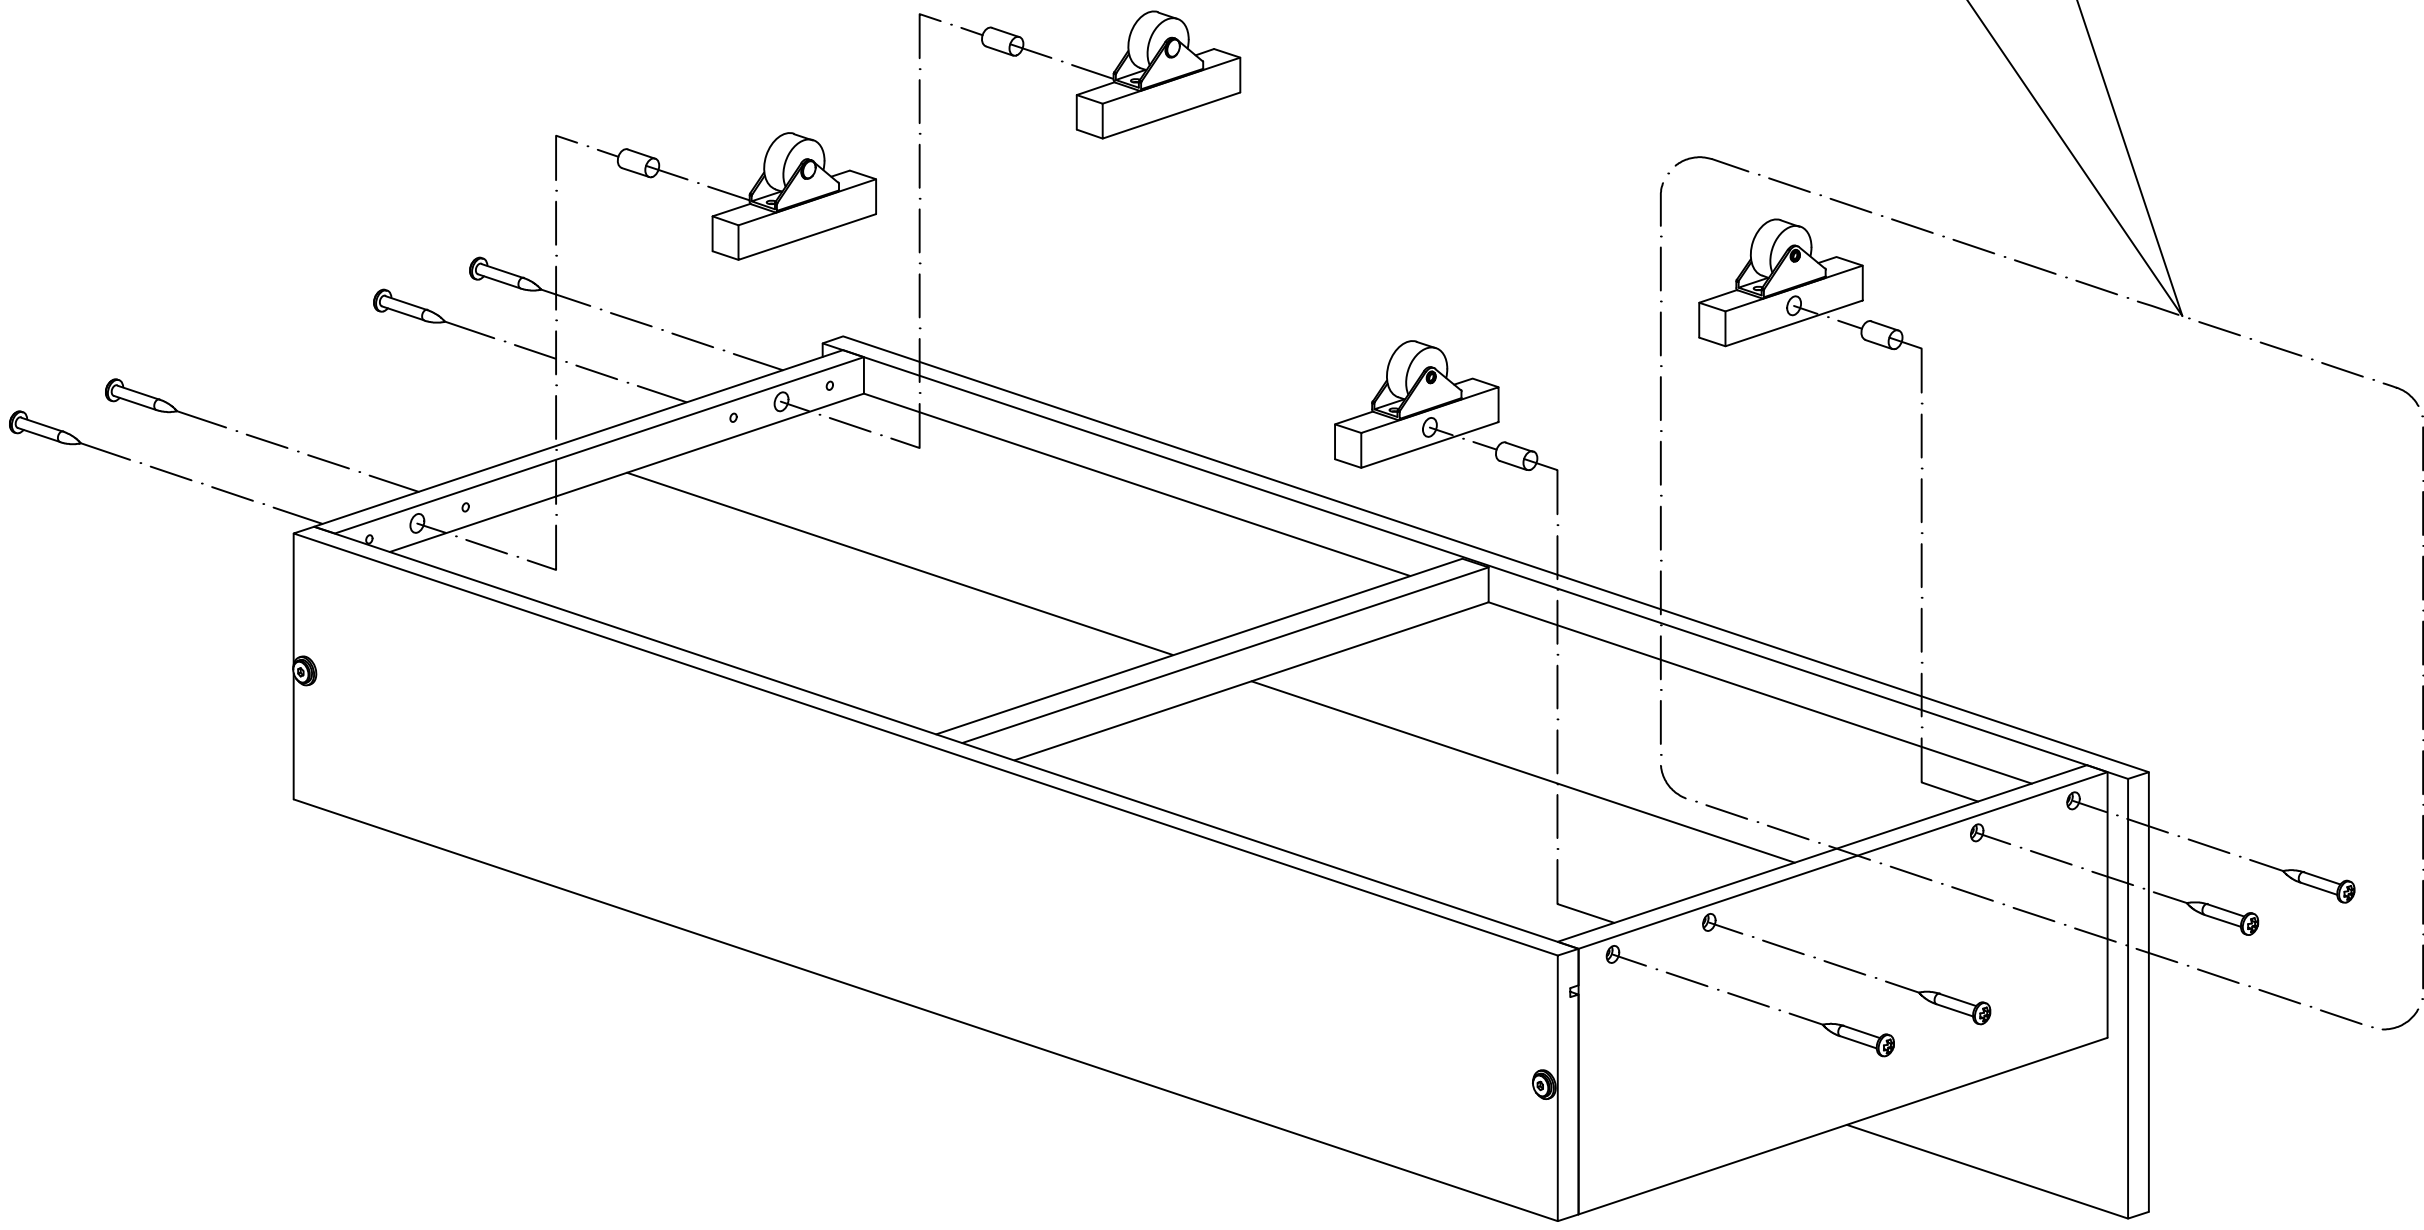
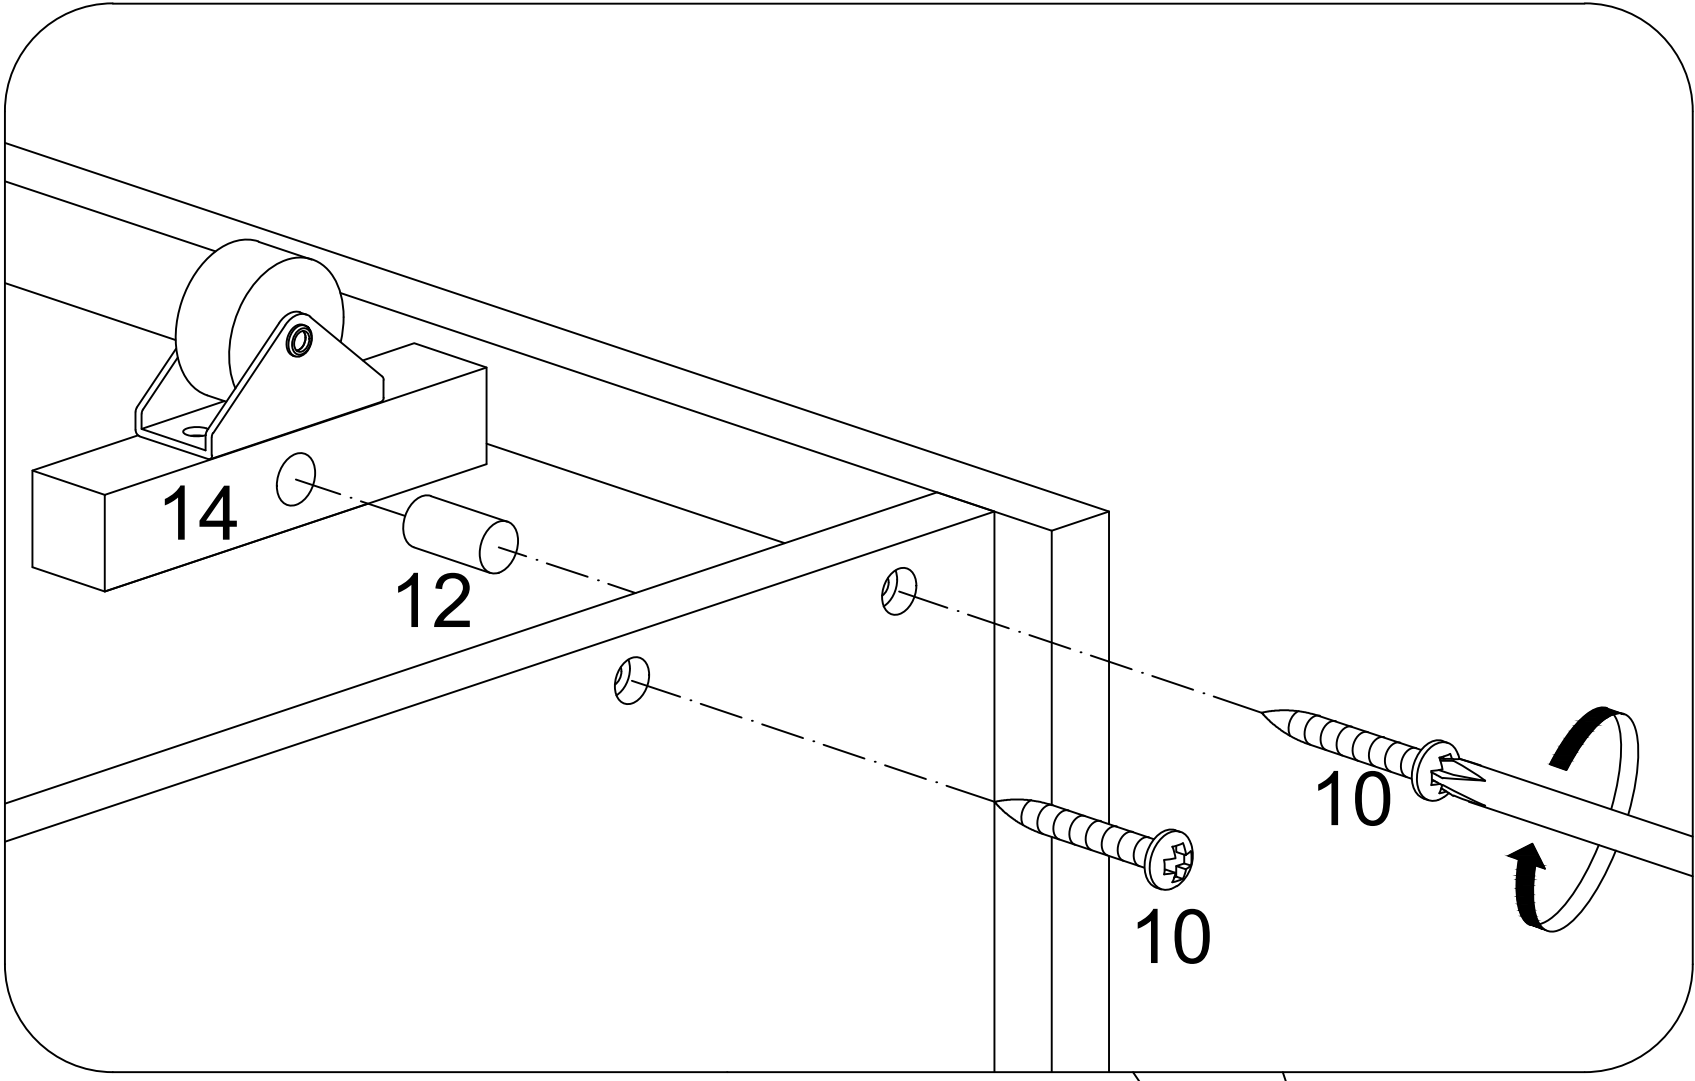


STEP 10:

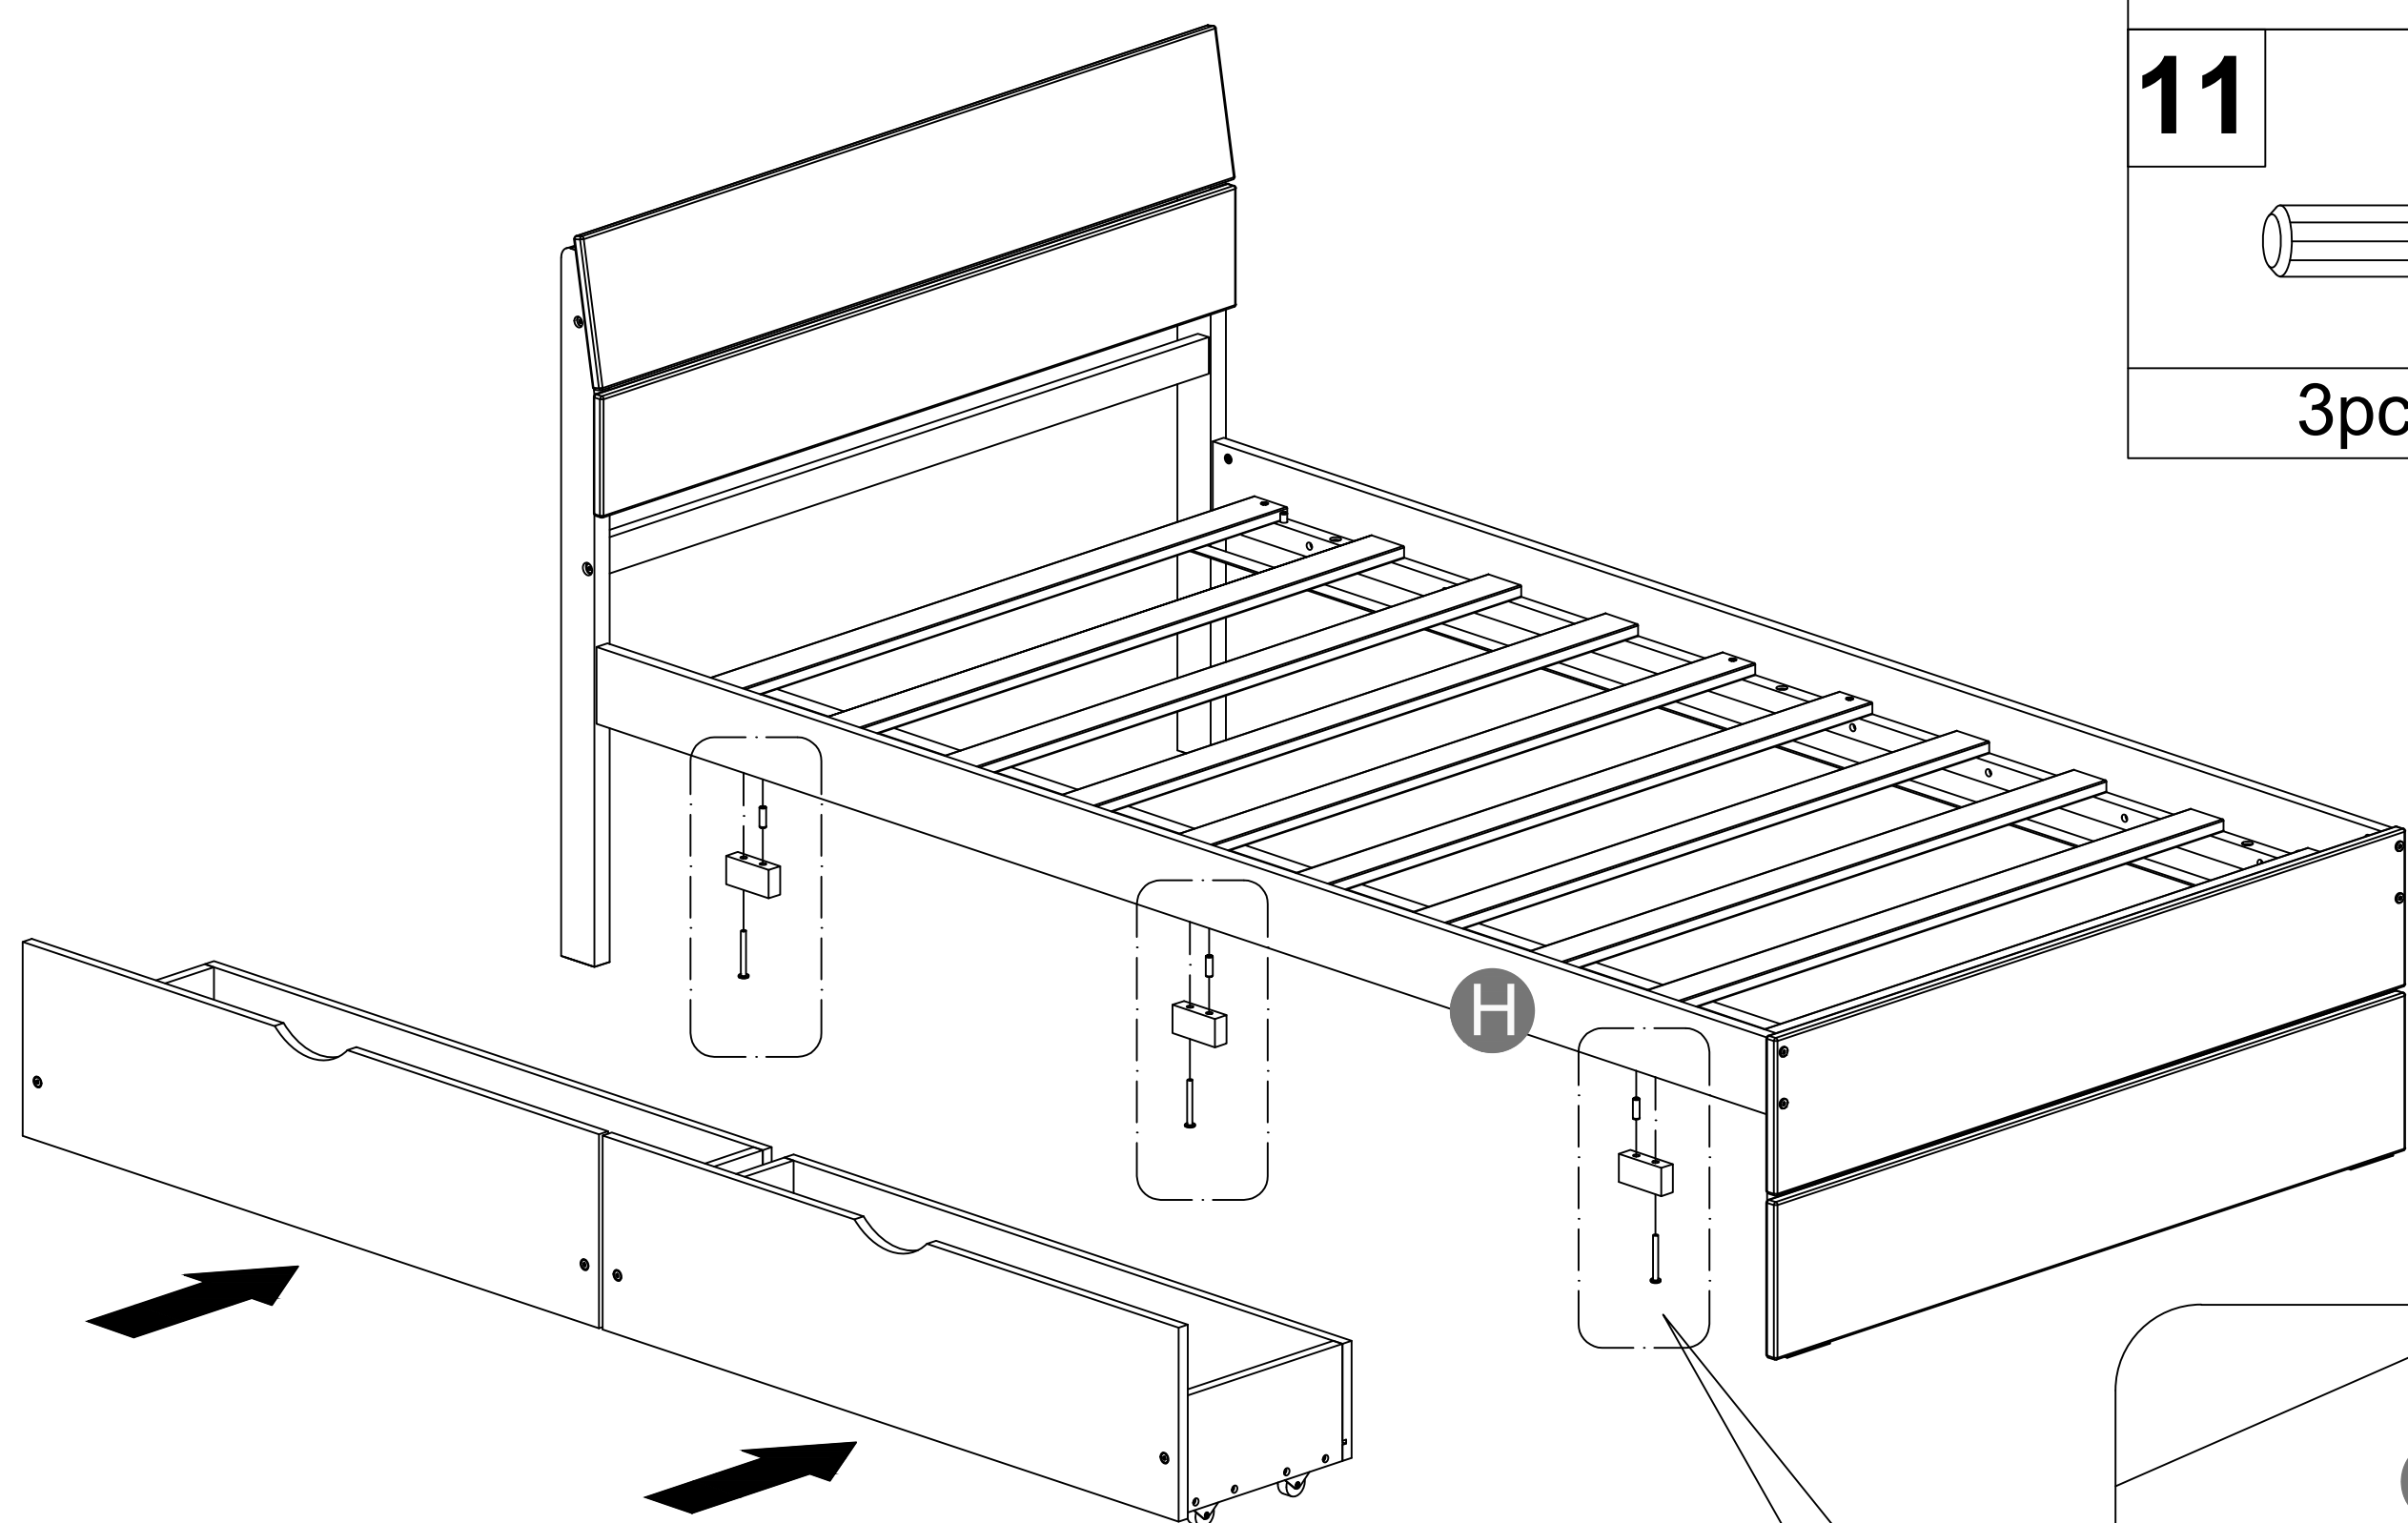

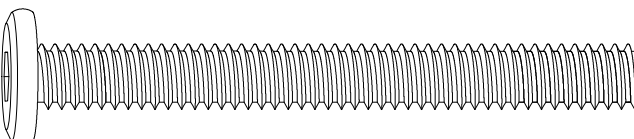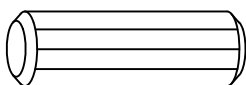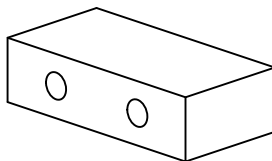8		
3pcs		
11		15
		
3pcs		3pcs

Push Drawers under the bottom of Bed.

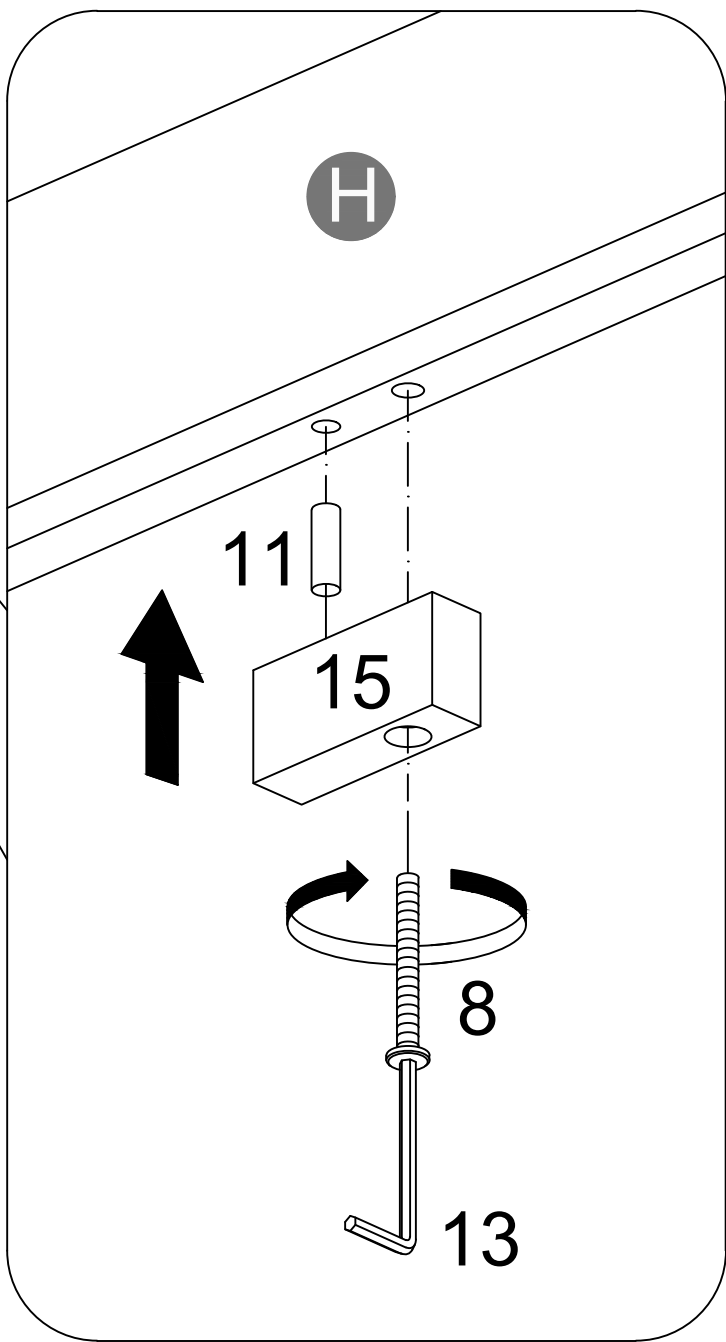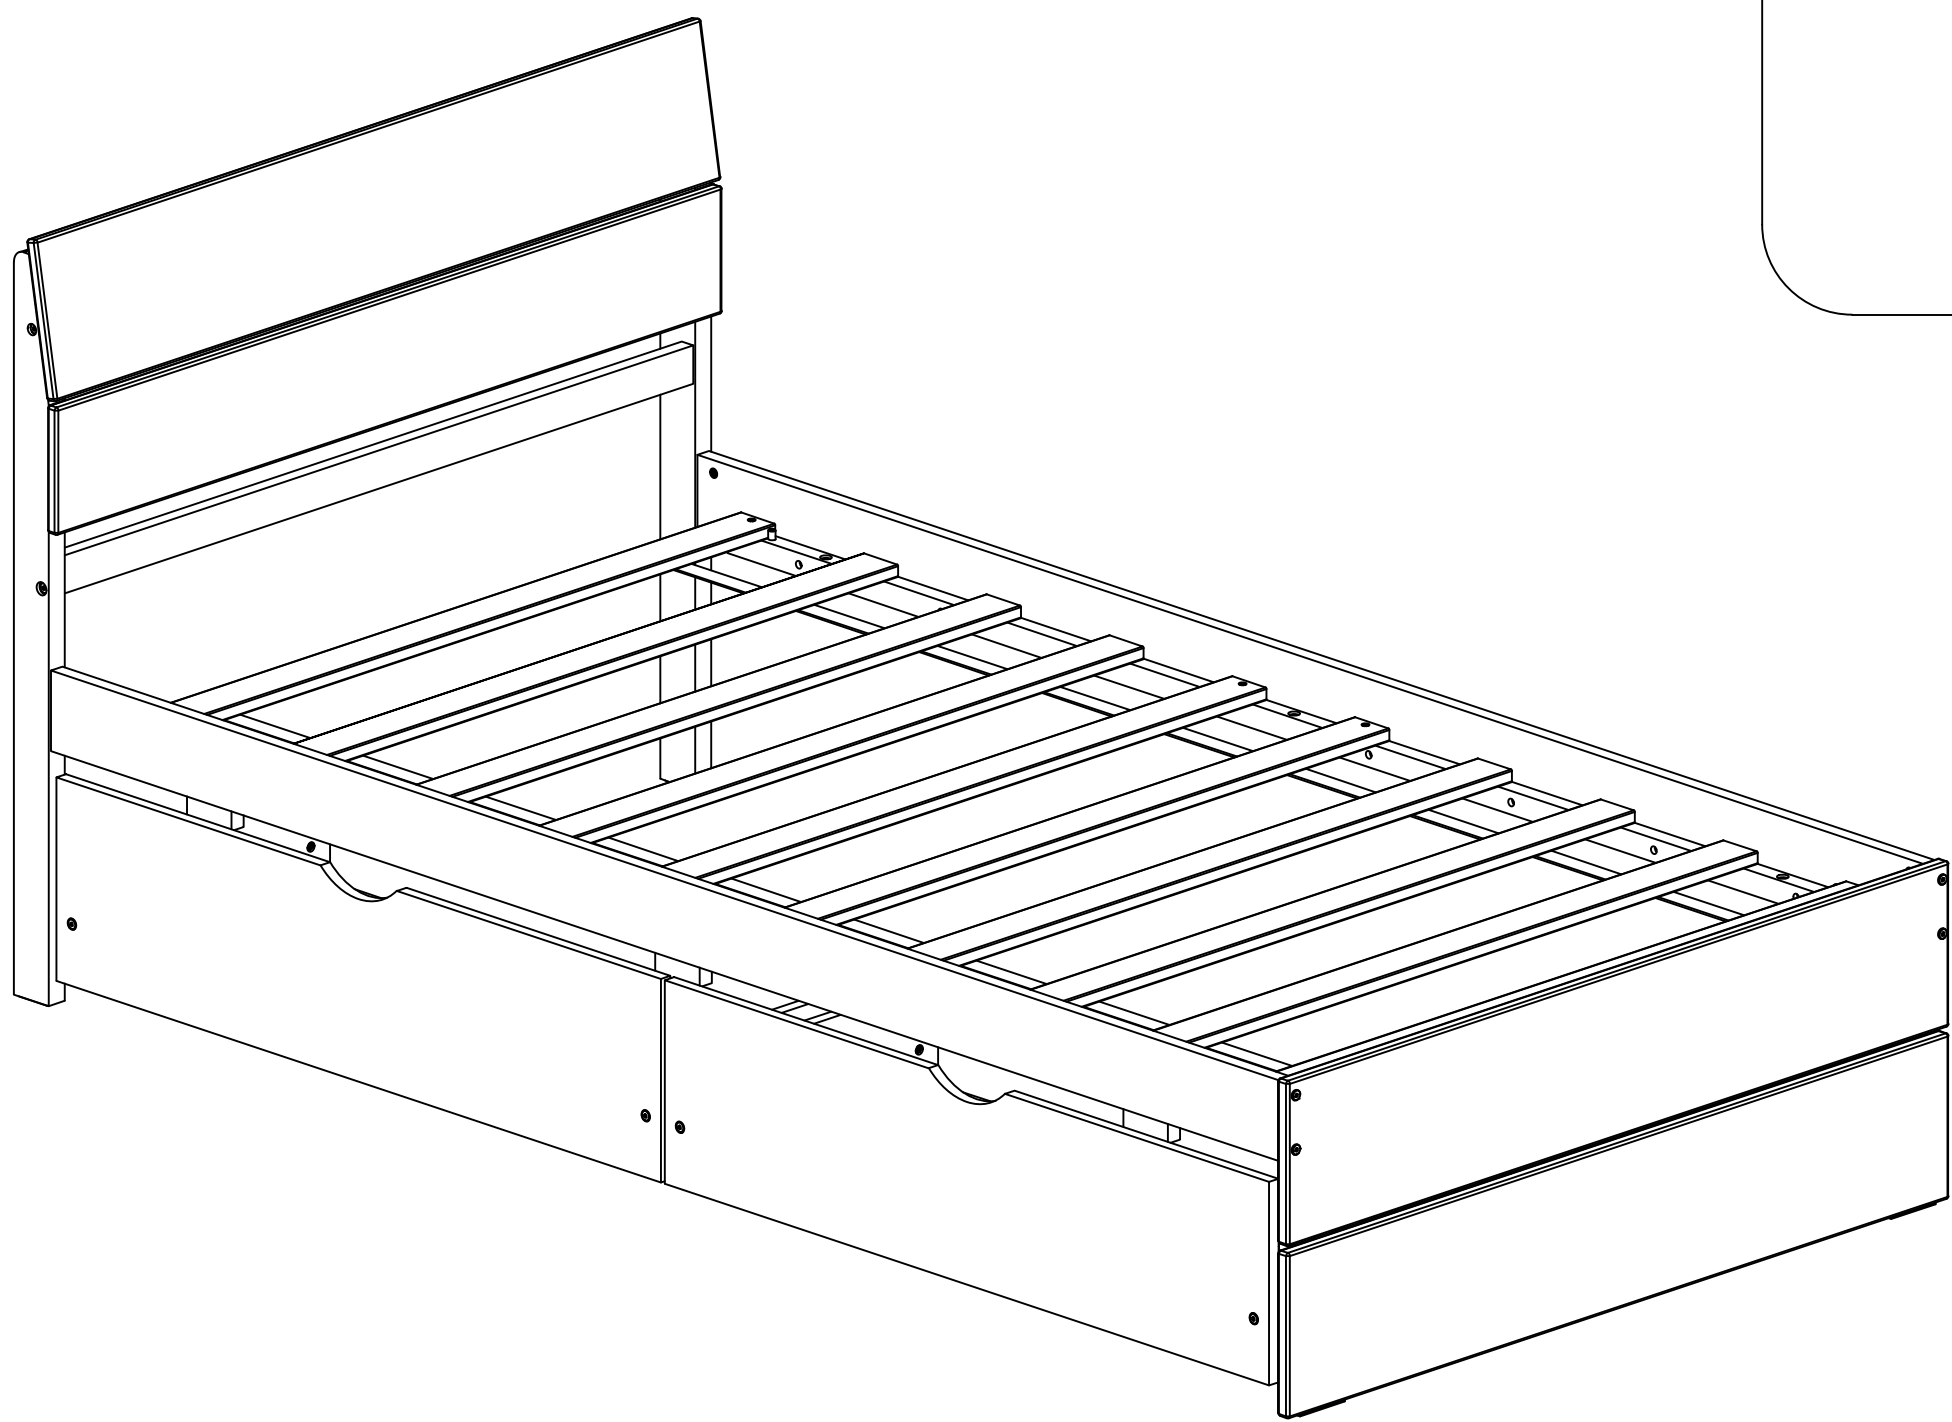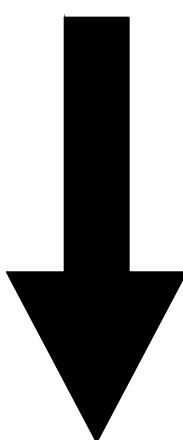

Make sure to tighten all the screws of the bed.