
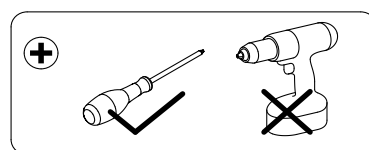
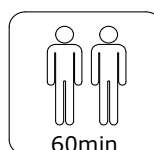


CAT CABINET

Assembly instructions -Please keep for future reference

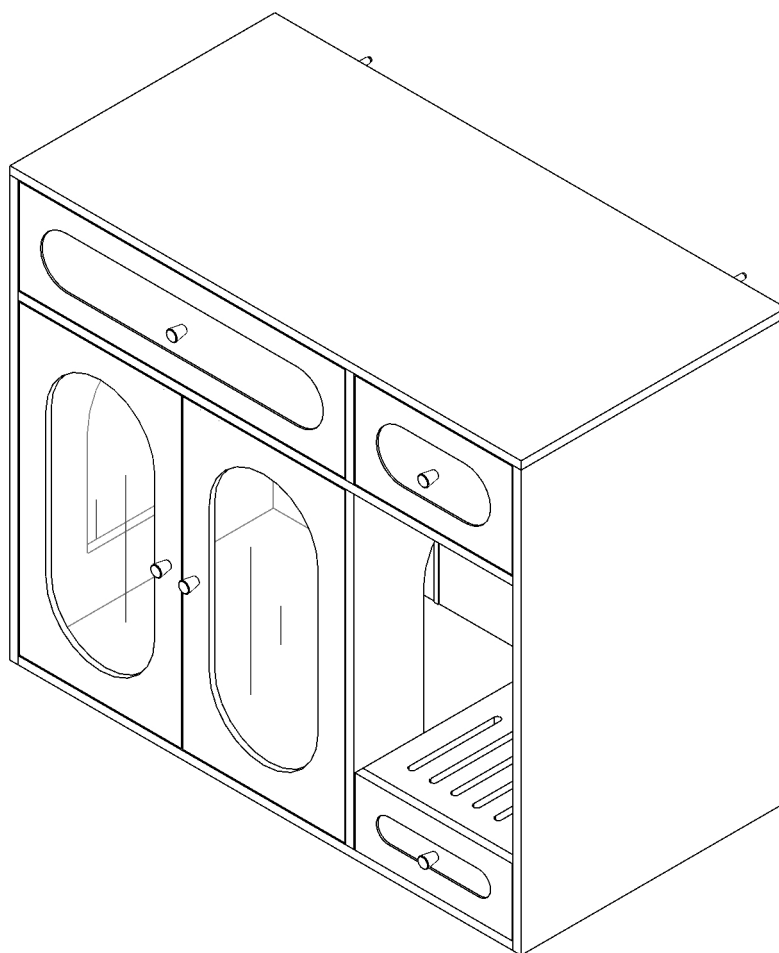


Important-Please read these instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them
- Keep children and pets away from the installation area, which may cause choking if small parts are swallowed.
- Make sure you have enough space to layout the parts before
- Do not stand or apply weight to the product during assembly. This may cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damage to the unit or floor.
- It's easier for two people to assemble the parts together.
- To reduce the likelihood of damage to your product, make sure your power drill is set to a low torque setting.

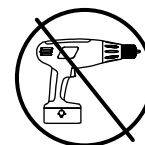

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Check for loose screws on this unit from time to time.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are correctly tightened.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.


1 DO NOT OVER TIGHTEN

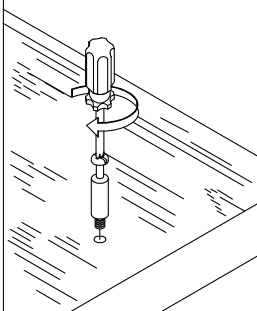

Step 2

Push the male camlock into the entry hole.

2

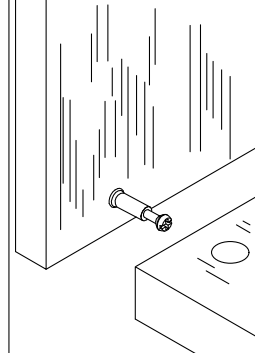


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

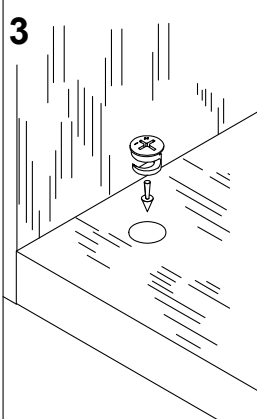


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

























The joint is now secure.

4












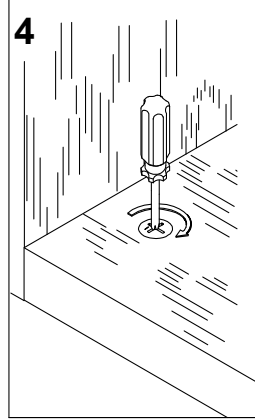


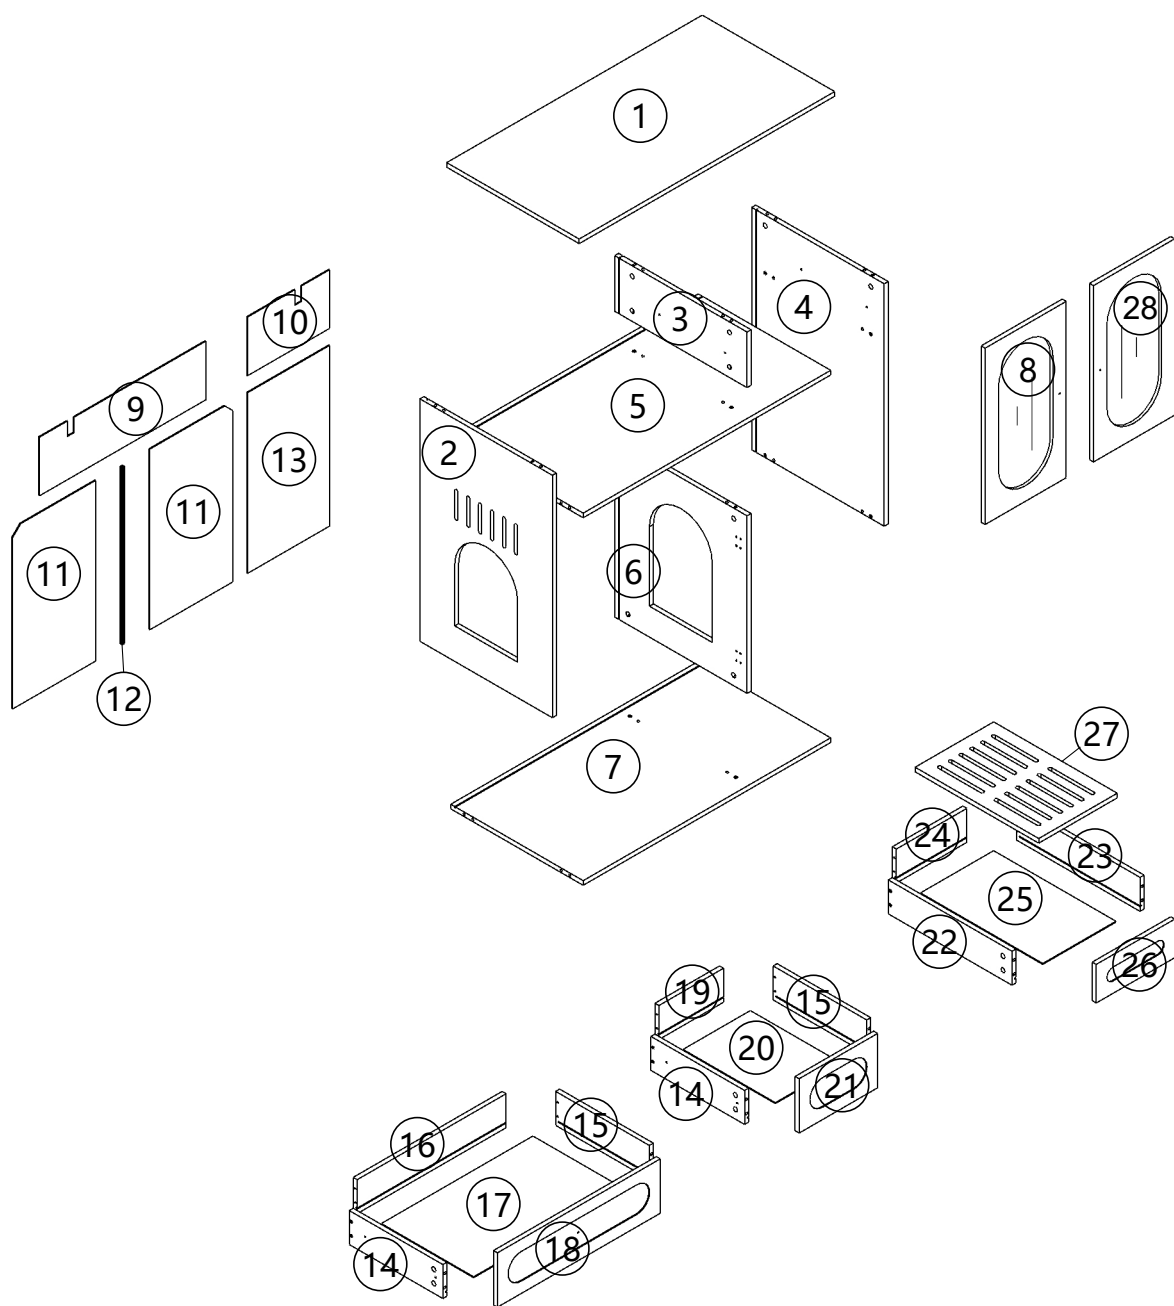


Part List:

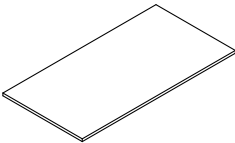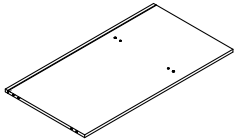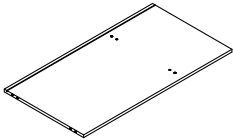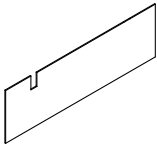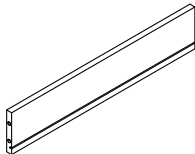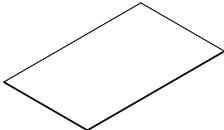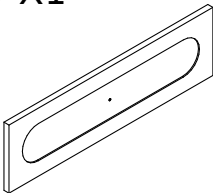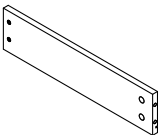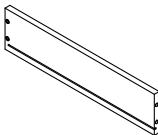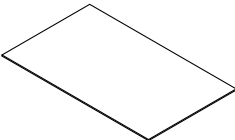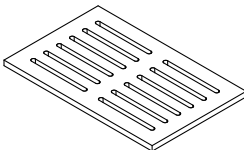① X1 	② X1 	③ X1 	④ X1 
⑤ X1 	⑥ X1 	⑦ X1 	⑧ X1 
⑨ X1 	⑩ X1 	⑪ X2 	⑫ X1 
⑬ X1 	⑭ X2 	⑮ X2 	⑯ X1 
⑰ X1 	⑱ X1 	⑲ X1 	⑳ X1 
㉑ X1 	㉒ X1 	㉓ X1 	㉔ X1 
㉕ X1 	㉖ X1 	㉗ X1 	㉘ X1 

Hardware list

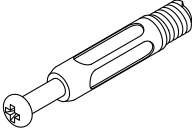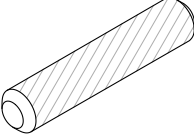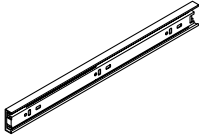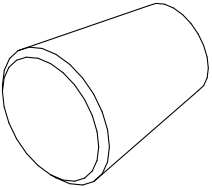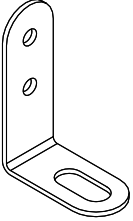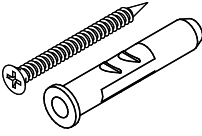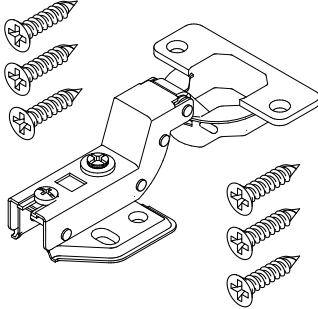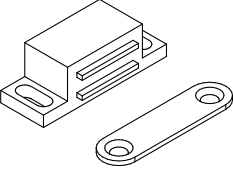
A X32 	B X32 	C X20 	D X36 3.5*14mm 
E X4 	F X5 	G X5 	H X1 
I X2 	J X2 	K X4 	L X4 
M X2 	N X12 4*40mm 	O X8 	


01

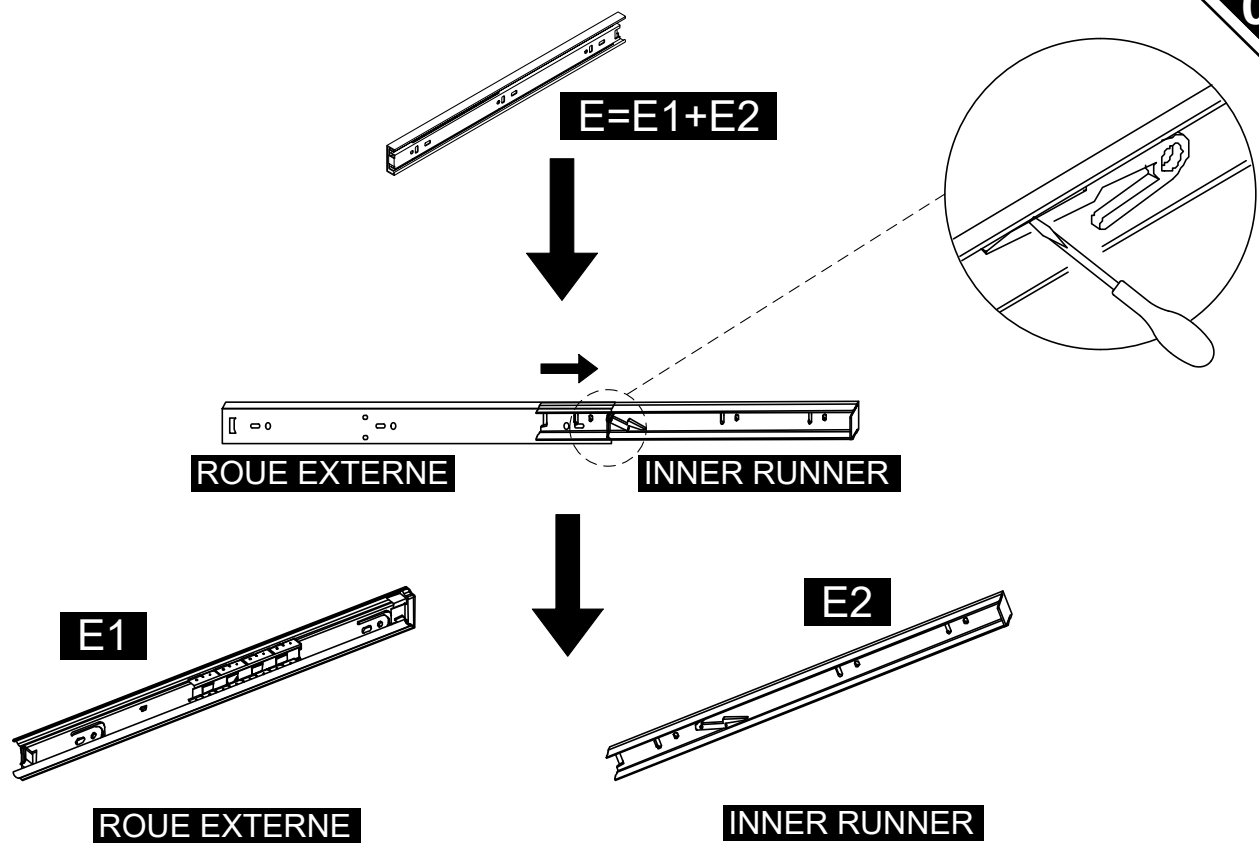



Their inner and outer slide guides are ready to be attached to the plates.
Your interior and exterior drawers are ready to be mounted on the panel.

02

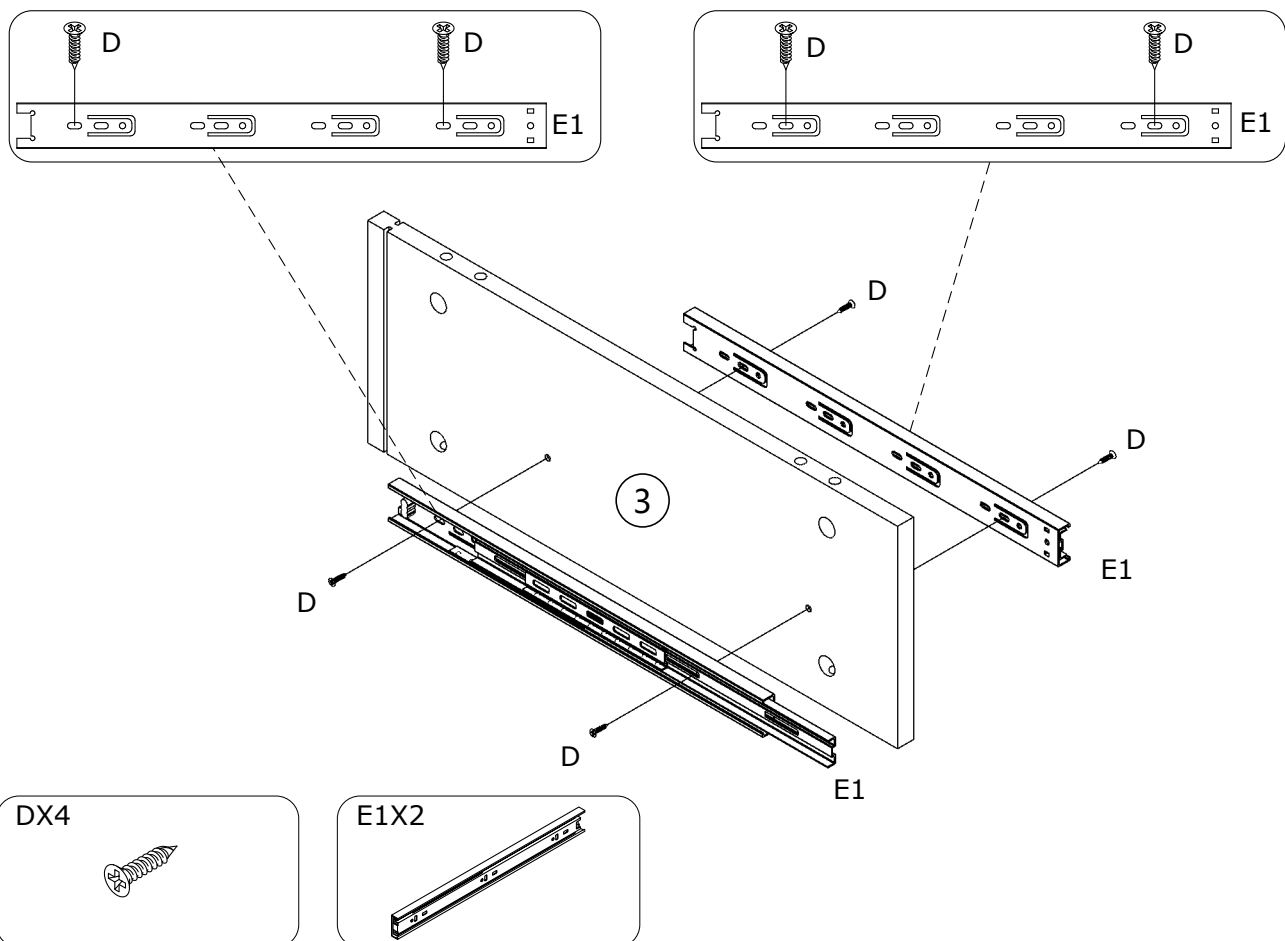


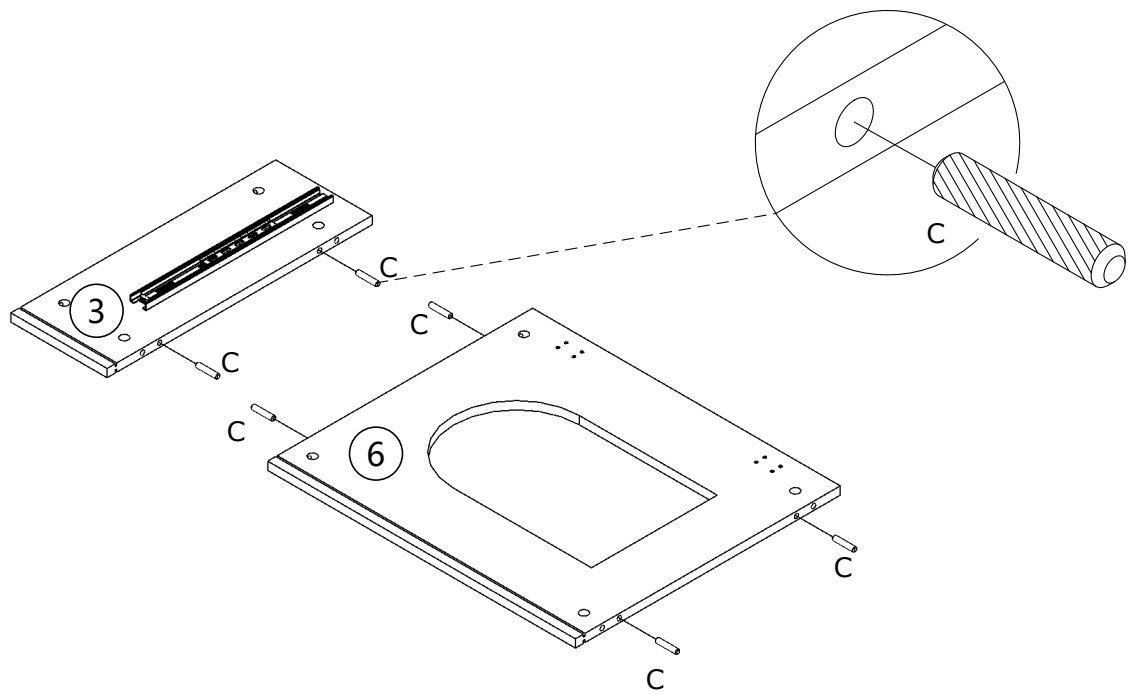


CX6

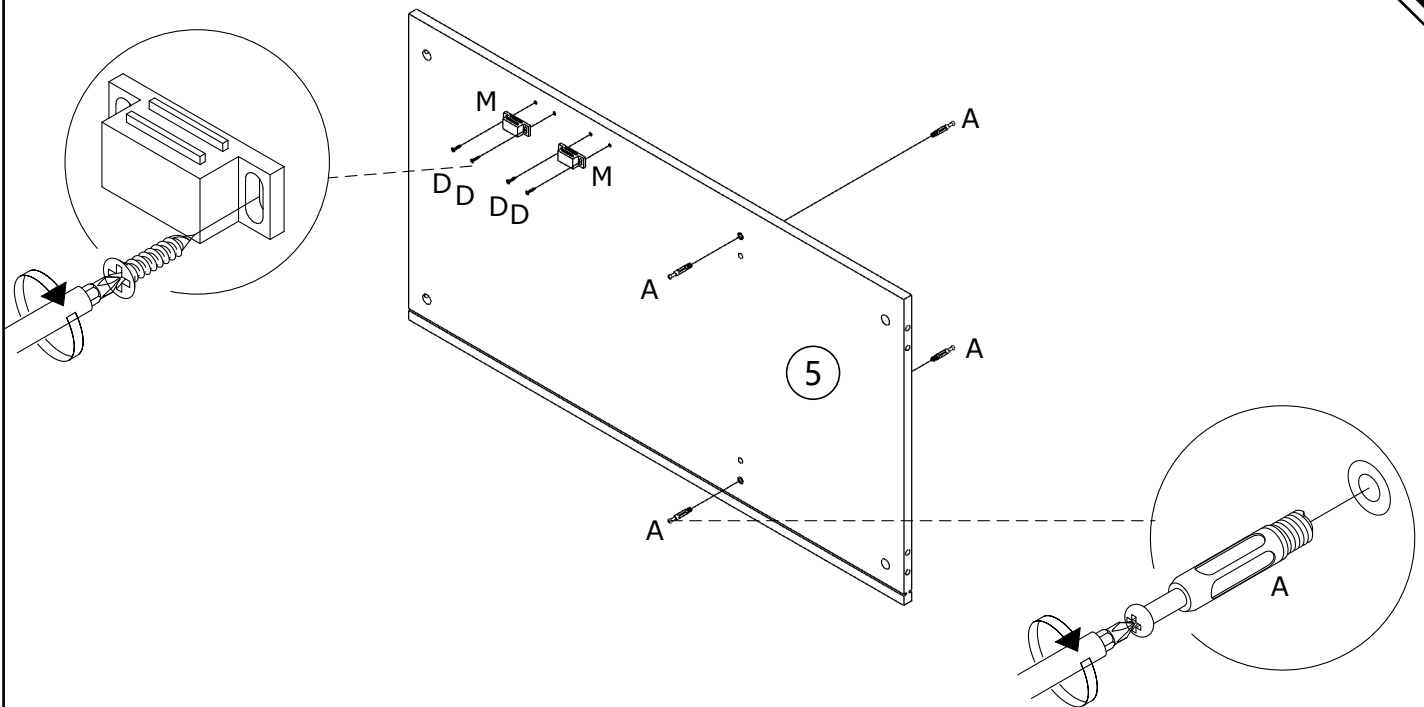

AX4




MX2




DX4



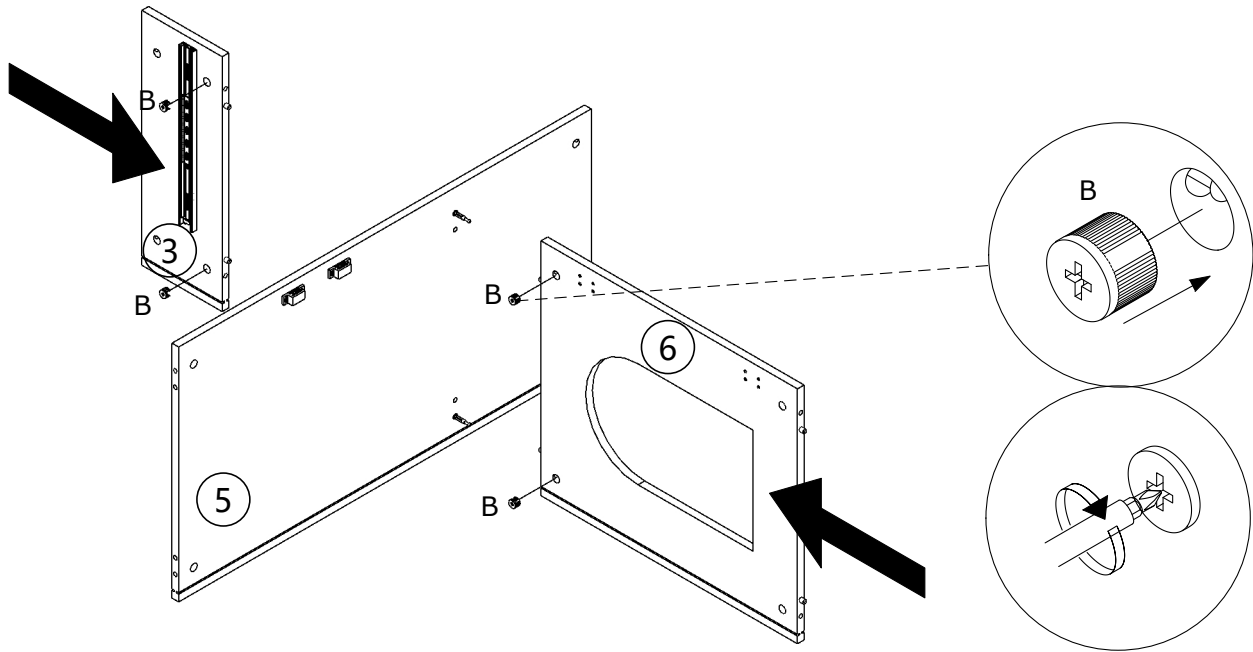


BX4


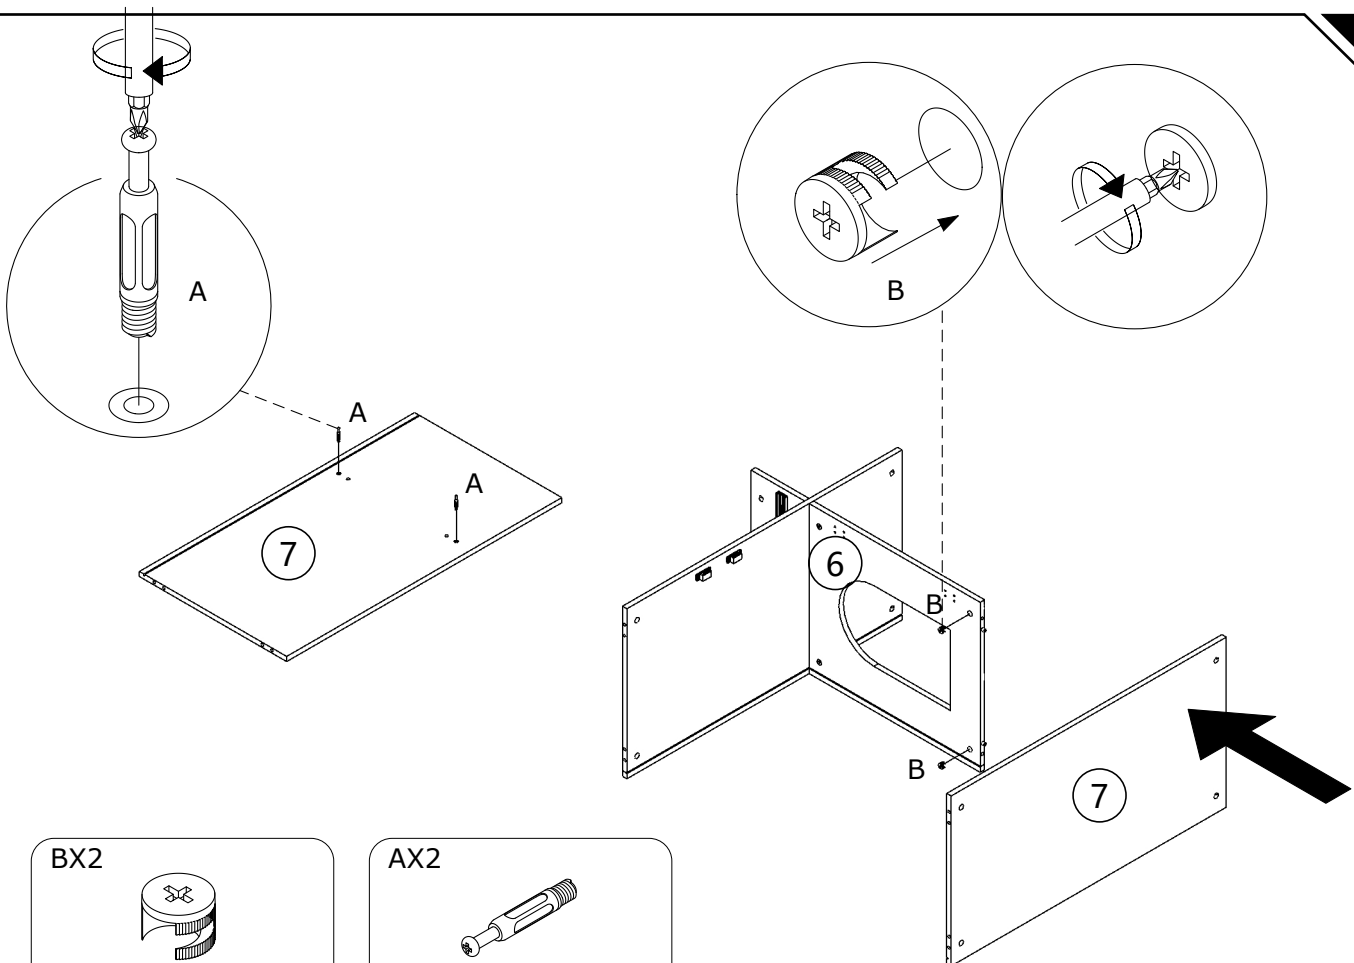



BX2



AX2



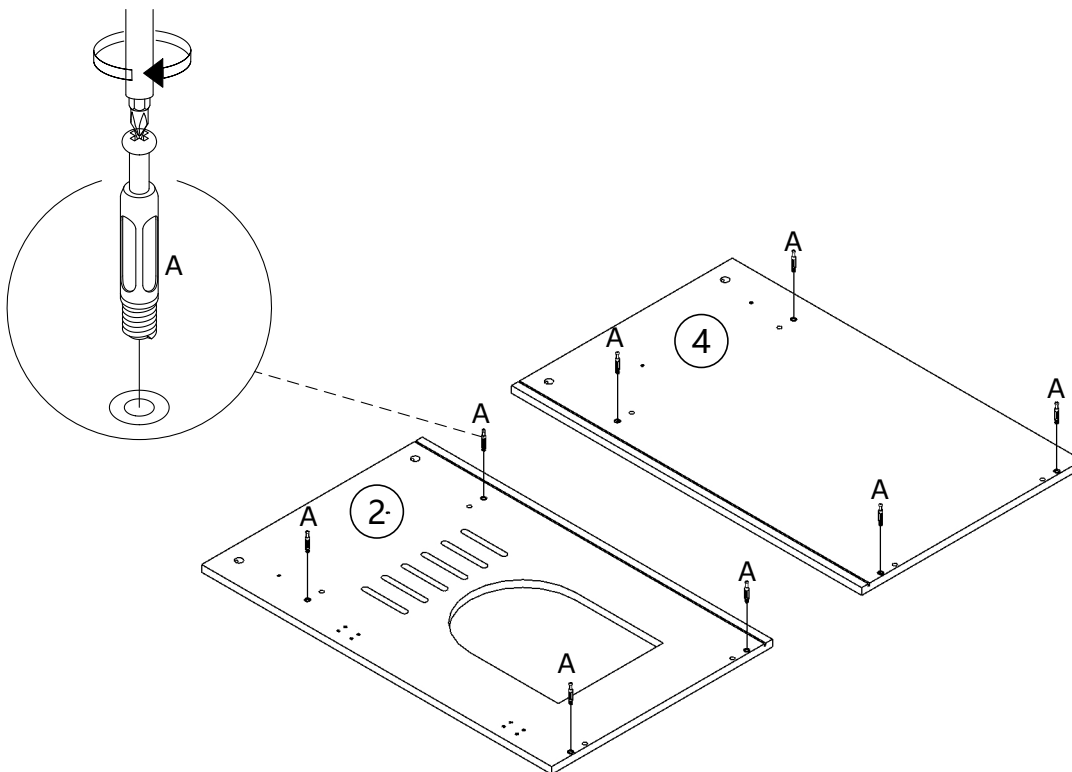
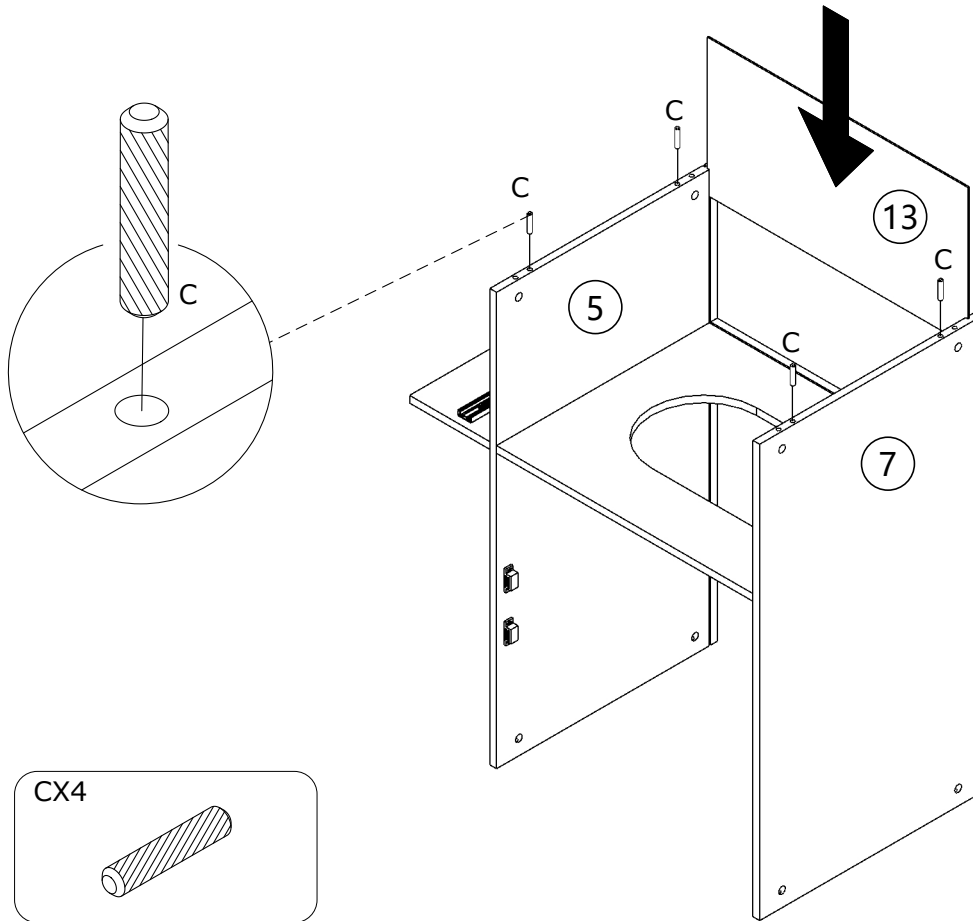


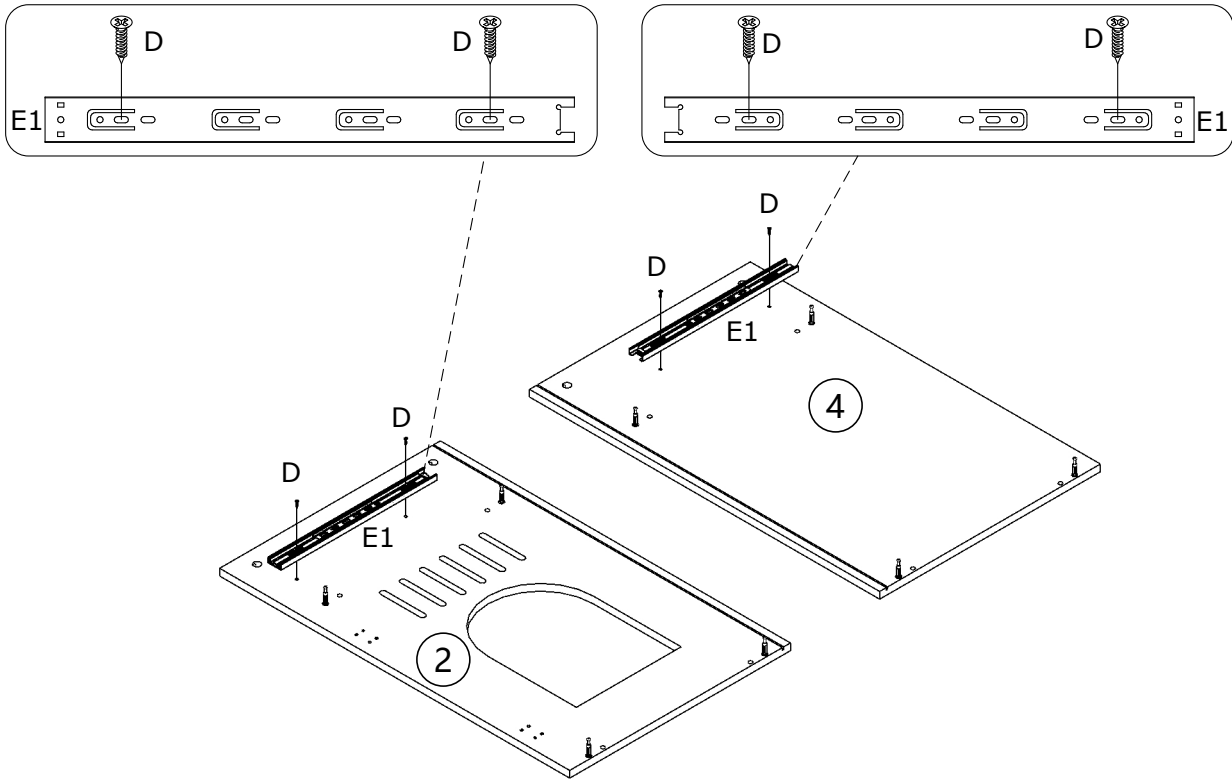

DX4






E1X2

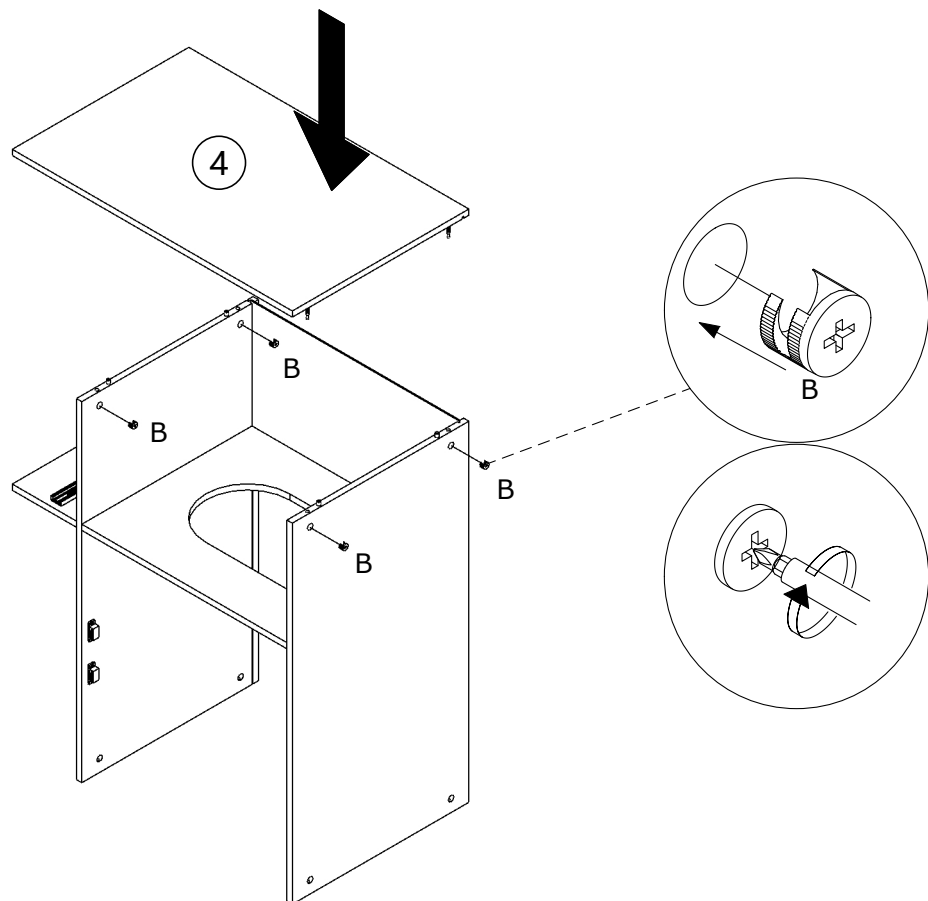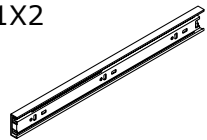



BX4



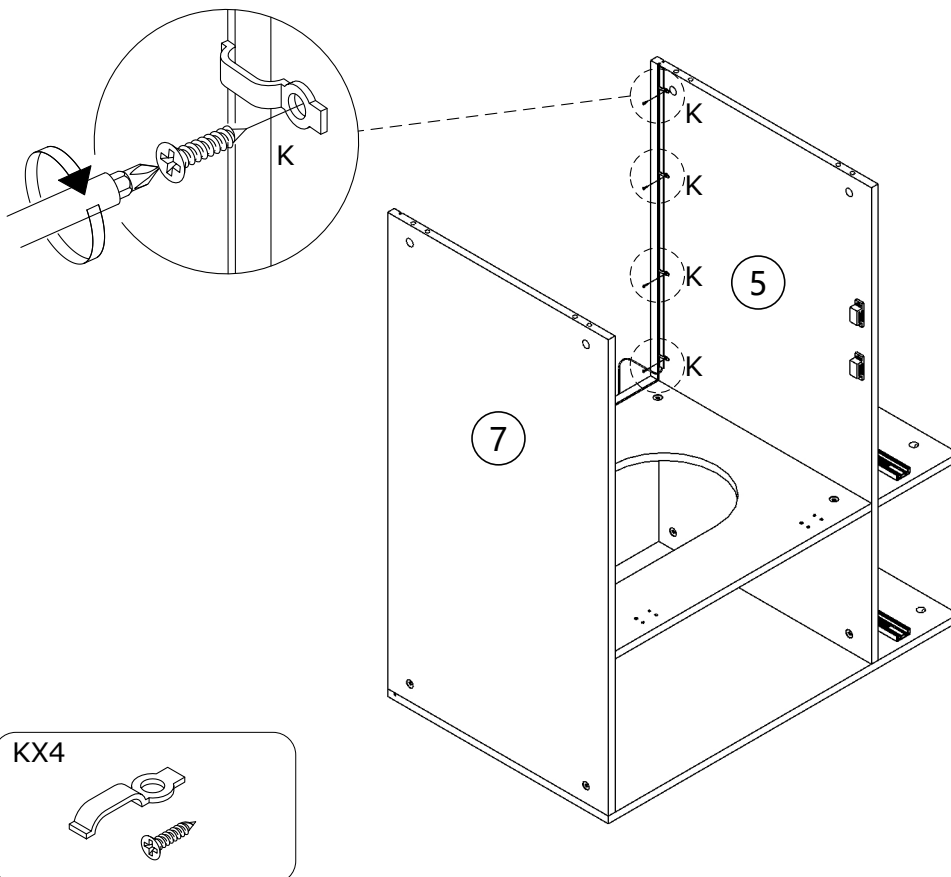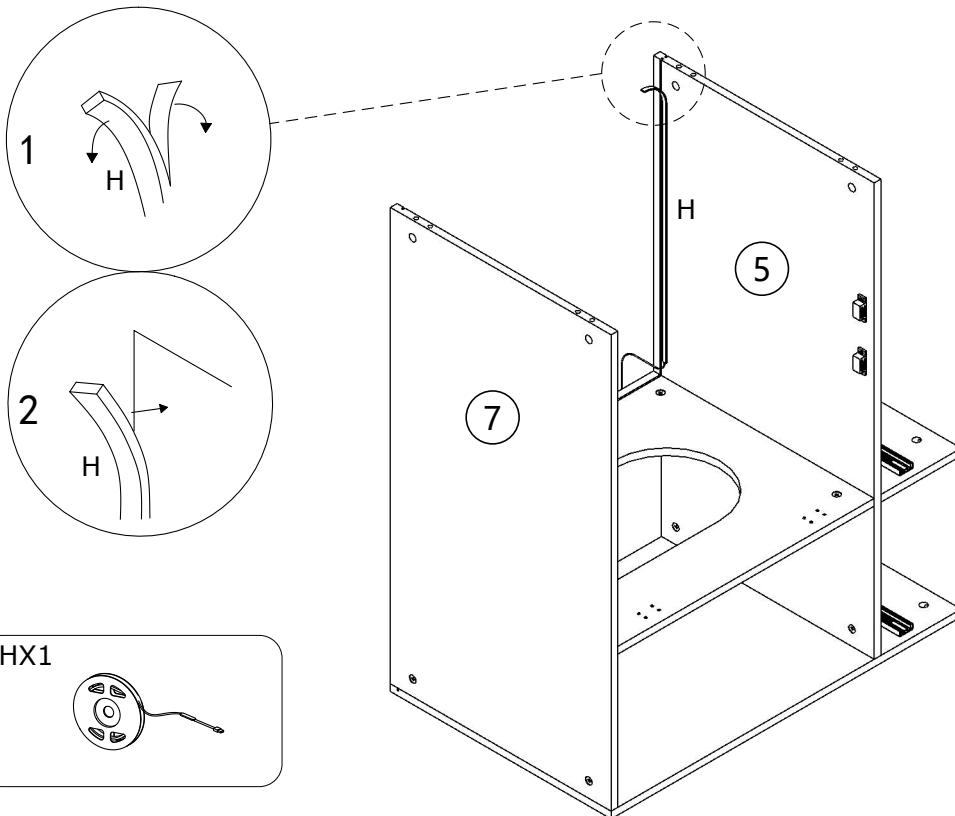


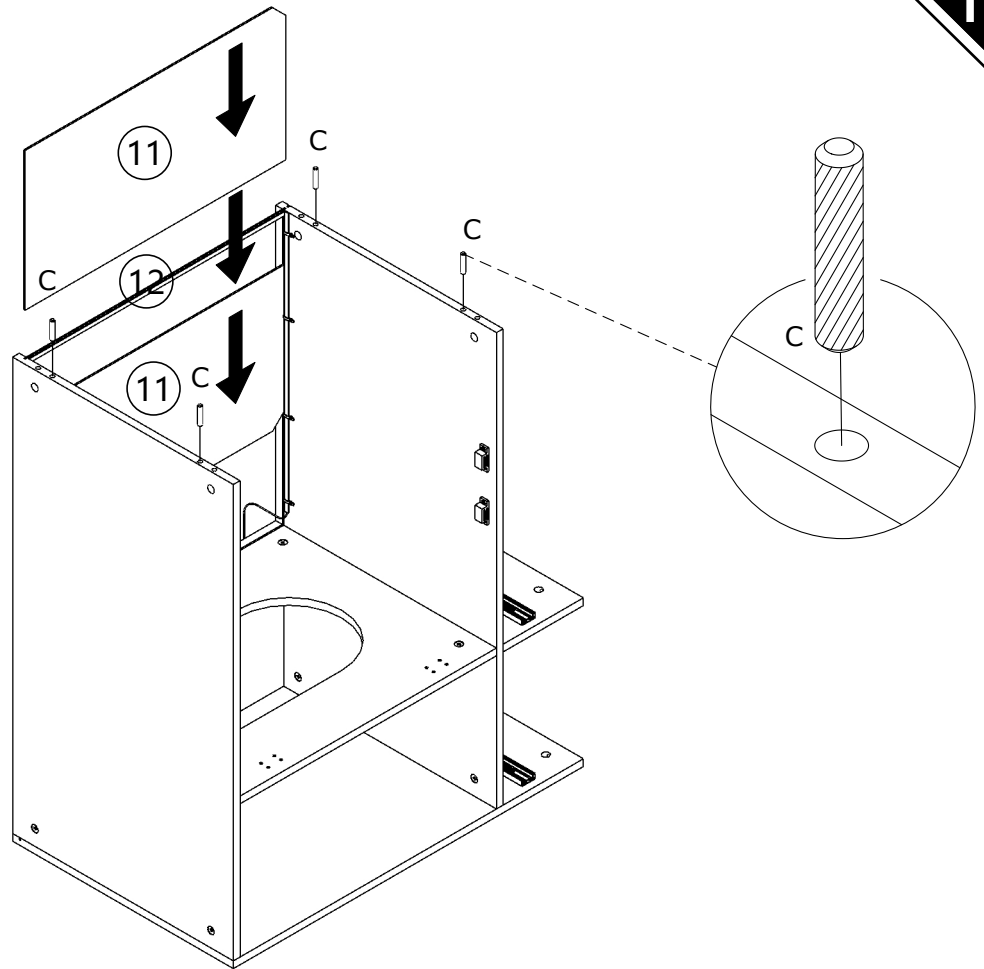


CX4



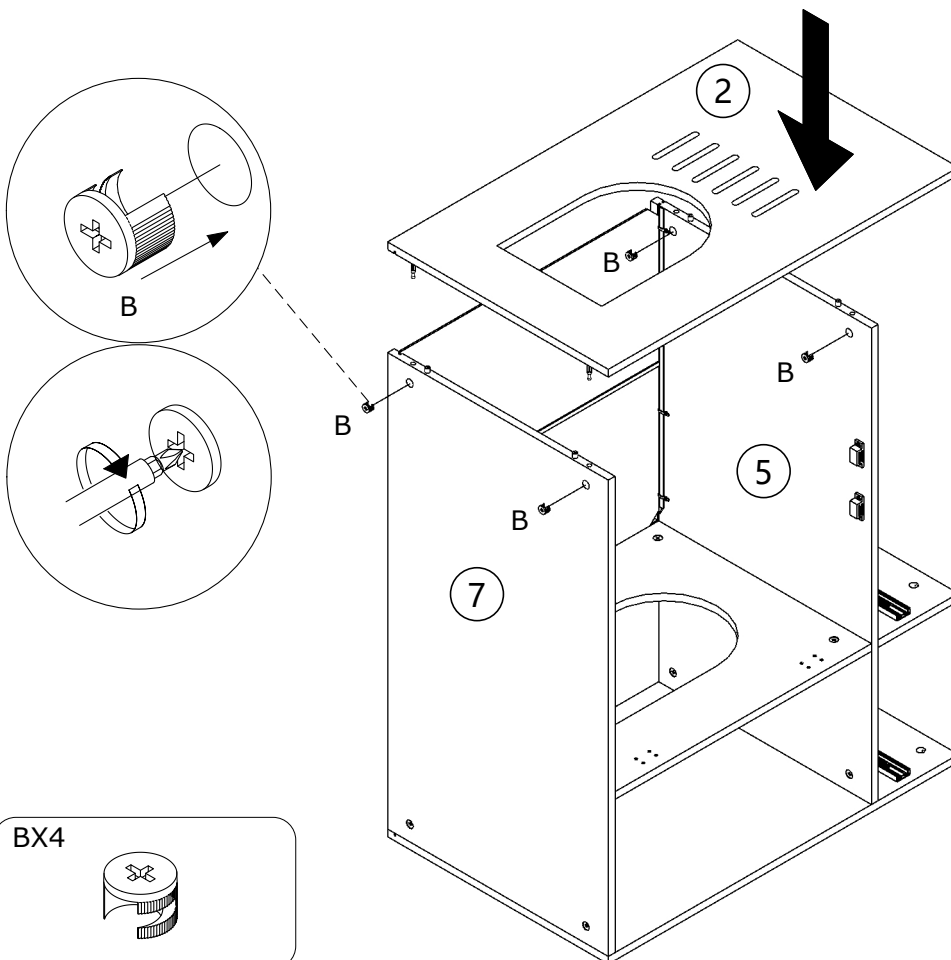



BX4



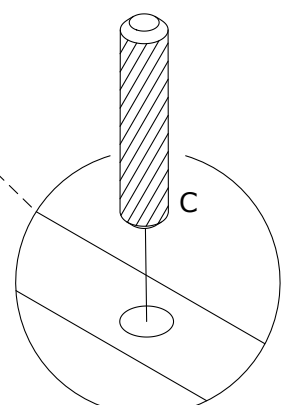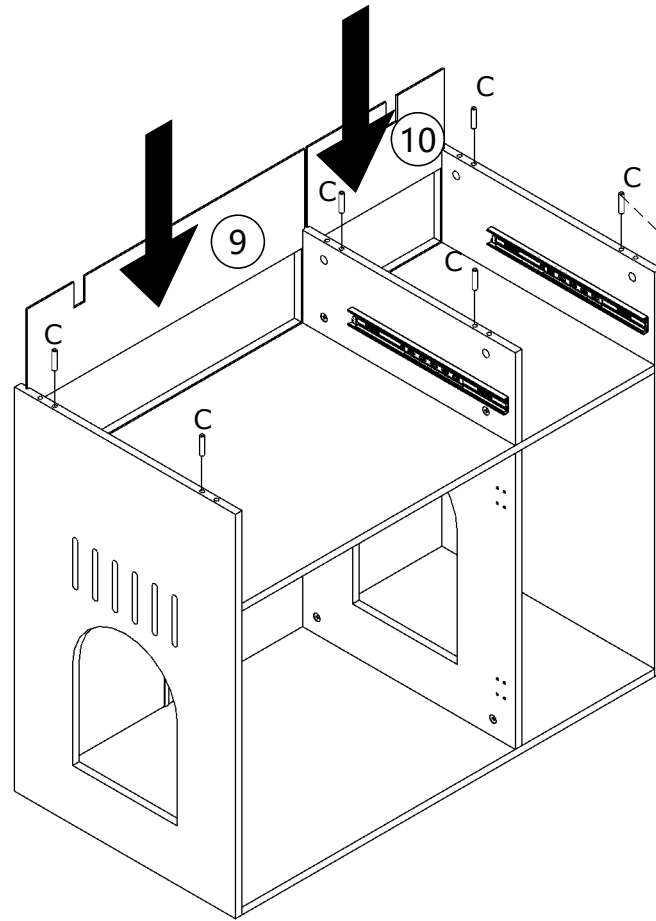


CX6

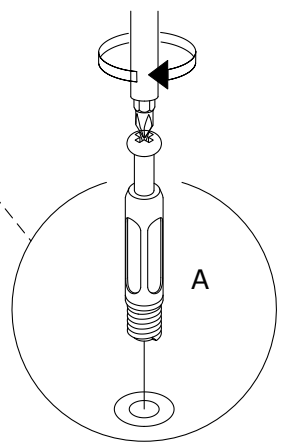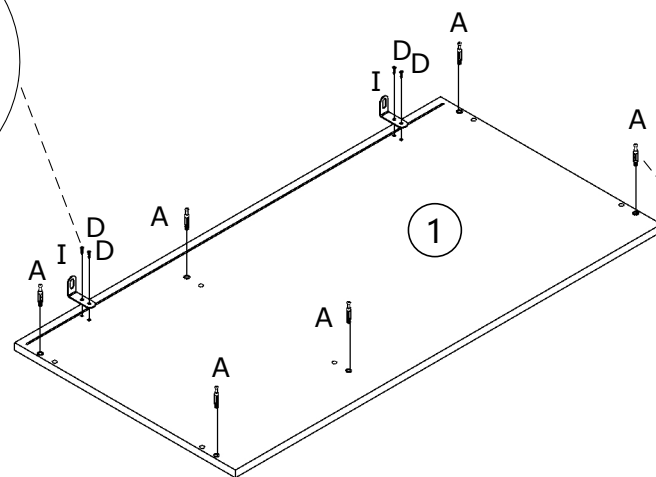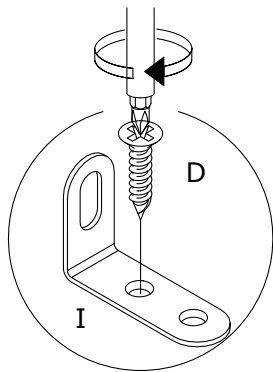


DX4








IX2




AX6





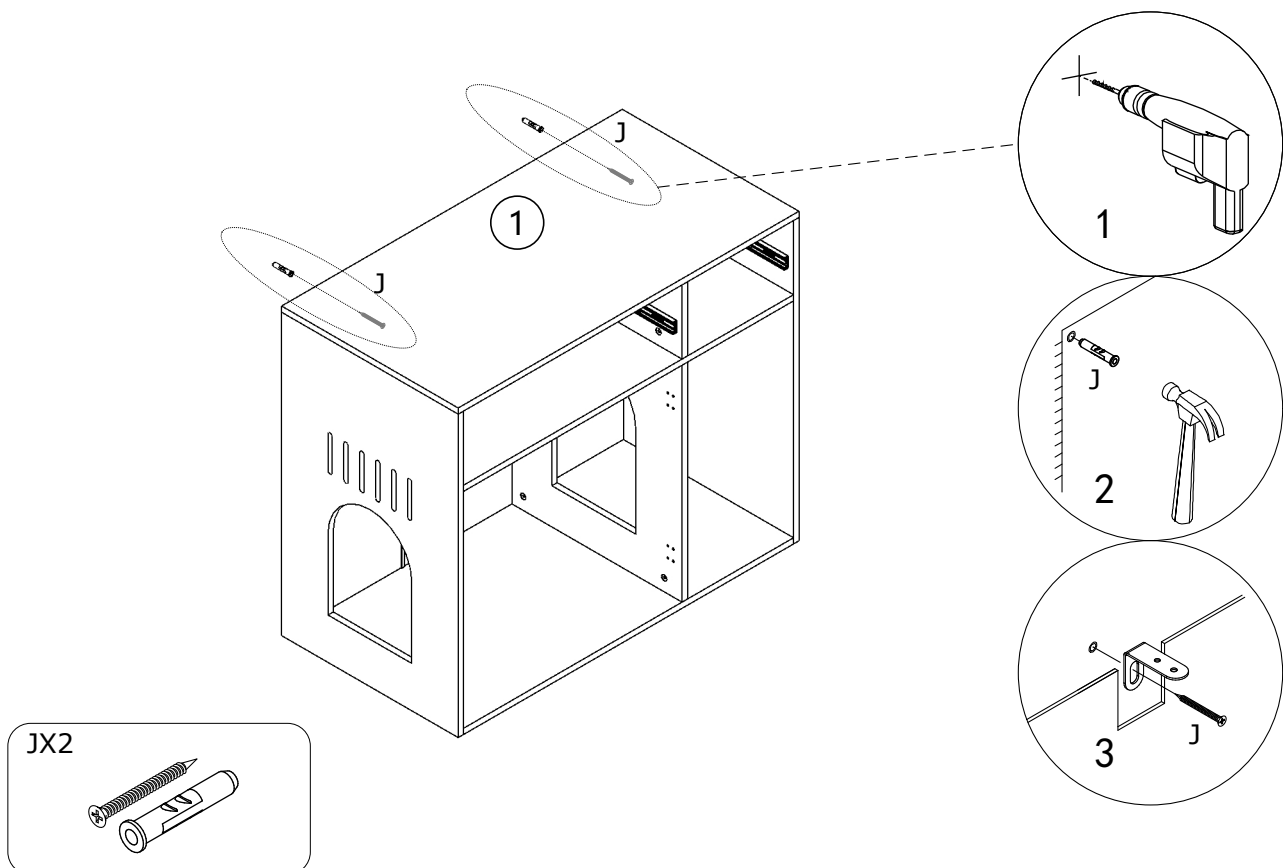
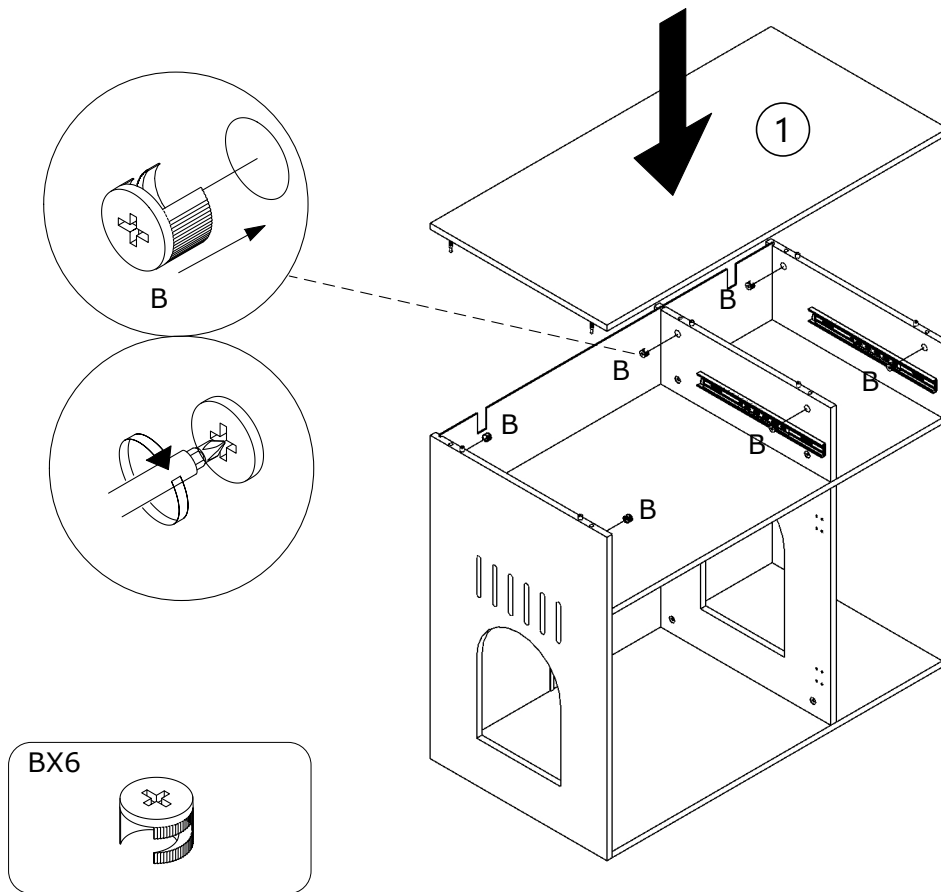


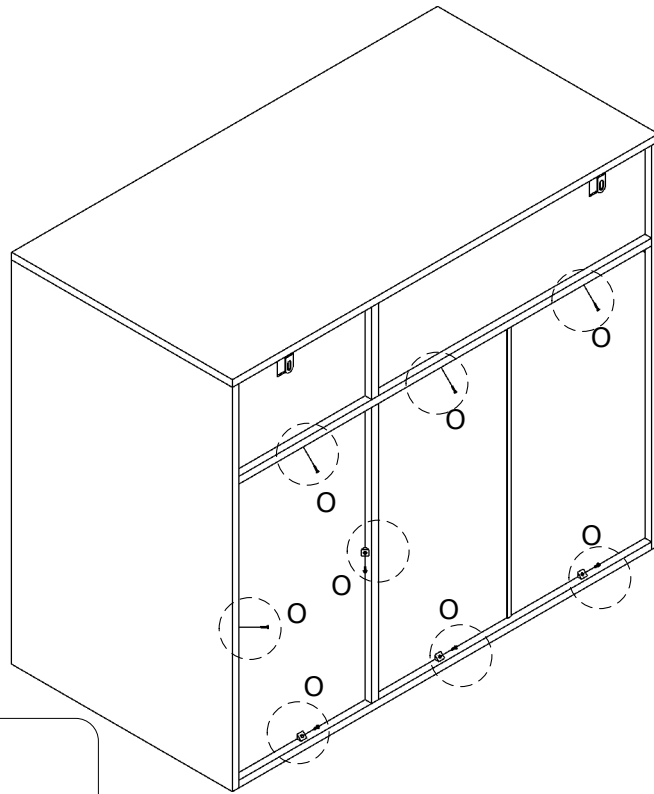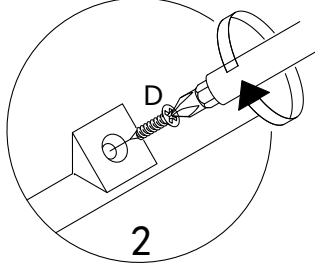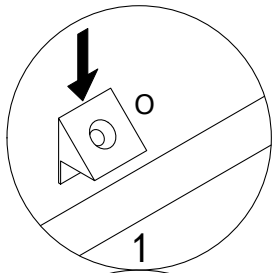


OX8




DX8

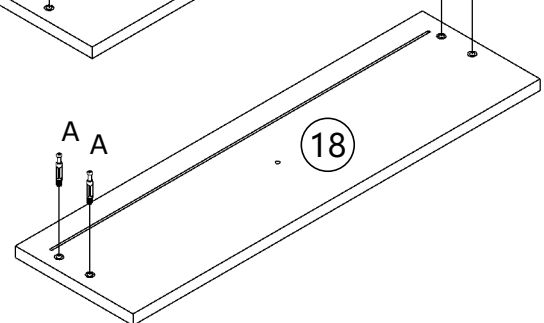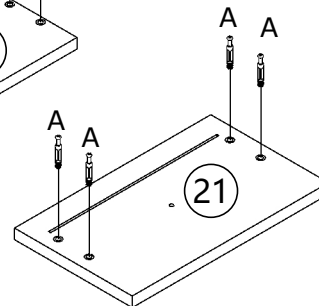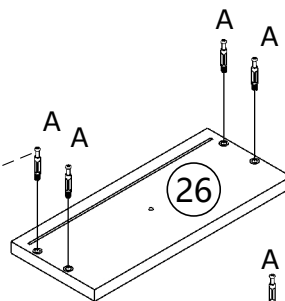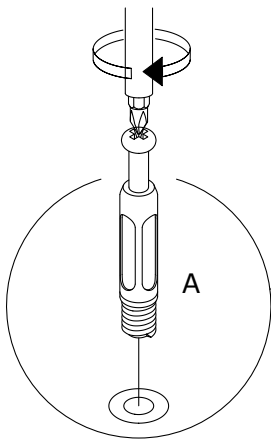



AX12



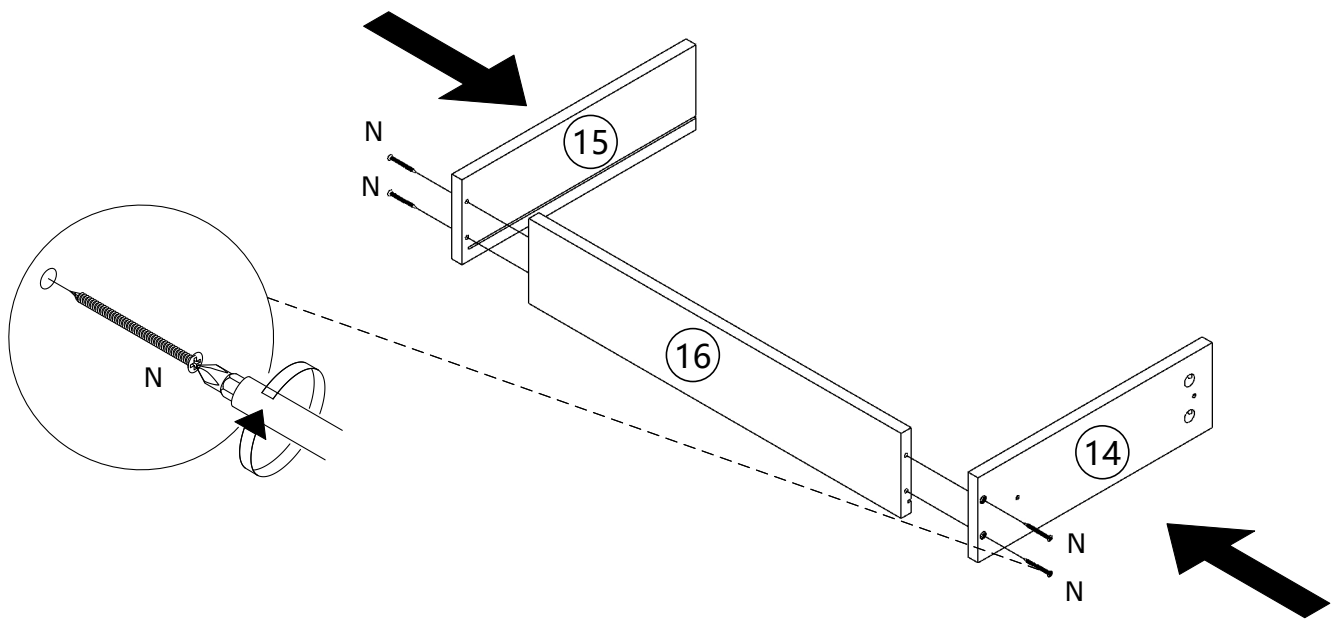


NX4

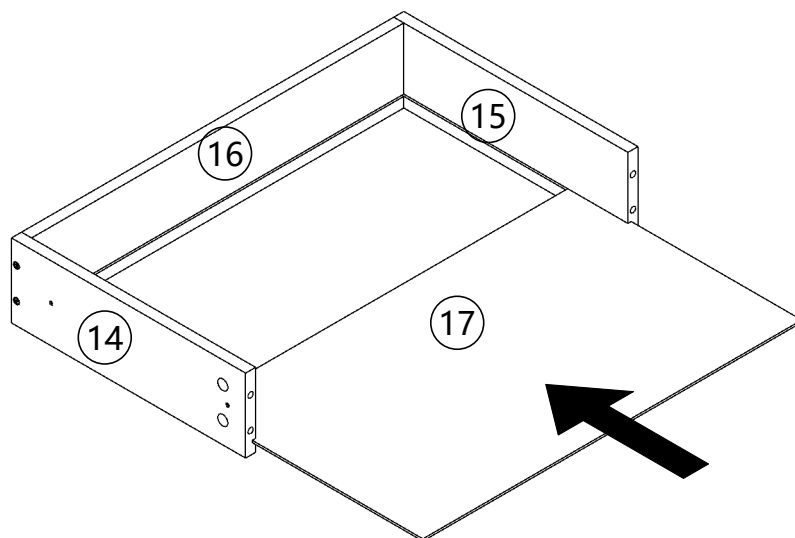

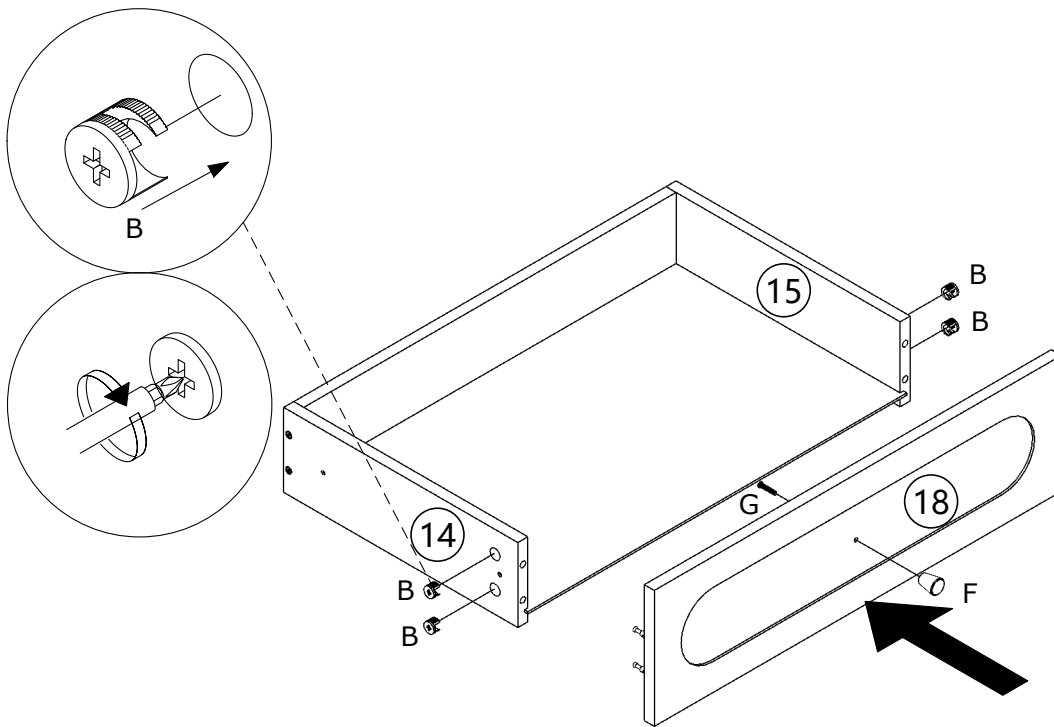


FX1



GX1




BX4


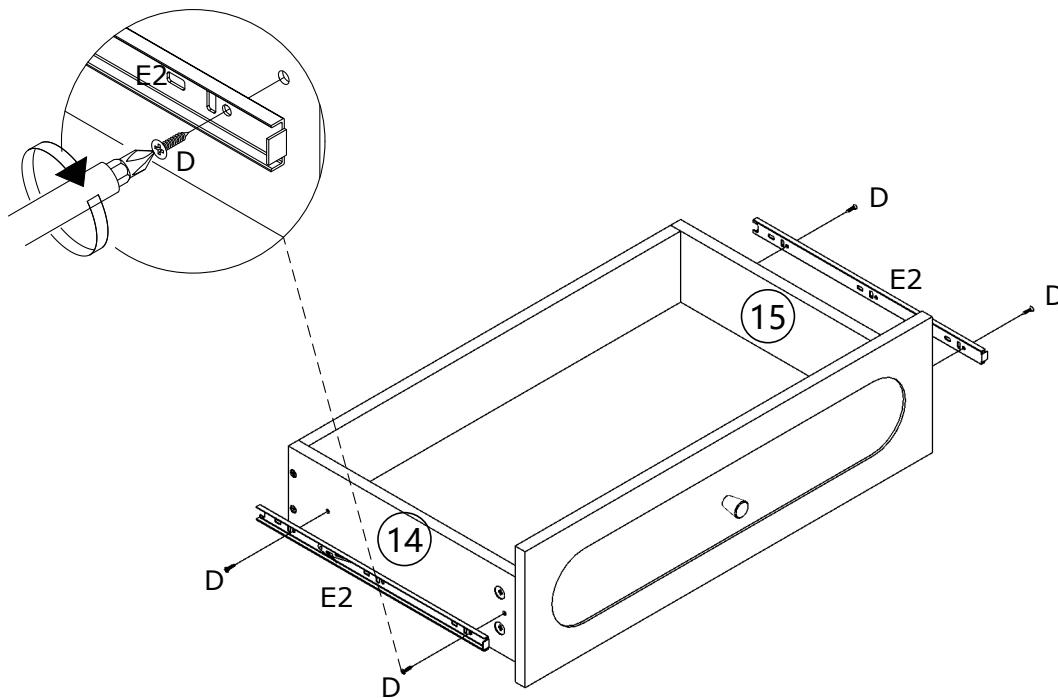


DX4





E2X2

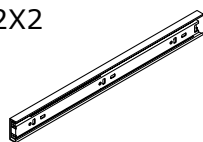

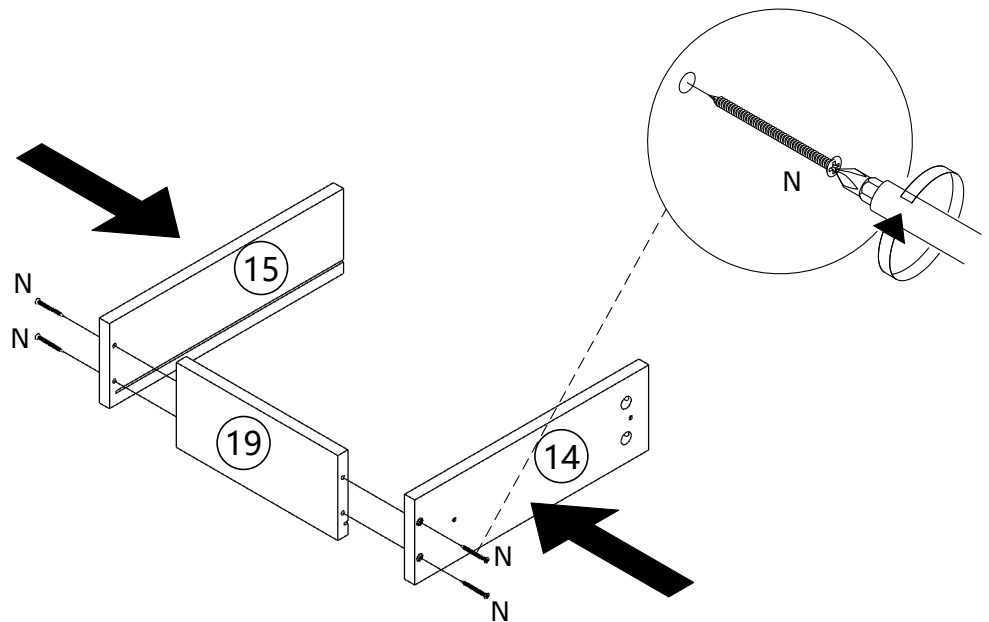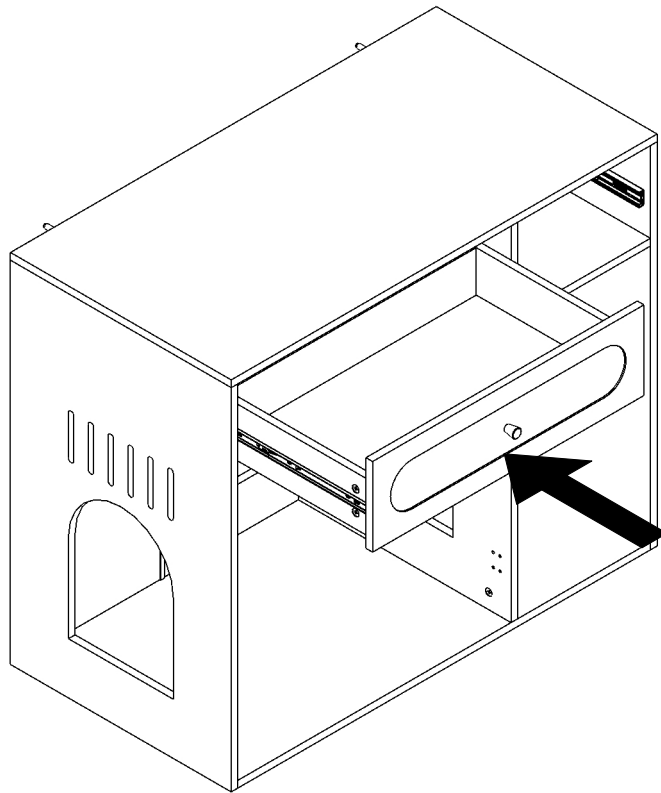


NX4



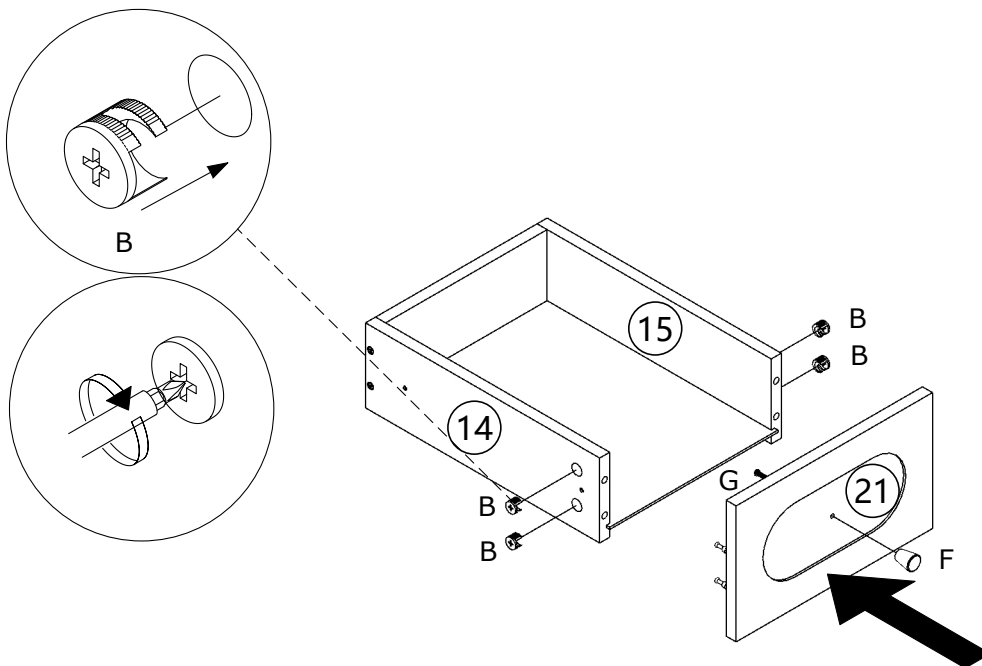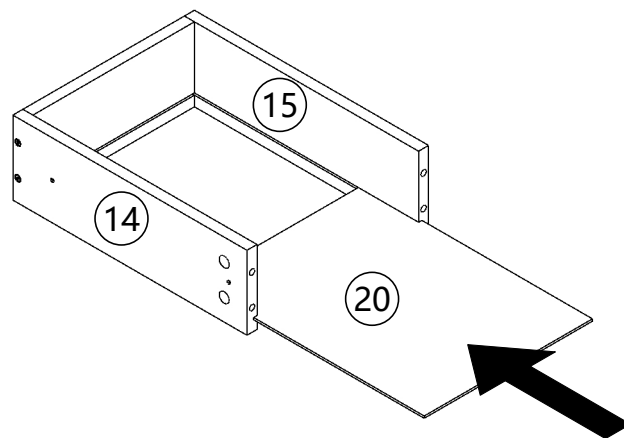

FX1




GX1



BX4





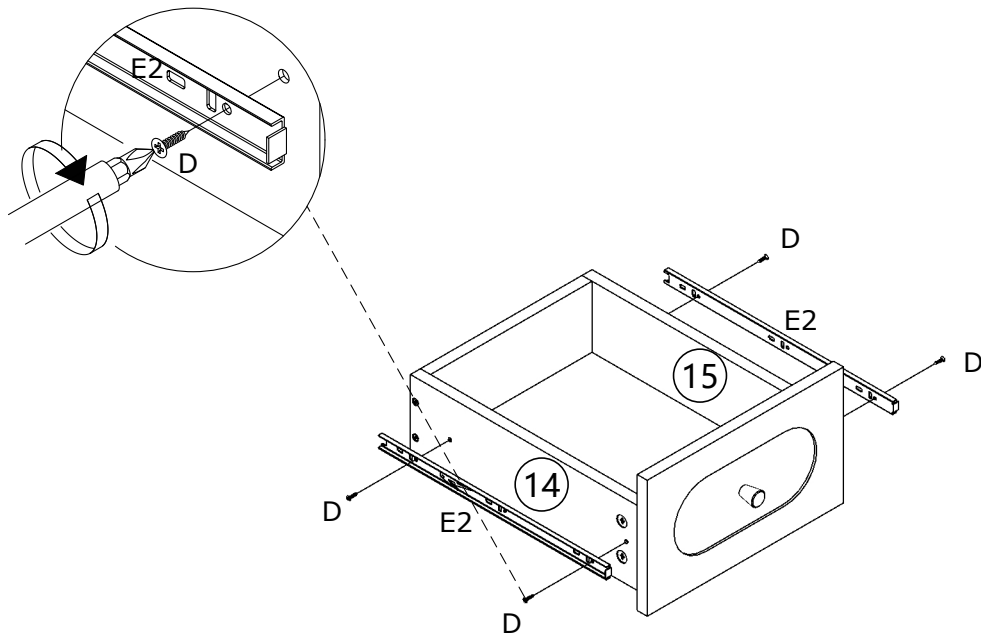


DX4



E2X2

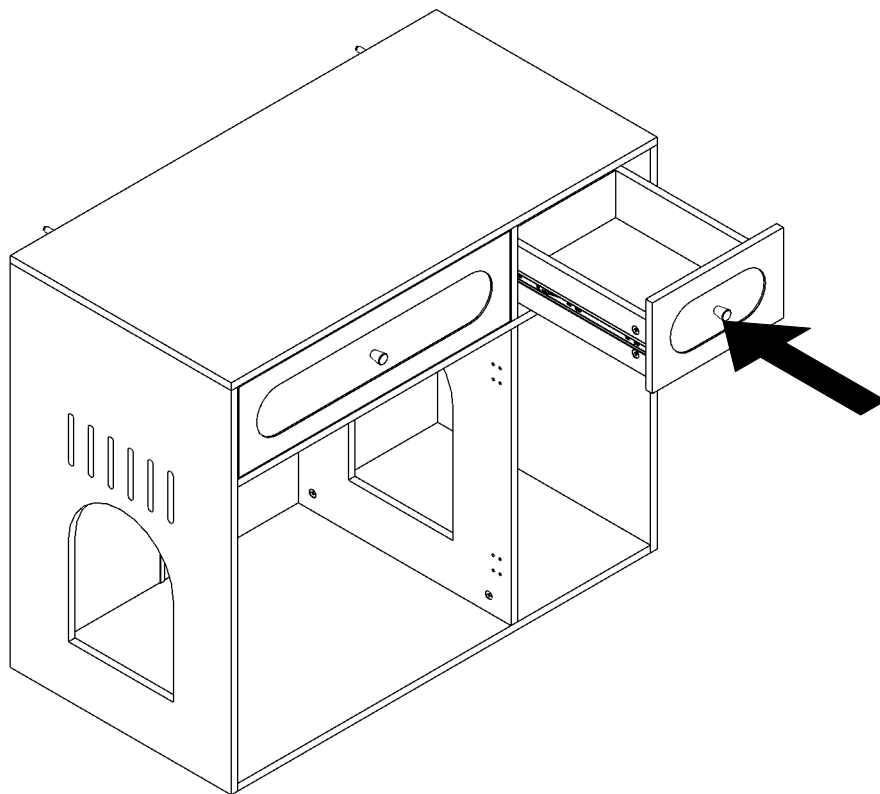
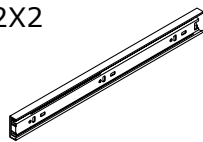


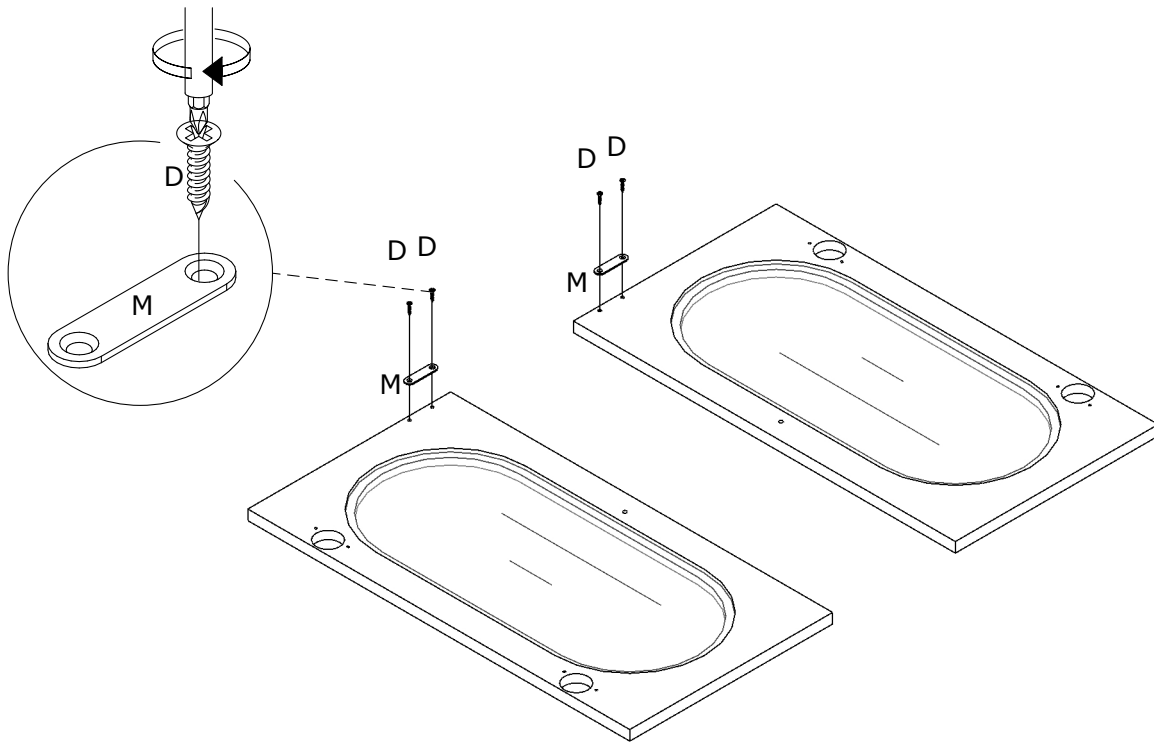


DX4












MX2

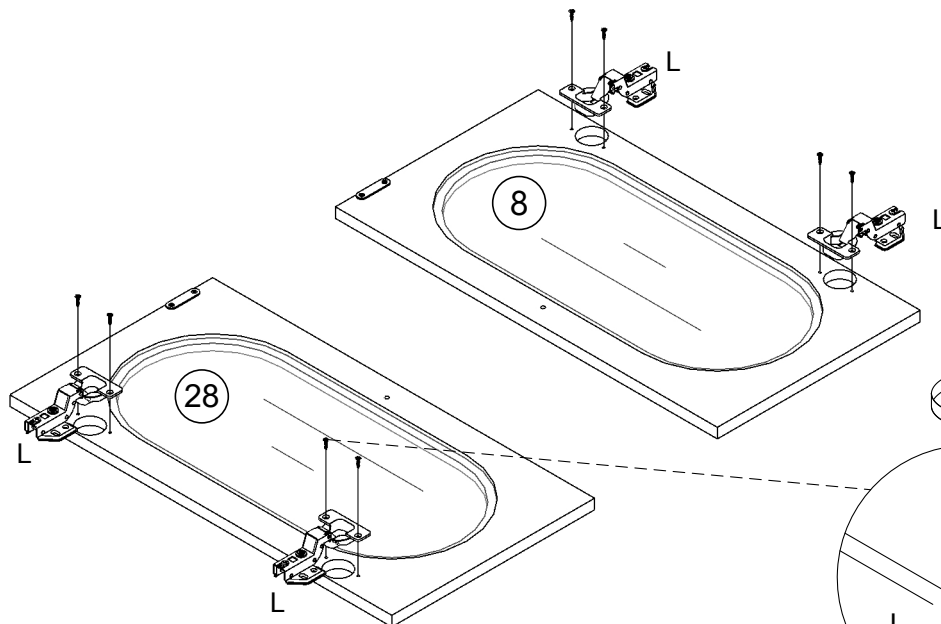

LX4


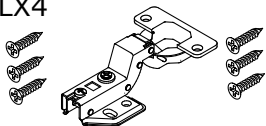


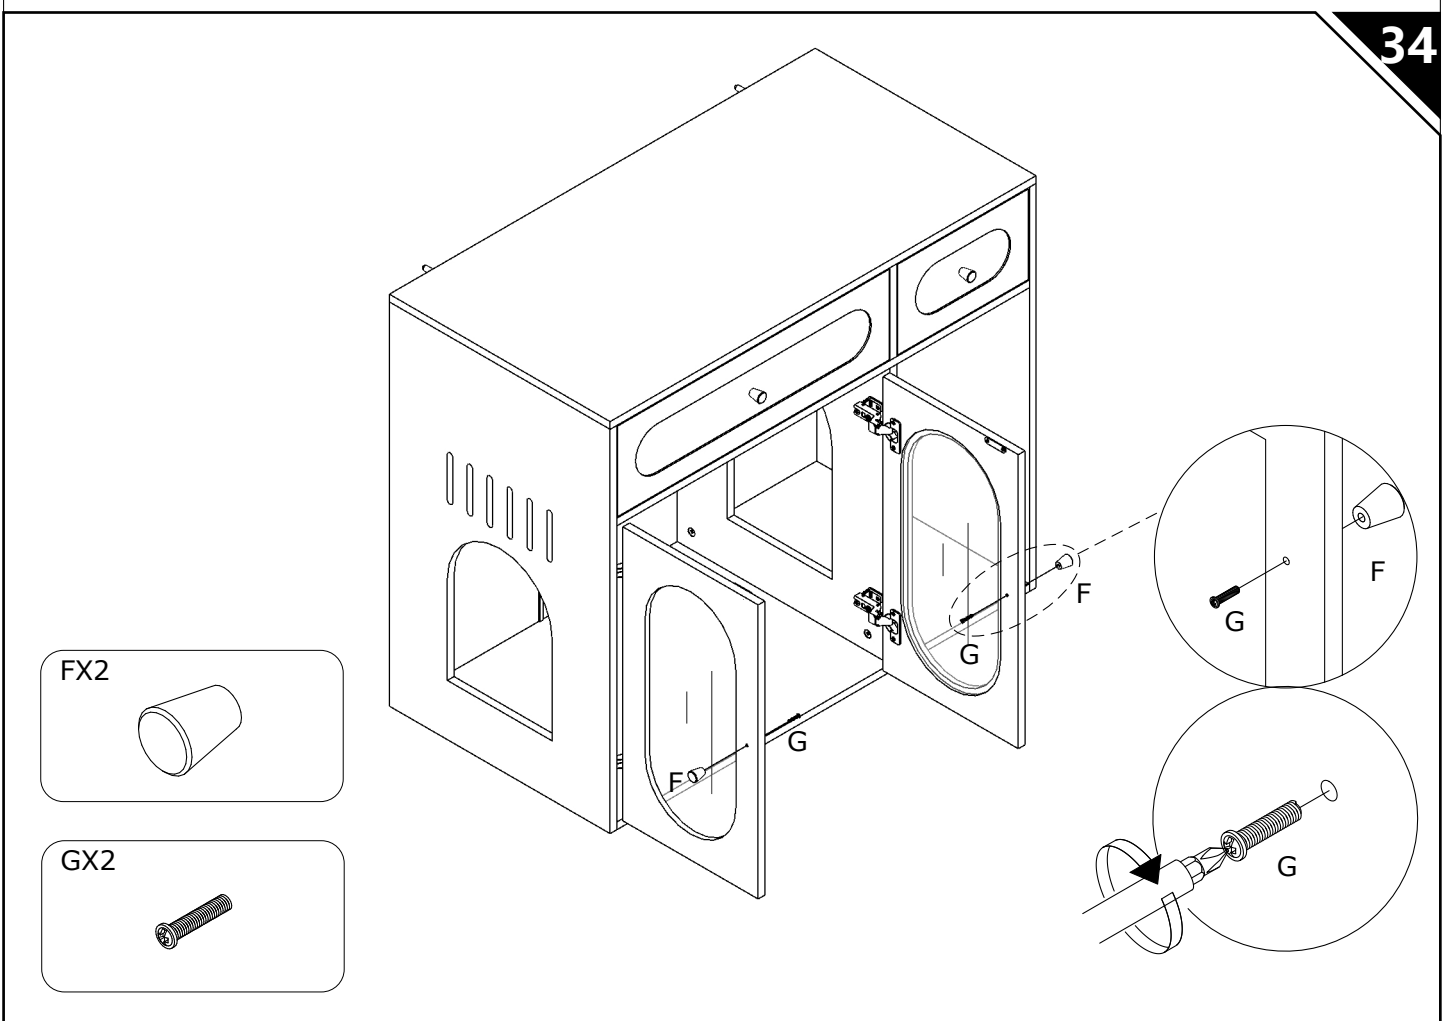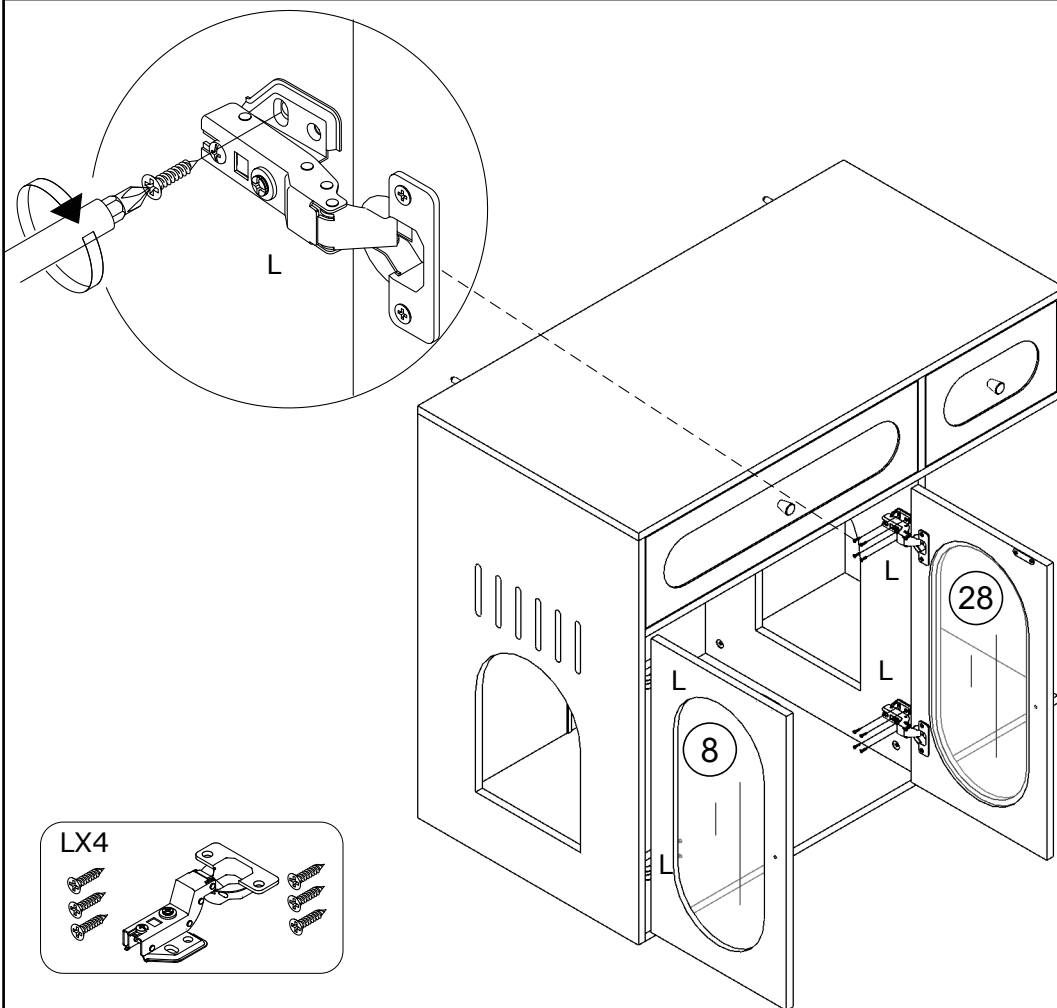

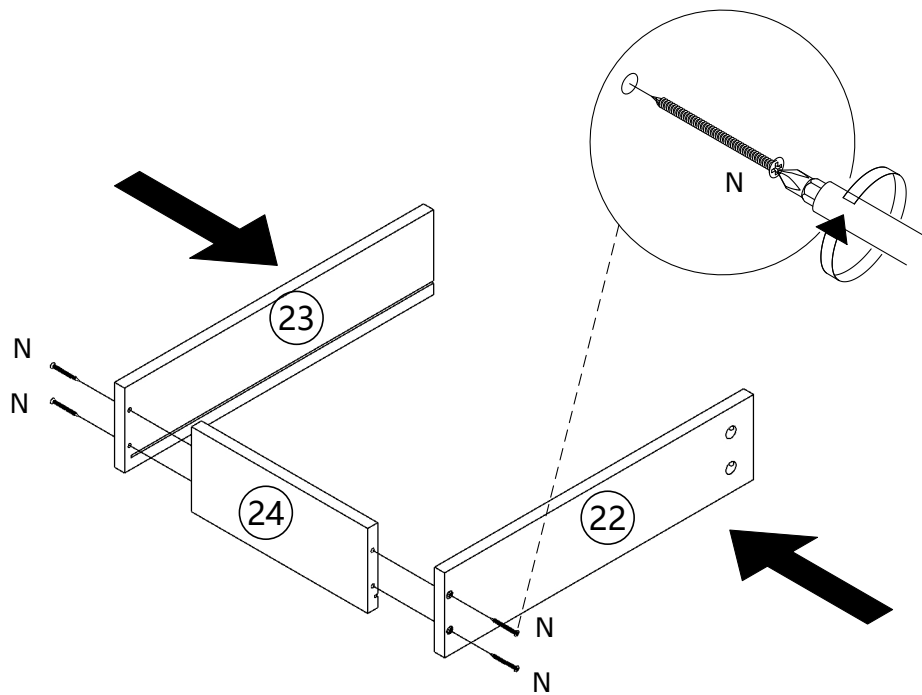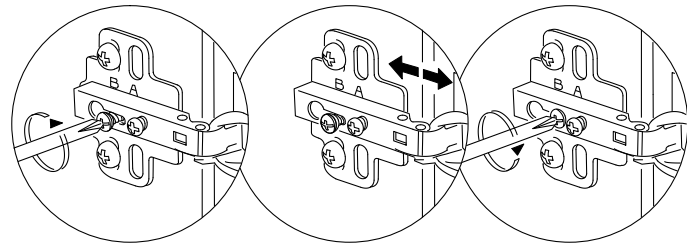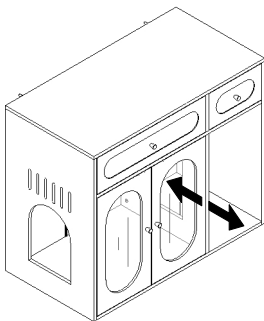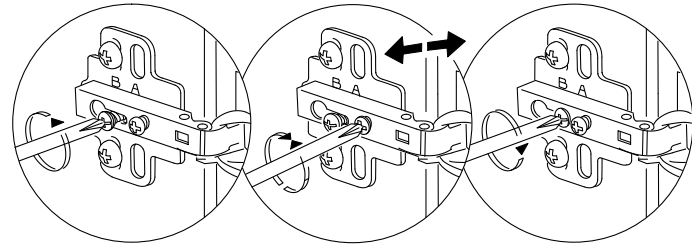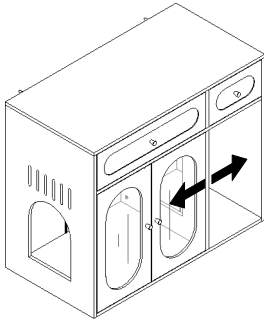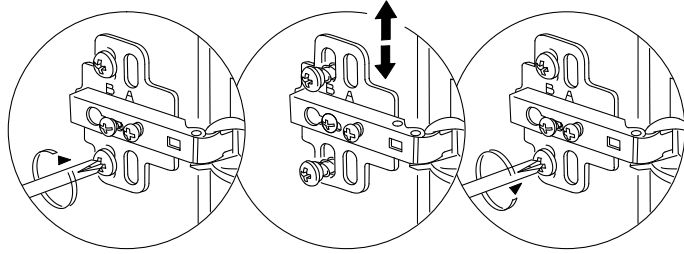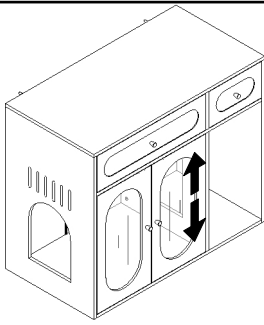


NX4



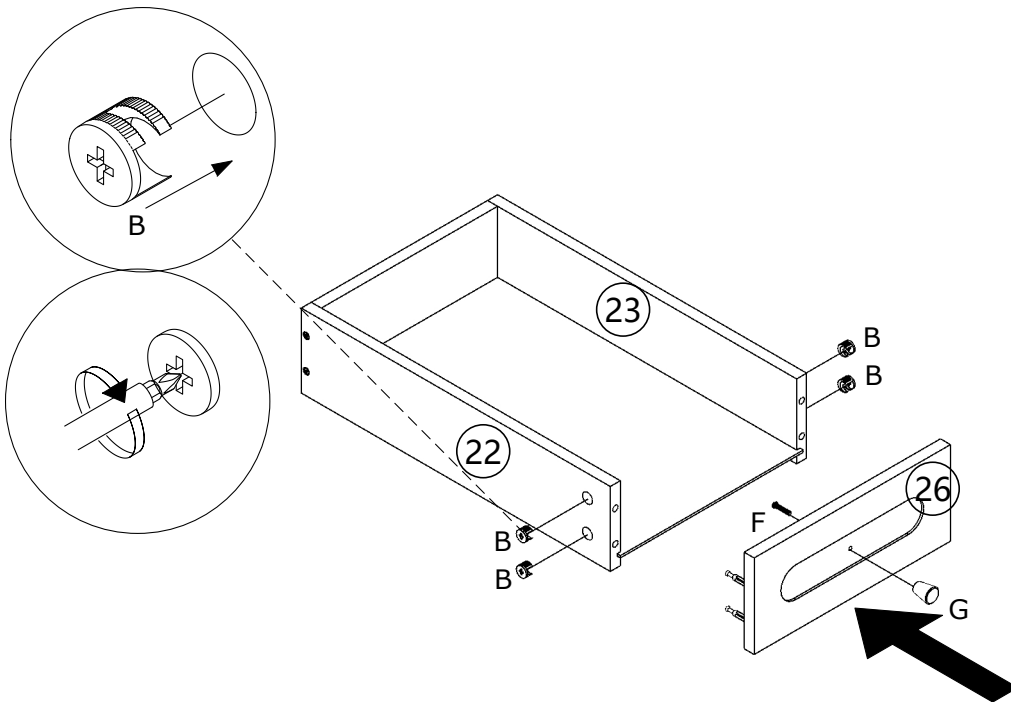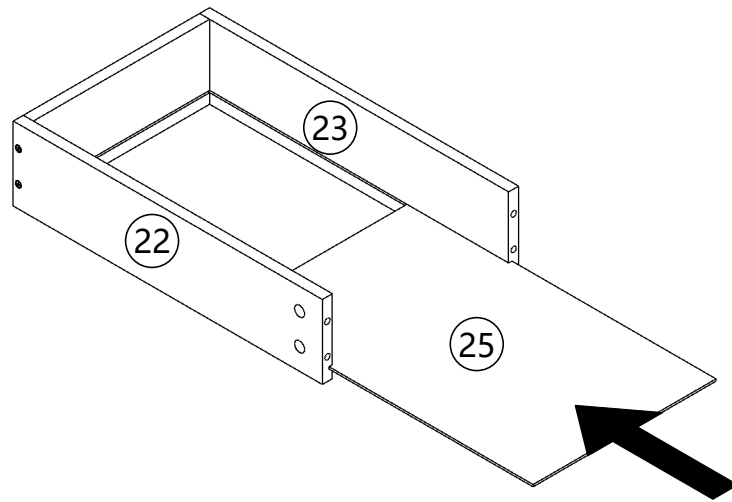

FX1



GX1



BX4



