





Assembly Instructions

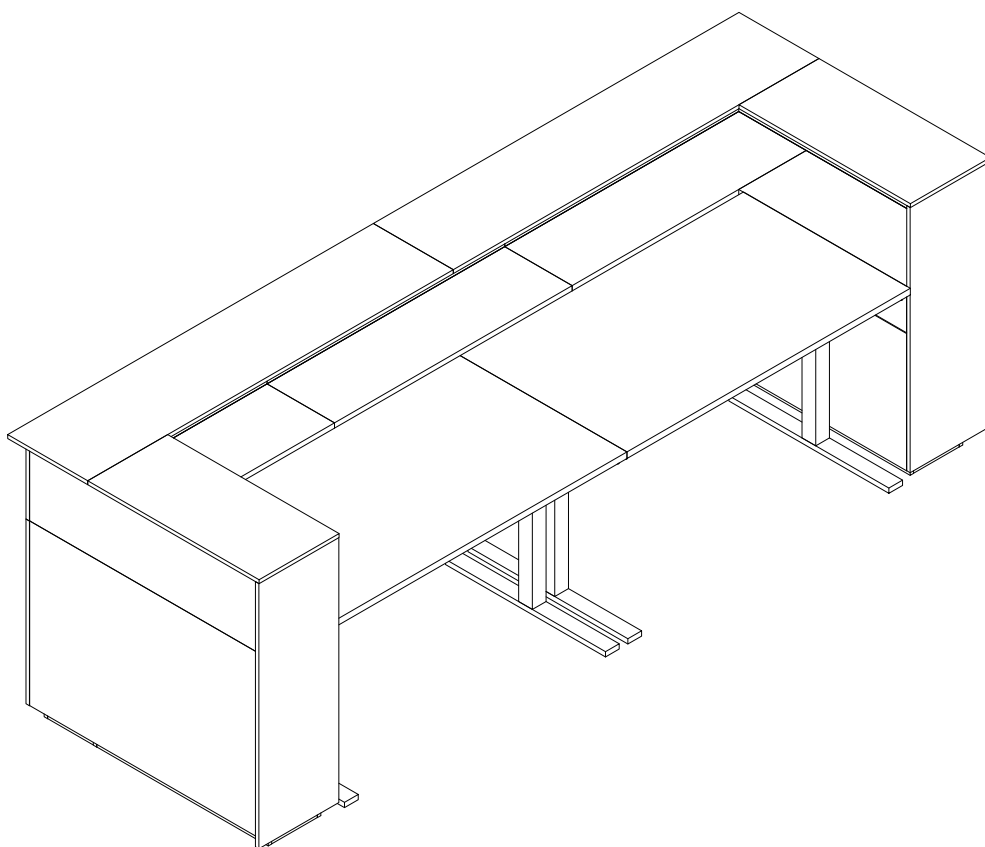

Nurse Station


Model No.
JDT-QK028-01

The beginning of installation may feel confusing and painful, but it will get better.

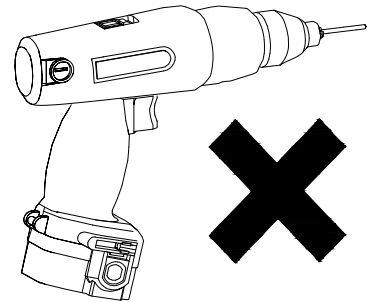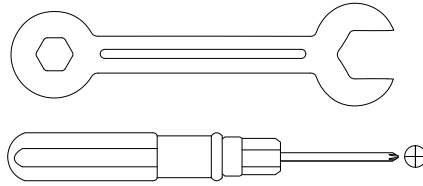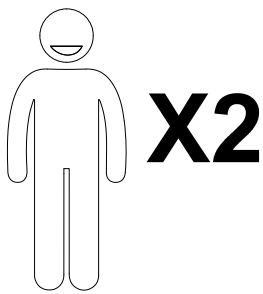



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

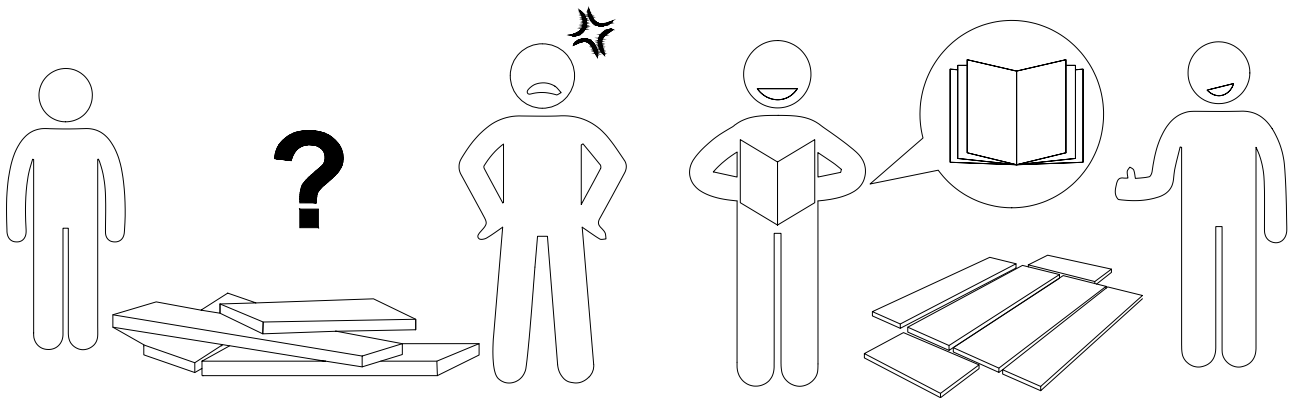

AVOID SCRATCHES



In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

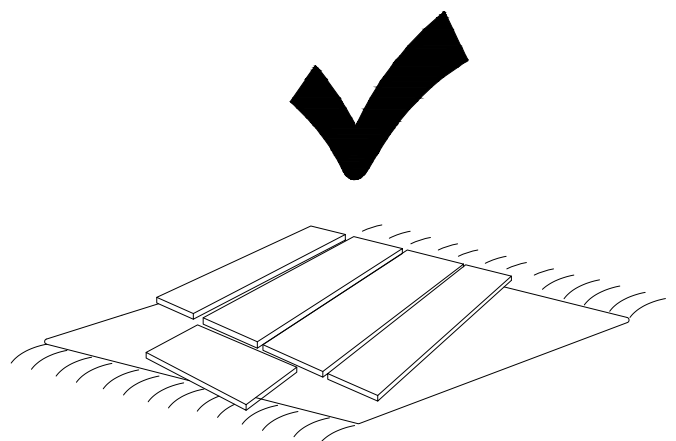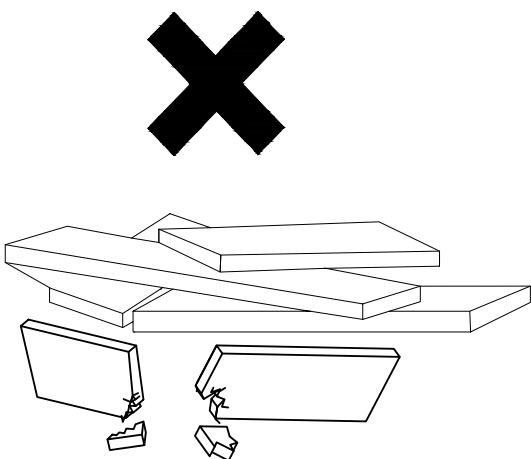

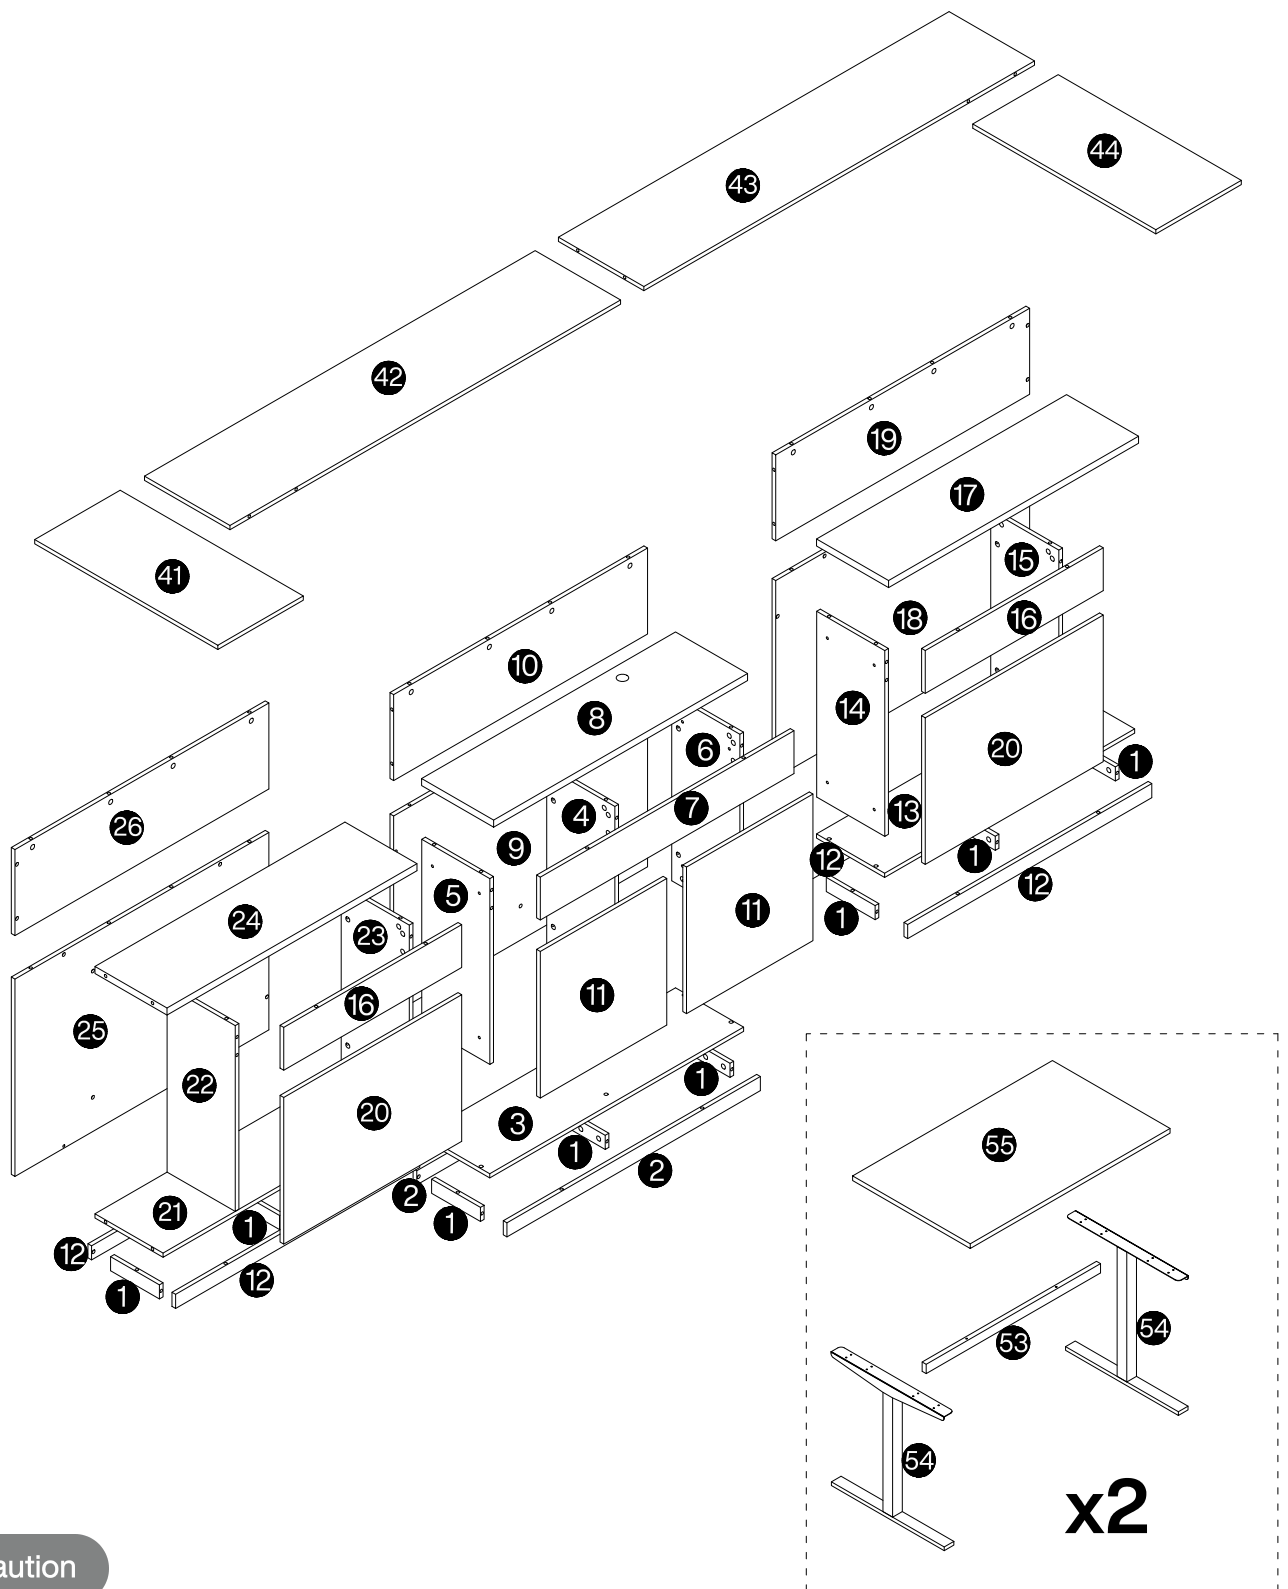

 **Caution**































Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.

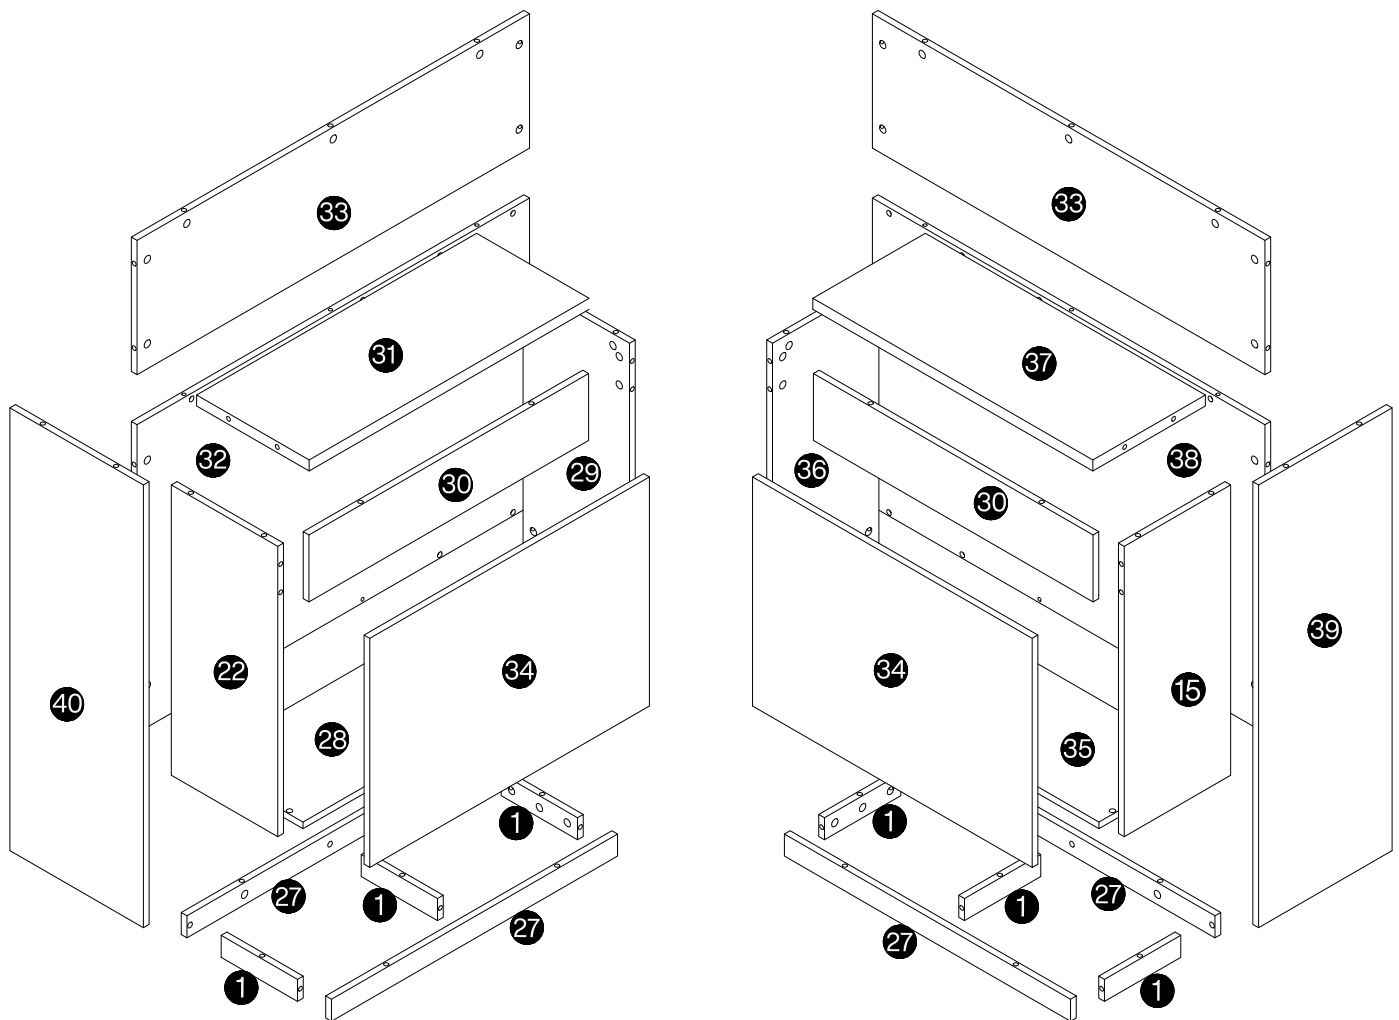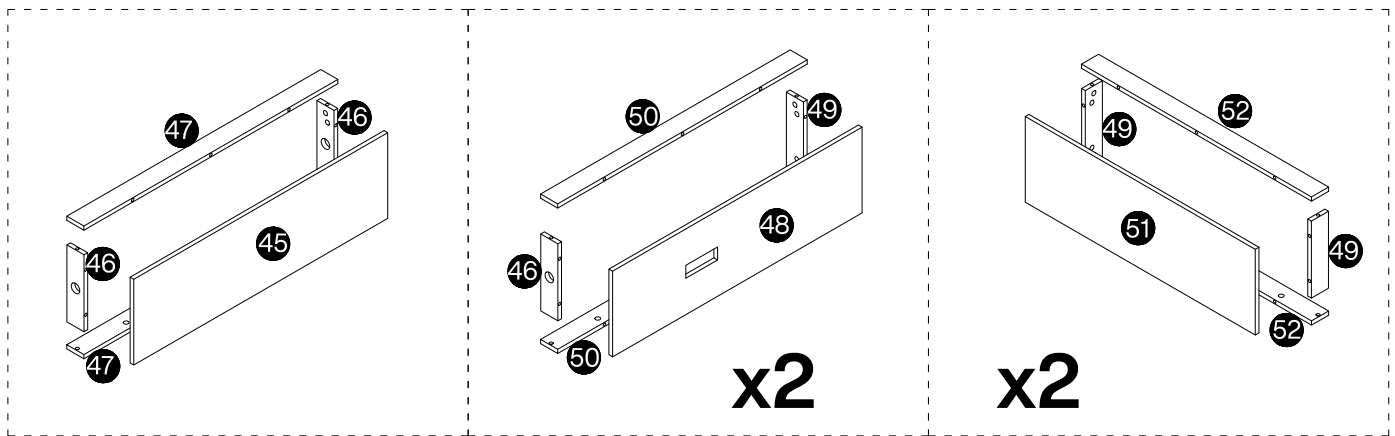


























Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.







Parts List

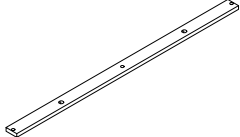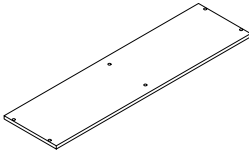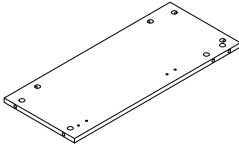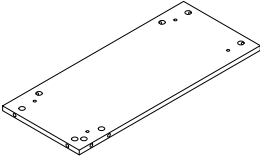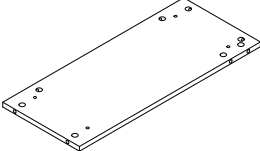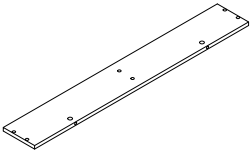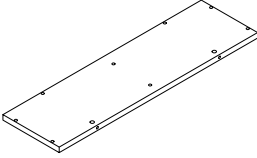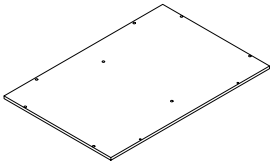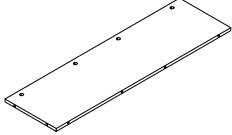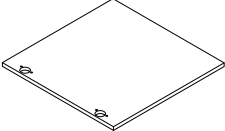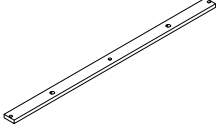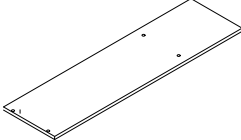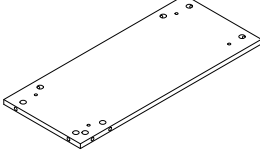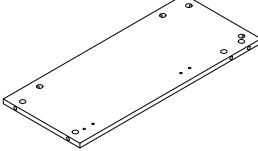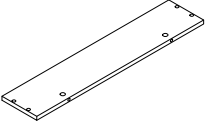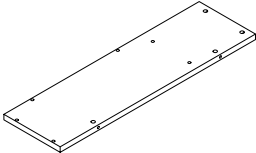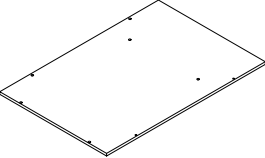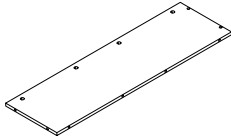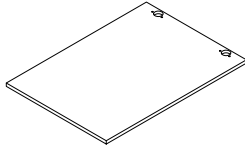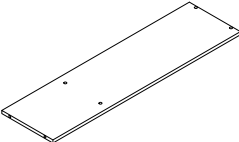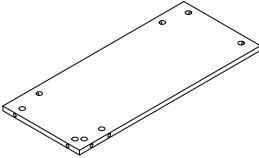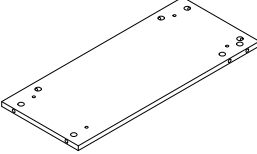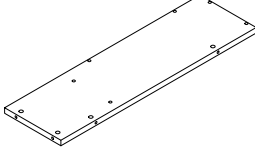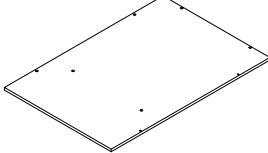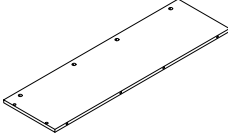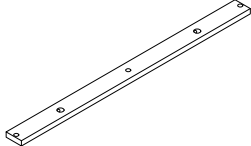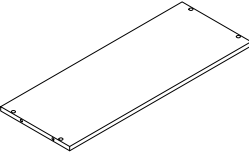
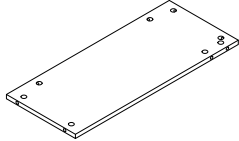

1  15 pcs	2  2 pcs	3  1 pc	4  1 pc	5  1 pc
6  1 pc	7  1 pc	8  1 pc	9  1 pc	10  1 pc
11  2 pcs	12  4 pcs	13  2 pcs	14  1 pc	15  2 pcs
16  2 pcs	17  1 pc	18  1 pc	19  1 pc	20  2 pcs
21  1 pc	22  2 pcs	23  1 pc	24  1 pc	25  1 pc
26  1 pc	27  4 pcs	28  1 pc	29  1 pc	30  2 pcs

Parts List

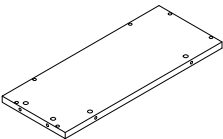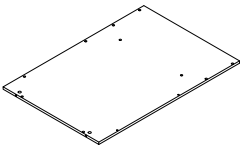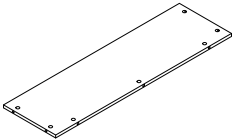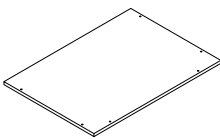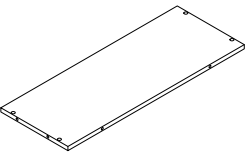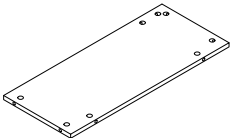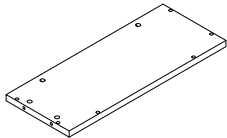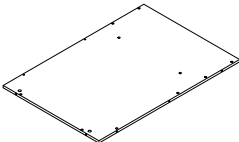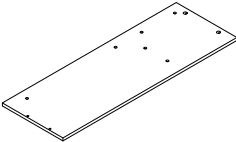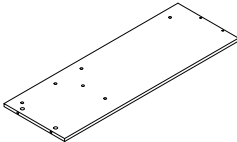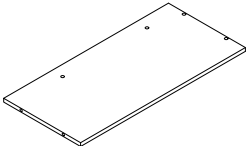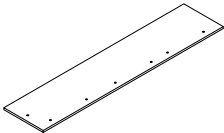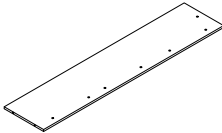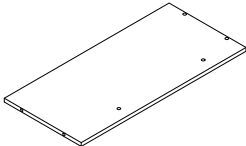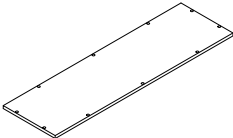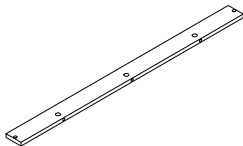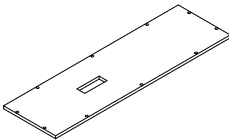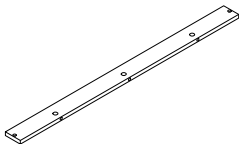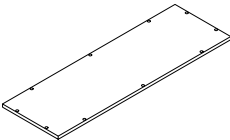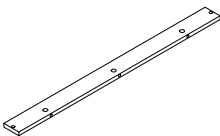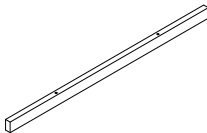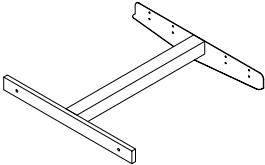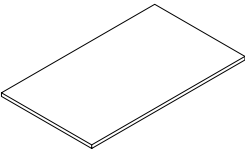31  1 pc	32  1 pc	33  2 pcs	34  2 pcs	35  1 pc
36  1 pc	37  1 pc	38  1 pc	39  1 pc	40  1 pc
41  1 pc	42  1 pc	43  1 pc	44  1 pc	45  1 pc
46  4 pcs	47  2 pcs	48  2 pcs	49  6 pcs	50  4 pcs
51  2 pcs	52  4 pcs	53  2 pcs	54  4 pcs	55  2 pcs

Hardware List

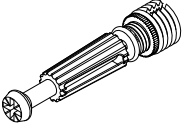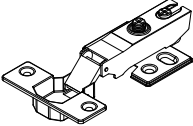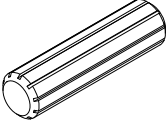
A	B	C	D	E	F
					
M6x40mm	Ø15x12mm			Ø3.5x14mm	Ø8x30mm
305+2 pcs	305+2 pcs	4 pcs	4 pcs	88+4 pcs	36+4 pcs

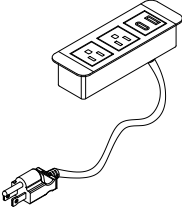G	H	I	J	K	L
					
	M6	M6x25mm	M6X14 mm		M4
2 pcs	8 pcs	8 pcs	8 pcs	1pc	1pc


Installation of Cams and Pins




Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.

Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

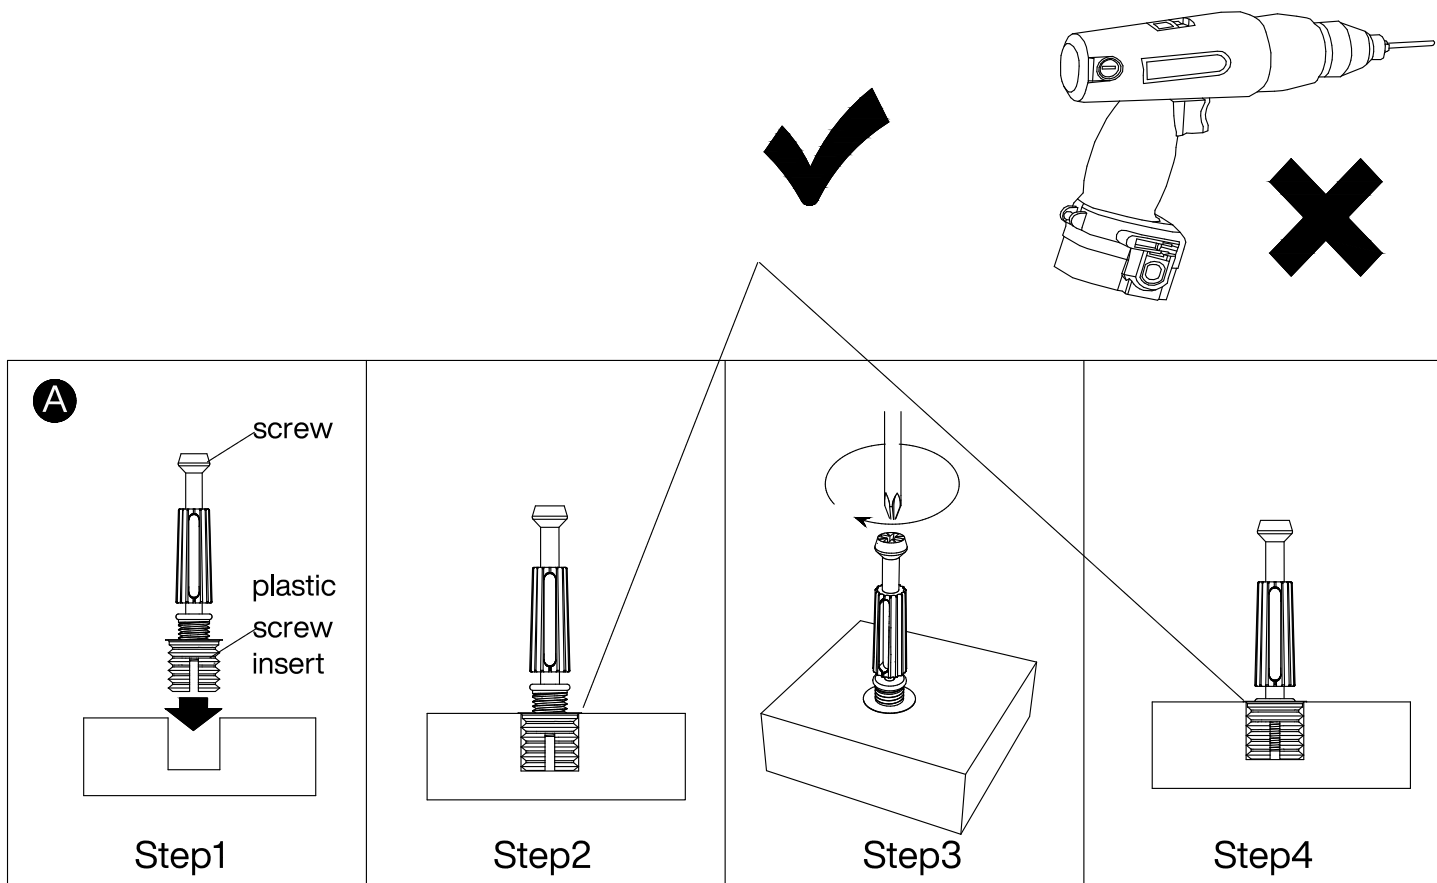


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.



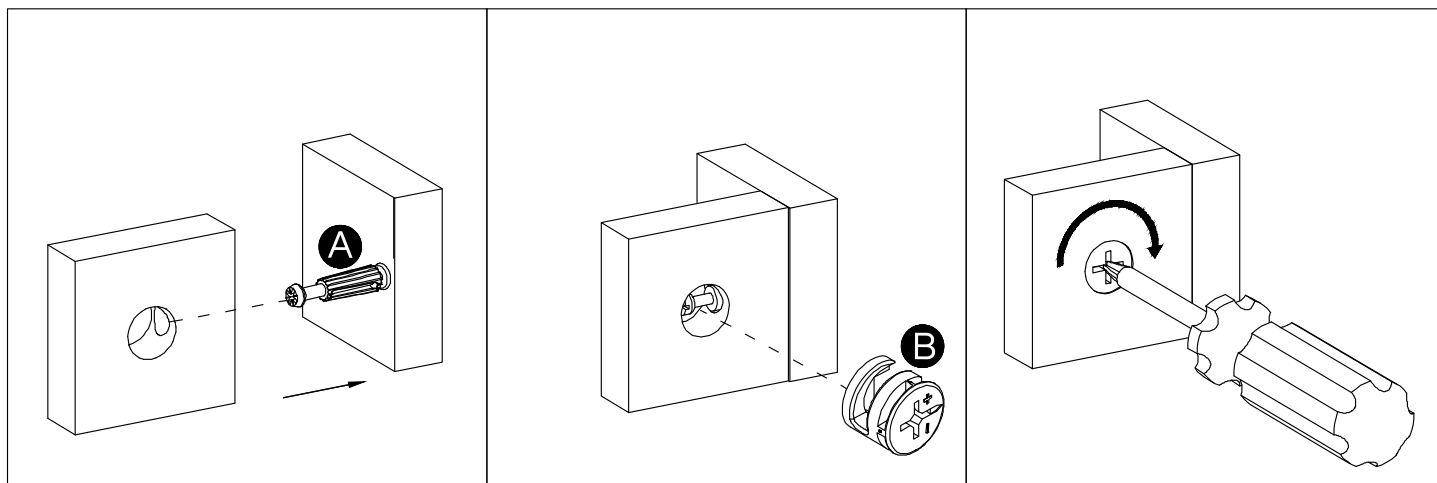


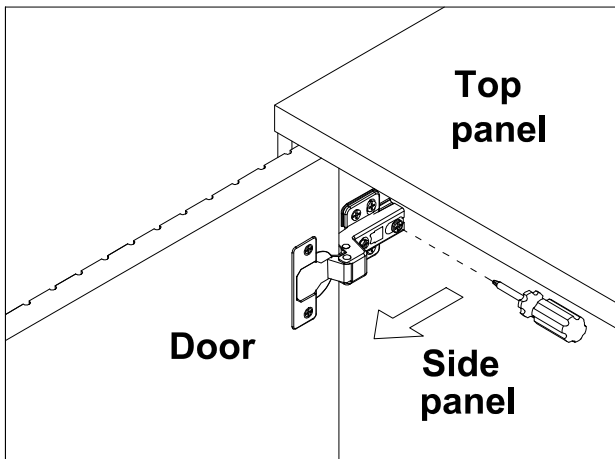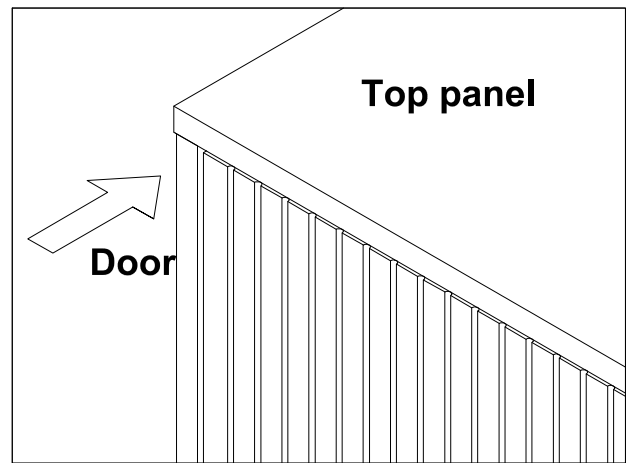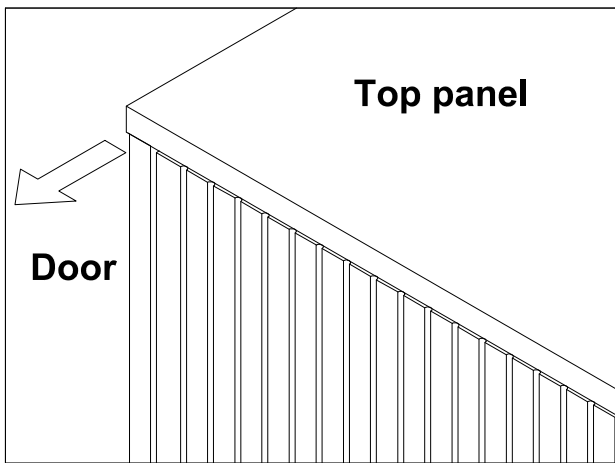


Pull the hinge forward a little.

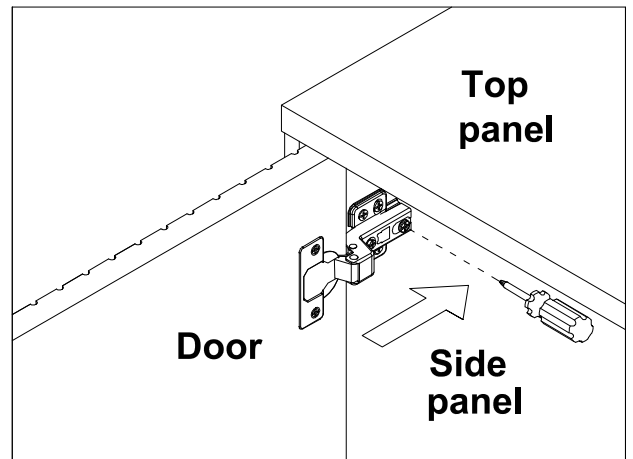

Push the hinge back a little.

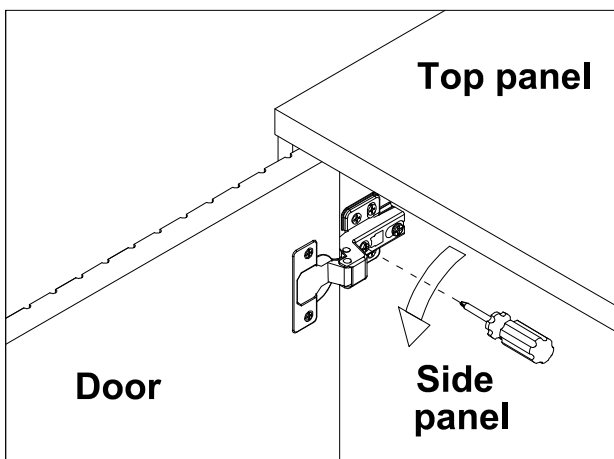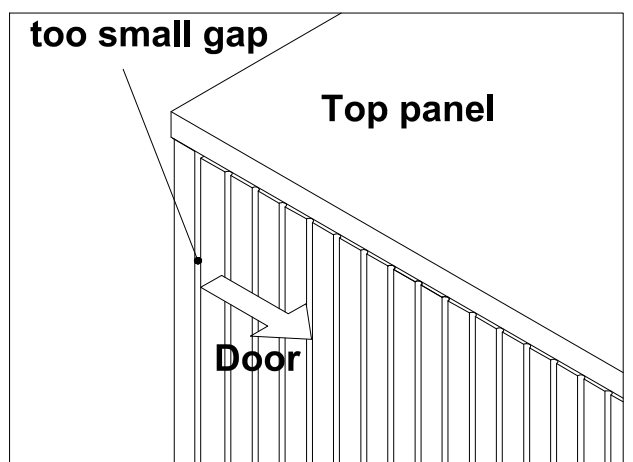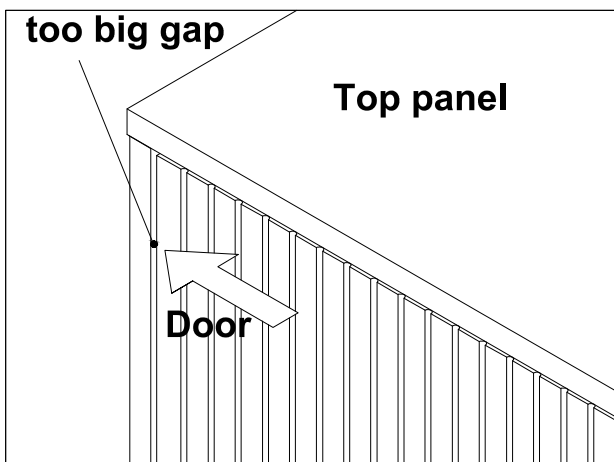


Turn the screw clockwise a little as shown to make the gap smaller

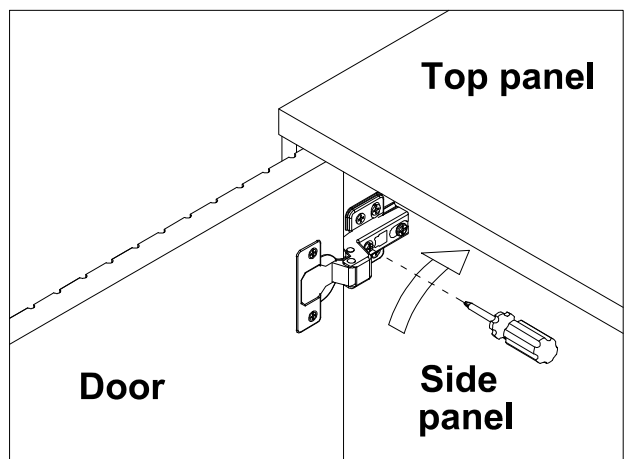

Turn the screw counterclockwise a little as shown to make the gap bigger


1

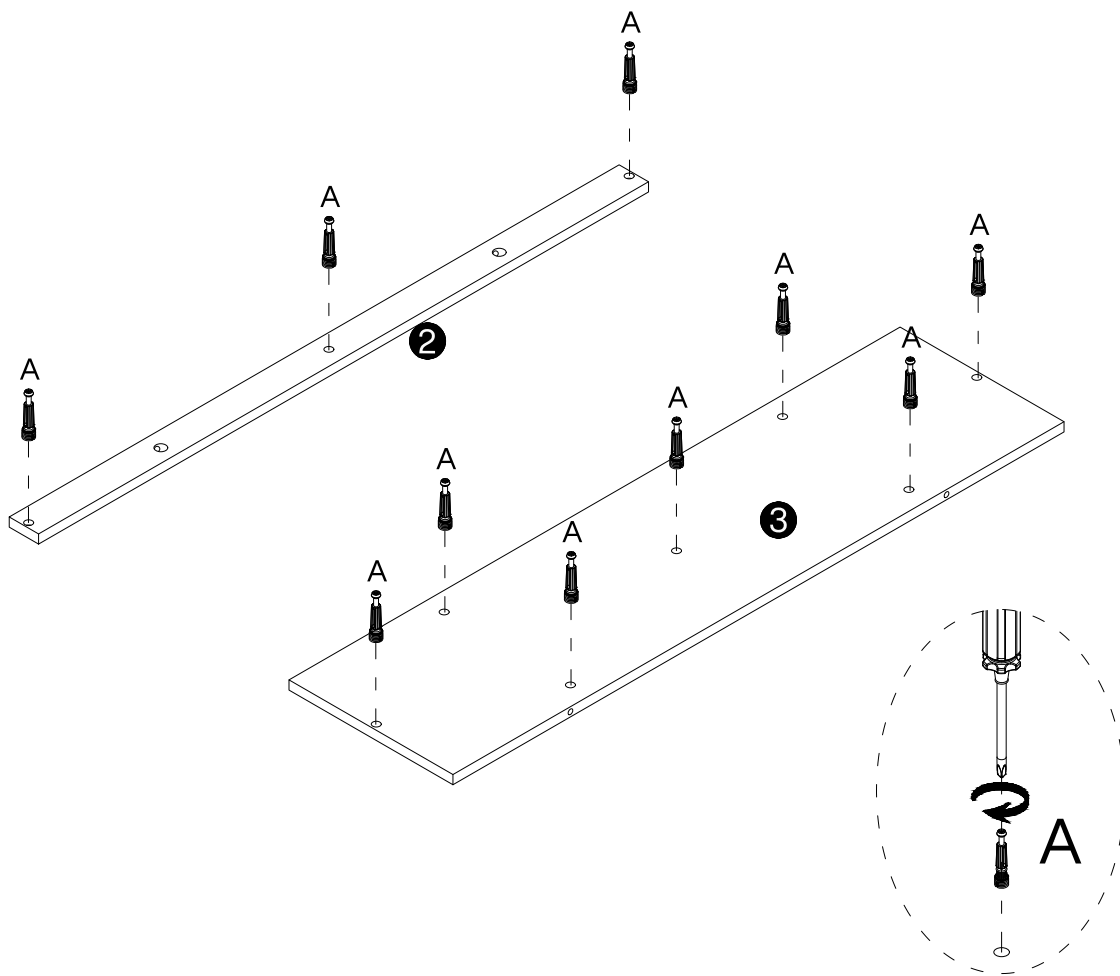

A


M6x40mm
13 pcs

2

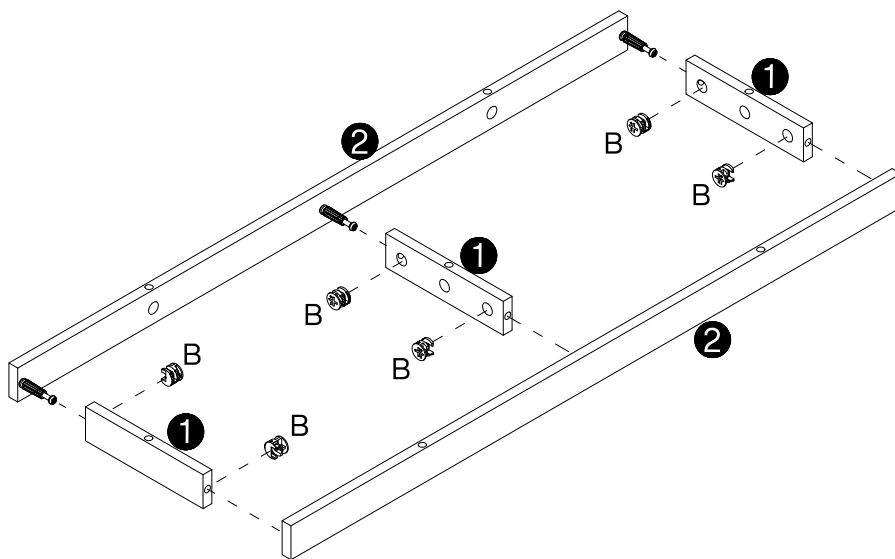


B

Ø15X12 mm
6 pcs

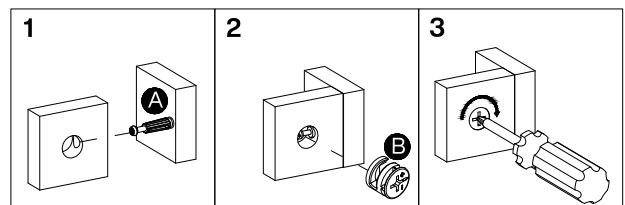


3

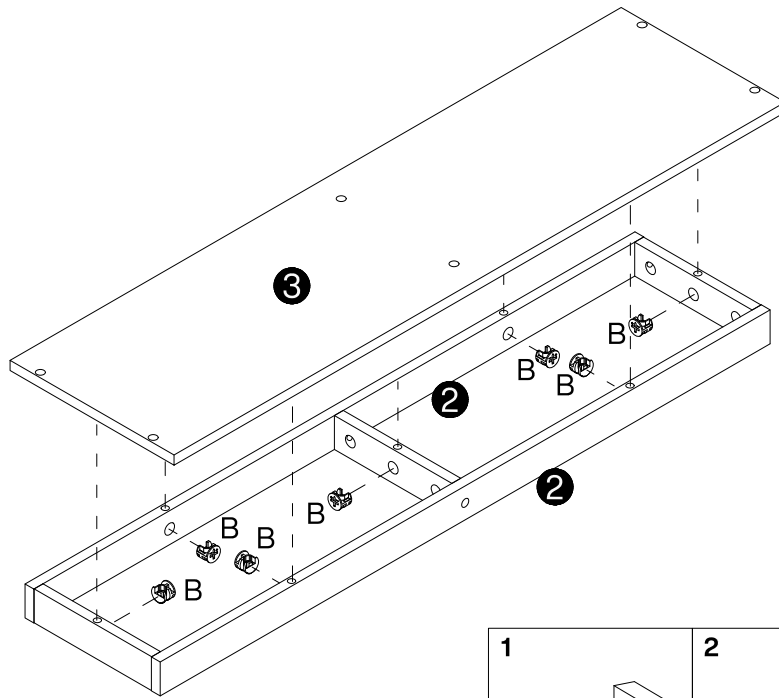


B

Ø15X12 mm
7 pcs

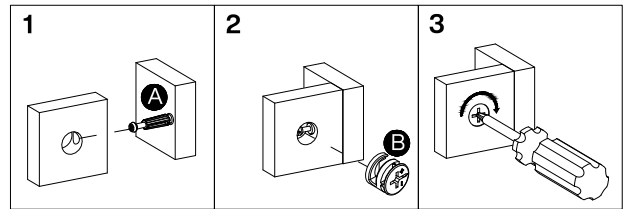



4

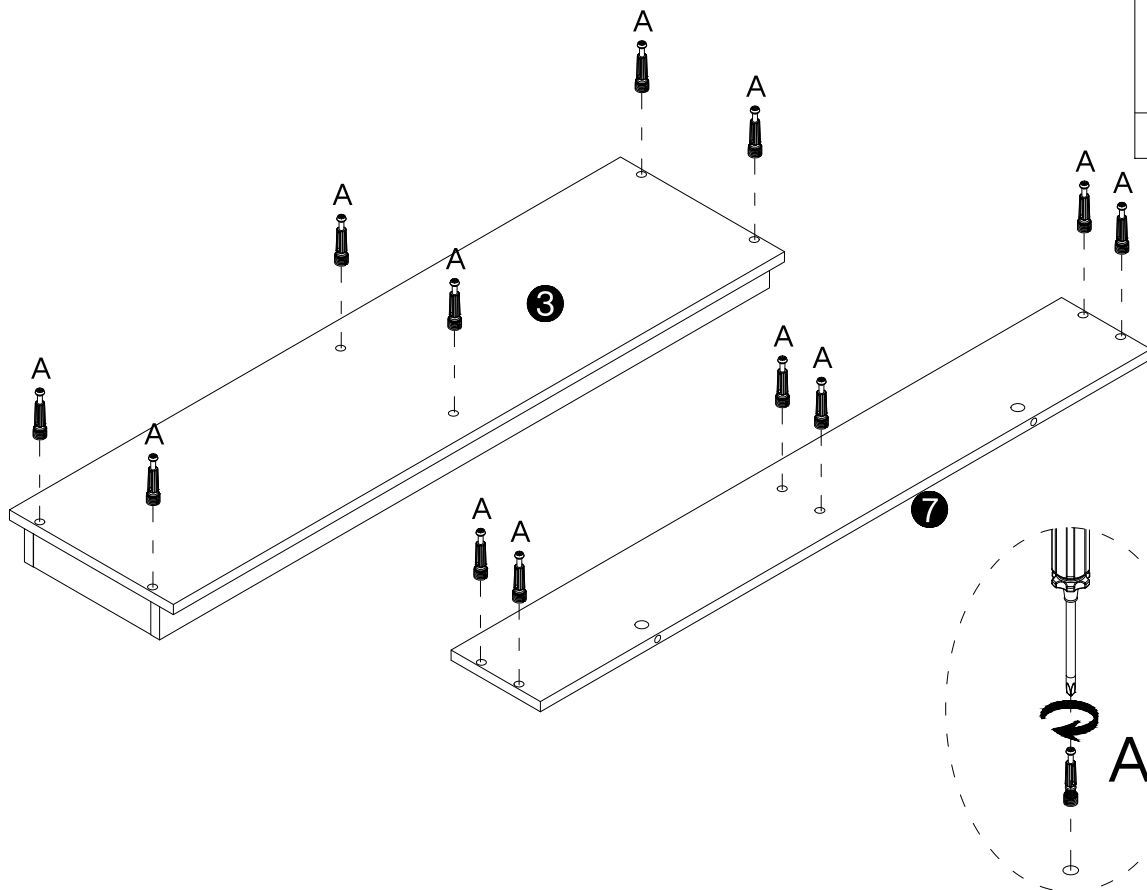

A

M6x40mm
12 pcs



5

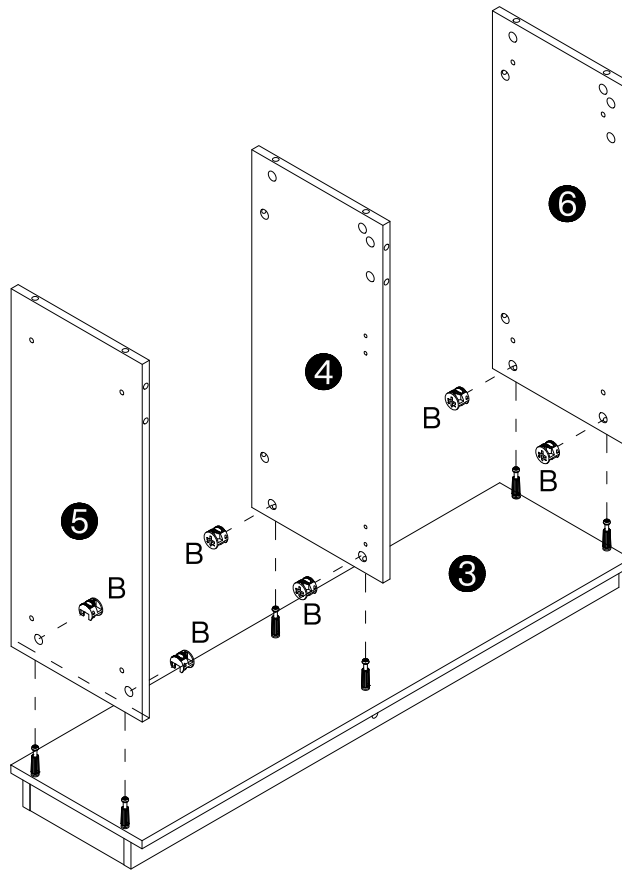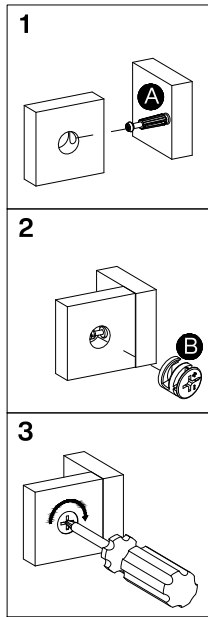

B

Ø15X12 mm
6 pcs



6

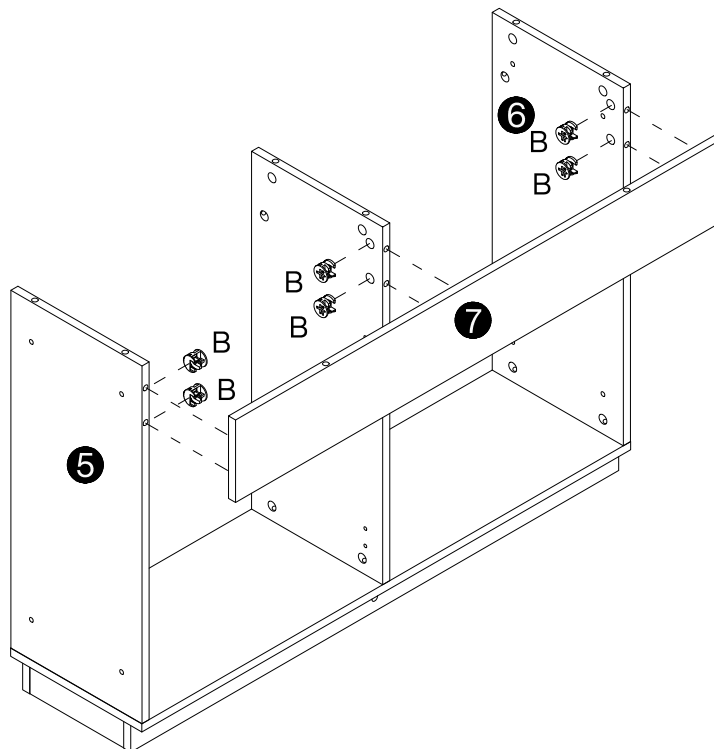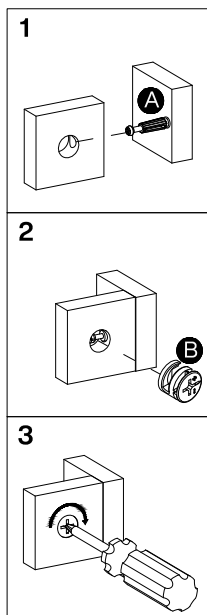

B

Ø15X12 mm
6 pcs



7

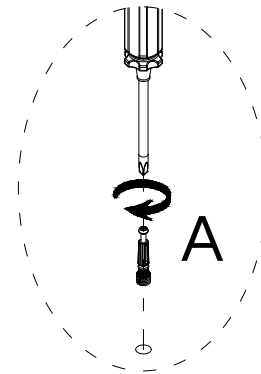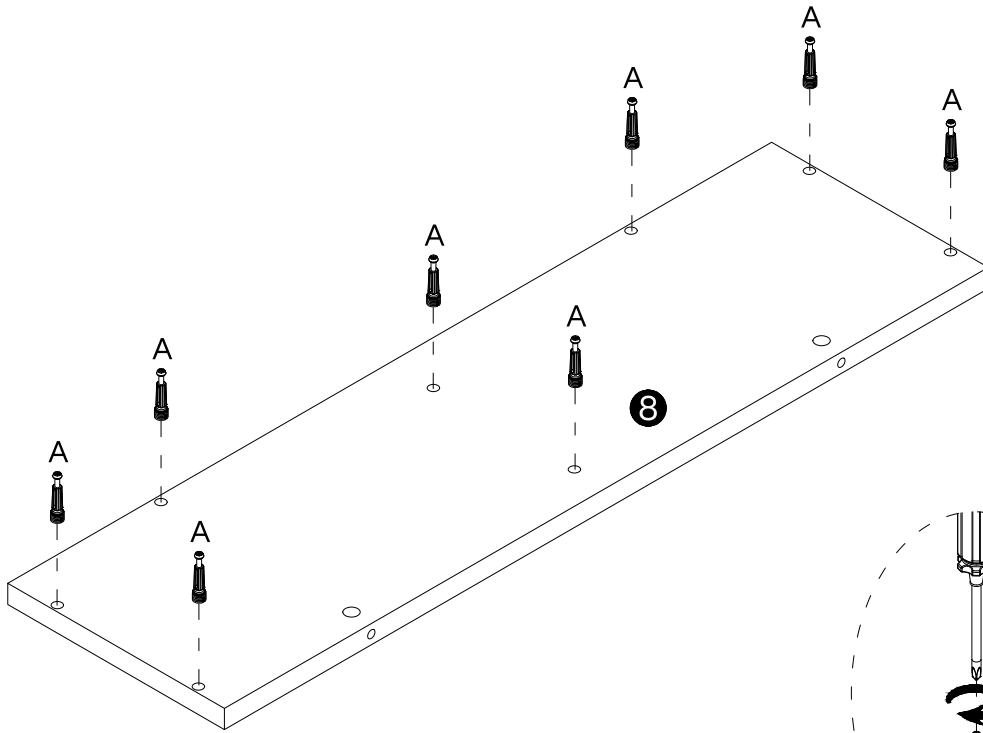

A

M6x40mm
8 pcs



8

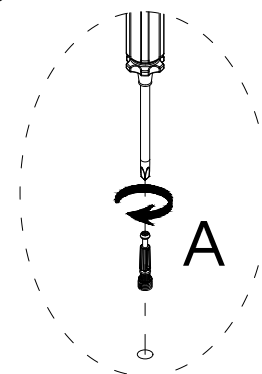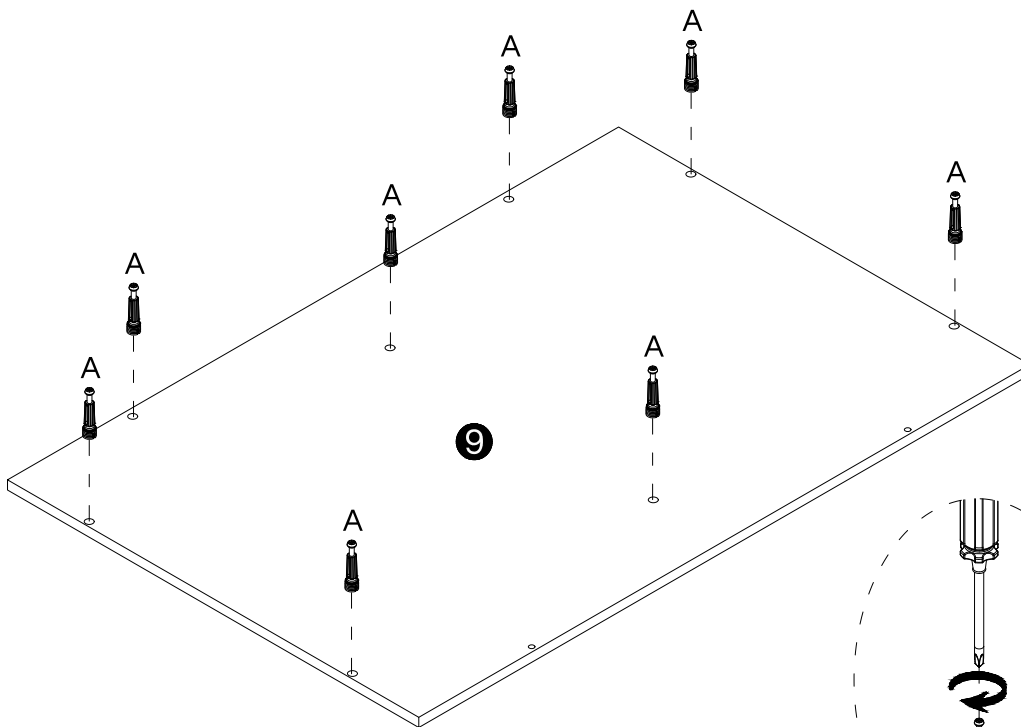

A

M6x40mm
8 pcs



9

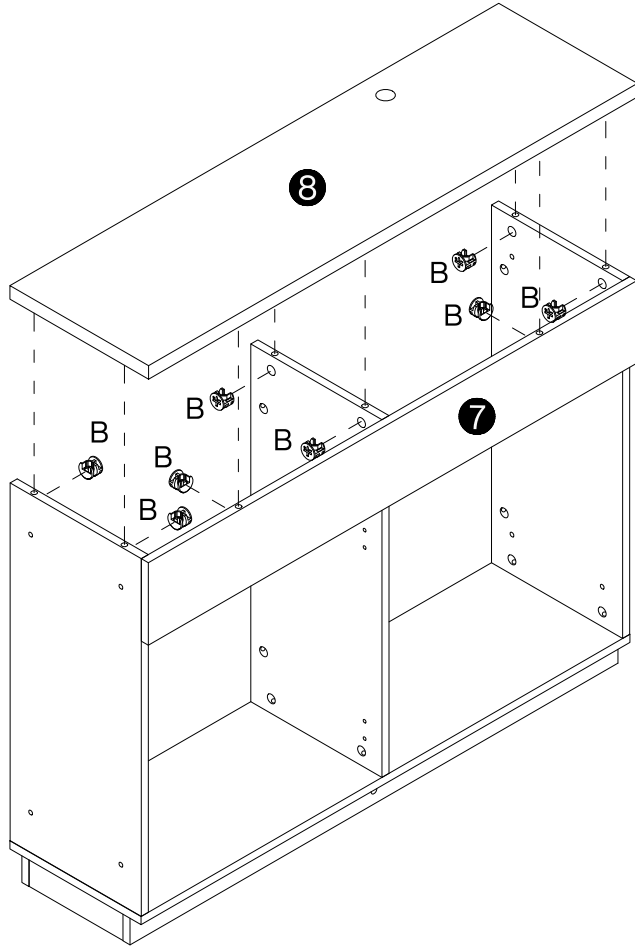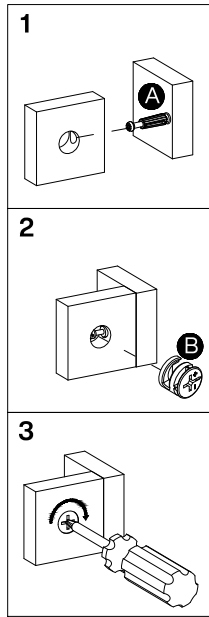



B

Ø15X12 mm
8 pcs


10

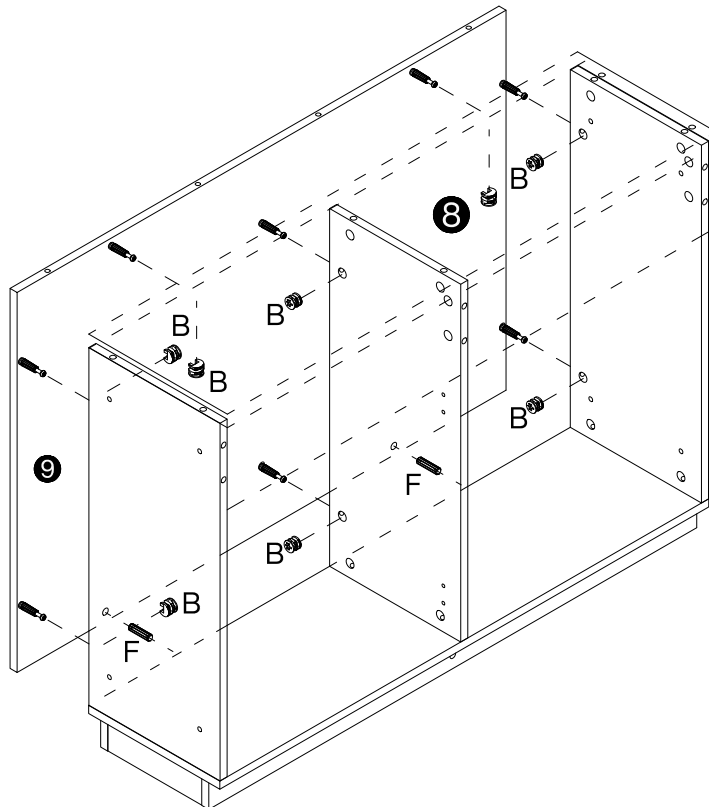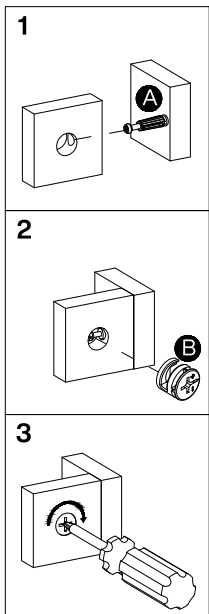

F	B
	
Ø8X30 mm	Ø15X12 mm
2 pcs	8 pcs

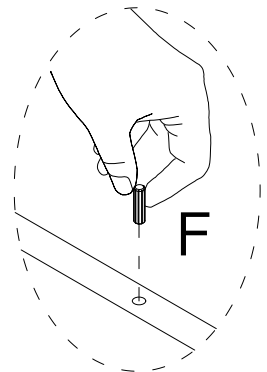


11

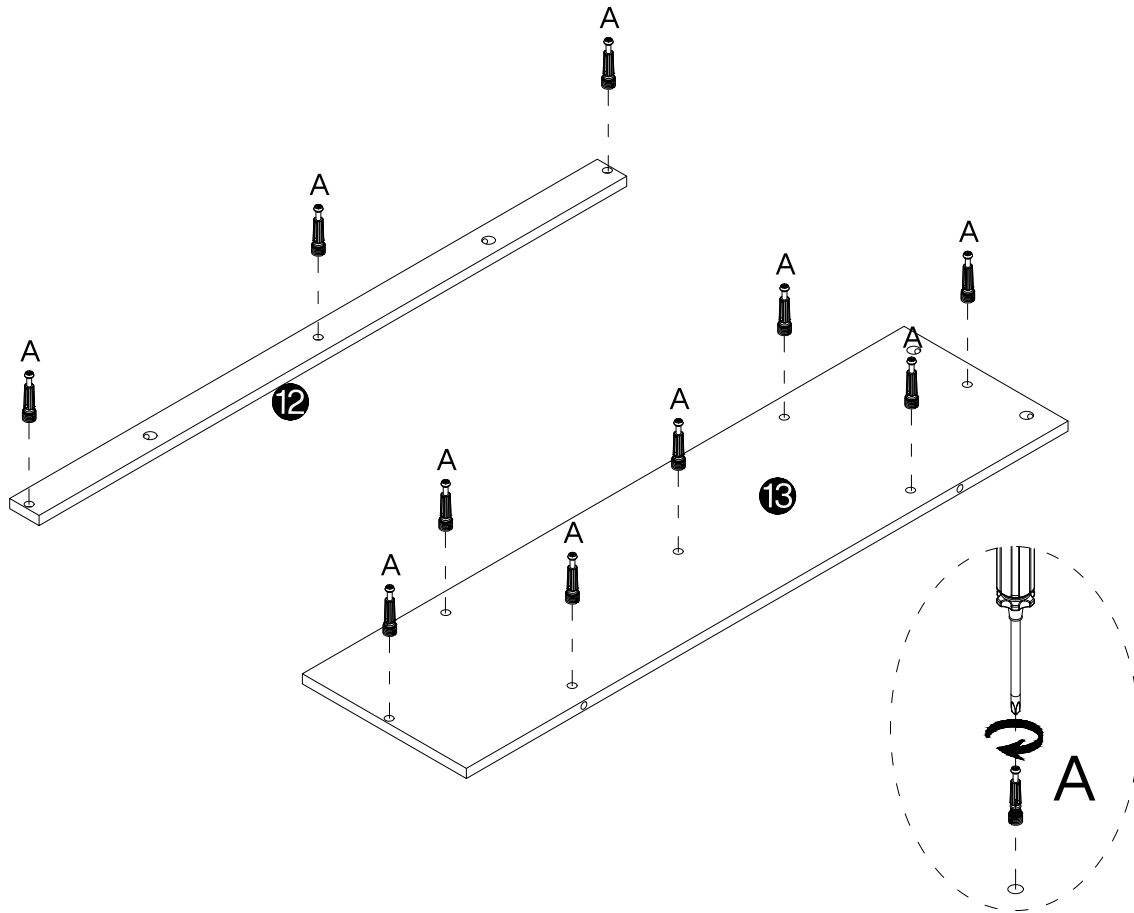

A


M6x40mm
19 pcs

12

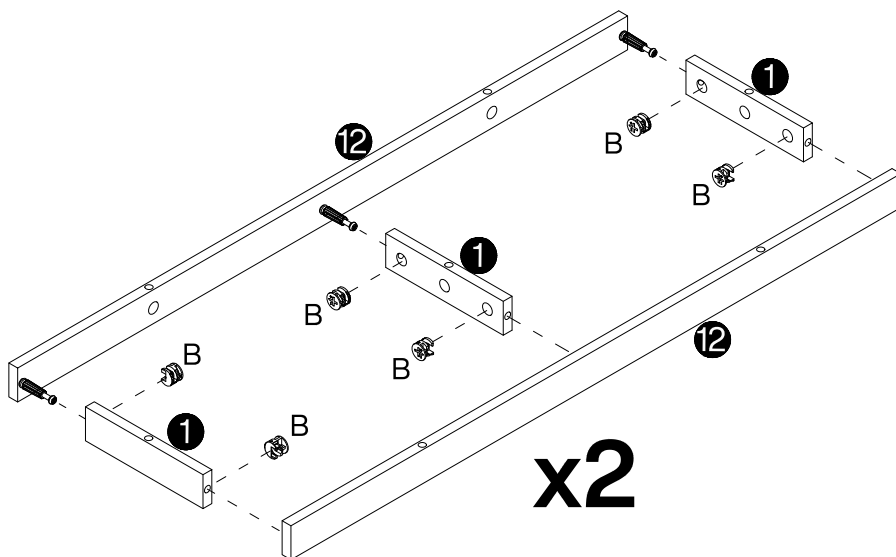


B

Ø15X12 mm
12 pcs

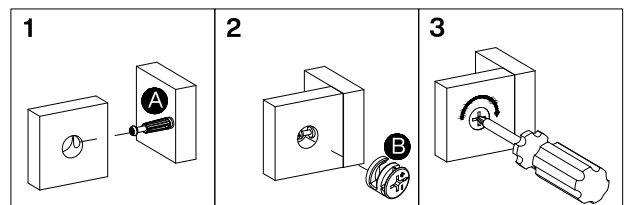

13

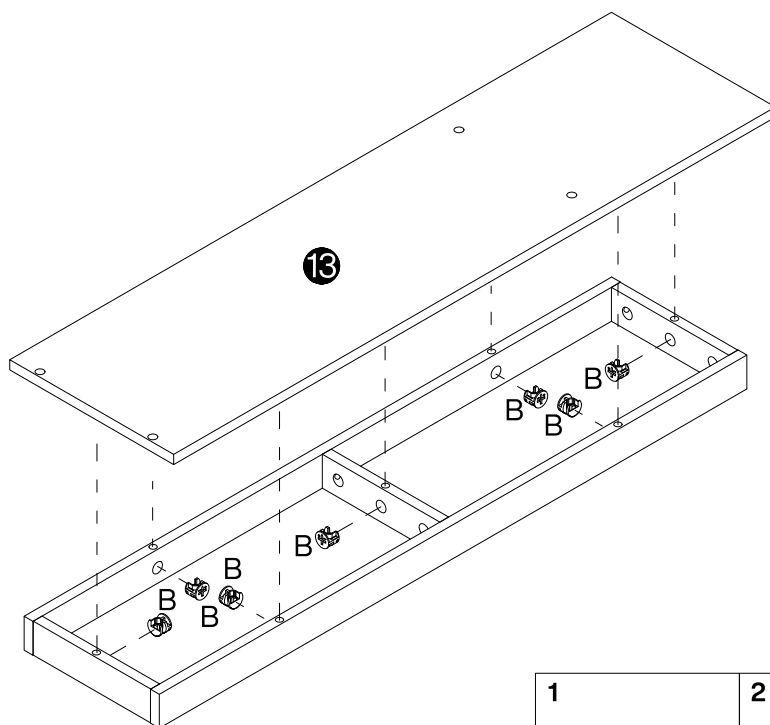


B




Ø15X12 mm

7 pcs

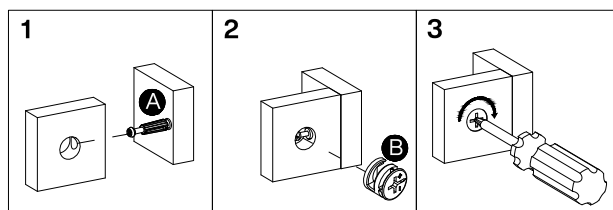

14

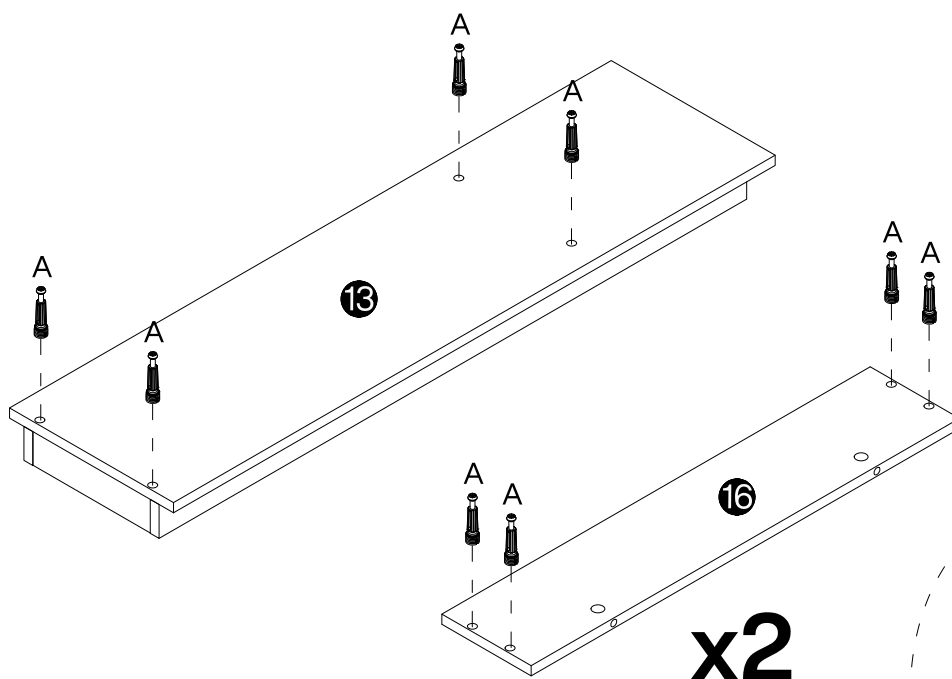


A



M6x40mm



12 pcs

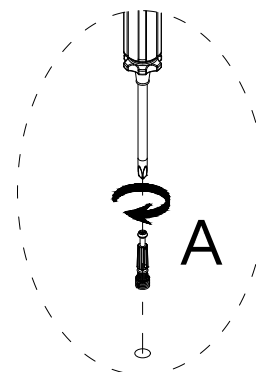

15

B



Ø15X12 mm
4 pcs

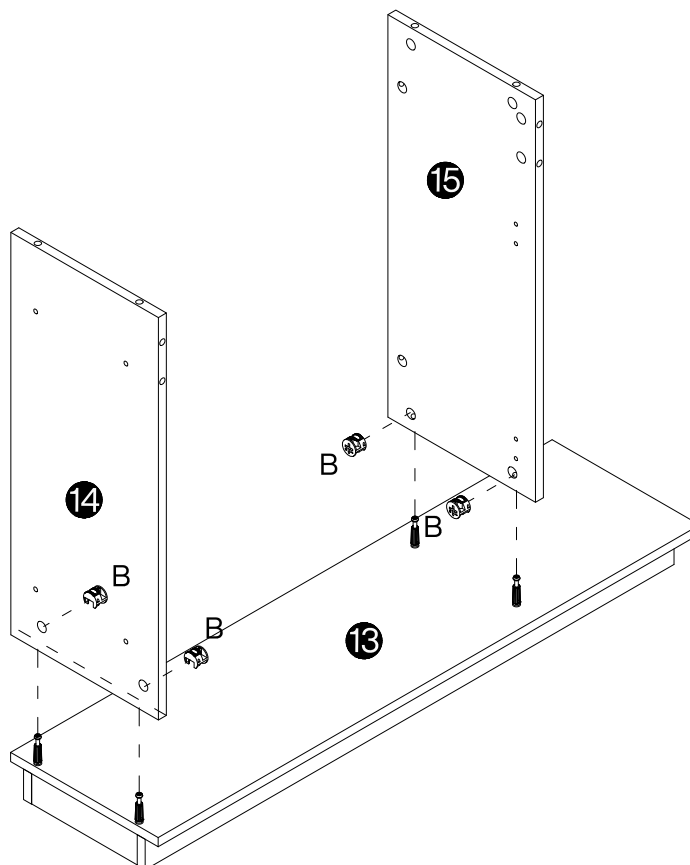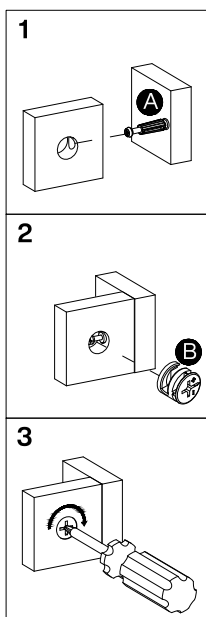


16

B

Ø15X12 mm
4 pcs

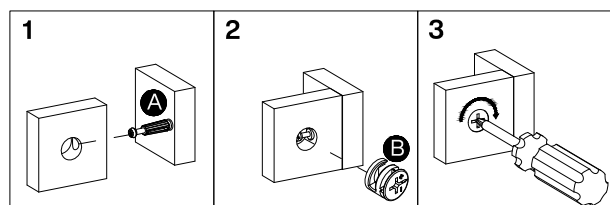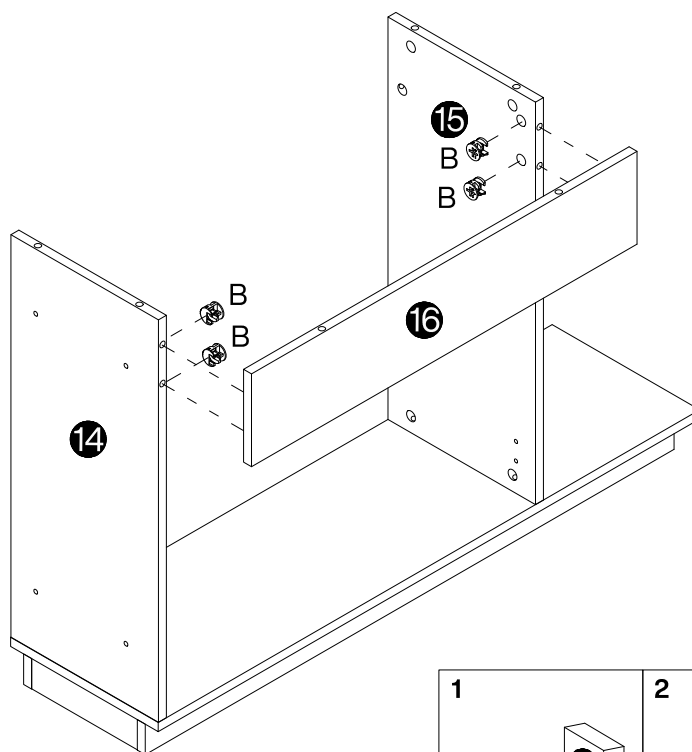


17

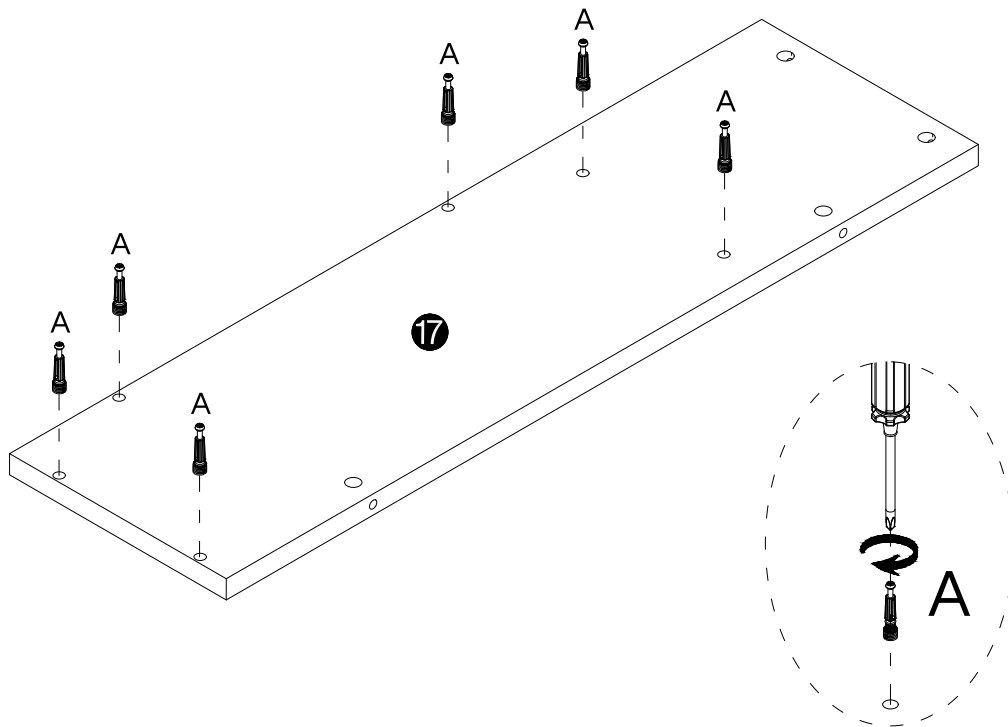

A

M6x40mm
6 pcs



18

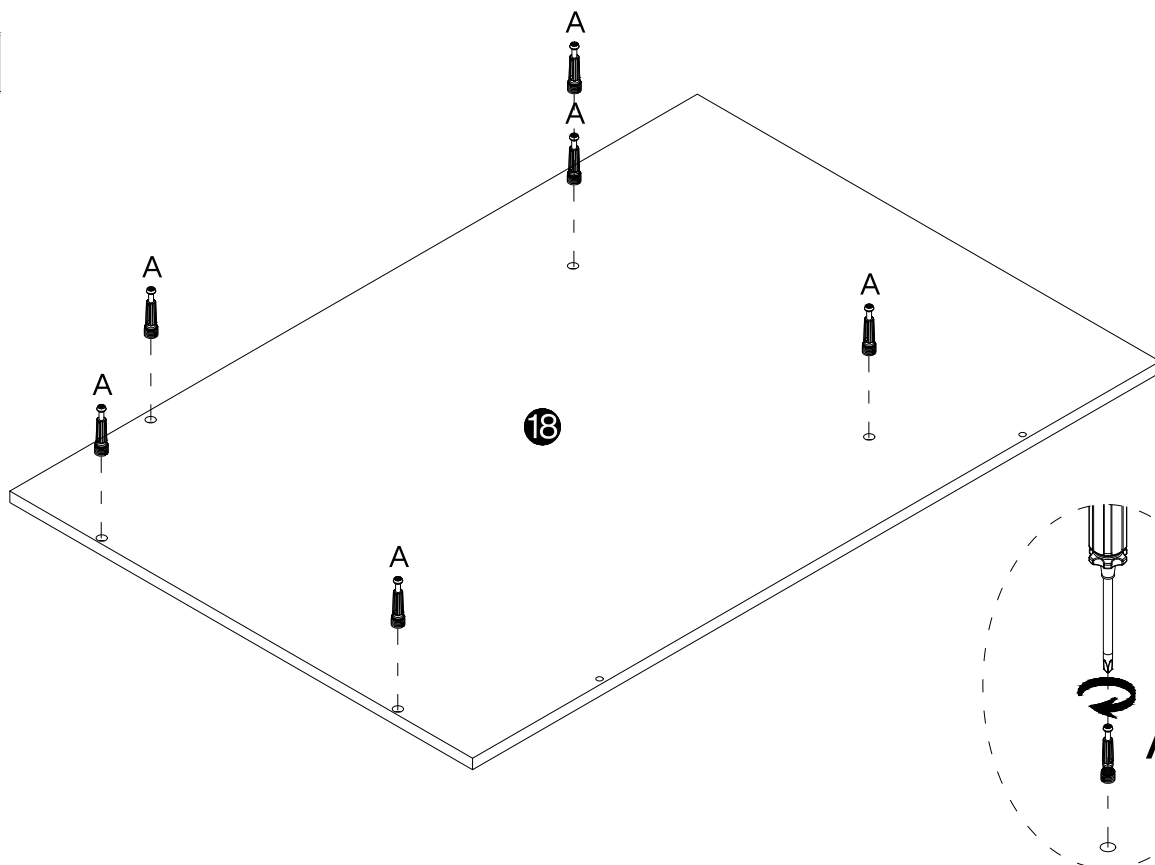

A

M6x40mm
6 pcs



19

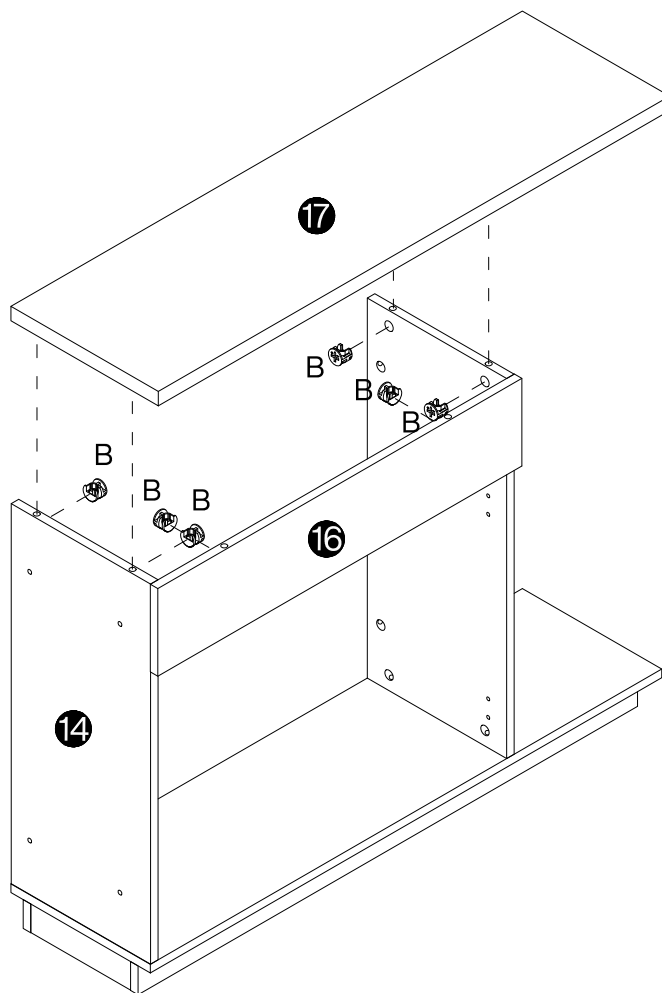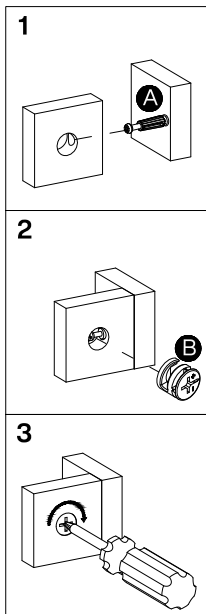


B

Ø15X12 mm
6 pcs

20

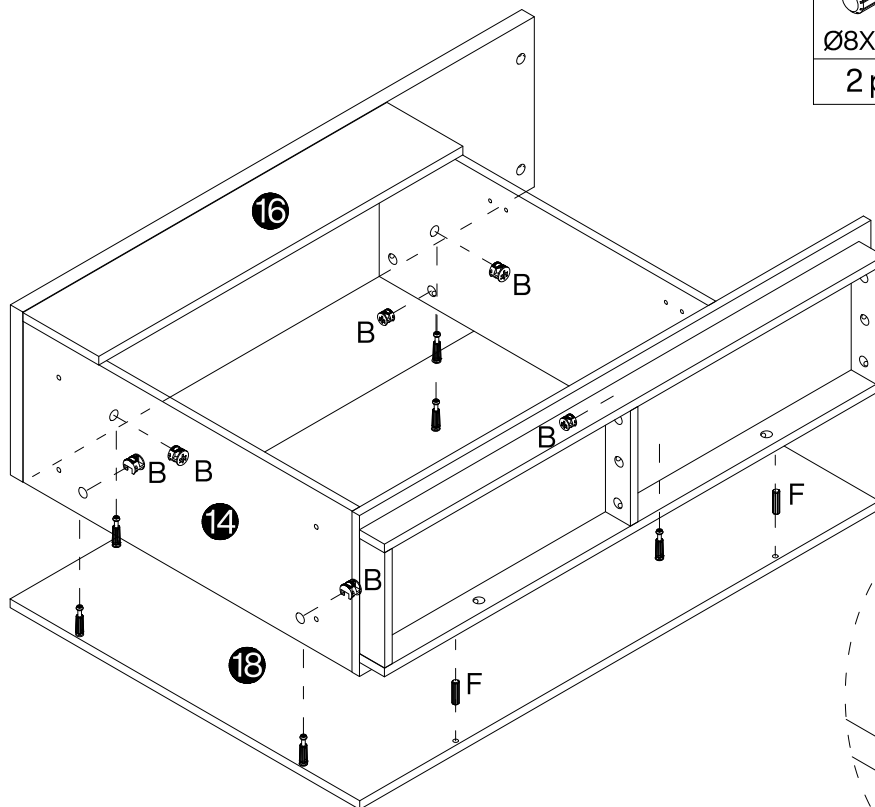
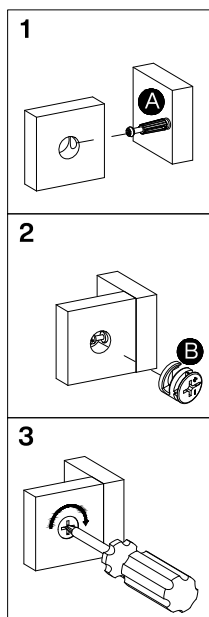


F	B
	
Ø8X30 mm	Ø15X12 mm
2 pcs	6 pcs

21

Rotate 180°



A	B
	
M6x40mm	Ø15X12 mm
7 pcs	7 pcs

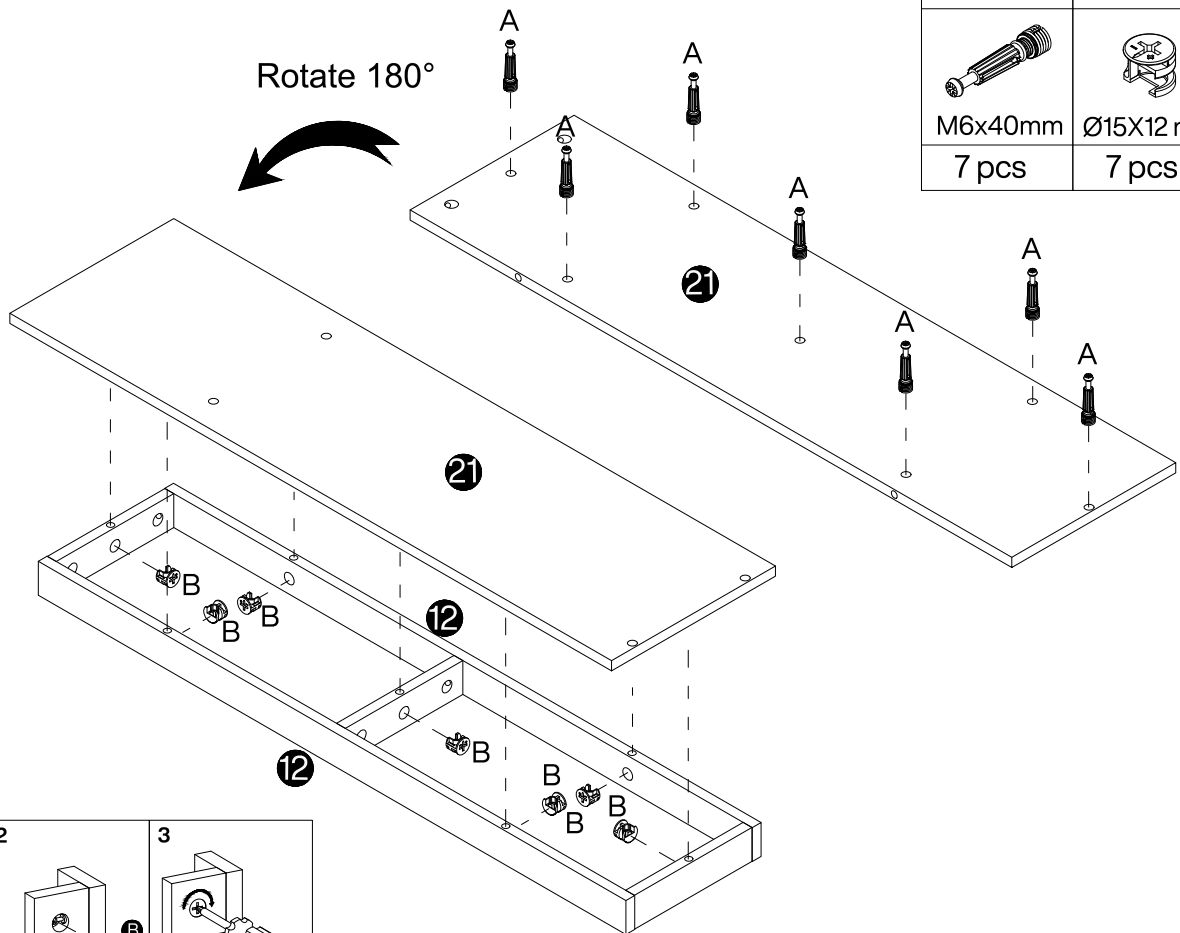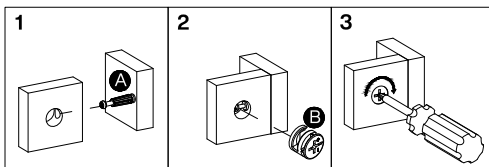

22

A

M6x40mm
4 pcs

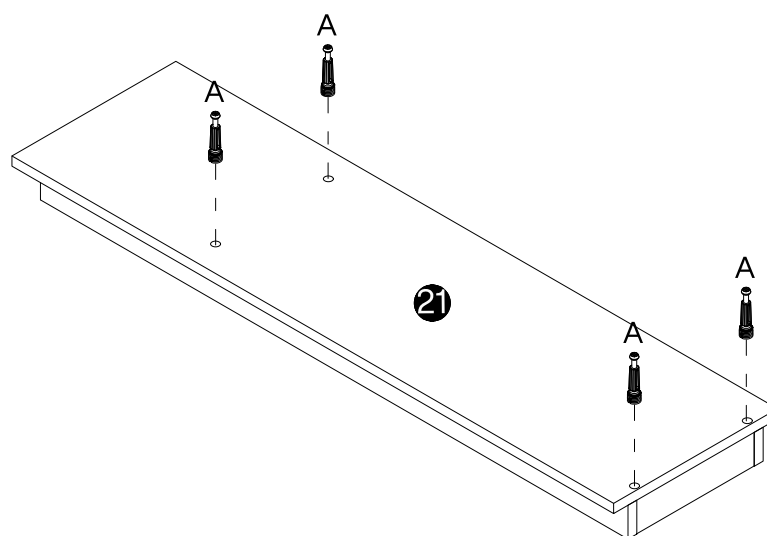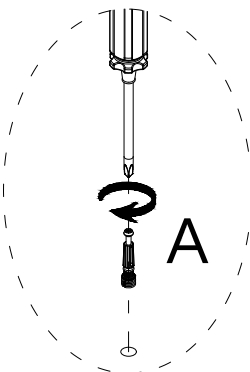



23

B



Ø15X12 mm

4 pcs

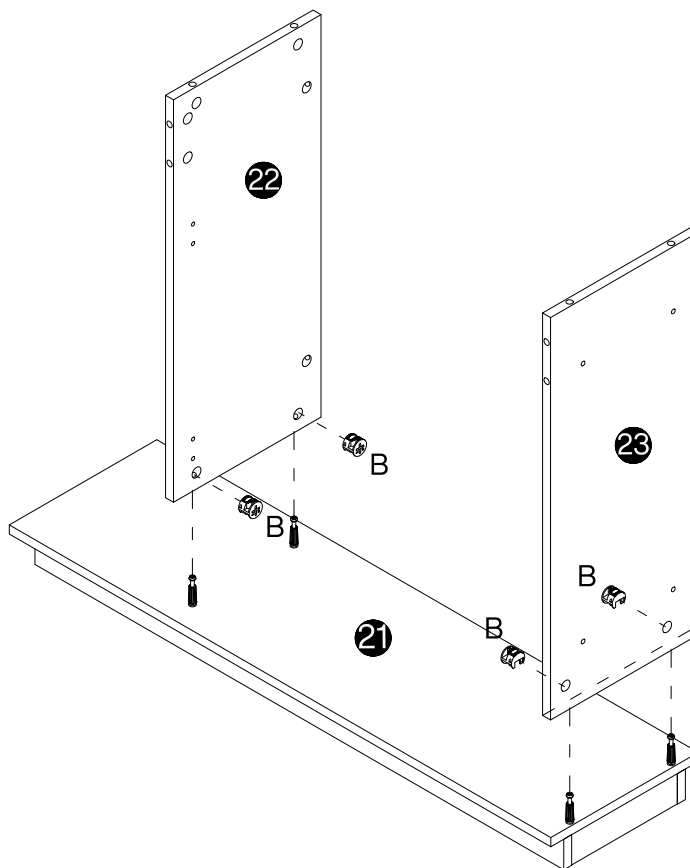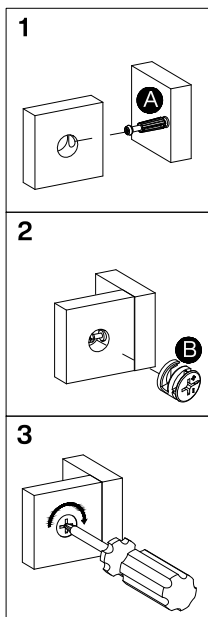



24

B



Ø15X12 mm


4 pcs

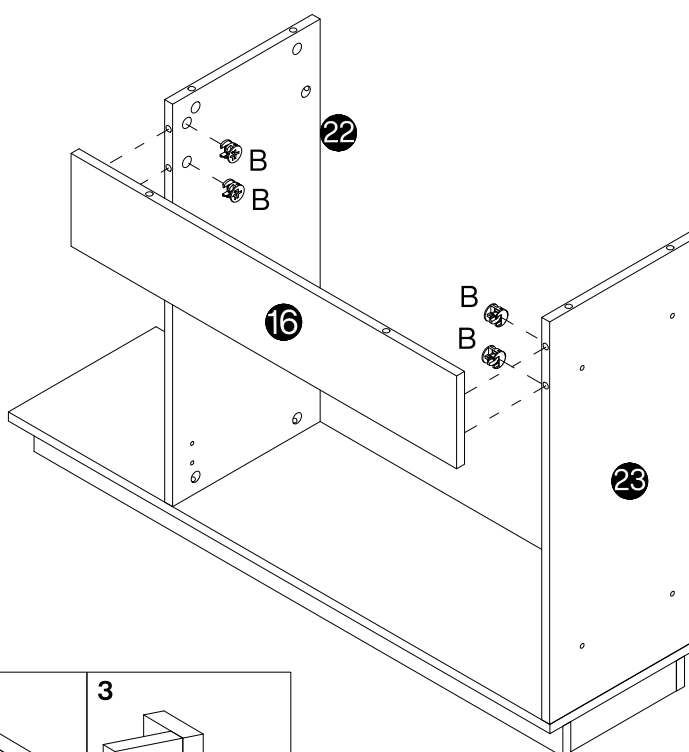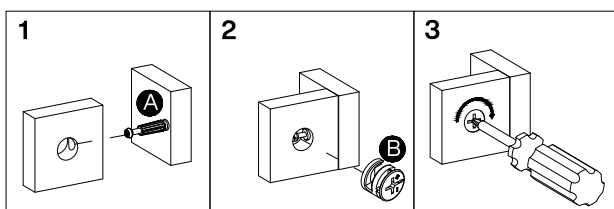

25

A


M6x40mm
6 pcs

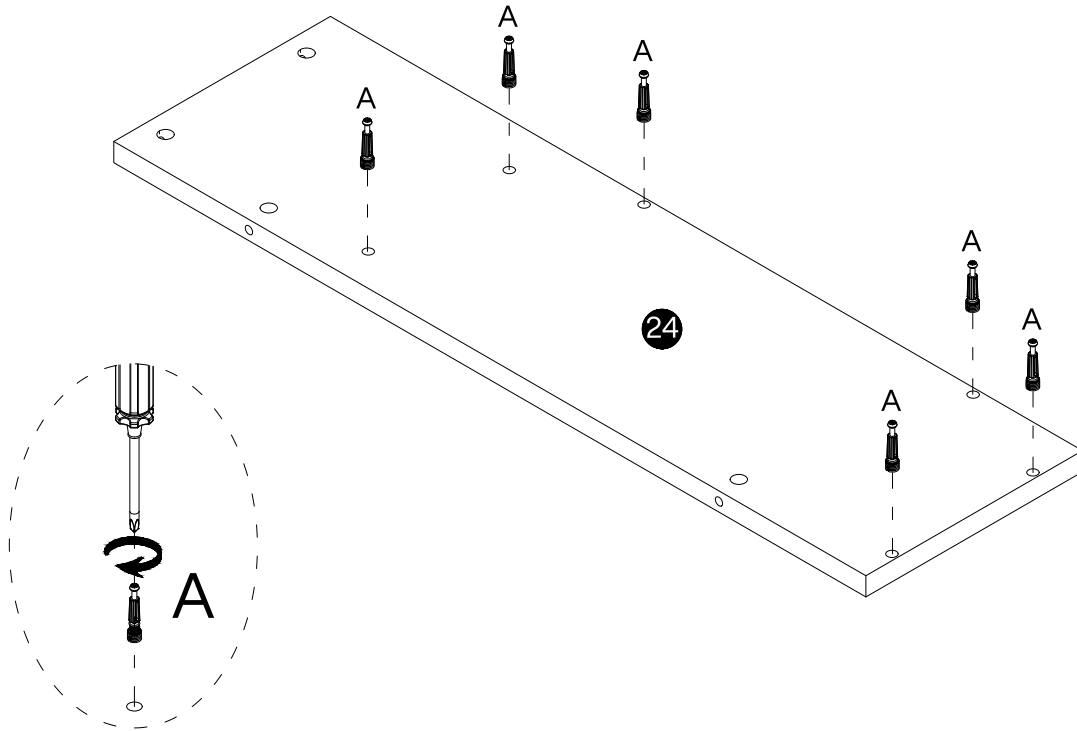



26

A

M6x40mm
6 pcs

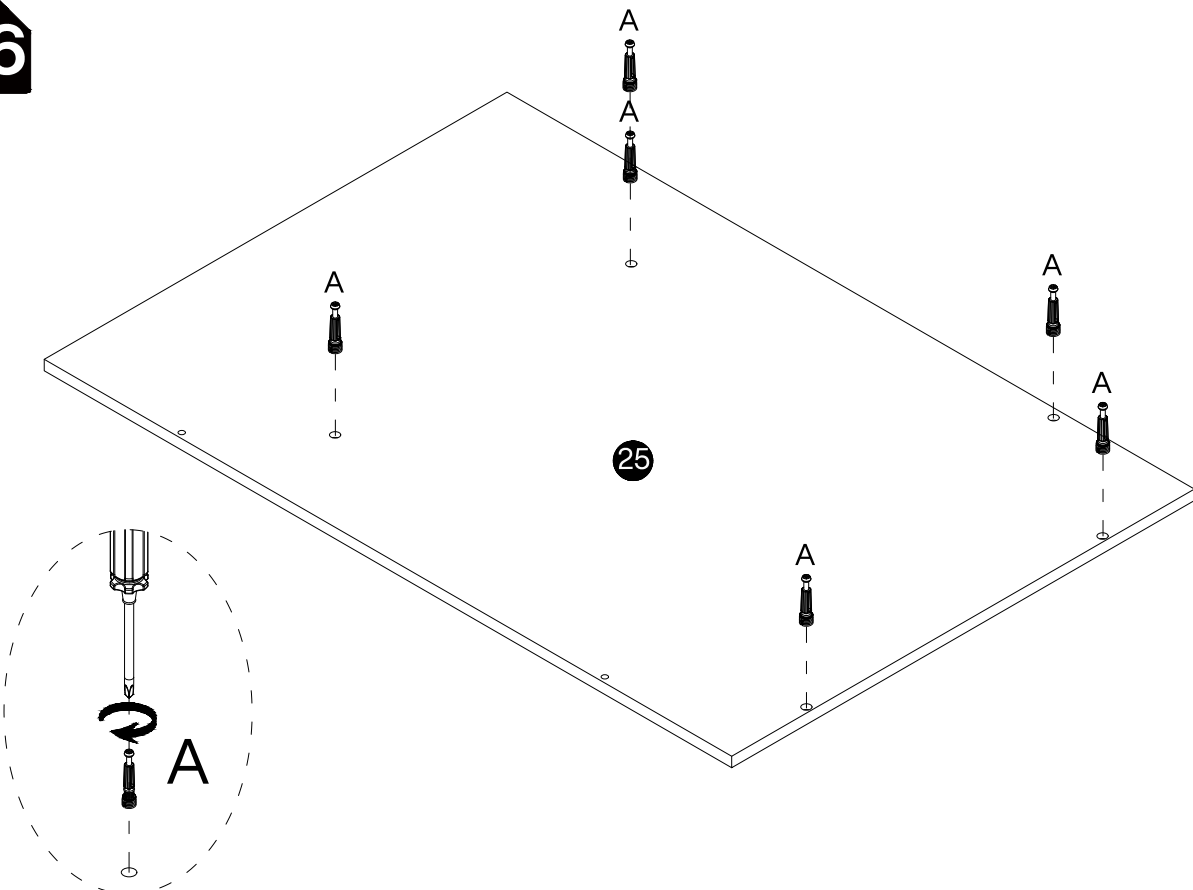



27

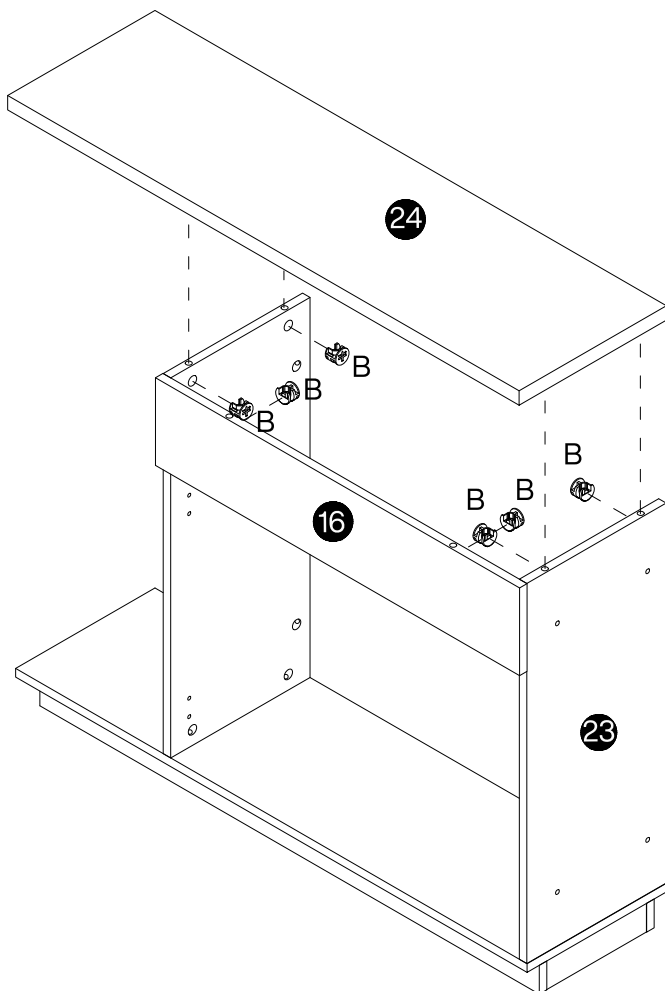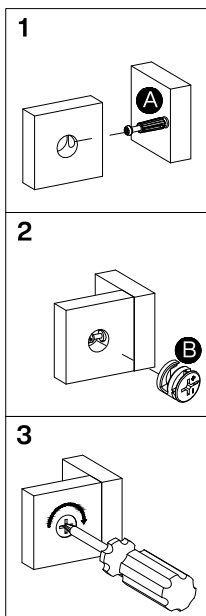



B

Ø15X12 mm
6 pcs


28

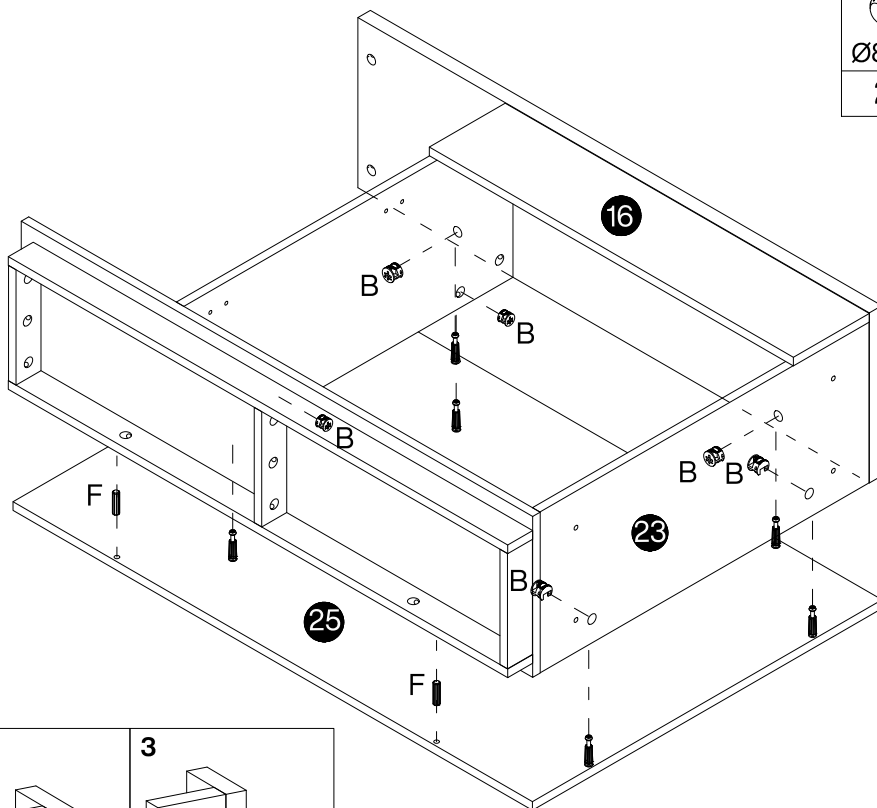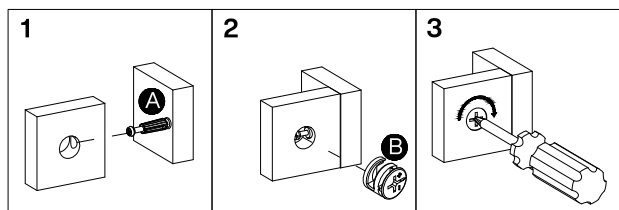

F	B
	
Ø8X30 mm	Ø15X12 mm
2 pcs	6 pcs

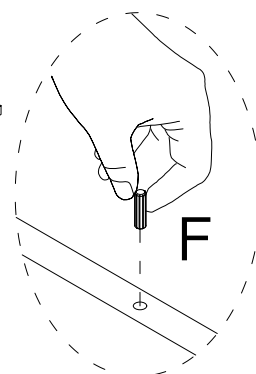


29

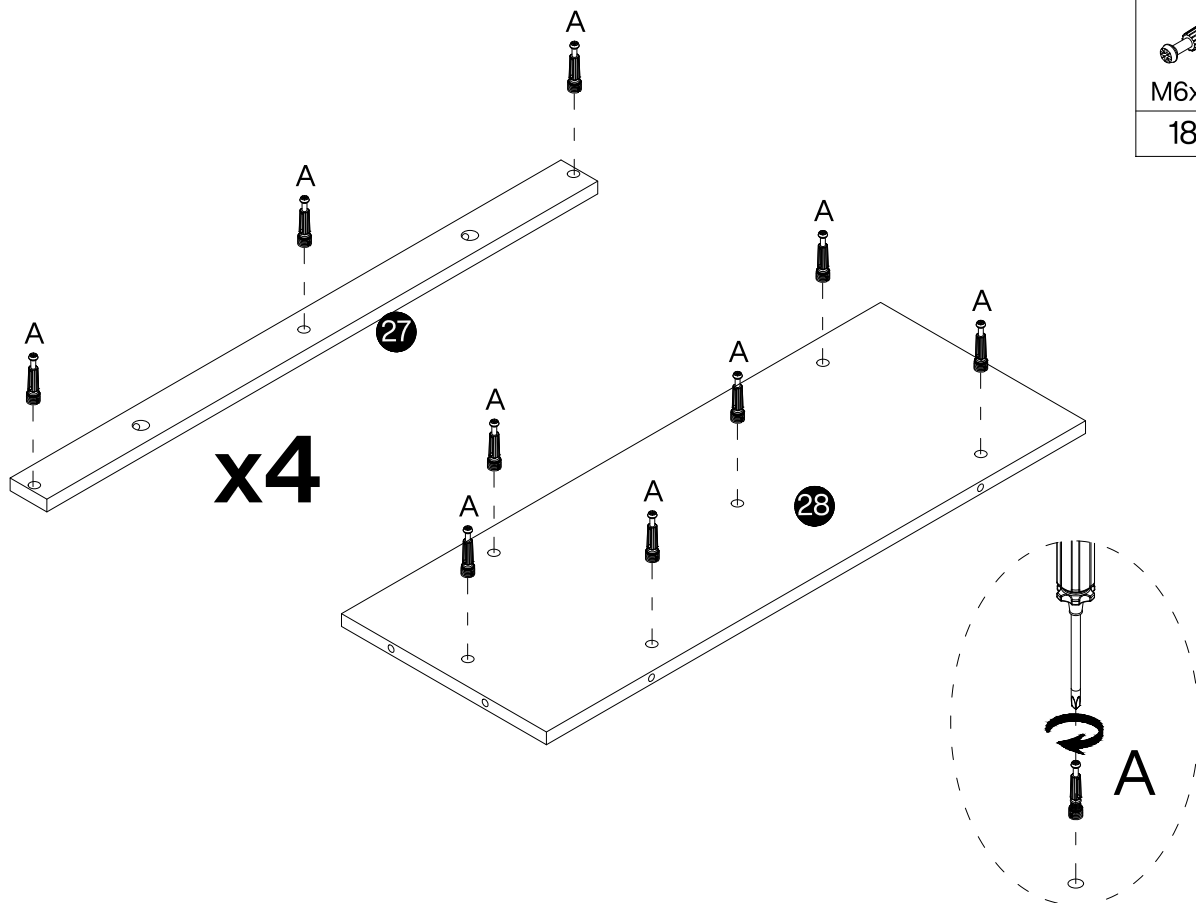

A


M6x40mm
18 pcs

30

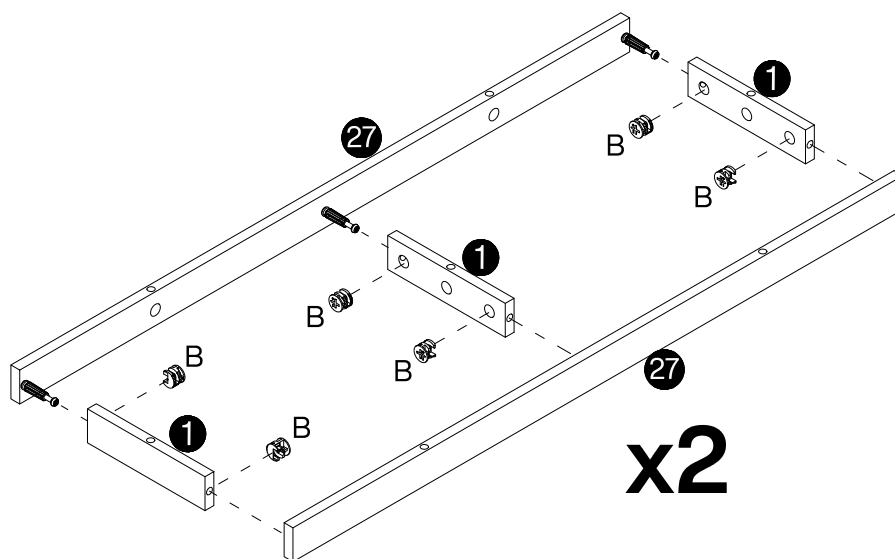


B

Ø15X12 mm
12 pcs

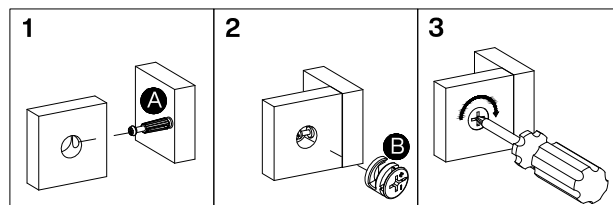


31

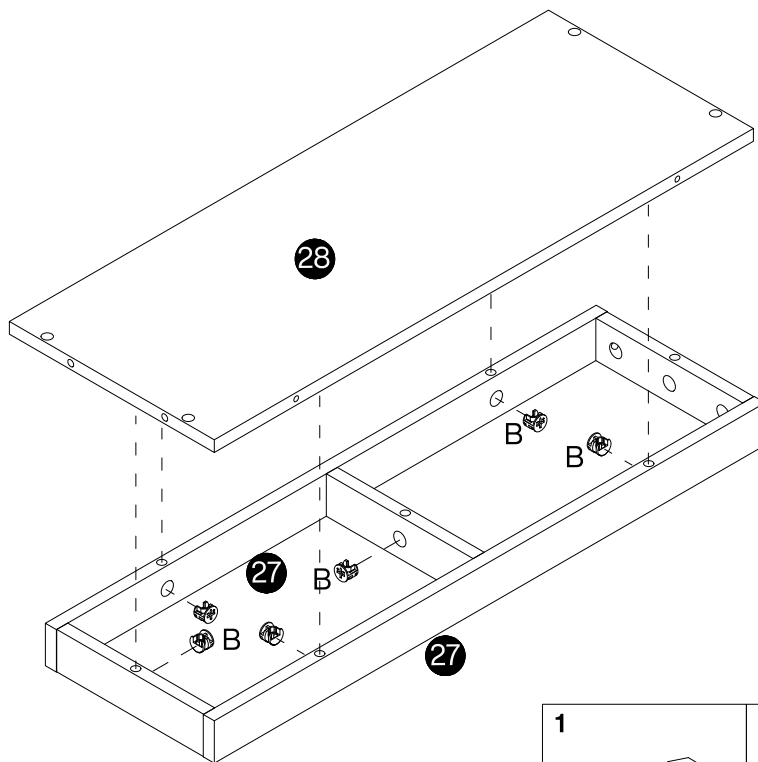


B

Ø15X12 mm
6 pcs

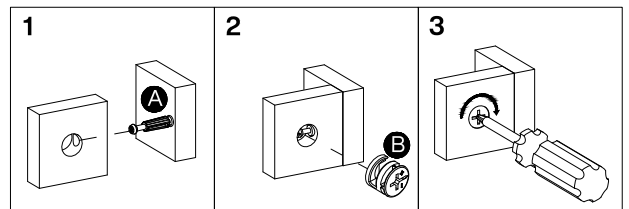


32


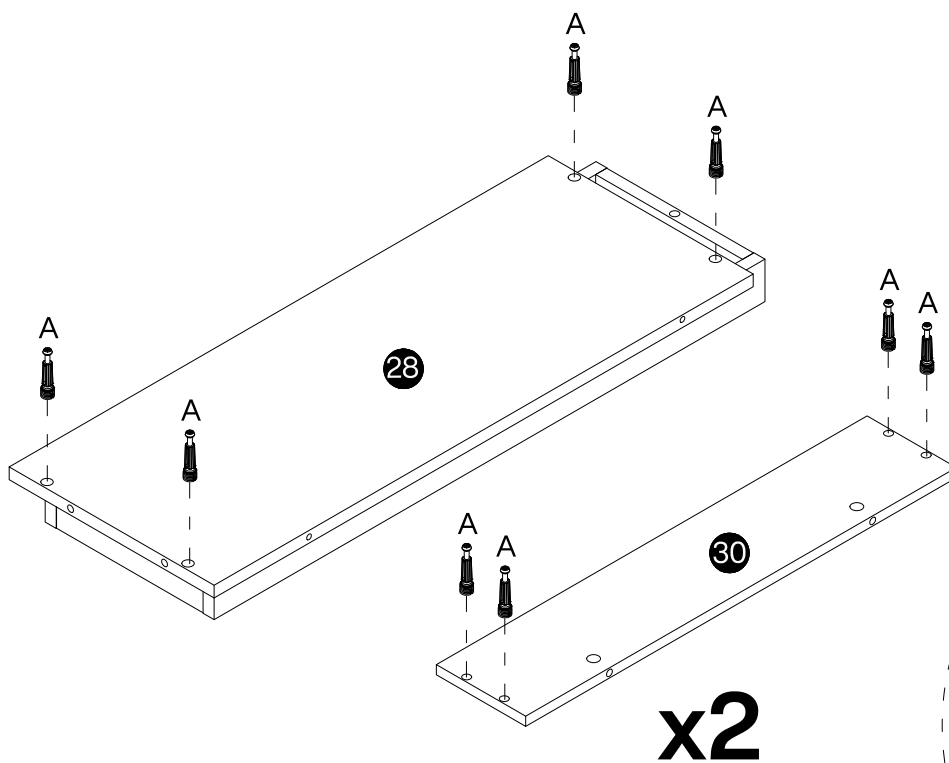


A

M6x40mm
12 pcs

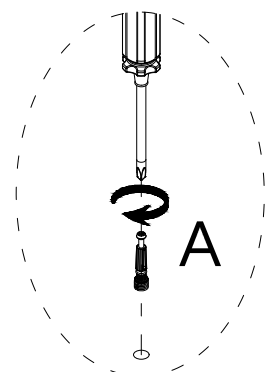



33

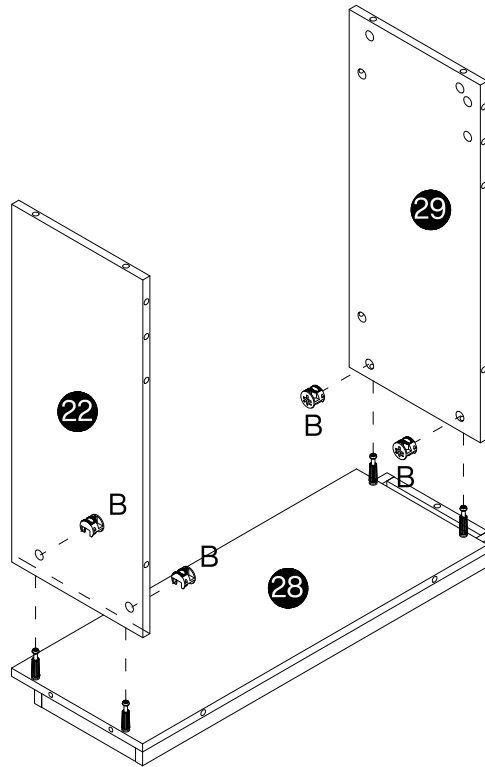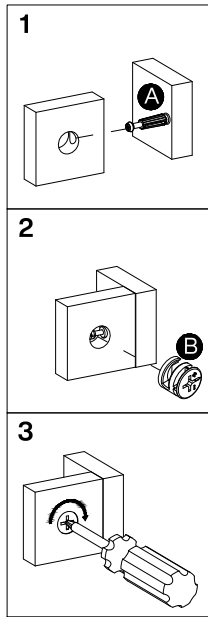

B

Ø15X12 mm
4 pcs



34

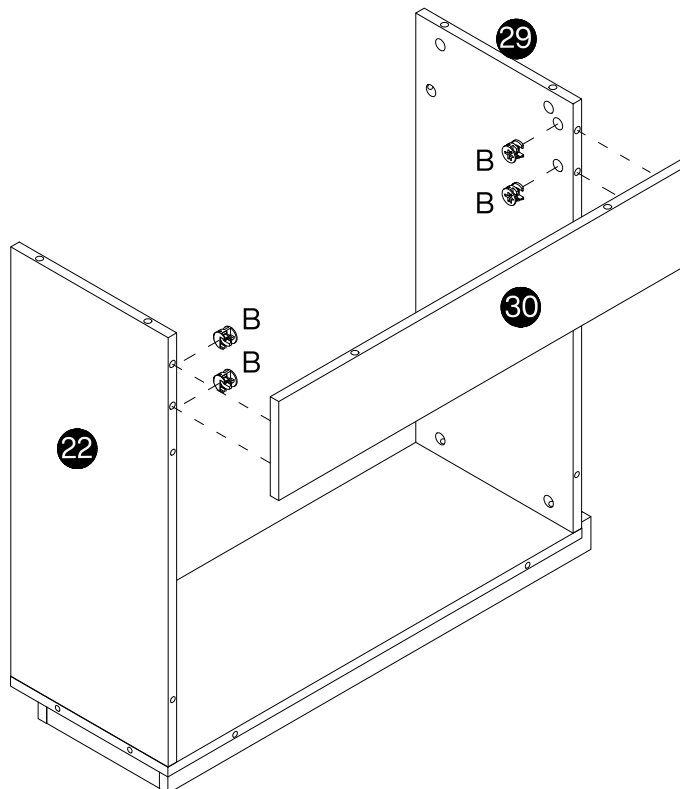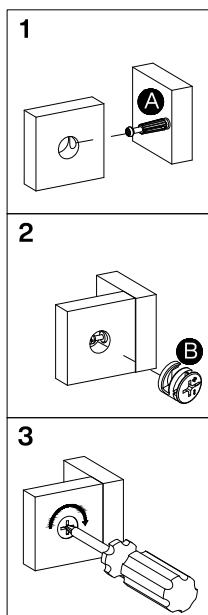

B

Ø15X12 mm
4 pcs



35

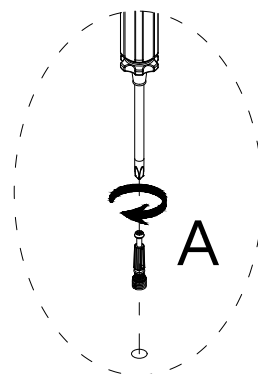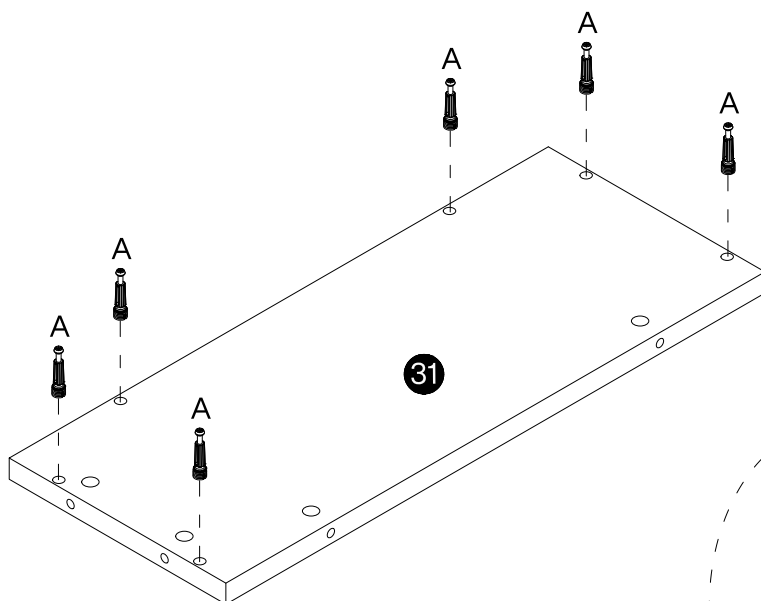

A

M6x40mm
6 pcs



36

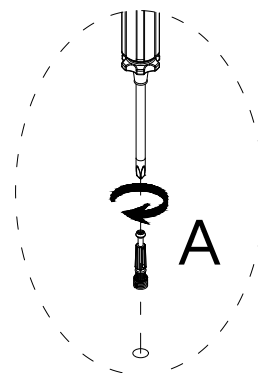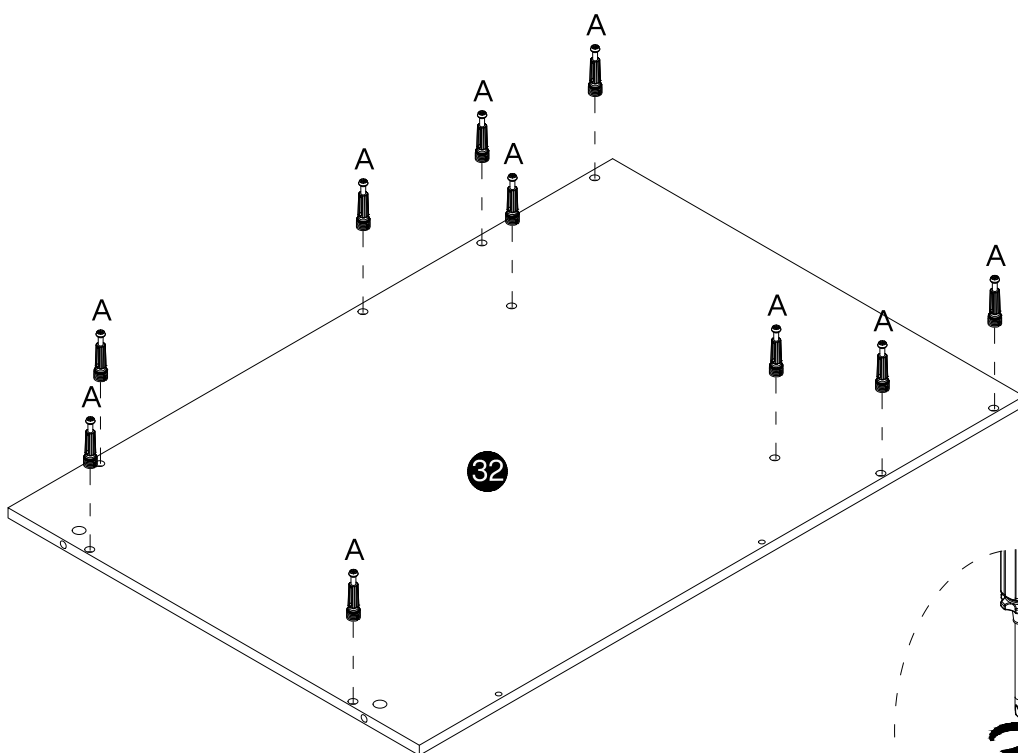

A

M6x40mm
10 pcs



37

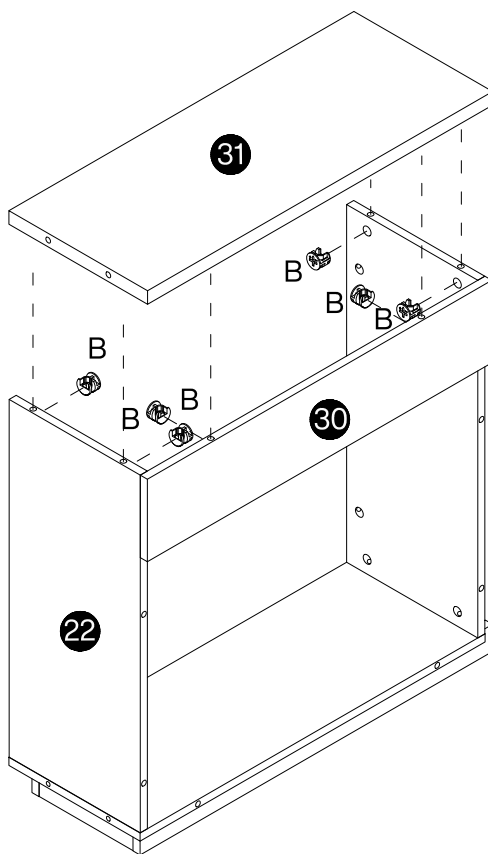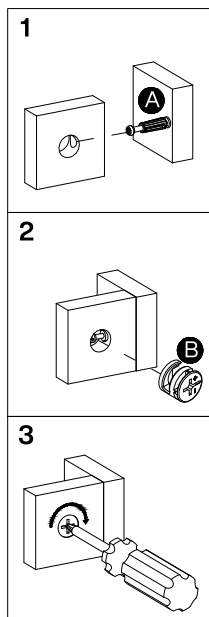


B


Ø15X12 mm
6 pcs

38

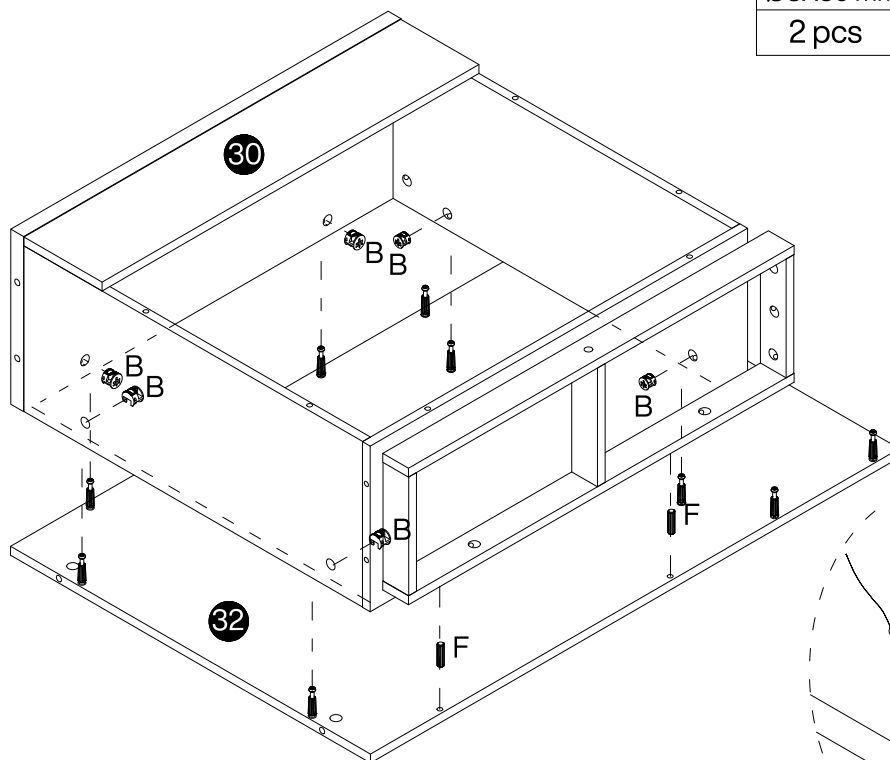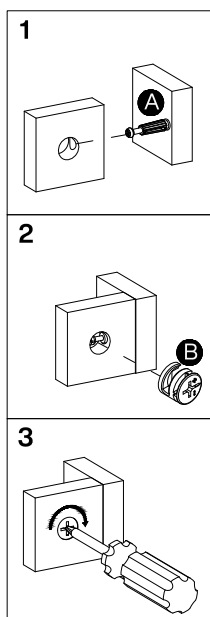

F	B
	
Ø8X30 mm	Ø15X12 mm
2 pcs	6 pcs


39

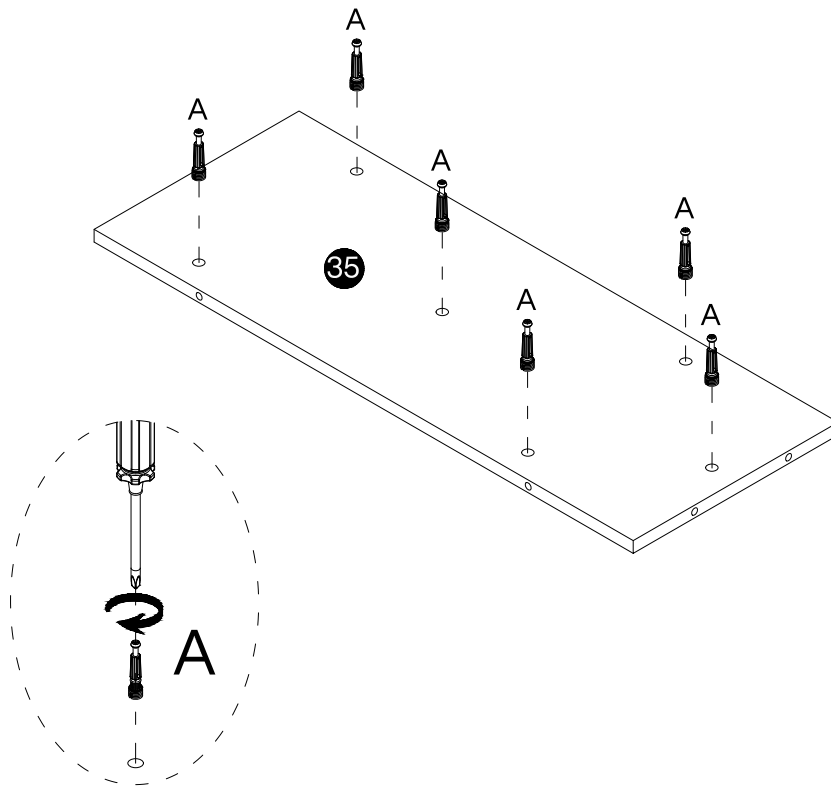

A


M6x40mm
6 pcs

40

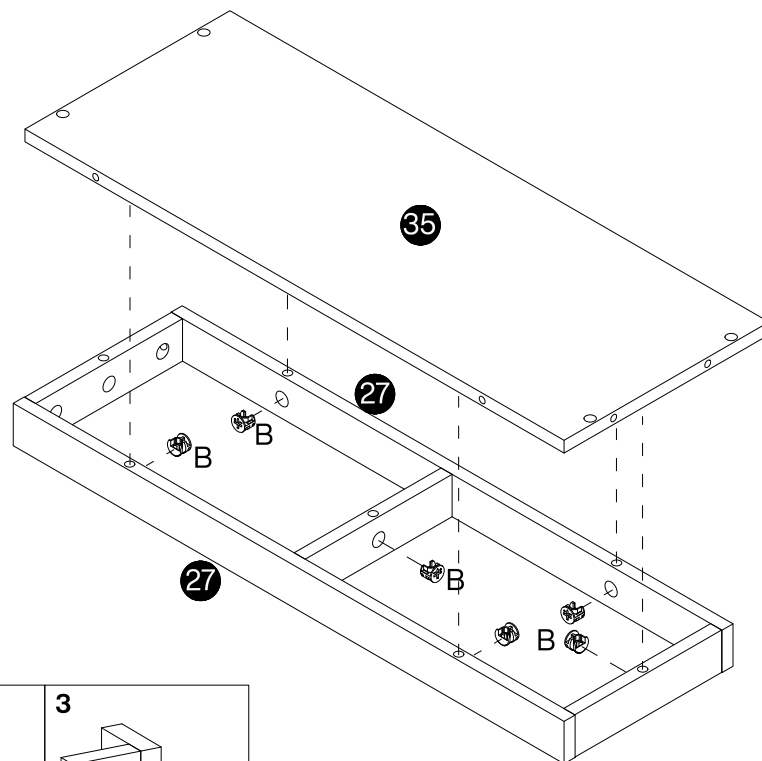

B


Ø15X12 mm
6 pcs

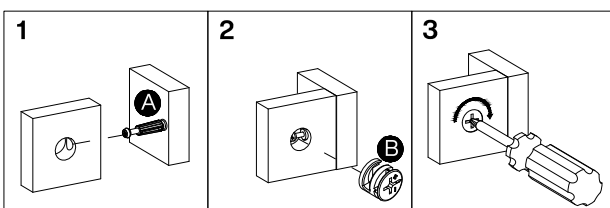

41

A



M6x40mm
10 pcs

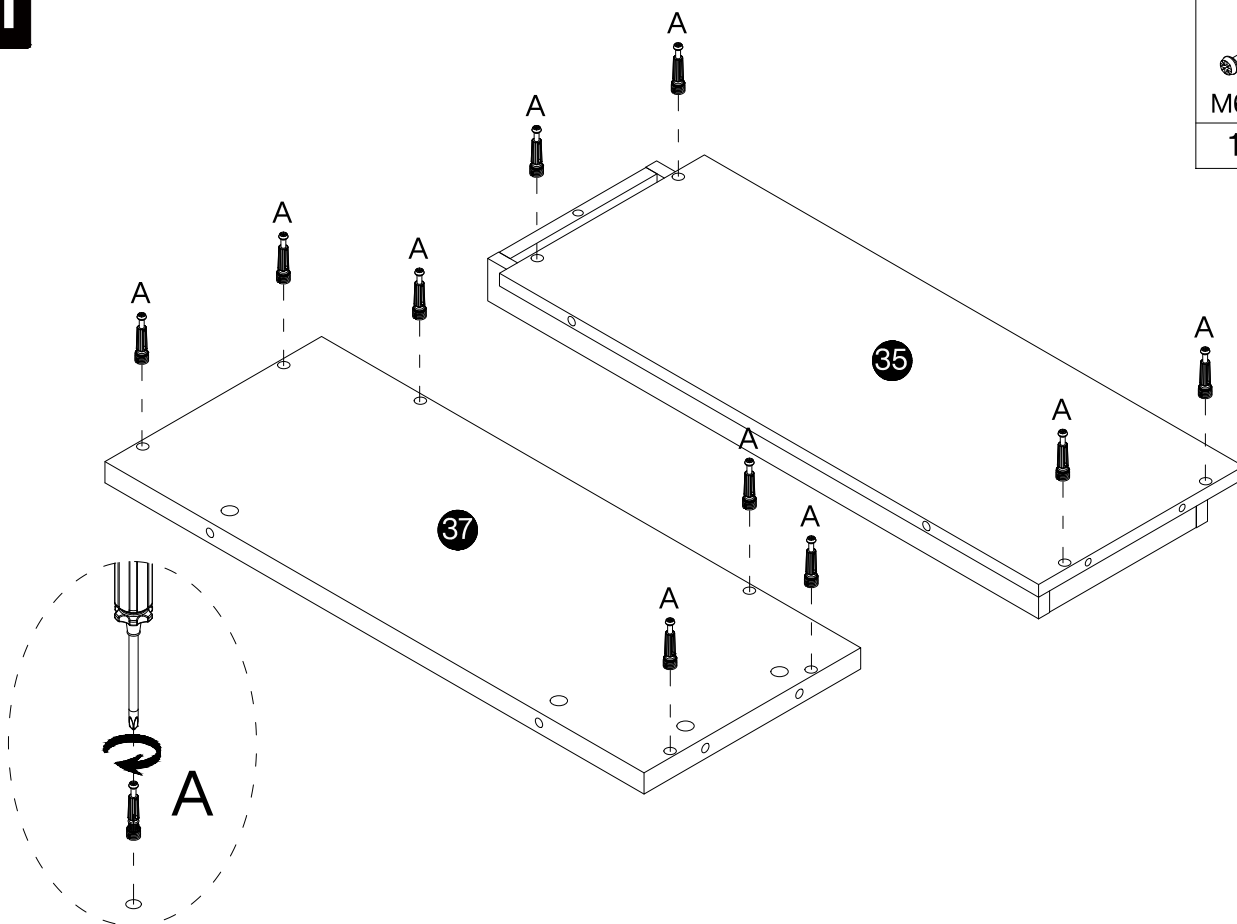



42

B

Ø15X12 mm
4 pcs

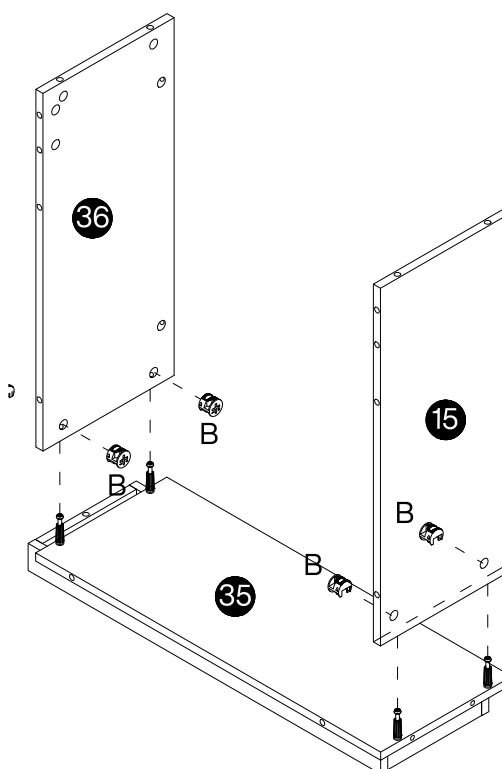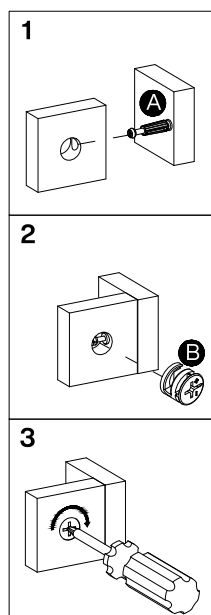



43

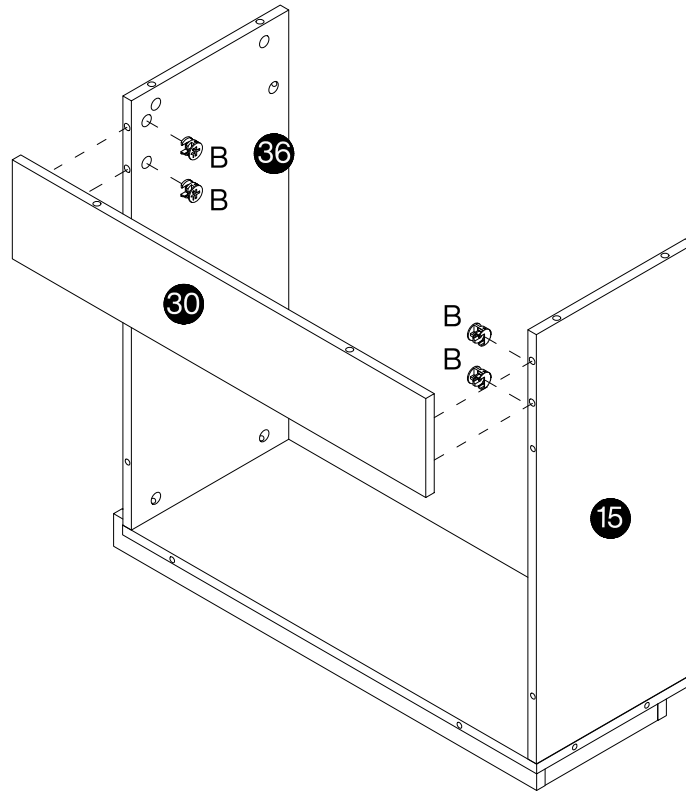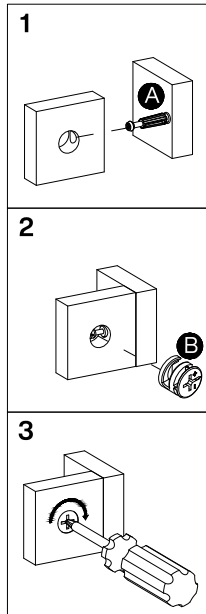

B

Ø15X12 mm
4 pcs


44

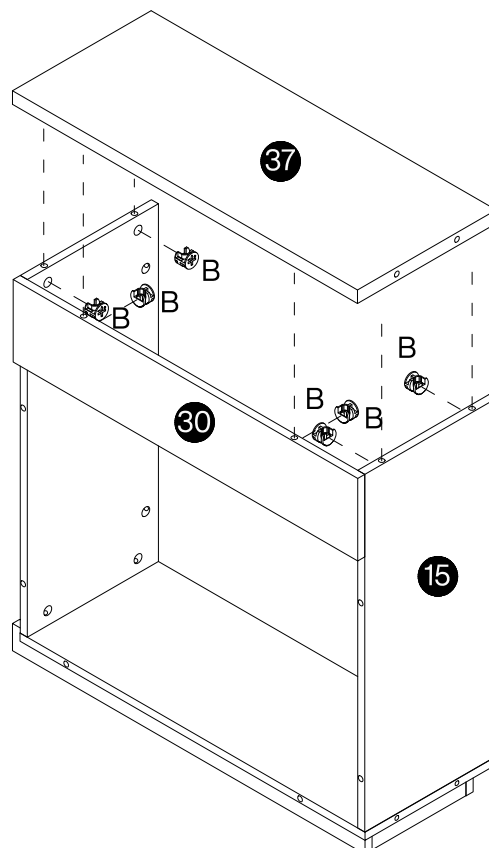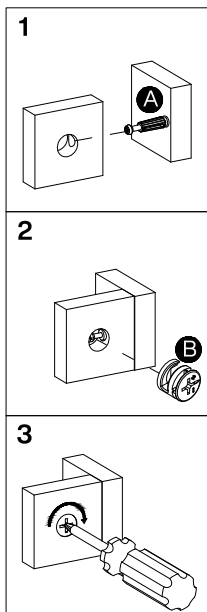

B

Ø15X12 mm
6 pcs

45

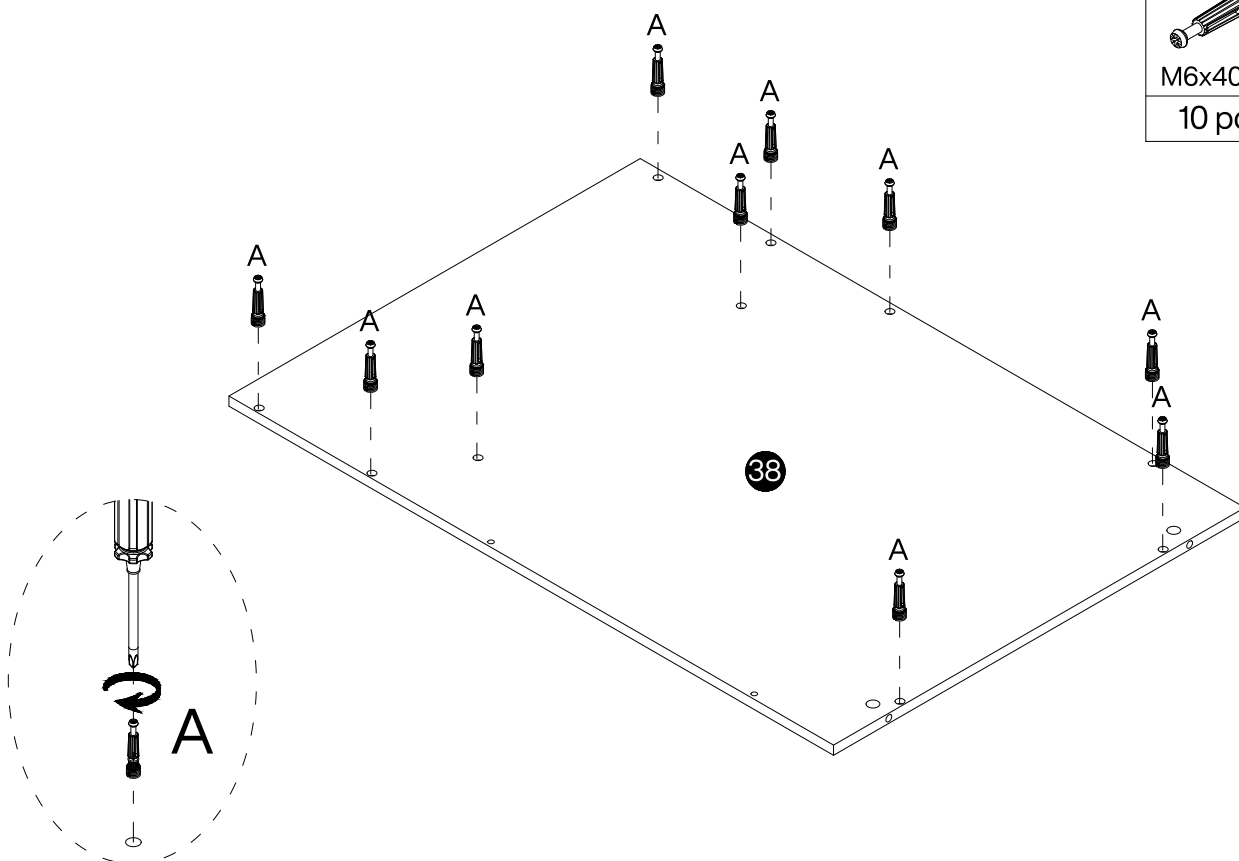



A




M6x40mm

10 pcs

46

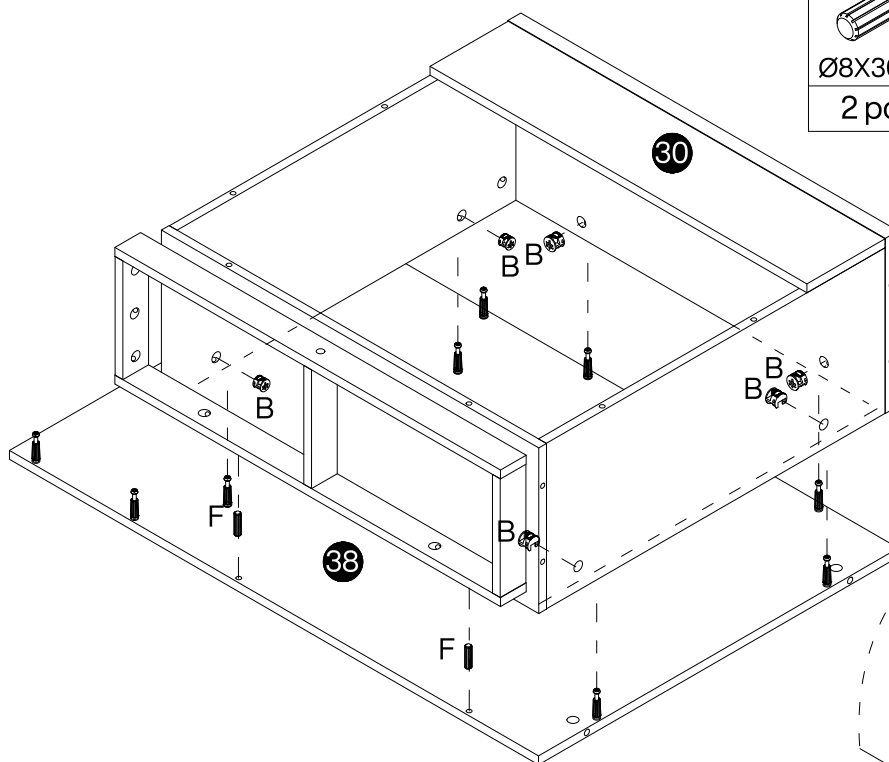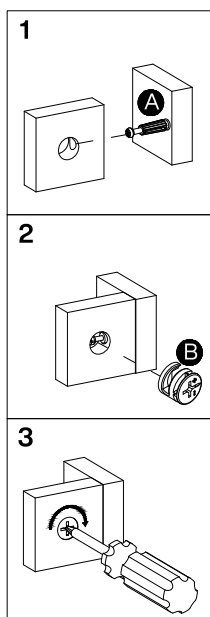

F



Ø8X30 mm


2 pcs

B





Ø15X12 mm

6 pcs

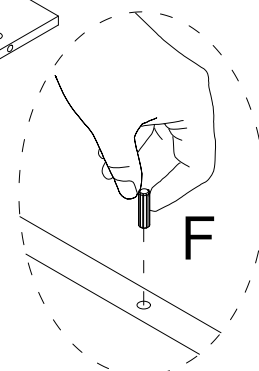


47

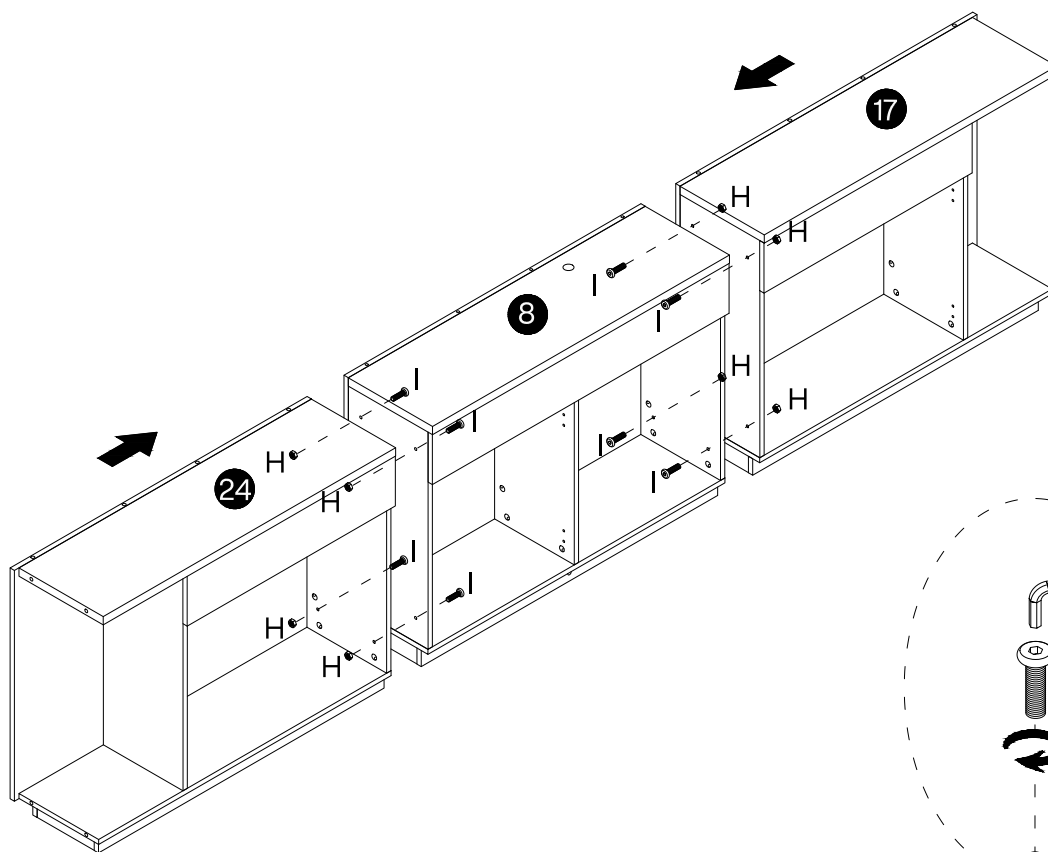

I

M6x25mm
8 pcs
H


M6
8 pcs

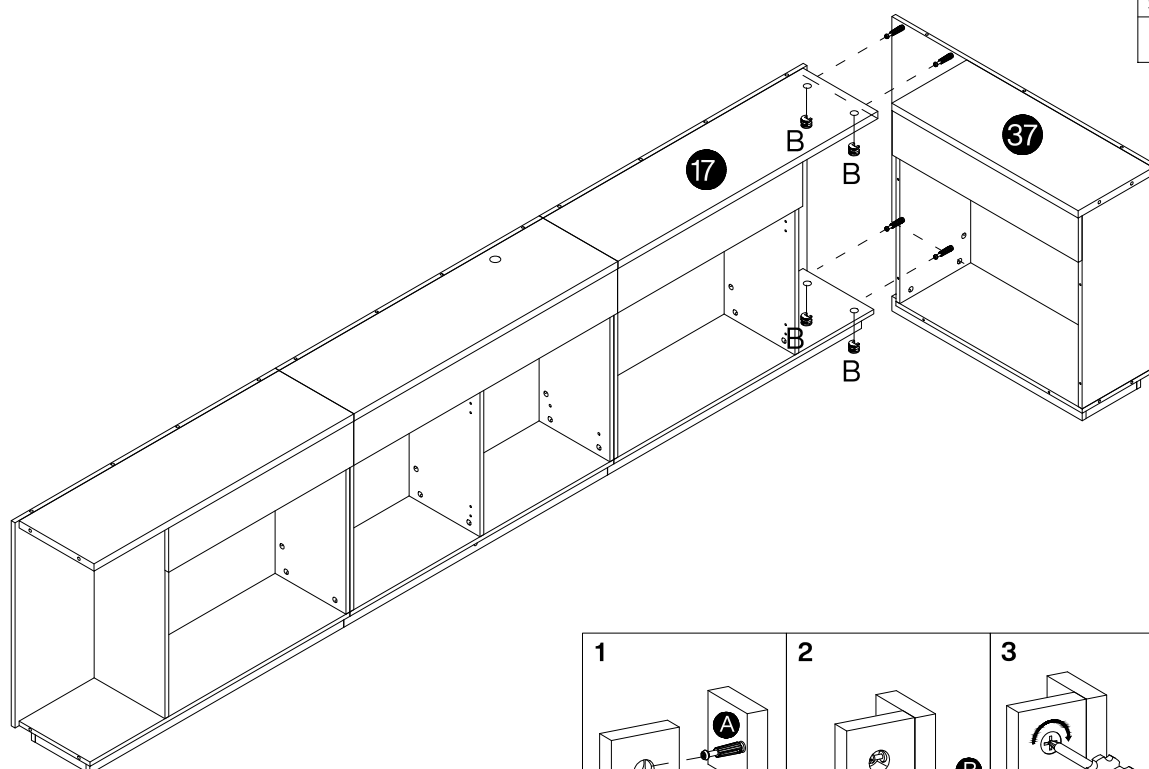48




B

Ø15X12 mm
4 pcs

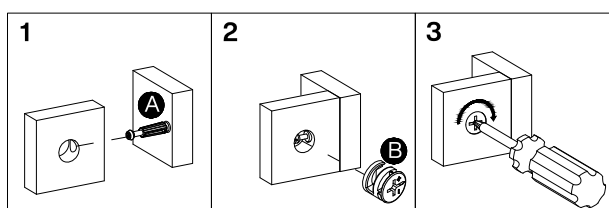

49

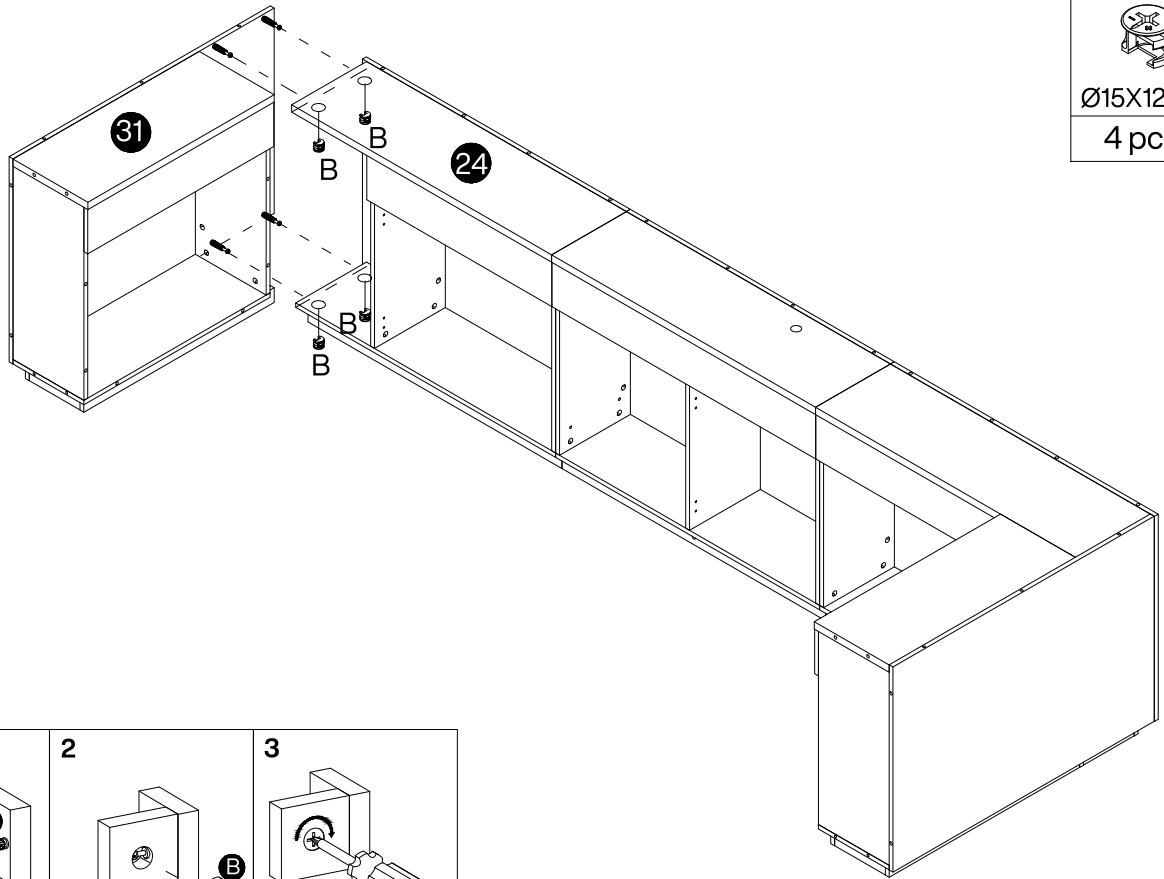


B




Ø15X12 mm

4 pcs

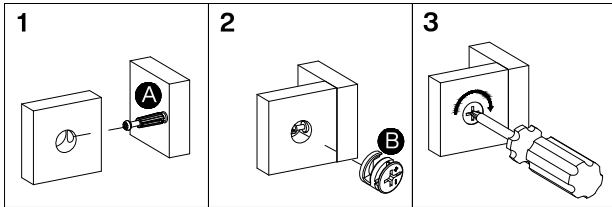

50

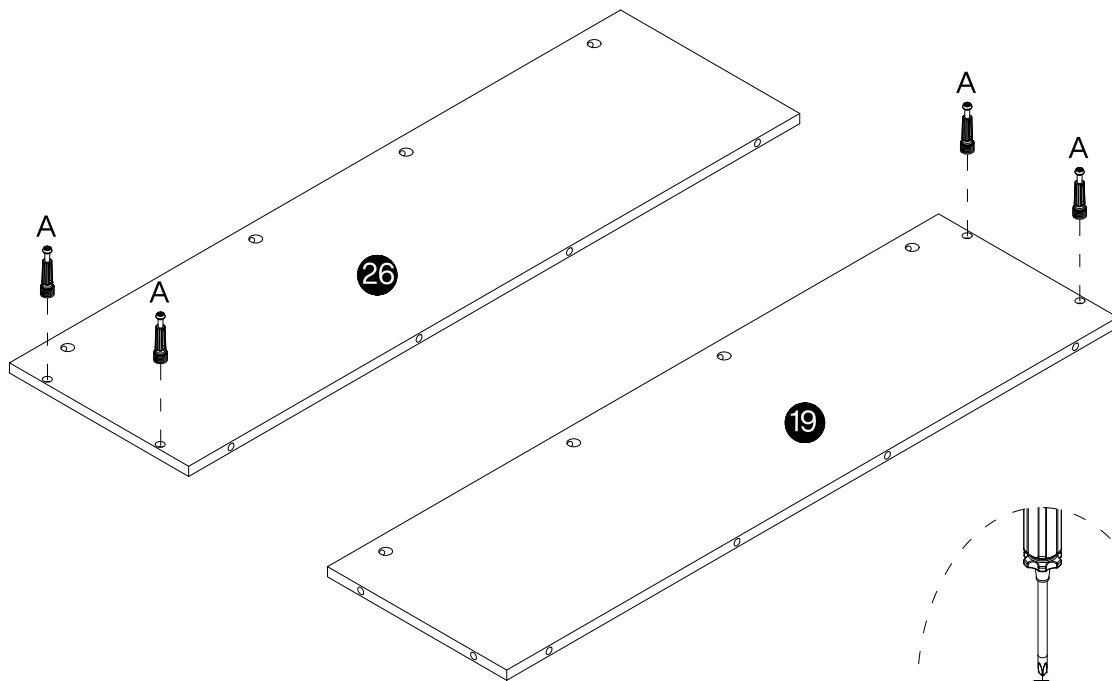


A





M6x40mm

4 pcs

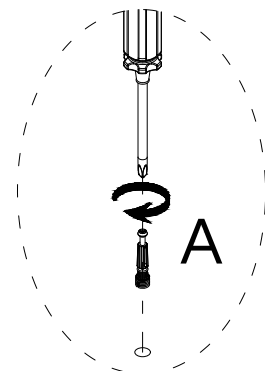


51

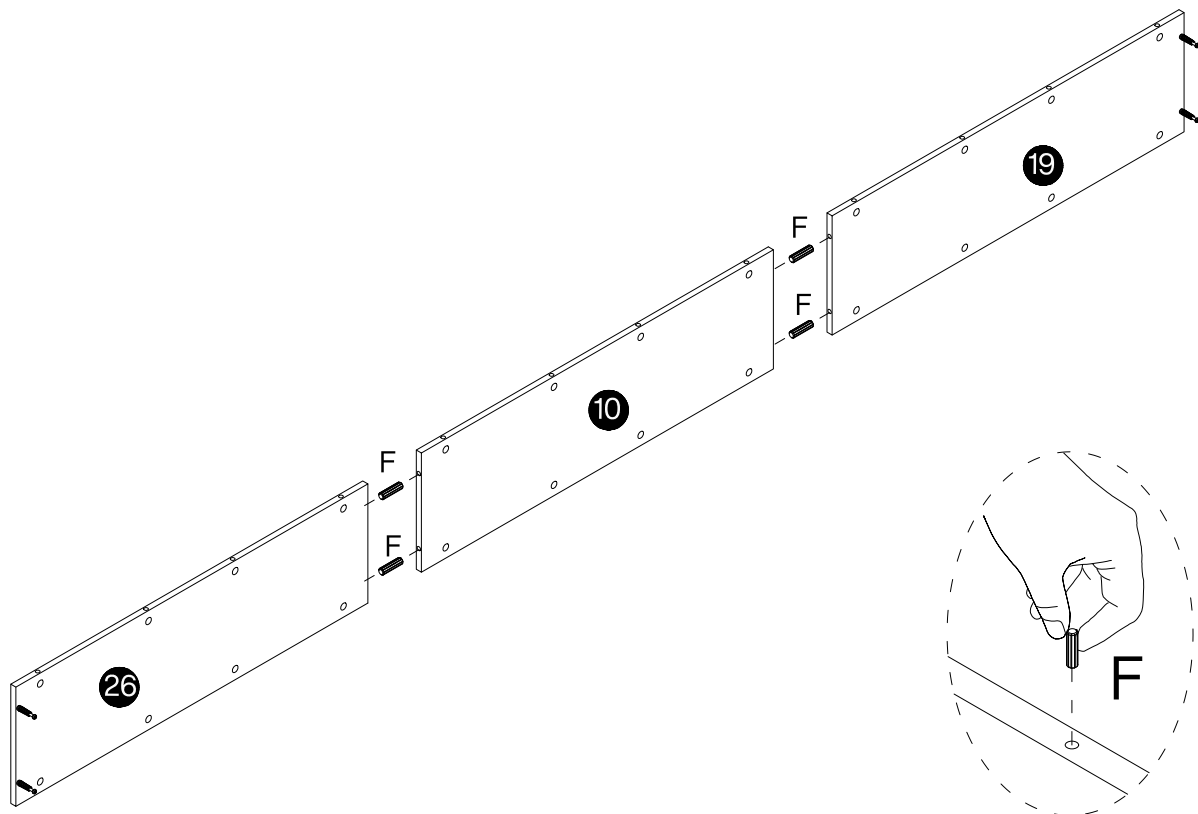


F

Ø8X30 mm
4 pcs

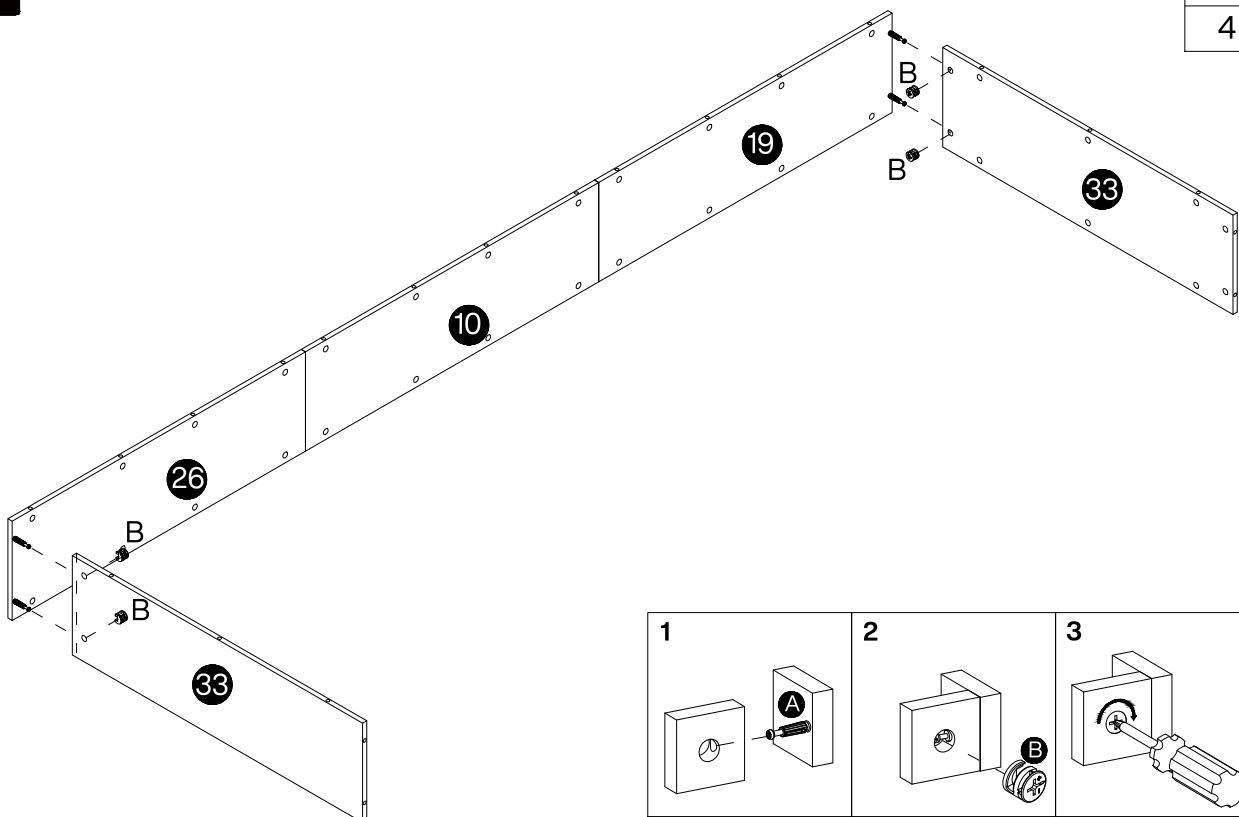52




B

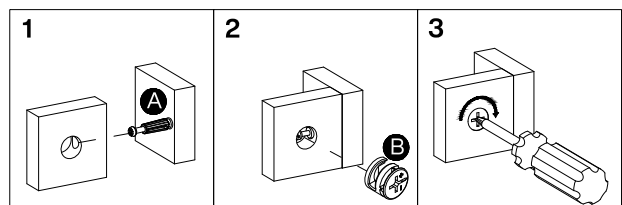
Ø15X12 mm
4 pcs




53

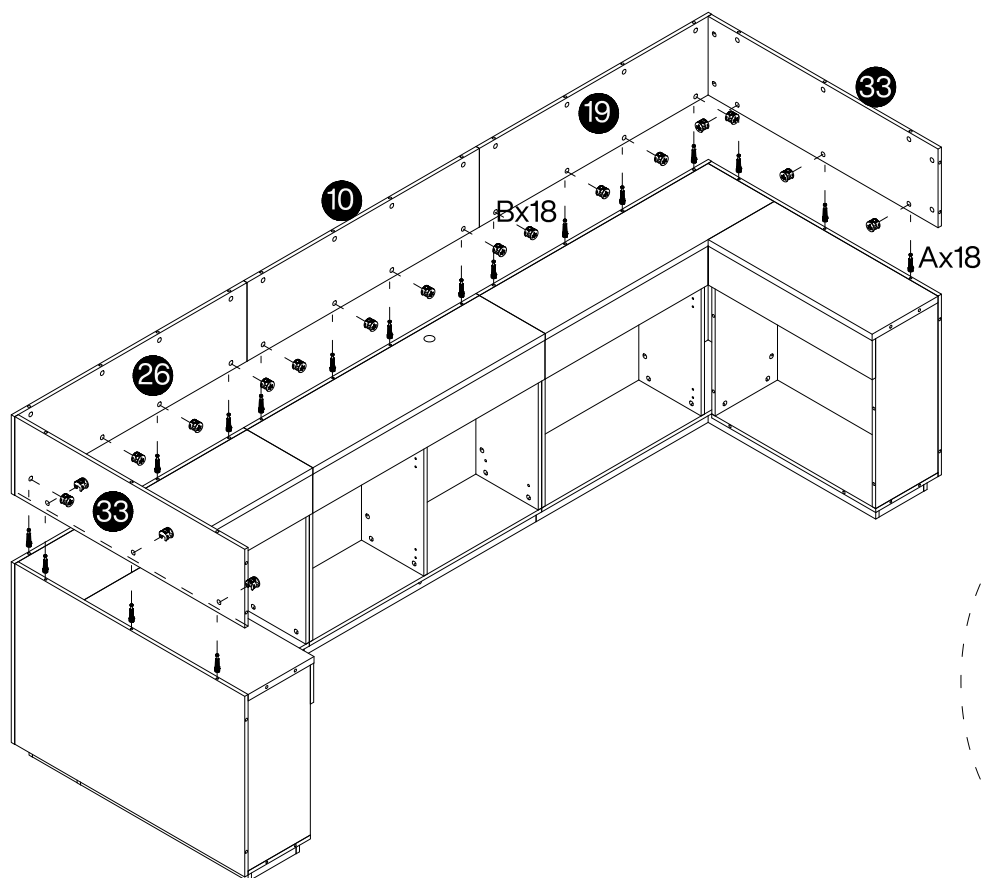

A	B
	
M6x40mm	Ø15X12 mm
18 pcs	18 pcs

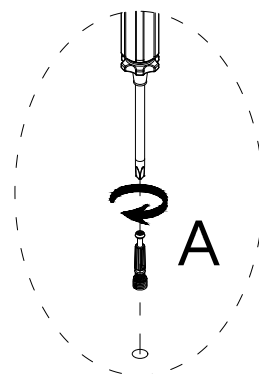


54

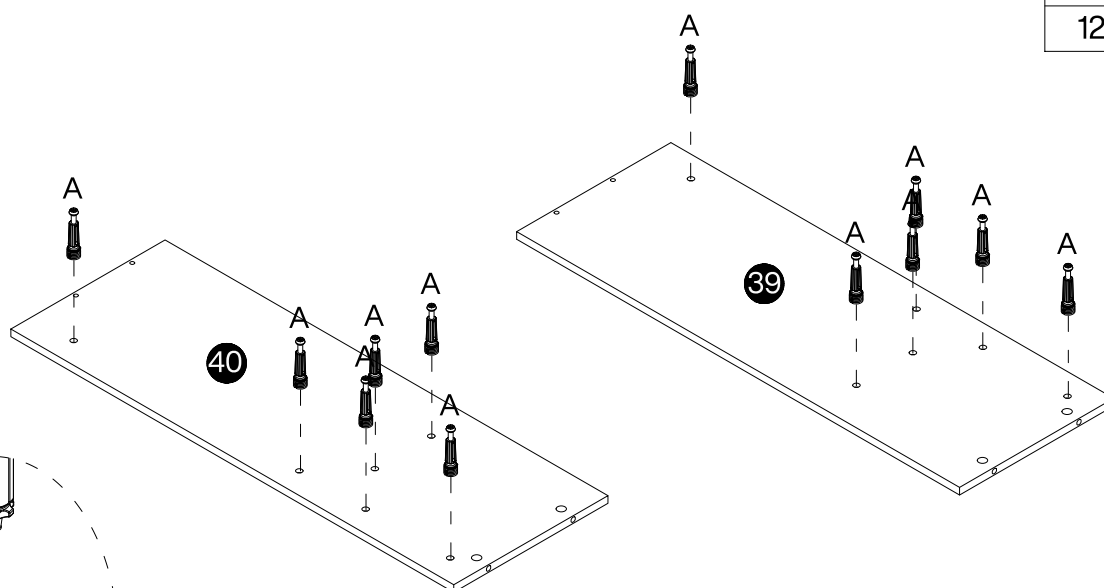


A


M6x40mm
12 pcs

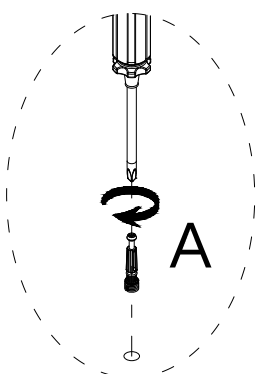


55

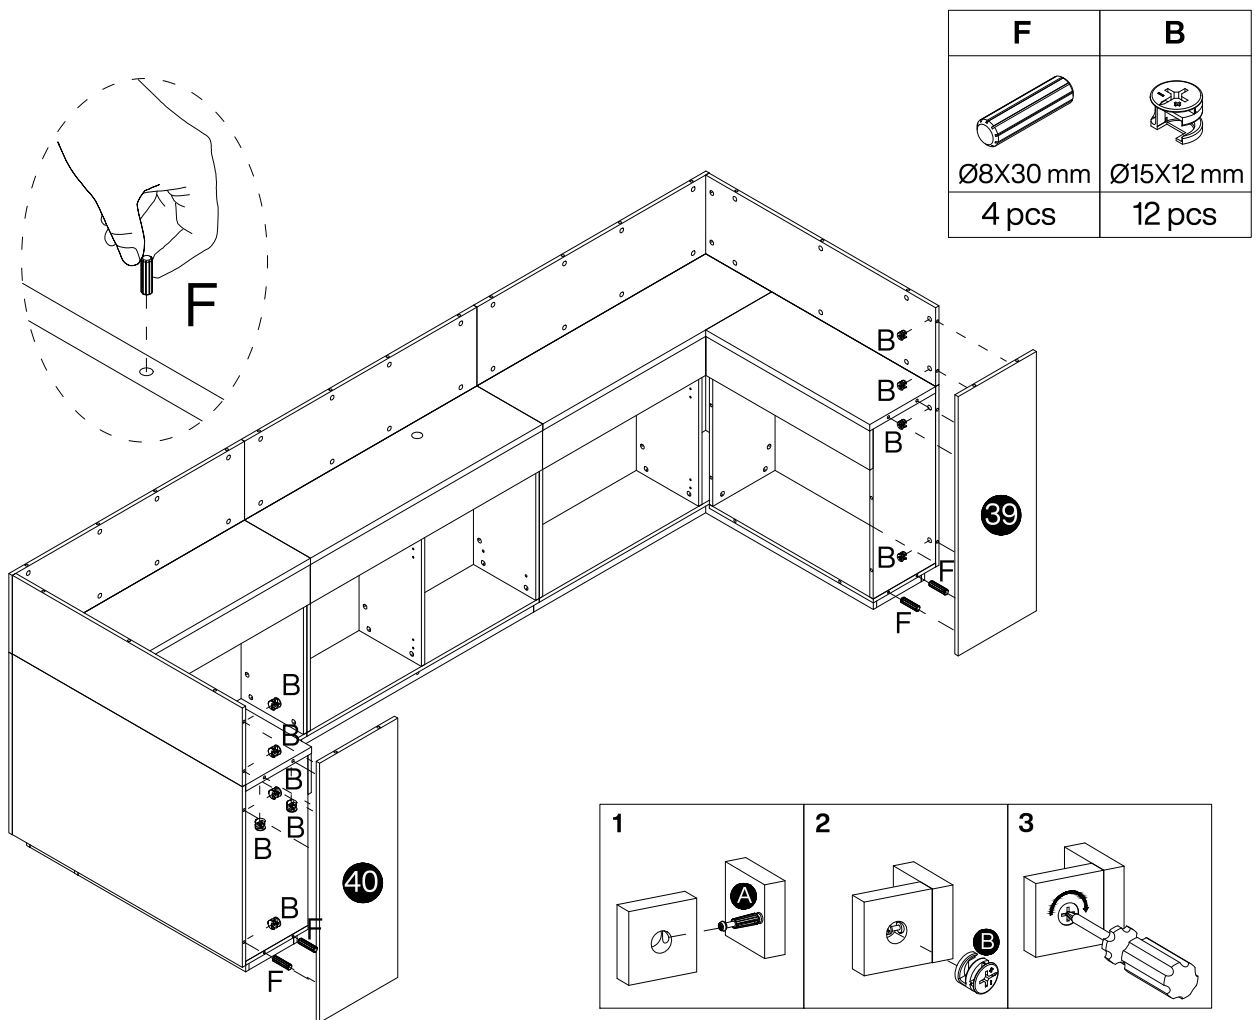

56

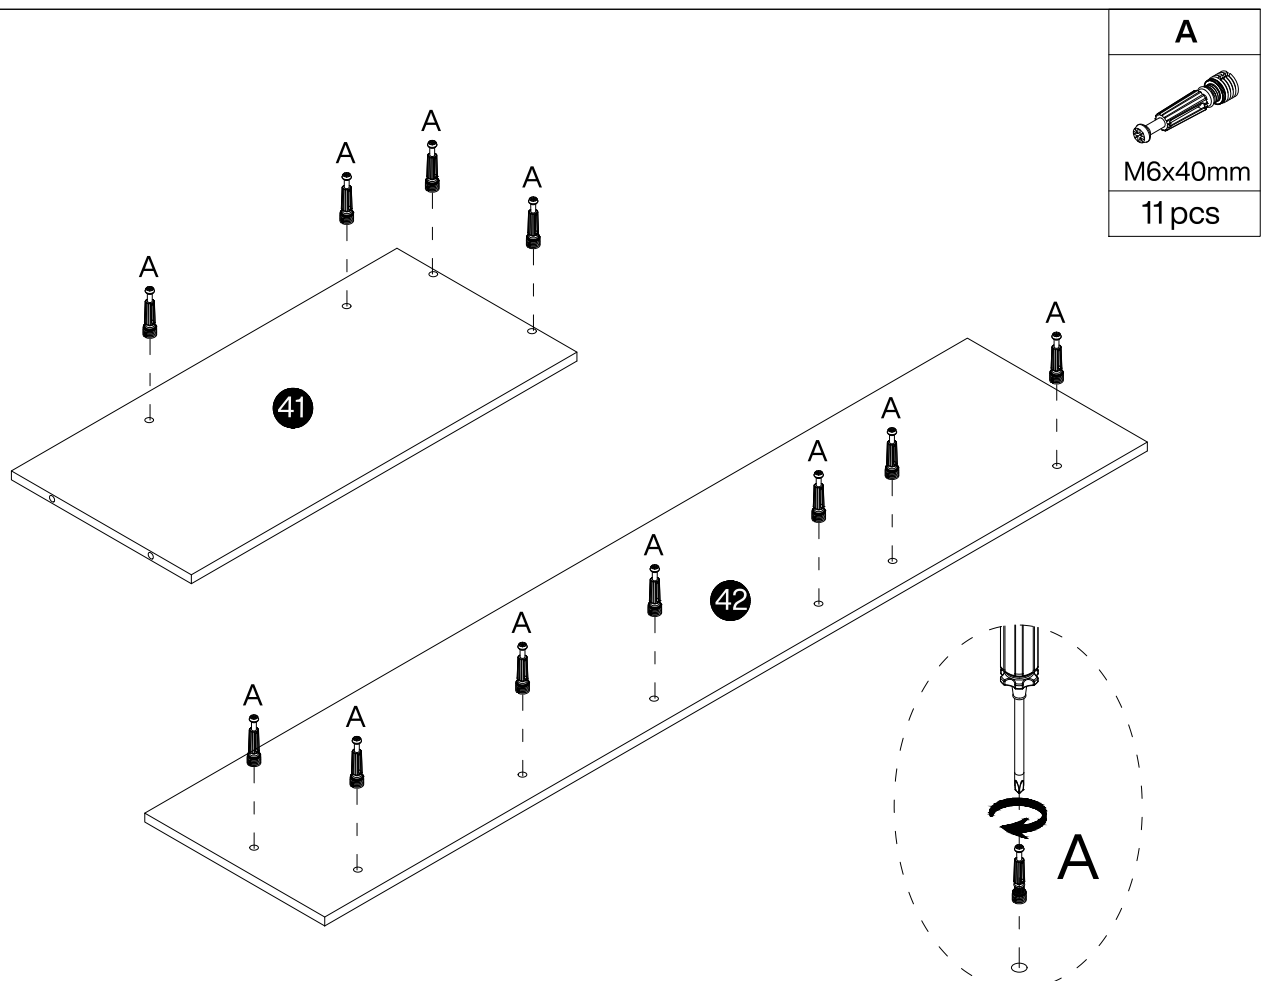


57

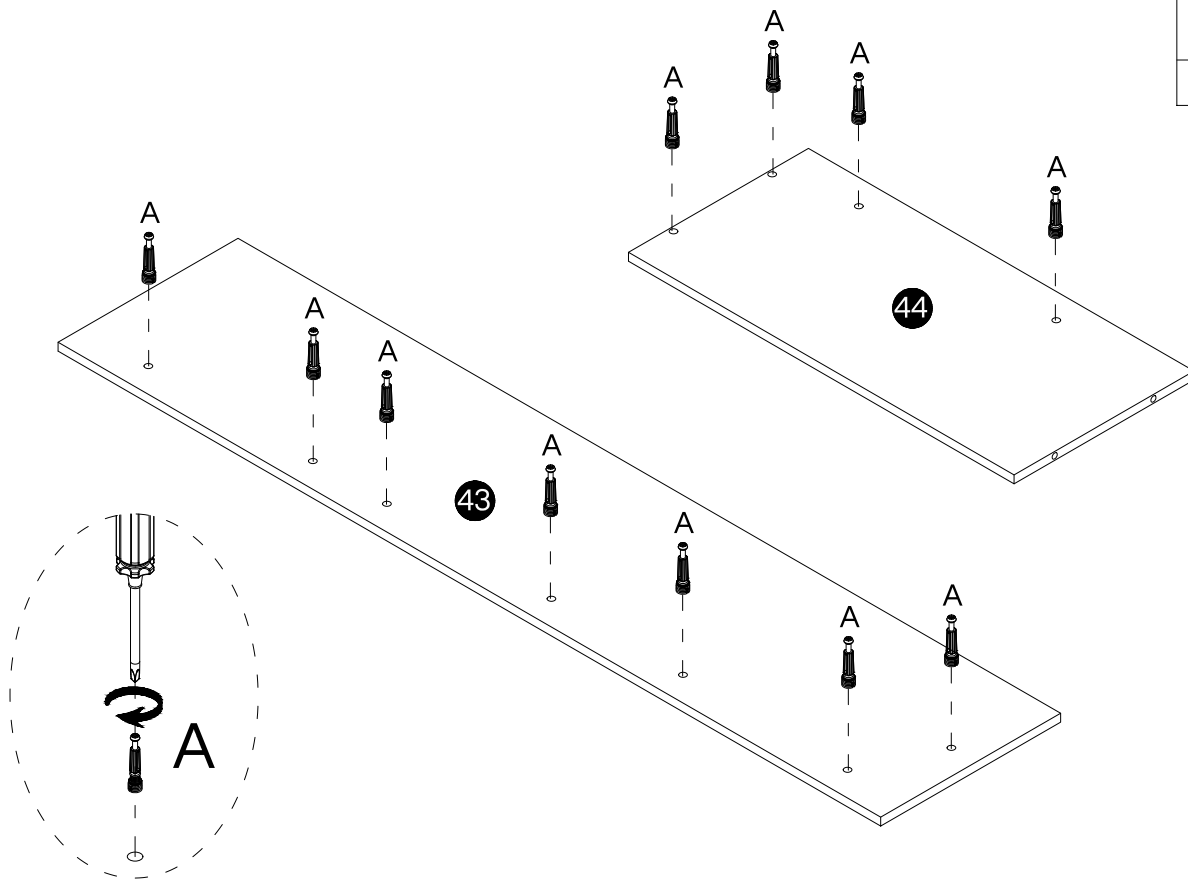


A


M6x40mm
11 pcs

58

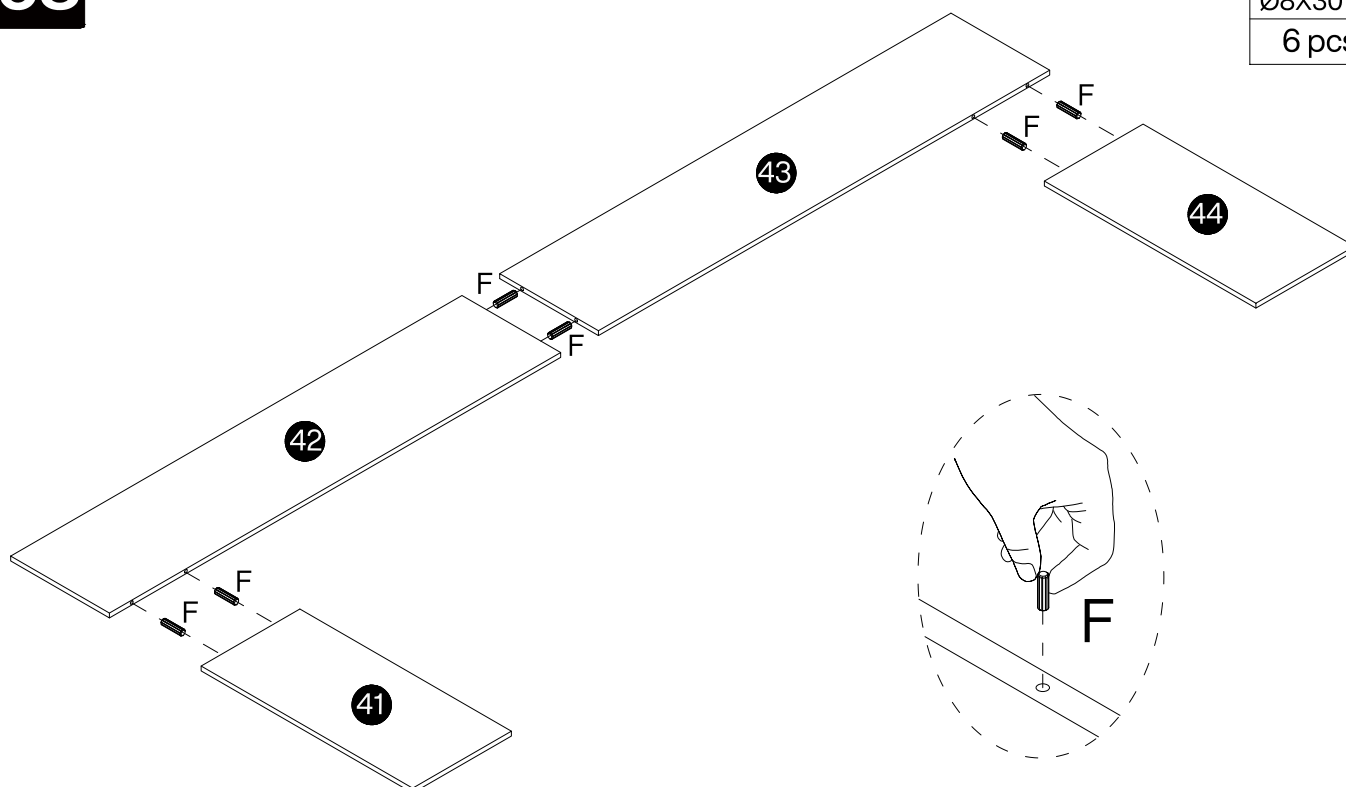


F

Ø8X30 mm
6 pcs

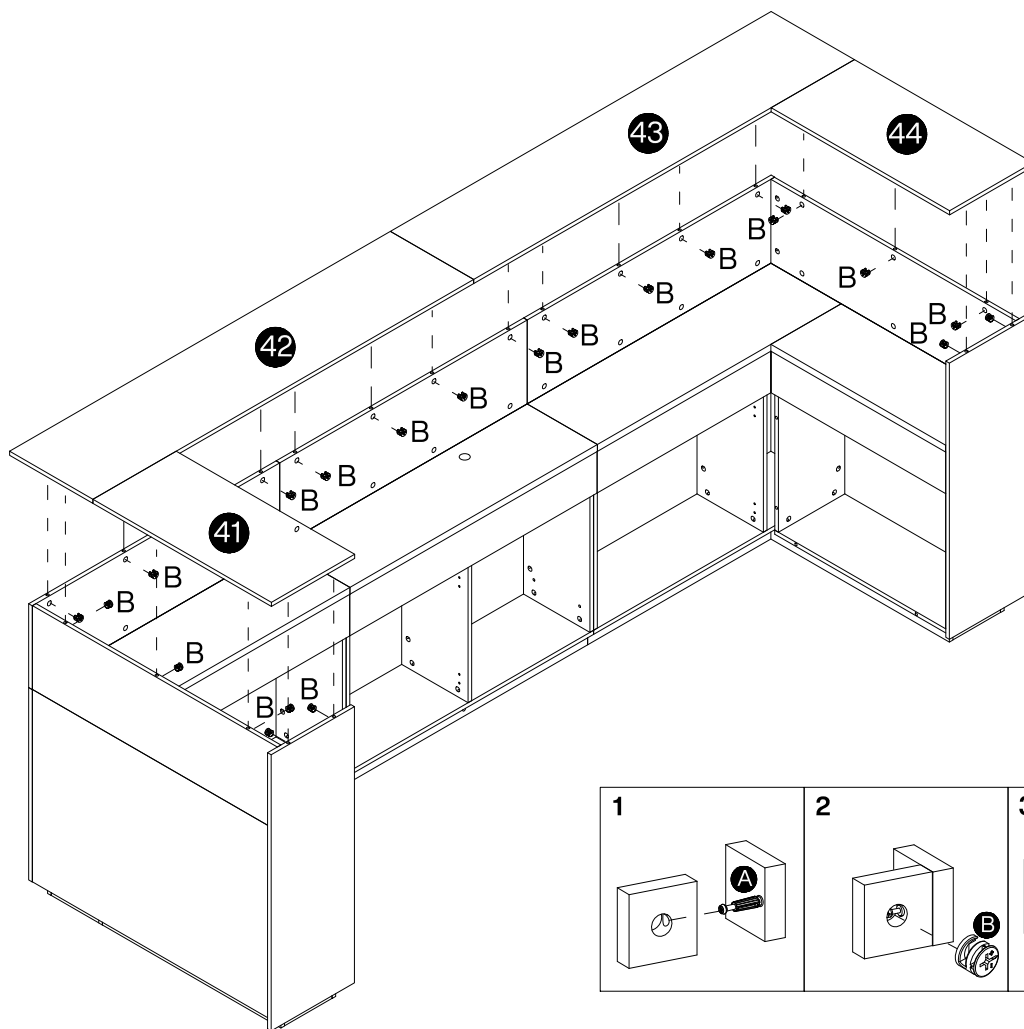59




B

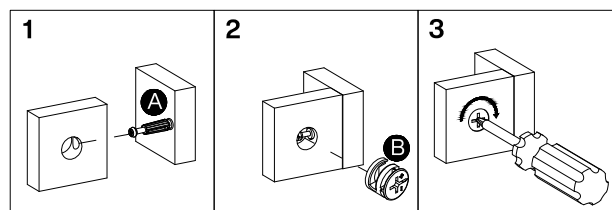
Ø15X12 mm
22 pcs




60

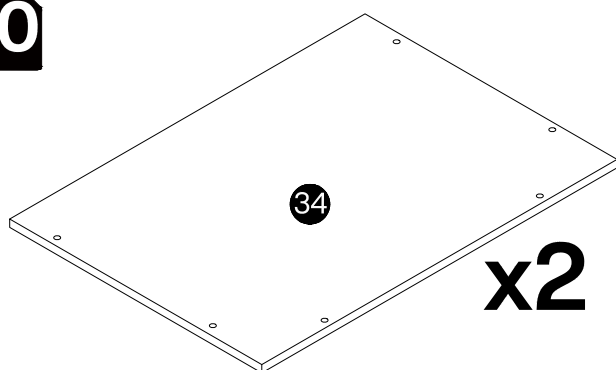

x2

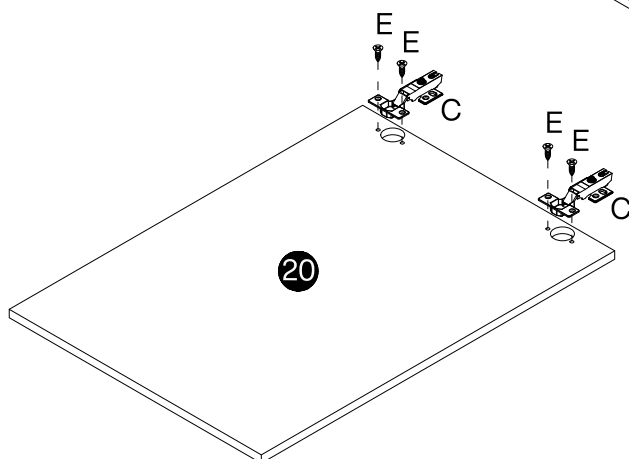




20

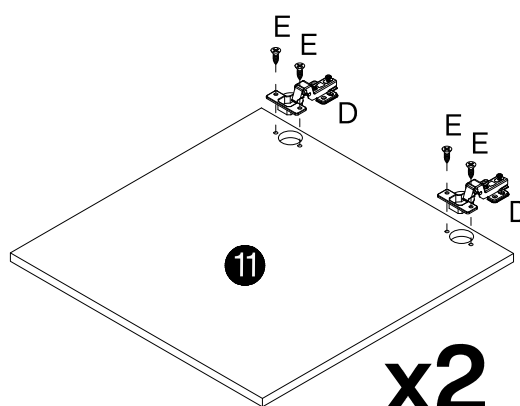

11


x2

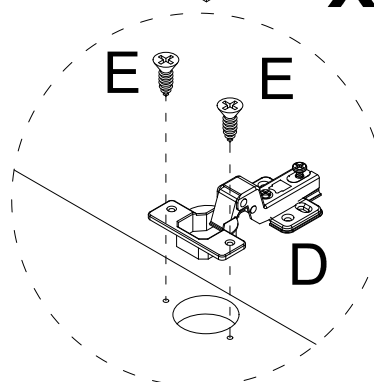

C	D	E
		
4 pcs	4 pcs	16 pcs

Ø3.5x14mm

61

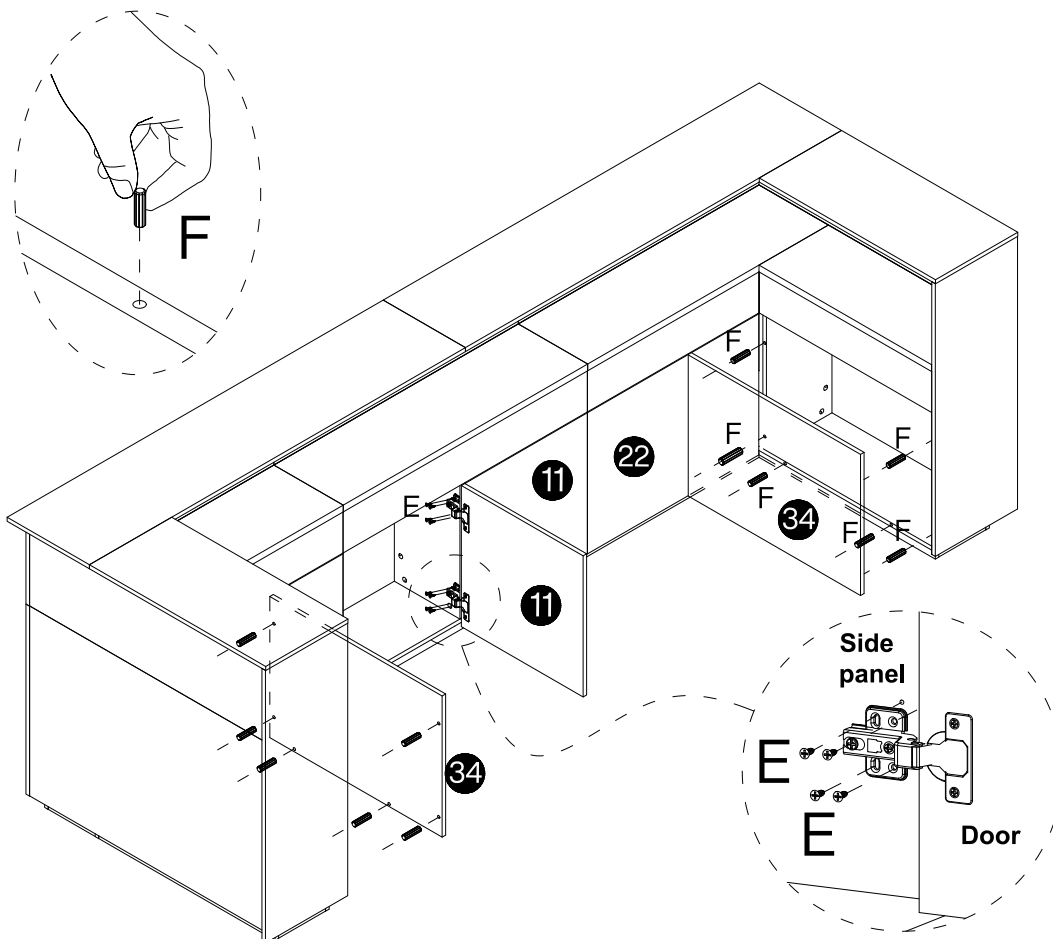


E



Ø3.5x14mm

32 pcs

F




Ø8X30 mm


12 pcs

To prevent the door hinge from falling off, please install 4 screws

62

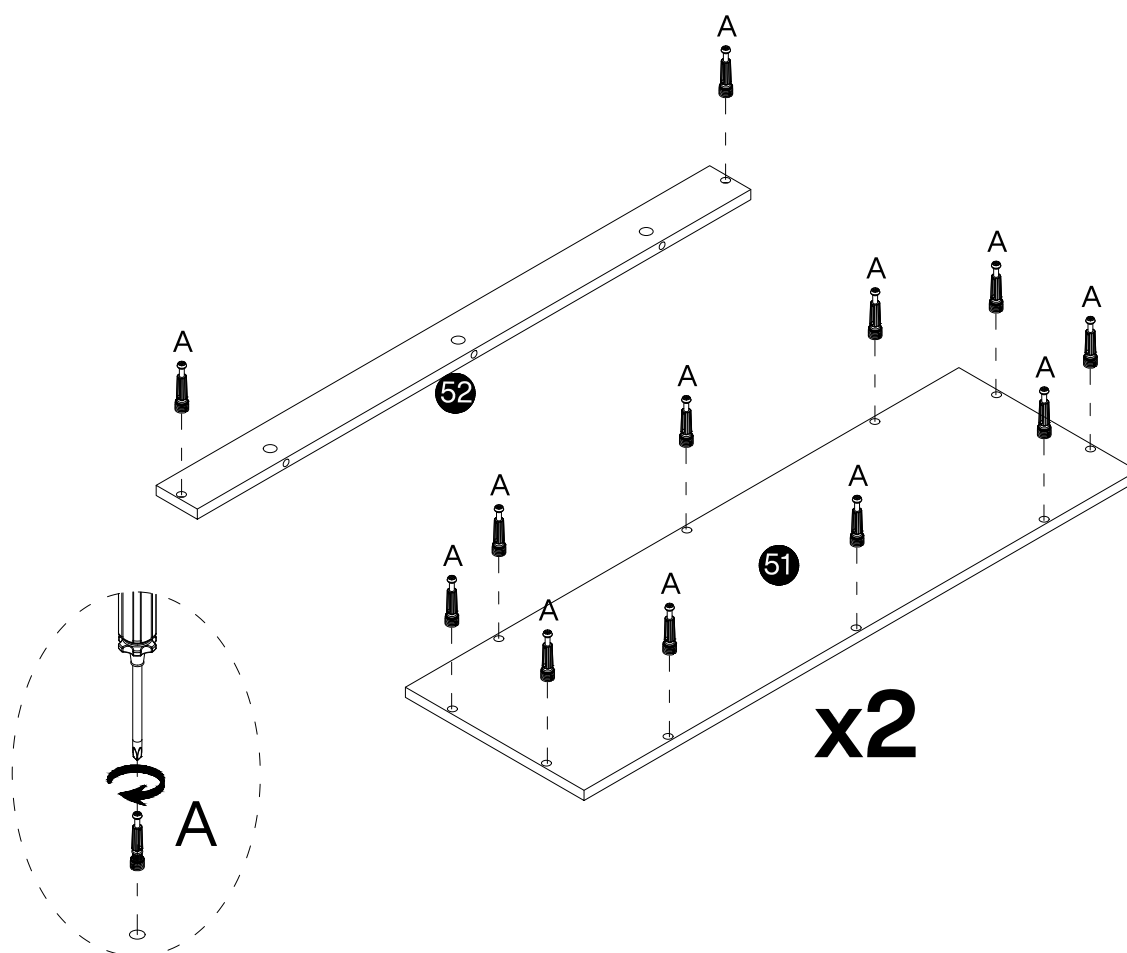


A



M6x40mm


28 pcs

63

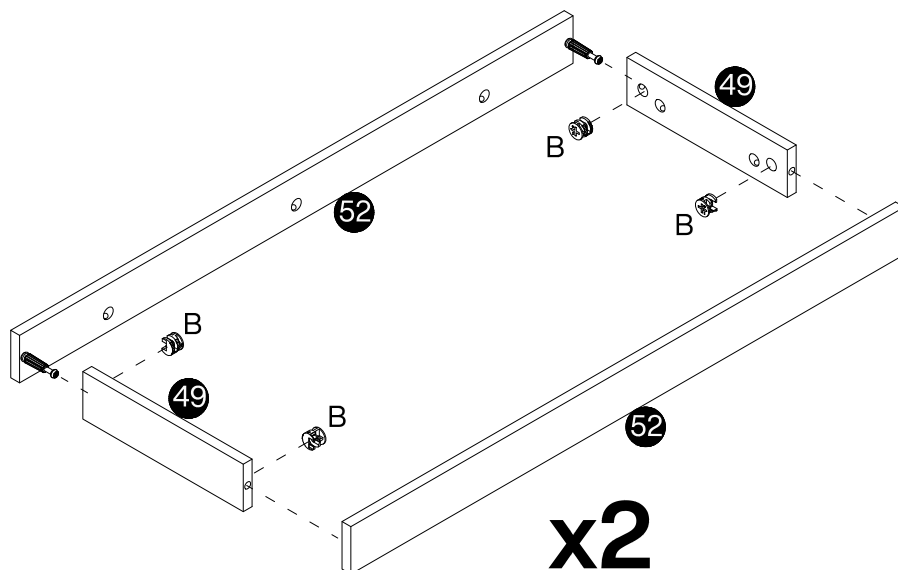


B

Ø15X12 mm
8 pcs

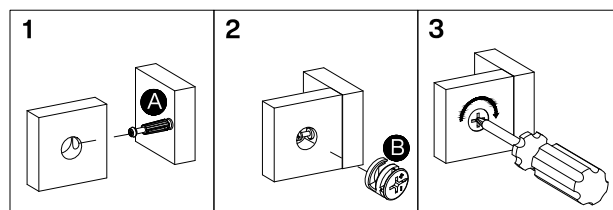


64

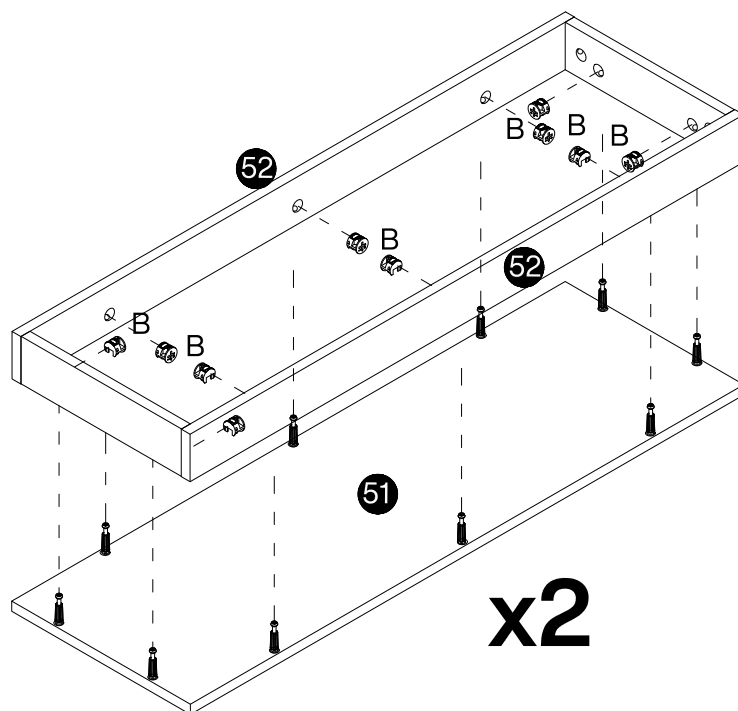


B

Ø15X12 mm
20 pcs

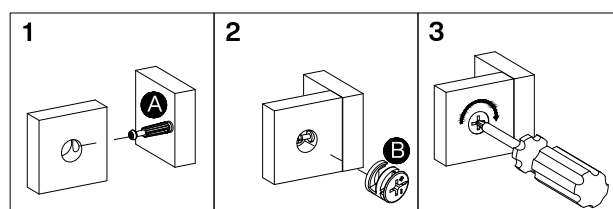

65

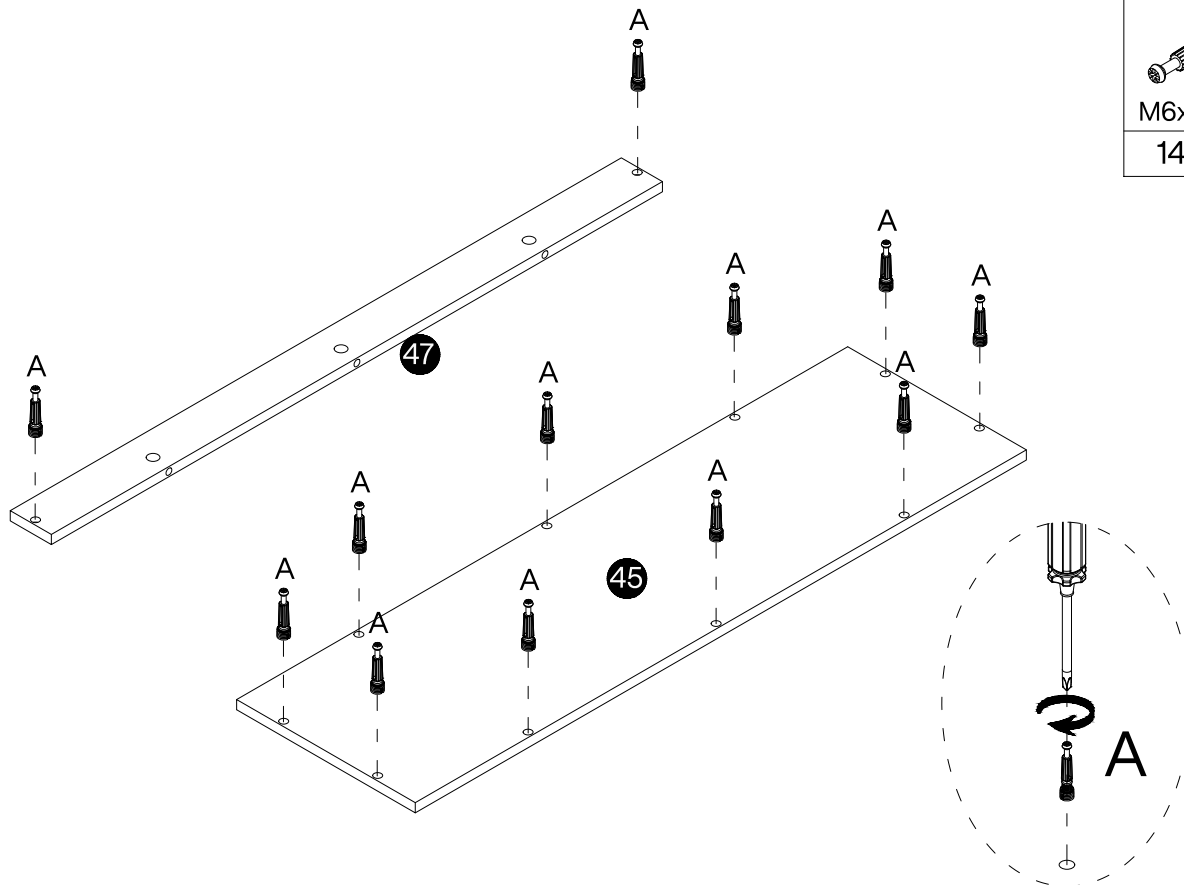


A



M6x40mm

14 pcs

66

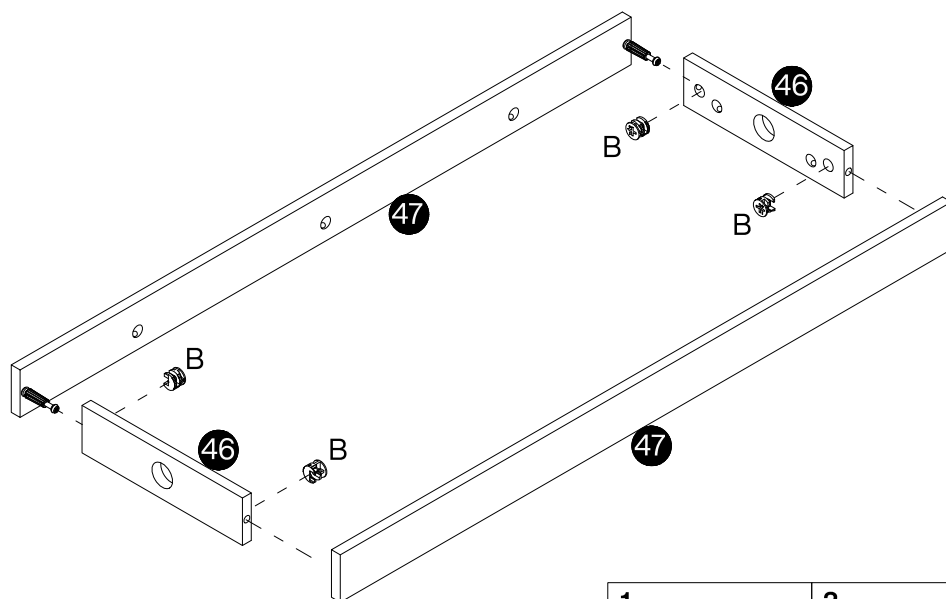


B




Ø15X12 mm

4 pcs

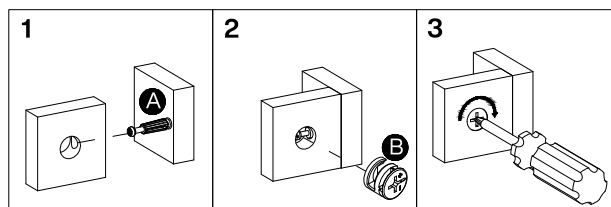


67

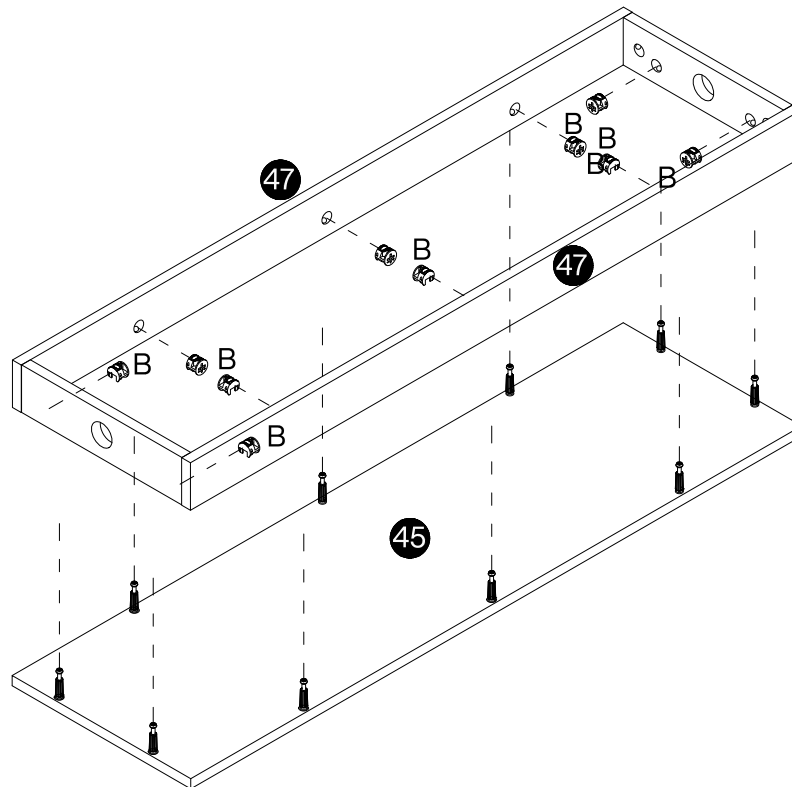

B

Ø15X12 mm
10 pcs


68

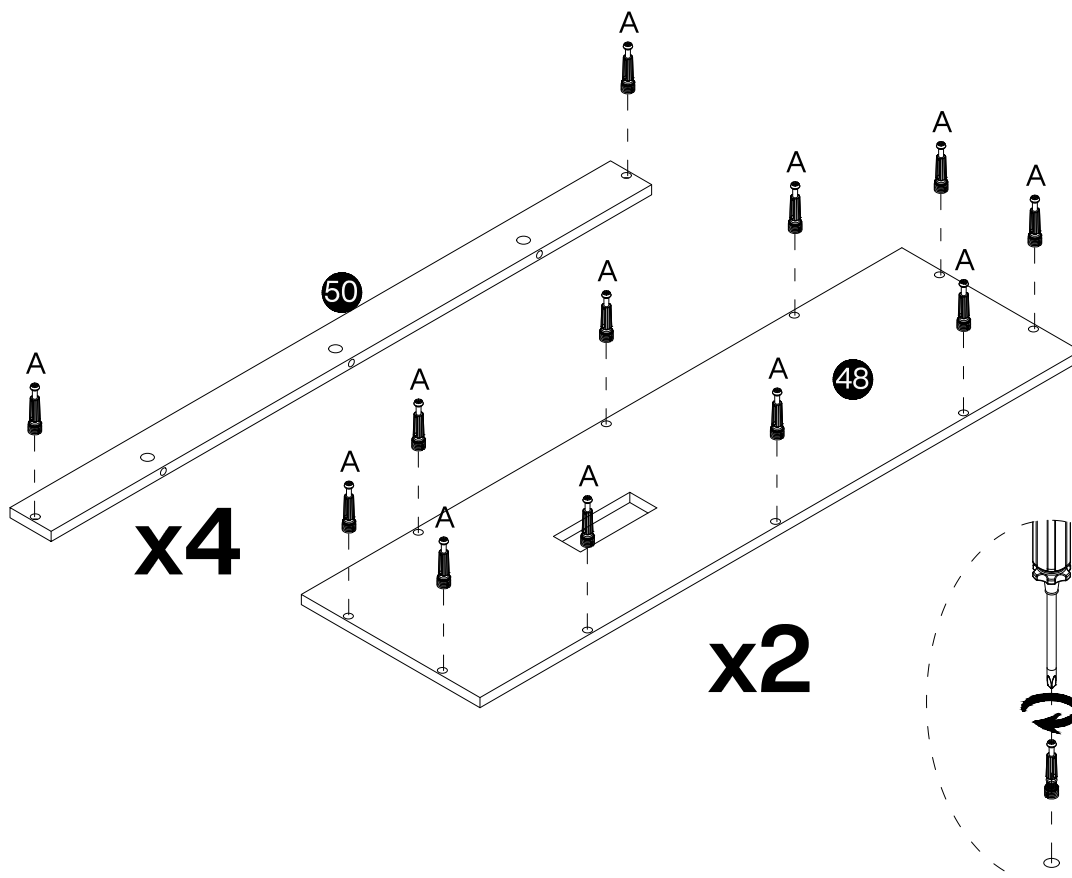

A


M6x40mm
28 pcs

69

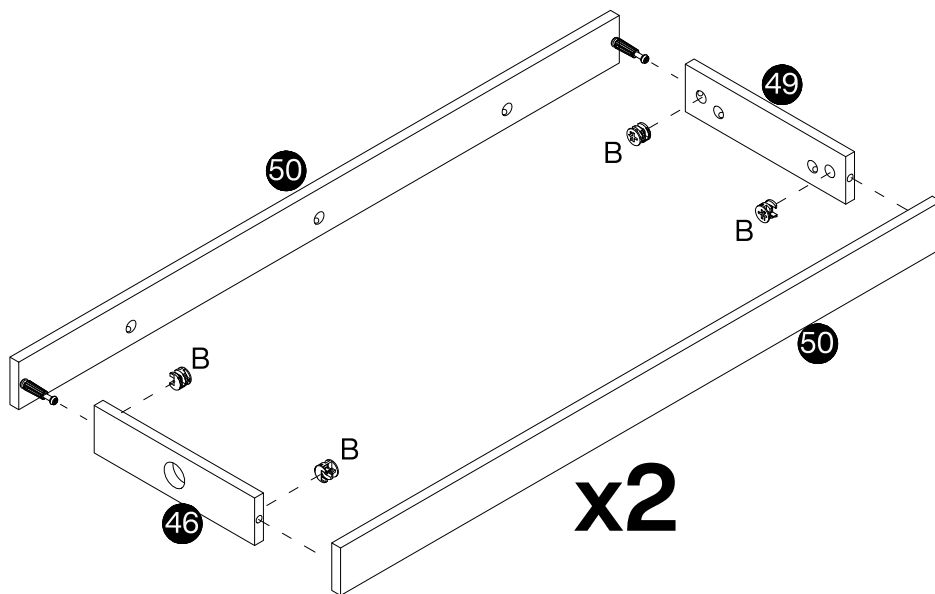


B

Ø15X12 mm
8 pcs

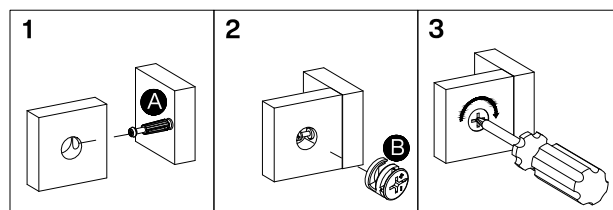


70

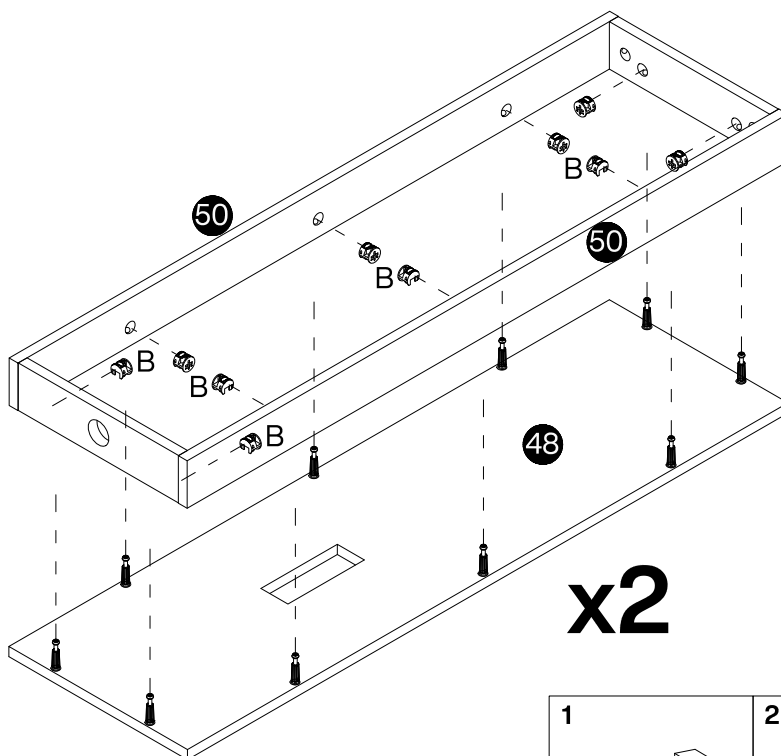



B



Ø15X12 mm
20 pcs

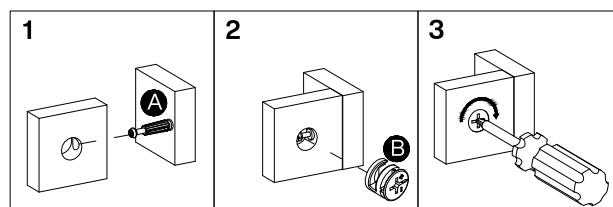


71

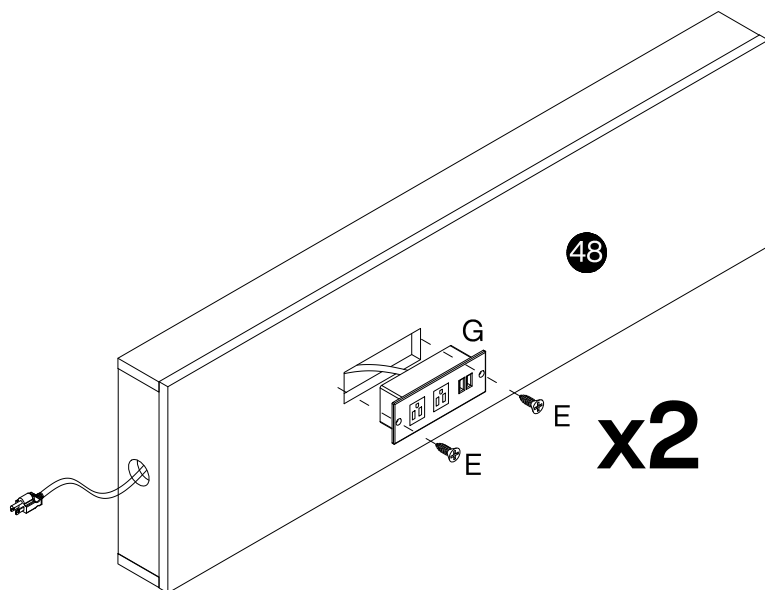


G	E
	
2pcs	4pcs

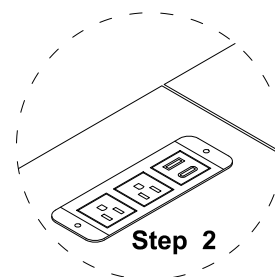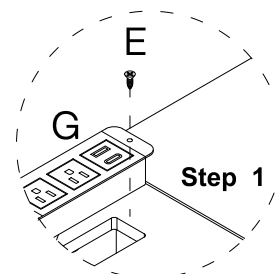


72

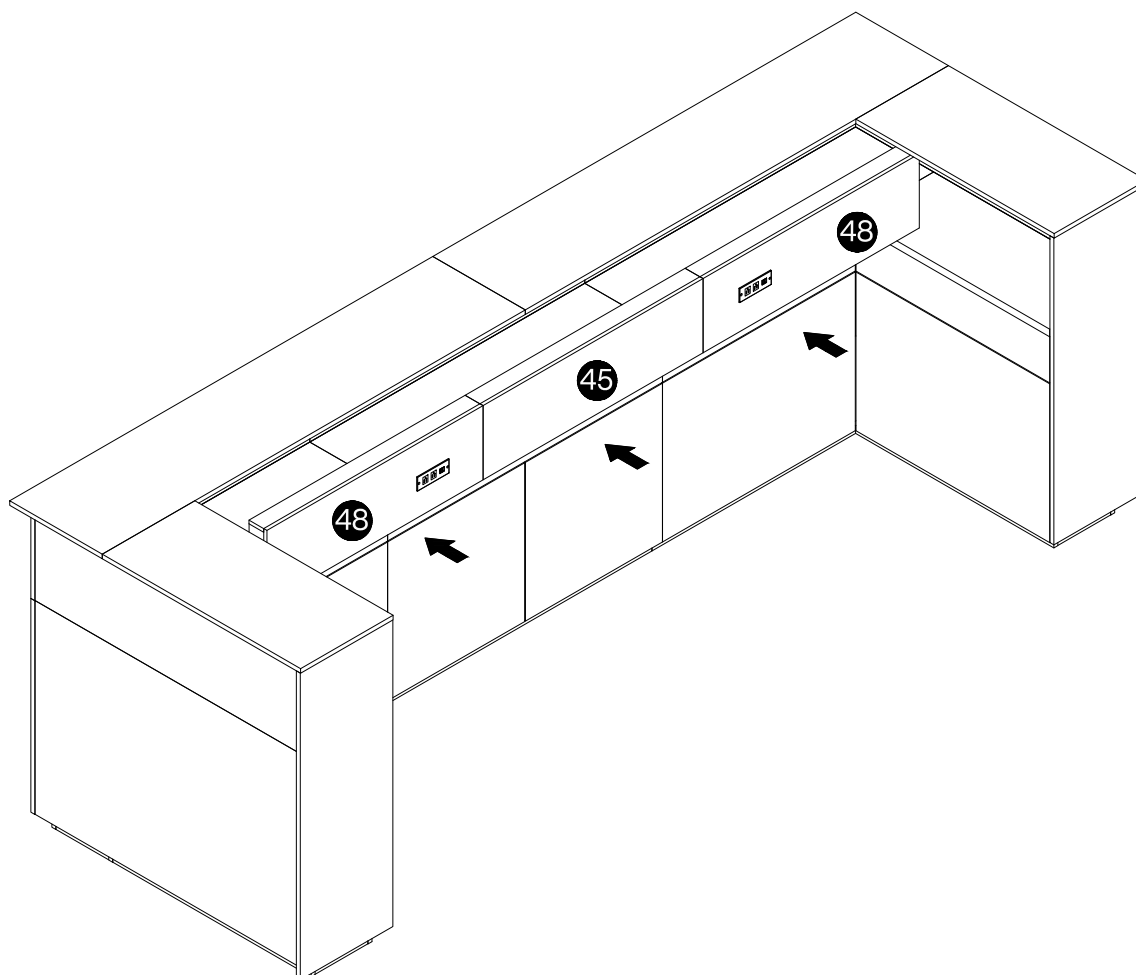


73

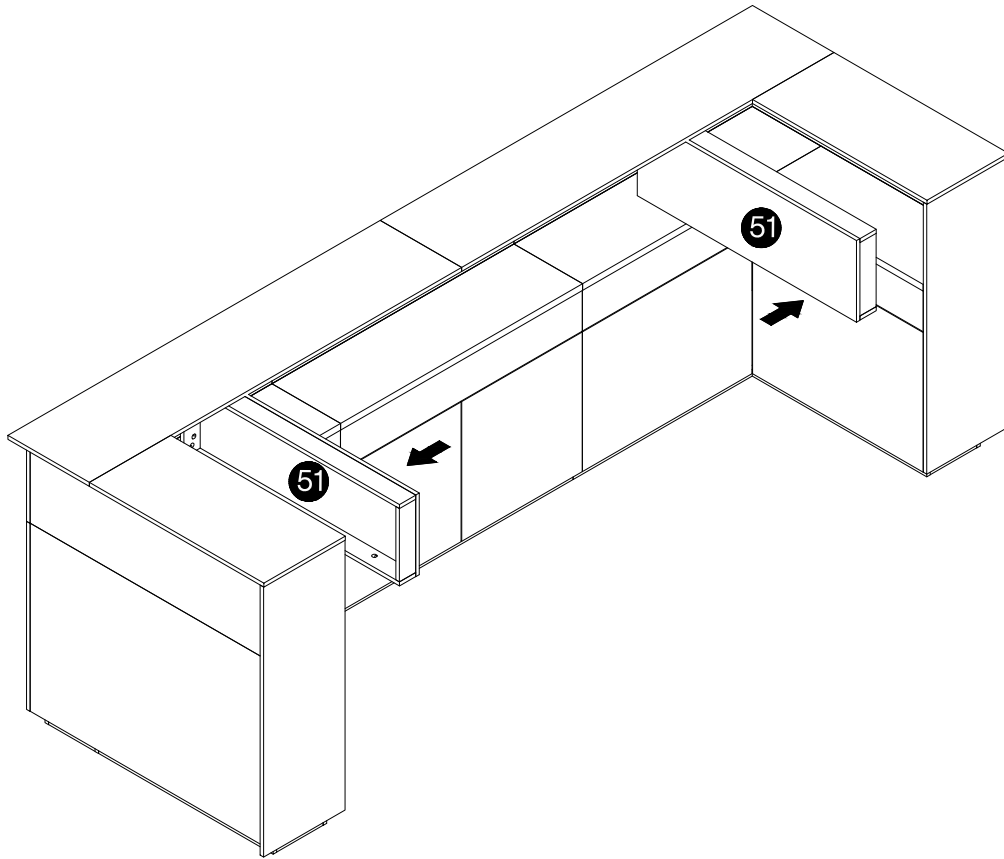

74

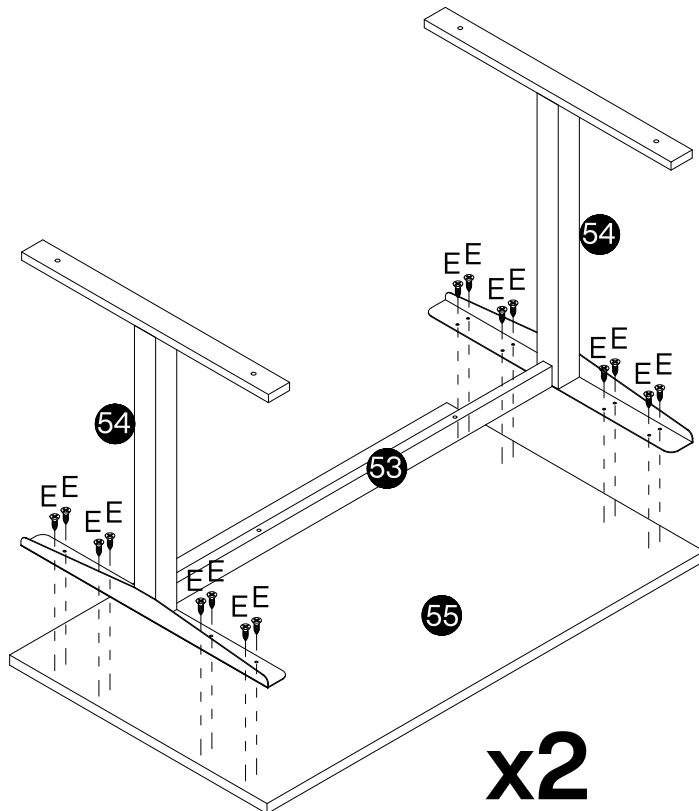


E




Ø3.5x14mm

36pcs

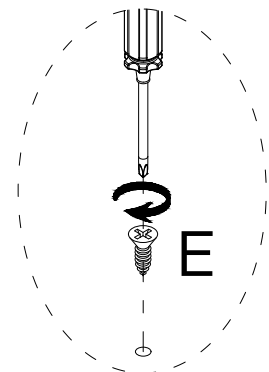


75

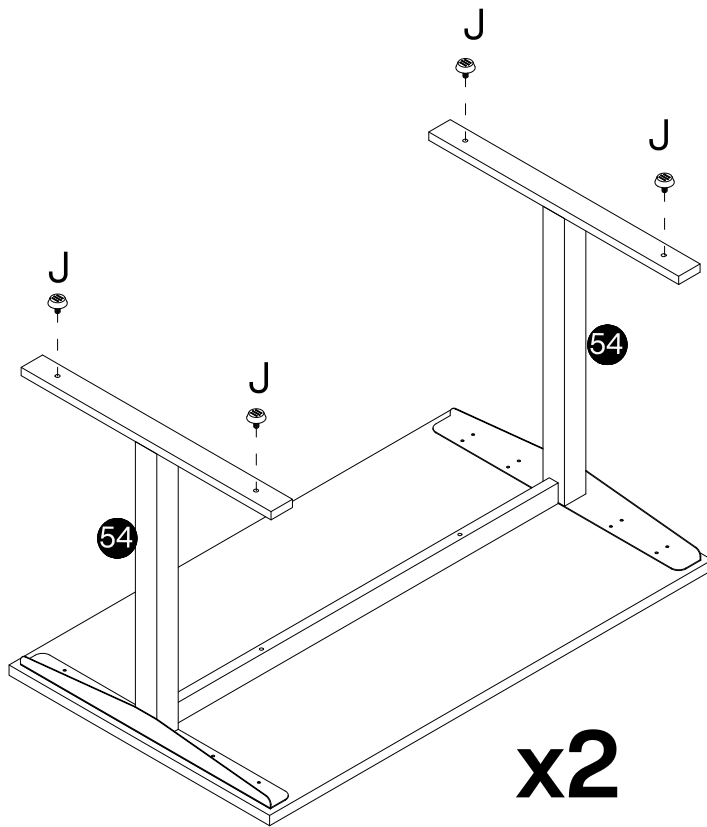



J

M6X14 mm
8 pcs

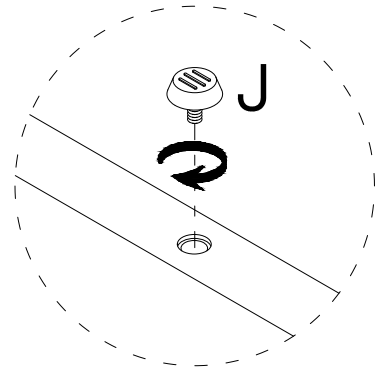

76

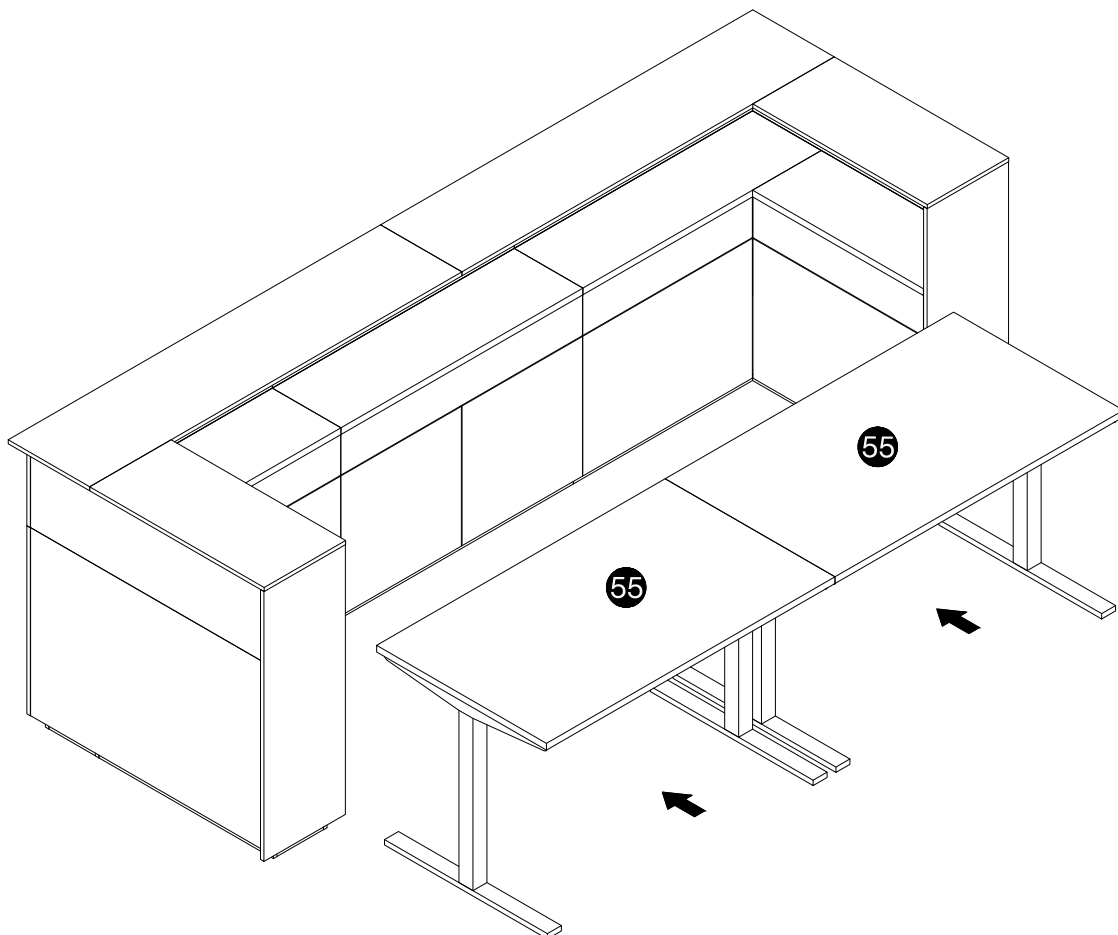

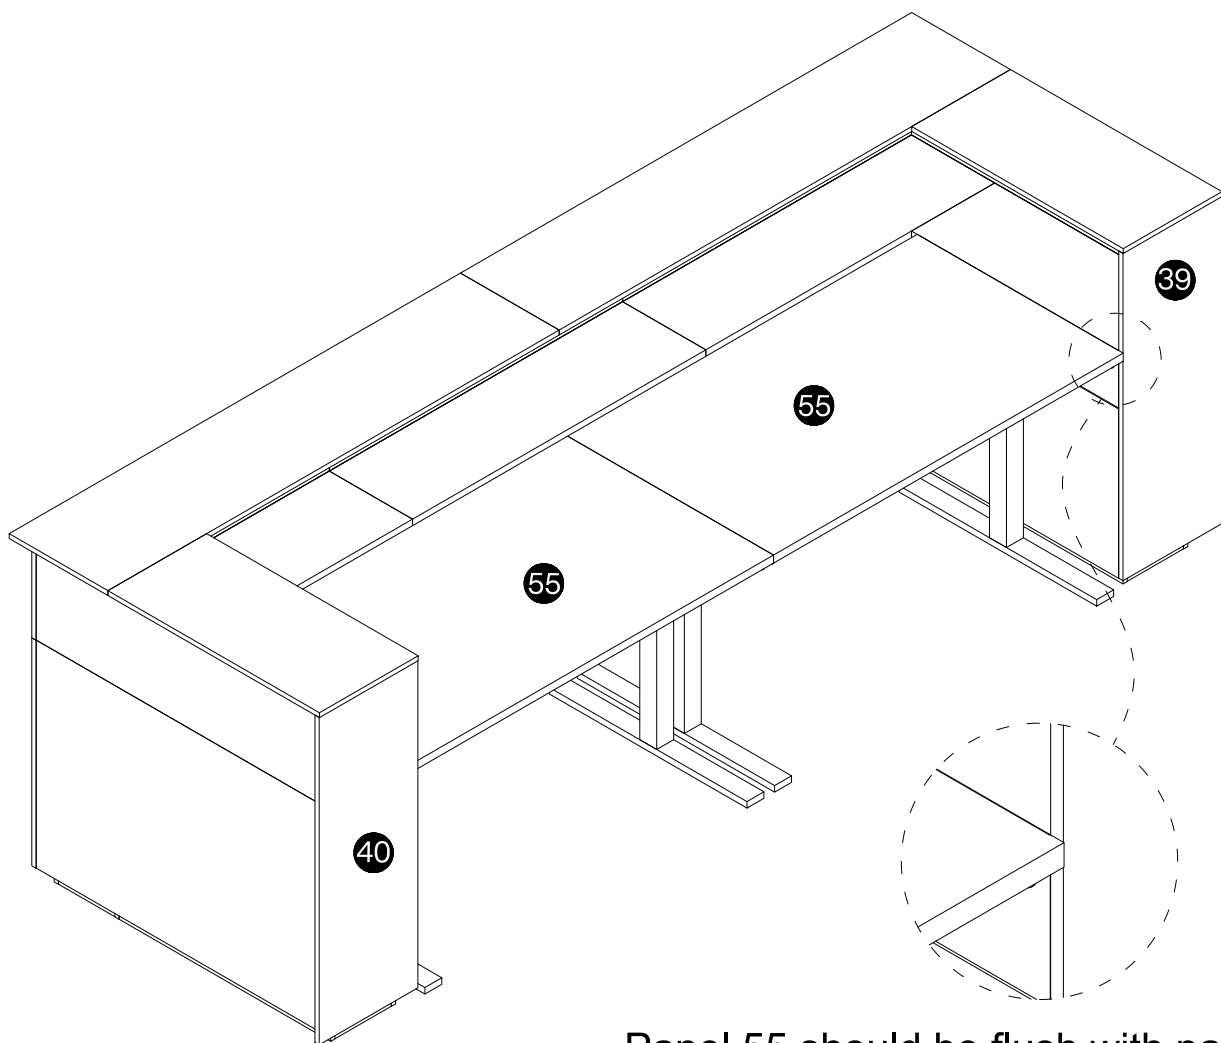

Panel 55 should be flush with panel 39