

## RECLINER CHAIR

with OTTOMAN












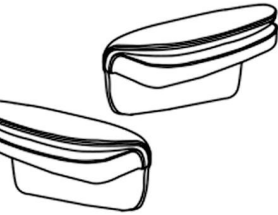
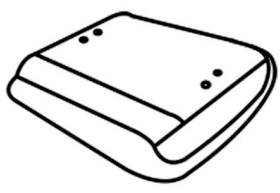
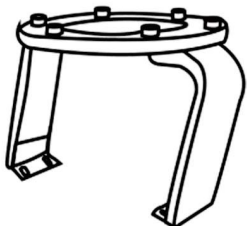

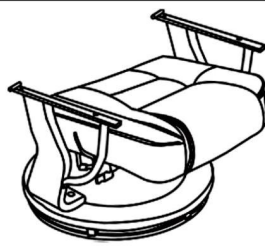
**NOTE:**

Please read carefully before use  
and keep for future reference


# WARRANTY

- All warranties are to the original purchaser
- We will replace the defective parts or send replacement item provided that the warranty parts have not been subjected to misuse, abuse or improper service by the consumer, for example, damaged wire arising in consequence of negligence or improper operation.
- All of recliners come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged item, through provide pre-paid return label or pick up service for customer's convenience.

## PARTS LIST

<b>A</b>  <p>#A x 8 pcs Bolt M6 x20</p>	<b>B</b>  <p>#B x 2 pcs Bolt M8 x 25</p>	<b>C</b>  <p>#C x 4 pcs Bolt M6 x 16</p>	<b>D</b>  <p>#D x 2pcs Large Control Sleeve M8x60</p>	<b>E</b>  <p>#E x 2 pcs Nut M8</p>	<b>F</b>  <p>#F x 1 pc Allen Wrench M4</p>
<b>G</b>  <p>#G x 1 pc Allen Wrench M6</p>	<b>H</b>  <p>#H x 1 pc Wrench</p>	<b>J</b>  <p>#J x 2 pc Armrest Iron Sheet</p>	<b>K</b>  <p>#K x 1 pc Adapter</p>	<b>L</b>  <p>#L x 1 pc Remote Control</p>	
<b>M</b>  <p>#M-L x 1pcs #M-R x 1pcs Left/Right Armrest</p>	<b>N</b>  <p>#N x 1 pc Ottoman top</p>	<b>O</b>  <p>#O x 1 pc Ottoman Base</p>	<b>P</b>  <p>#P x 1pc Back</p>	<b>Q</b>  <p>#Q x 1pc Chair Base</p>	

**Please remove all protective foam.**

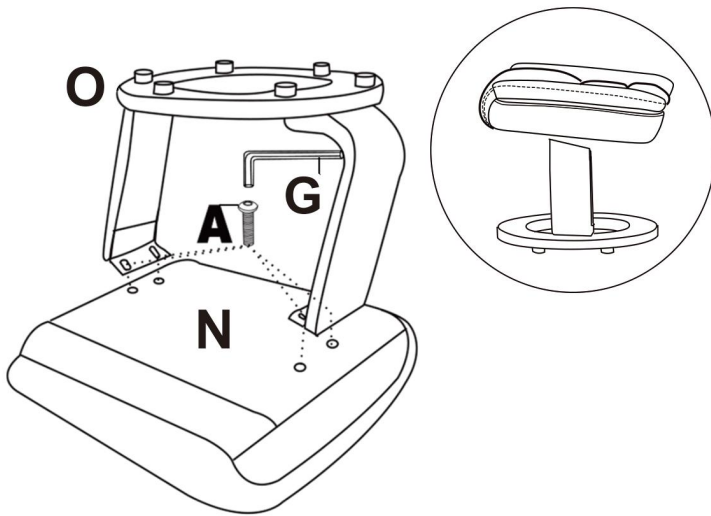



### Step 1

Install the ottoman top cushion (#N) to the ottoman base (#O) with bolts (#A), tighten with allen wrench (#G).

Please pay attention to the direction of base and top as shown in the figure.


### Step 2

1. Please place the chair base (#Q) on flat ground. Align the backrest (#P) with the base for mounting.
2. Align the iron holes of the back and base, and then fix the screw (#B) and nut (#E) with wrench (#H) and allen wrench (#G).

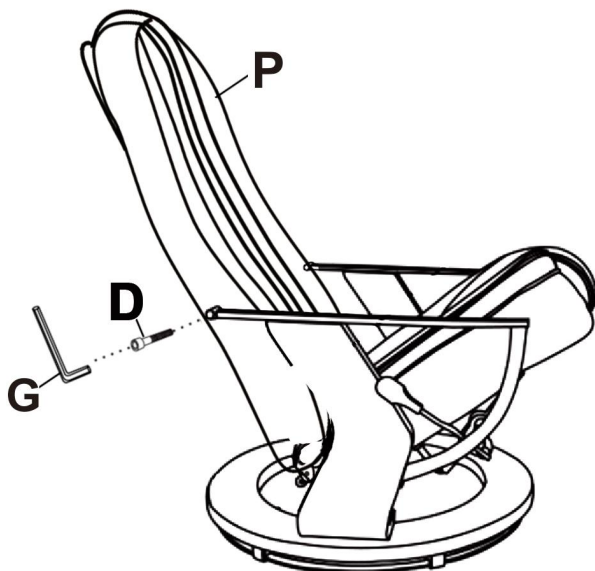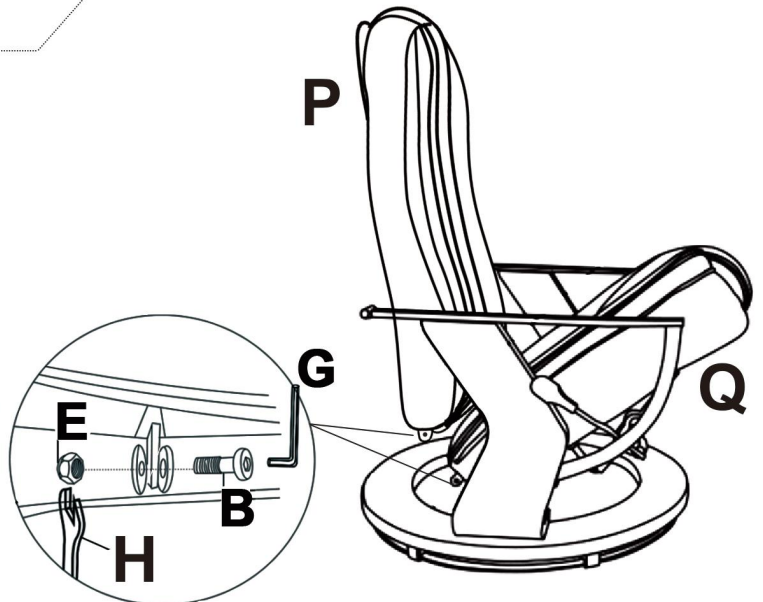

### Step 3

Securely fix the back (#P) to the arm frame with bolts (#D), then tighten with allen wrench (#G).

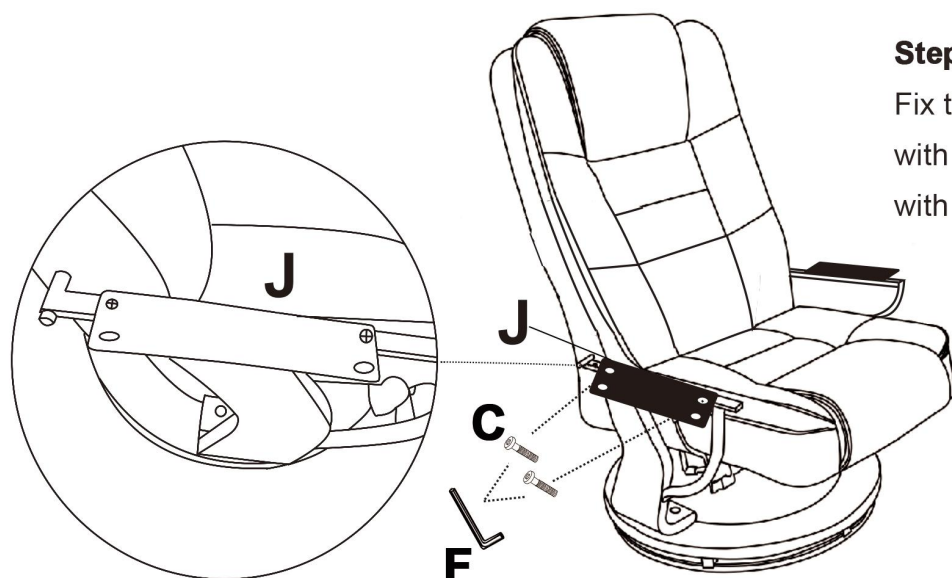


#### Step 4

Fix the inner hole of the iron sheet (#J) with screws (#C) on the armrest frame with a wrench (#F).

#### Step 4

Fix the left and right armrests (#M) and the outer holes of the iron sheet (#J) with screws (#A) with the wrench (#G).

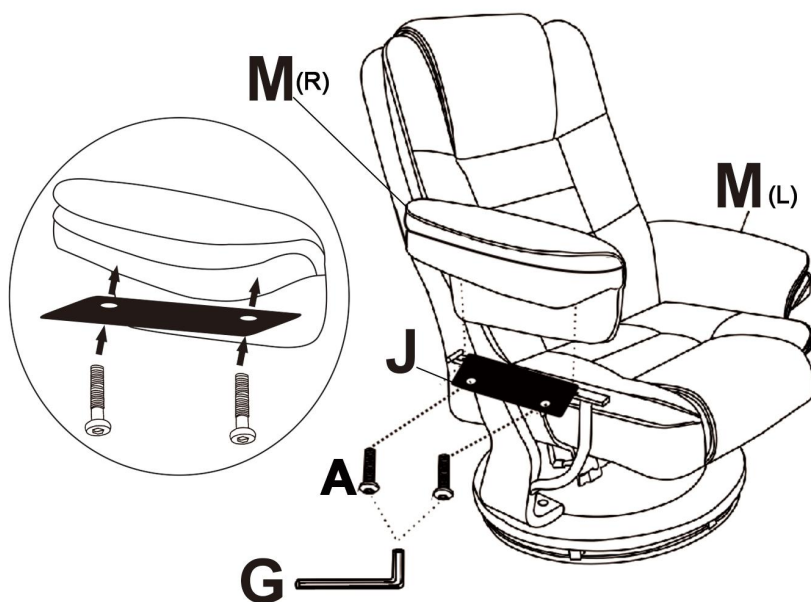

#### Step 6

**Connect three wires,**

1. Adapter (#K): Connect to the small black connector of the chair.
2. Remote Control (#L): Connect two large black connectors.
3. Vibrating Power Cord: Connect two small white connectors.

