
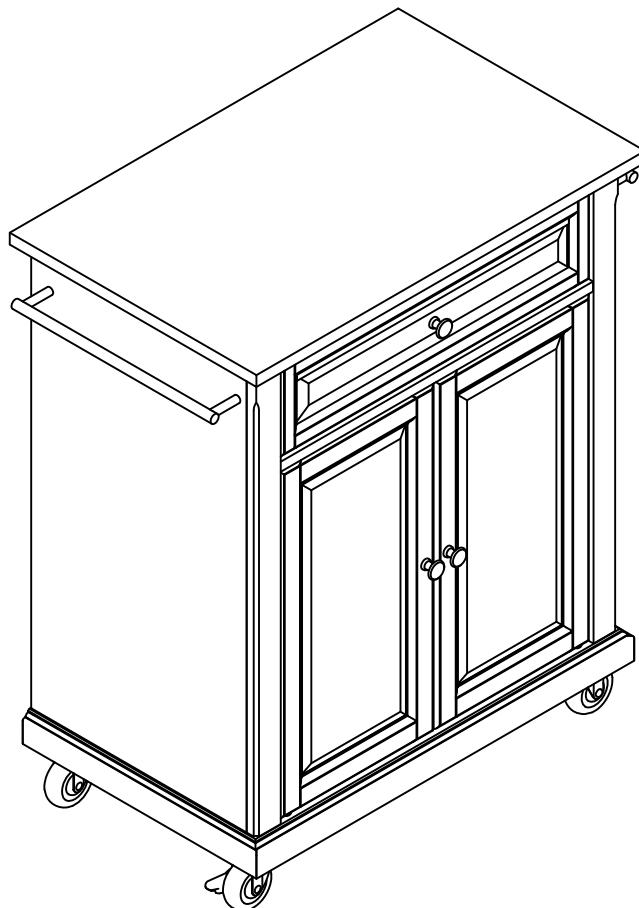
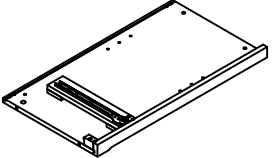
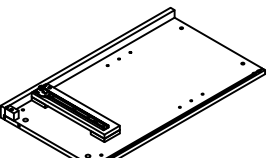
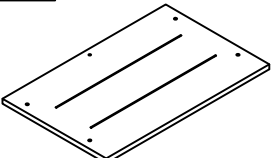
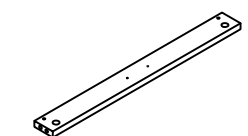
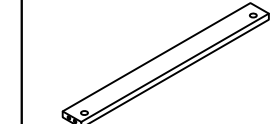
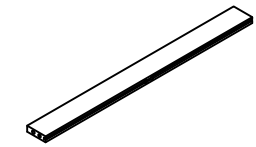
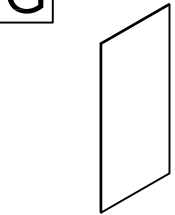
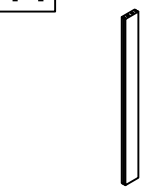
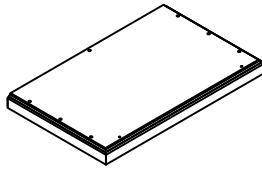
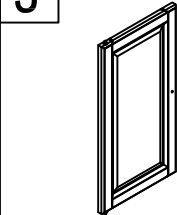
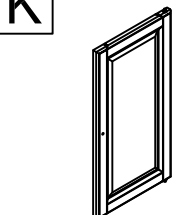
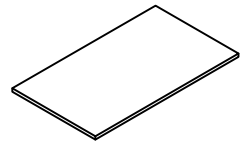



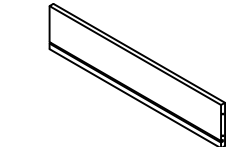
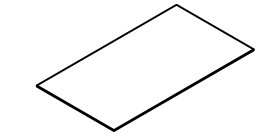
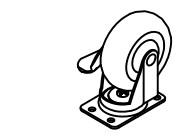
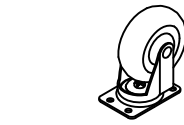
















Kitchen Cart / Island



PART LIST


A 	B 	C  (Ships Separately)	D 	E 
Left Panel 1 PC	Right Panel 1 PC	Top Panel 1 PC	Front Middle Rail 1 PC	Front Top Rail 1 PC
F 	G 	H 	I 	J 
Back Rail 2 PCS	Back Panel 2 PCS	Back Vertical Rail 1 PC	Bottom Panel 1 PC	Left Door Panel 1 PC
K 	L 	M 	N 	O 
Right Door Panel 1 PC	Adjustable Shelf 1 PC	Drawer Front Panel 1 PC	Drawer Left Panel 1 PC	Drawer Right Panel 1 PC
P 	Q 	R 	S 	T 
Drawer Back Panel 1 PC	Drawer Bottom Panel 1 PC	Locking Caster 2 PCS	Caster 2 PCS	Towel Bar 2 PCS

HARDWARE LIST
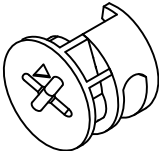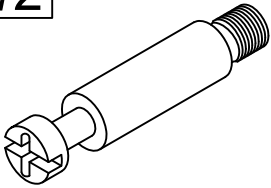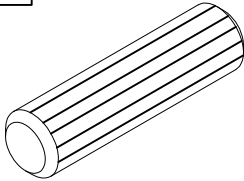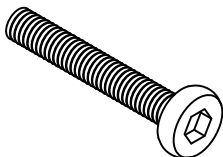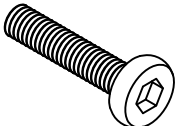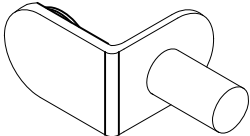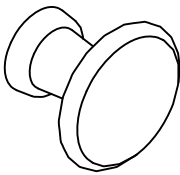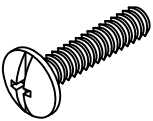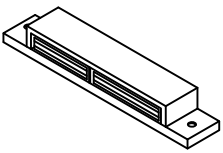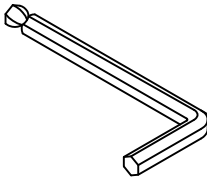
#1 	#2 	#3 	#4 
Cam Lock 12 PCS (Extra 2)	Cam Bolt 12 PCS	Wood Dowel 16 PCS	Allen Bolt 4 PCS
#5  1-1/4" x 1/4" D11mm	#6 	#7 	#8 
Short Allen Bolt 4 PCS	Screw 8 PCS (Extra 1)	Barrel Nut 4 PCS	Shelf Holder 4 PCS
#9 	#10 	#11  12mm x Ø4 x D9mm	#12 
Knob 3 PCS	Round Head Bolt 3 PCS	Large Round Head Screw 16 PCS (Extra 1)	Double Magnet 1 PC
#13 	#14 		
Round Head Screw 2 PCS (Extra 1)	Allen Wrench 1 PC		

ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.

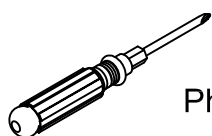


Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #2) into left panel (part A), right panel (part B) and top panel (part C) using phillips head screwdriver.

NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

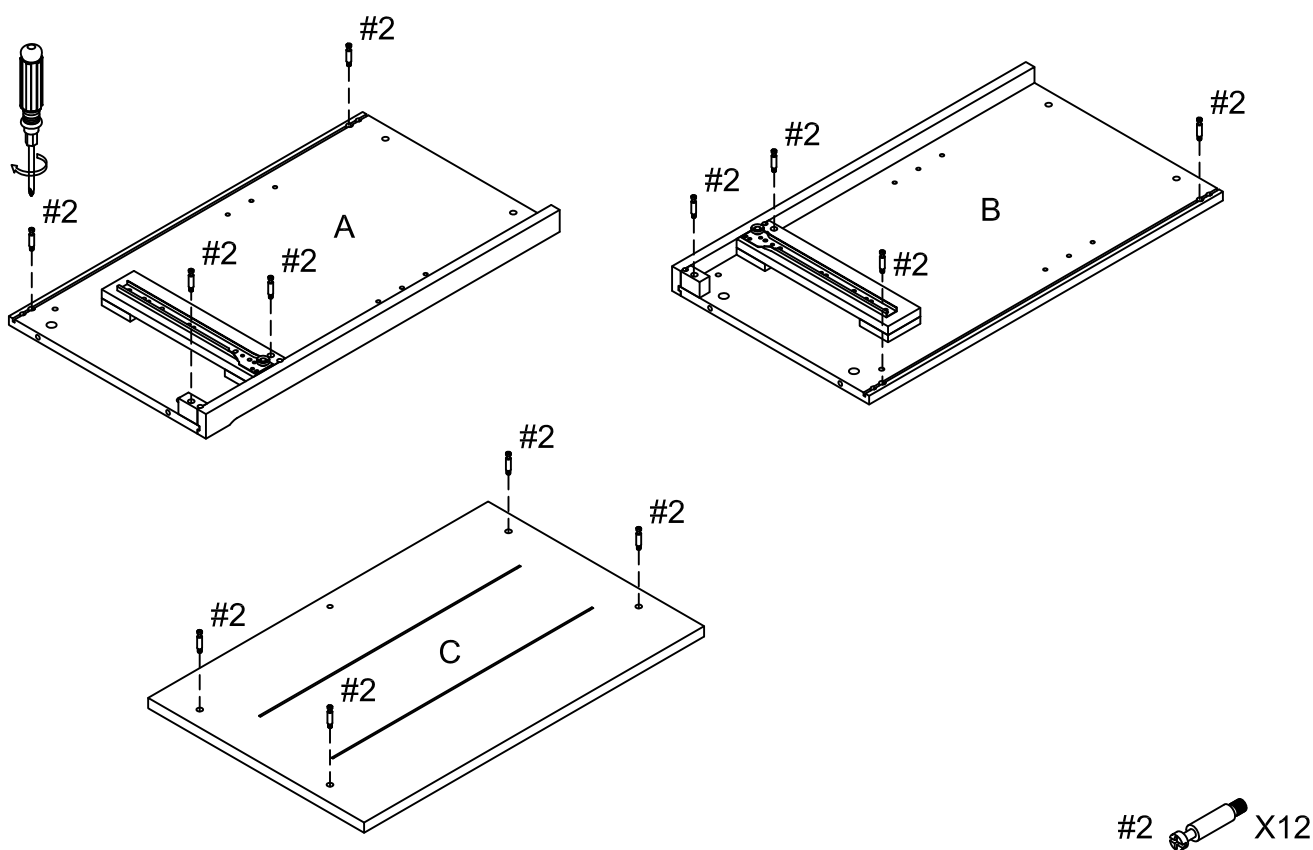


Step 2. Attach rails (parts D, E & F) to right panel (part B) using cam locks (part #1) and wood dowels (part #3).

NOTE: Cam locks must rotate a full 180°. See pictured insert.

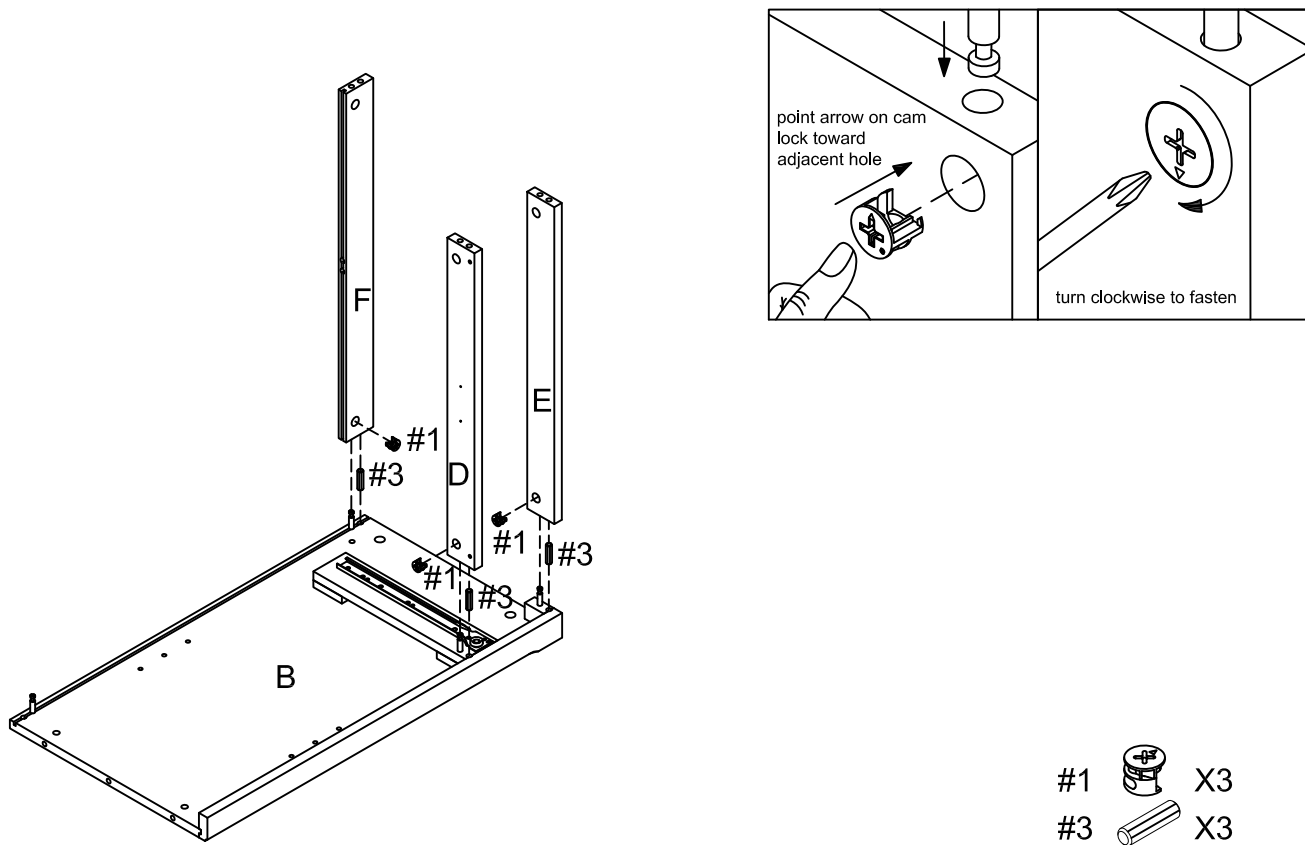



Step 3. Attach back vertical rail (part H) to back rail (part F) using wood dowels (part #3). Slide back panels (part G) into grooves of assembled unit (parts B, F & H).

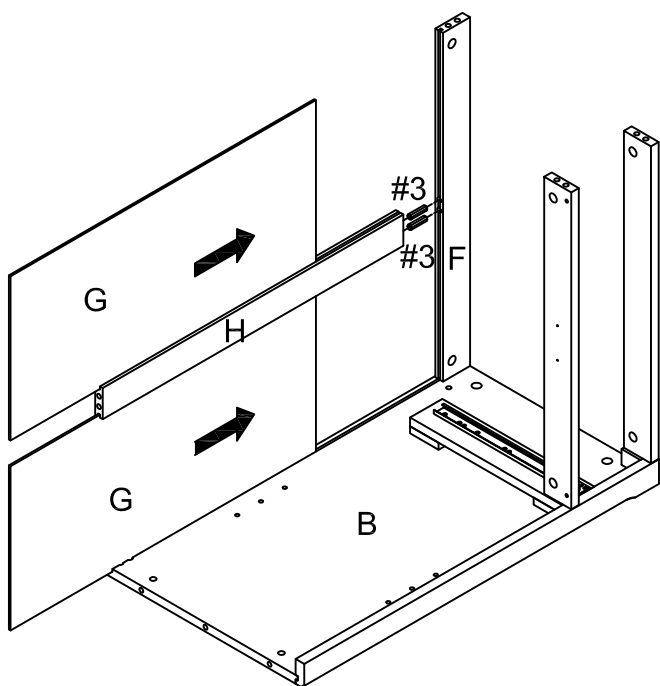

#3  X2

Step 4. Attach back rail (part F) to assembled unit (parts B, G & H) using cam lock (part #1) and wood dowels (part #3).



NOTE: Cam locks must rotate a full 180°. See pictured insert.

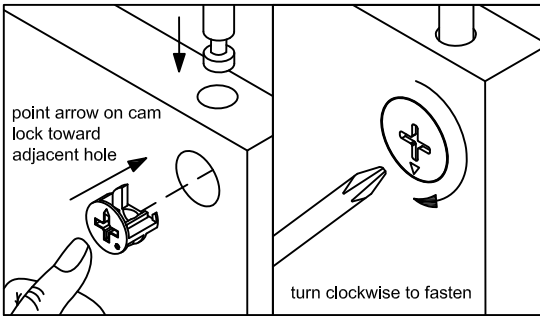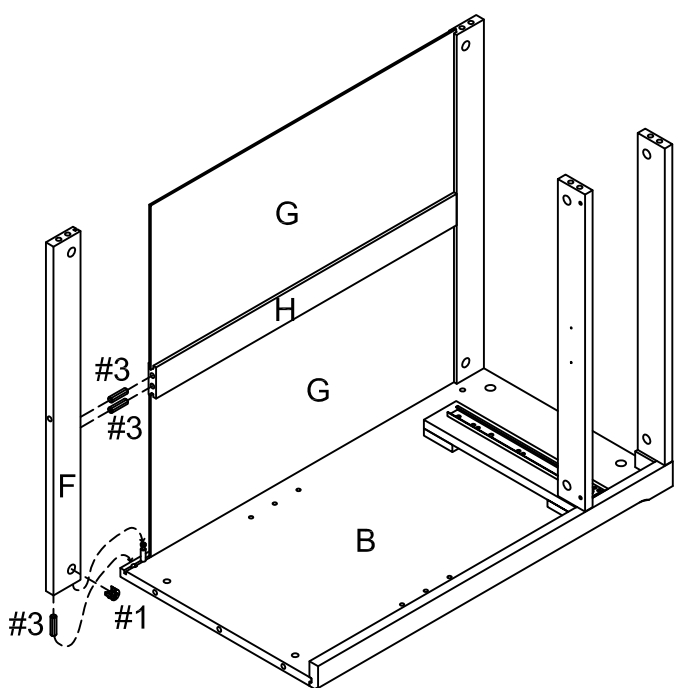

#1  X1
#3  X3


Step 5. Attach left panel (part A) to assembled unit (parts D, E, F & G) using cam locks (part #1) and wood dowels (part #3).

NOTE: Cam locks must rotate a full 180°. See pictured insert.

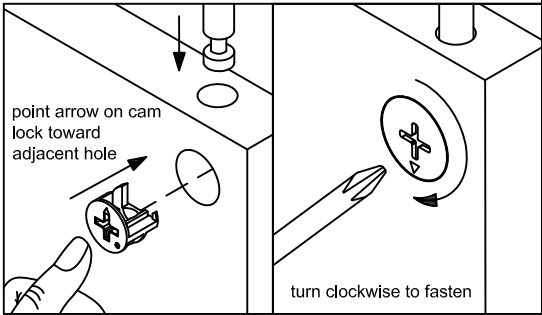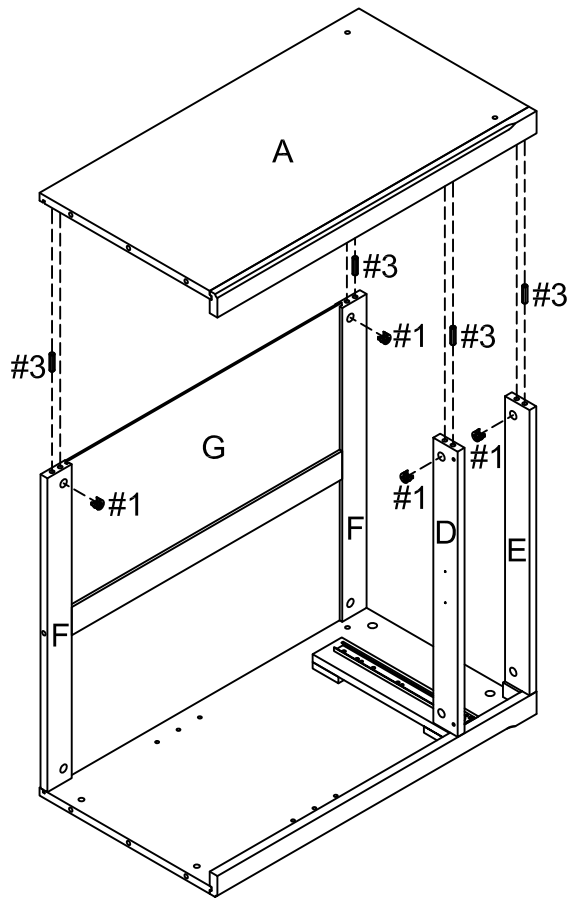

- #1  X4
- #3  X4

Step 6. Carefully turn unit upside down on a soft flat surface, such as carpet, as shown below. Attach bottom panel (part I) to assembled unit (parts A, B & F) using wood dowels (part #3), allen bolts (part #4), barrel nuts (part #7) and allen wrench (part #14). Attach double magnet (part #12) using round head screws (part #13) and phillips head screwdriver.

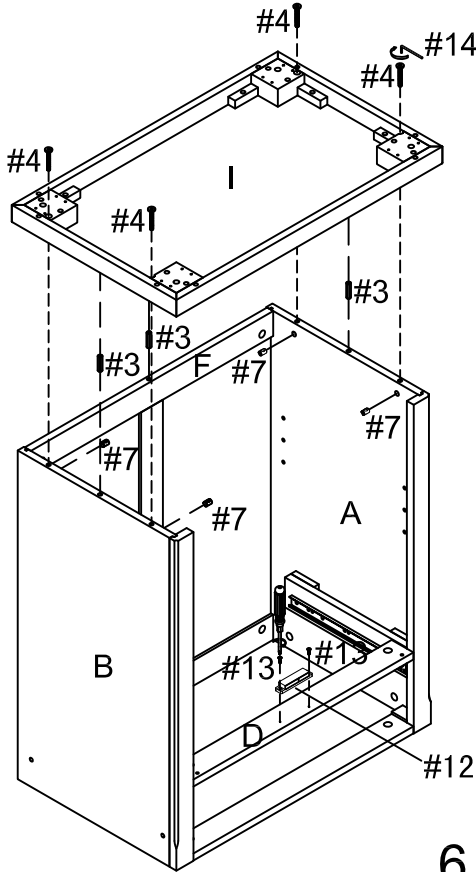


- #3  X3
- #4  X4
- #7  X4
- #12  X1
- #13  X2
- #14  X1

Step 7. CASTER INSTALLATION

Attach locking casters (part R) and casters (part S) to bottom panel (part I) using large round head screws (part #11) and phillips head screwdriver.


LEG INSTALLATION

Do not install casters. Attach legs using instruction manual and hardware included inside leg packaging.

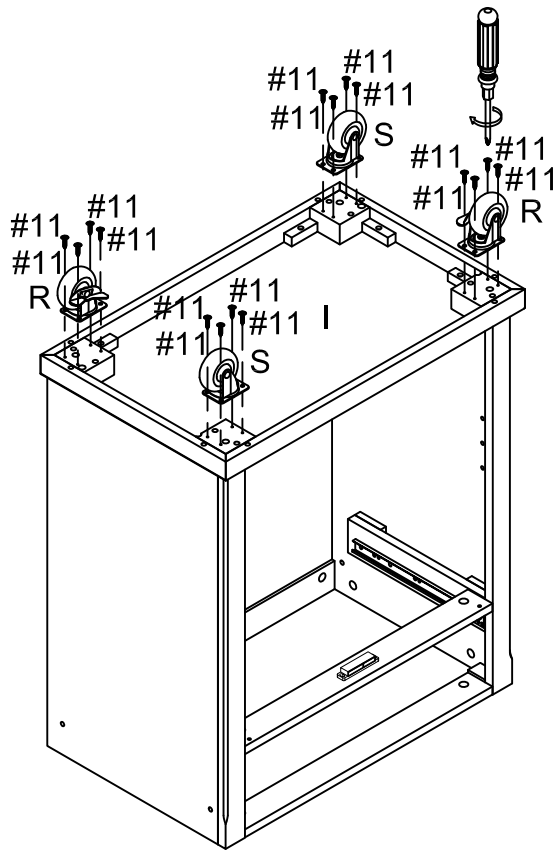

#11  X16



Step 8. Carefully turn unit upright. Attach towel bars (part T) to panels (parts A & B) using short allen bolts (part #5) and allen wrench (part #14).

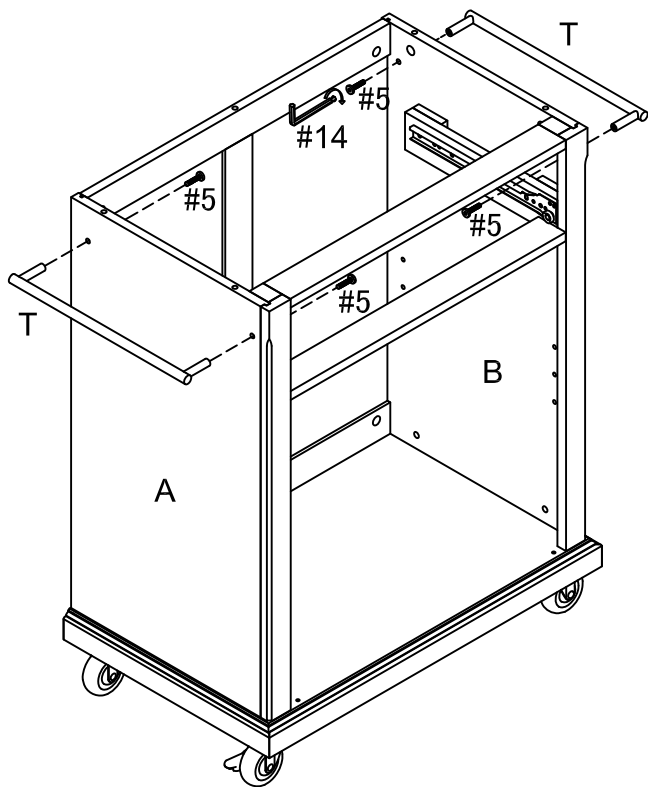

#5  X4
#14  X1

Step 9. Attach top panel (part C) to assembled unit (parts A, B & F) using cam locks (part #1) and wood dowel (part #3).


NOTE: Cam locks must rotate a full 180°. See pictured insert.

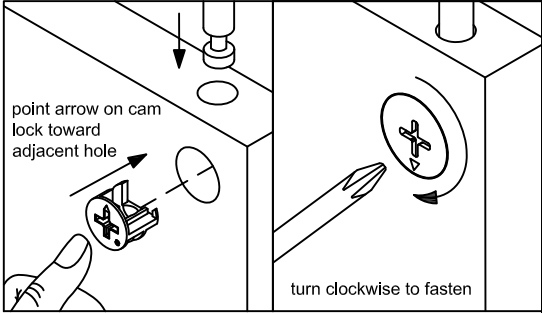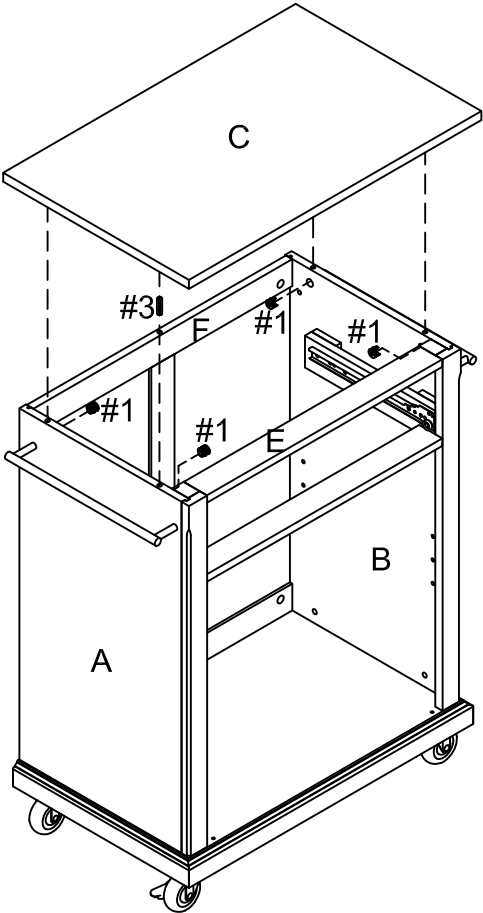

- #1  X4
- #3  X1

Step 10. Attach knobs (part #9) to door panels (parts J & K) using round head bolts (part #10) and phillips head screwdriver. Attach door panels (parts J & K) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part I). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of front middle rail (part D). Place shelf holders (part #8) into desired position.


NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

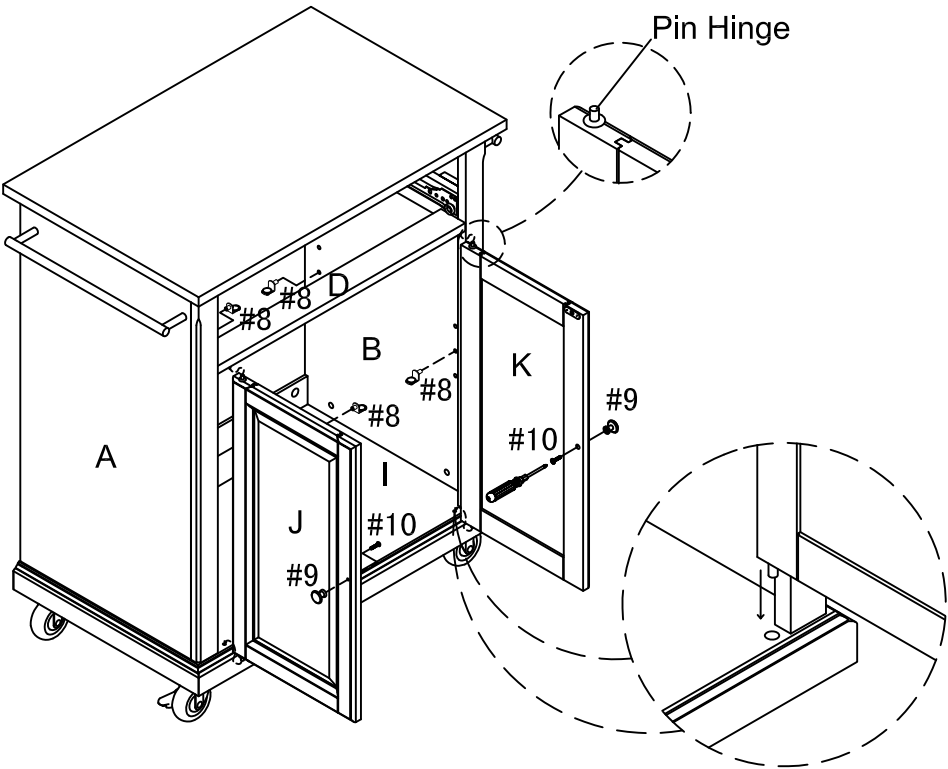

- #8  x4
- #9  x2
- #10  x2

Step 11. Attach knob (part #9) to drawer front panel (part M) using round head bolt (part #10) and phillips head screwdriver. Attach drawer panels (parts N & O) to drawer front panel (part M) using screws (part #6) and phillips head screwdriver. Slide drawer bottom panel (part Q) into grooves of assembled unit (parts M, N & O). Attach drawer back panel (part P) to assembled unit (parts N, O & Q) using screws (part #6) and phillips head screwdriver.

NOTE: Be sure drawer glide wheels are facing back panel.

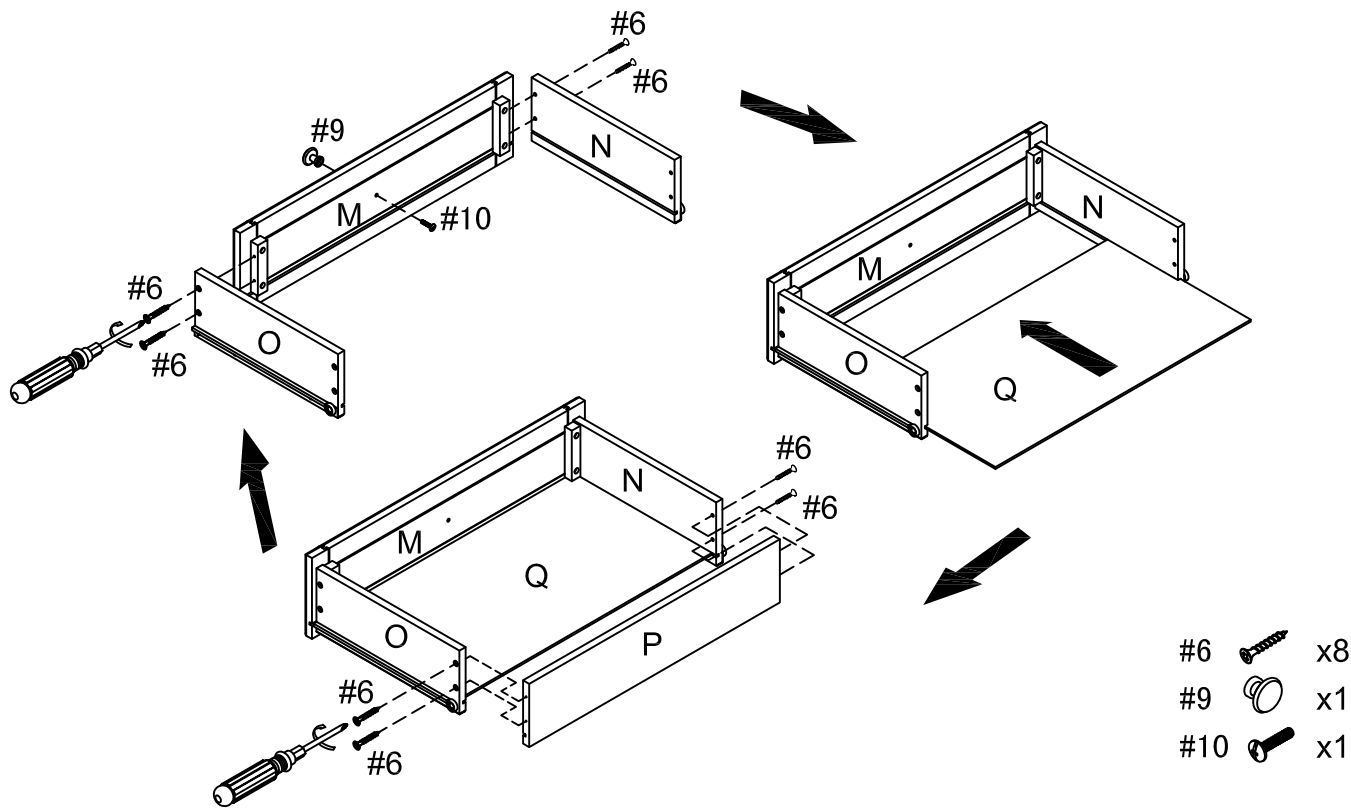

Step 12. Slide assembled drawer into place. Slide adjustable shelf (part L) into place.

