


HomeMore®
A Brand that Redefines Furniture

ASSEMBLY INSTRUCTION

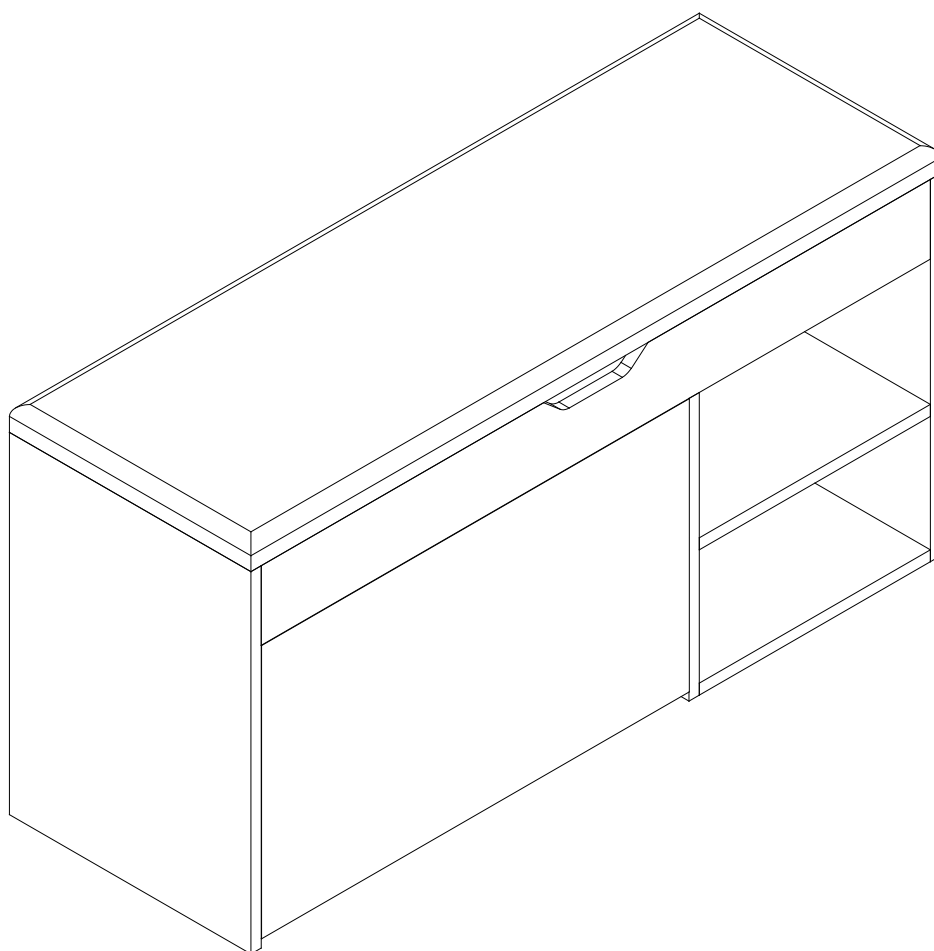



Ax31




Bx31



Cx34



Dx1

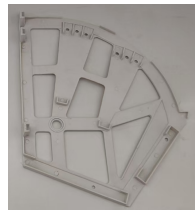

Ex1



Fx3








Gx2




Hx2




Jx2

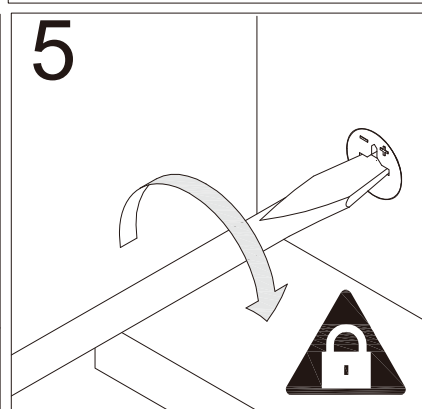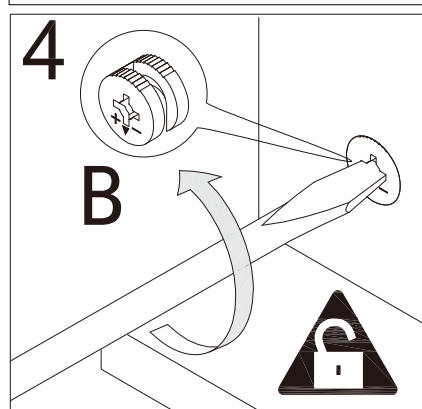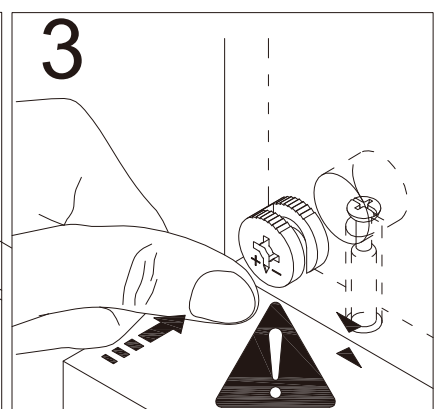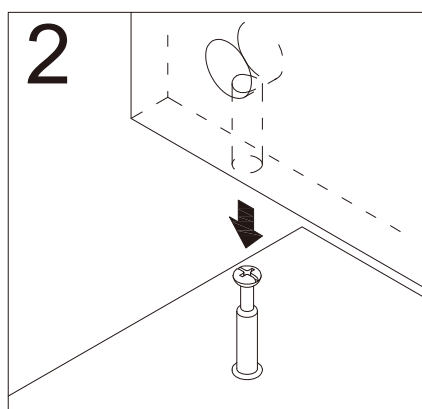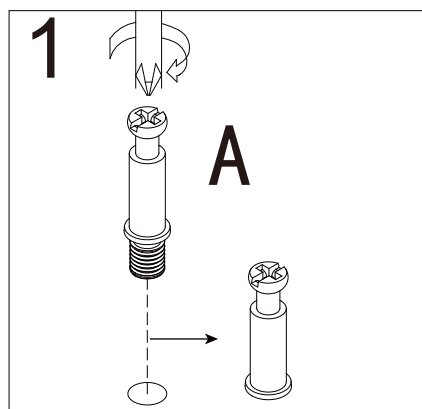

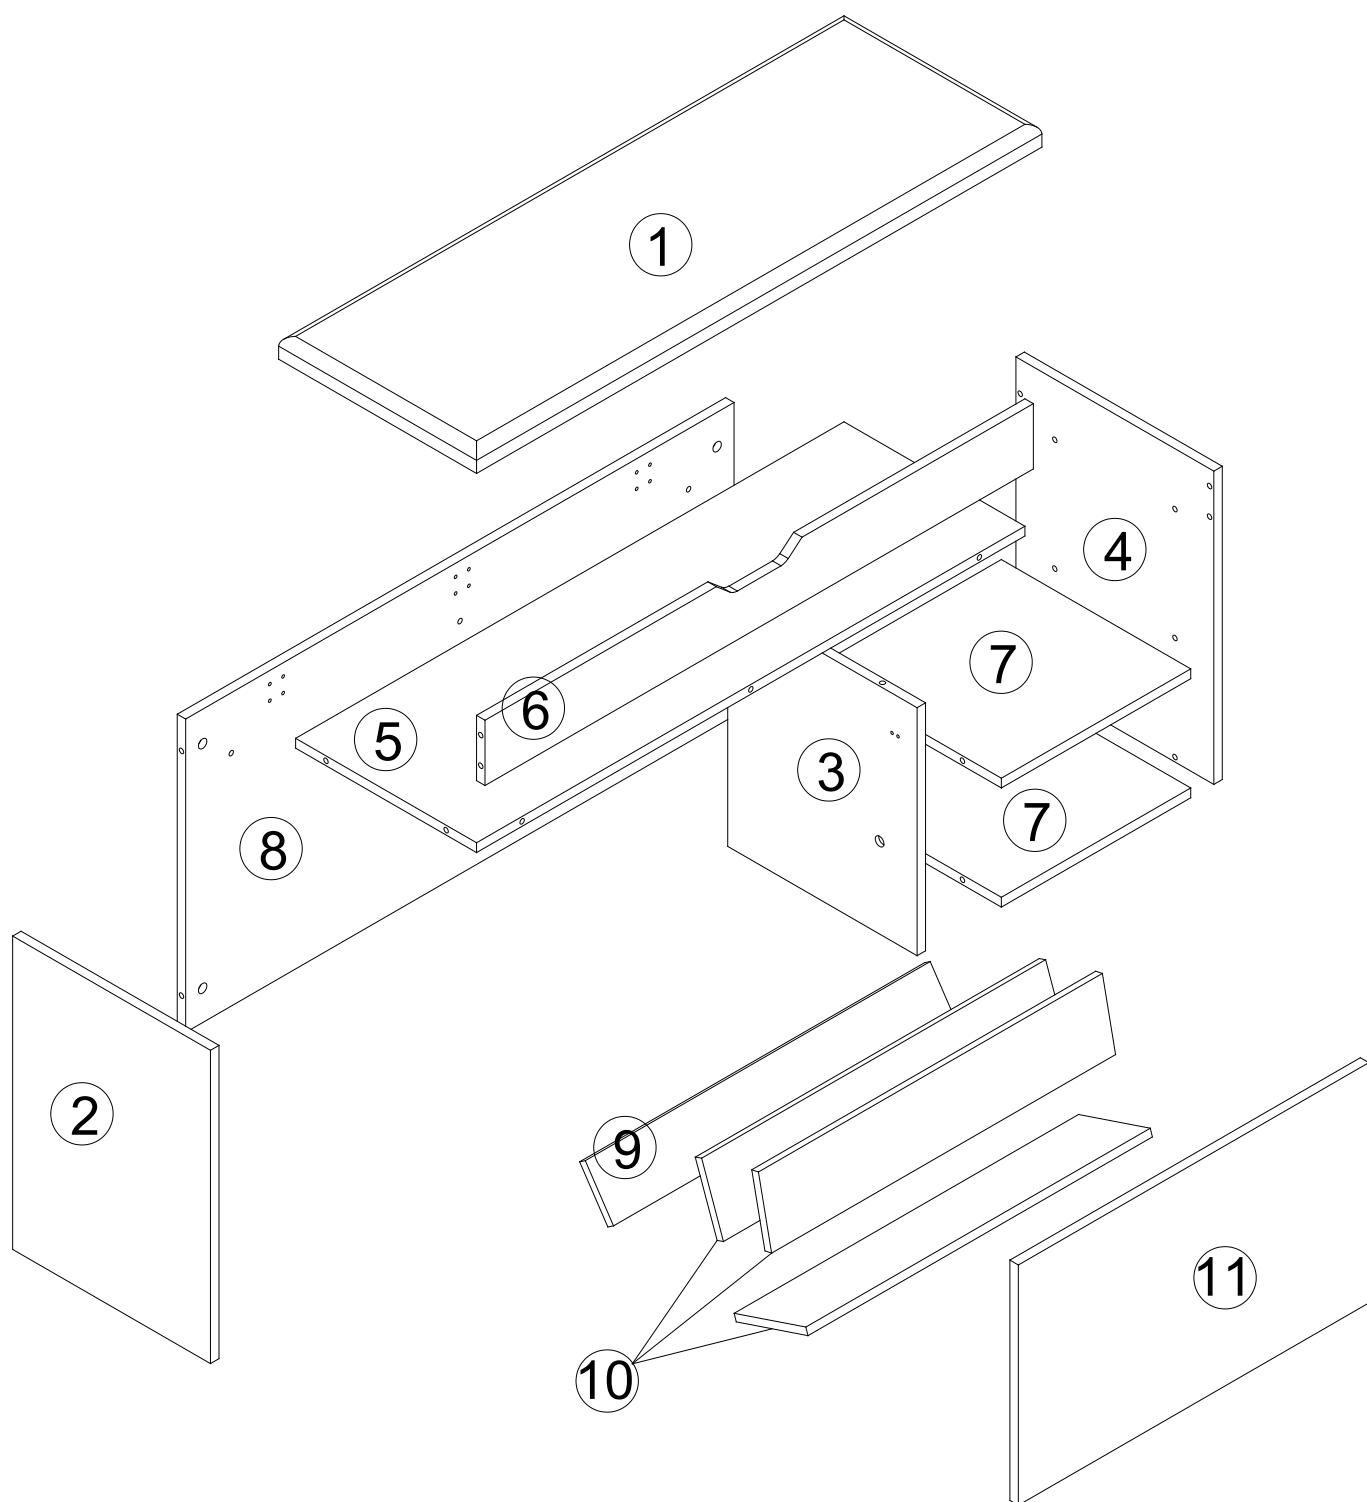


1 - x1	8 - x1
2 - x1	9 - x1
3 - x1	10 - x3
4 - x1	11 - x1
5 - x1	
6 - x1	
7 - x1	


STEP 1

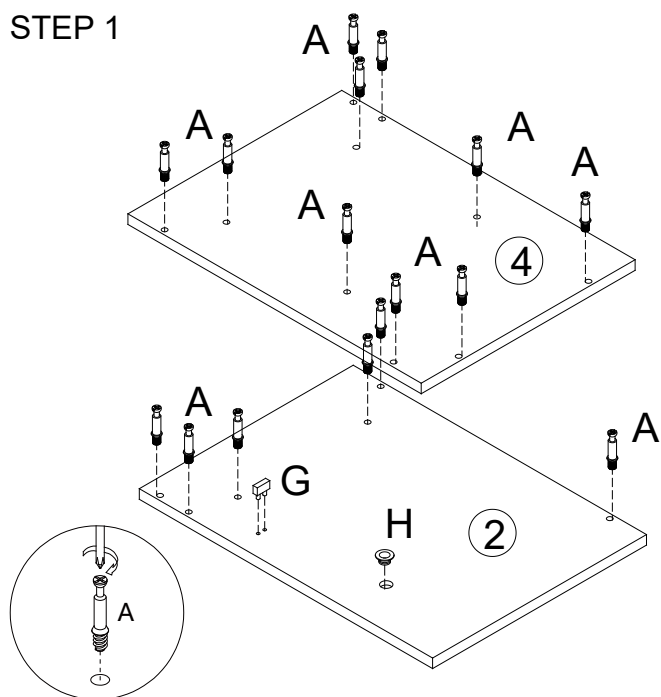


STEP 2

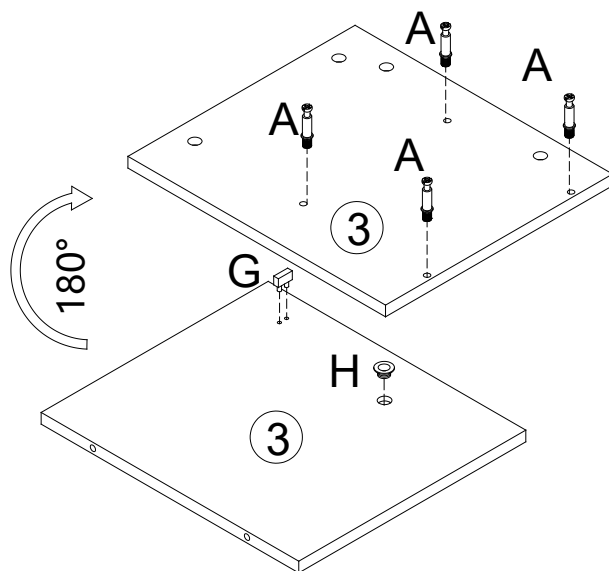


STEP 3

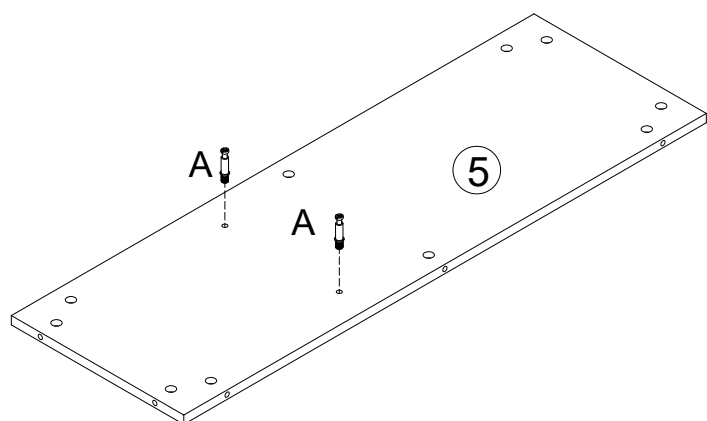


STEP 4

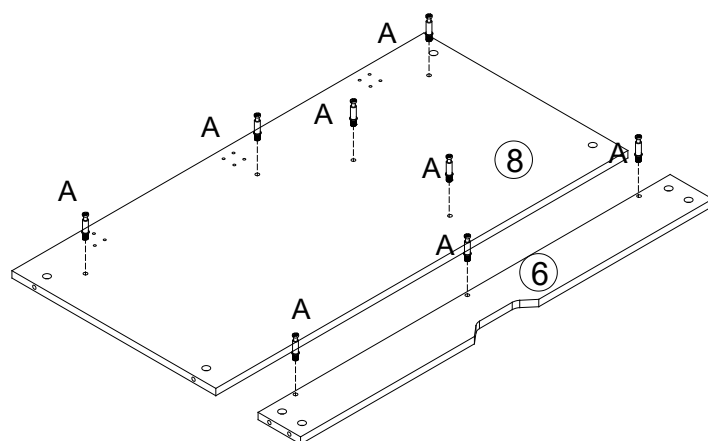

STEP 5

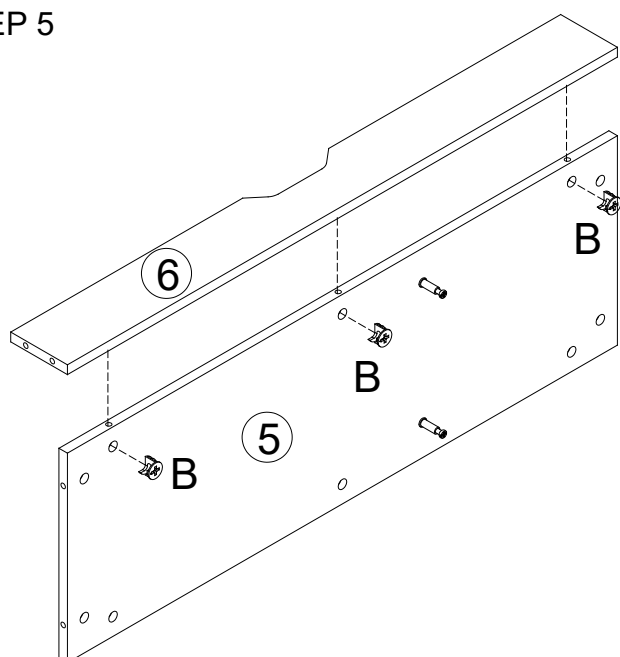


STEP 6

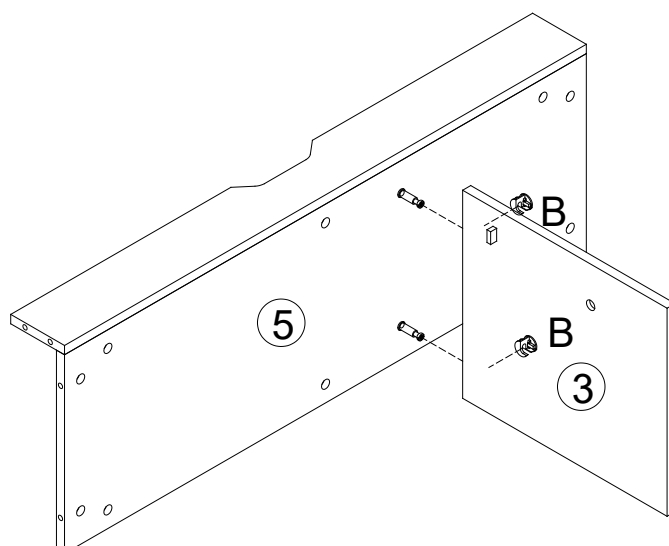


This diagram illustrates the final assembly step of the rear panel. The rear panel, labeled with a circled '7', is being attached to the main frame. It is secured by three screws, each labeled with a 'B'. Dashed lines indicate the alignment and placement of the screws through the panel into the frame's structure.

STEP 13

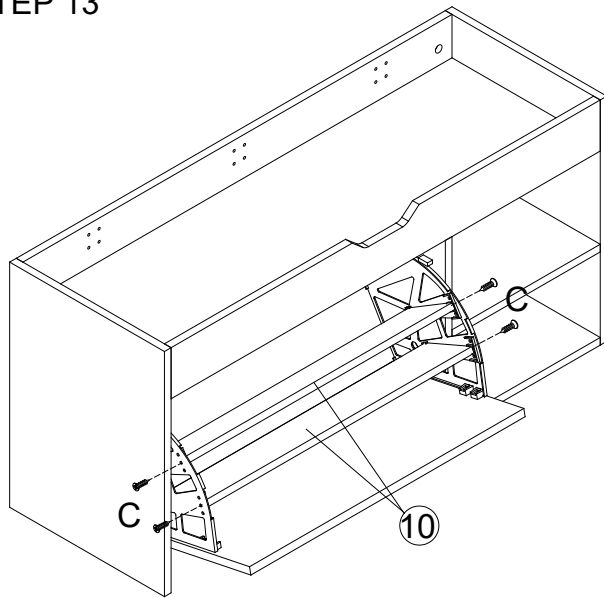

STEP 14

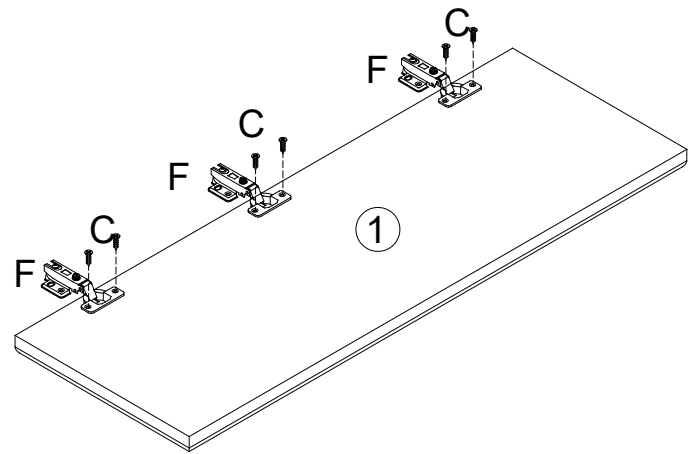

STEP 15

