

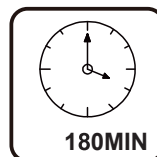
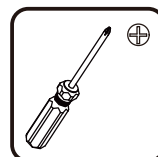
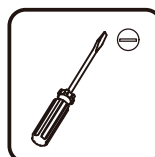



Installation & Assembly

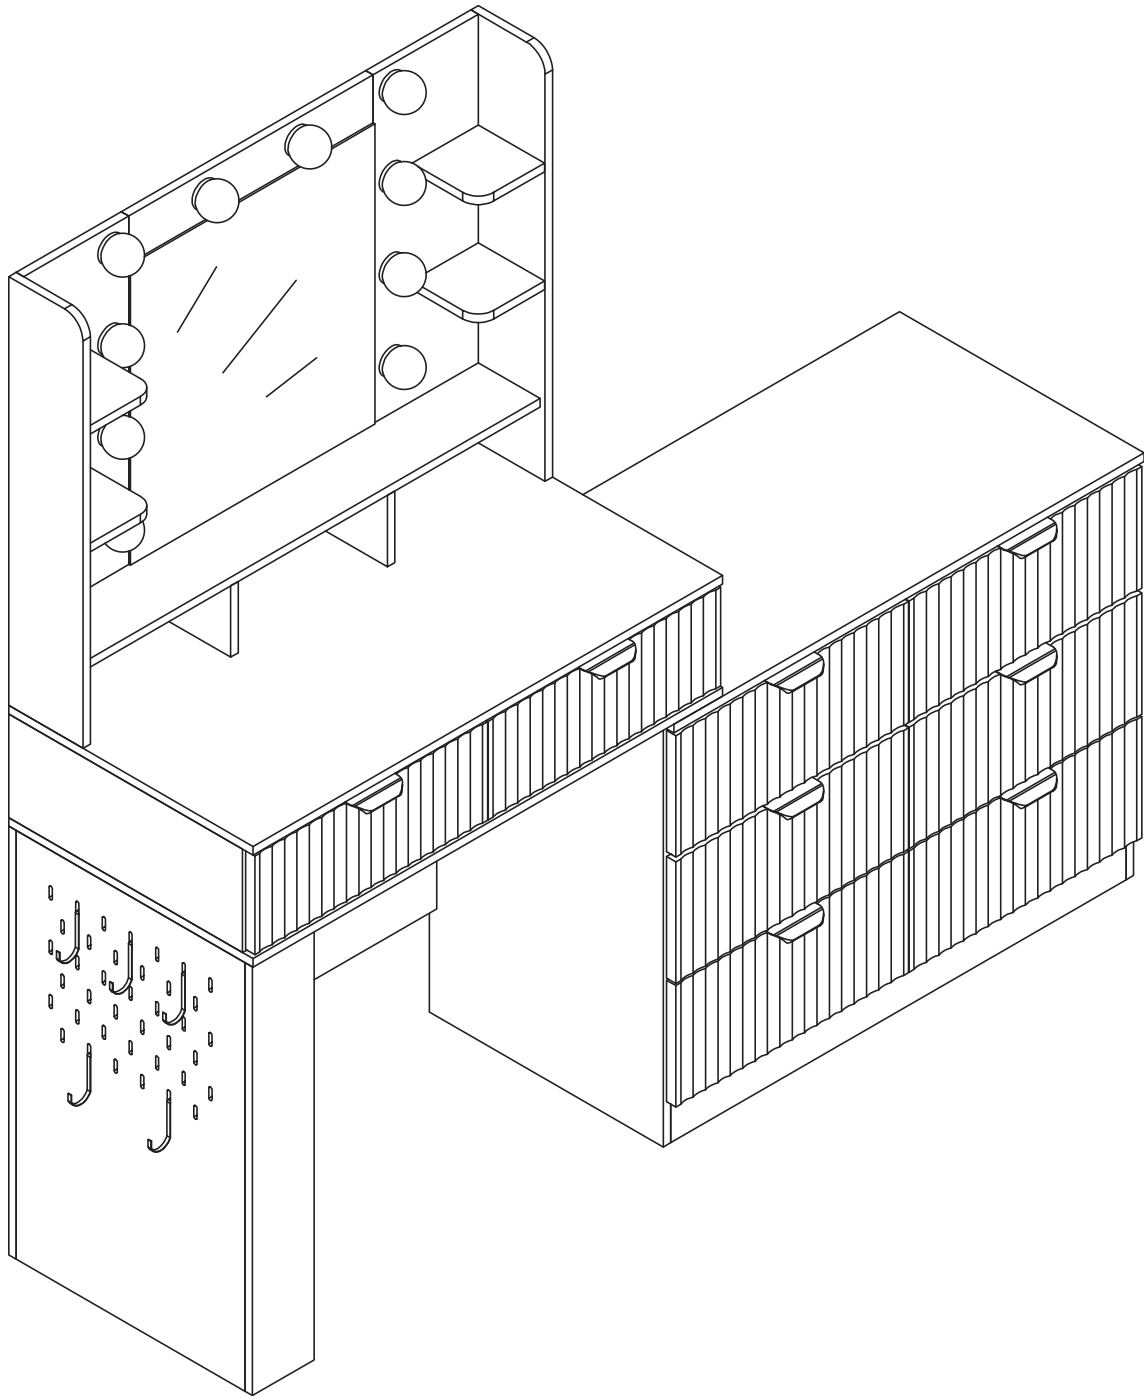


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

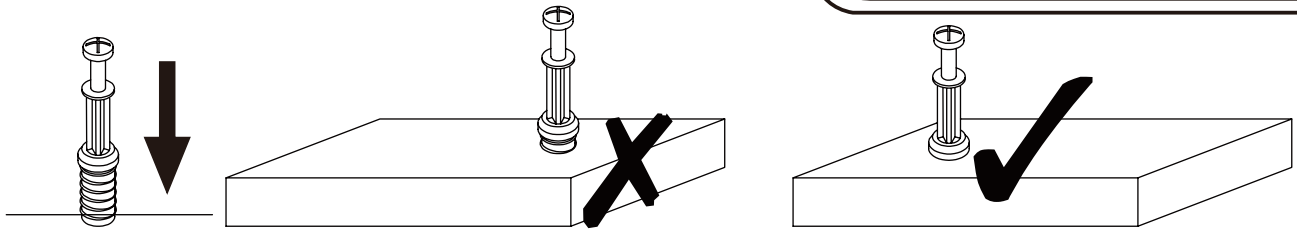


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

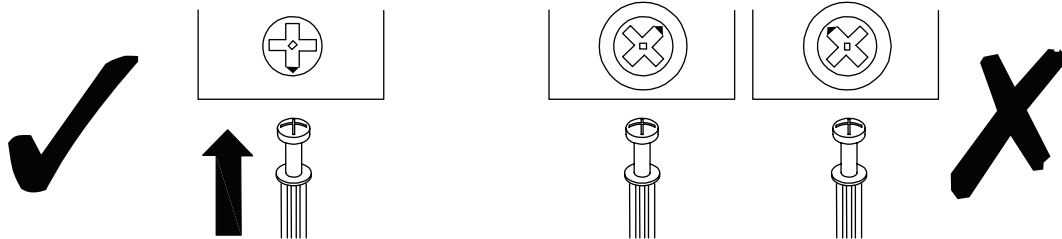












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.











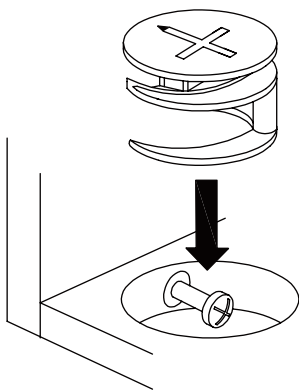













EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.







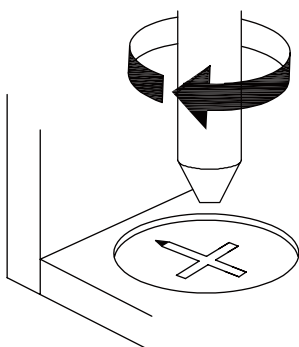





EN_Turn cam lock clockwise to tighten.

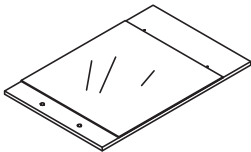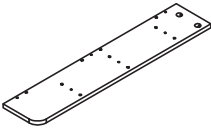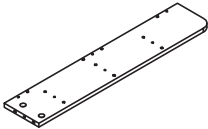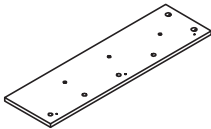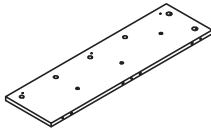
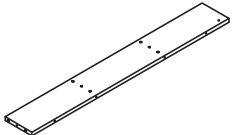

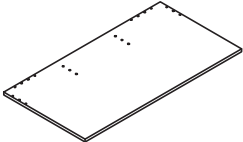
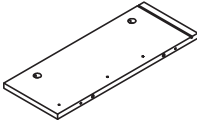

NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x4	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	
⑪		x1	

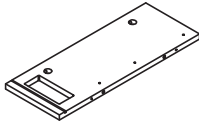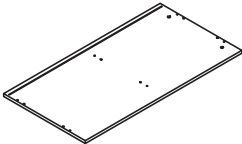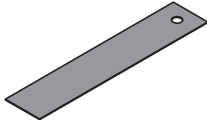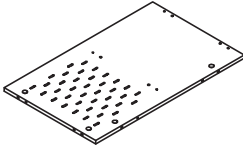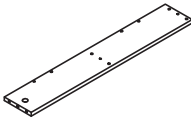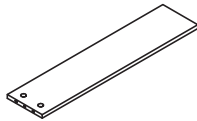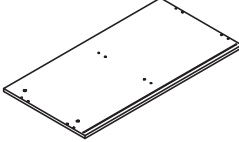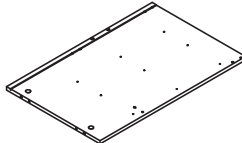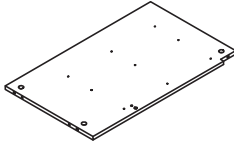NO.	PARTS	QTY	SPARE
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x2	
⑲		x1	
⑳		x1	
㉑		x1	
㉒		x1	

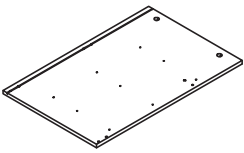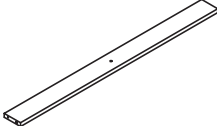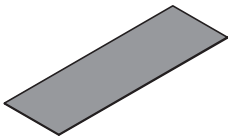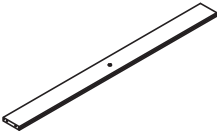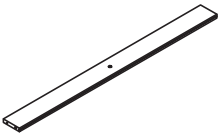
NO.	PARTS	QTY	SPARE
23		x1	
24		x1	
25		x1	
26		x1	
27		x2	
28		x1	
29		x1	
30		x1	
31		x1	
32		x2	
33		x2	

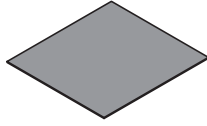NO.	PARTS	QTY	SPARE
34		x2	
35		x8	
36		x3	
37		x3	
38		x6	
39		x6	
40		x6	
	 Hardware Kit	x1	

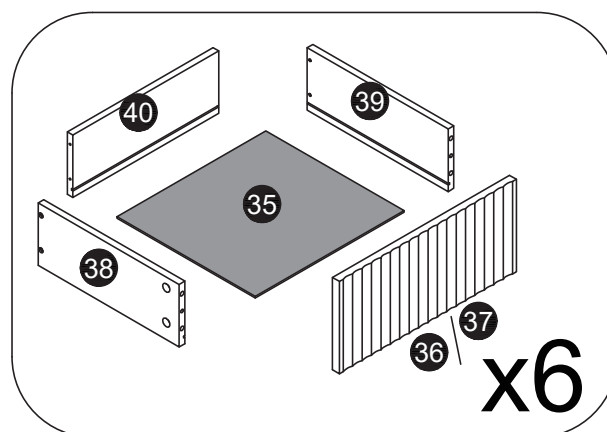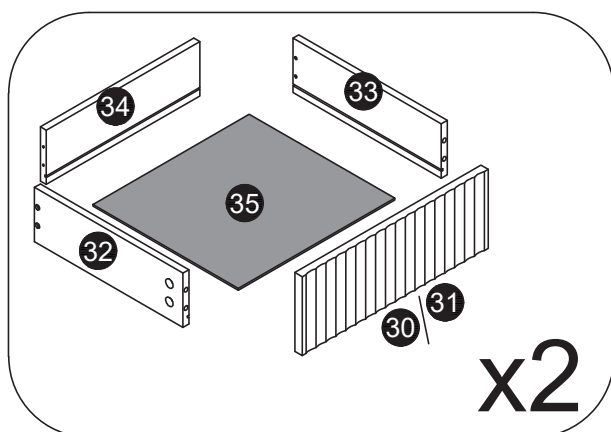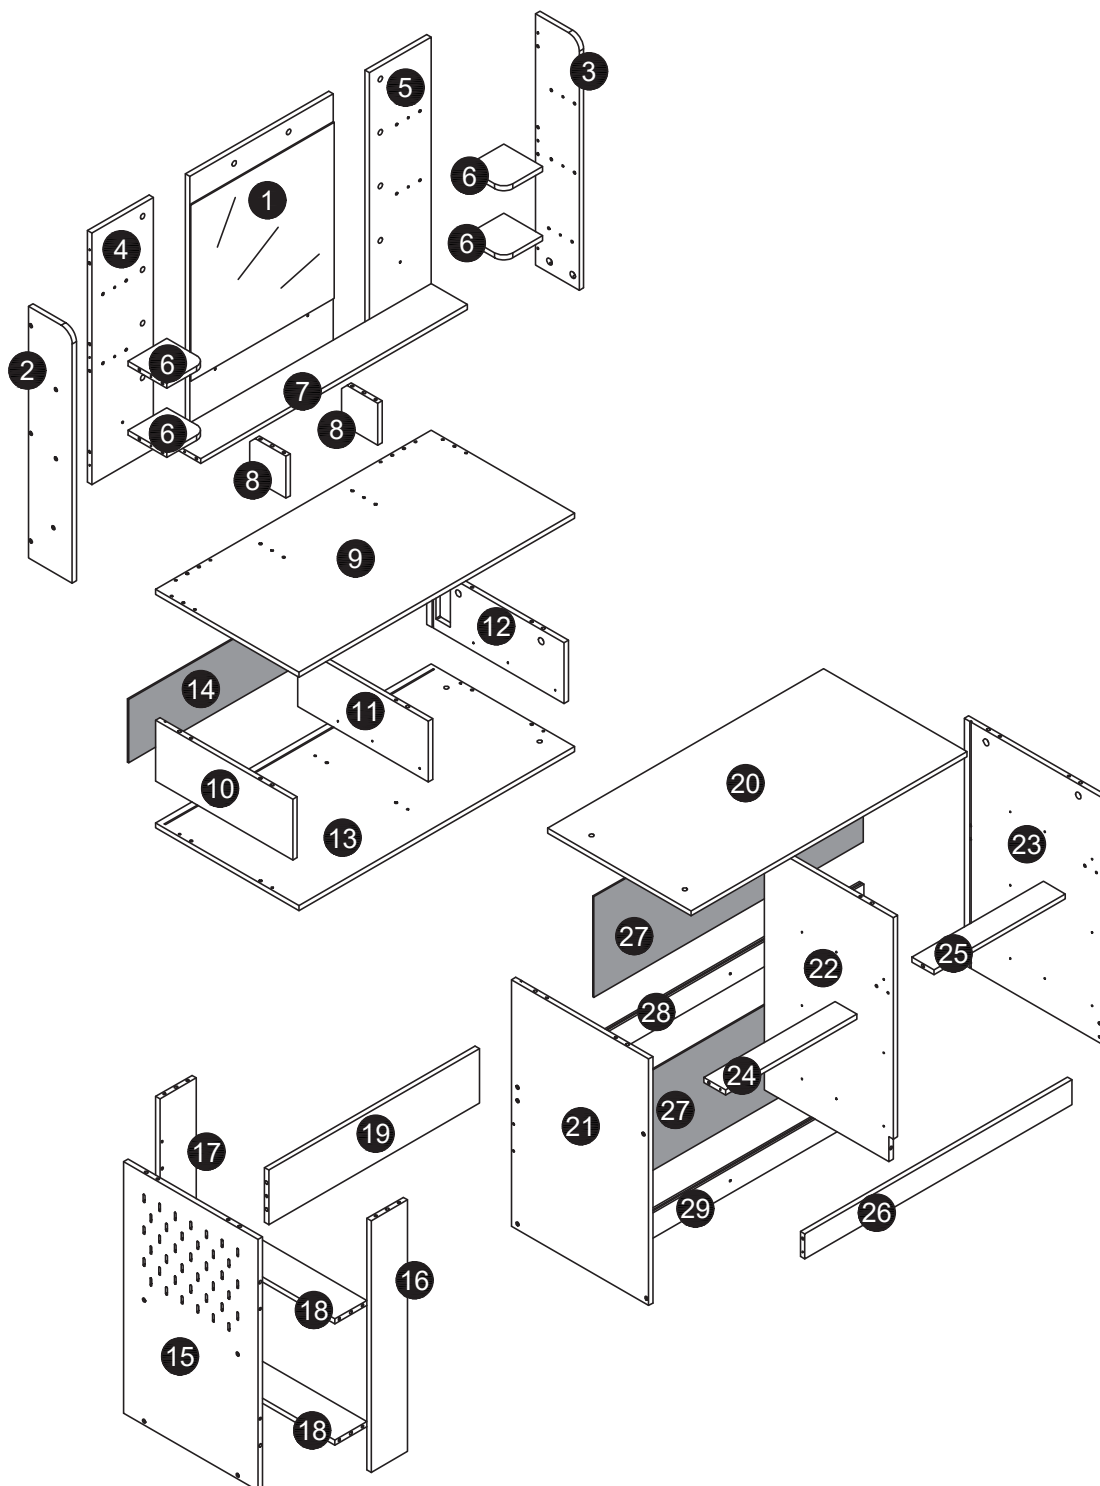

 A x66 Ø6x35mm +3(spare)	 B x68 Ø15x10mm +3(spare)	 C x102 Ø6x30mm +5(spare)	 D x83 Ø4x35mm +5(spare)	 E x124 Ø3.5x12mm +5(spare)	 F x1			
 G x2 Ø3.5x12mm	 H x8	 I x38 Ø20mm +4(spare)	 J x1	 K x2 Ø4x10mm K-1	 L x6 K-2			
 M x2	 N x2	 O x2	 P x2	 Q x2 Ø6x30mm	 R x5			
 S x12 Ø3x16mm +1(spare) S-1	 S x12 Ø3x16mm +1(spare) S-2	 T x2 Ø4x14mm T-1	 T x2 Ø4x14mm T-2	 U x1 x10 U-1	 U x1 x10 U-2	 U x1 x10 U-3	 U x1 x10 U-4	 V x2 Ø4x10mm
 CL x8 L300mm	 CR x8 L300mm	 DL x8 L300mm	 DR x8 L300mm					


A x8



B x8




D x8

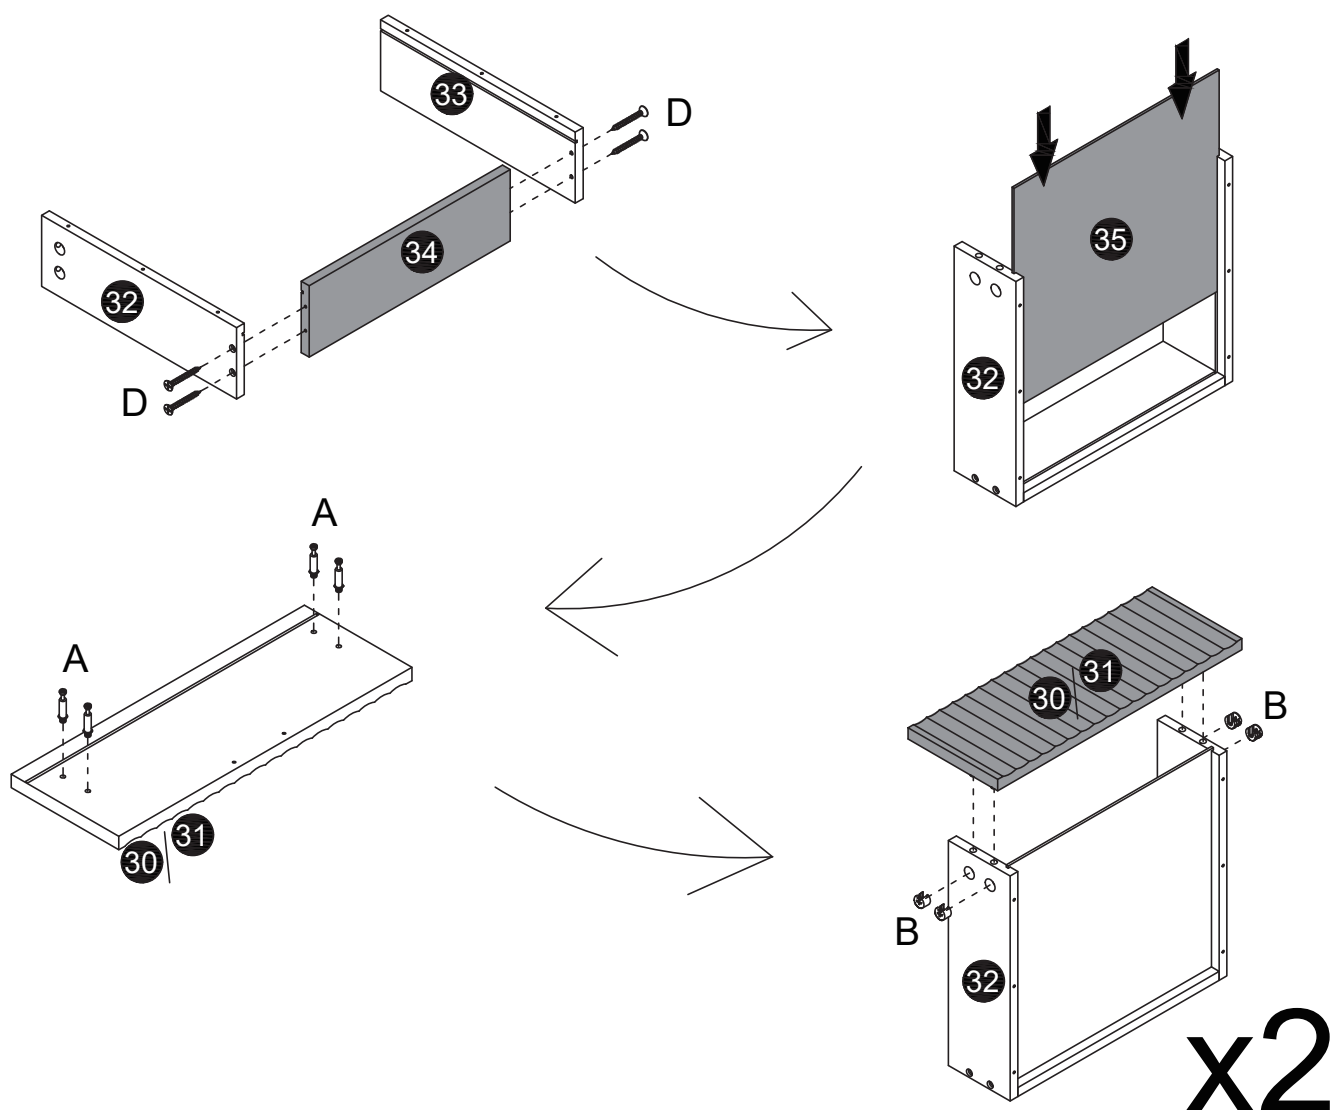



E x12




DL x2



DR x2

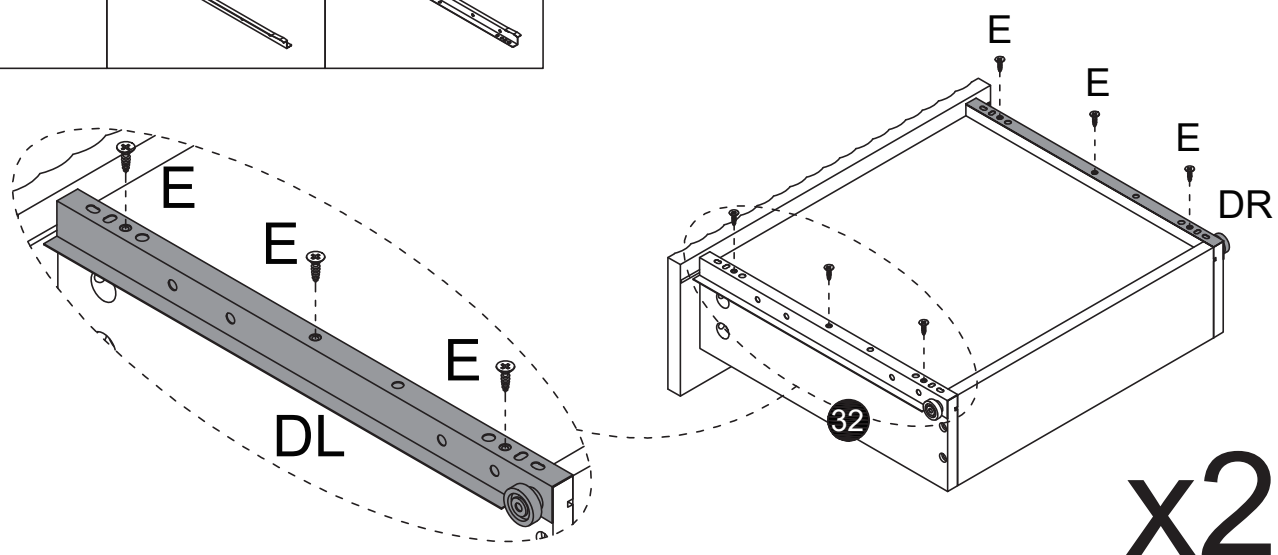

A x24




B x24



C x12



D x24

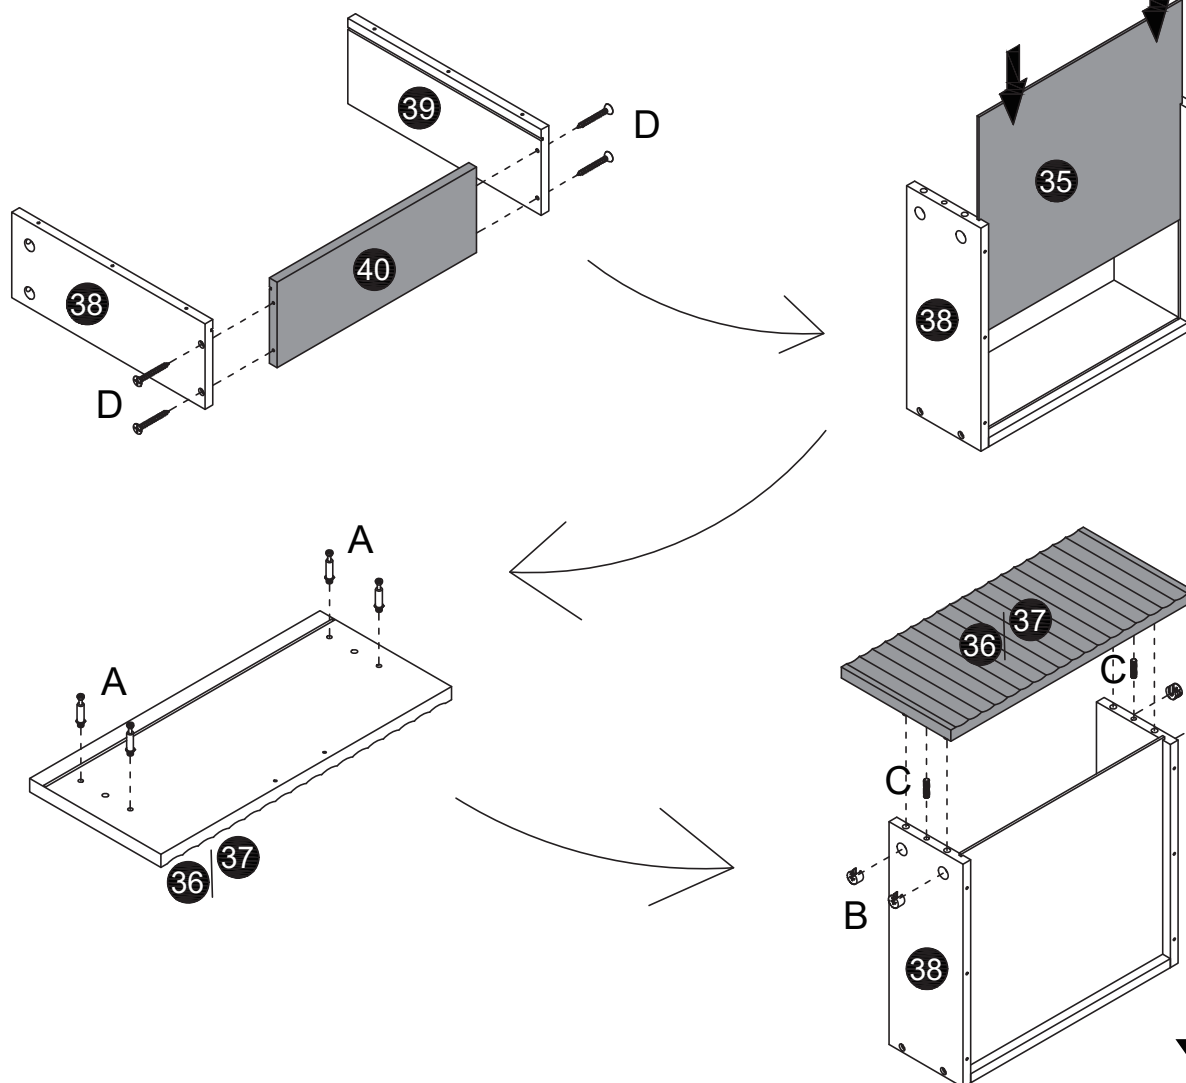

x6



E x36



DL x6



DR x6

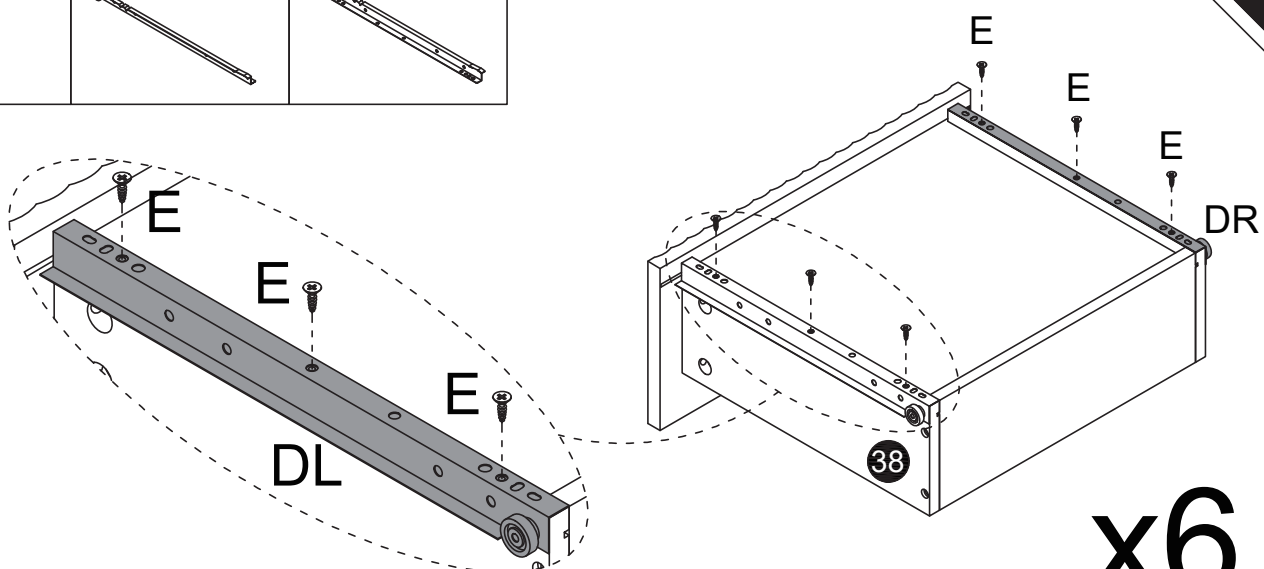



x6


E x16



H x8

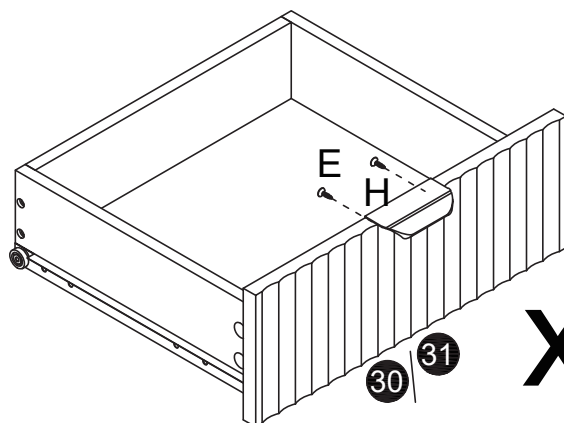

x2

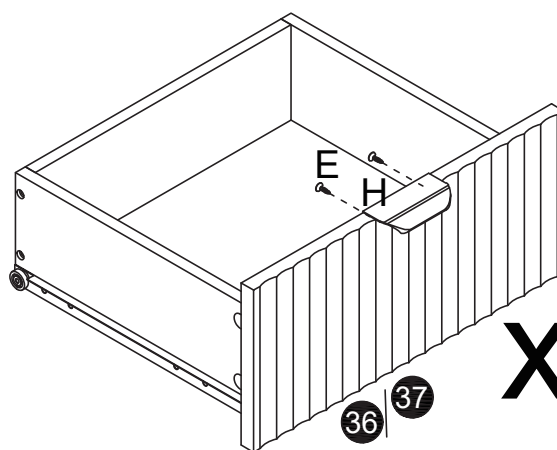

x6



E x18




CL x3




CR x3

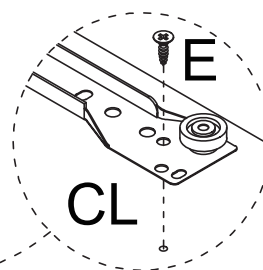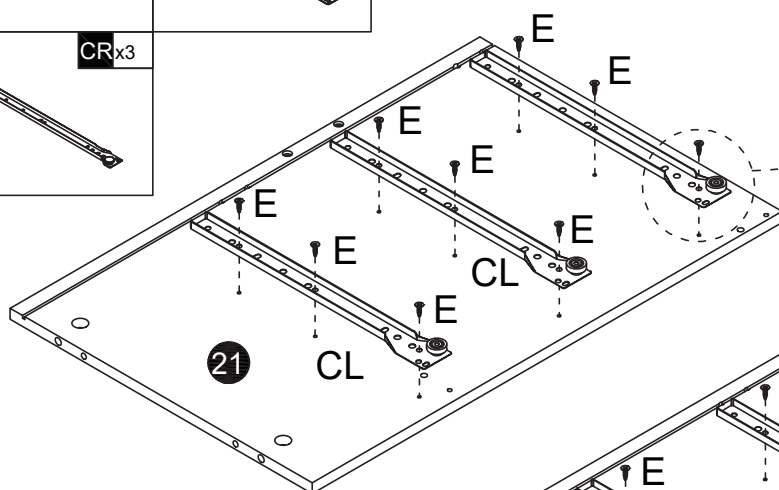



CL

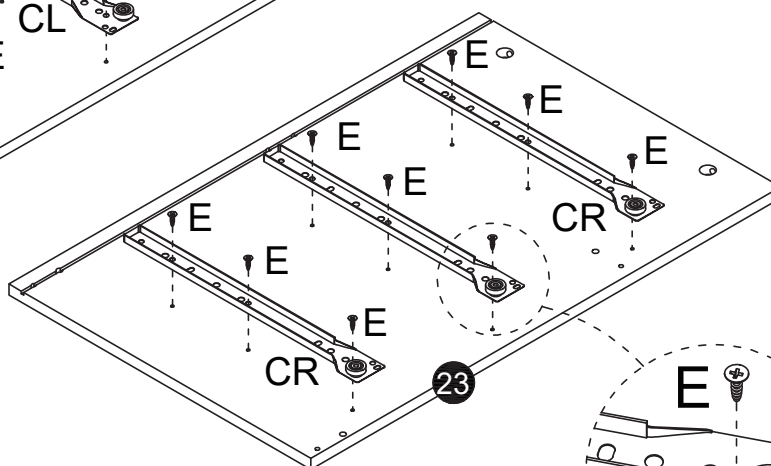

23

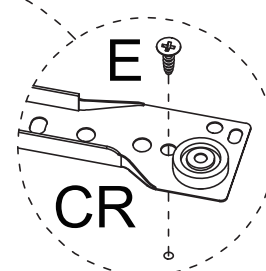


CR

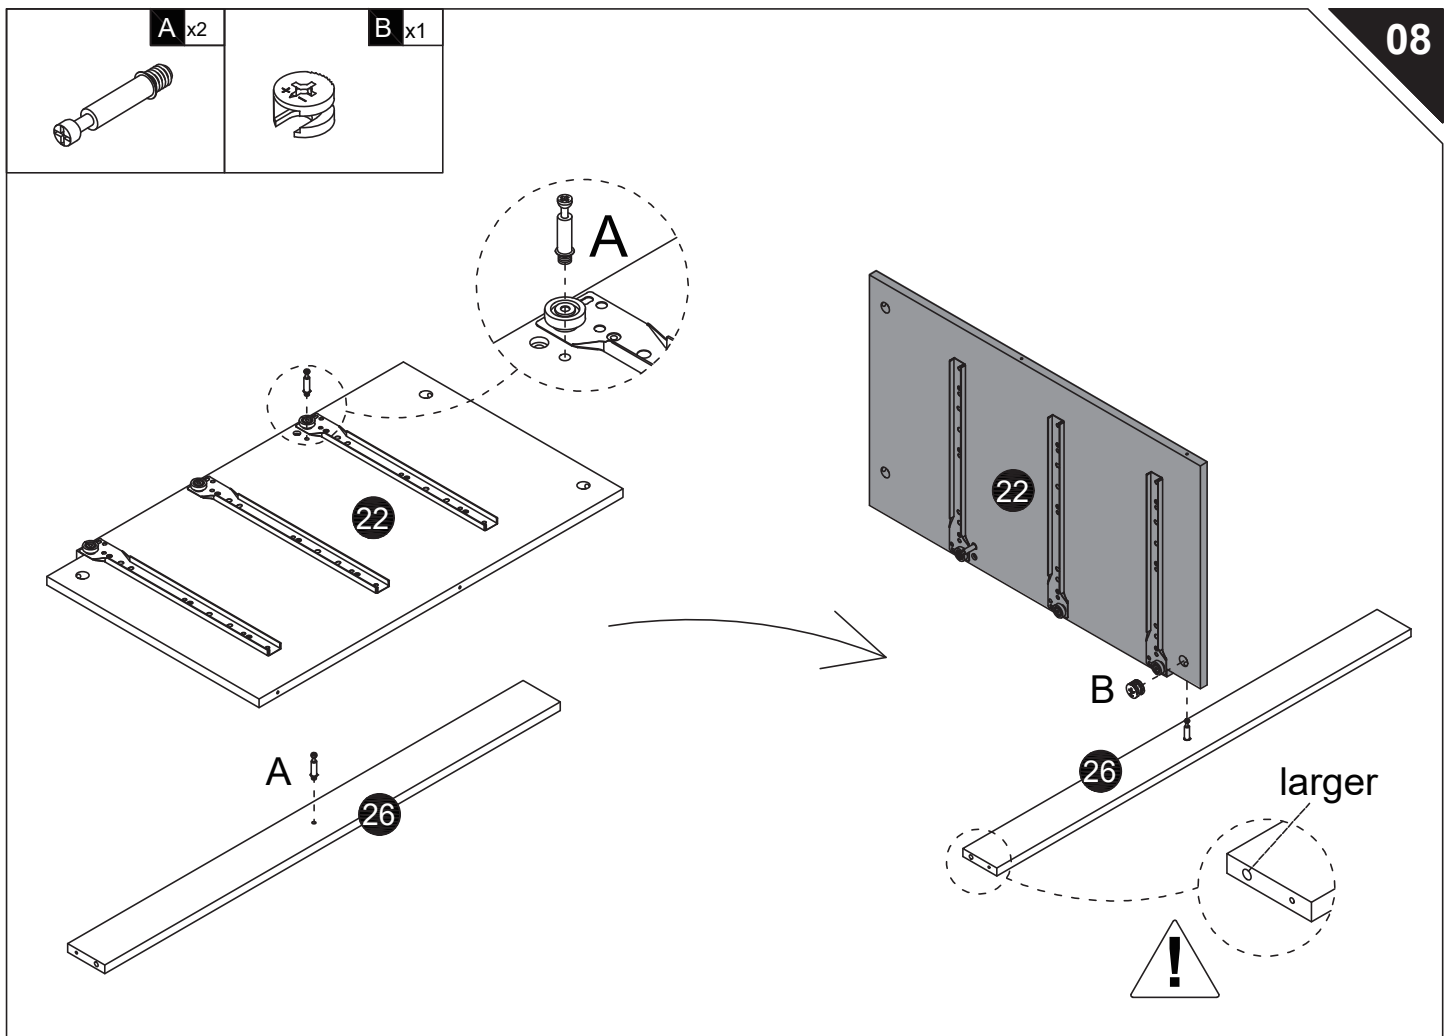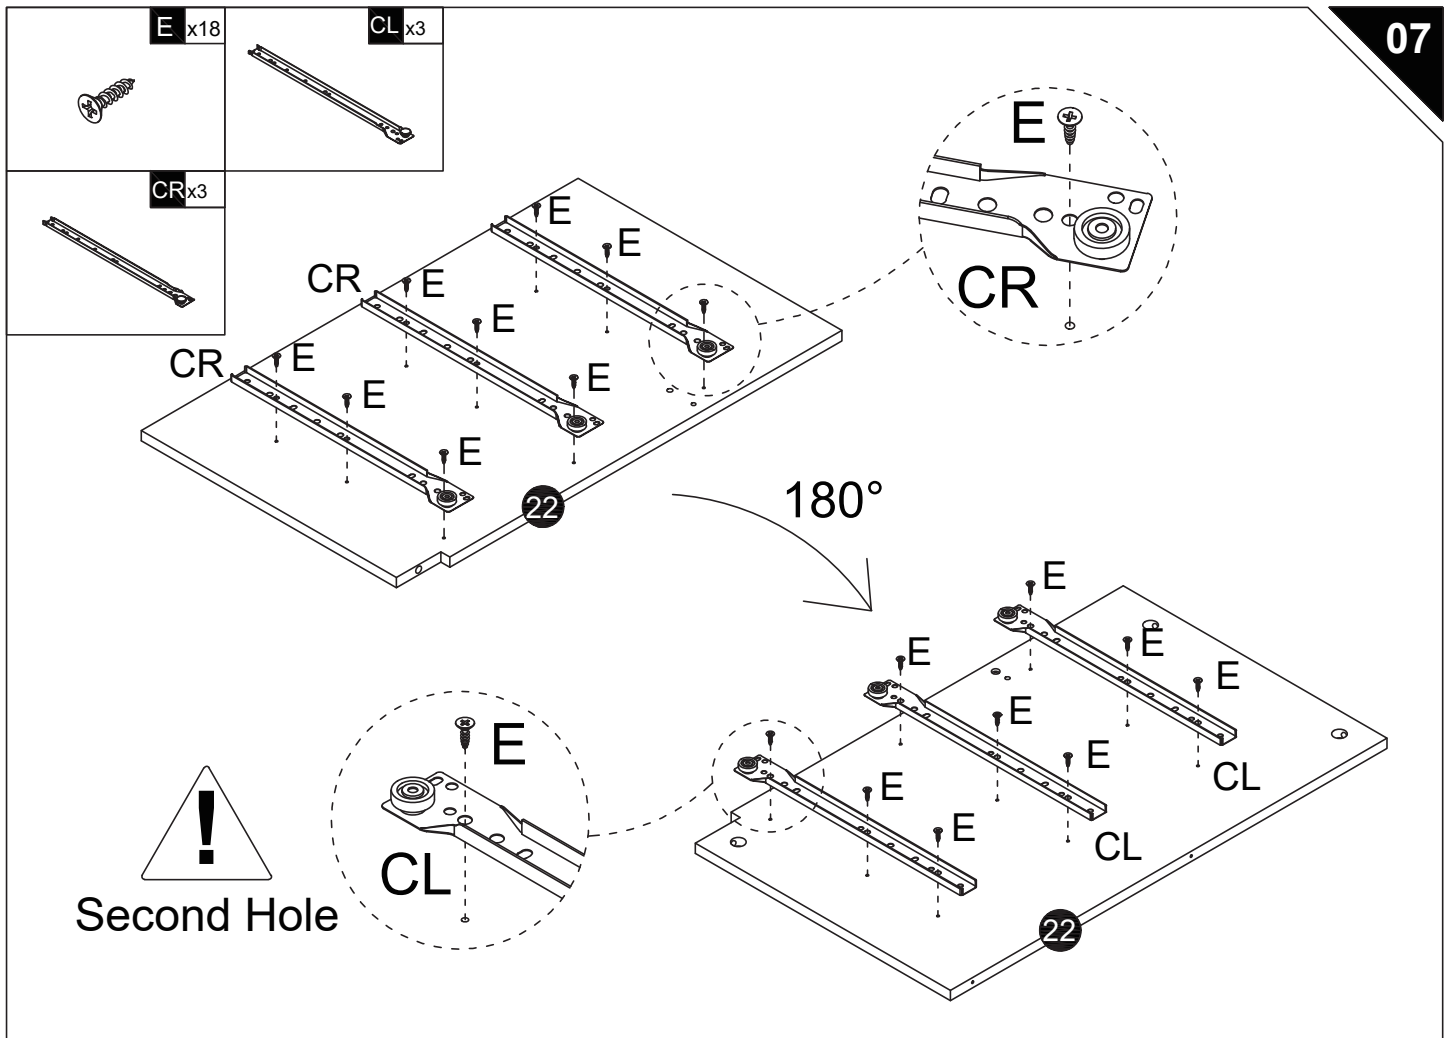


C x1



D x1

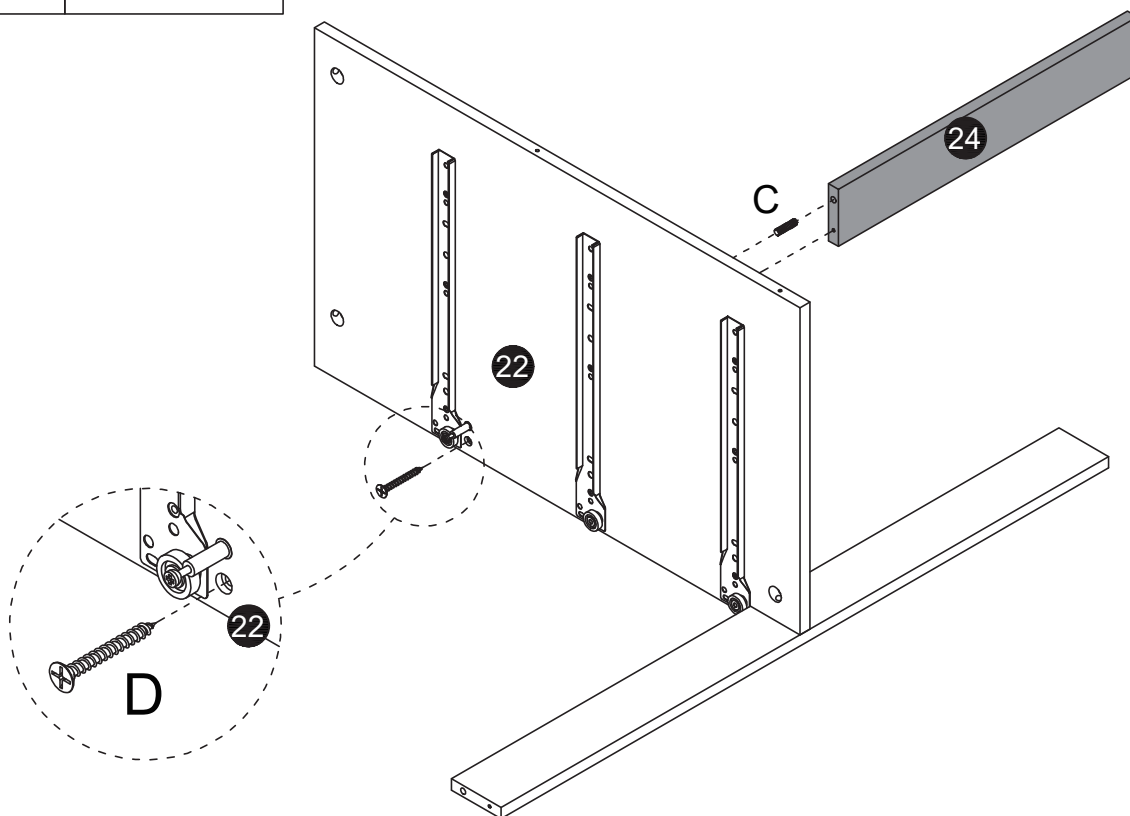

B x1

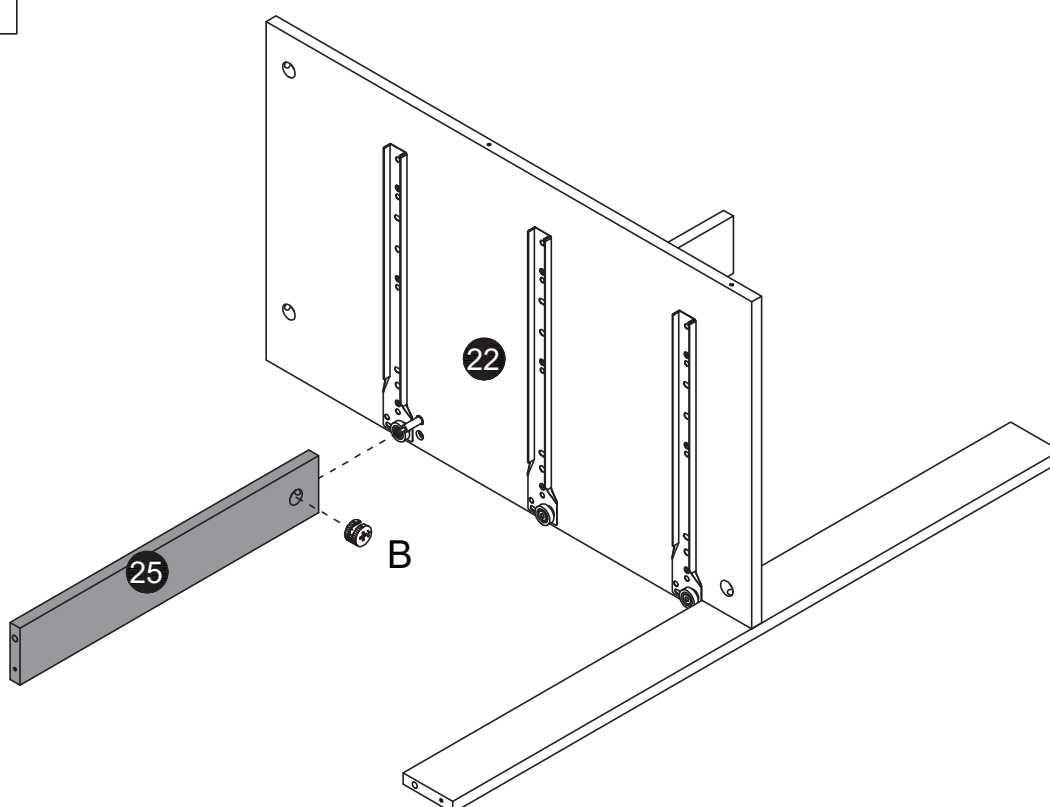


C x3


D x7



The countersunk hole faces outward


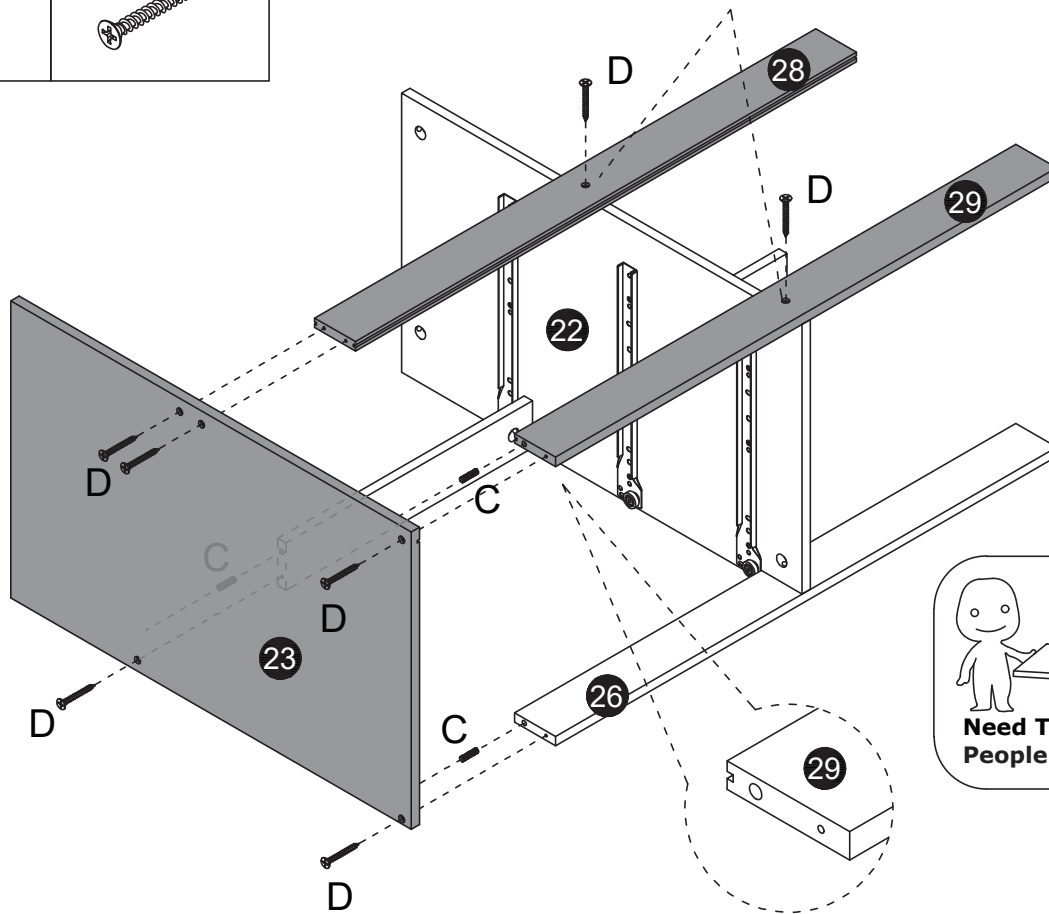


Need Two or More
People To Complete

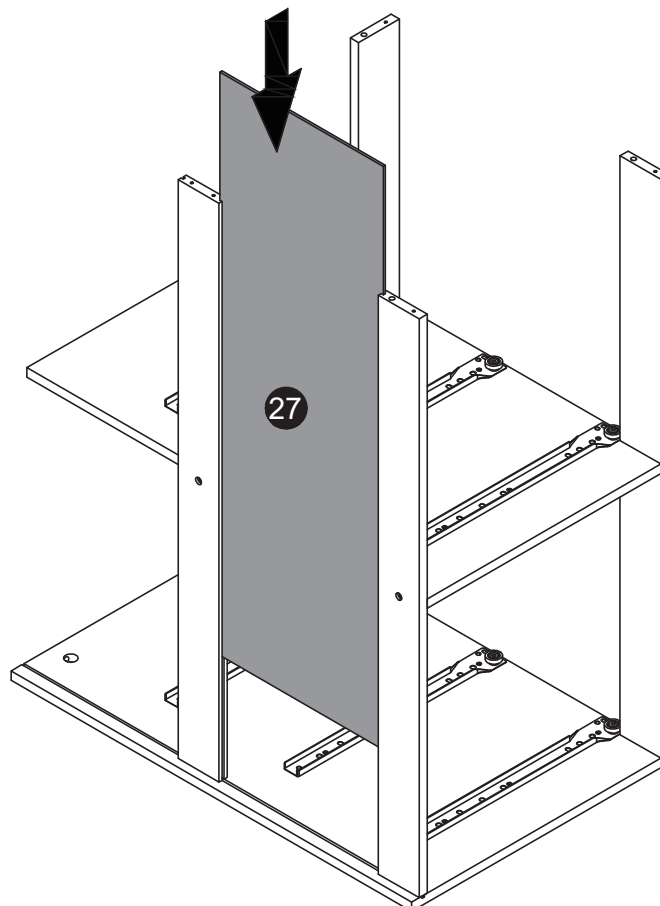


C x3


D x5

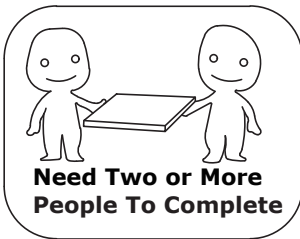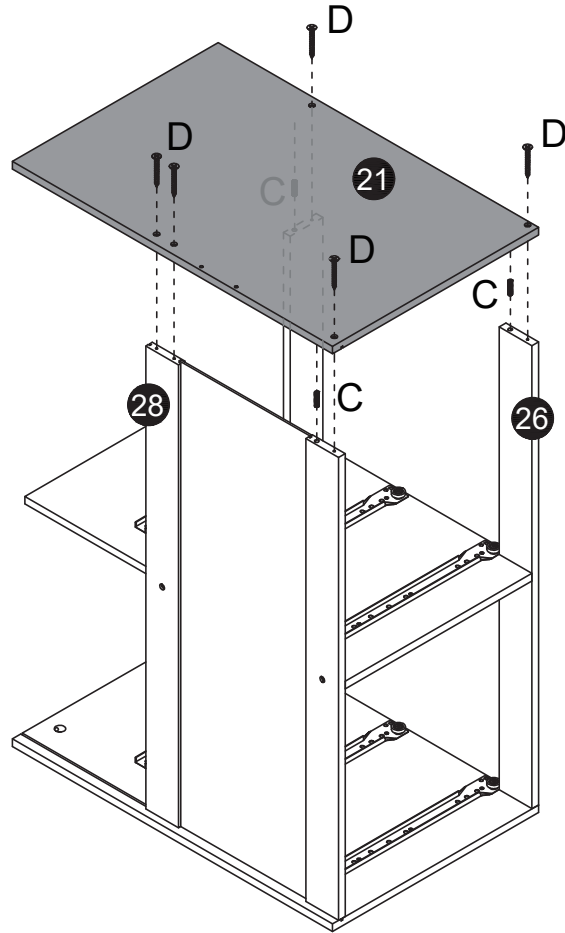


C x6

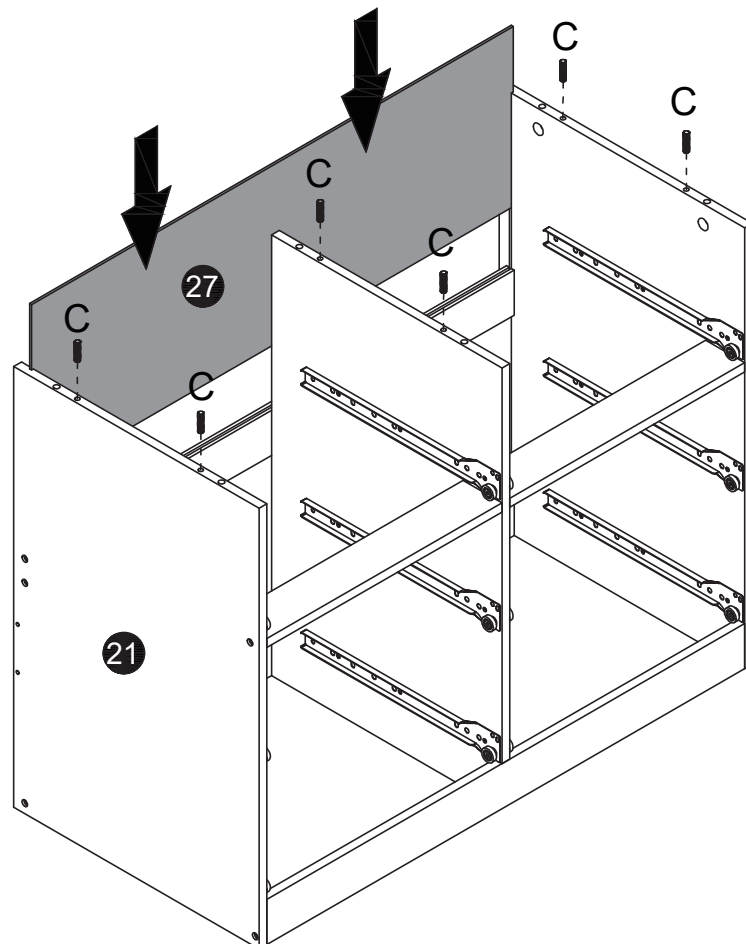

A x6




15

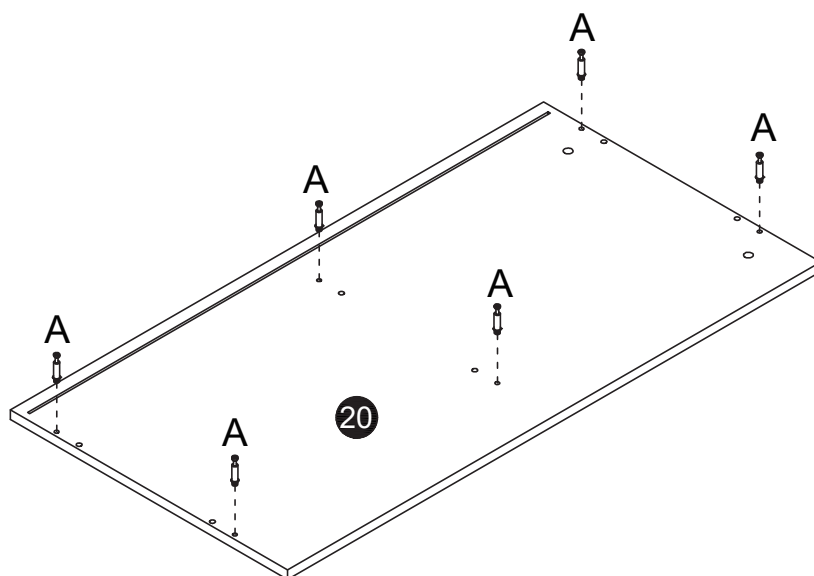

B x6




16

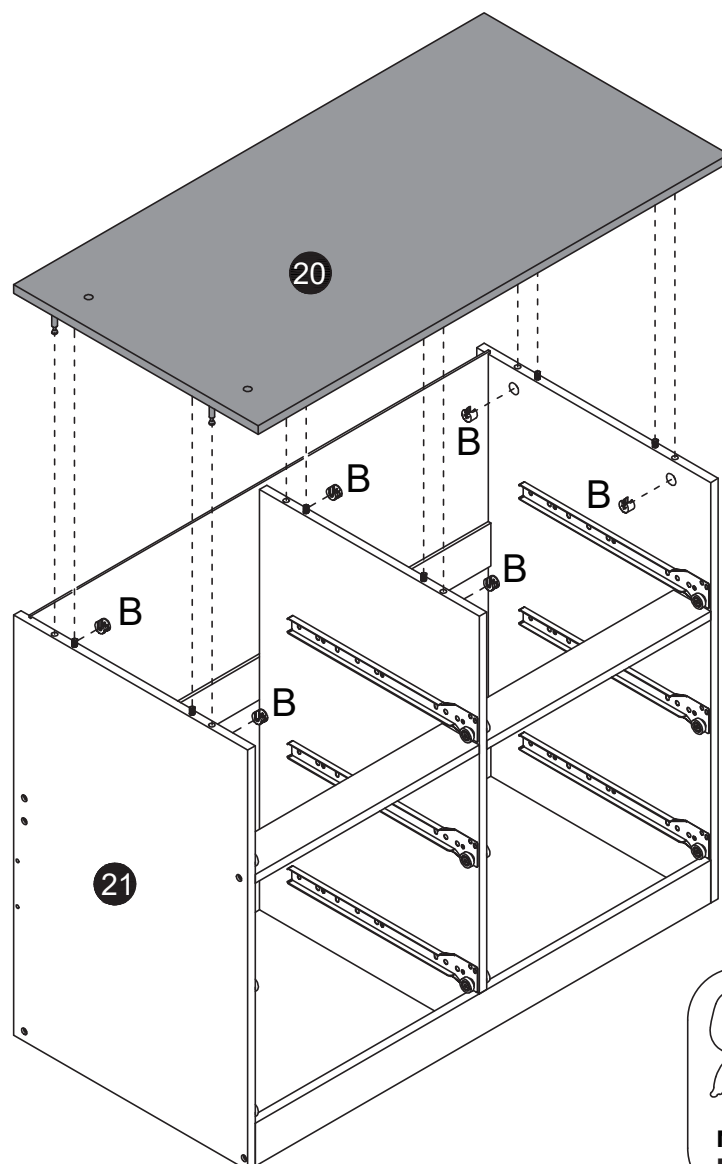

**Need Two or More
People To Complete**

C x4


D x4

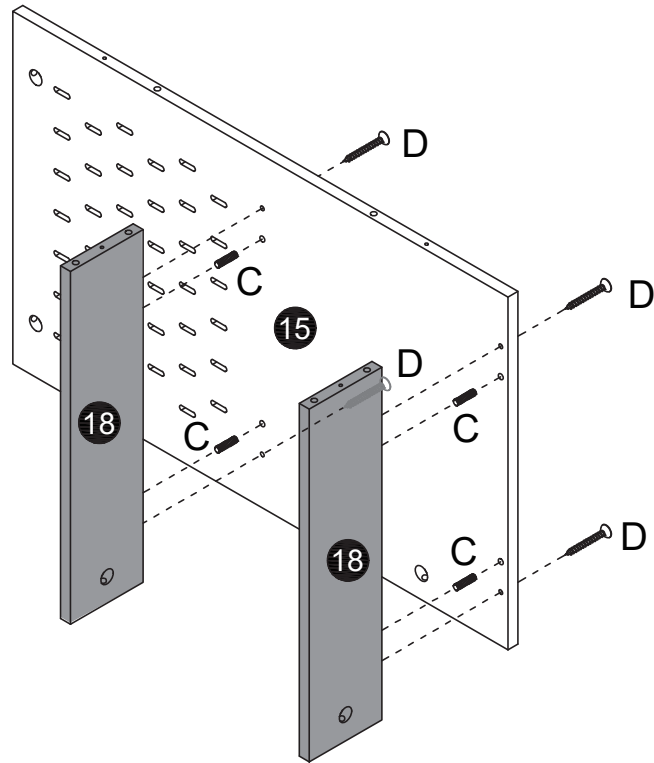


A x4

B x4

C x12




D x4

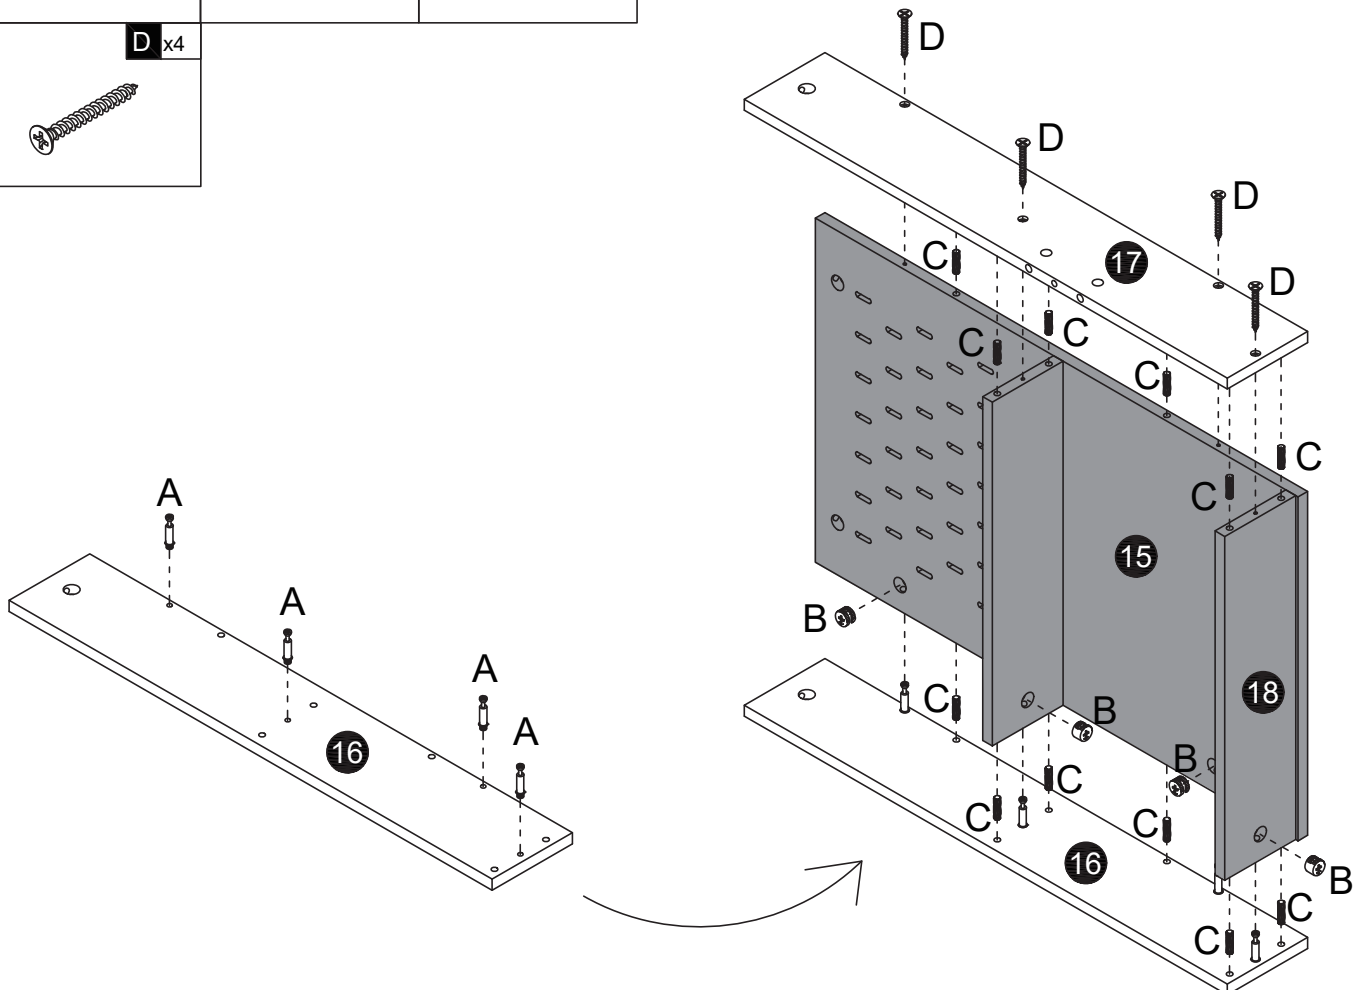


O x2



P x2




Caution : Confirm that the hole of accessory #O aligns with the hole of plate #17.

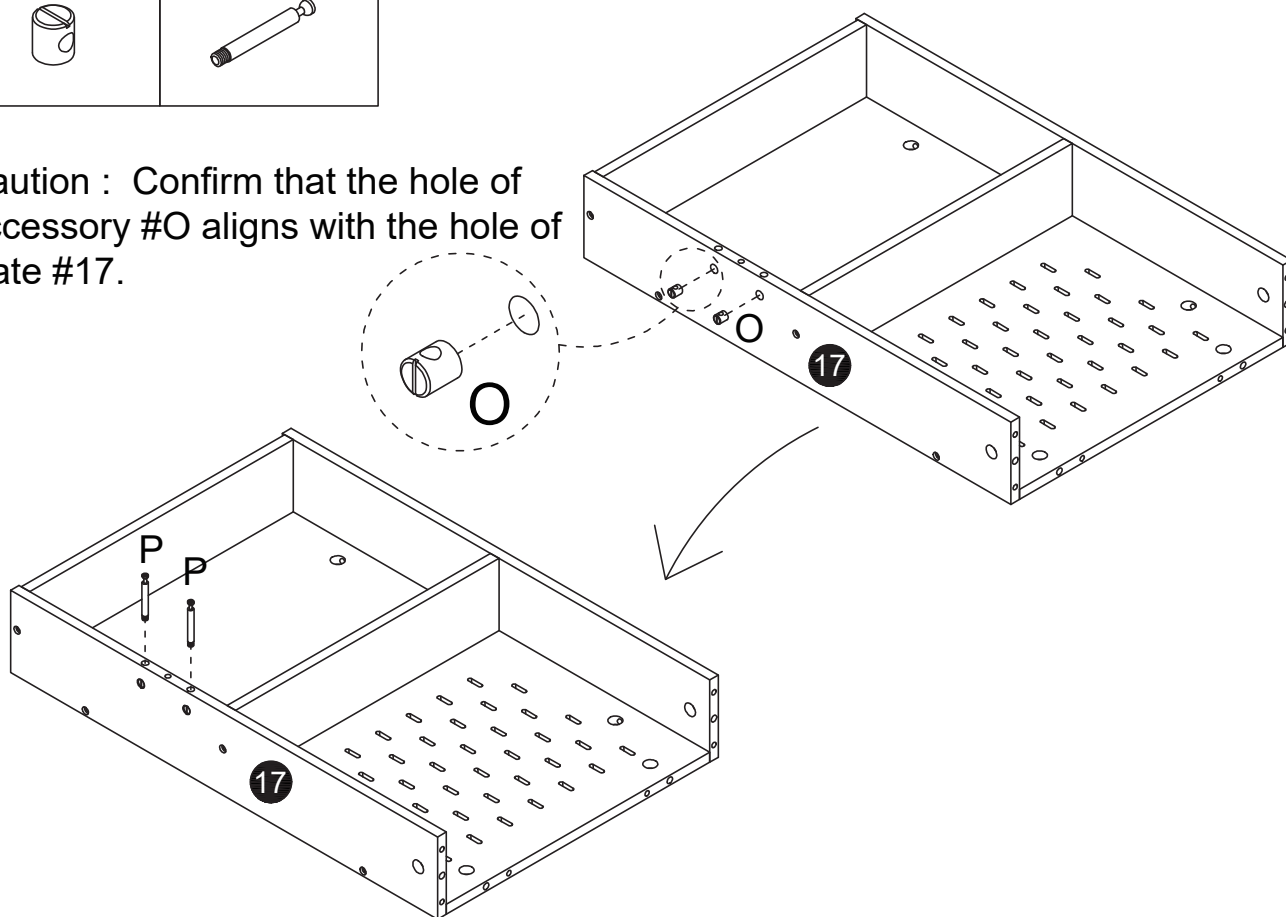

B x2





C x1

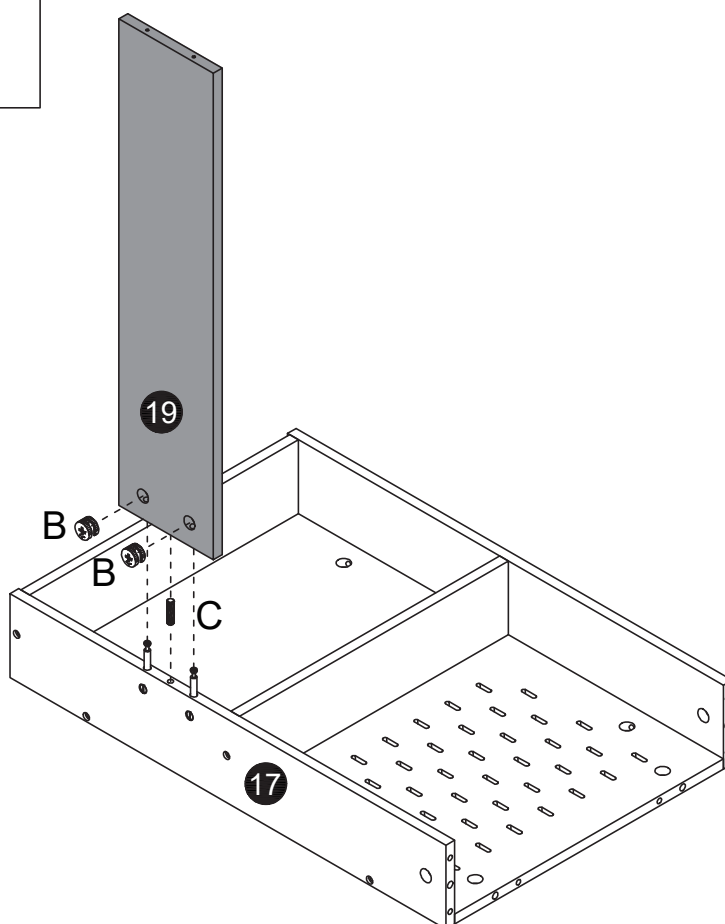

C x6

D x2





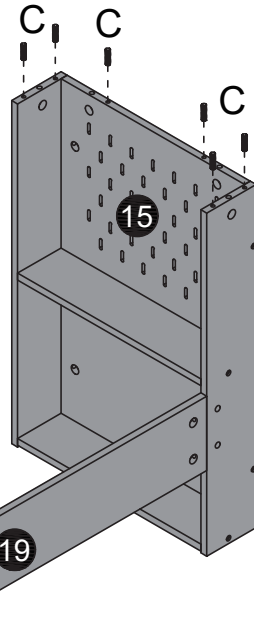
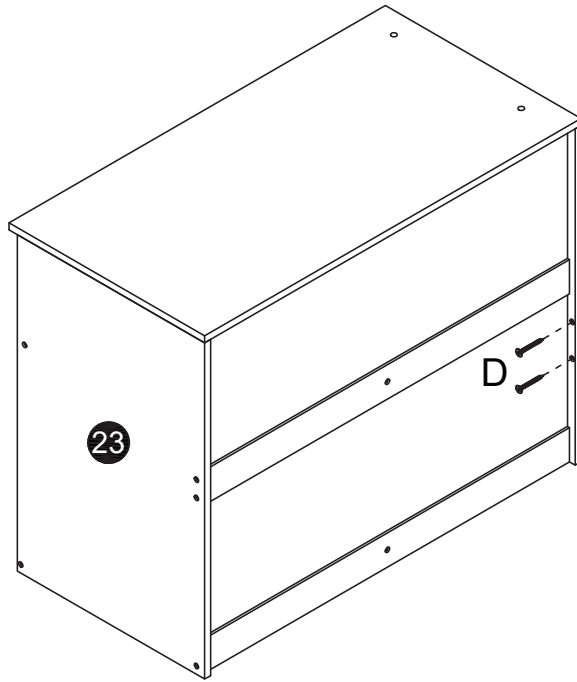


C x4

E x6

CL x1



CR x1

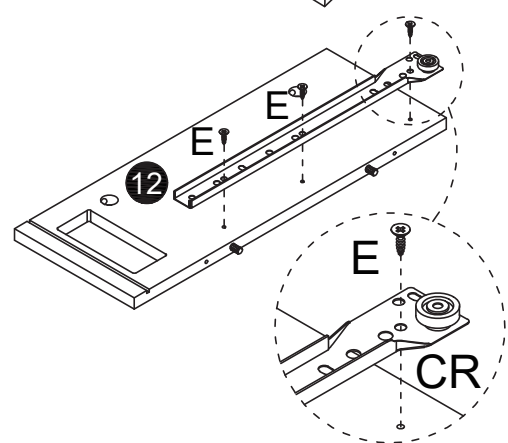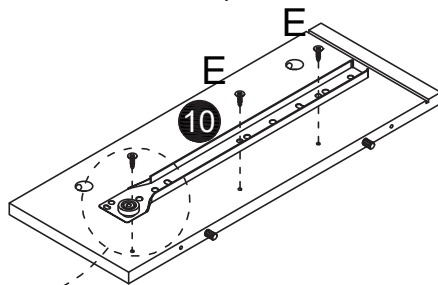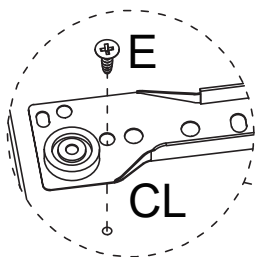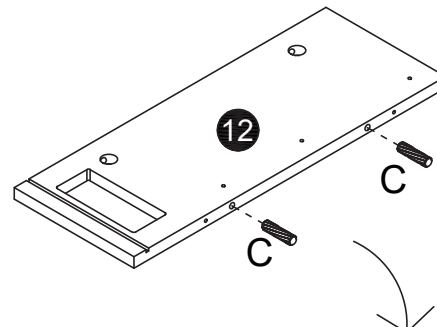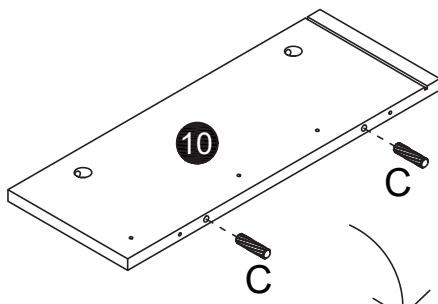




E x6

CL x1


CR x1






Second Hole

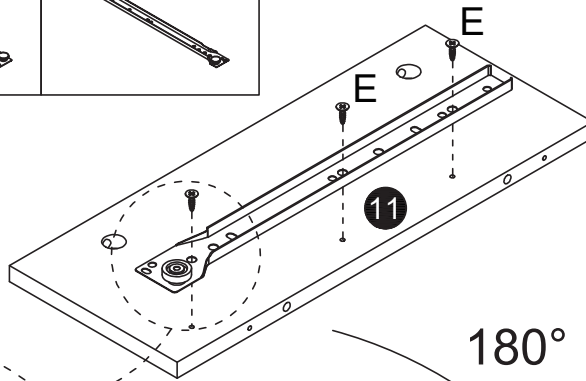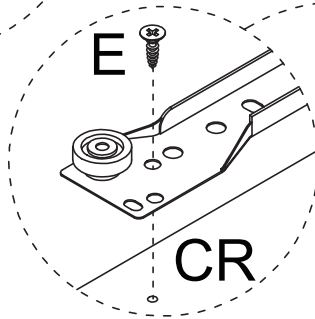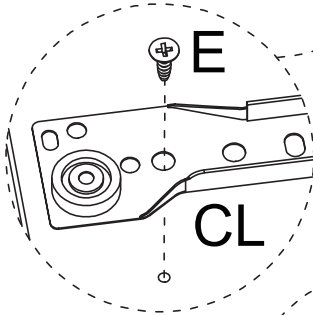

180°

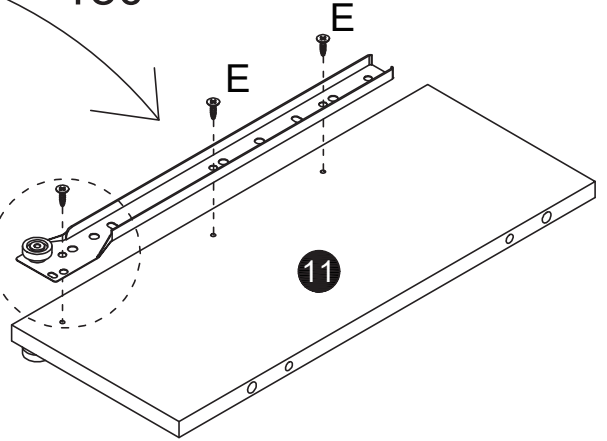


A x10

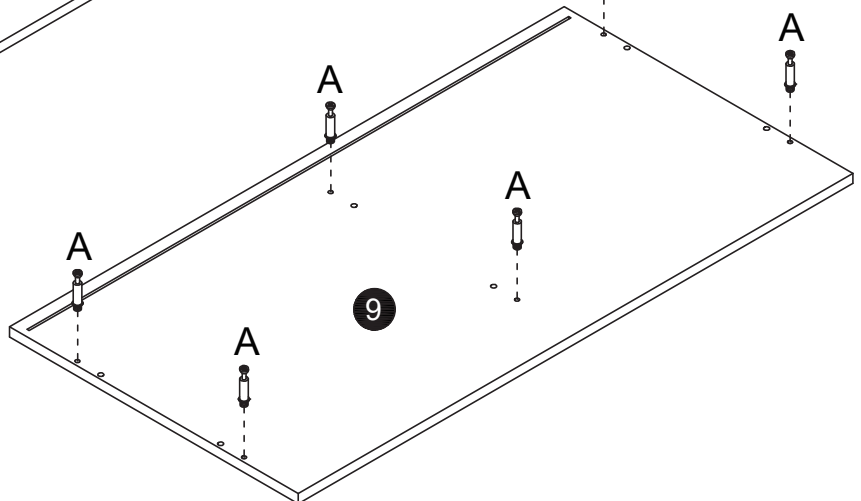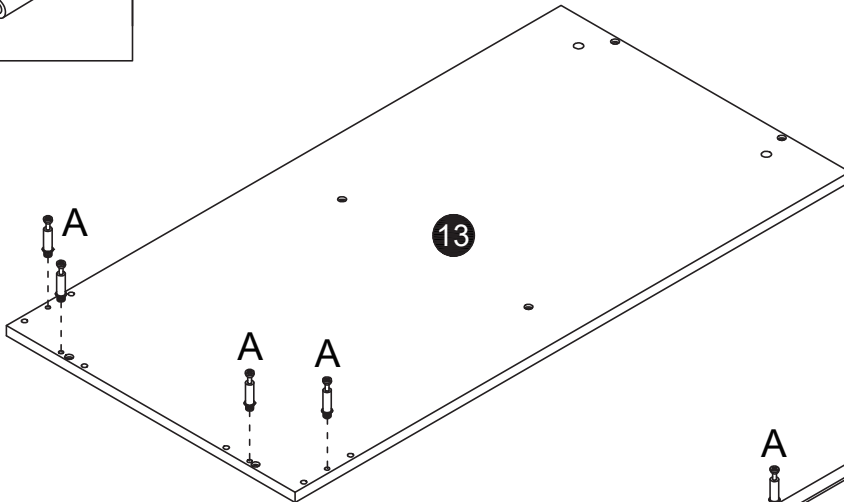

C x2



D x6

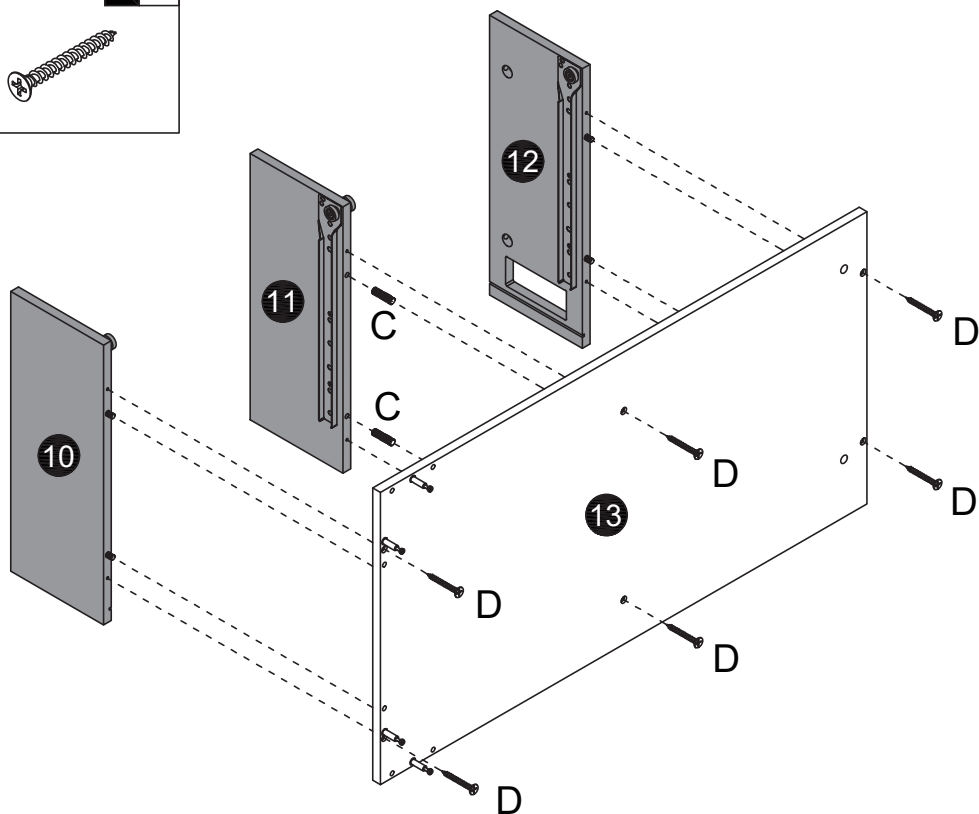


B x4



M x2




N x2

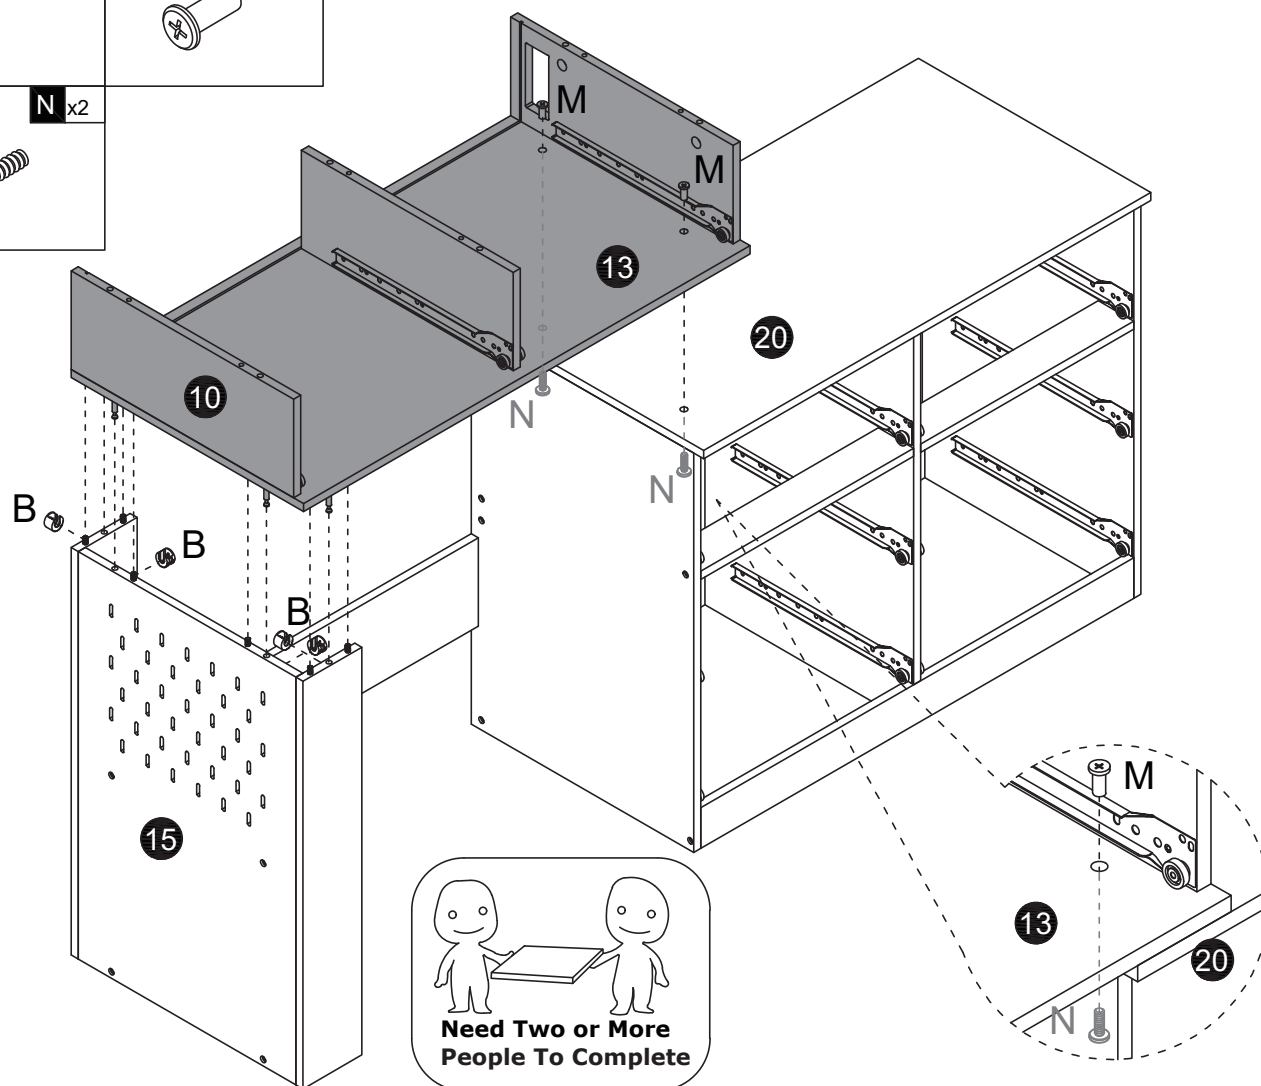

C x6




27

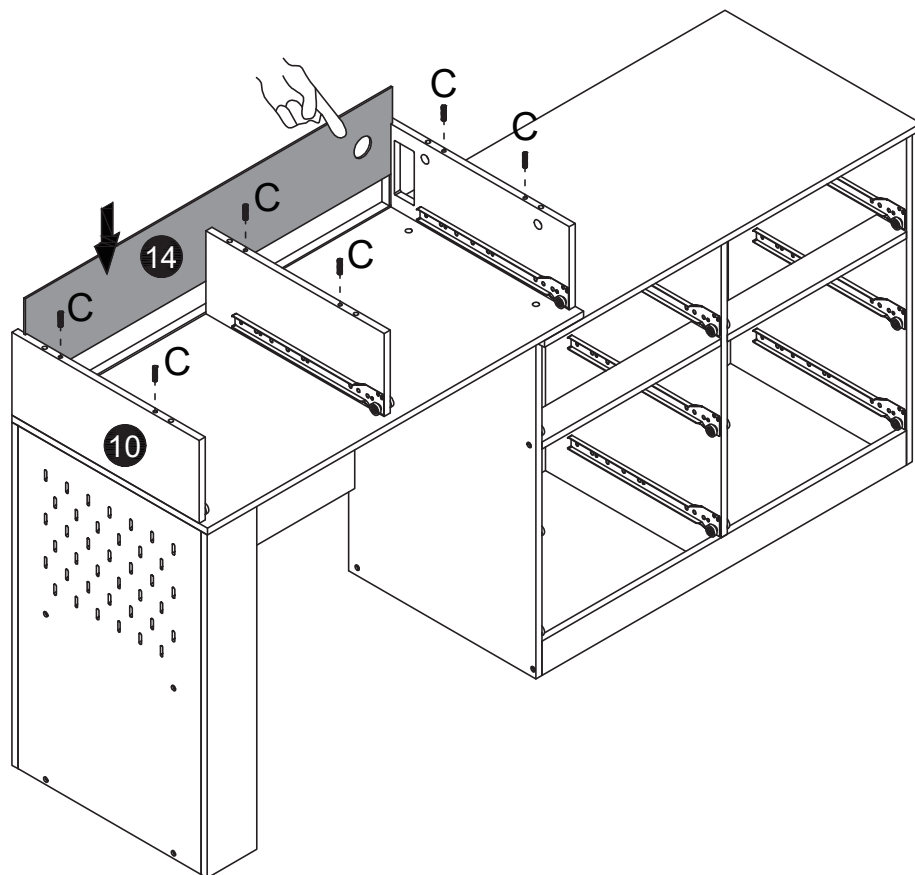



B x6



28

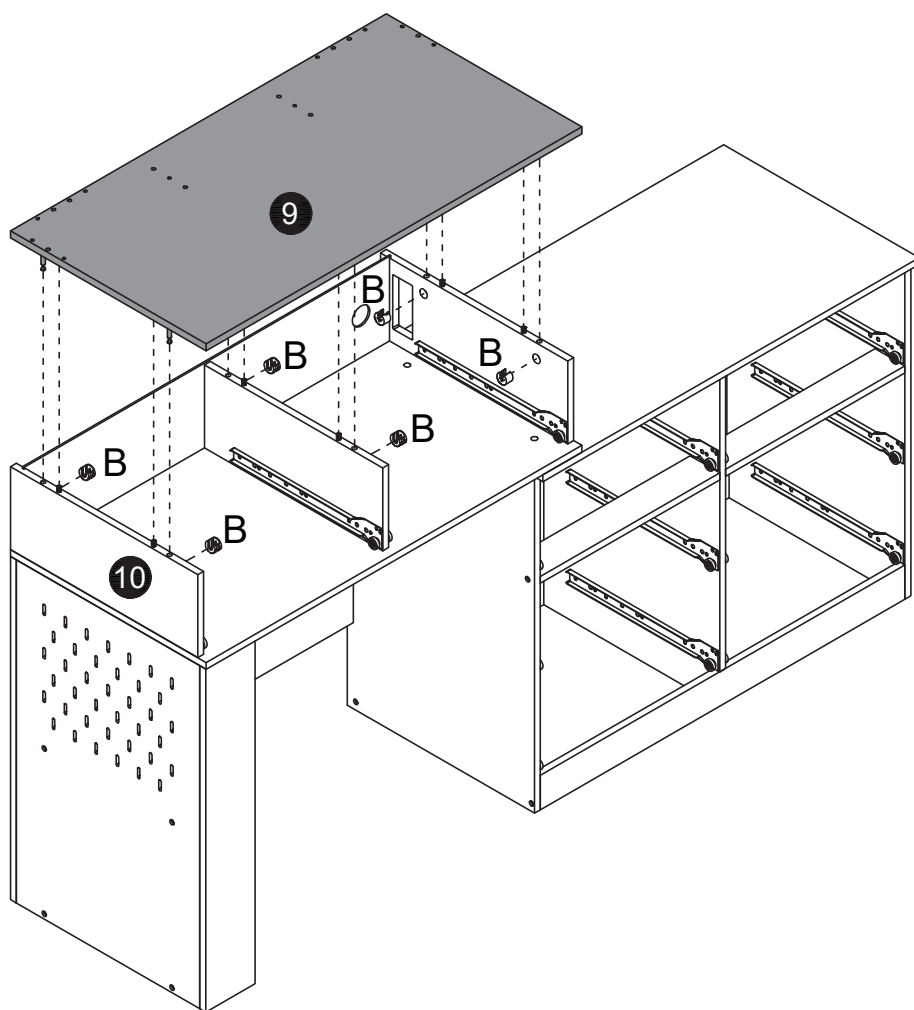


A x10

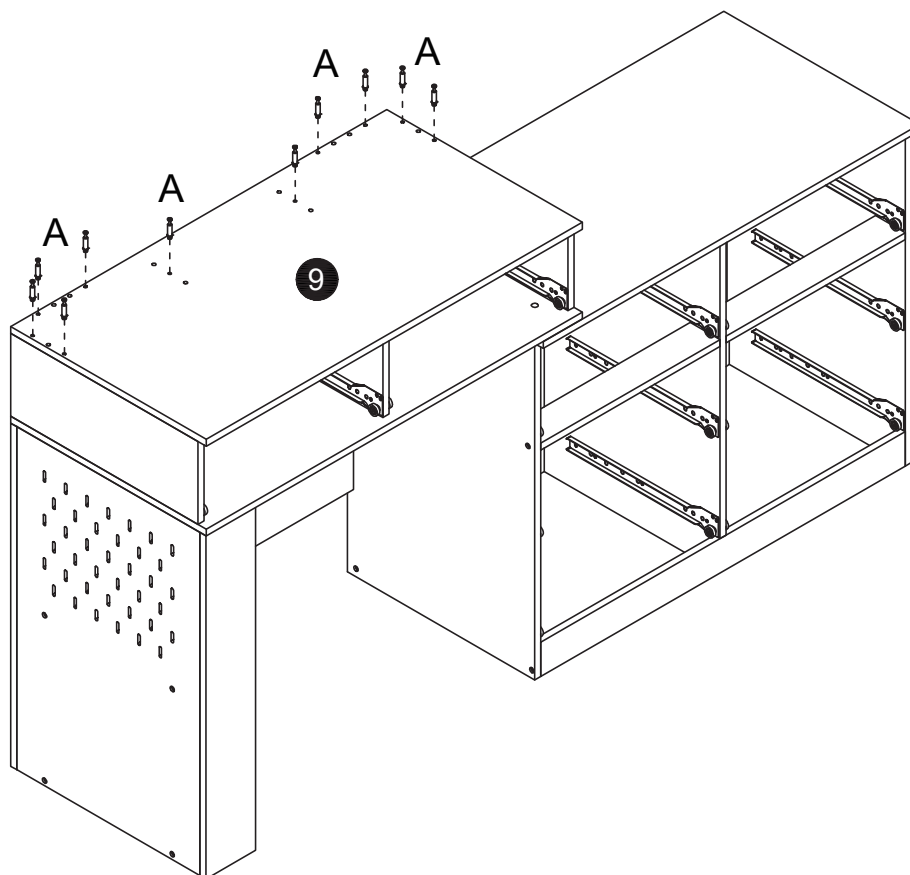



C x12



D x7

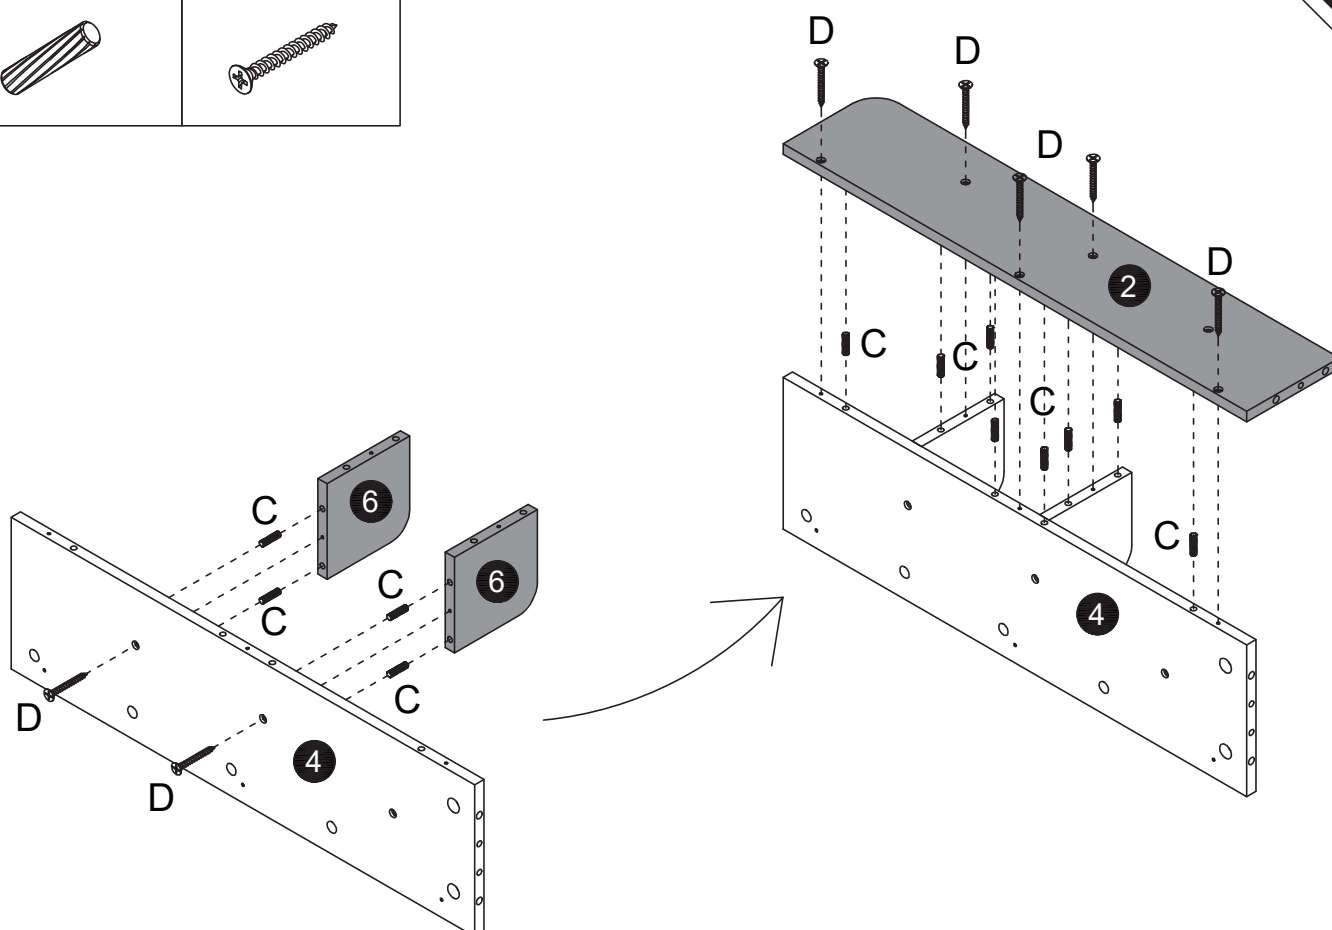


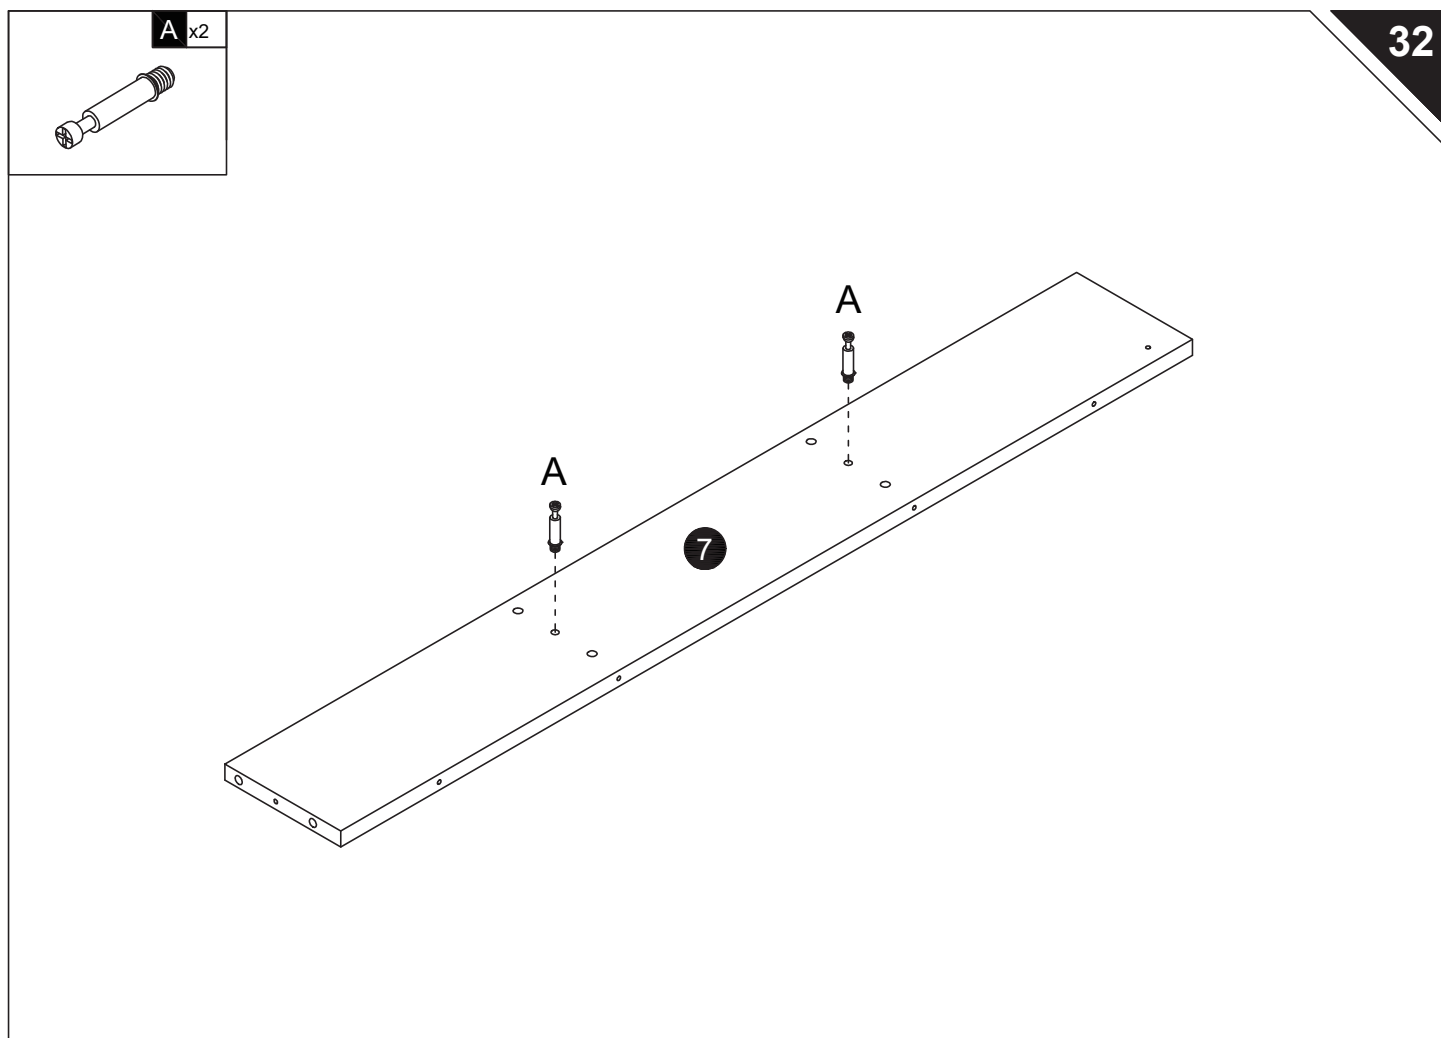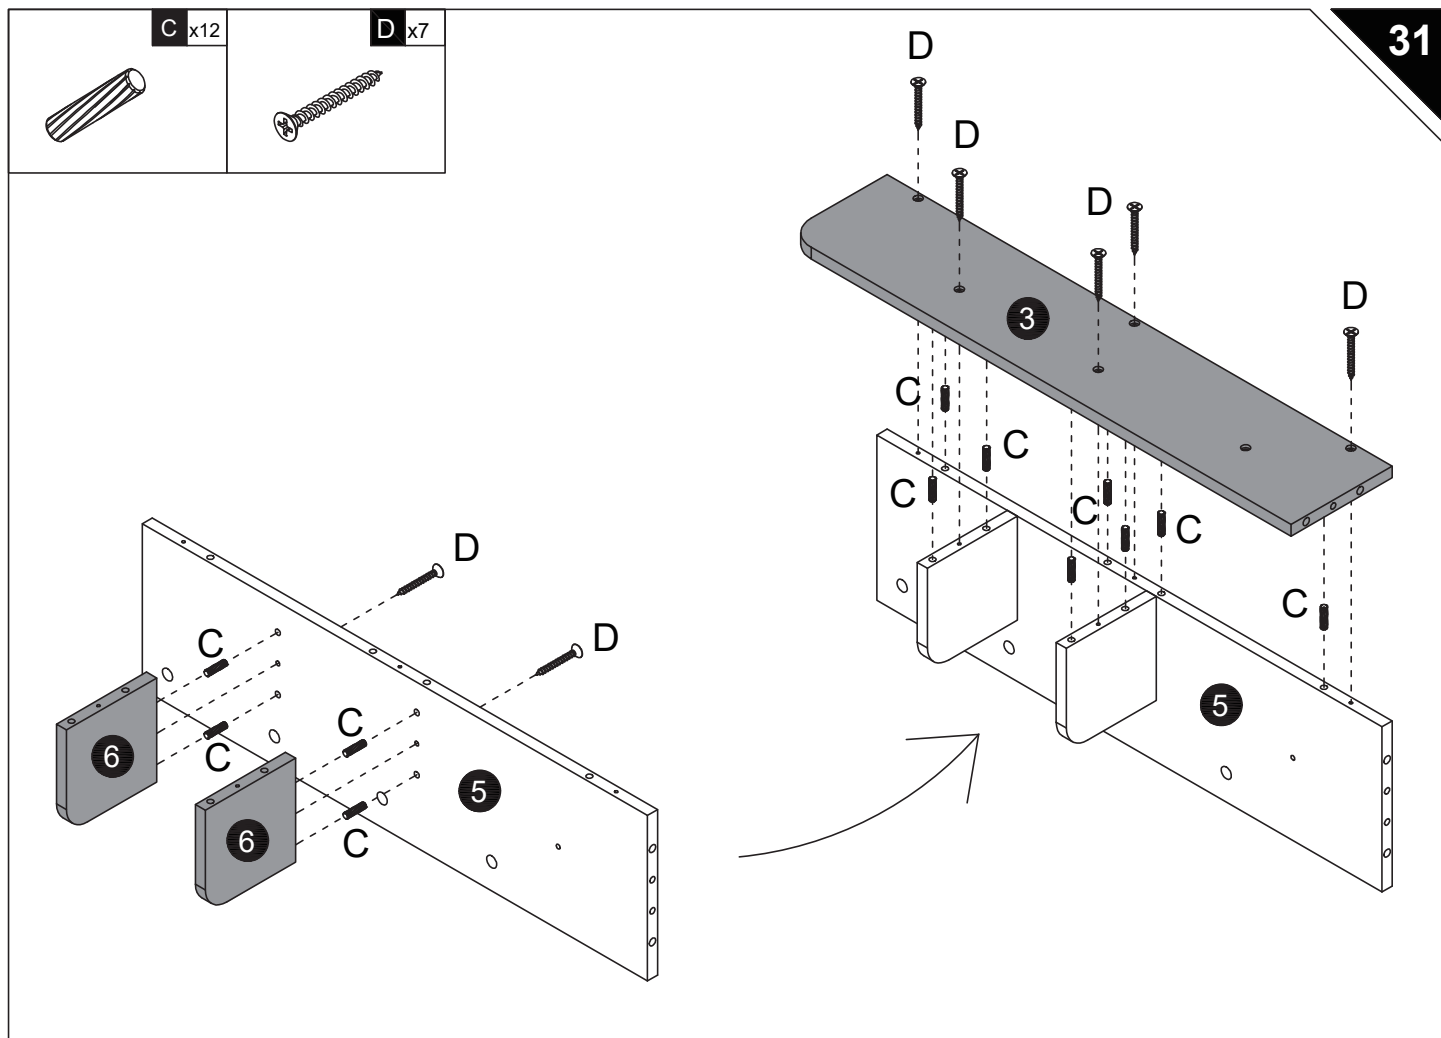

B x2



C x4

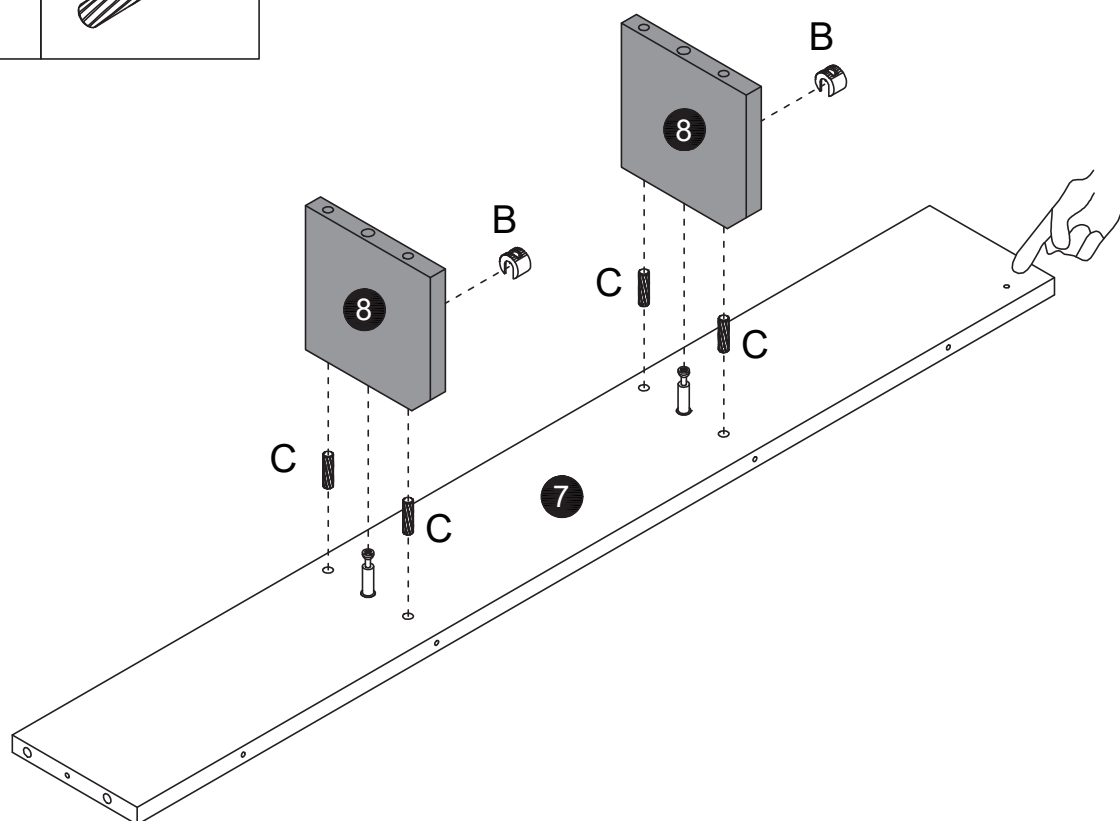

J x1






K x1



K-1




K-2

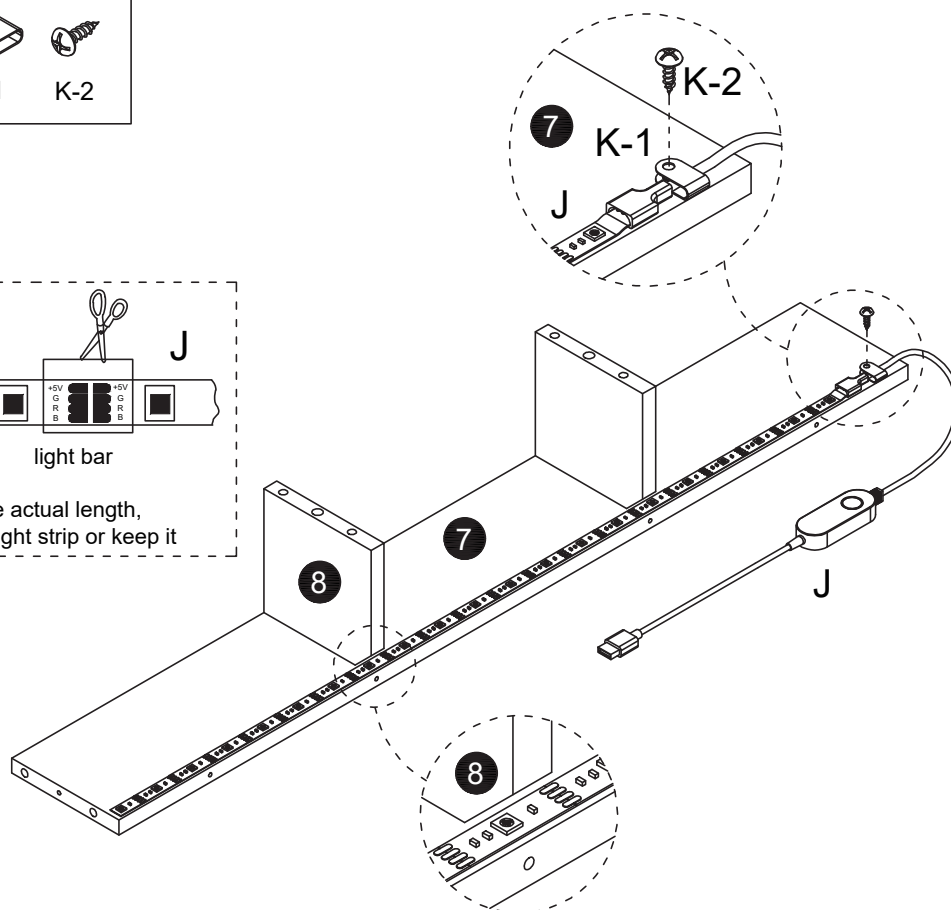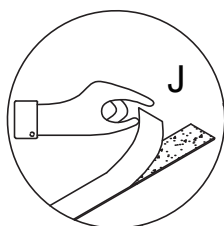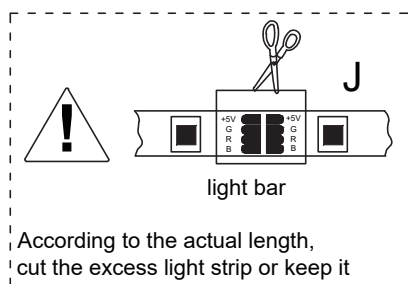


C x4



D x2

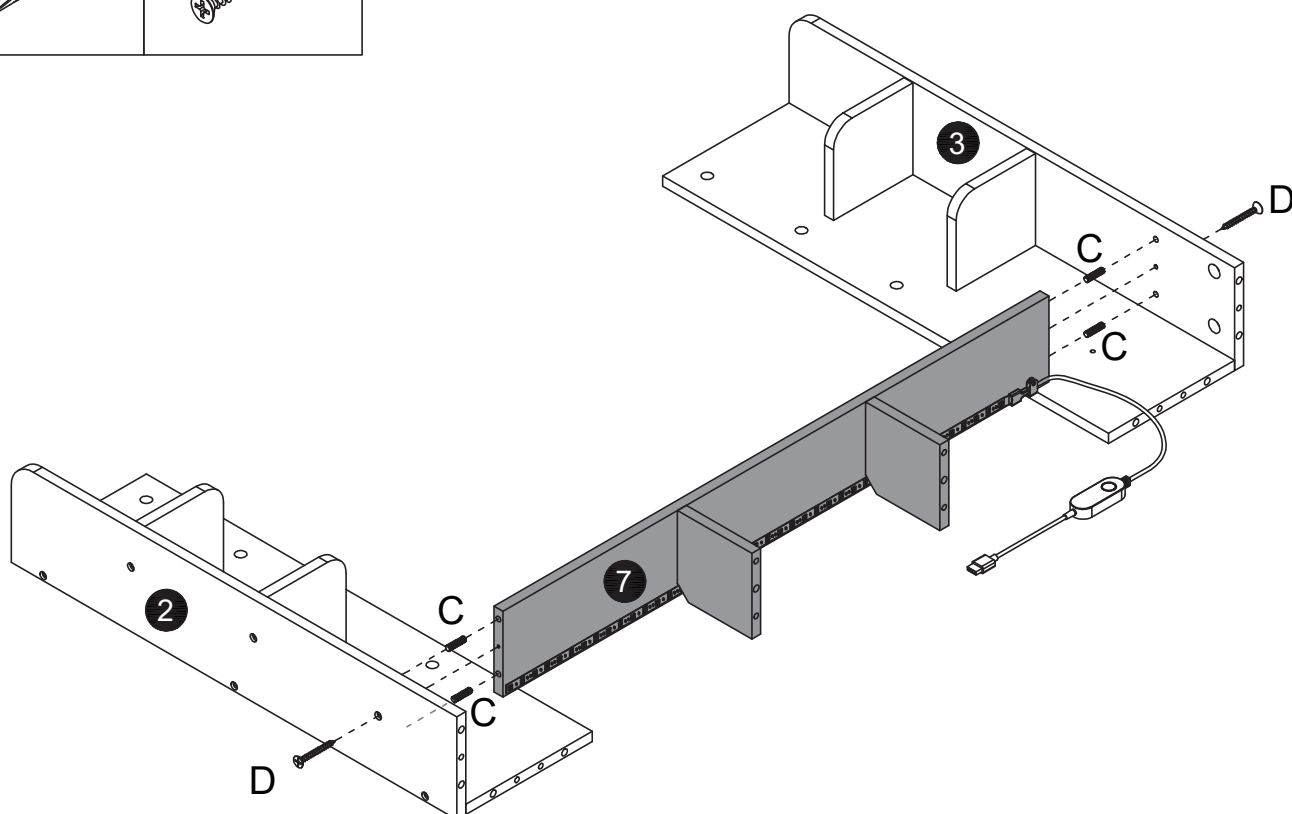


D x2


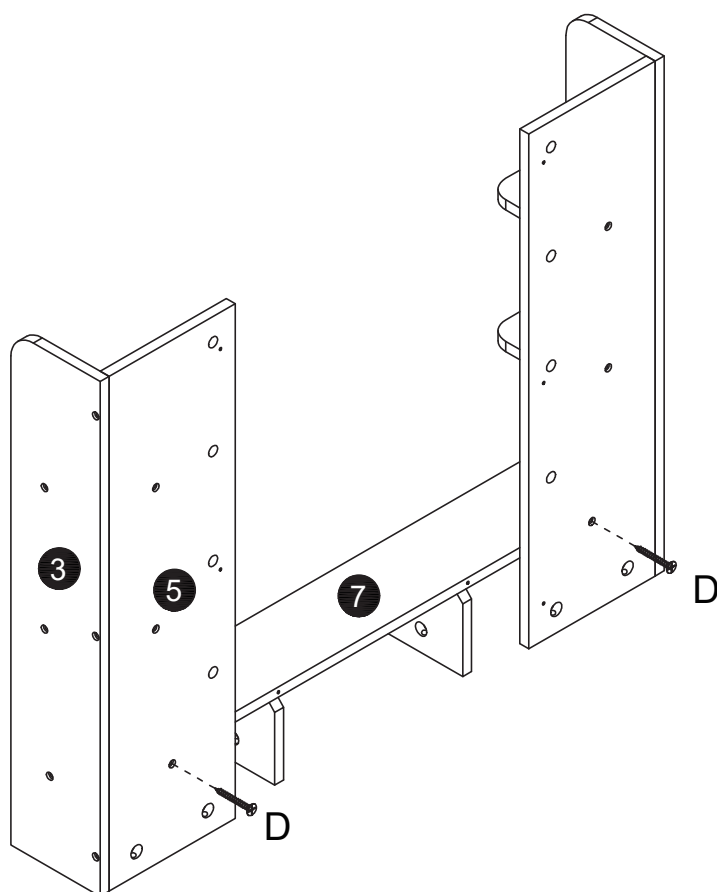





B x10






C x10

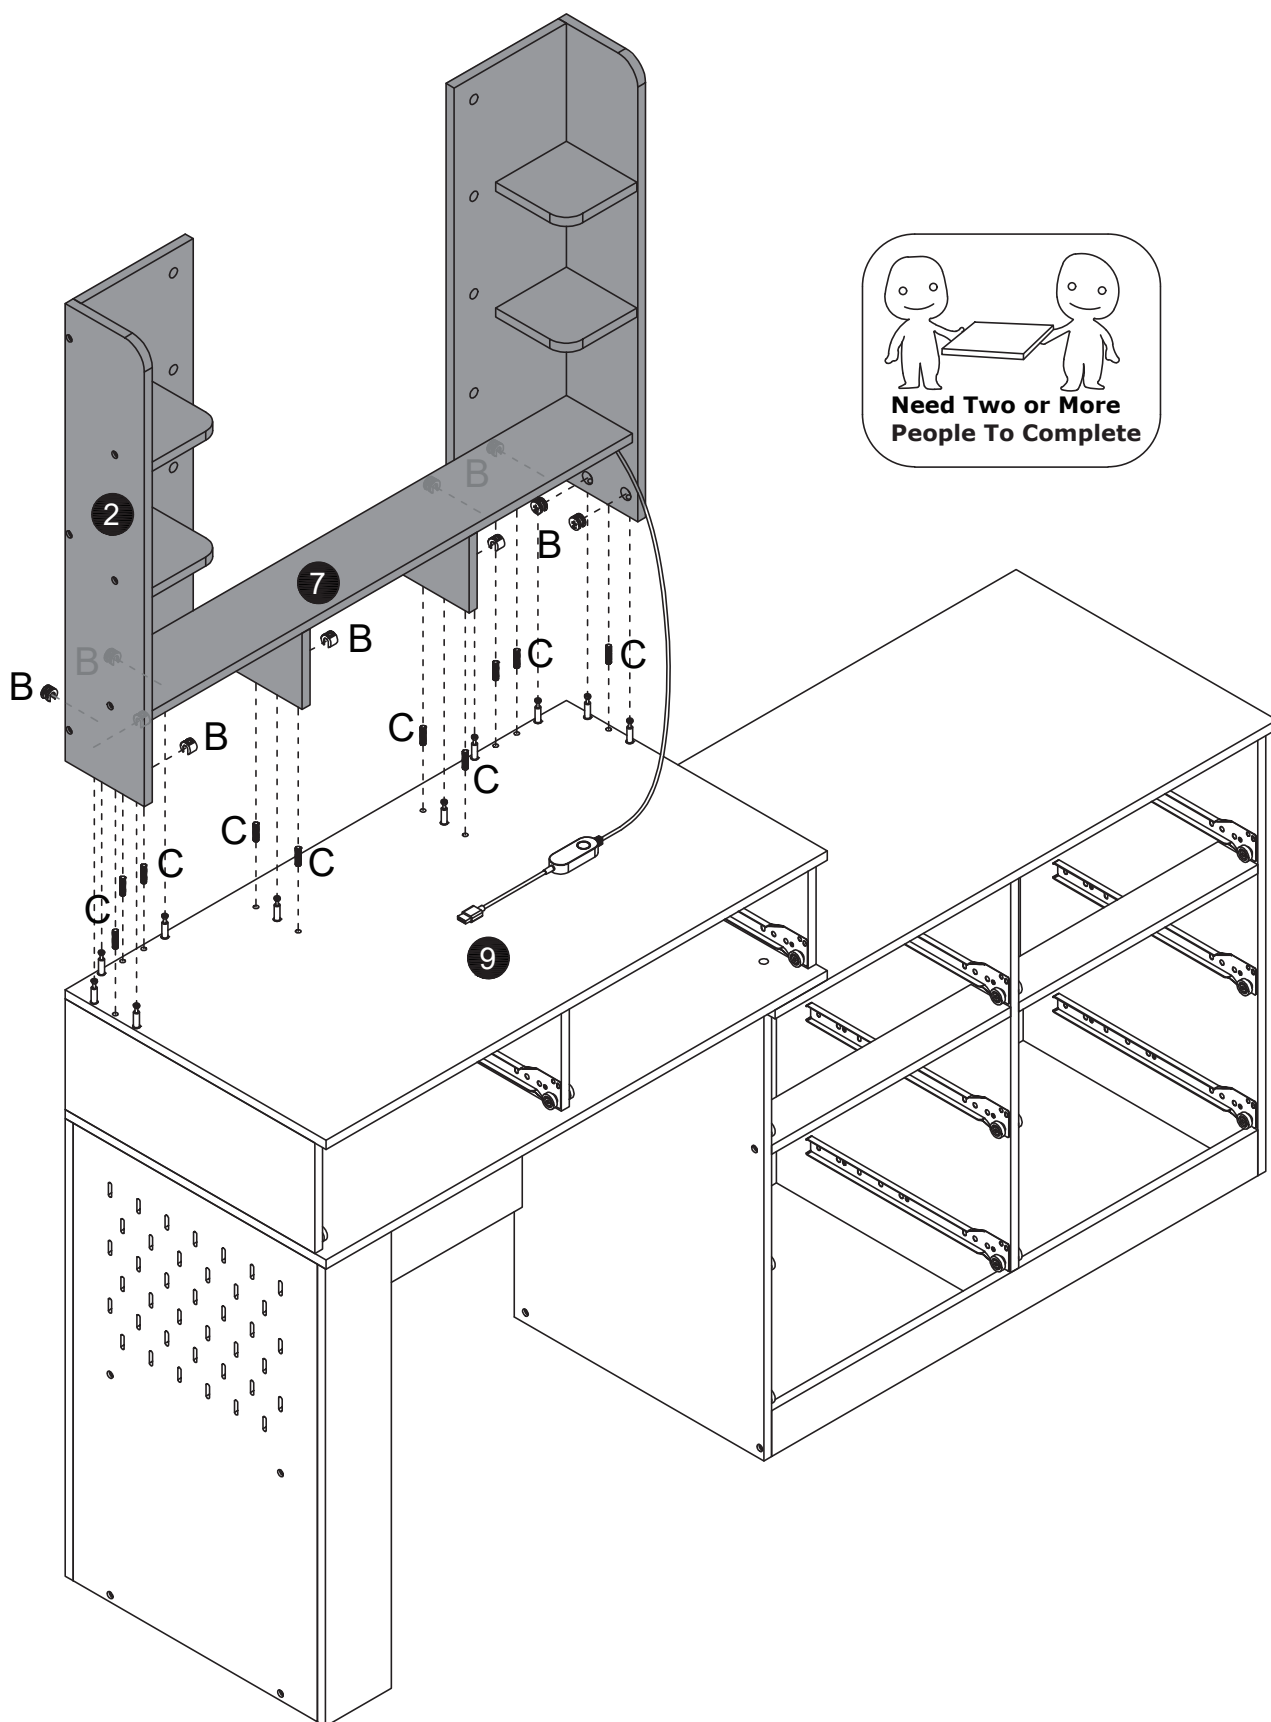

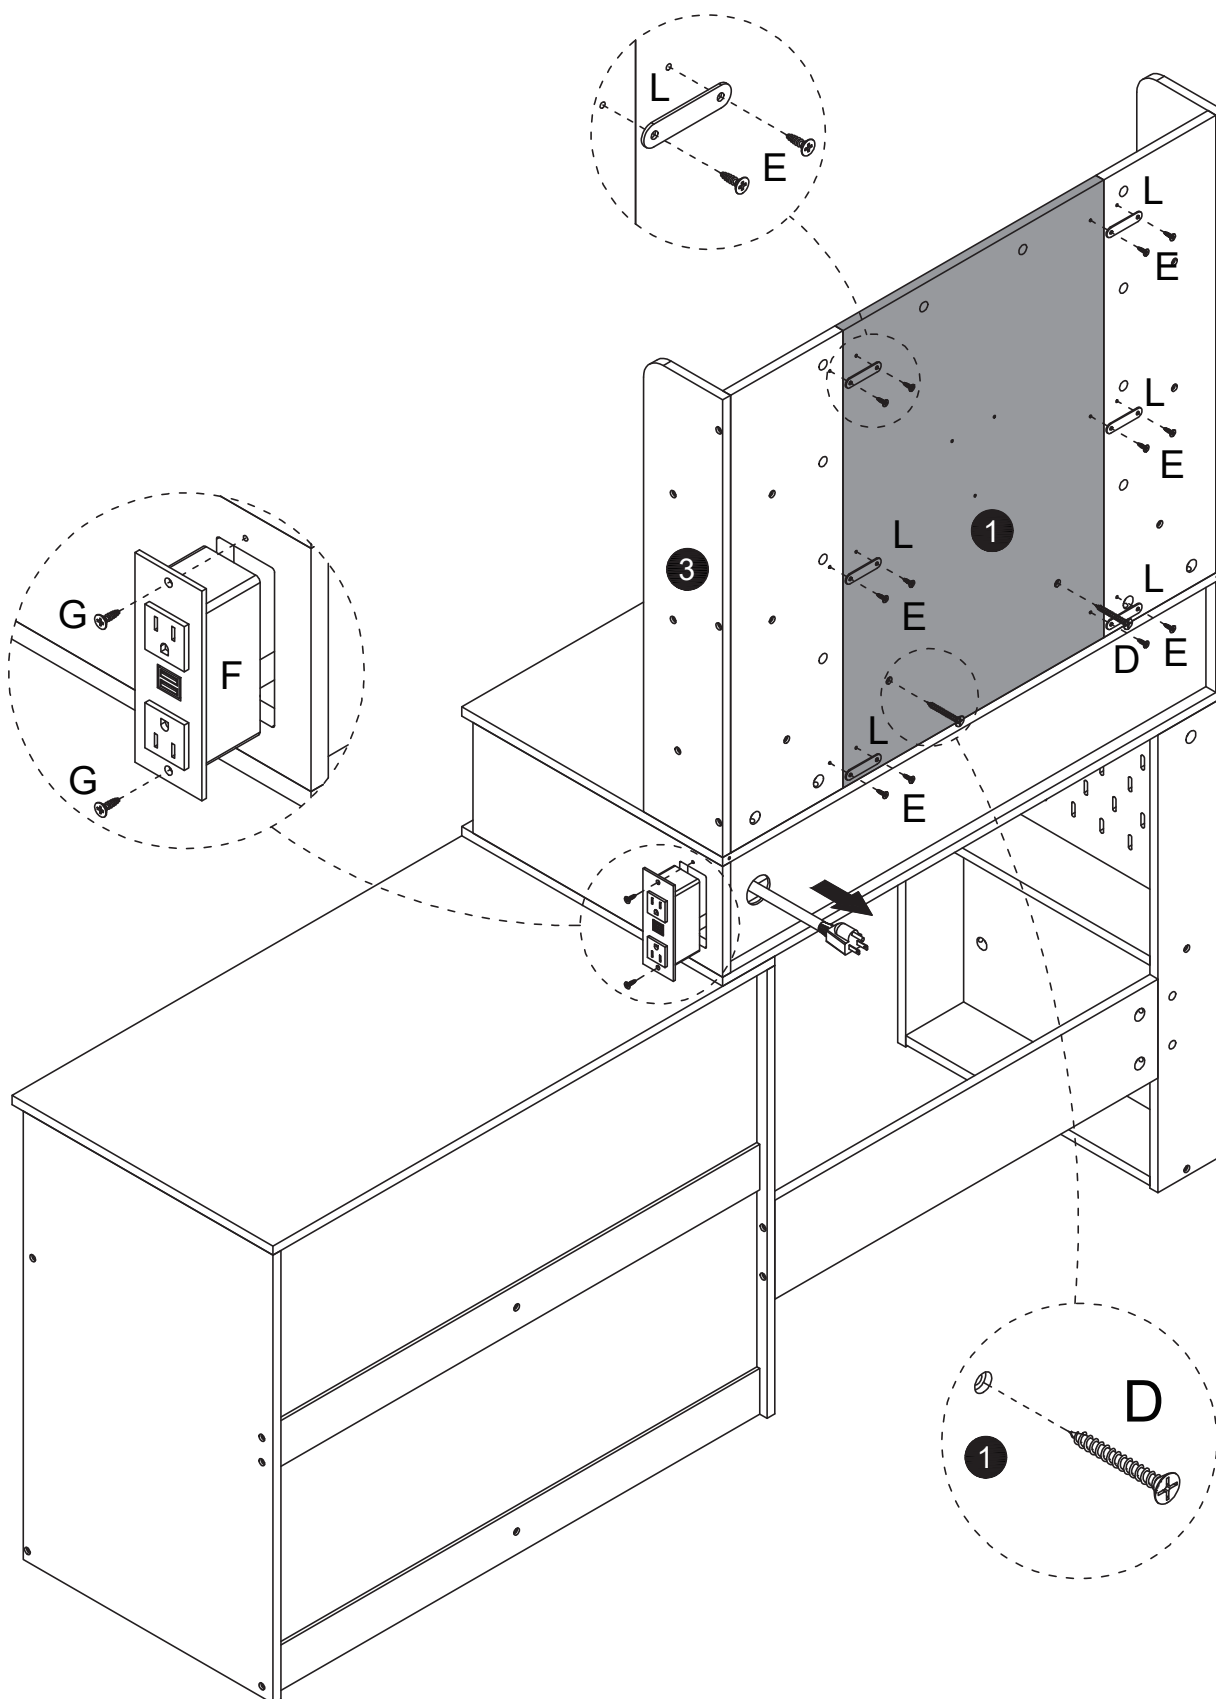

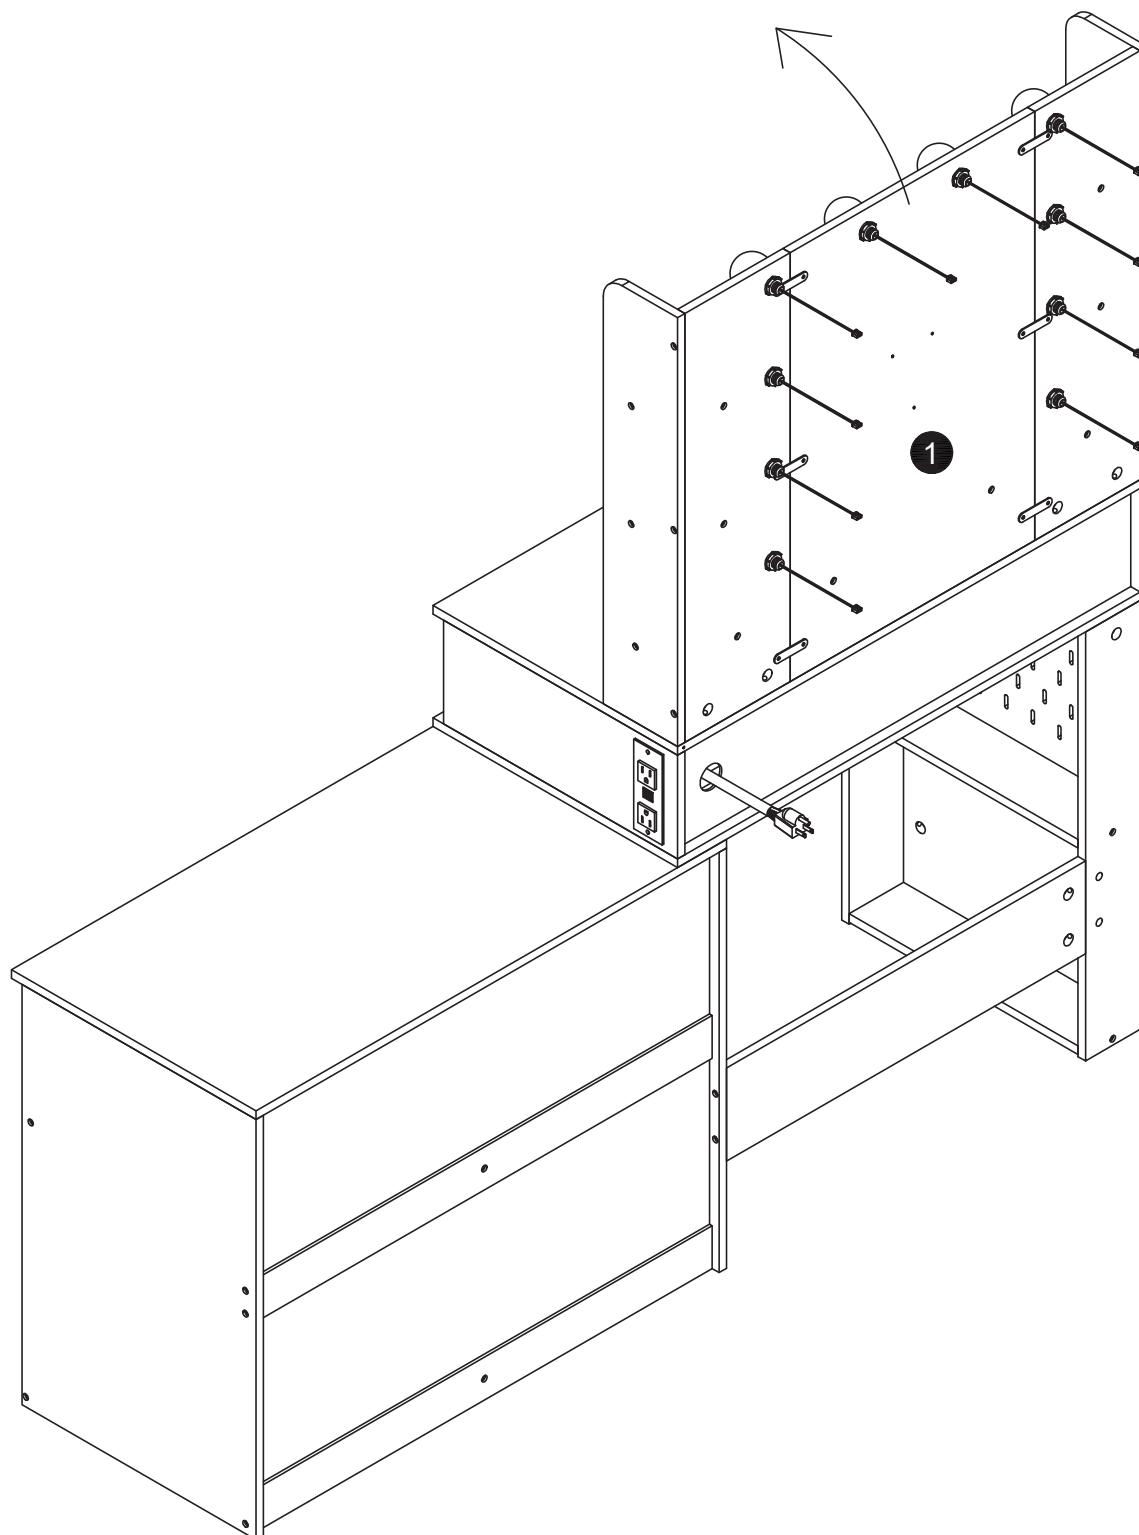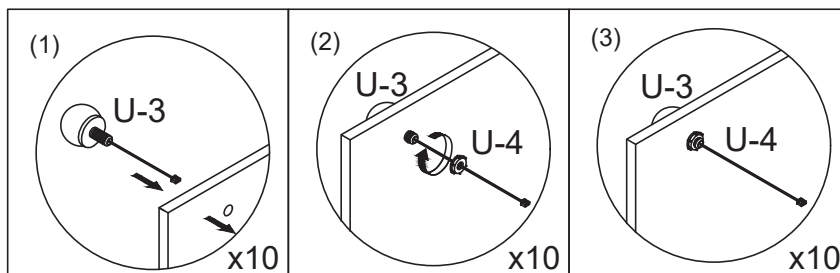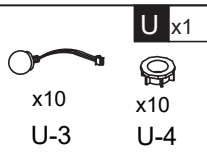

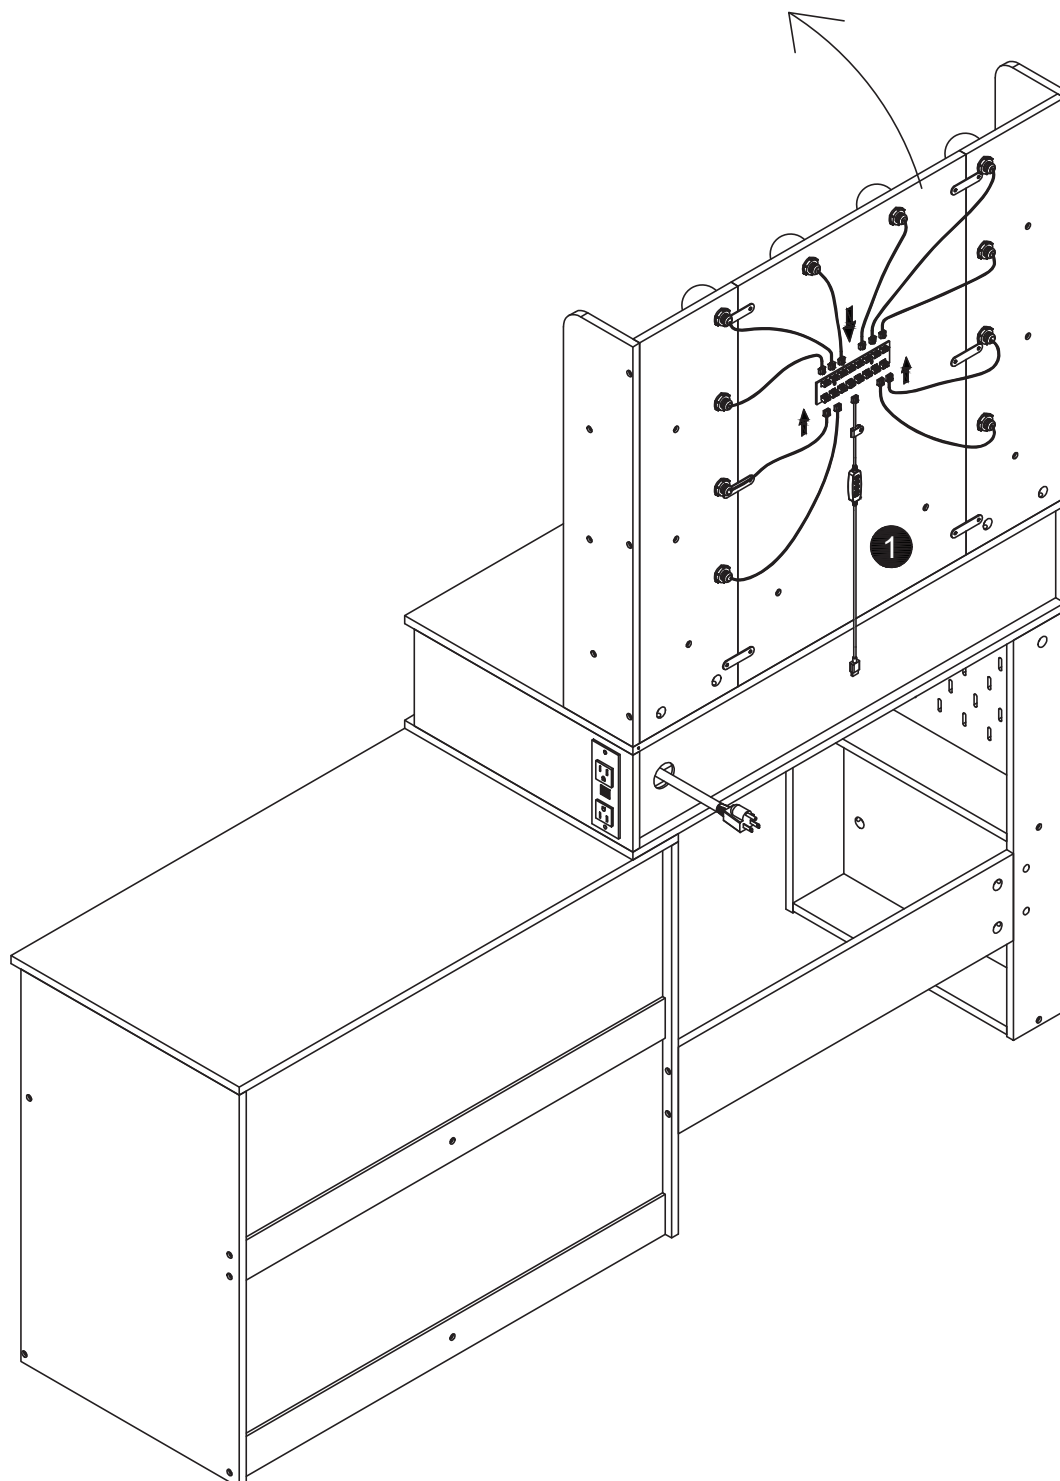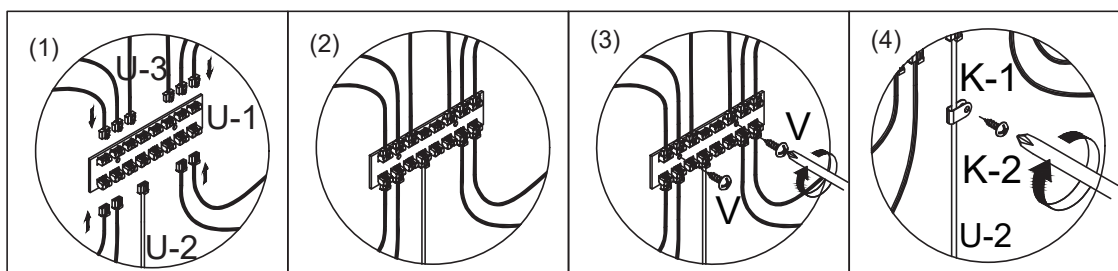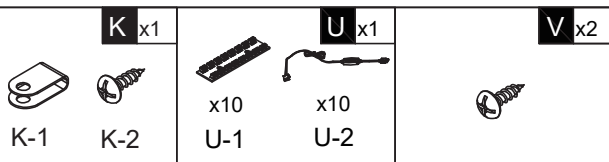






S-1






S-2

S


x12

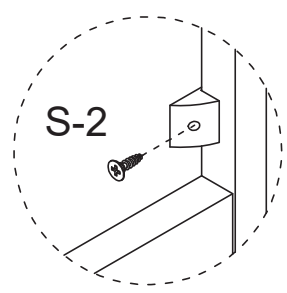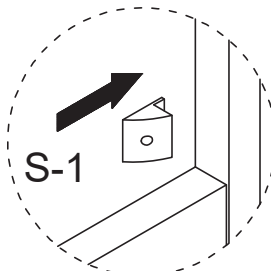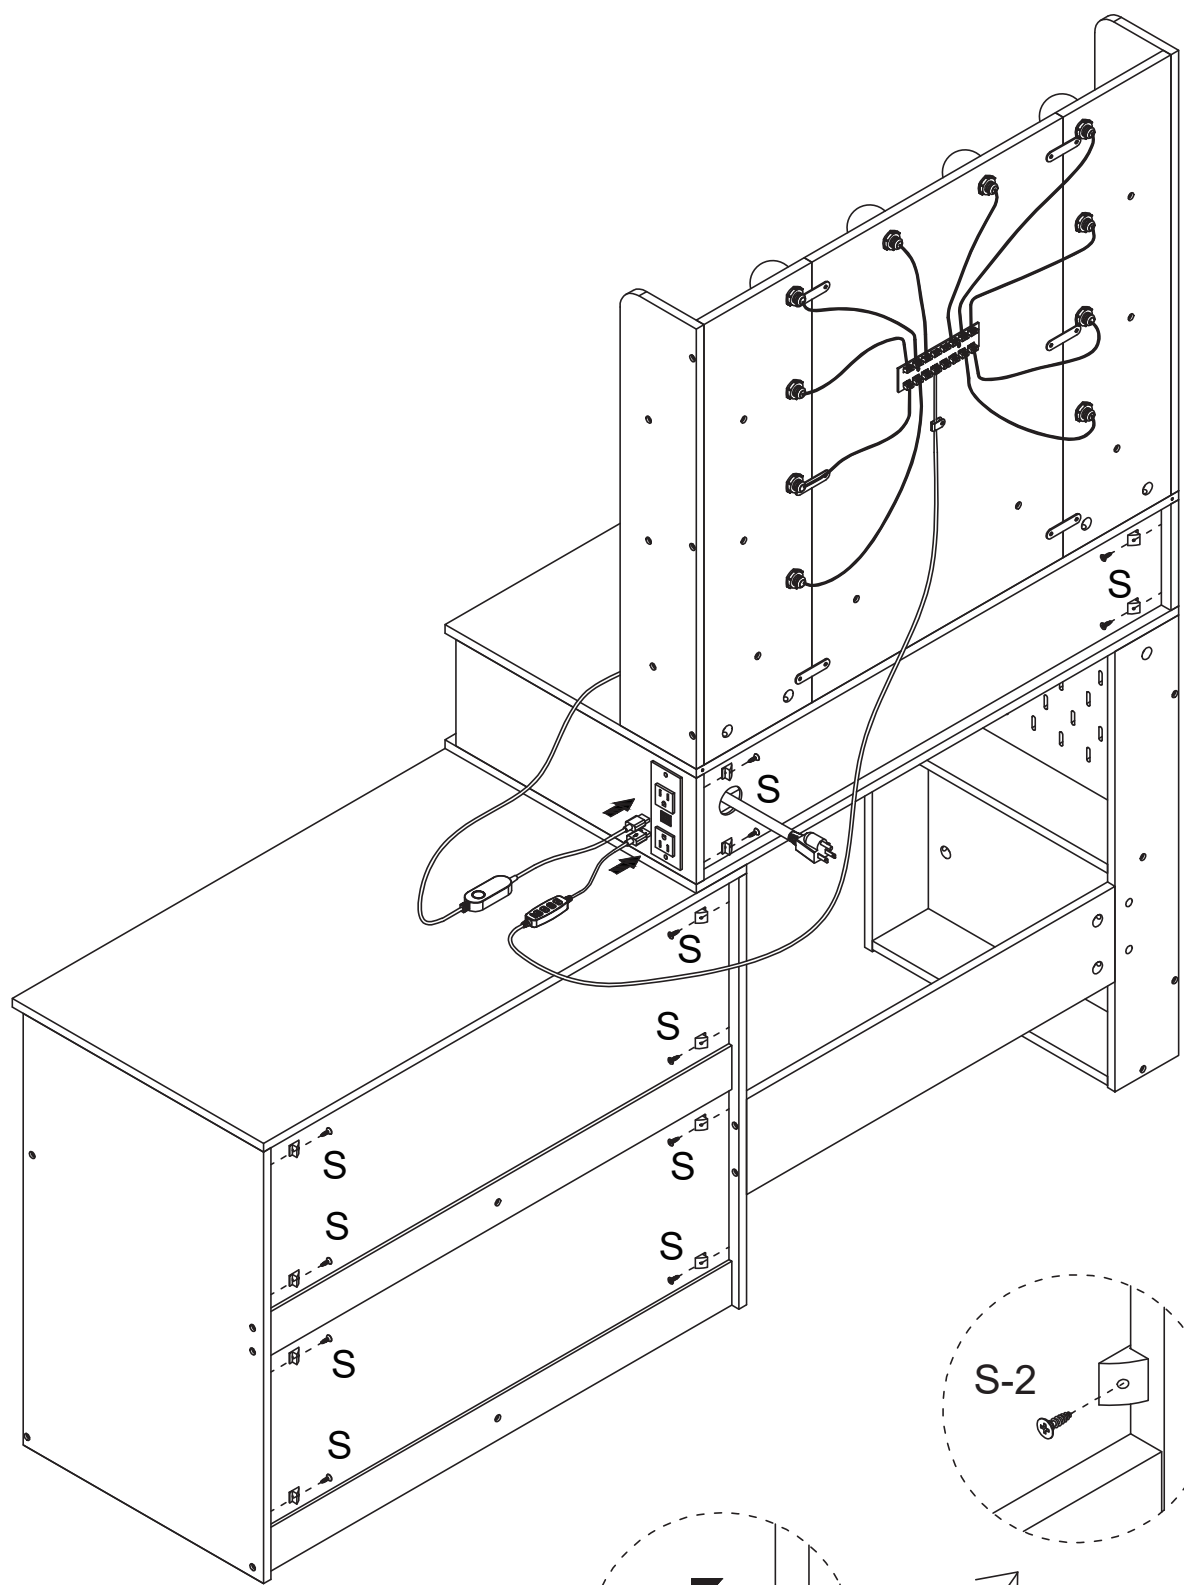

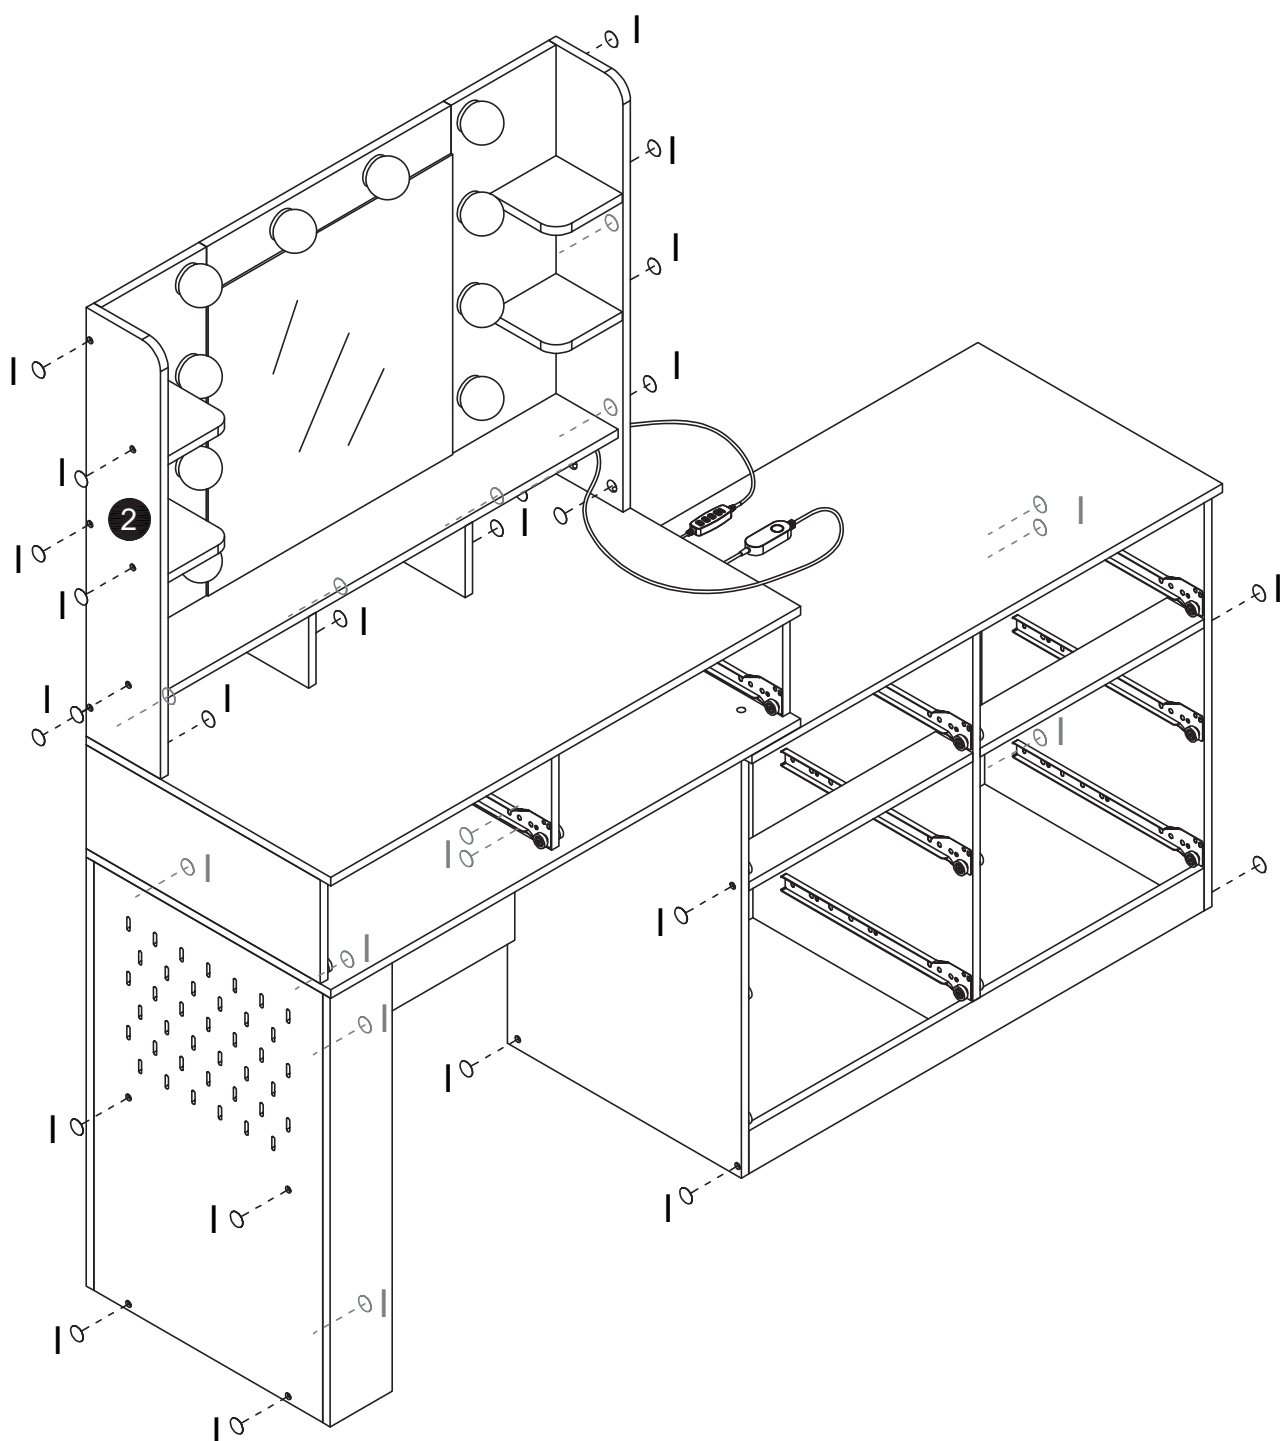


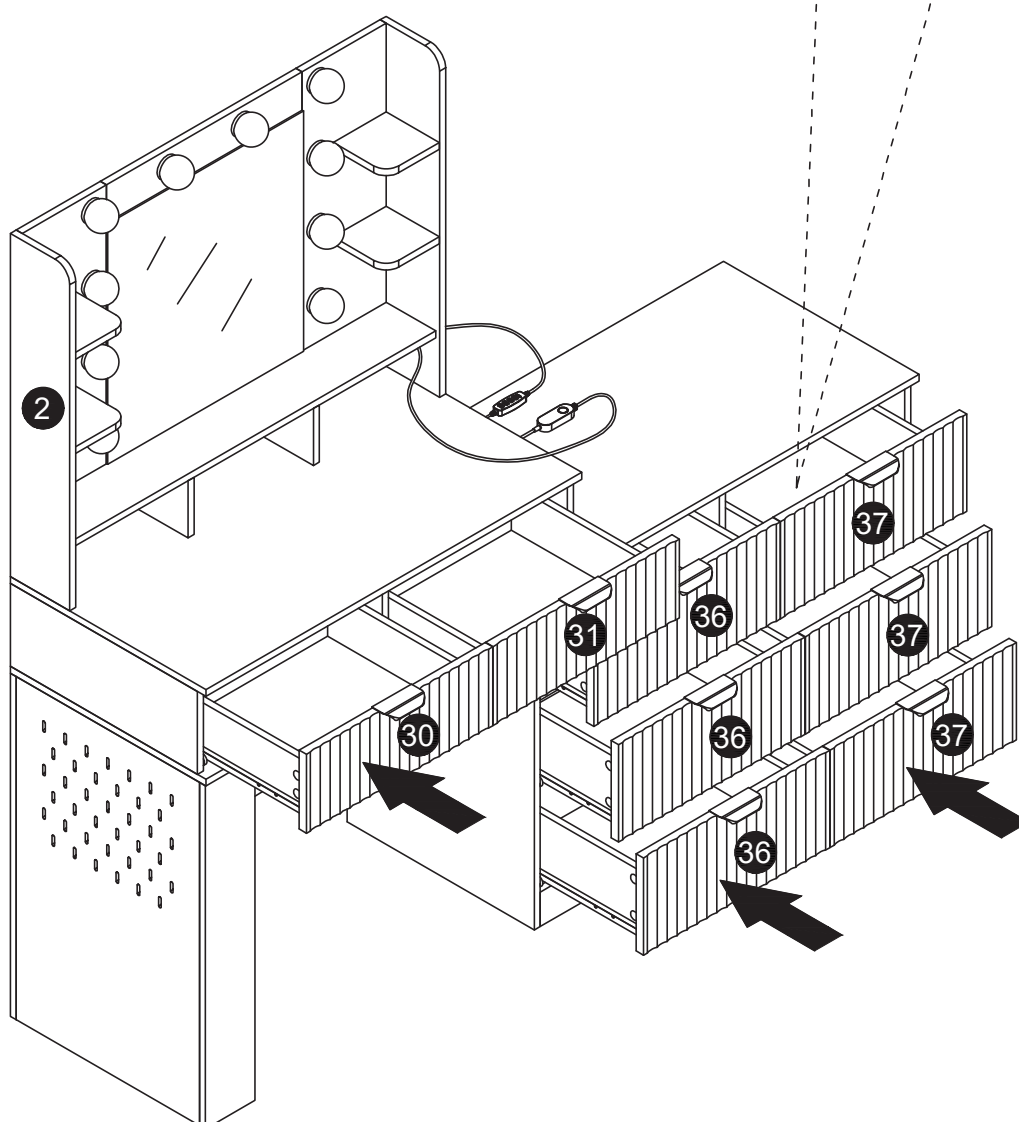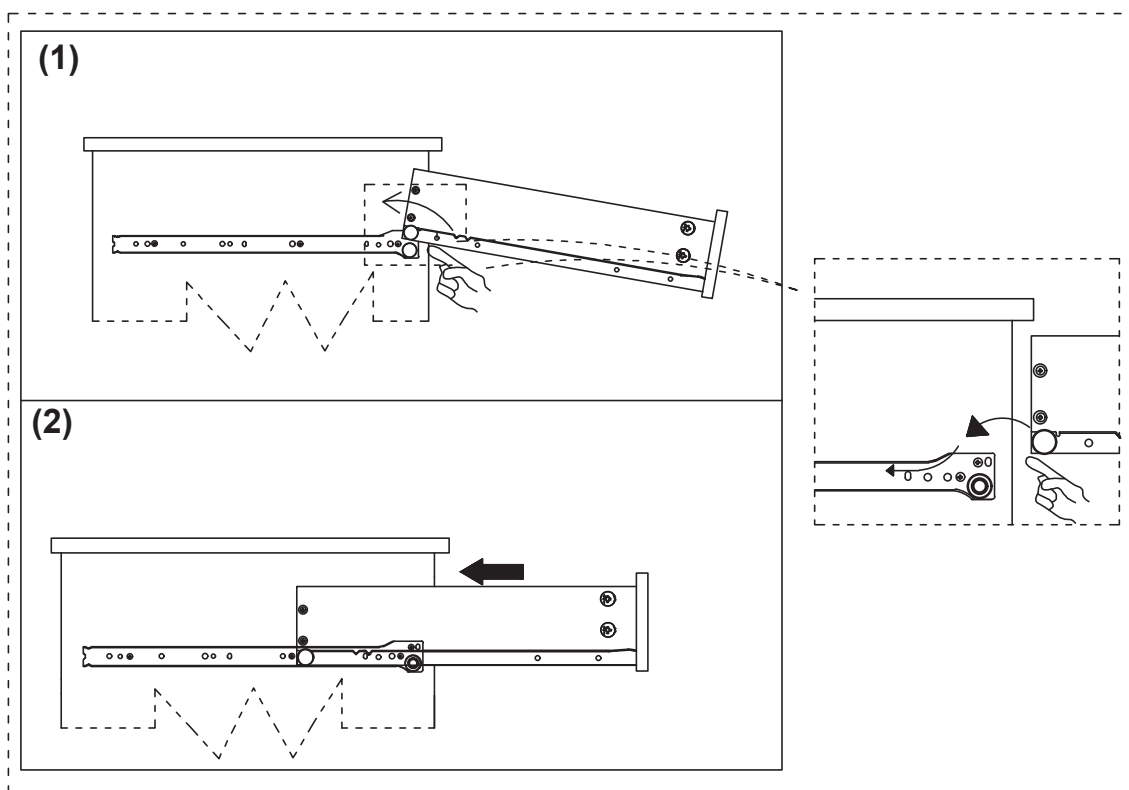

D x2



Q x2



R x5




T x2




T-1




T-2

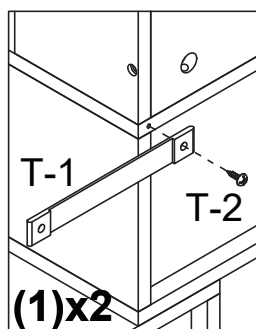


First fix the anti-rewind screw in the reserved hole of the product.

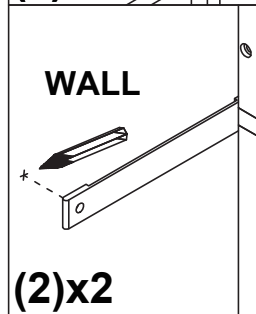


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

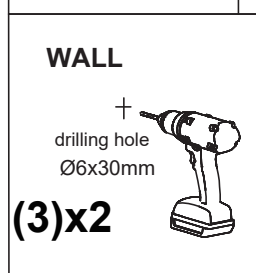

Then use a tape drill to make holes in the wall that are suitable for the product screws.

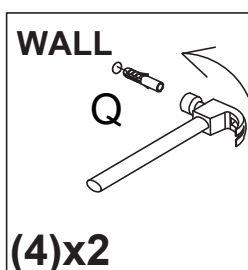

Then, put the expansion bolt into the hole

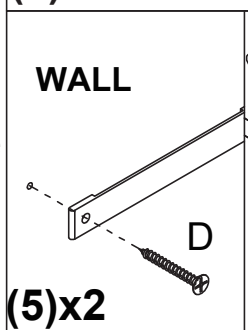

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

Please tear off the film on the outside of the mirror.

