
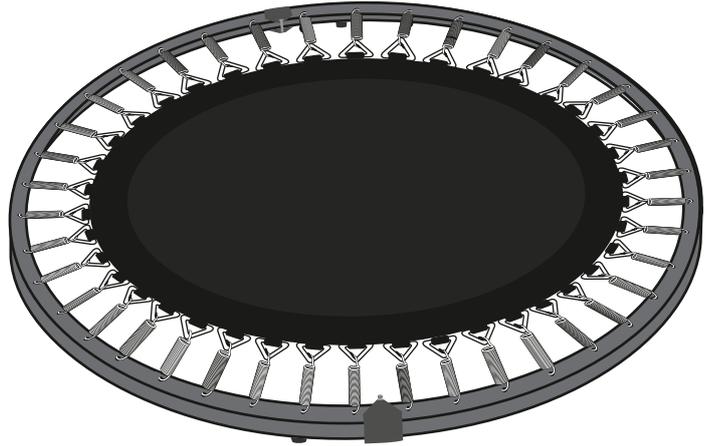


MODEL NUMBERS	UBPAD-36-B	UBPAD-38-B	UBPAD-40-B	UBPAD-44-R	UBPAD-48-R
	UBPAD-36-R	UBPAD-38-R	UBPAD-40-R	UBPAD-44-G	UBPAD-48-G
	UBPAD-36-G	UBPAD-38-G	UBPAD-40-G	UBPAD-44-B	UBPAD-48-B

STEPS TO INSTALL THE MINI-PAD

STEP-1

NOTE: Remove all the legs from your trampoline.





STEP-2

Locate a hole along the outer edge of the pad, and align it with one of the threaded leg connectors.




BOTTOM VIEW

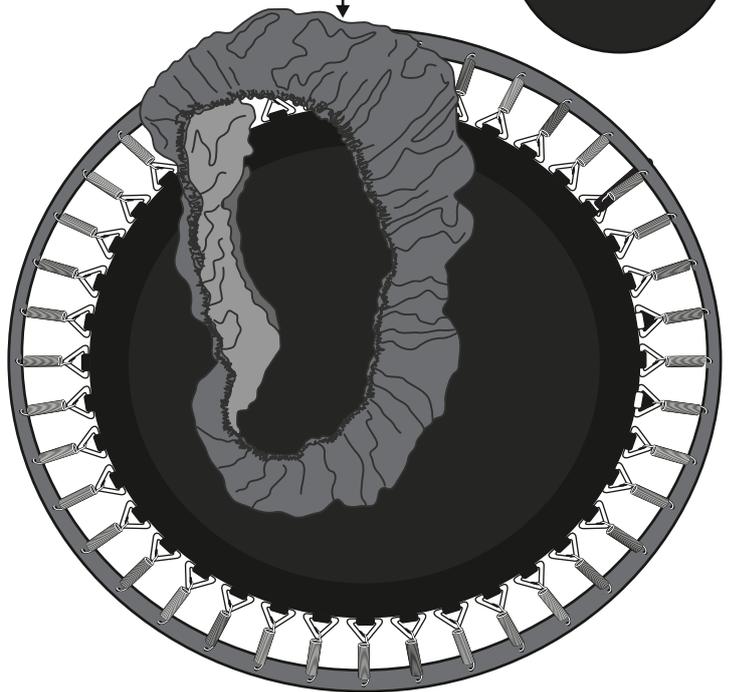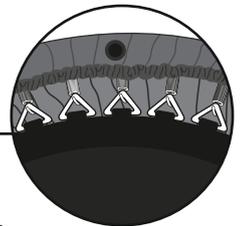


TOP VIEW

STEP-3


Stretch the trampoline pad around the frame of the entire trampoline, aligning the successive holes with the rest of the threaded leg connectors.

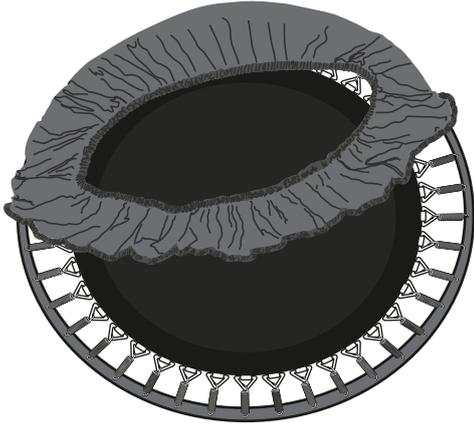

TOP VIEW

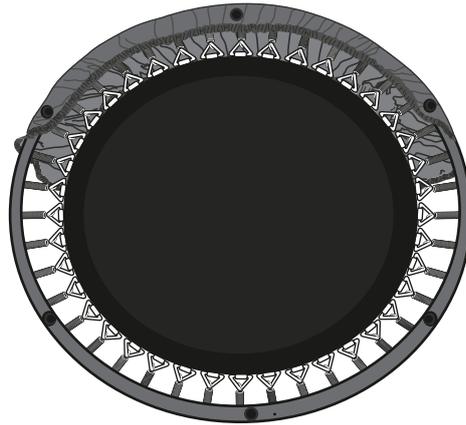


BOTTOM VIEW

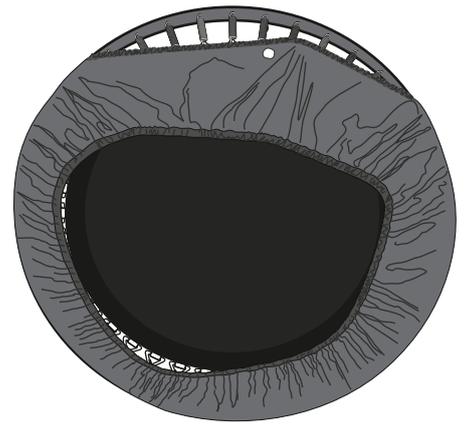

TOP VIEW

STEP-4

Adjust the cover where necessary so that it evenly covers all the trampoline springs, laying flush with the jumping mat.

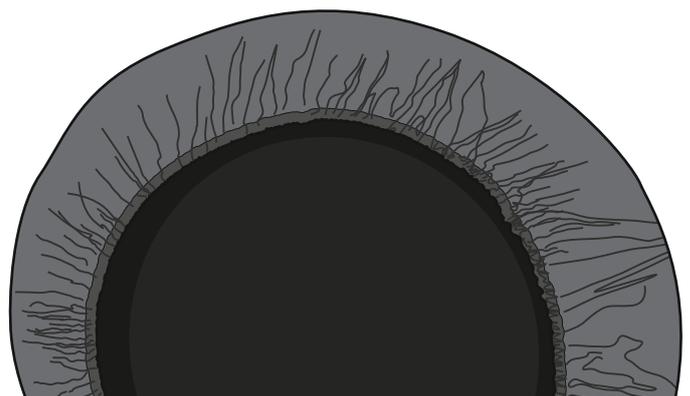

STEP-5

Reattach the trampoline legs and stand the trampoline firmly on the ground.



STEP-6

Start Bouncing!